



# Sony Bloggie 3D Player USB Drive Replacement

Installing the USB drive for the Sony Bloggie 3D Camera.

Written By: Craig Sweet



## INTRODUCTION

The USB is a very important part of the Sony Bloggie as it is the only way to get your movies from the camera to a computer. This guide will show you how to install a new USB drive in the Sony Bloggie 3D.

### TOOLS:


- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Spudger](#) (1)
- [Tweezers](#) (1)

## Step 1 — Front Cover





- Remove the two 2.5mm Phillips #00 screws using the Philips #00 screwdriver.

## Step 2

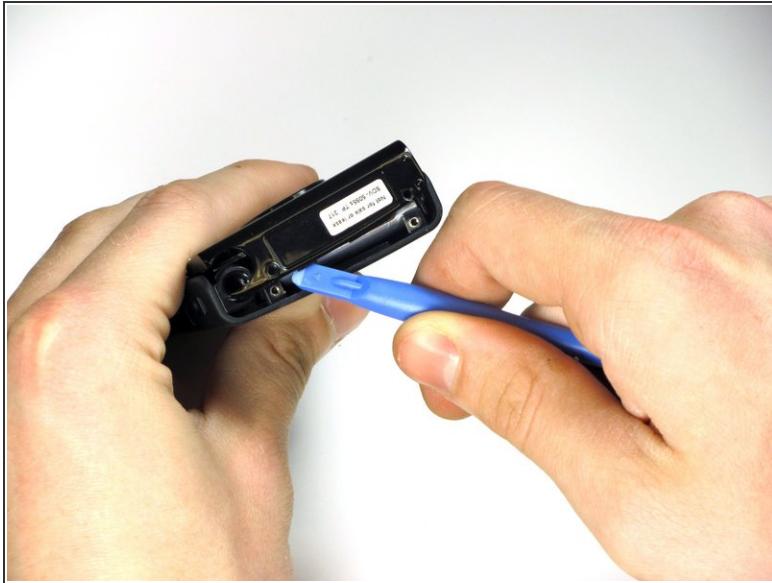

- Use a plastic opening tool to pry the cover open.
- After the the cover is partly open as shown, remove the cover with your hands.

## Step 3 — Back Cover

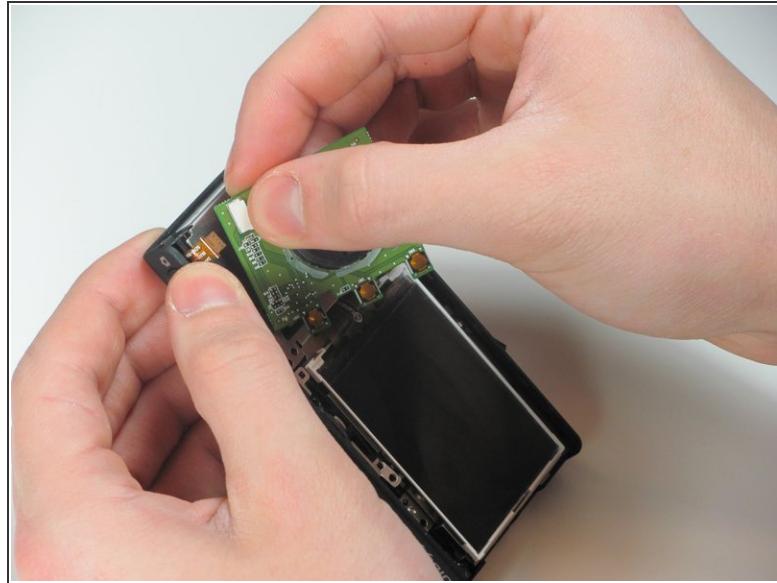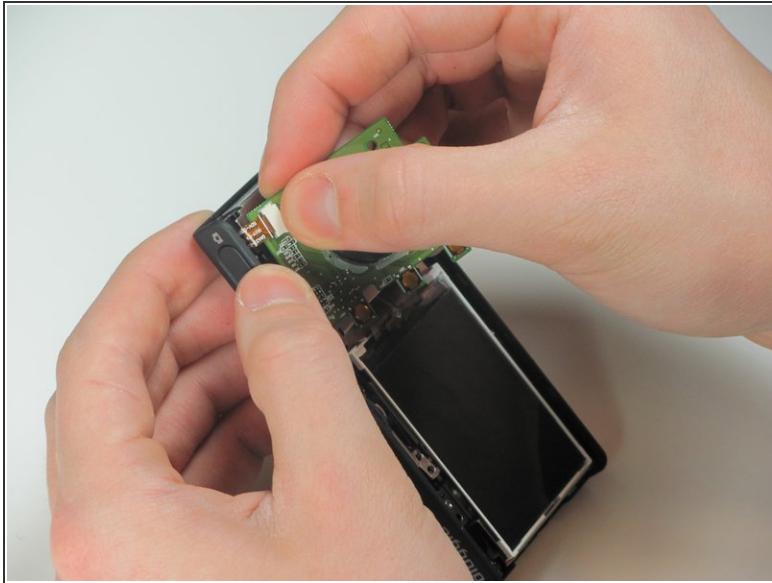



- Using your hand, or a pair of tweezers, remove the ZIF connector by gently pulling it out of the dock on the circuit board.

## Step 4




- Use a plastic opening tool to loosen the back cover off the device.
- Once the back cover is loose, remove it gently by hand.

## Step 5 — USB Drive

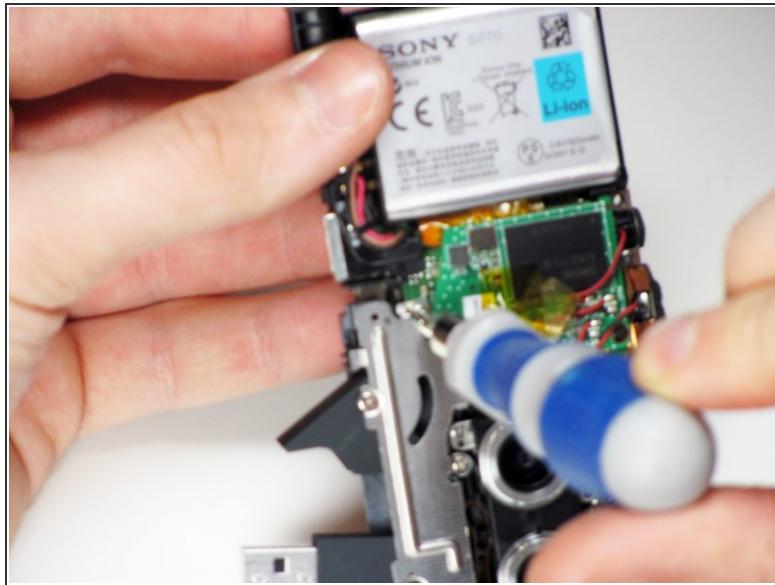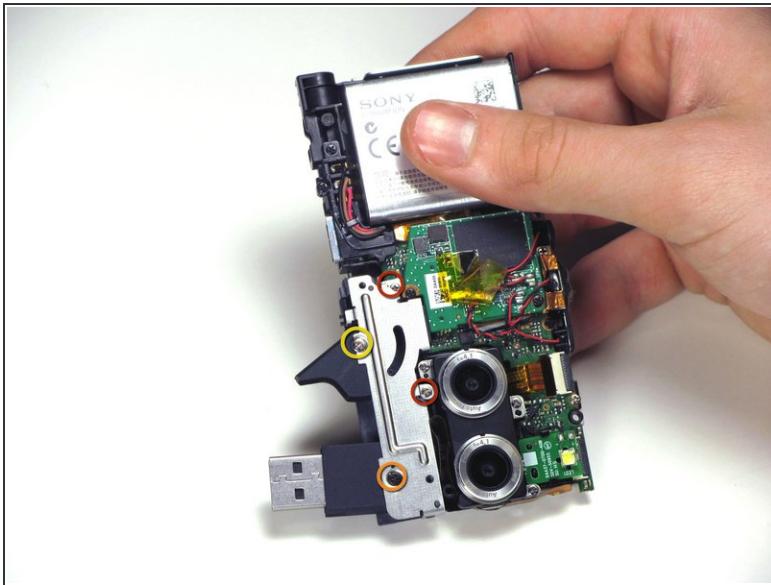


- Once the back cover is removed, by using the opening tool, remove the following screws using a Phillips #00 screwdriver.
  - Two 4.0mm Phillips #00 screws
  - One 8.0mm Phillips #00 screw
  - One 9.5mm Phillips #00 screw

## Step 6

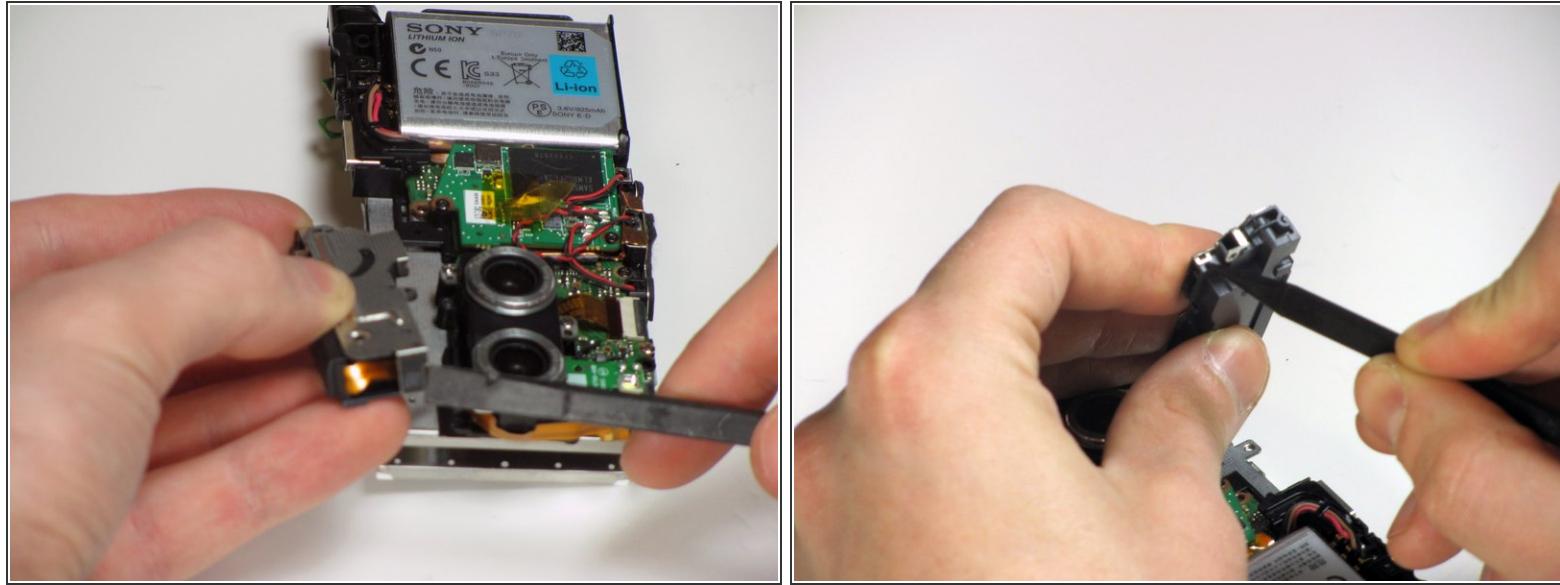


- Using a spudger, remove the clips of the metal casing from each end of the USB drive.

## Step 7

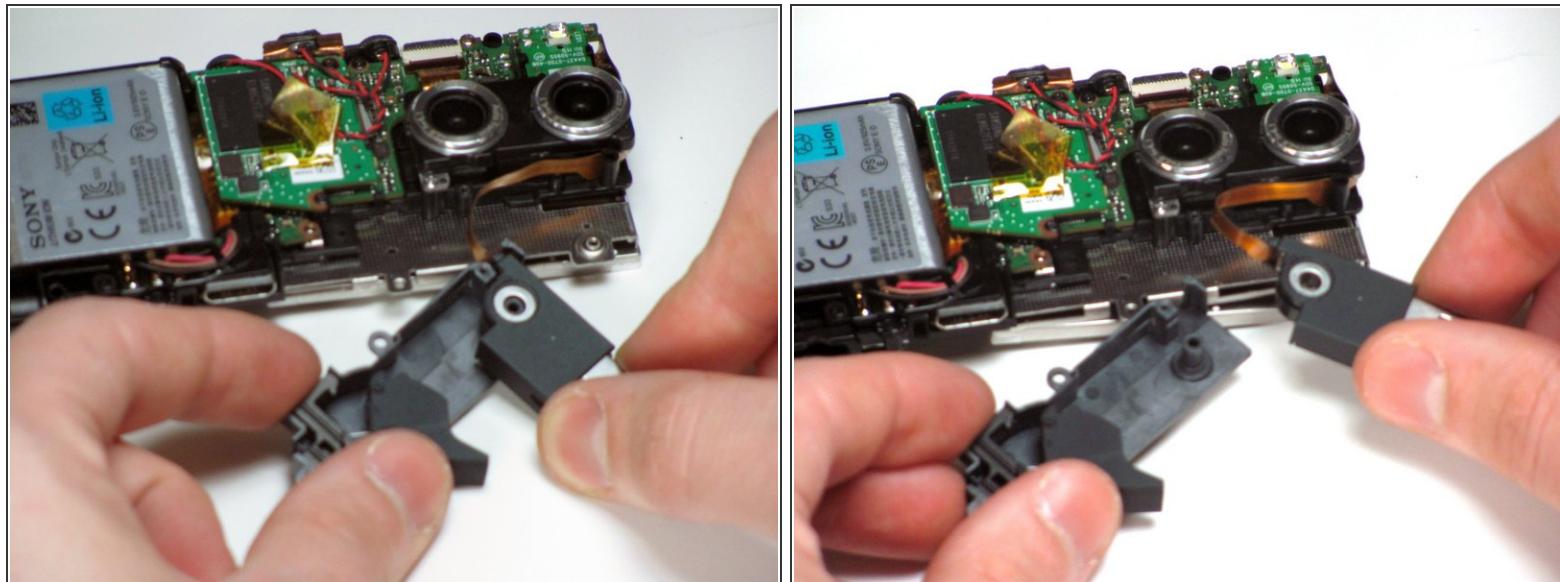


- Carefully lift the USB drive off of the peg that it is attached to.

## Step 8

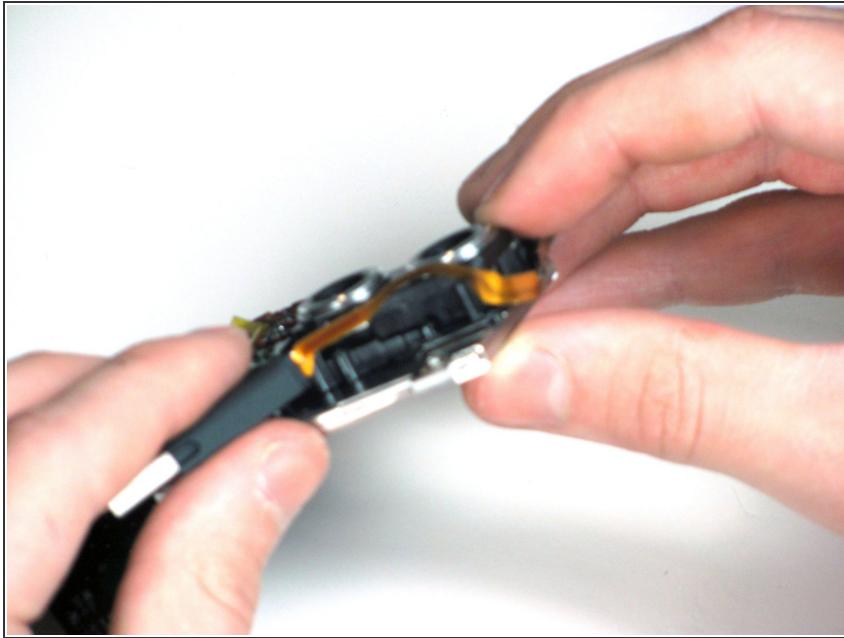

- Now that the USB component is on its own, untangle the ribbon from inside the device.

## Step 9

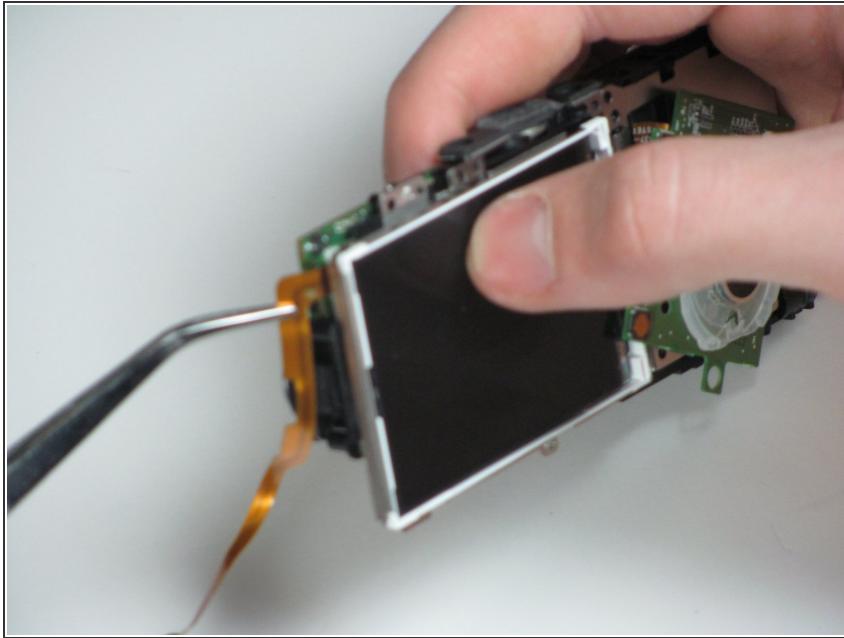

- Now remove the ZIF connector from the device using a pair of tweezers.

To reassemble your device, follow these instructions in reverse order.