



Sony Vaio PCG-F360 RAM Replacement

Written By: ahintz



INTRODUCTION

The PCG F360 comes with 64 MB of on-board RAM. An additional 128 MB can be added on for a total of 192 MB.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Spudger](#) (1)

Step 1 — Battery



- Position the laptop screen-side down as shown.
- In this position the battery housing will be located on the right hand side.

Step 2



- Lift the panel up and then out to gain access to the battery.

Step 3



- Use the indentations to pull the old battery out.

Step 4



- The battery is now removed and it is safe to move on to uninstalling other components.


Step 5 — Keyboard



- There are two screws on the left hand side of the laptop near the IR (Infared remote) receiver (see image). Remove them using a Phillips #00 Screwdriver.
- Slide the speaker panel towards the left, then carefully flip it over onto the keyboard.

 Make sure not to pull the speaker panel away from the computer just yet - it is still connected!

Step 6

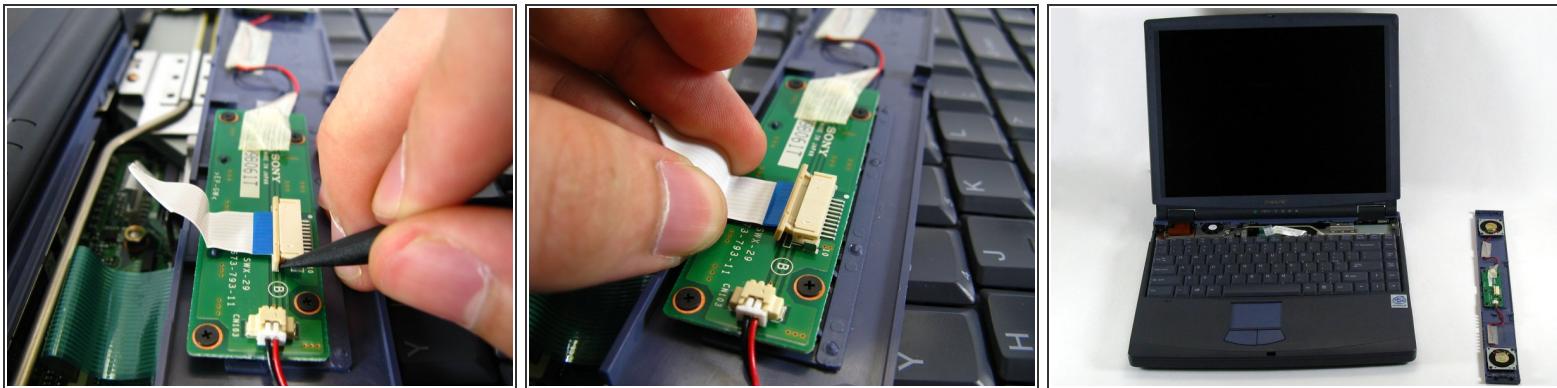

- On the inside of the speaker panel, using a spudger, push the beige tab in the direction of the ribbon. It should only move a small amount.
- Remove the ribbon by gently pulling on it, there should be little or no resistance.
- Now the speaker panel can be set aside.

Step 7



- Remove the metal screw that will be located at the red circle.
- Pull on the green strip, and the keyboard should come free easily.

Step 8 — RAM



- Slide your RAM into the housing by aligning it with the plastic, tan colored, guides until it is firmly in place.

(i) The computer in the picture only has the standard 64 MB of on-board RAM. This RAM is not removable from the motherboard, but additional RAM can be added.

To reassemble your device, follow these instructions in reverse order.