




# Sony Vaio Tap 11 Screen Camera Module Replacement

This guide will walk you through the steps on how to take out and replace your screen camera module.

Written By: Nick Catanzarite

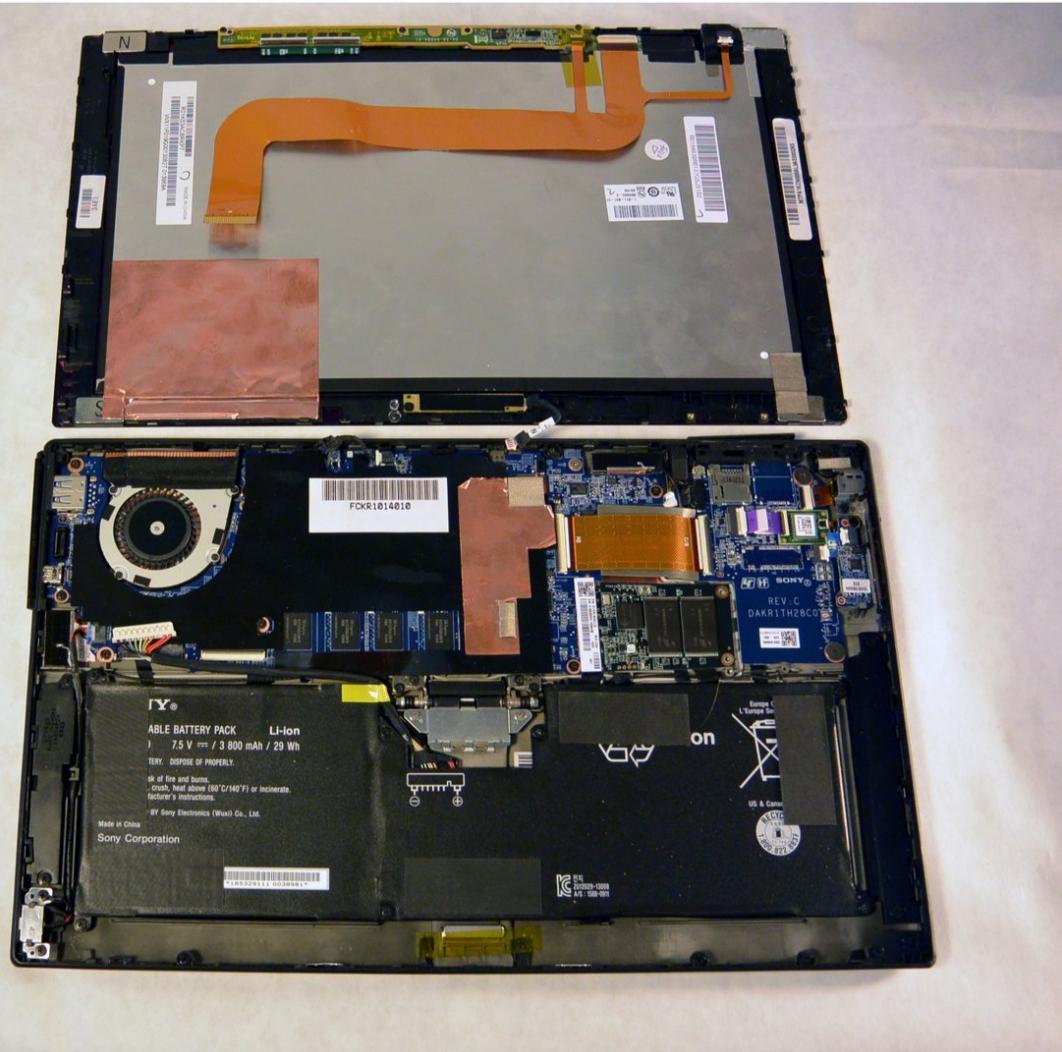

## INTRODUCTION

With this guide, you will be taking the screen off of the device to locate the camera module. The following steps will explain how to remove the necessary parts in order to remove the camera module located on your screen.

### TOOLS:


- [Phillips #000 Screwdriver](#) (1)
- [Suction Handle](#) (1)

## Step 1 — Screen Assembly




- Begin by popping open the HDMI/USB port cover on the left edge.
- Remove the three #000 headed, 3 mm long screws located underneath the port cover.

## Step 2

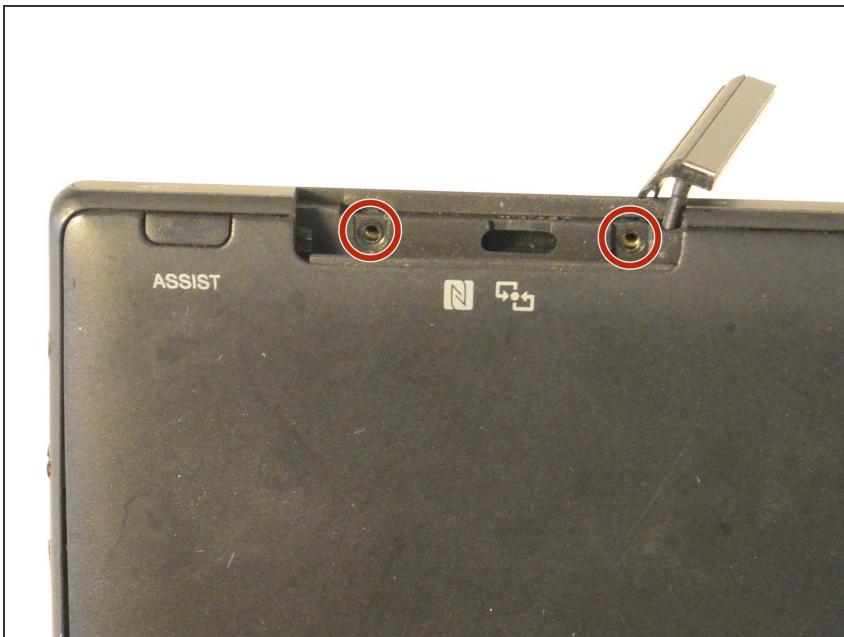

- There are two #000 headed, 3 mm long screws under a similar cover covering the Micro SD slot on the top side of the device.
- Remove the two screws beneath the Micro SD card slot cover.


## Step 3

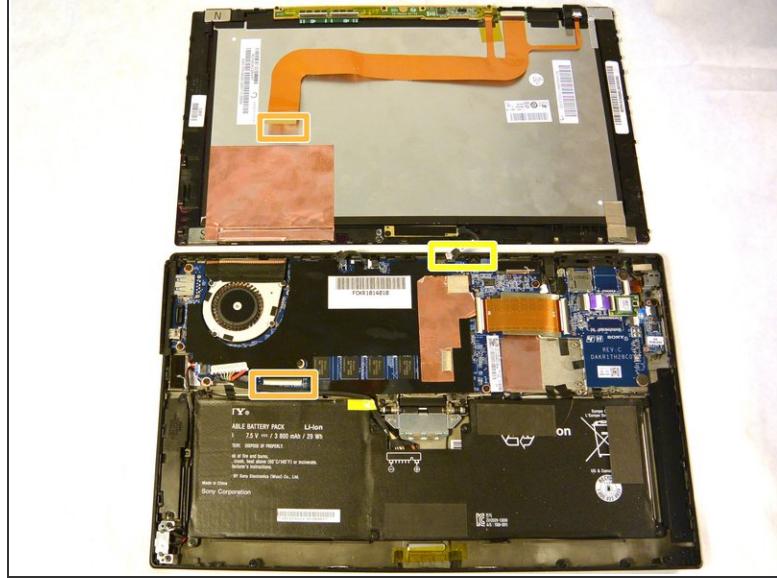

- Attach the suction cup to the top right area of the screen.
- Pull to remove the screen from the rest of the device.


**⚠** Watch out for the front camera cable connected to the top middle of the device. The display ribbon cable should just slide out.

## Step 4 — Screen Camera Module Replacement

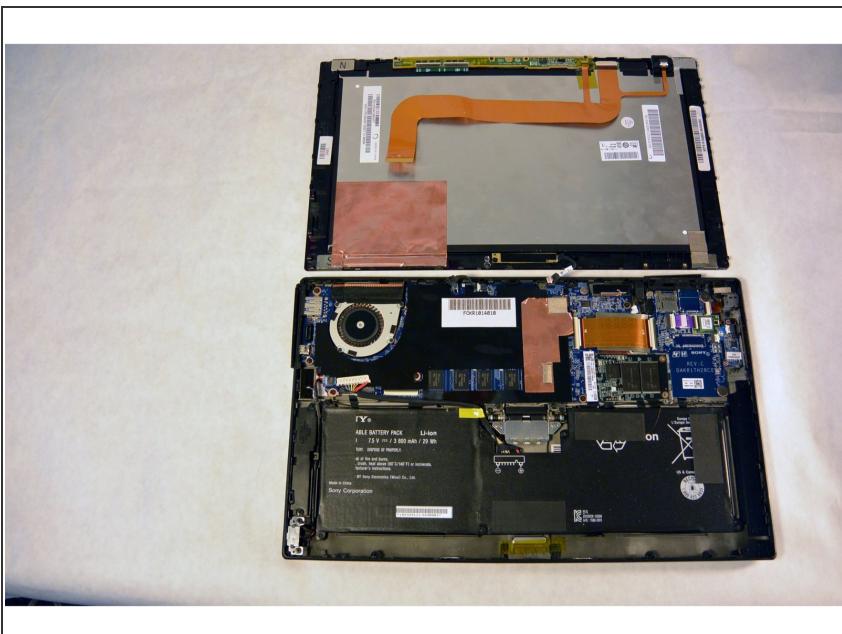


- Flip device upward carefully like you are turning the page of a book.

## Step 5

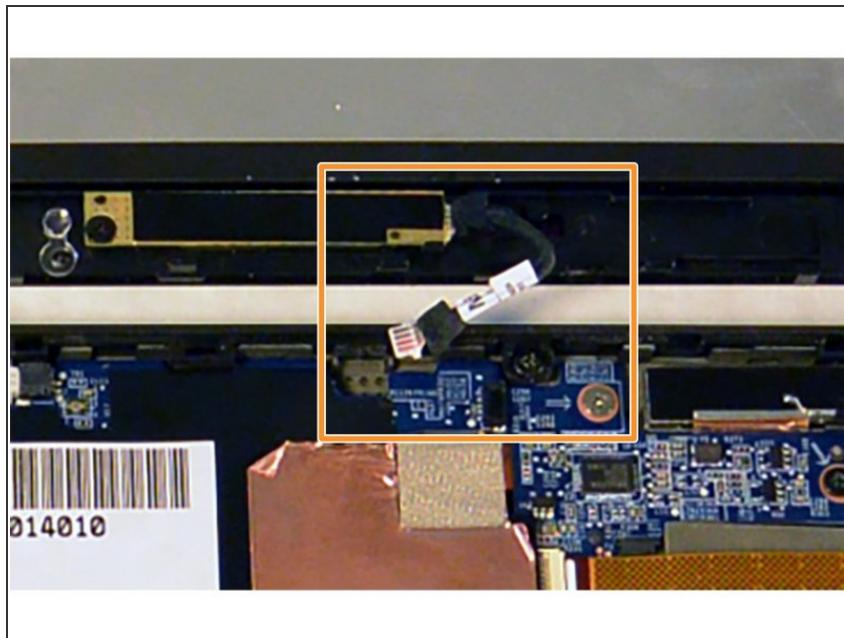

- Disconnect the camera cable from the device backing.

## Step 6

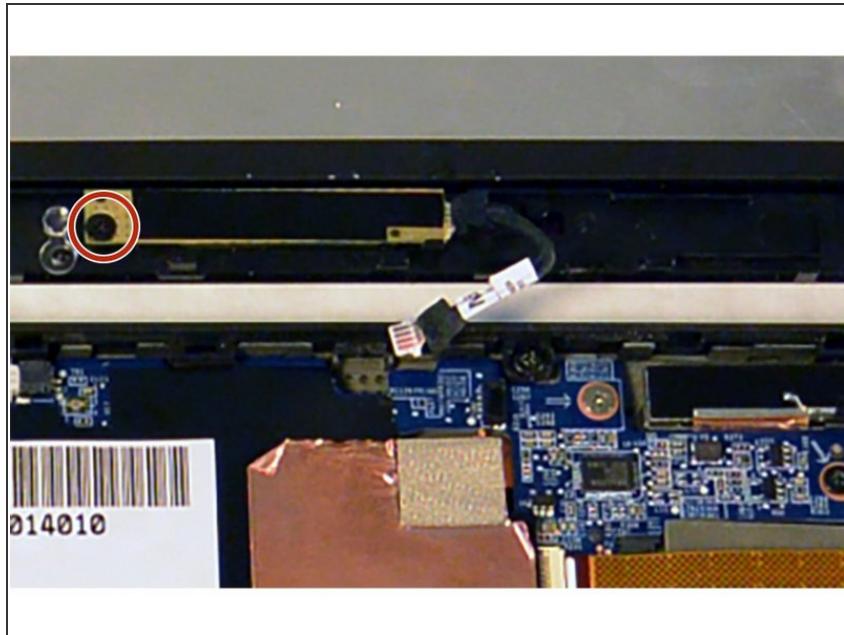

- Remove the single 3 mm Phillips #000 screw on the left side of the module.
- Remove the module from the front panel assembly.

To reassemble your device, follow these instructions in reverse order.