




Sony Vaio VGN-S260 Hard Drive Replacement

Written By: Jeffrey Bryan

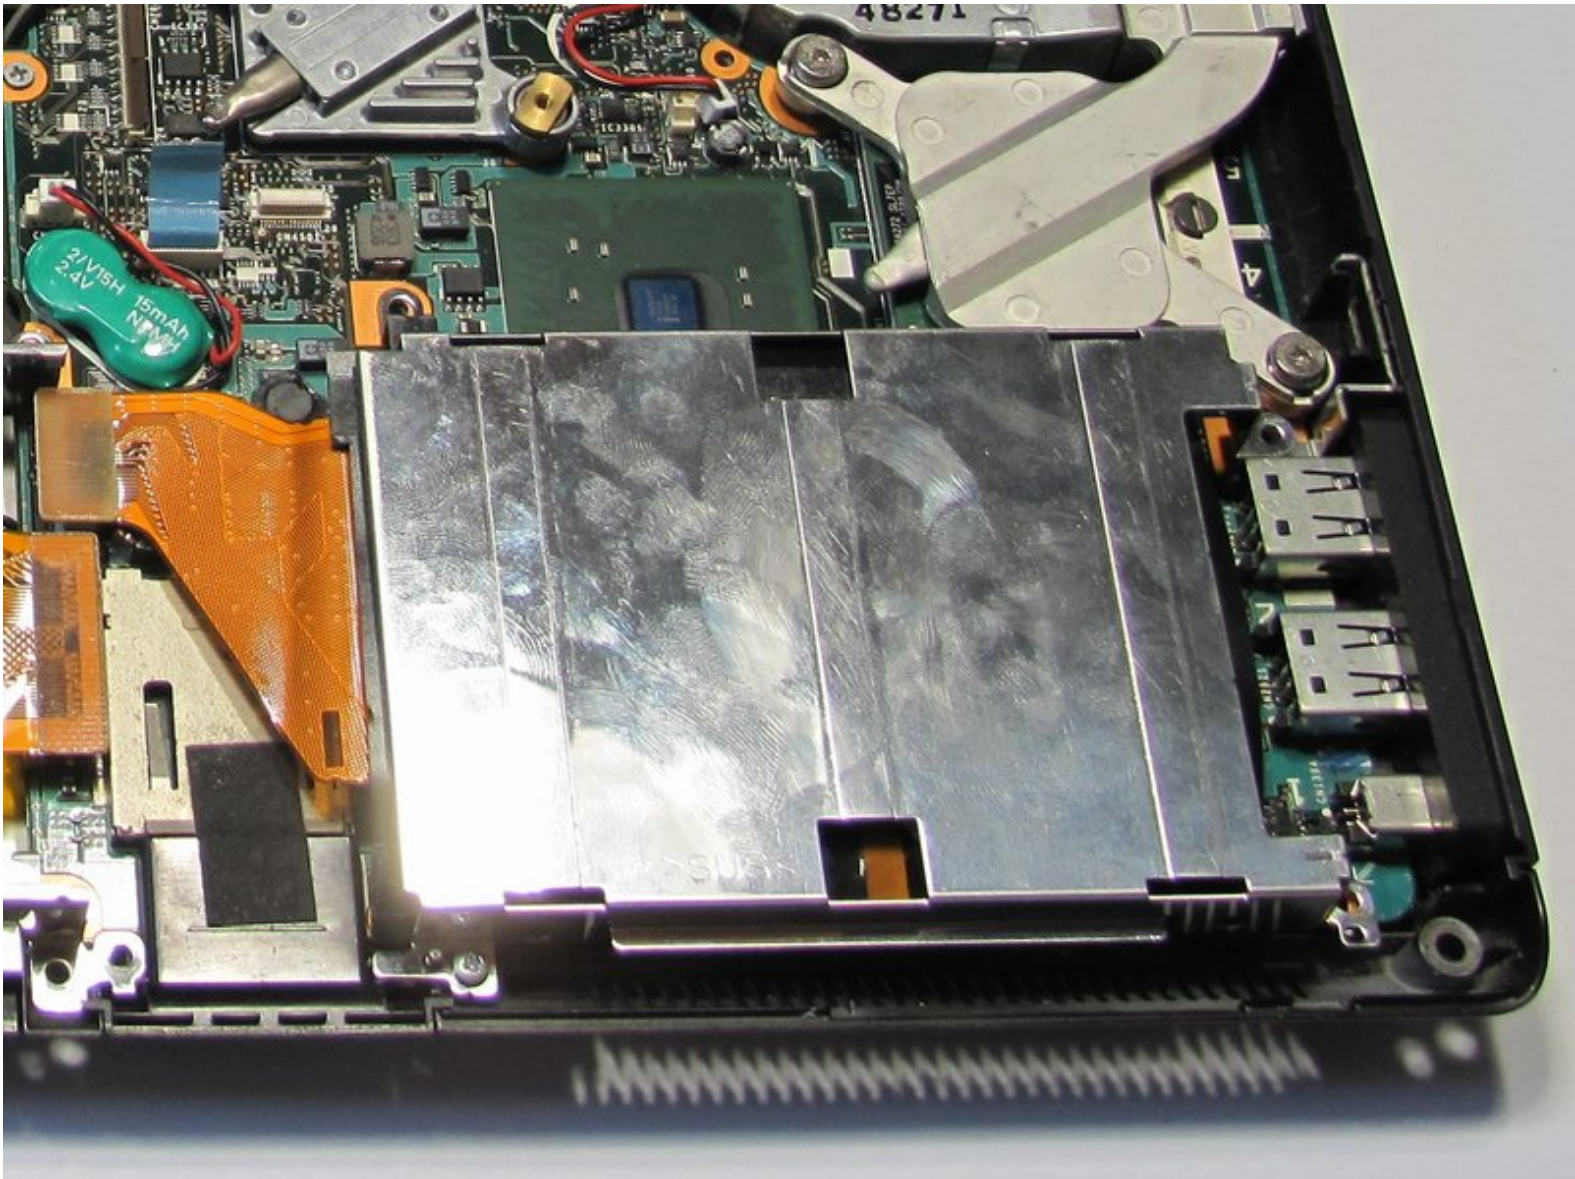

INTRODUCTION

How to take out the hard drive of the Sony Vaio VGN-S260 laptop



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Battery



- Flip the laptop over so the Vaio logo is facing down.
- Locate the battery at the top and Find the release and unlock slides on the battery.
- Slide the unlock tab to the unlock position.
- Slide the release tab in the direction of the arrow, i.e. towards the unlock tab.

Step 2



- With the tabs still in the unlock position, slide the battery away from the main case.

Step 3 — Keyboard




- Flip the computer over so the Vaio logo is facedown.
- Unscrew the 2 screws next to the battery.

Step 4





- Flip the computer over again so the Vaio logo is face up.
- Open the lid.

Step 5

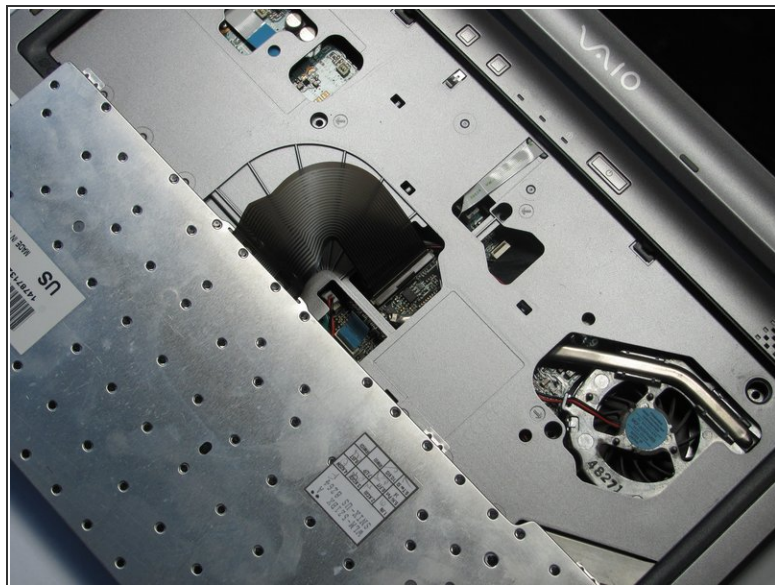


- Press down on the outer gray shell around the keyboard.
 - Use the spudger to gently lift keyboard.
- ⚠ Do not pull up the keyboard too far as it is attached to a ribbon underneath.

Step 6

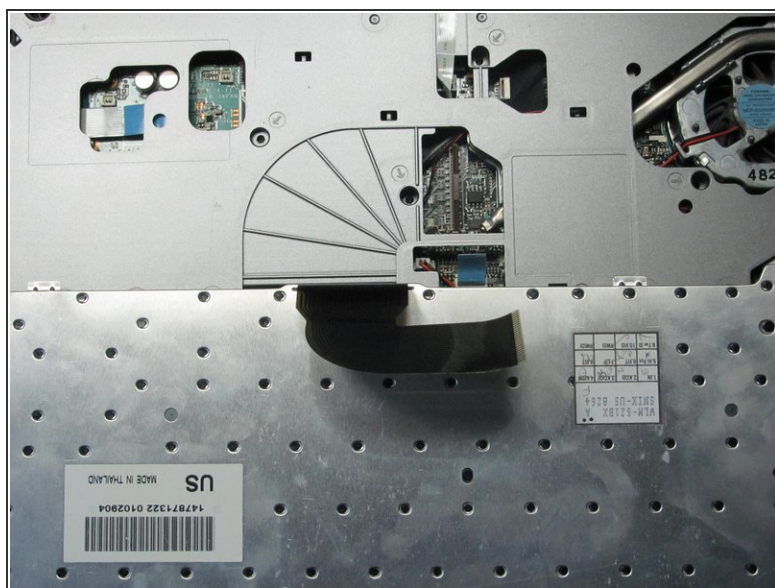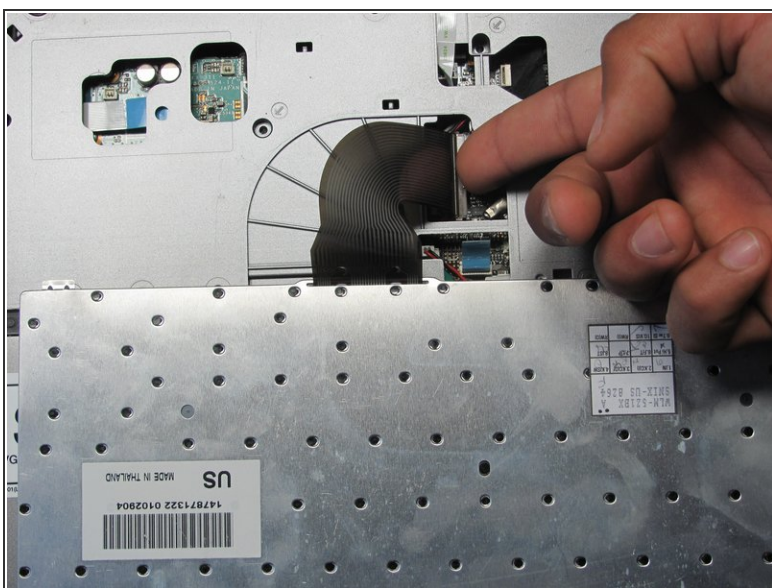

- Lift up lever underneath the ribbon to detach the keyboard.

Step 7 — Upper Casing

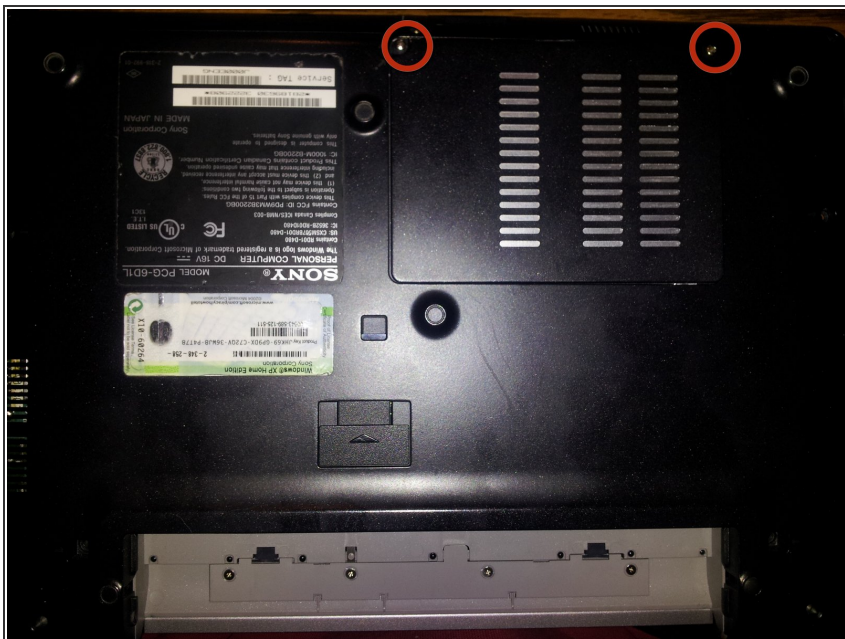


- Remove memory/wireless compartment cover.

Step 8




- Flip so the Vaio Logo is face down.
- Locate and remove a total of 8 screws on the bottom.

Step 9

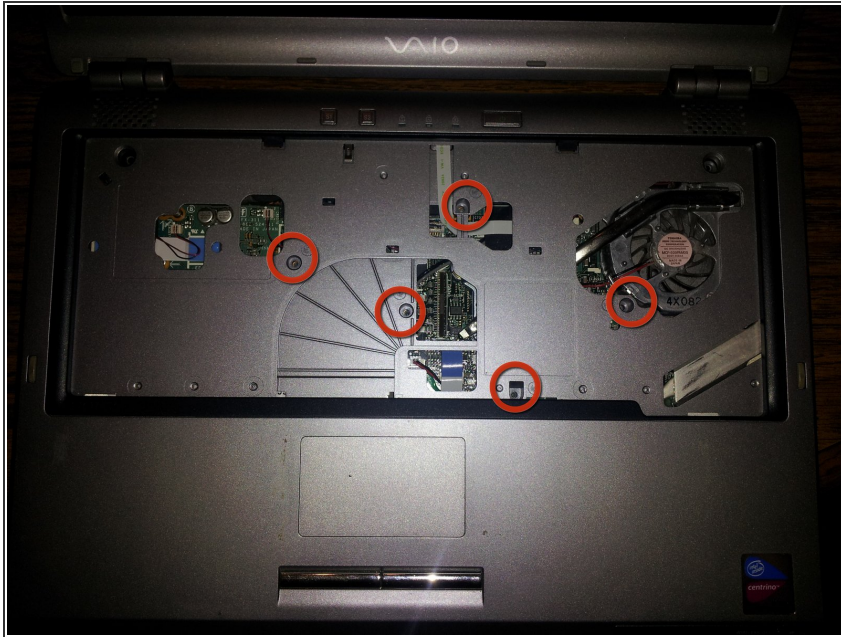

- Find and remove 5 screws (they all have arrows next to them) from cover.

Step 10

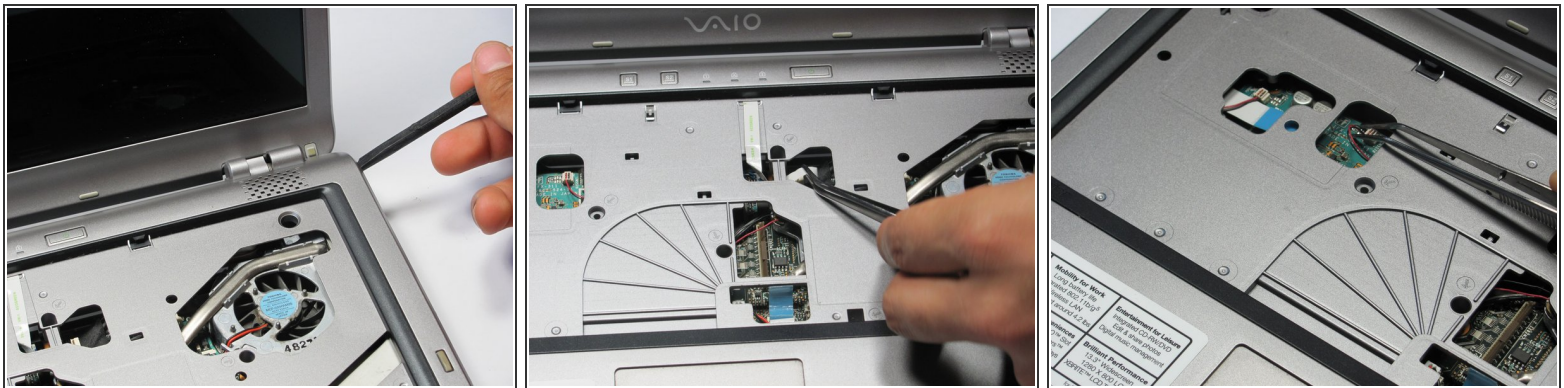



- Flip the laptop over so the Vaio logo is face up.
- Use the spudger to pop up the upper casing.
- ⚠ Do not lift too much as the upper casing is attached to wires underneath.
- Remove the wires that are attaching the upper casing to the motherboard.

Step 11




- Remove the upper casing.

Step 12 — Hard Drive

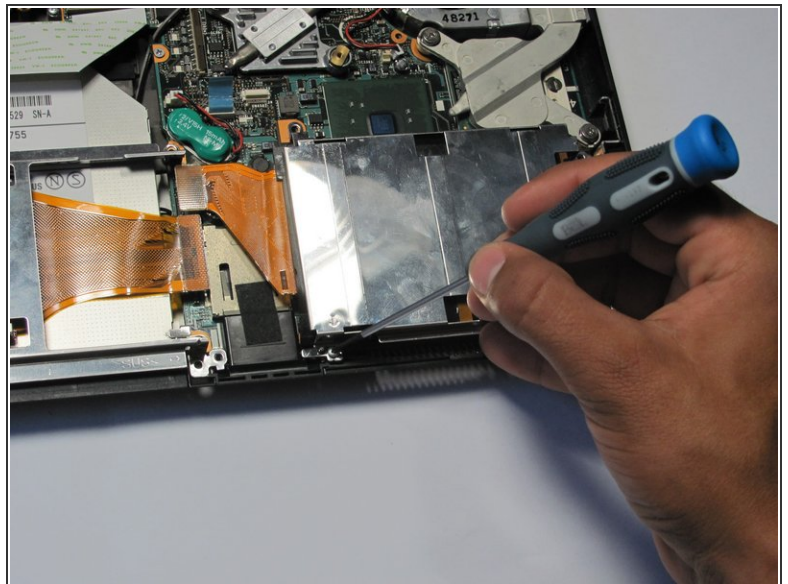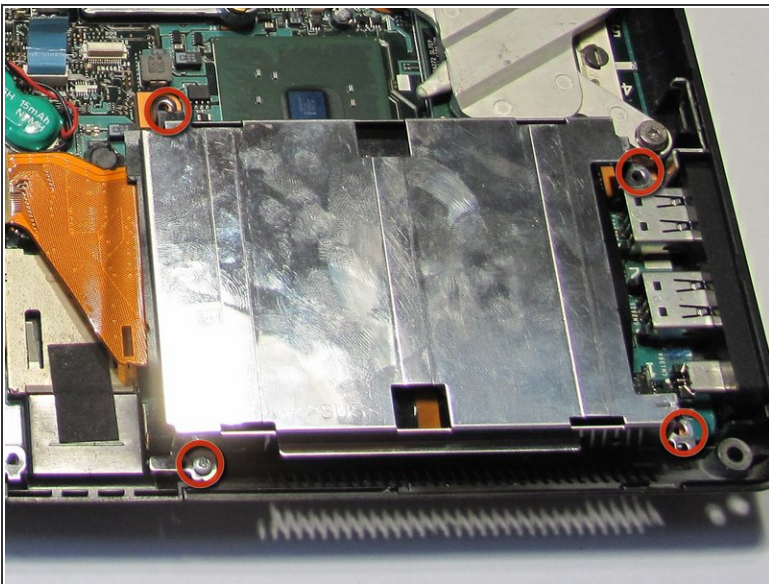

- Remove the screws holding the hard drive casing in place.

Step 13

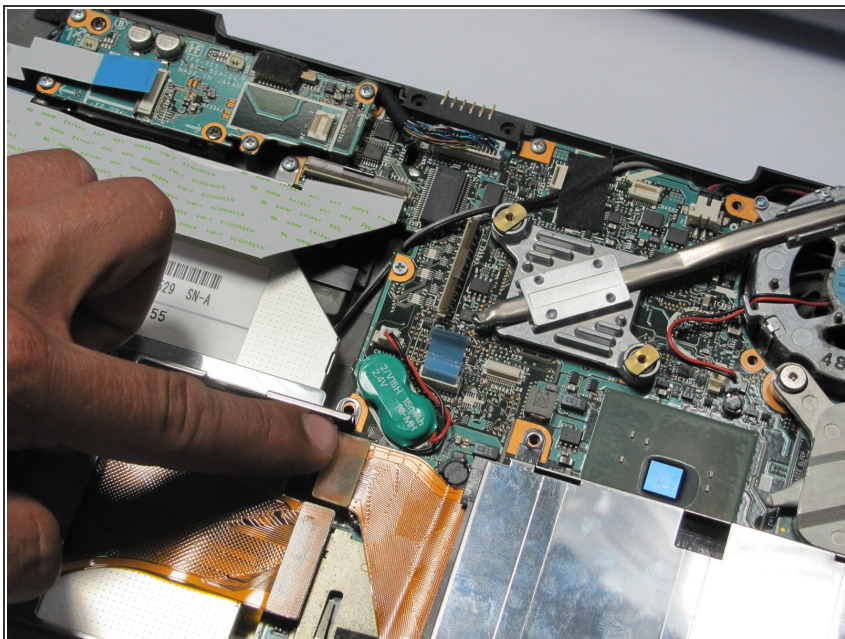

- Find orange ribbon that is connected to the hard drive.
- Find the holder of the ribbon and pop the ribbon off from it.

Step 14



- Remove the casing and the orange ribbon.

To reassemble your device, follow these instructions in reverse order.