




# Sony Walkman NWZ-S764 Bluetooth module Replacement

This guide will walk you through the process of replacing a defective Bluetooth transceiver module.

Written By: John Ferguson

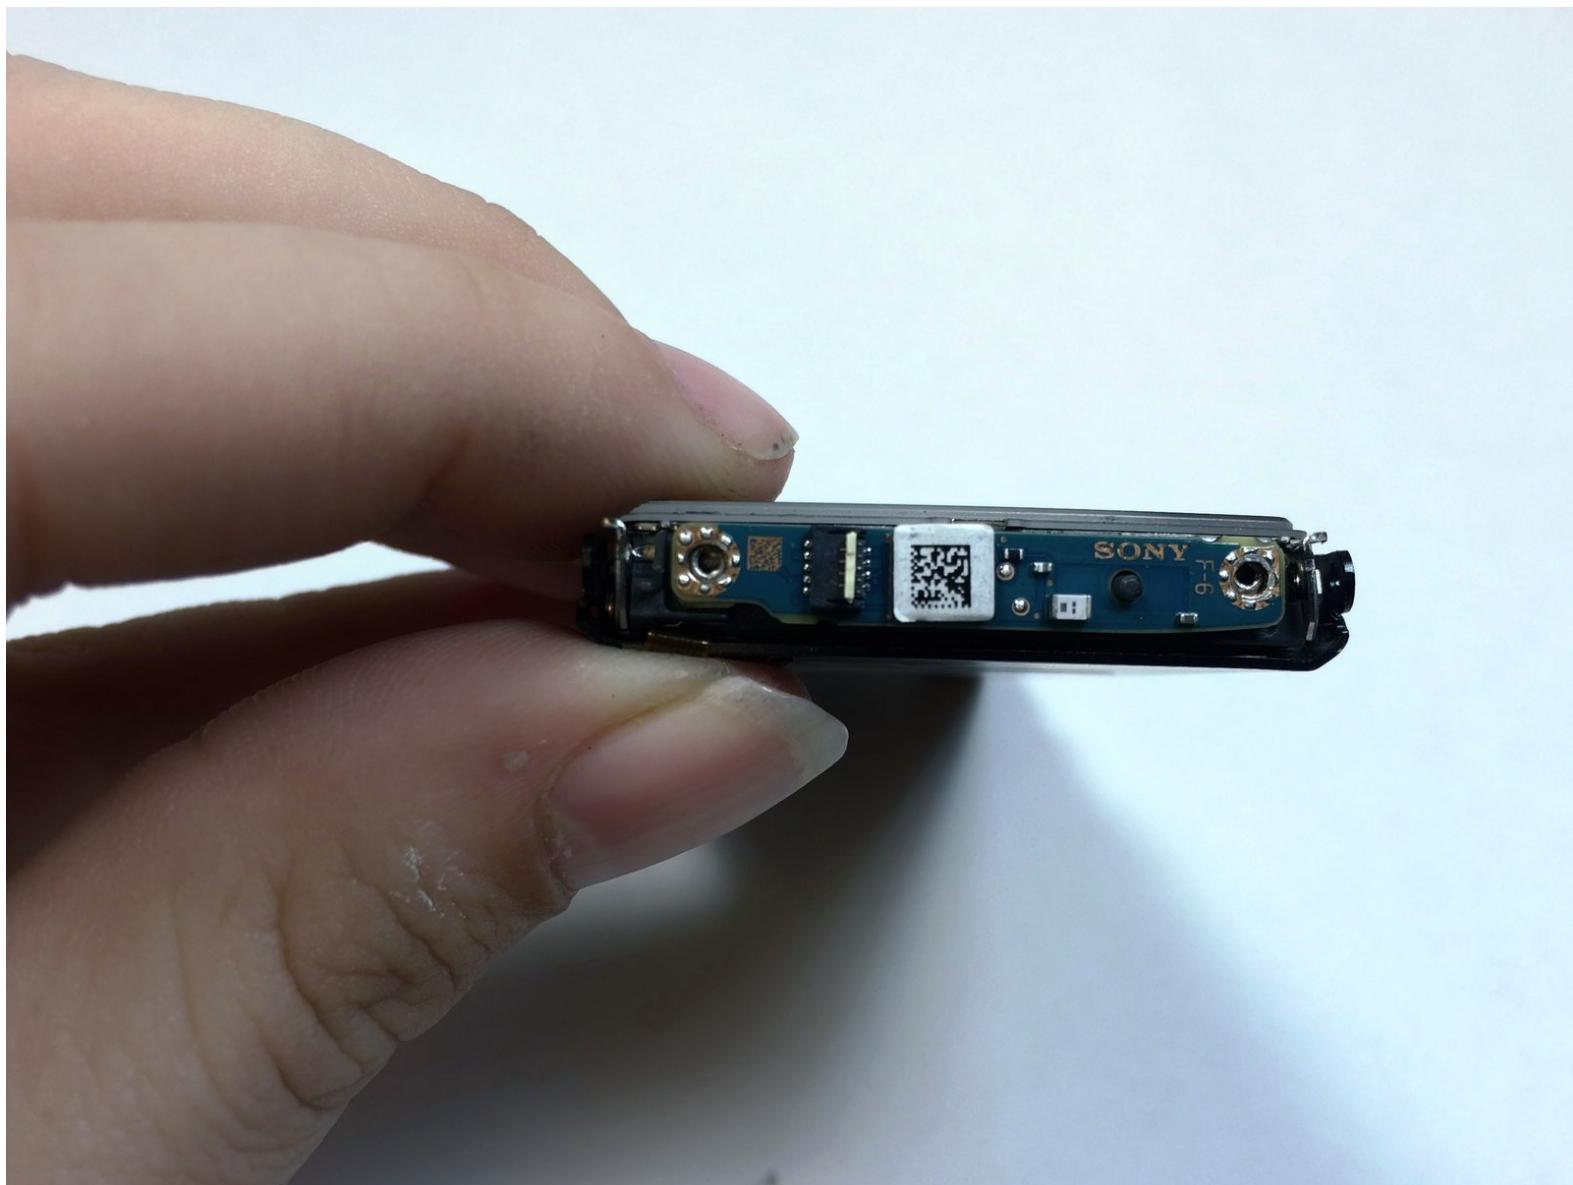

 **TOOLS:**


- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Spudger](#) (1)

## Step 1 — Removing the back cover



- Remove the two black 6.4mm Phillips screws from the back of the device.

## Step 2

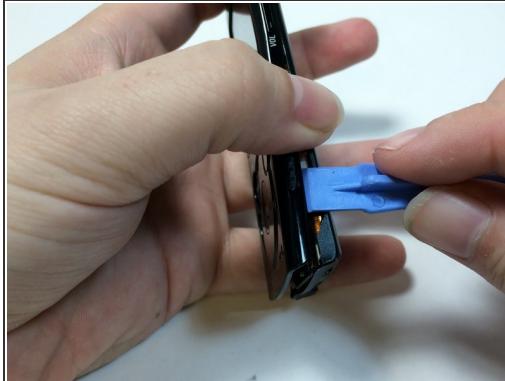


- Using a plastic opening tool, work your way around the edges of the device, carefully prying off the front panel.

## Step 3




- Remove the two 2.8 mm phillips screws located on either side of the device near the top.

## Step 4

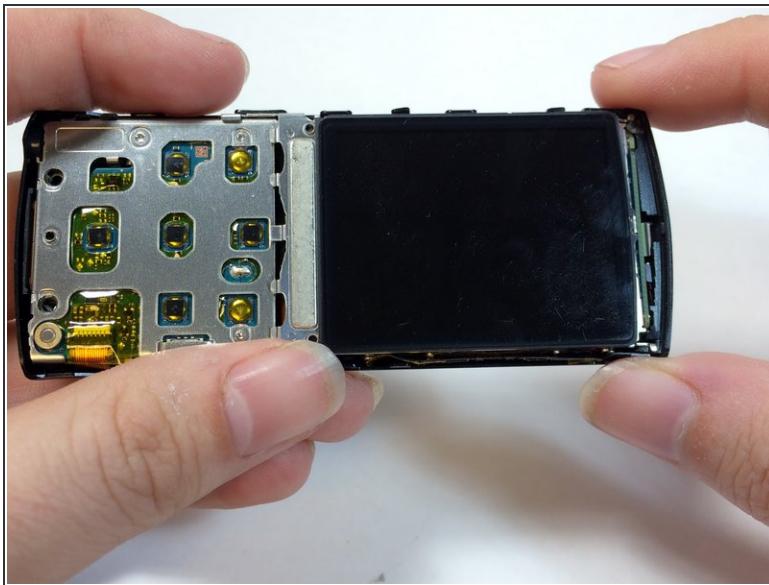

- Carefully pull the top piece away from the device.


## Step 5 — Removing the Bluetooth module

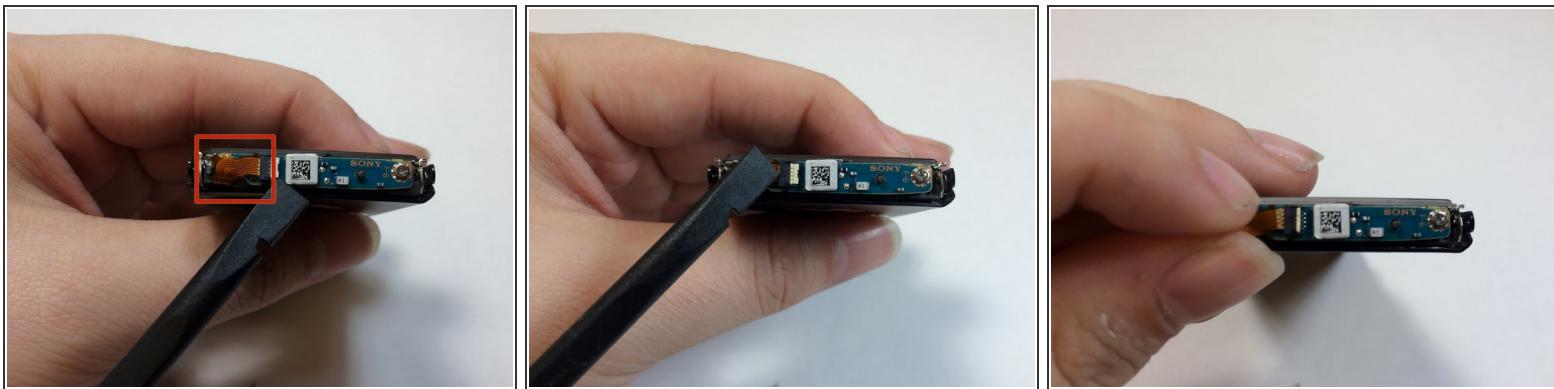

- Use the flat end of the spudger to flip up the retaining flap for the bluetooth module.

 Be sure to lift up on the retaining flap, and not the socket itself.

## Step 6

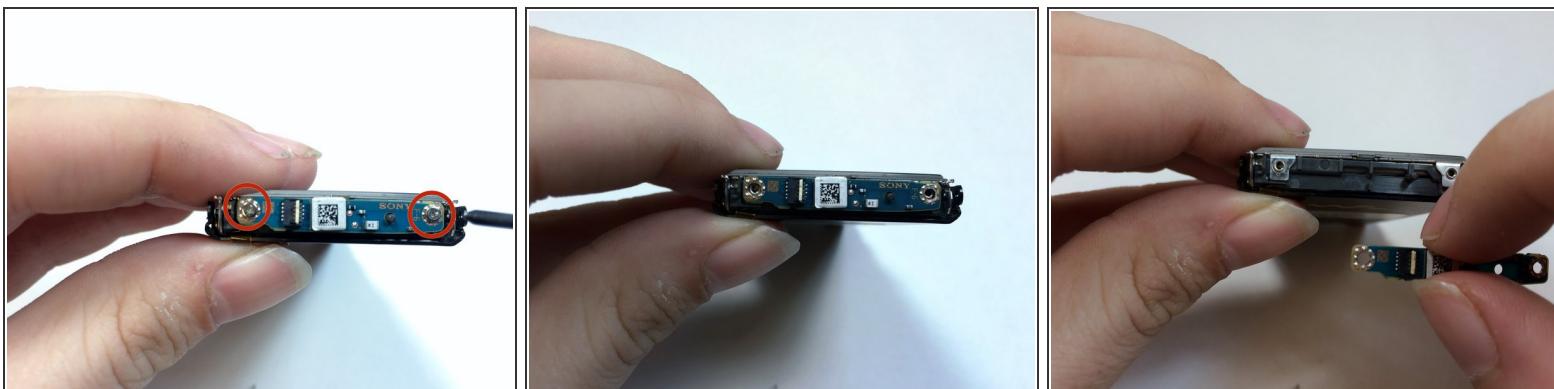

- Remove the two 1.8mm silver Phillips screws on the Bluetooth module.
  - Lift up on and remove the Bluetooth module.
-  The ribbon cable must first be removed in order to access the highlighted screw.

To reassemble your device, follow these instructions in reverse order.