



SwagTron T1 Outer Shell Replacement

Replacing or changing the outer plastic shell.

Written By: Gloria Whang



INTRODUCTION

This guide will show you how to remove and replace the outer shell of your SwagTron T1

TOOLS:

- Phillips #2 Screwdriver (1)


Step 1 — Back Panels



! Ensure that the SwagTron is off.


- Turn the SwagTron upside down to see the underside.

Step 2

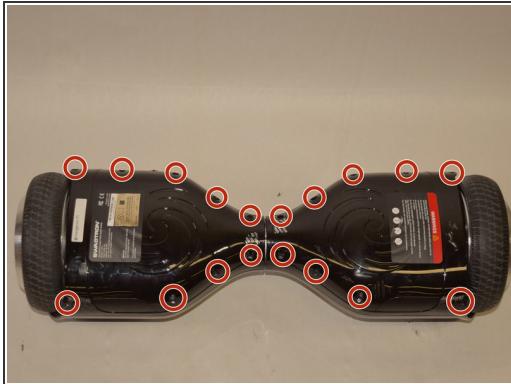

- Unscrew the eighteen 10mm screws that secure the back panels using a Phillips #2 screwdriver.
- i The screws are tightly in place. It will take effort to screw them out.
- ! The panel is still attached to the SwagTron by wires that go to the motherboard.
- Carefully lift the panels off

Step 3


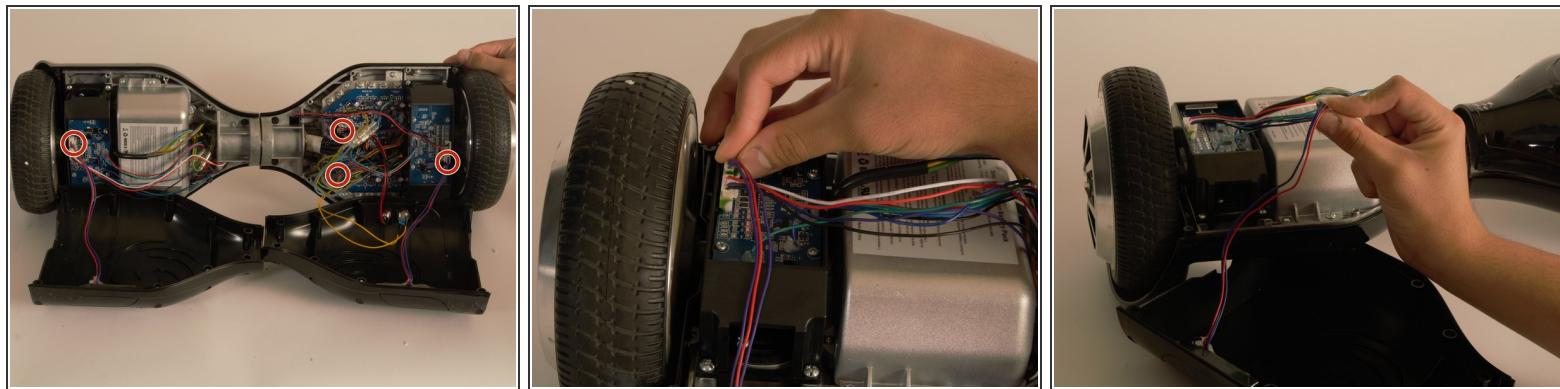


- Follow the wires from the panels to the motherboard.
- You may need to cut any zip ties that are holding the wires together.
- There is one connection on the battery side and three on the other side that must be removed.

⚠ These connections may be difficult to remove. Try to securely press the connection and pull firmly.

- Your back panels are now completely removed.


Step 4 — Outer Shell

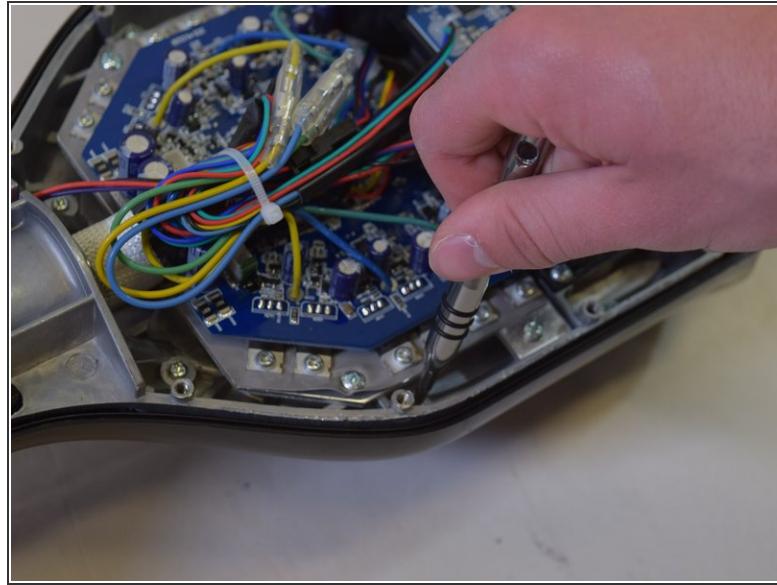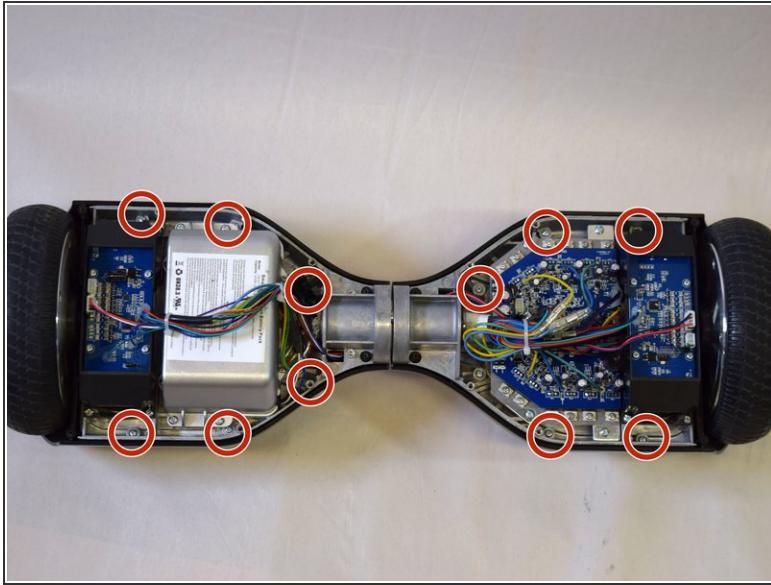

- Unscrew the twelve 10mm screws that connect the metal chassis to the top plastic panel.

(i) These screws will be low into the SwagTron.



Step 5

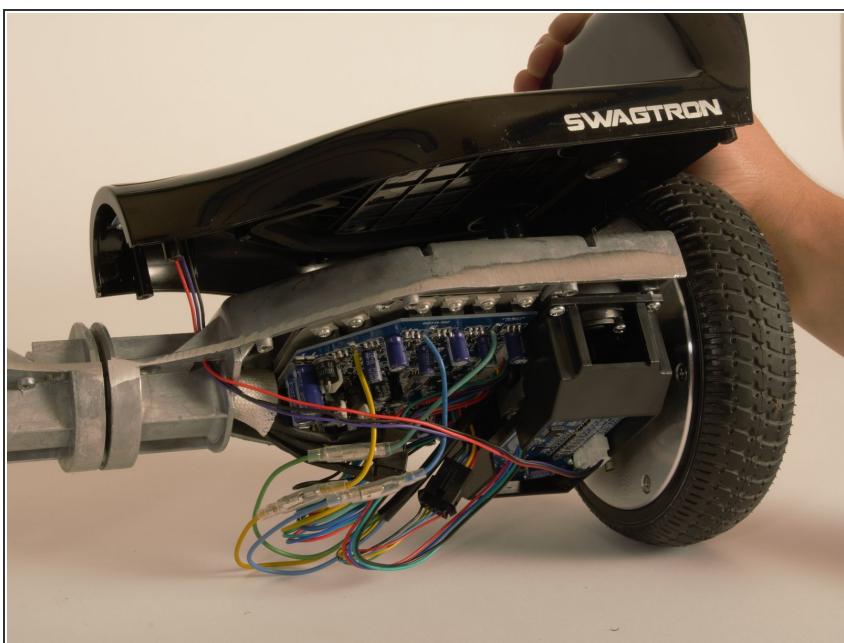

- Turn the SwagTron right side up and slightly lift up the panel.

 Be careful to not pull too hard because the panel is still attached to the SwagTron by wires.

Step 6

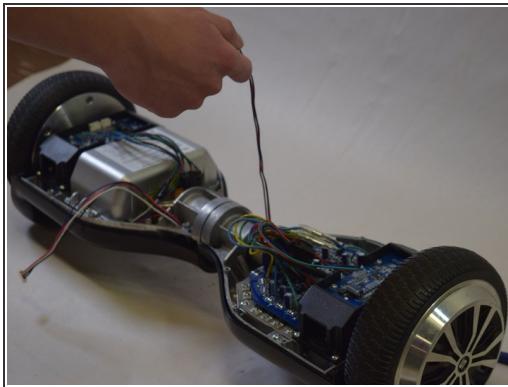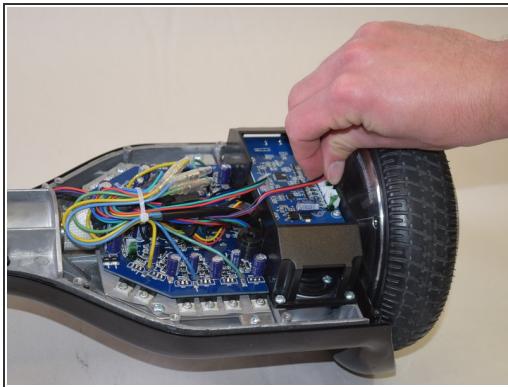

- Turn the SwagTron over and disconnect the wires from the motherboard.
- Follow the wires to the underside of the SwagTron.
- Carefully remove the cord and the panel together.
- All the panels are now free from the SwagTron.

To reassemble your device, follow these instructions in reverse order.