




# Toshiba Qosmio X775-3DV80 Keyboard Replacement

Use this guide to walk you through the process of replacing the keyboard on your Toshiba Qosmio X775-3DV80.

Written By: Jesse Adam Ory

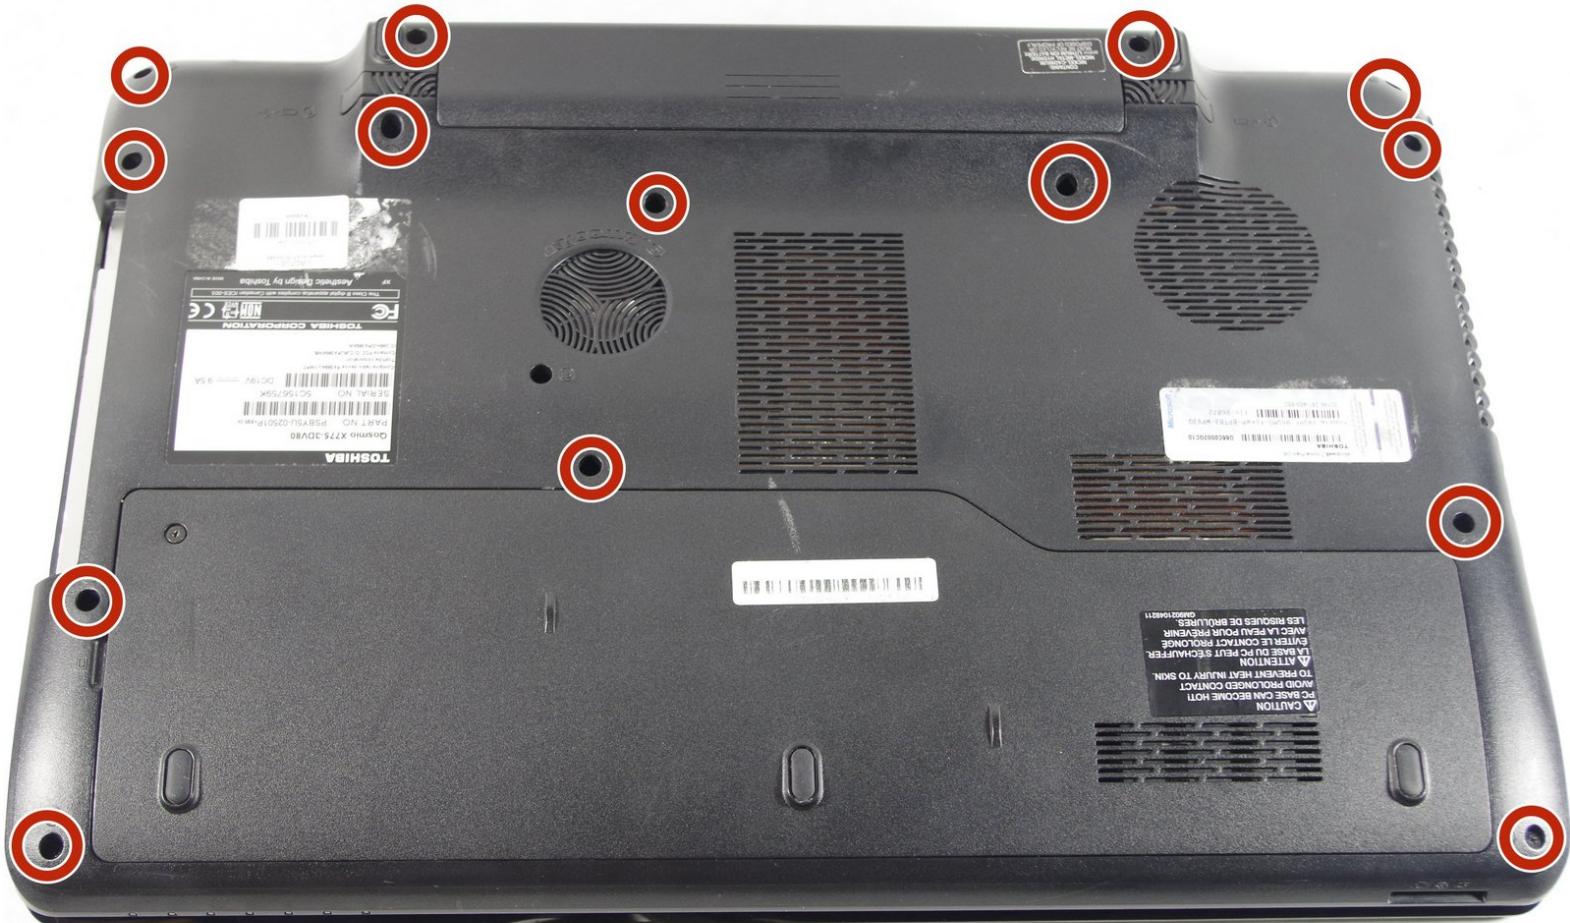

 **TOOLS:**

- [Spudger \(1\)](#)
- [Phillips #00 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

## Step 1 — Battery



- Turn your laptop over so the underside is facing up.

## Step 2



- Identify the two sliding locks on either side of the battery.
- Simultaneously slide both locks outward to release the battery.

## Step 3




- Pull the battery straight out of its slot to remove it.

## Step 4 — Optical Drive



- Locate the optical drive retaining screw on the underside of the laptop.

## Step 5

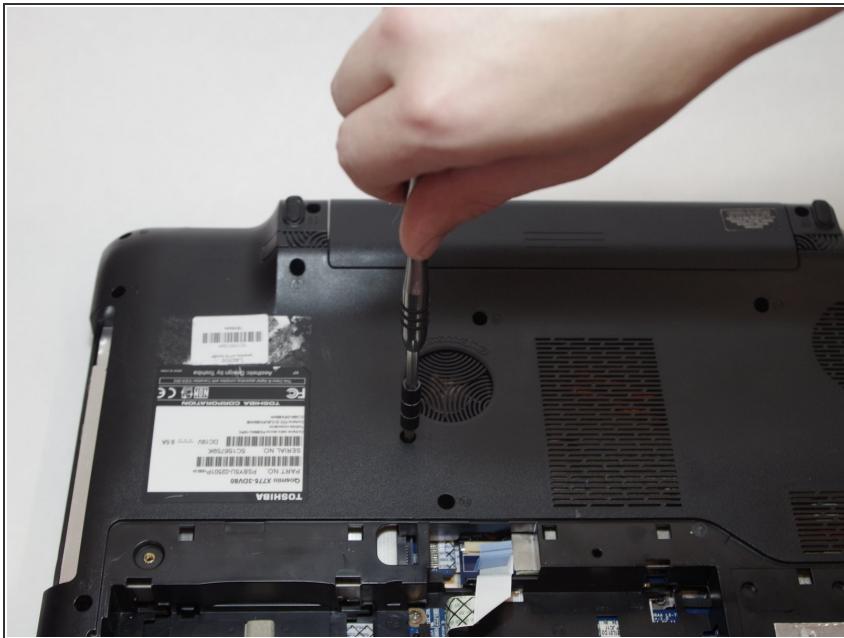

- Using a Phillips #00 screwdriver, remove the optical drive retaining screw.

## Step 6



- Using your finger or a spudger, push the optical drive out of its compartment so you can grab it.
- Pull the optical drive out of its slot in the side of the laptop.

## Step 7 — RAM



- Loosen the single screw on the service panel by twisting counterclockwise with a Phillips #00 screwdriver.
-  It is a captive screw that will remain attached to the service panel.

## Step 8




- Using a spudger or plastic opening tool, pry off the service panel.

## Step 9




- Using your fingers, pull the retaining clips away from the RAM sticks.
- Pull the RAM sticks out of the slots.

## Step 10 — Keyboard

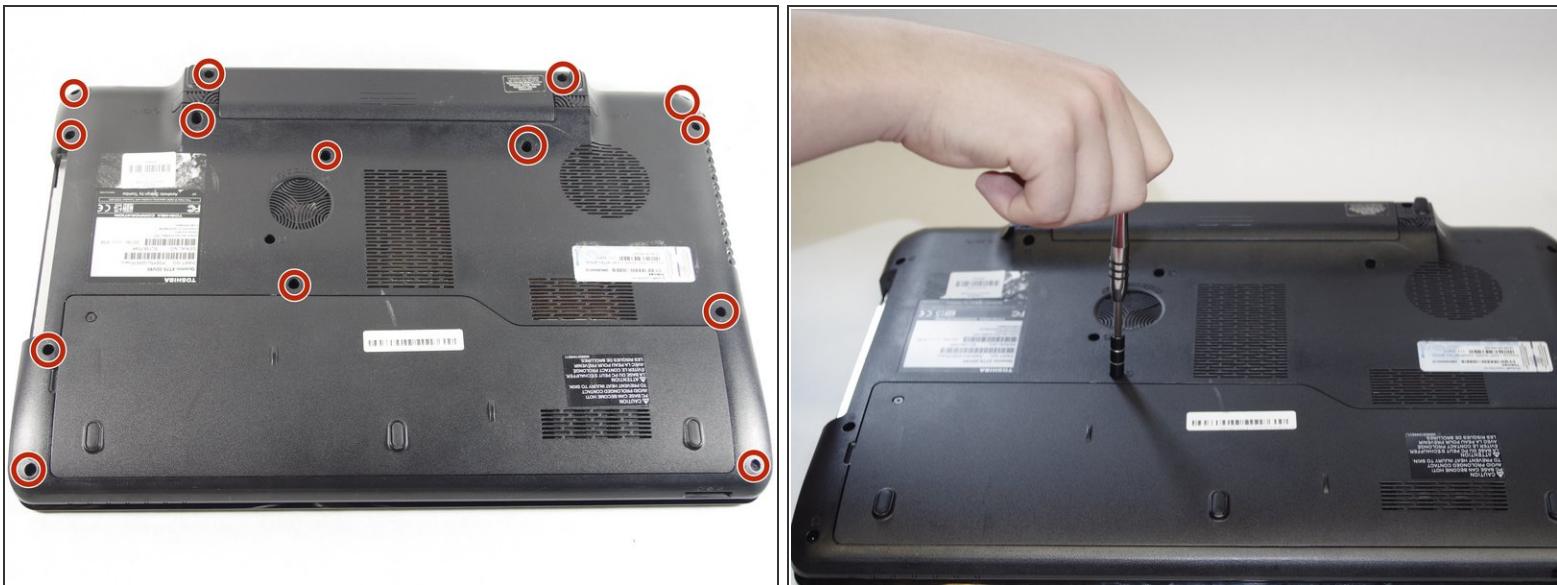


- Using a Phillips #00 screwdriver, remove all the remaining fourteen screws from the bottom case of the laptop.
- *(i)* The service panel should already be removed.

## Step 11

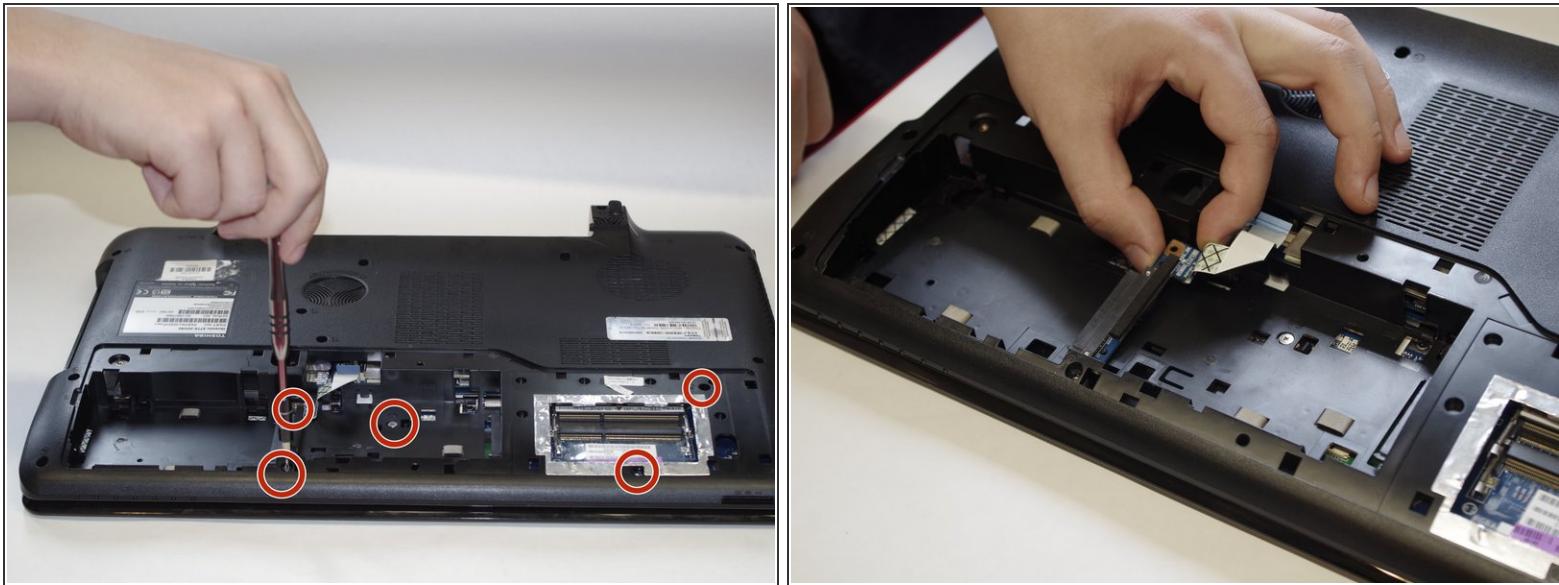


- Using a Phillips #00 screwdriver, remove the five screws under the service panel.
- Remove the retaining clip.

## Step 12

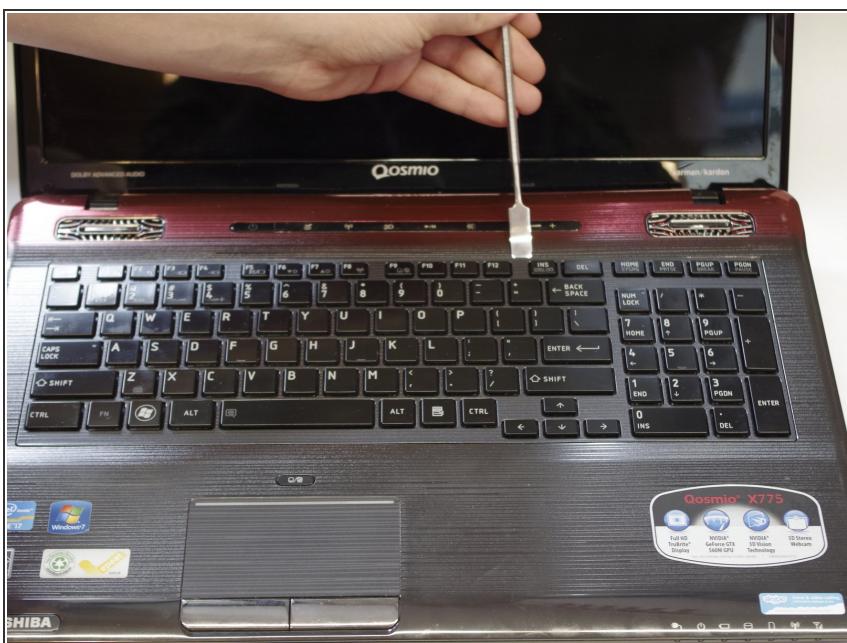

- Using a spudger, pry the keyboard from the top panel of the laptop.
- *i* Make sure to pry it off all around.

## Step 13

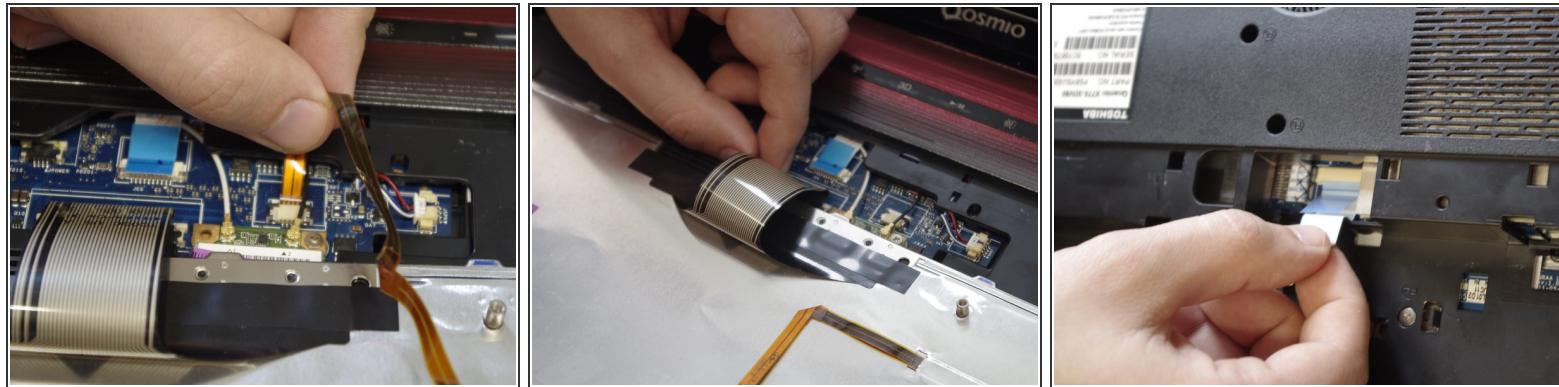

- Disconnect the two ribbon cables connecting the keyboard to the laptop.
- Unplug the connector on the bottom of the laptop.

To reassemble your device, follow these instructions in reverse order.