




Toshiba Satellite C55Dt-A5306 Fan Replacement

This guide will show users how to replace the fan.

Written By: Nahrain Putris

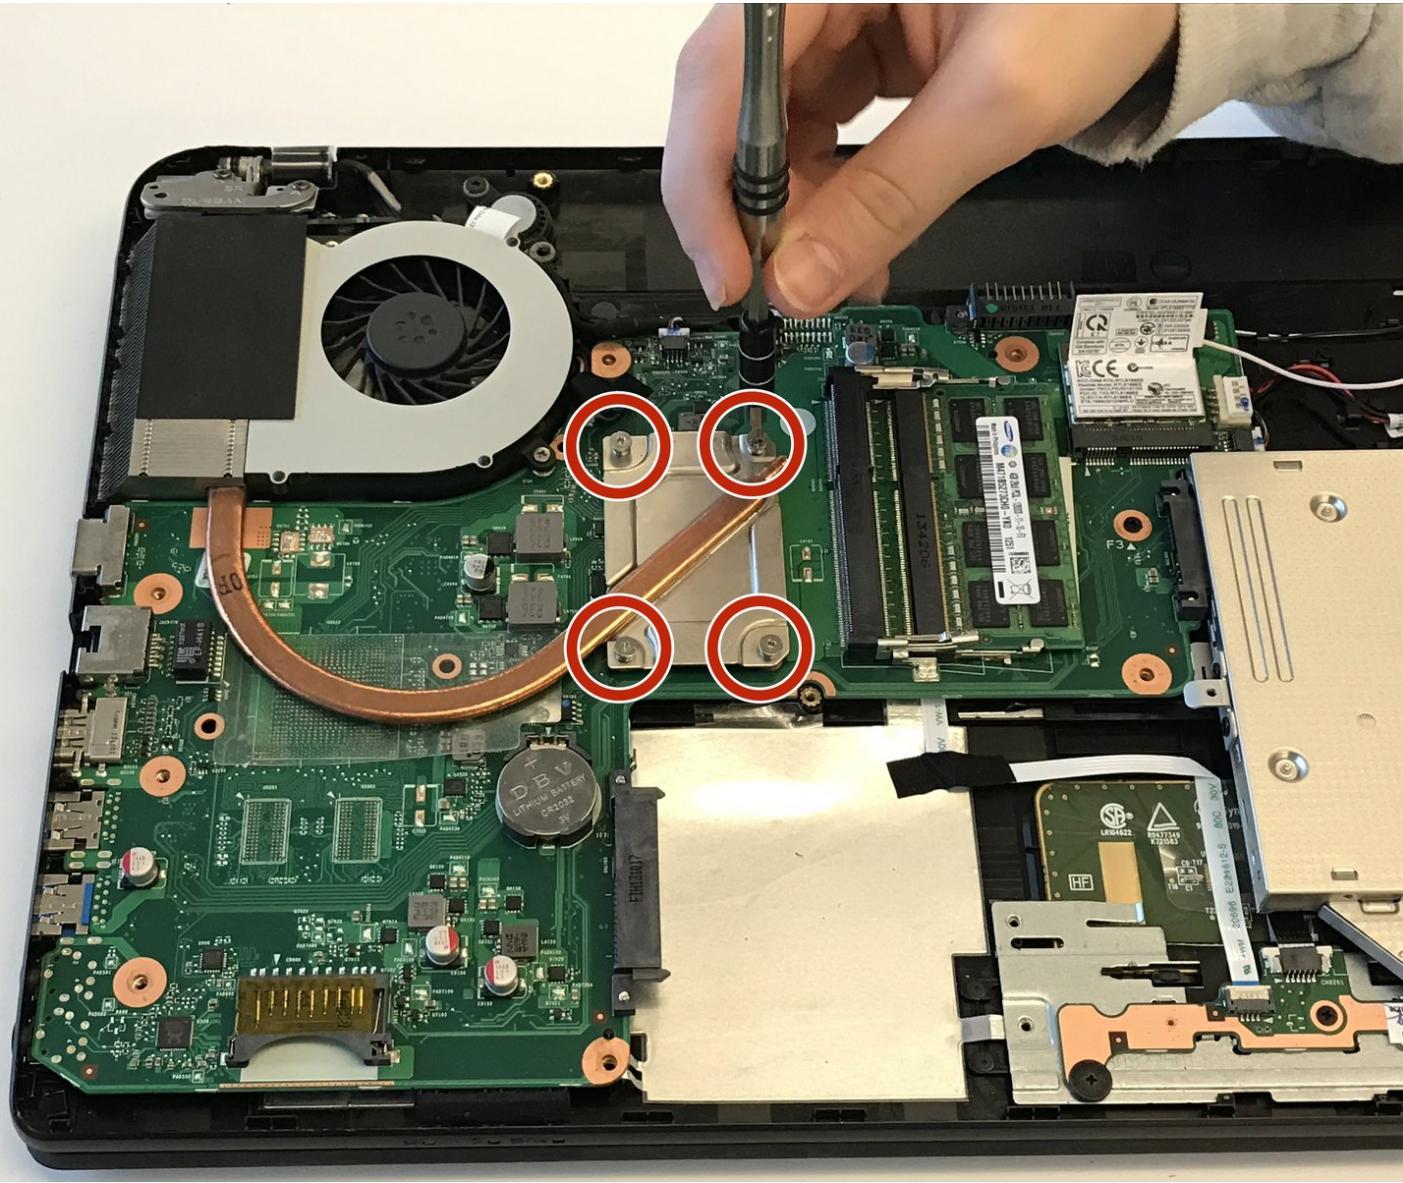

INTRODUCTION

This guide will show users how to replace the fan.

TOOLS:

- [Spudger](#) (1)
- [Phillips #0 Screwdriver](#) (1)

Step 1 — Battery




- Place fingers on the latches and slide outwards to unlock.

Step 2




- Remove battery.

Step 3 — Back Cover

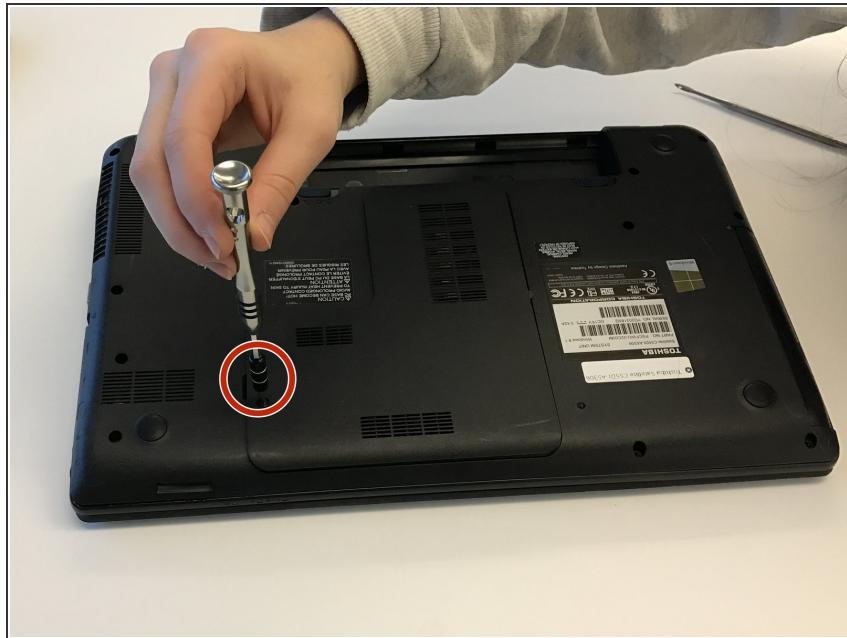


- Using the Phillips Head #0 Screwdriver, remove one 3mm Phillips #0 screw as indicated.

Step 4

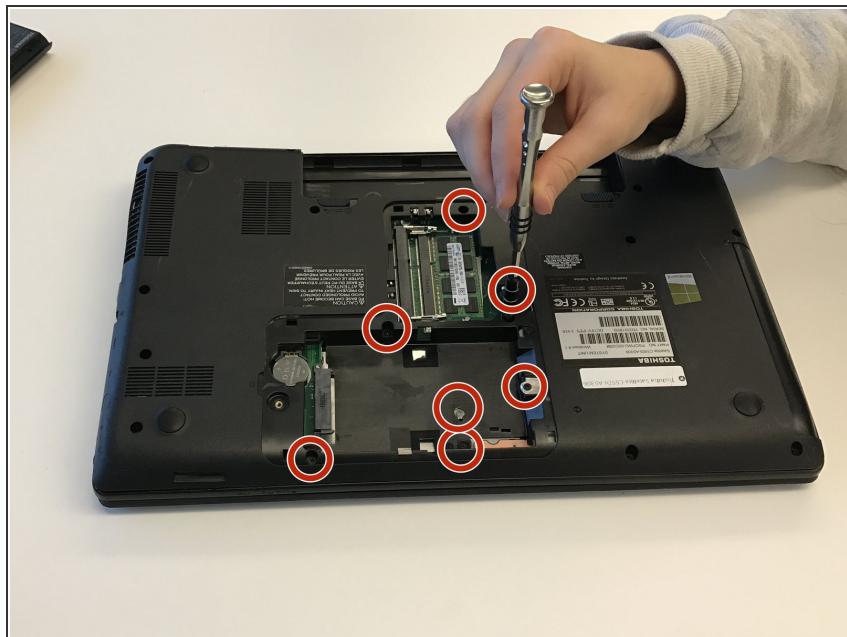


- Remove hard drive cover. Using the Phillips Head #0 Screwdriver, remove seven 3mm Phillips #0 screws as indicated.

Step 5

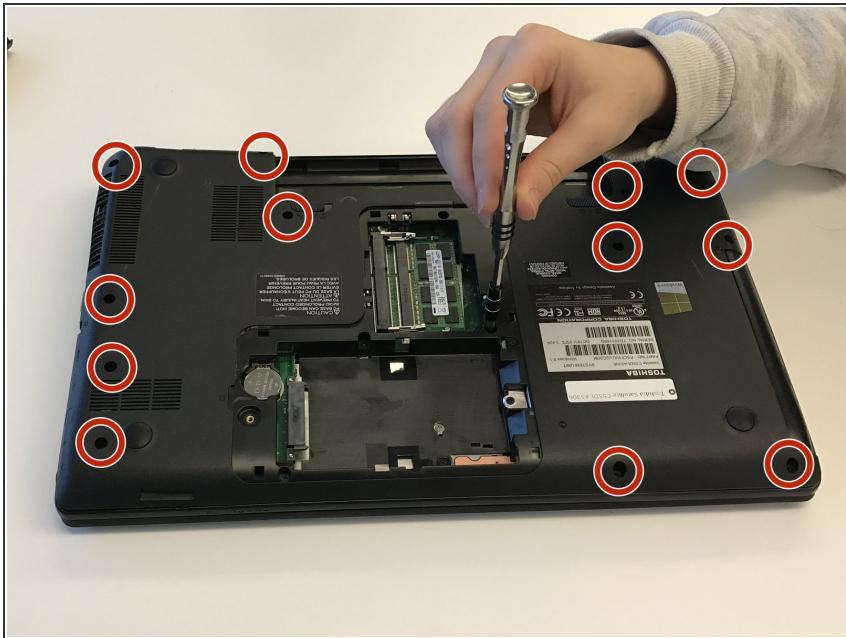


- Using the Phillips Head #0 Screwdriver, remove twelve 3mm Phillips #0 screw as indicated.

Step 6

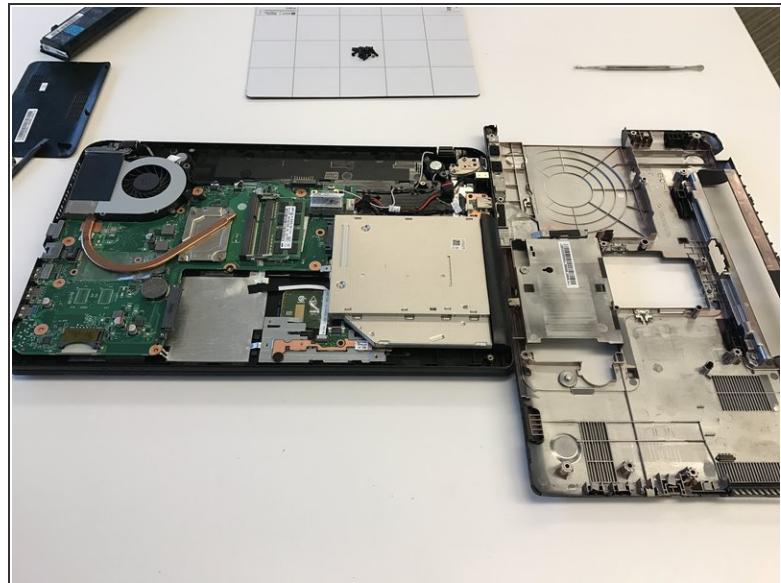


- Using the plastic spudger, pry the back off along the periphery of the laptop.

Step 7 — Fan/Heatsink Replacement

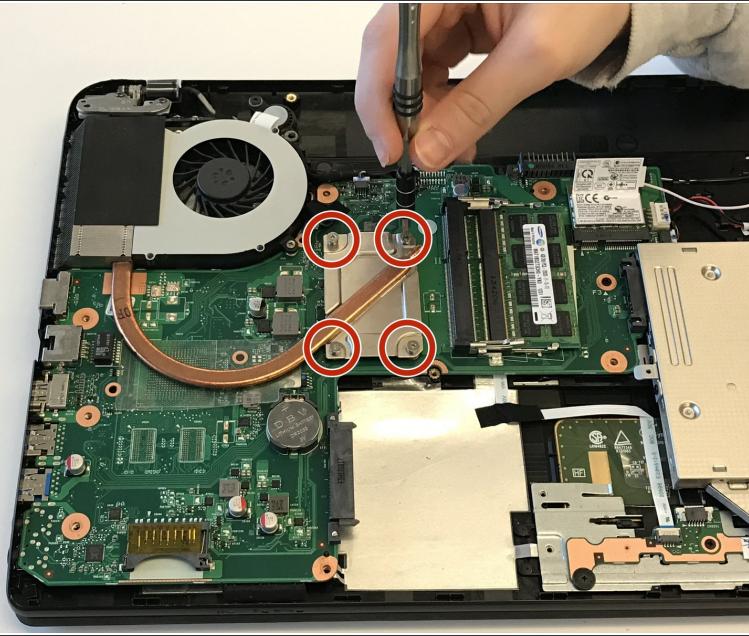


- Using the Phillips Head #0 Screwdriver, unscrew four 3mm Phillips #0 screws, on the silver plate under the copper tubing.

Step 8

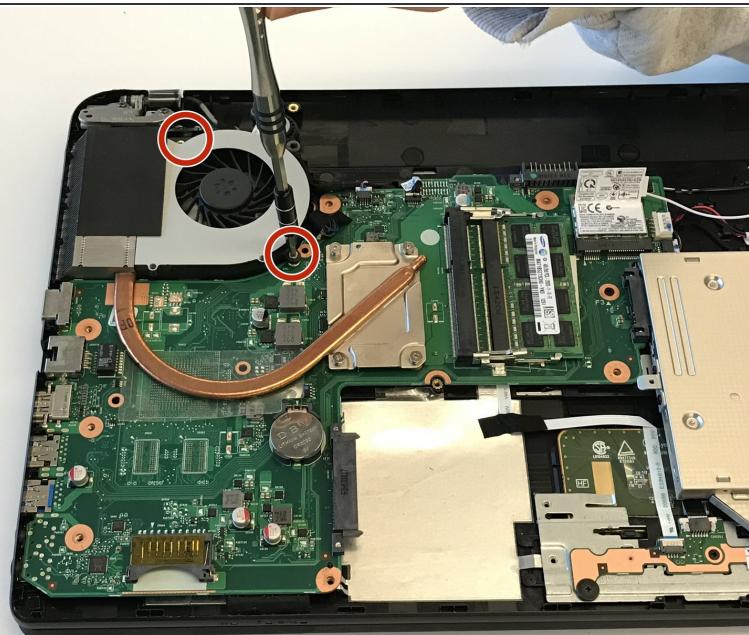


- Using the Phillips Head #0 Screwdriver, remove two 1.5mm Phillips #0 screw holding the fan down.

Step 9

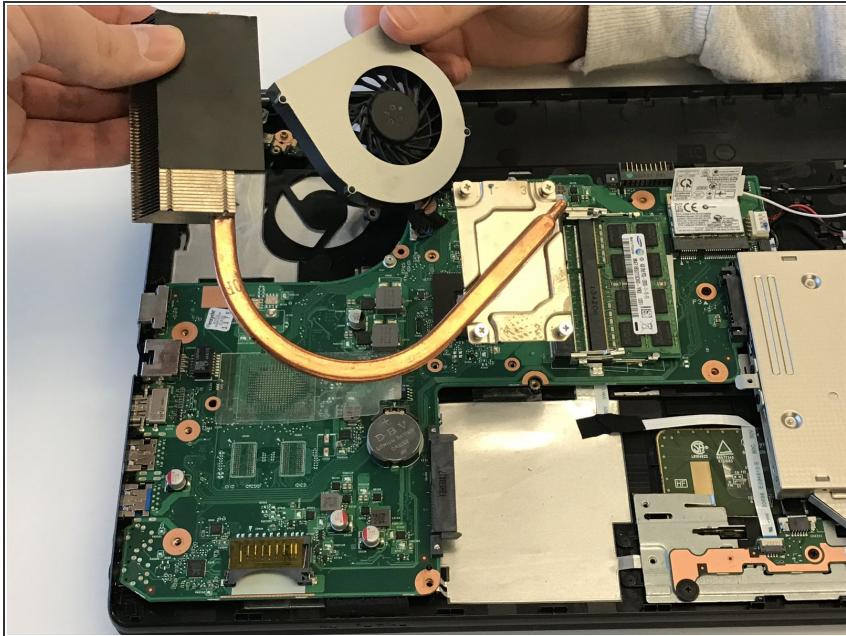

- After unscrewing, remove the heatsink from the laptop.

Step 10

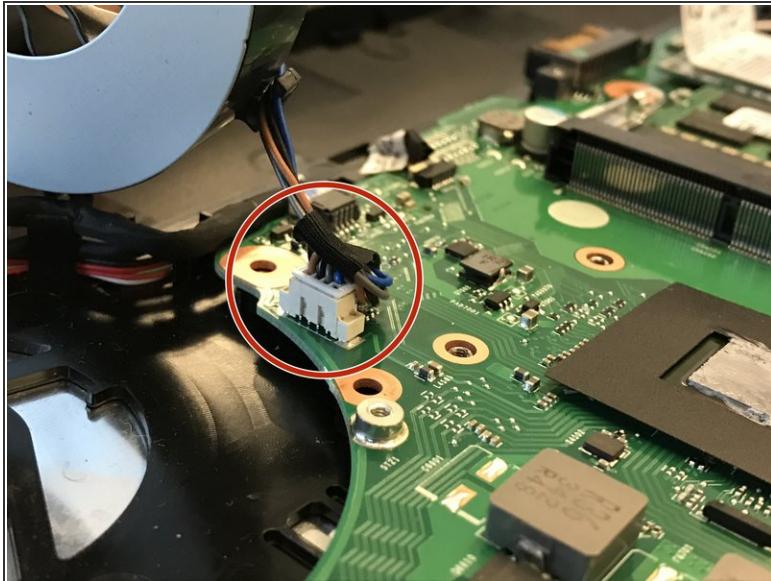

- Unplug connected wire to remove the fan as indicated. Both the heatsink and fan should be removed before replacement.

To reassemble your device, follow these instructions in reverse order.

