




# Toshiba Satellite L505 Laptop Palm Rest Assembly Replacement

The purpose of this guide is to replace the palm rest assembly on the Toshiba Satellite L505 Laptop

Written By: Matias

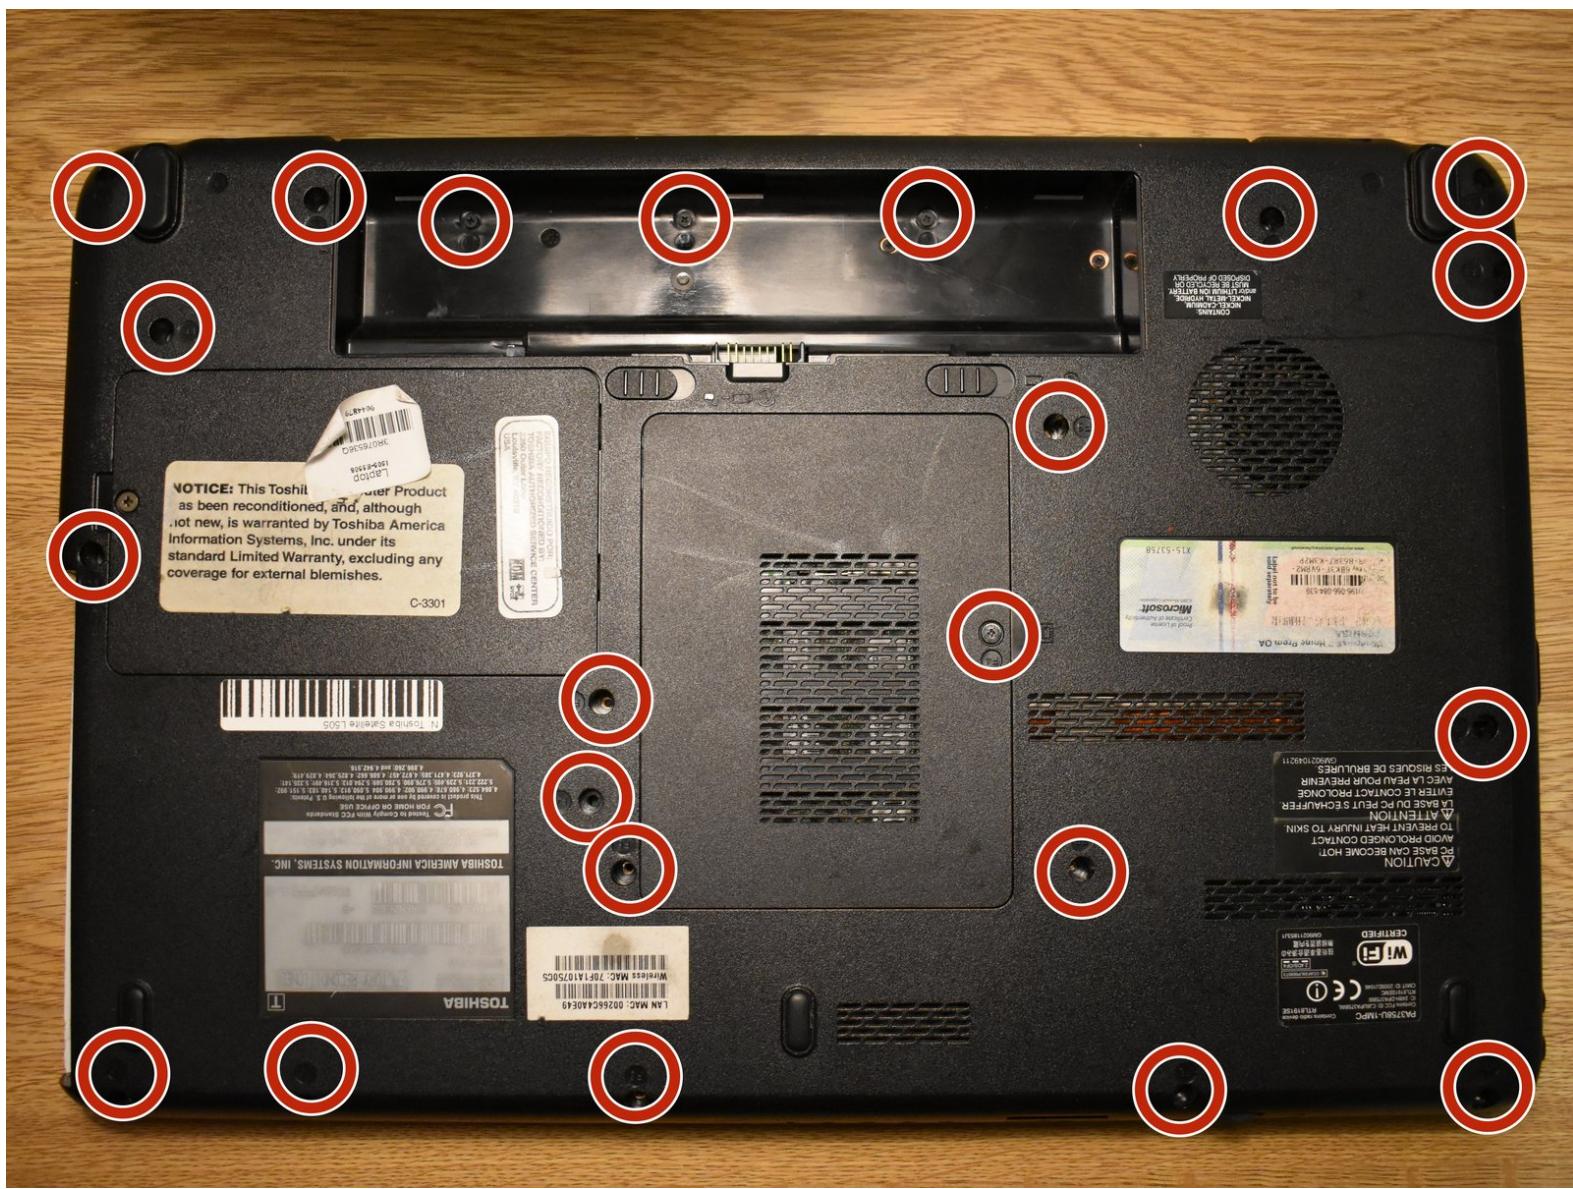

This document was generated on 2019-10-20 09:35:34 PM (MST).

## INTRODUCTION

The palm rest is a moderately difficult component to remove from the laptop, as it requires multiple components and screws on the back to be removed before the palm rest itself can be removed.

### TOOLS:


- ESD-safe pry tool (1)
- Phillips #1 Screwdriver (1)
- iFixit Opening Tools (1)

## Step 1 — Keyboard





- Open the laptop and locate the plastic strip just above the keyboard.
- With care, slide the prying tool into an end and lift it up until you hear an audible click, meaning it has separated.
- Slowly slide a finger or the prying tool under and follow the strip to the opposite end, completely detaching the strip.

## Step 2

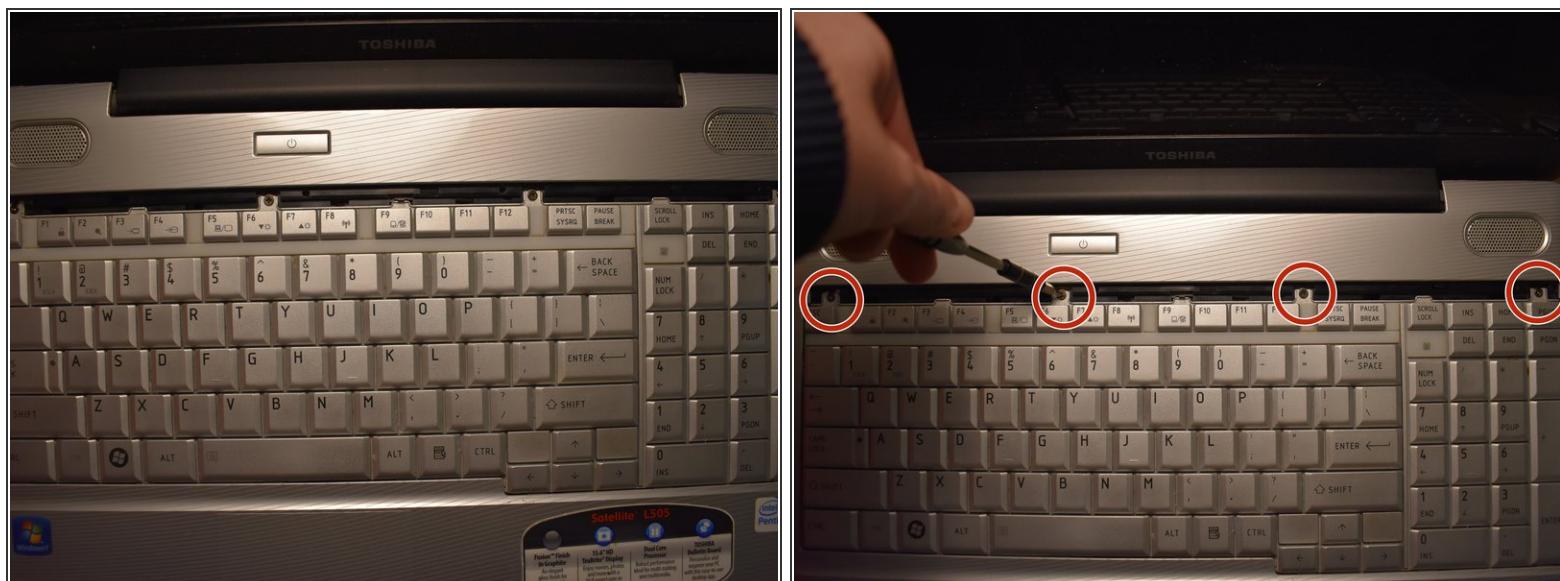


- Remove the four screws using the Phillips #1 screwdriver.

## Step 3

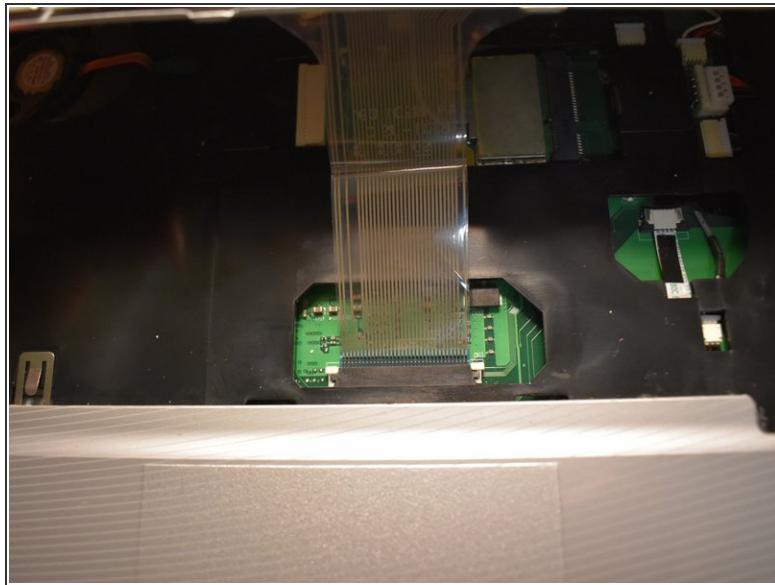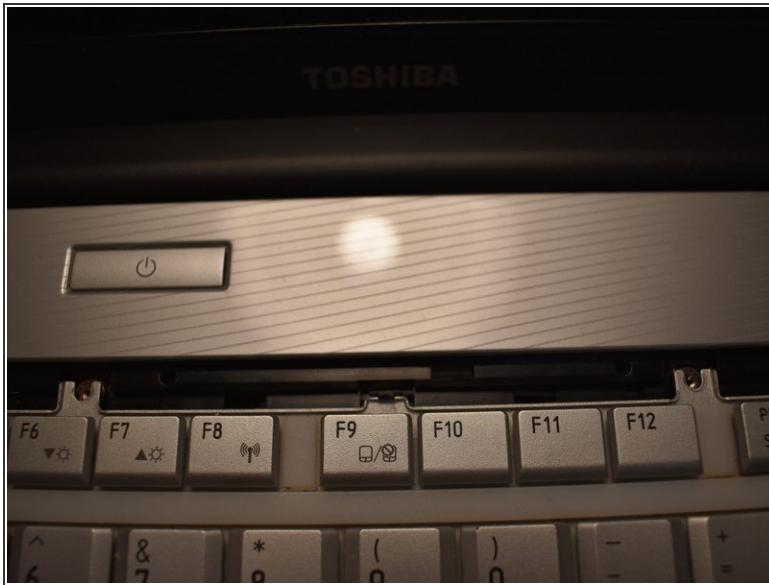


- Gently push the clip back as you lift the top of the keyboard towards you.
- There is a cable connecting the keyboard to the motherboard so do not lift the keyboard all the way out yet.

## Step 4

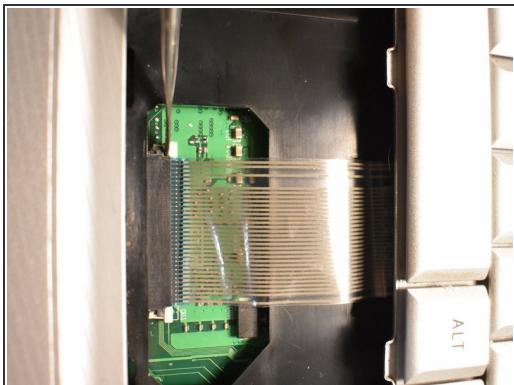

- Gently disconnect the connector strip by pushing the white clips forward.
- Carefully pull the strip out of its port.
- Remove the keyboard from the device.

## Step 5 — Optical Drive

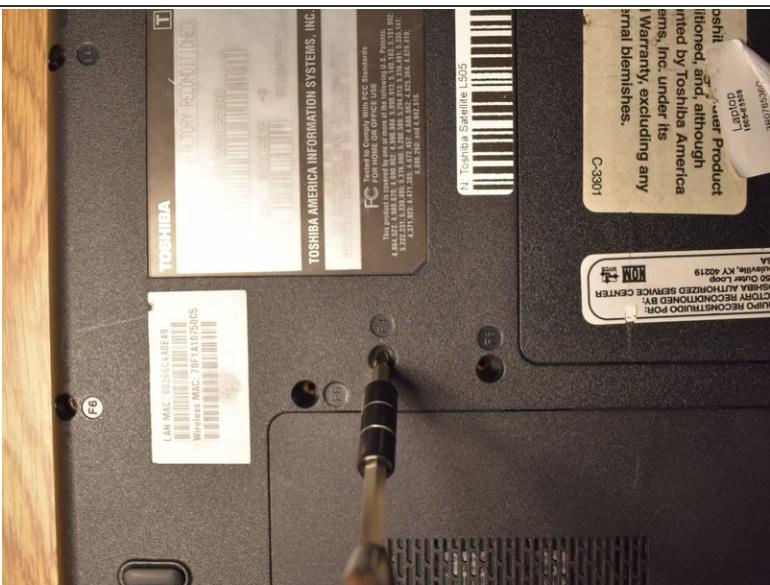

- Turn the laptop upside down.
- Remove the screw labeled F4 using the Phillips #1 screwdriver.

*(i)* There are 2 screws labeled F4, the correct screw is the one closer to the hard drive.

## Step 6




- Gently slide the optical drive out of the device.

## Step 7 — Battery




- Turn your laptop upside down, at the bottom of the laptop, slide the right sliding lock to the unlocked position.
- Slide the left sliding lock to the left and hold it. Using your fingers lift the battery out.

## Step 8 — Palm Rest Assembly

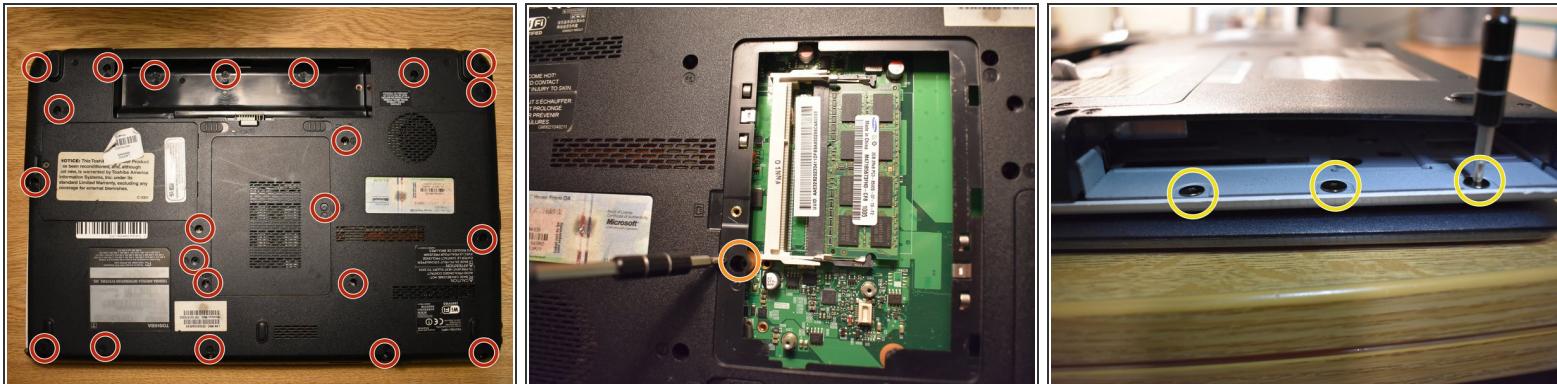


- Unscrew all of the screws marked on the underside of the laptop.
- Remove the screw marked in the second photo by lifting up the lid and unscrewing using a Phillips #1 screwdriver.
- Remove the three flat screws in the port where the Optical drive is housed in.

## Step 9

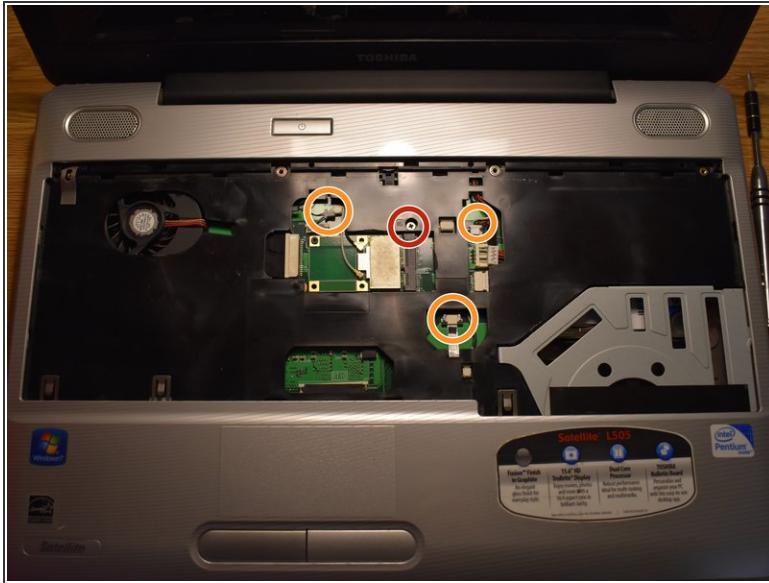

- Remove the keyboard and once that has been done, remove the screw marked "16."
- Disconnect all of the cables with a blue circle.

## Step 10

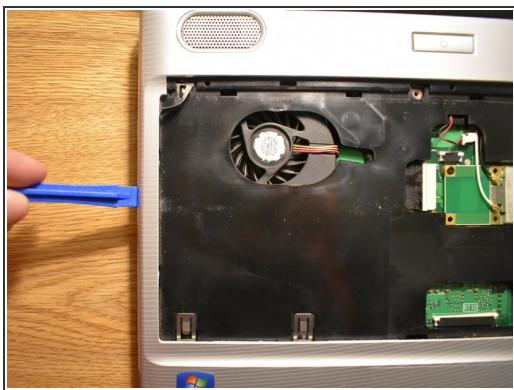

- Using the opening tool, carefully go around the edge and loosen the palm-rest assembly, until you can comfortably and easily lift it off.

To reassemble your device, follow these instructions in reverse order.