




Toshiba Satellite p875 s7200 Speaker Replacement

Guide for replacing the speakers on a Toshiba Satellite p875 s7200.

Written By: Danny Amado

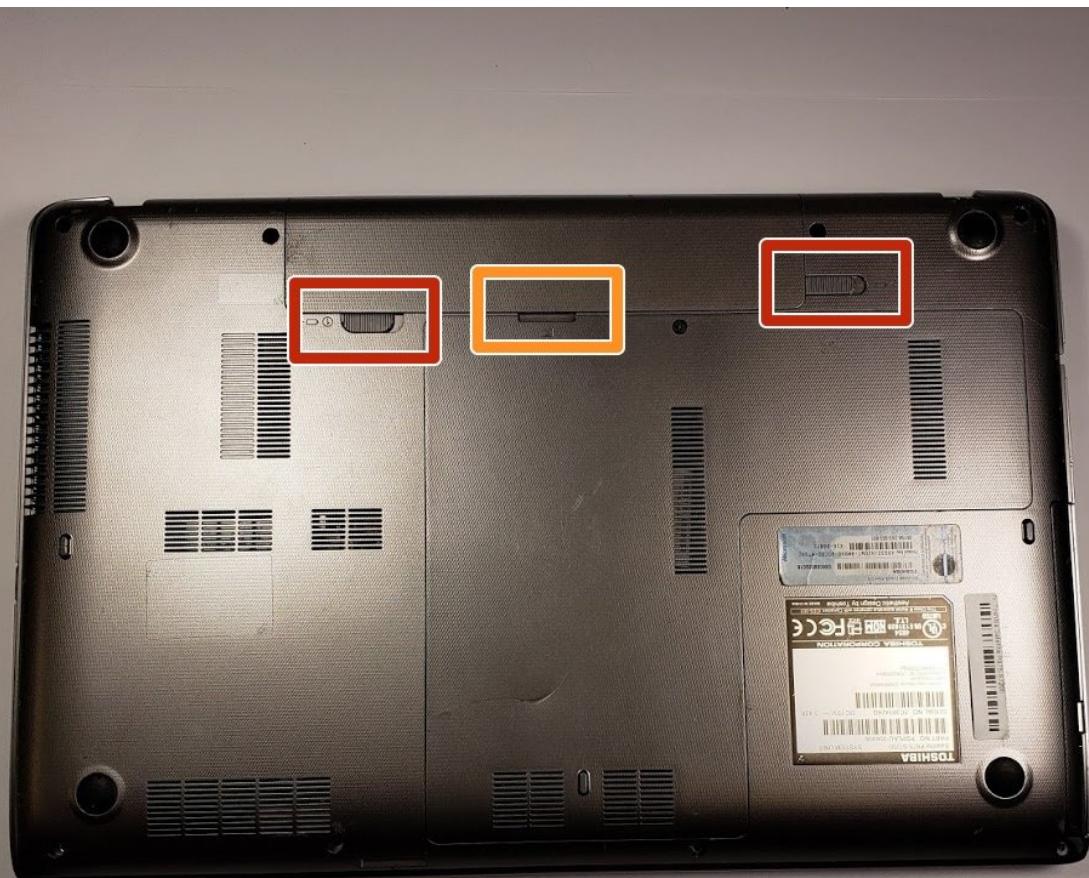


INTRODUCTION

If you need to replace the speakers, follow this guide. The speaker can be accessed by removing the computer from its casing. To replace this part, you will need a Phillips 0 screw driver and a plastic opening tool.

TOOLS:

- [Phillips #0 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

Step 1 — Speaker

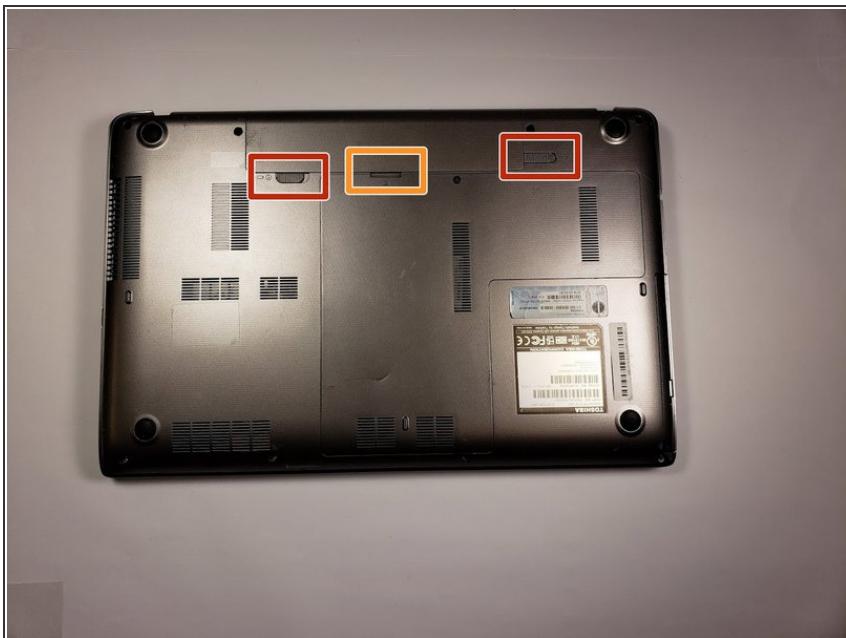


- Remove the battery by sliding the tabs to the left.
- Use the spudger to lift the battery out.

Step 2



- Use the Phillips head screw driver to remove the screw holding the back plate on.
- Use the spudger to remove the back plate.

Step 3

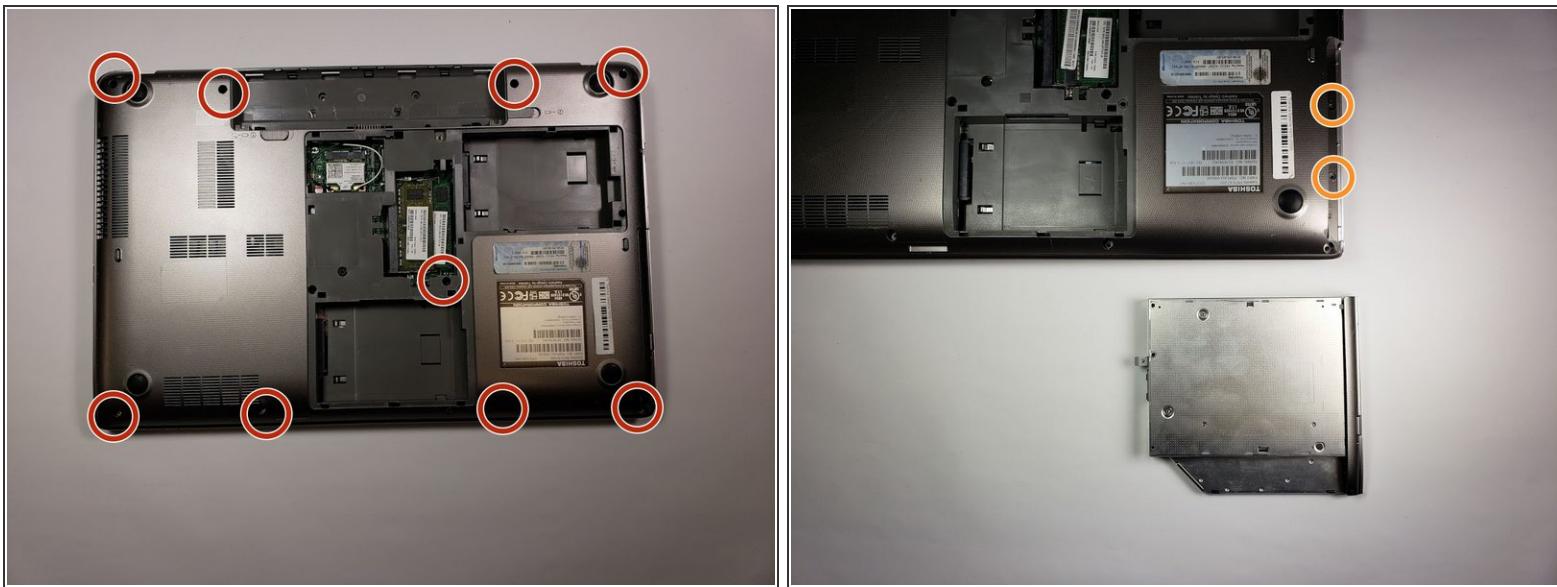

- Remove the 6 mm screws around the edges with the Phillips head screw driver. Then remove the 6mm screw holding the disc drive into place.
- Sliding out the disc drive will reveal the final two 4 mm screws on the bottom of the device.

Step 4



- Flip the laptop over to begin the process of removing the keyboard.
- Use the spudger to pop the keyboard off. Start at the bottom of the keyboard and work your way around.

Step 5





- Use the Phillips head screw driver to remove the last 6mm screws holding the case together.

⚠ The screws are held into elevated columns which are fairly easy to break. Be cautious when removing the screws.

- After removing the keyboard and the screws, use the spudger around the edges of the laptop to remove the face plate.

Step 6

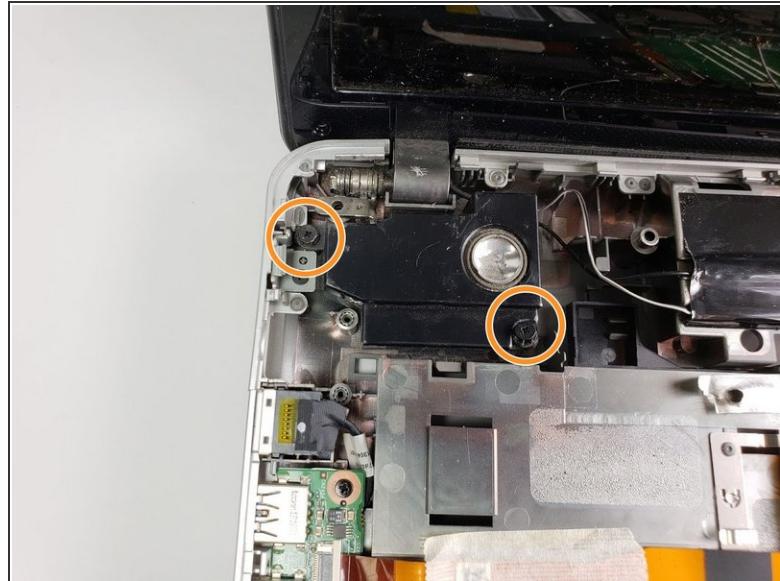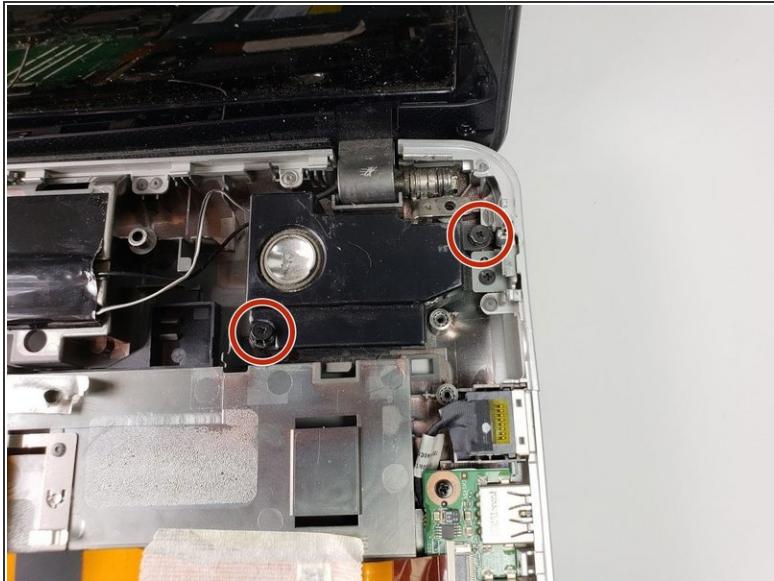

- Use the Phillips head screwdriver to remove the 5mm screws on the right speaker.
- Repeat the process for the left side.

To reassemble your device, follow these instructions in reverse order.