




# VTech MobiGo Touch Learning System Buttons Replacement

How to remove and replace the two grey buttons next to the screen.

Written By: Daniel Kresge

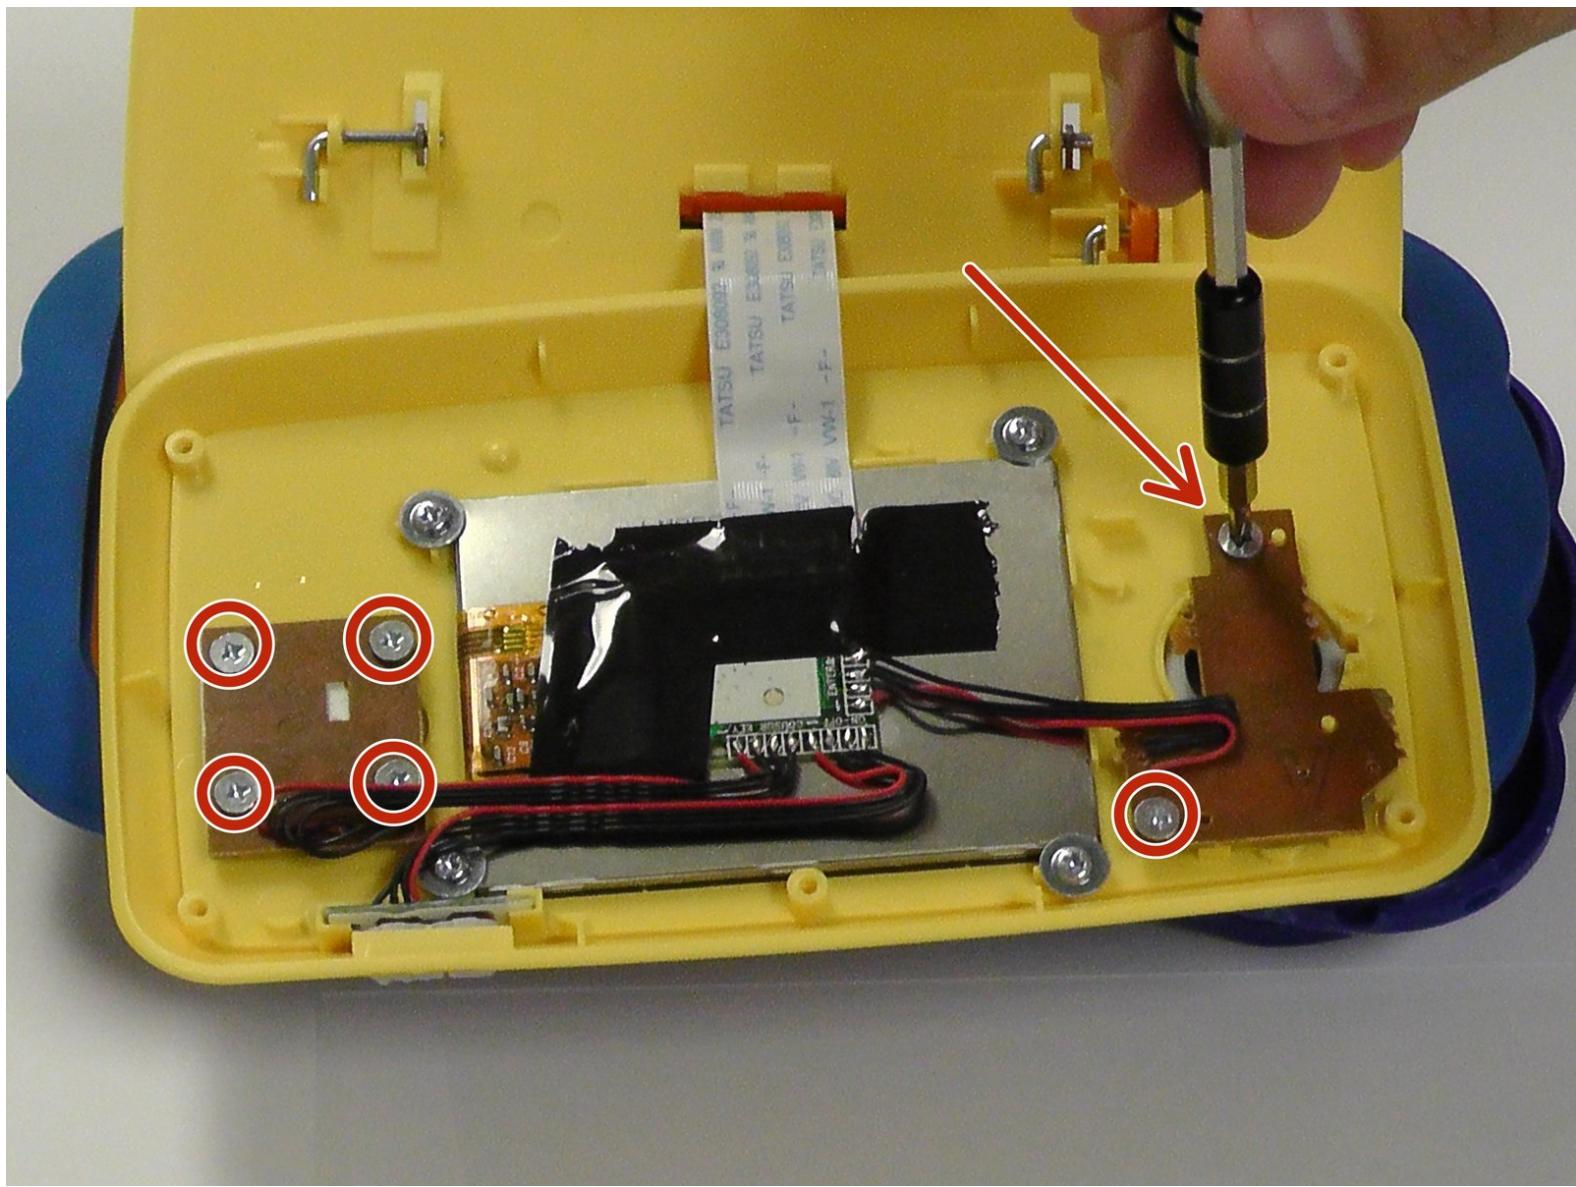

## INTRODUCTION

This guide show users how they can replace the buttons of the device.

### TOOLS:

- [Magnetic Project Mat \(1\)](#)
- [Metal Spudger \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [Screwdriver \(1\)](#)

## Step 1 — Case




- Remove the battery covers and the four batteries.

## Step 2




- Remove the four plastic caps with a metal spudger to expose the 6.0 mm Philips JIS #0 case screws.
- Remove the eight 6.0 mm JIS #0 case screws.

## Step 3

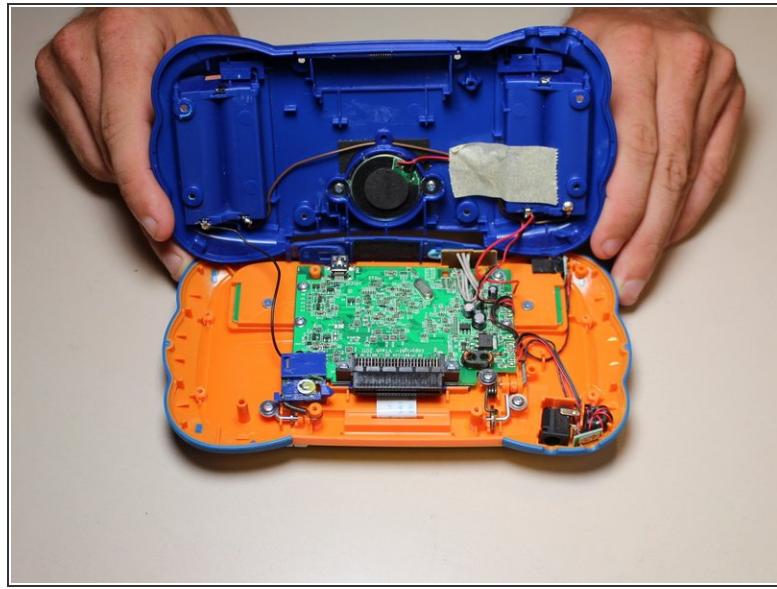


- Using a plastic opening tool, separate the two pieces of the case carefully.

## Step 4 — Disassembling VTech MobiGo Touch Learning System Screen Enclosure

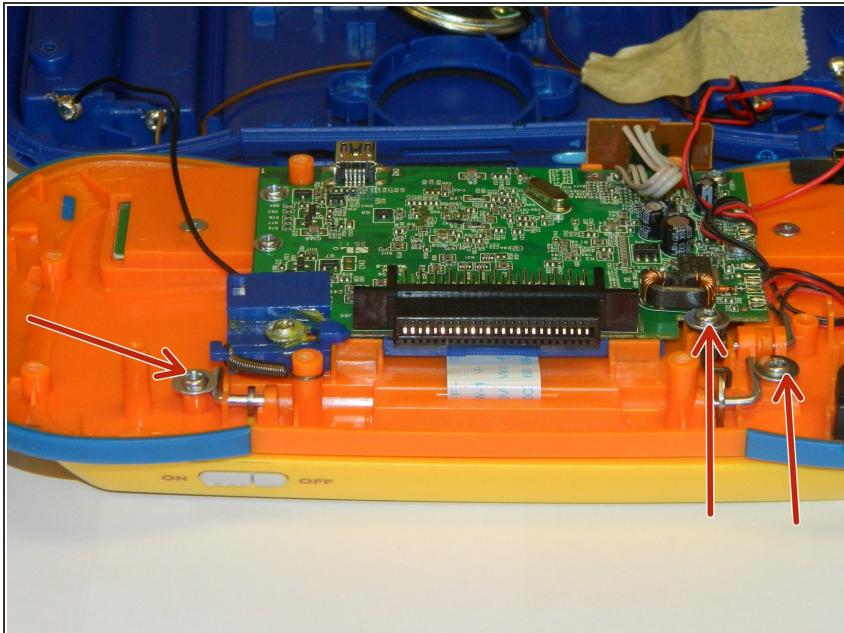


- Remove the three 4.0 mm Philips J0 screws holding the "L" shaped brackets in place.

## Step 5

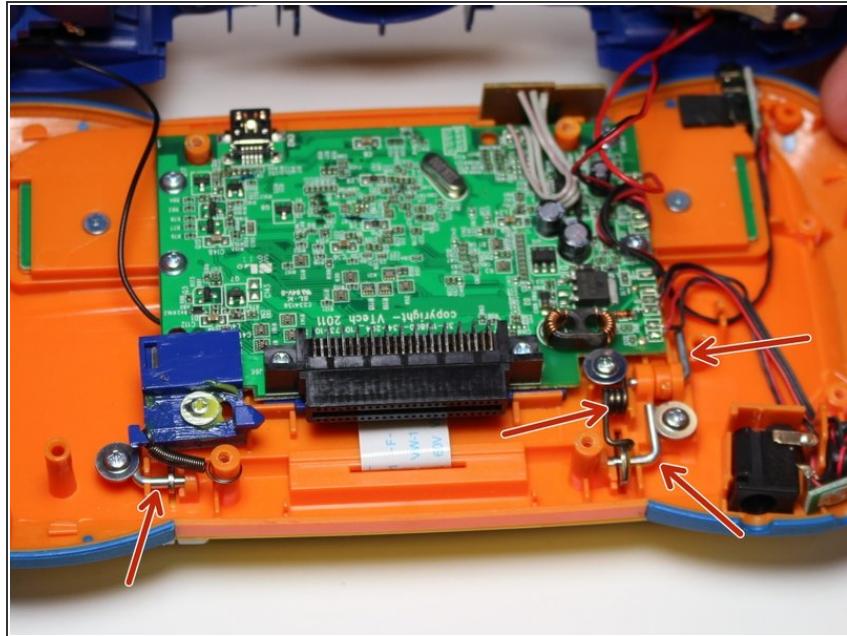


- Remove the three "L" shaped brackets and the spring.

## Step 6

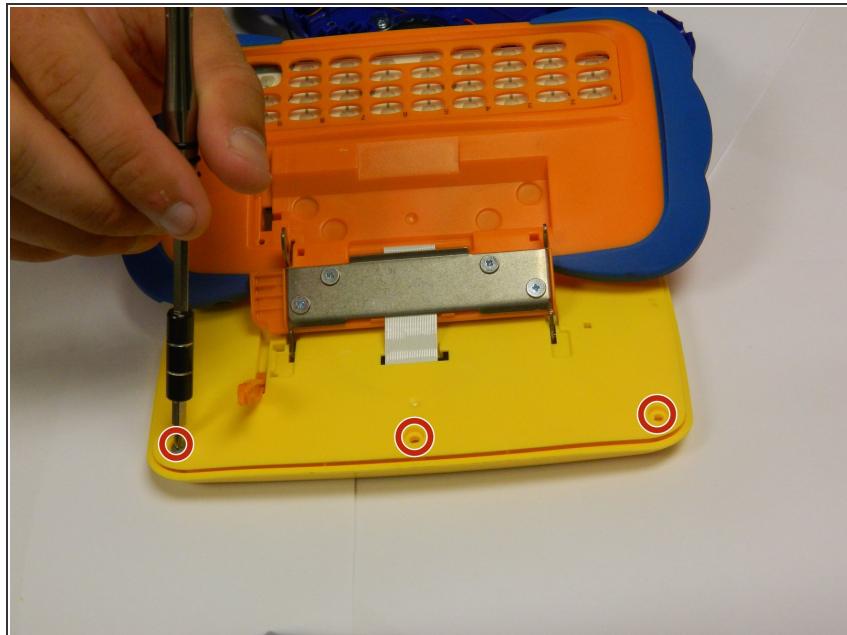

- Flip the device over and remove the three 4.0 mm Philips J0 case screws.


## Step 7

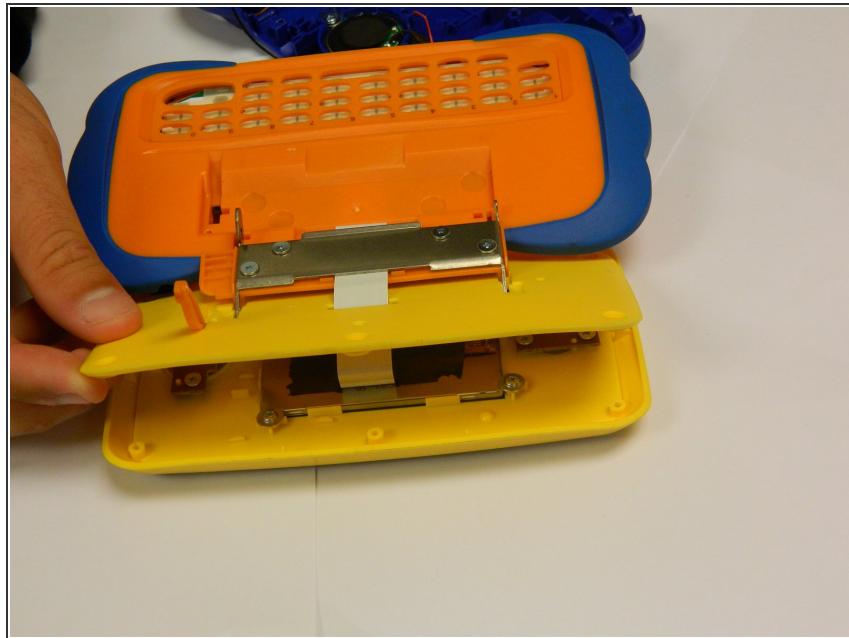

- Separate the front and back of the case.


**i** Use a plastic opening tool if necessary.

## Step 8 — Buttons

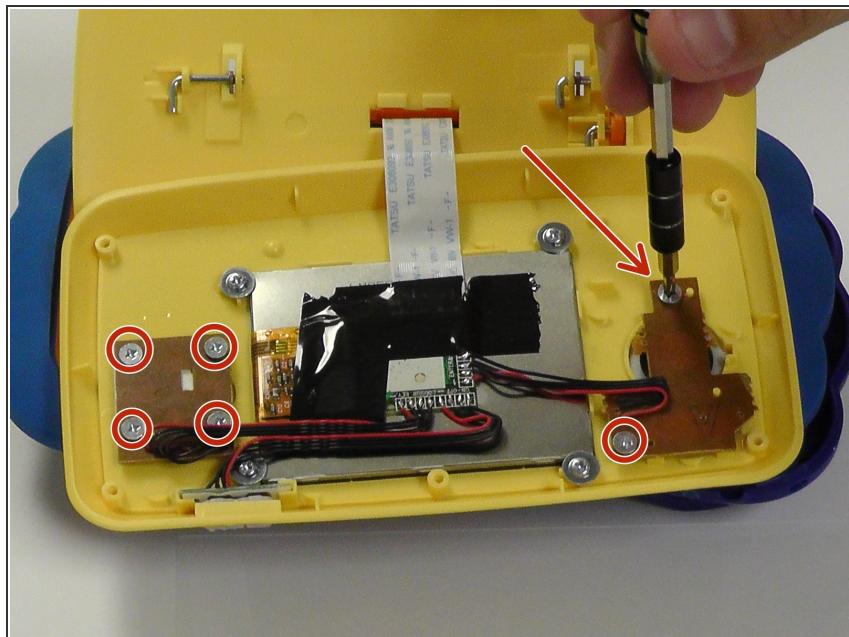

- Remove 6 (3.8 mm Philips J0) screws holding the buttons in.

## Step 9

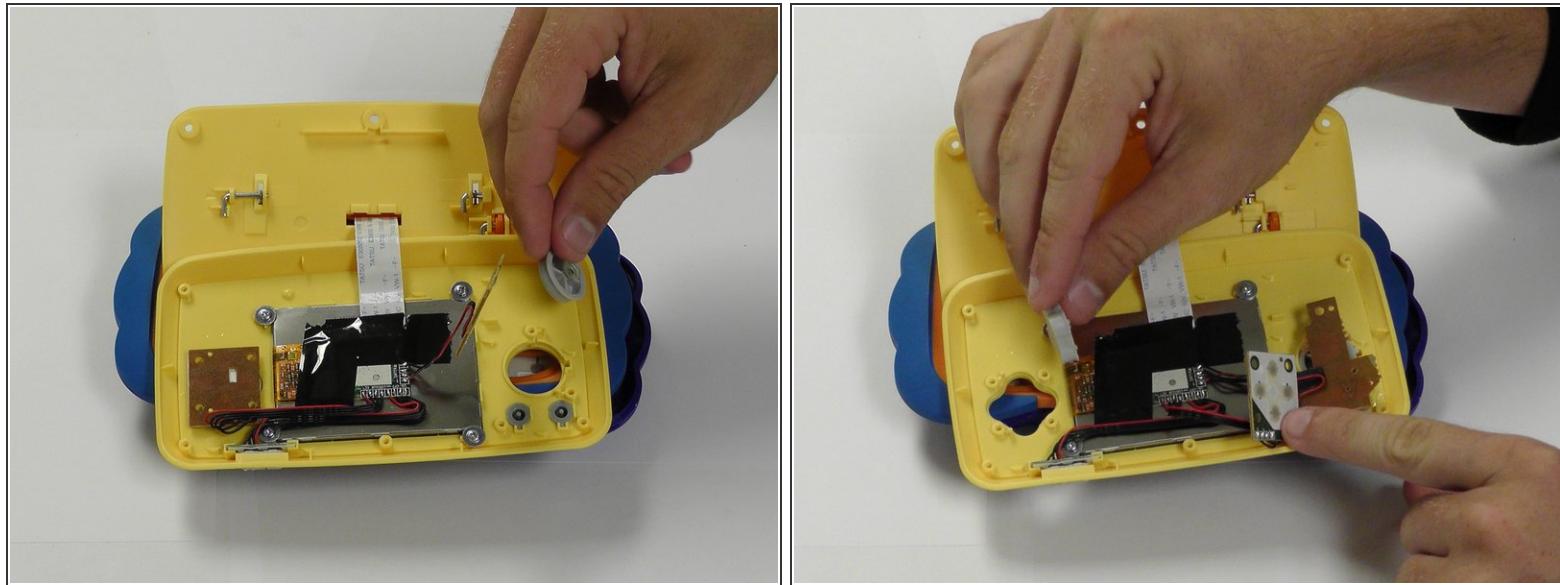

- From here you can remove and replace the buttons.

To reassemble your device, follow these instructions in reverse order.