




iPhone 6 Plus Antenna Assembly Replacement

Prereq only, battery removed.

Written By: Walter Galan

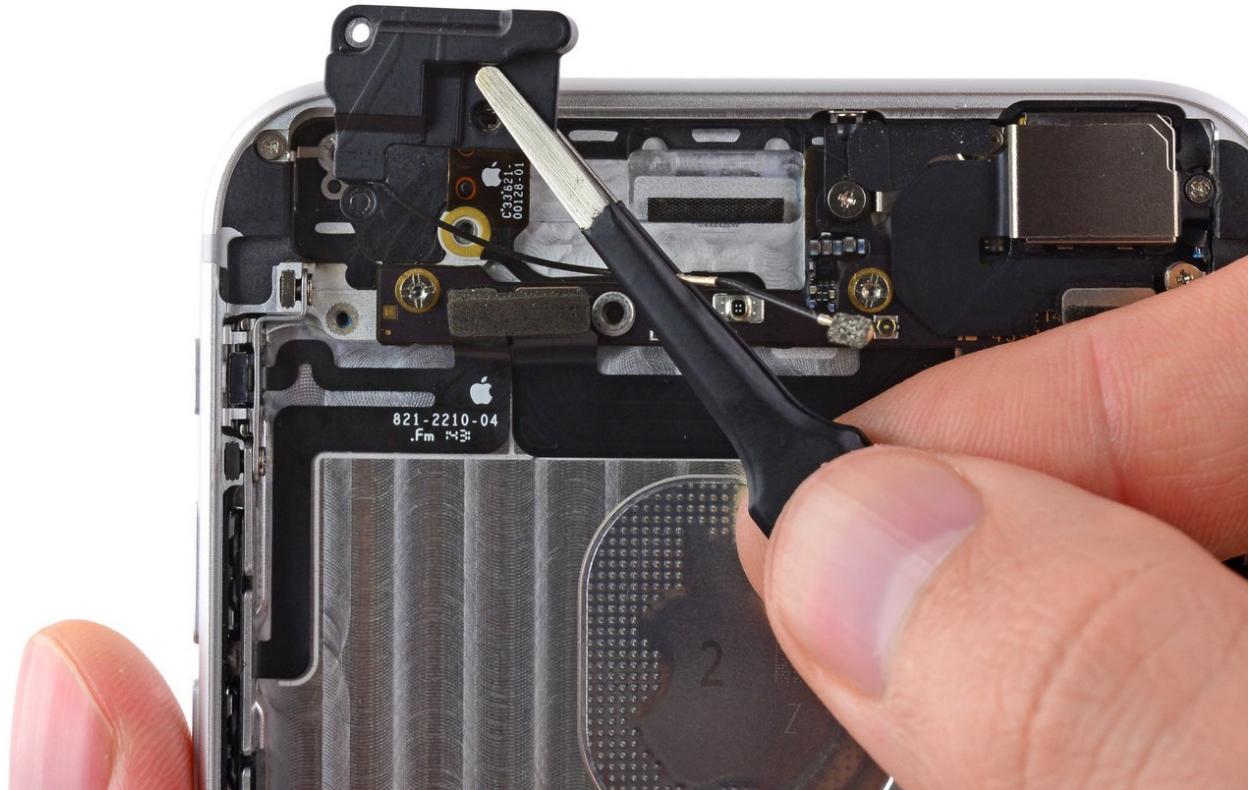


INTRODUCTION

Prereq only, battery removed.

TOOLS:

- [Spudger \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [Phillips #000 Screwdriver \(1\)](#)
- [Tweezers \(1\)](#)

Step 1 — Antenna Assembly

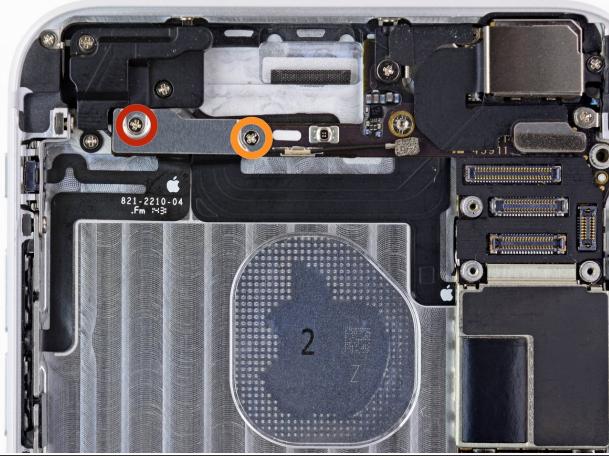

- Remove the following screws securing the antenna bracket to the rear case:
 - One 1.5 mm Phillips #00 screw
 - One 2.8 mm Phillips #00 screw

Step 2




- Grasp the antenna bracket with a pair of tweezers and lift it off the iPhone.

Step 3

- Carefully pry the antenna connector up off the logic board with a plastic opening tool.




Step 4

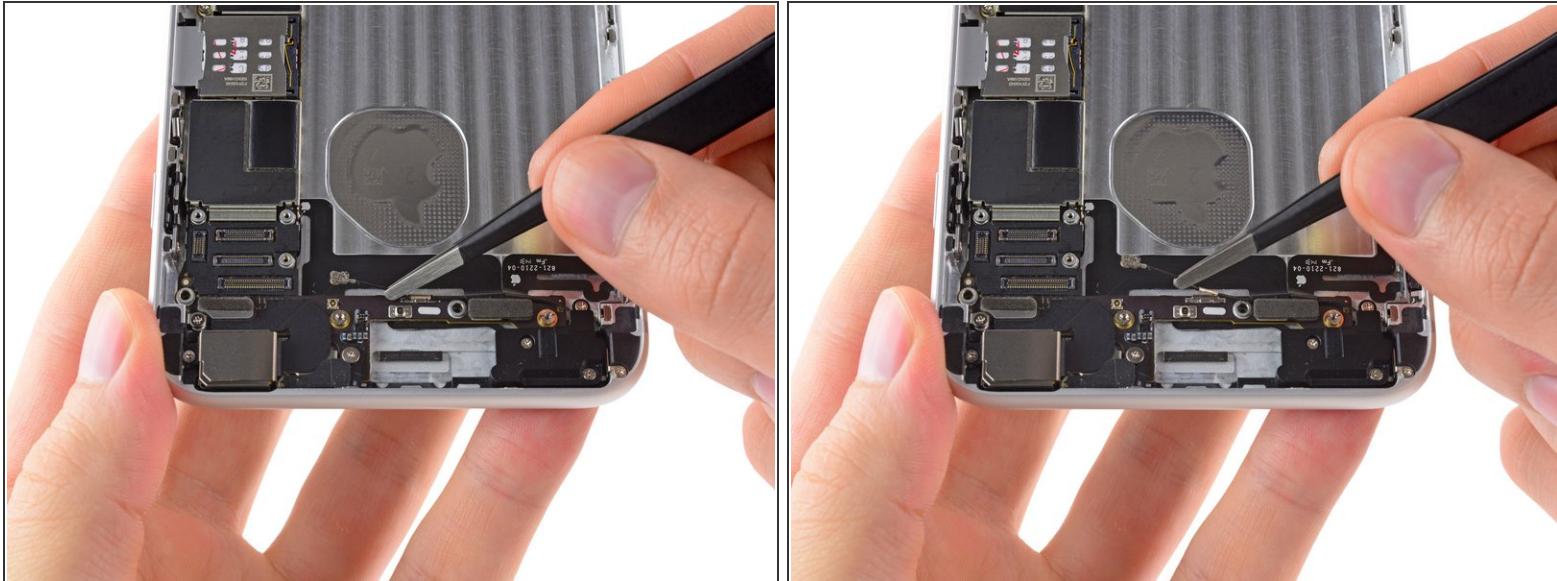


- Grasp the antenna connector with a pair of tweezers and gently lift it from its retaining clip on the logic board.

Step 5

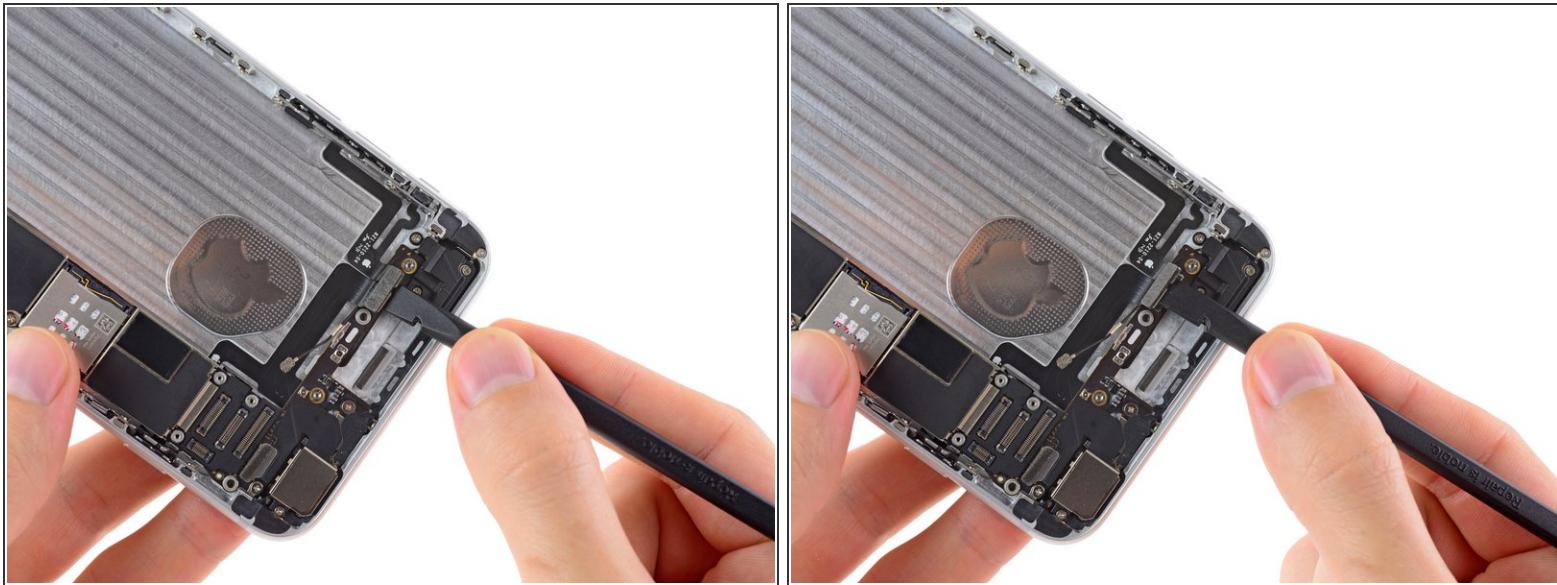


- ⓘ The two connectors may be coupled by a single adhesive tab. If this is the case, then they may detach as a pair.
- Disconnect the power button cable and audio control cable connectors from their respective sockets on the logic board.

Step 6

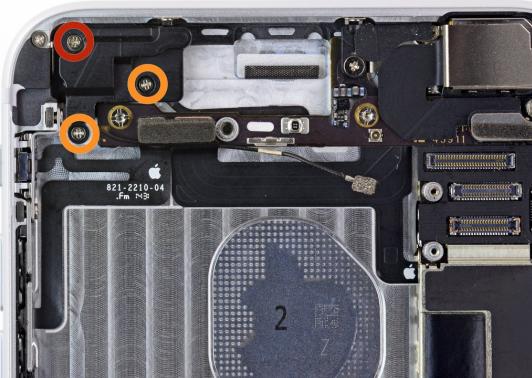

- Remove the following screws securing the top cellular antenna to the rear case:
 - One 2.8 mm Phillips #00 screw
 - Two 1.6 mm Phillips #00 screws

Step 7

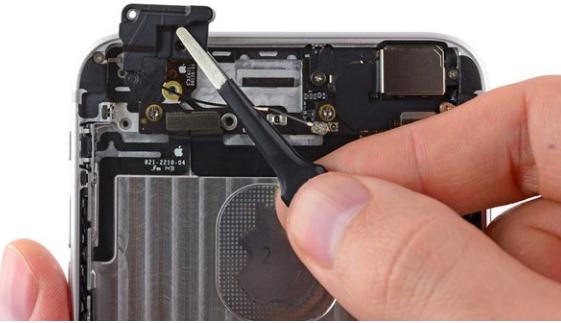

- Use a pair of tweezers to grasp and remove the top cellular antenna out of the iPhone.
- ☒ During reassembly, make sure to place the small washer in the top left corner of the antenna assembly.

To reassemble your device, follow these instructions in reverse order.