



# iPhone 6 Plus Rear Facing Camera Replacement

Prereq only for logic board.

Written By: Walter Galan



## INTRODUCTION

Prereq only for logic board.

### TOOLS:

- [Tweezers \(1\)](#)
- [Spudger \(1\)](#)
- [Phillips #000 Screwdriver \(1\)](#)

## Step 1 — Rear Facing Camera



- Use a pair of tweezers to peel back the piece of tape covering the hidden screw securing the rear-facing camera bracket to the rear case.

## Step 2



- Remove the following screws securing the rear-facing camera bracket to the rear case:
  - One 1.7 mm Phillips #00 screw
  - One 2.3 mm Phillips #00 screw

## Step 3

- Lift and remove the rear-facing camera bracket off the rear-facing camera.




## Step 4

- Use the flat end of a spudger to disconnect the rear-facing camera connector from its socket on the logic board.



## Step 5

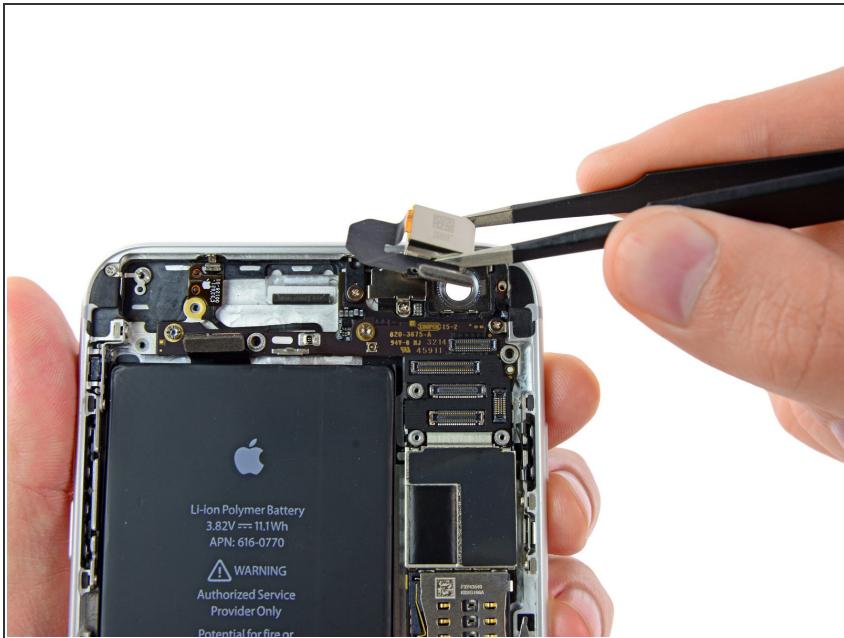

- Carefully lift and remove the rear-facing camera out of the iPhone.

To reassemble your device, follow these instructions in reverse order.