




samsung xcover 3 digitizer replacement

Replacement

today we will show you how to remove the broken digitizer and replace it with an Original samsung digitizer.

Written By: Kevin D

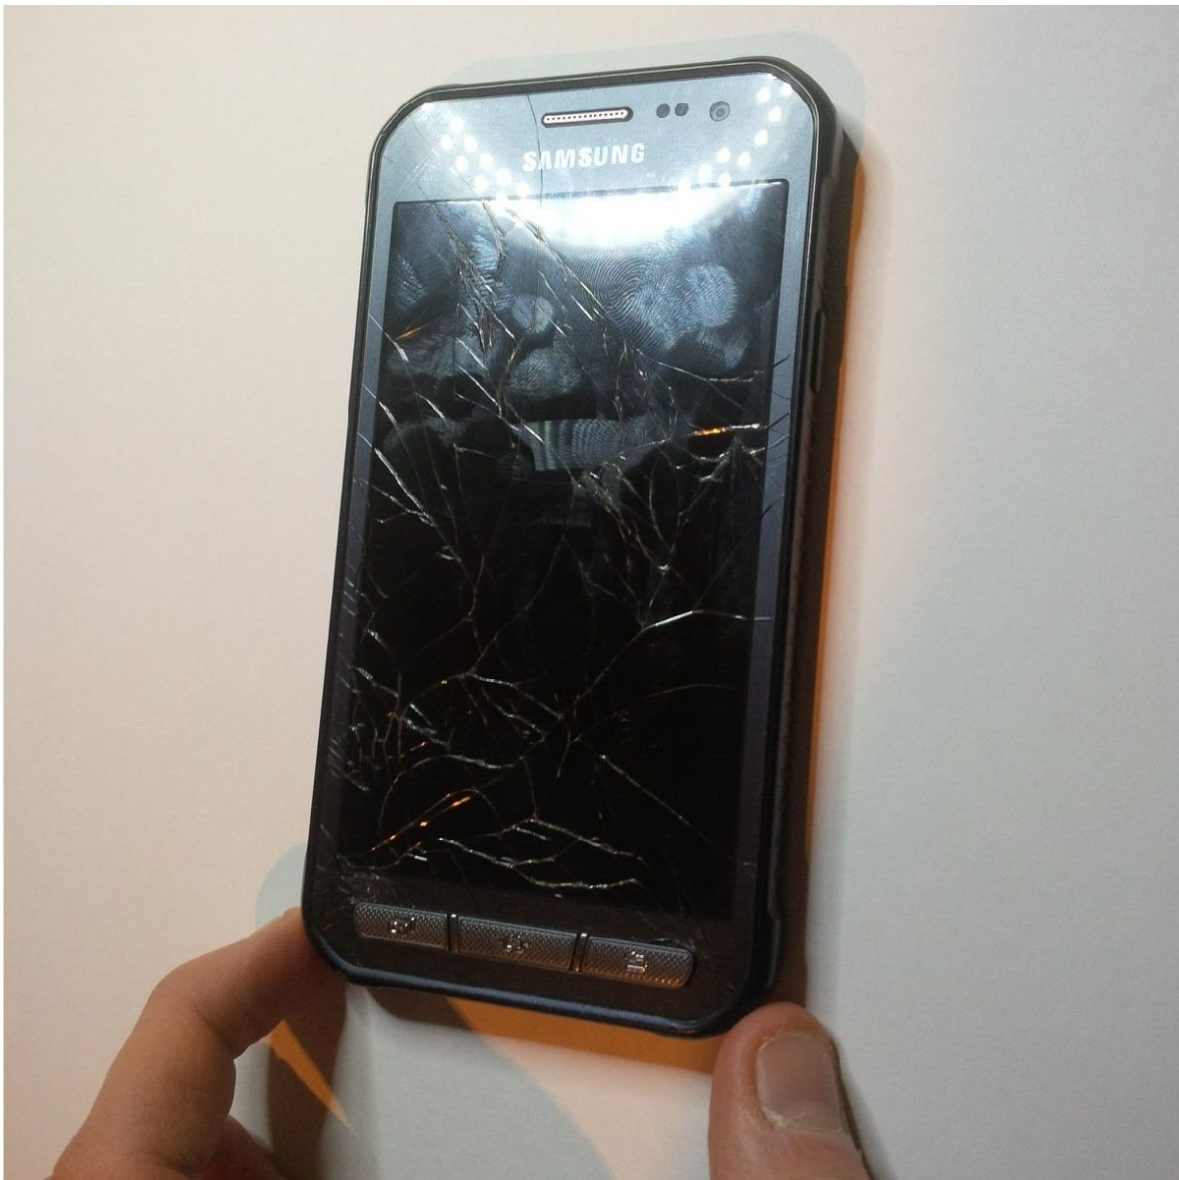



TOOLS:


- 1x philips #000 (1)
- Metal Spudger (1)
- Spudger (1)
- Tweezers (1)

Step 1 — remove battery and backcover



- use a spudger and remove the back cover.
- remove the battery


Step 2

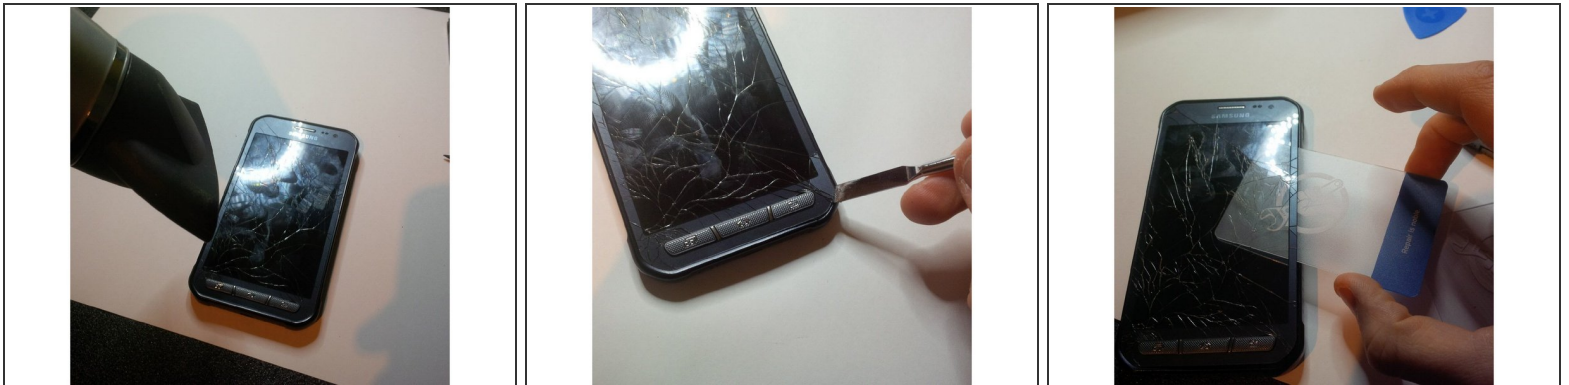

- now you have to heat up the screen using a heat gun or hairdryer.


- ⚠ use the hair dryer or heatinggun not too close to the screen (+- 15 cm from the screen and go up and down.)do it 2 min , stop and see that the adhesive is coming loose.) if not repeat this step.
- use a spudger and "peel" or "slide" the spudger under the digitizer, watch out for the lcd screen). Once you're under the digitizer use credit card or plastic cards to slide between the adhesive and the digitizer. if the adhesive is still too hard , heat again.
- The guys of smartfastfix (youtube) link : <https://www.youtube.com/watch?v=QLNTUO-f...> did a well job on this.

Step 3

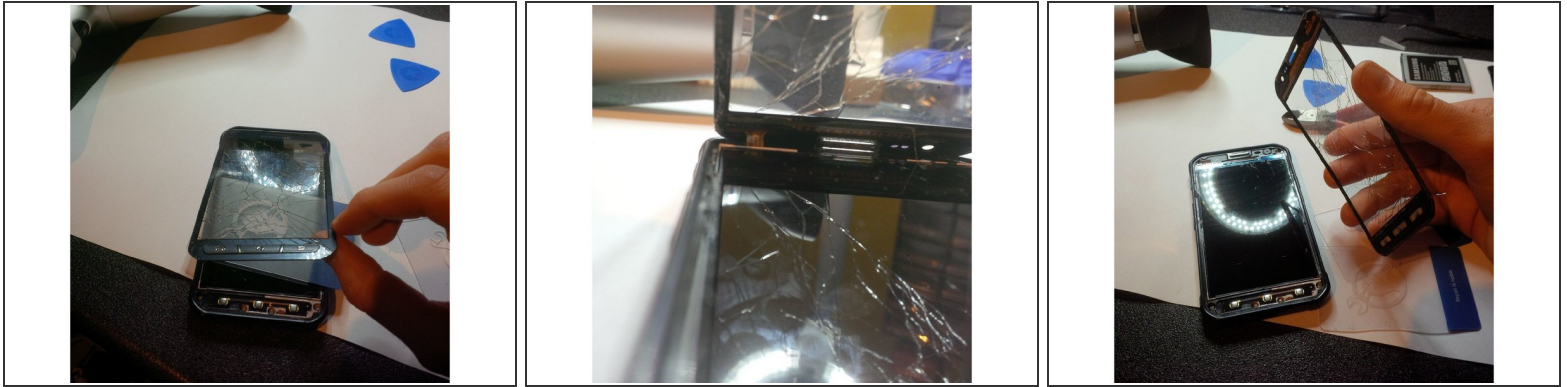

- removing the digitizer.
- when you put the digitizer in a 90 degrees position , you'll see a flex cable. You can cut it with pliers.
- the digitizer is loose.



Step 4 — heating the lcd. step 1

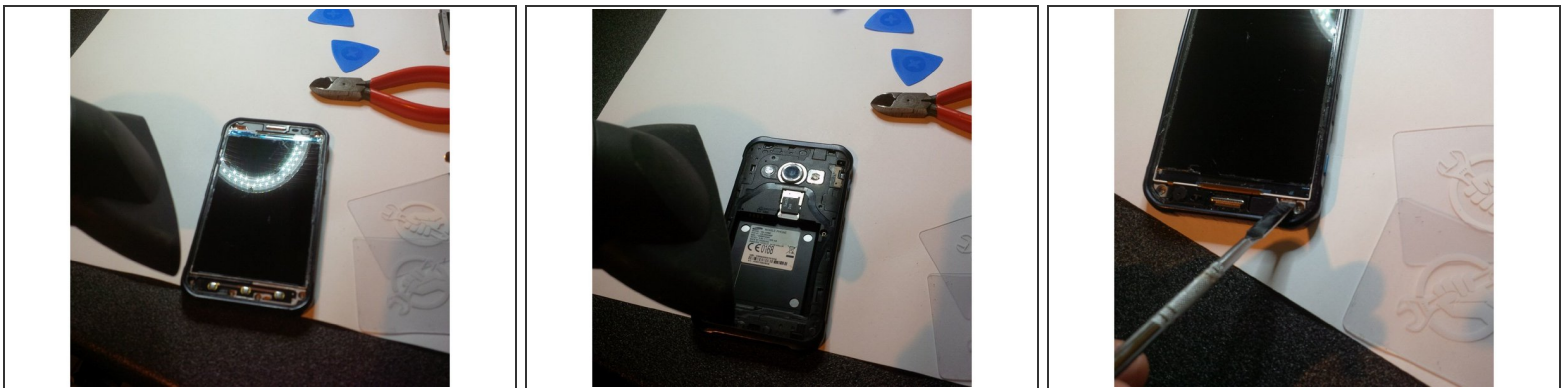

- again heat the Phone to loose the adhesive under the lcd screen.
- heat the Phone also at the back.



⚠ again don't heat to much...

Step 5 — heating the lcd and removing it step 2

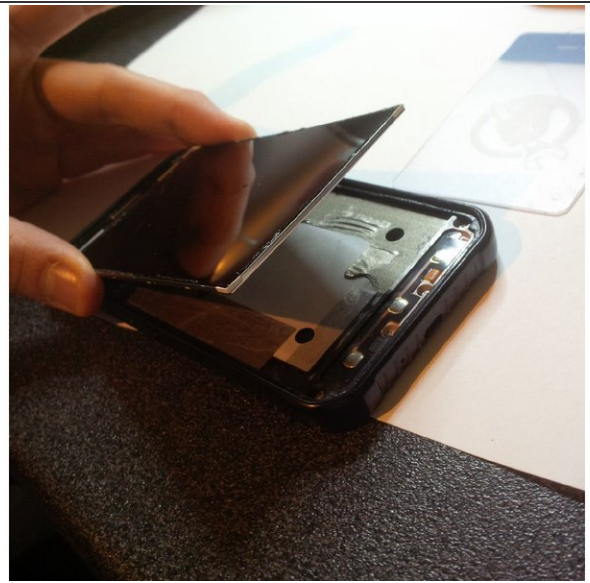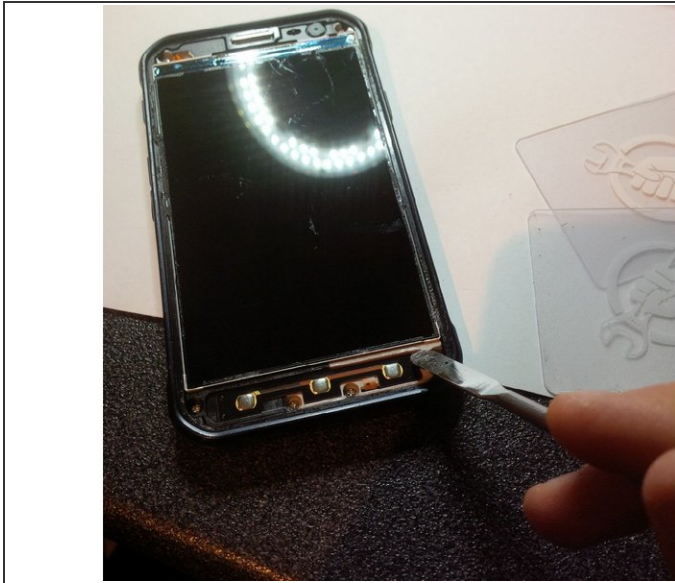


- use a spudger to go under the screen but do this very very gently. Take your time.

Step 6

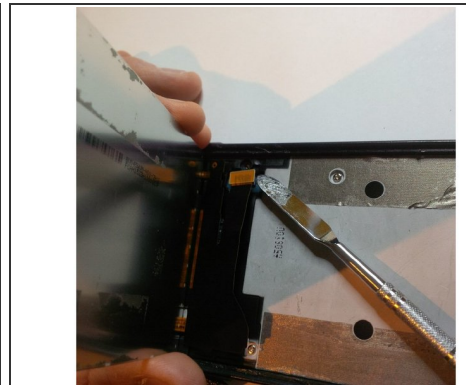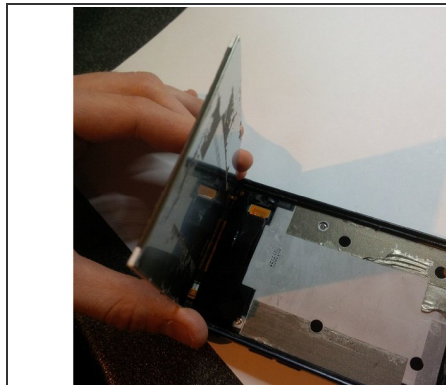


- put the lcd in a 90 degrees position. You'll see in picture 1 there is a plastic lid and a tiny screw. remove the screw and the plastic lid.
- under the lid there is a flex cable. use a spudger to remove the cable.

Step 7

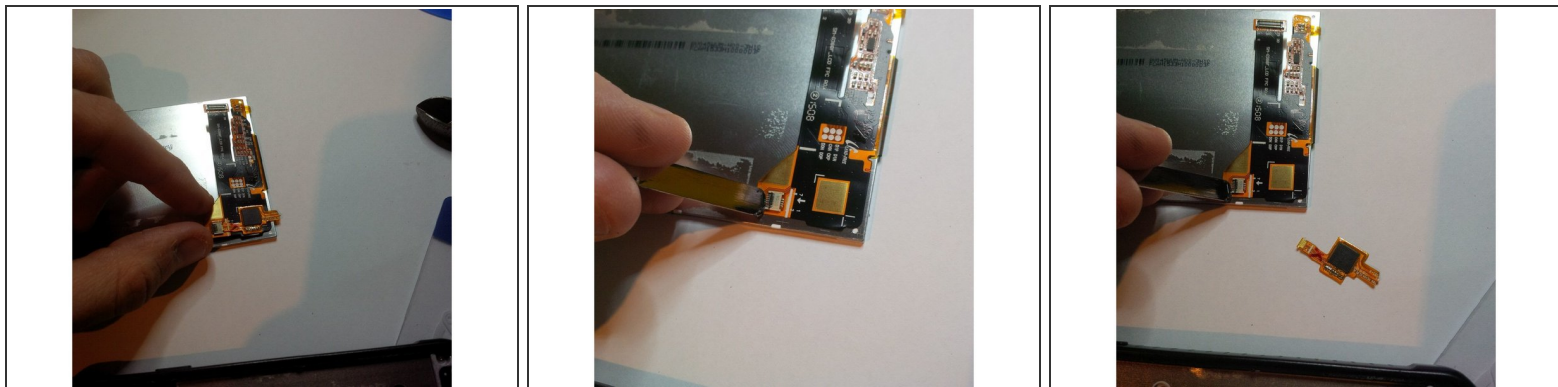


- a few steps ago you had to cut the cable from the digitizer. now you see that piece is still on the board at the lcd screen. use a spudger to open the connector's lid and remove the rest of the cable.

Step 8

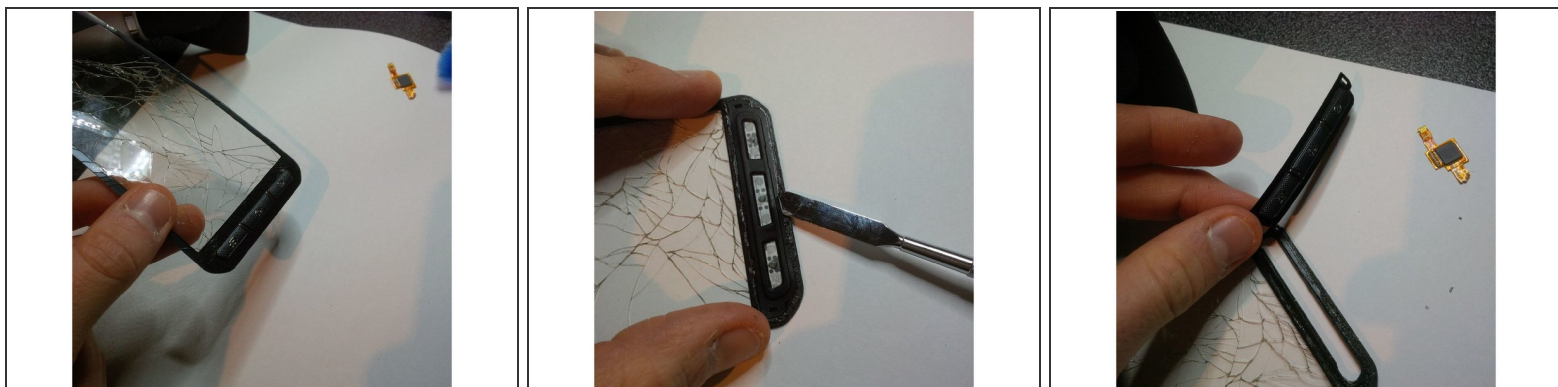

- take the old broken digitizer and remove the plastic/rubber buttons., there is adhesive so you have to use the spudger to peel it off..

Step 9

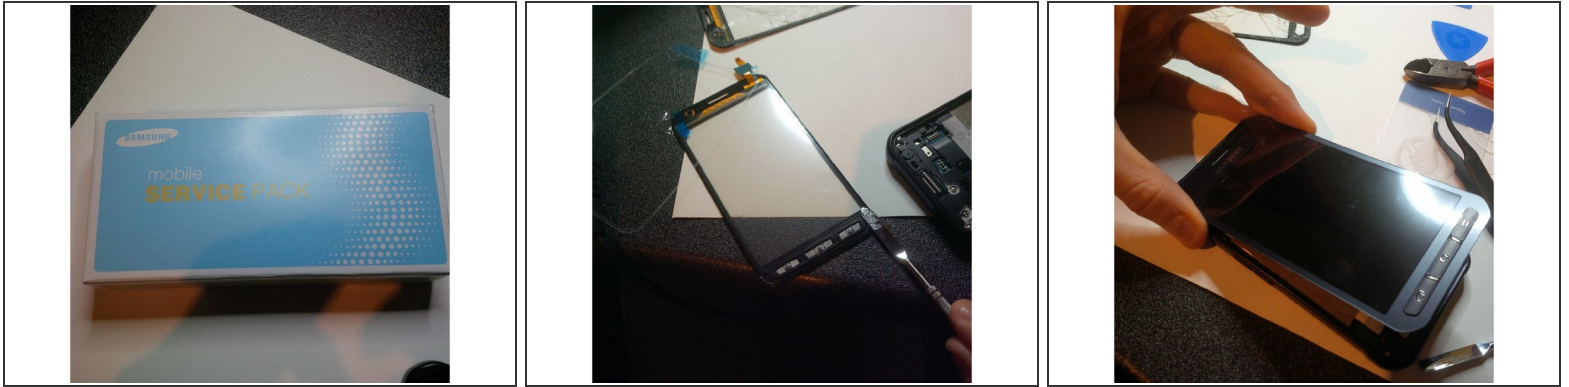

- use the buttons to put it in the new digitizer.
- connect the flex cable to the board of the lcd screen. (i forgot to take a picture of this , my apologies)
- connect the flex cable again to the Phone (where the plastic lid and screw was..)
- put the digitizer again over the lcd screen. see that it is in the correct place.
- these are the steps to follow. sometimes it is hard to see things on the pictures so again there is a good youtube movie from the guys from smartfastfix... see link in step 2 or 3 .

To reassemble your device, follow these instructions in reverse order.