43 TELEPRINTER

PARTS

1. GENERAL

1.01   Information on maintenance spare parts is provided in this section for the 43 Basic KSR and RO Teleprinter, 8-Level, and 43 Teleprinter 5- and 8-level Buffered Stations.

1.02   This section is reissued to change the maintenance spare stocking ratios, update the maintenance spare information and to provide 43 Teleprinter 5- and 8-level Buffered Station information.

1.03   This section is provided to identify the Teletype Corporation or Western Electric Company part number and location of recommended spares that should be available and may be required to correct a trouble. It also provides other parts which may be used to repair a major component or terminal without returning it to the WECO service center.

1.04   Part numbers are listed in the index in numerical order and indicate the page on which the parts appear. Asterisked numbers, stocked as "List 1", indicate a maintenance spare stocking ratio of one spare for each 50 stations in a maintenance area. Part numbers with two asterisks, stocked as "List 2", indicate that one spare should be available for each 200 stations in a maintenance area. Before ordering, verify that a particular spare is applicable to the type of terminal in service.

1.05   When ordering replaceable components, unless otherwise specified, prefix each part number with the letters "TP" (ie, TP410205).
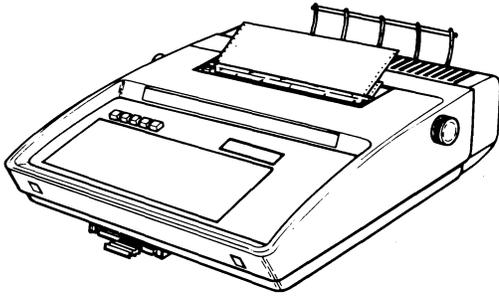
1.06   Troubleshooting information for these parts are provided in:

Section 574-500-300,
Section 574-500-301,
Section 574-500-302,
Section 574-500-303,
Section 574-500-304.

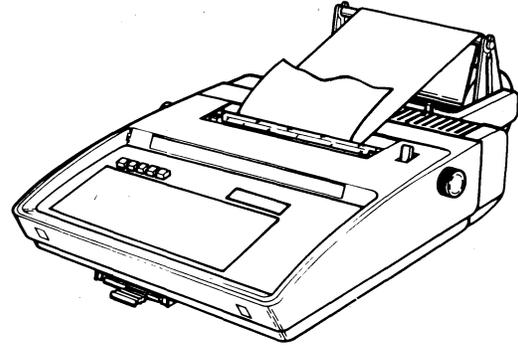1.07   Disassembly/reassembly information for these parts are provided in:

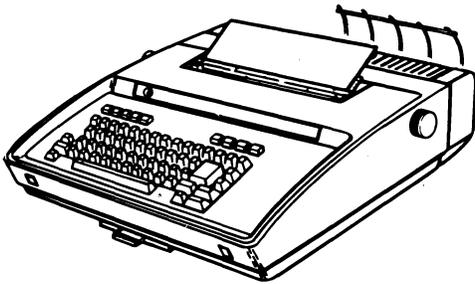Section 574-500-720.

2. PARTS
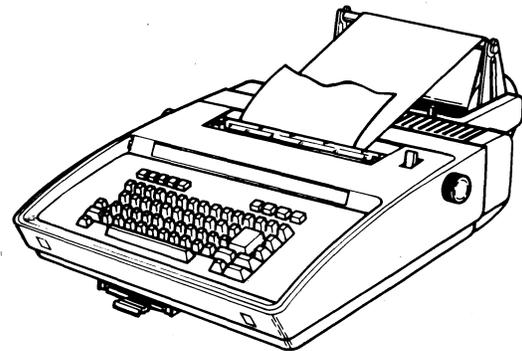

43 RO — Sprocket (Pin) Feed

4310AAA
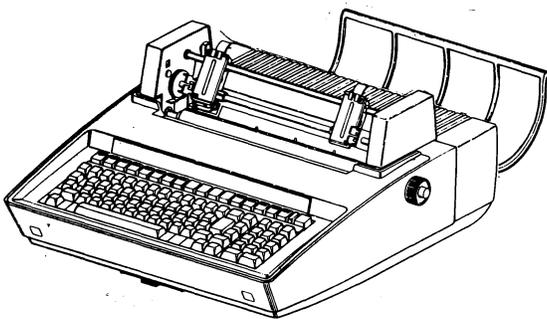

43 RO — Friction Feed

4310AAE

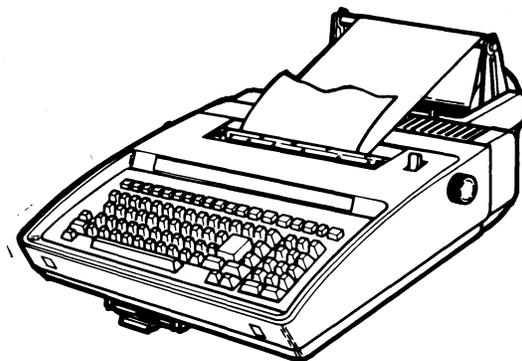43 KSR — Sprocket (Pin) Feed

4320AAA

43 KSR — Friction Feed

4320AAE

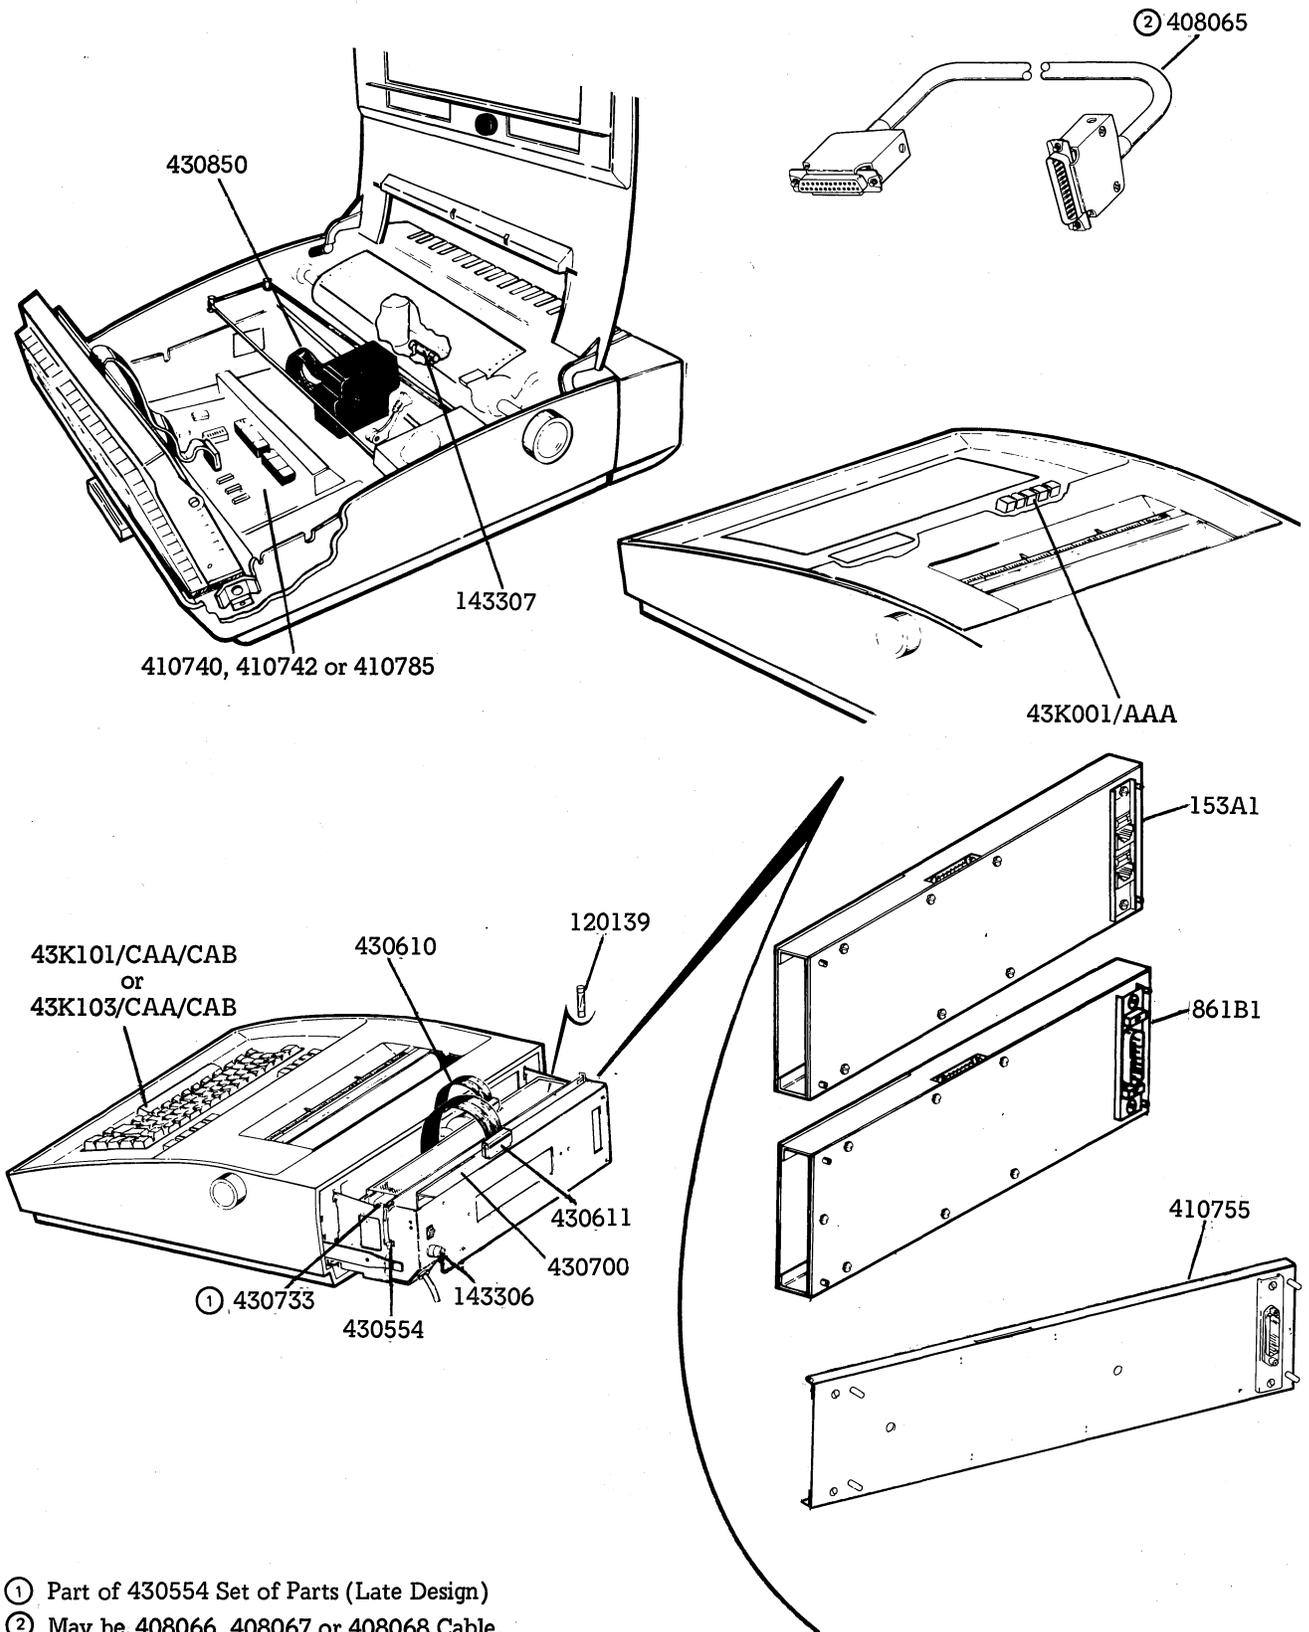43 Buffered Terminal — Variable Tractor Feed

4340BZJ

43 Buffered Terminal — Friction Feed

4240BZD or 4340BZD

Basic KSR and RO Teleprinters

② 408065

430850

143307

410740, 410742 or 410785

43K001/AAA

120139

43K101/CAA/CAB
or
43K103/CAA/CAB

430610

430611

430700

153A1

861B1

410755

① 430733

430554

143306
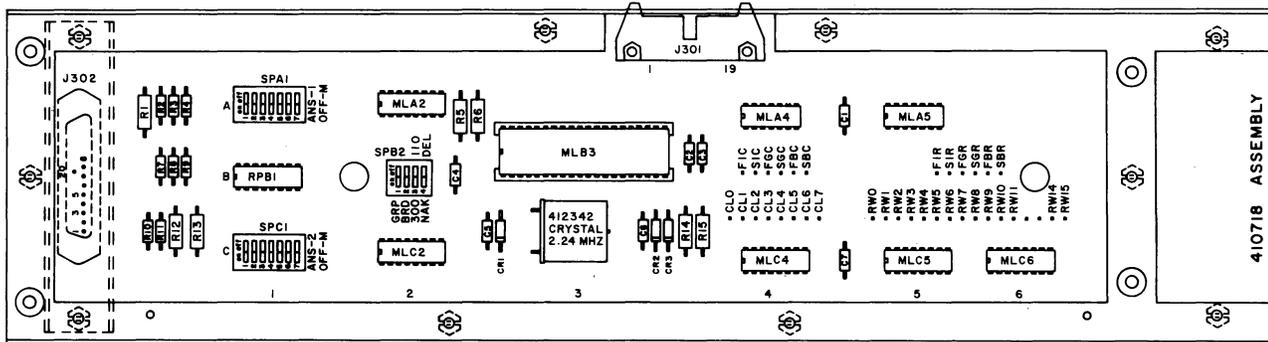
① Part of 430554 Set of Parts (Late Design)
② May be 408066, 408067 or 408068 Cable.
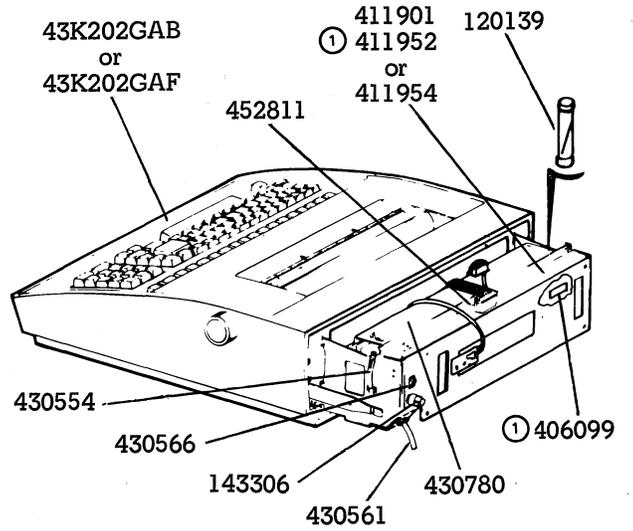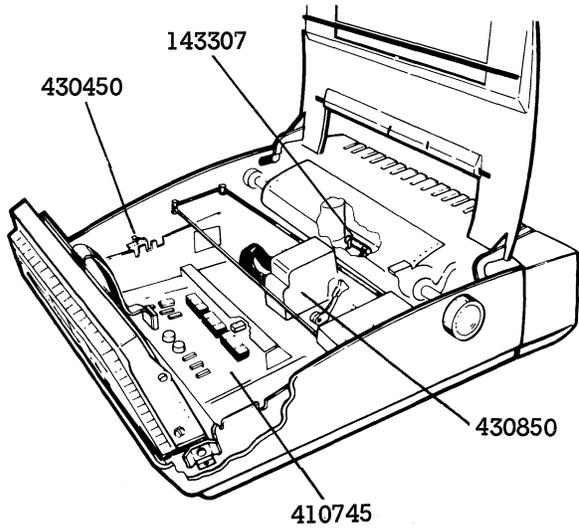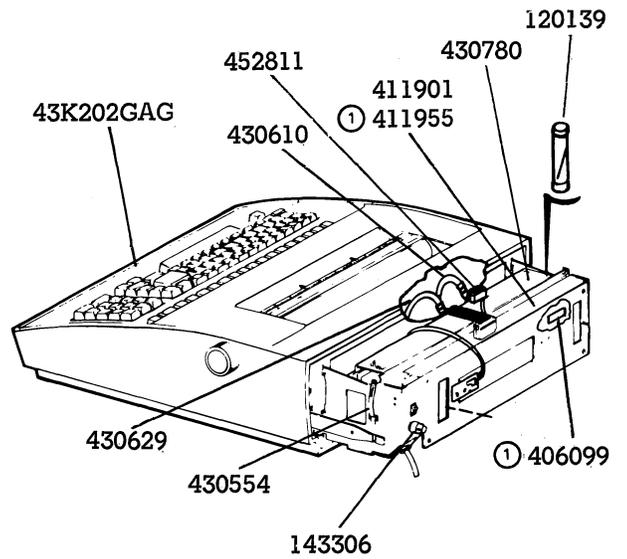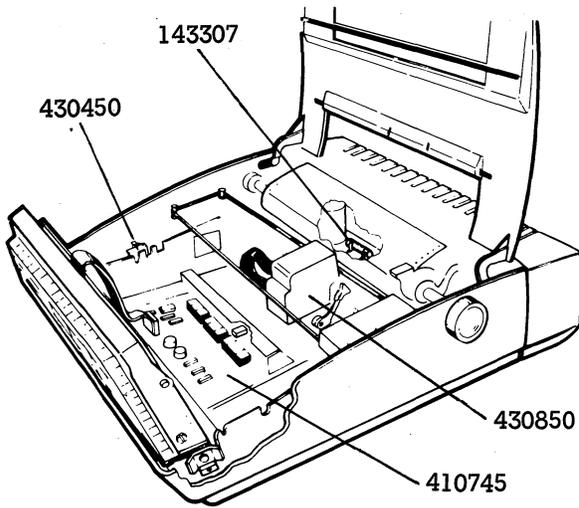
430900 Answer-Back Modification Kit
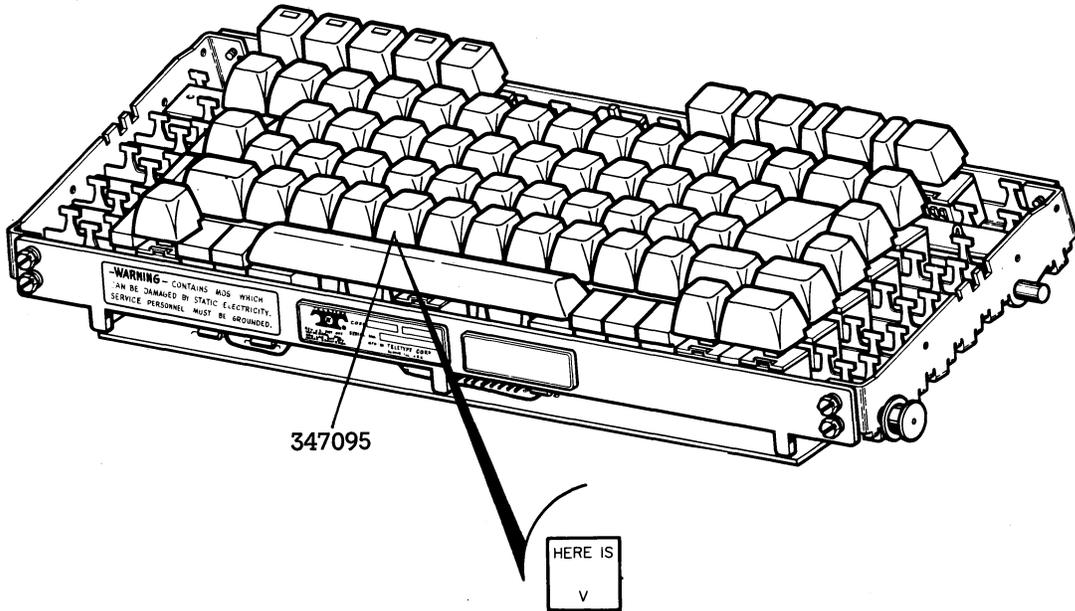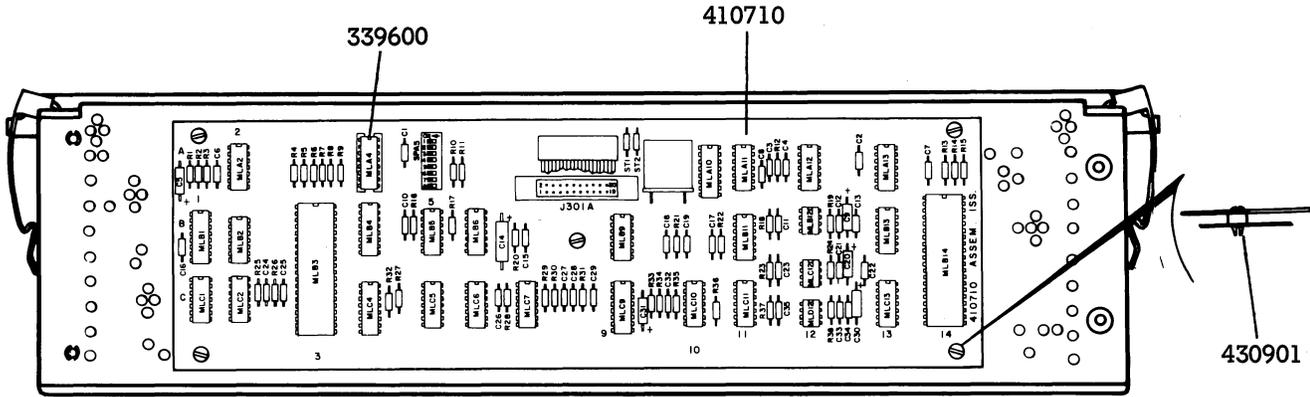
410718 Selective Calling Unit Circuit Card

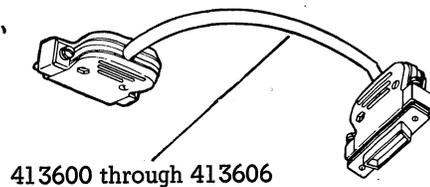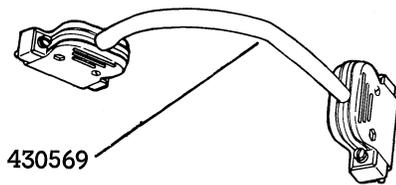**43 Teleprinter — 8-Level Buffered**
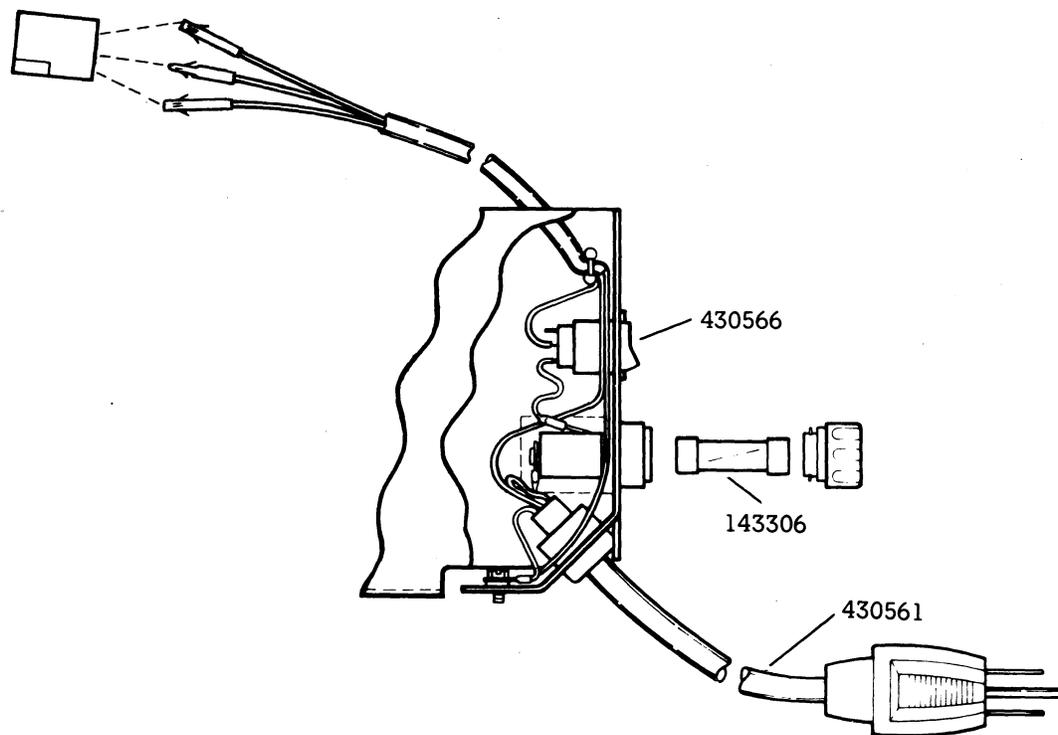

43 Buffered Teleprinter — 5-Level

① Part of 43FG110/BA/01, 43FG210/AA/01
or 43FG210/BA/01

430550 Rear Frame Assembly

430566

143306

430561

3. NUMERICAL INDEX

3.01 Parts and unit codes listed without asterisks are not maintenance spares but may be ordered as needed for local repairs of major components or terminals.

120139*(5)	Fuse, 1 Amp 3, 5	410745*	Card, Logic 5	430554 (2)	Clip 3, 5
143306*(5)	Fuse, SL-BL, 1 Amp 3, 5, 6	410755	Outerface Assembly 3	430561	Cord, Power 5, 6
		410785*	Card, Logic 3	430566	Switch, Rocker 5, 6
143307*(5)	Fuse, 0.6 Amp 3, 5	411901*	Card Assembly 5	430569*	Cable Assembly, 2 Ft 5
339600*(2)	Prom (Uncoded) 4	413600**	Cable Assembly, 7 Ft 5		
347095	Keytop (HERE IS) 4			430610	Cable Assembly Power Supply 3, 5
406099	Battery, 3.6 V Nicad 5	413601**	Cable Assembly, 12 Ft 5	430611	Cable Assembly 3
408065**	Cable Assembly, 7 Ft 3	413602**	Cable Assembly, 25 Ft 5	430629	Cable Assembly 5
		413603**	Cable Assembly, 50 Ft 5	430700*	Power Supply Assembly 5
408066**	Cable Assembly, 12 Ft 3			430733	Clip 3
408067**	Cable Assembly, 25 Ft 3	413604**	Cable Assembly, 7 Ft 5	430780*	Power Supply Assembly 5
408068**	Cable Assembly, 50 Ft 3	413605**	Cable Assembly, 7 Ft 5	430850*	Head Assembly, Print 3, 5
410710*	Circuit Card, Answer-Back 4	413606**	Cable Assembly, 7 Ft 5	430900	Answer-Back Mod Kit 4
410718	Card, Circuit 4	430450	Switch, Interlock 5	430901(15)	Fastener, Stud 4
410740*	Card, Logic 3	430550	Frame Assembly, Rear 6	452811	Cable 5
410742*	Card, Logic 3				

4310 AAA**	Terminal, RO Pin Feed, 2	43K001/AAA*	Keyboard (Unit Code) 2
4310 AAE**	Terminal, RO Friction Feed, 2	43K101/CAA*	Keyboard (Unit Code) 2
4320 AAA**	Terminal, KSR Pin Feed, 2	43K101/CAB*	Keyboard (Unit Code) 2
4320 AAE**	Terminal KSR Friction Feed, 2	43K103/CAA*	Keyboard (Unit Code) 2
4340 BZD**	Terminal, BSC Friction Feed, 2	43K103/CAB*	Keyboard (Unit Code) 2
4340 BZD**	Terminal, BSR Friction Feed, 2	43K202/GAB*	Keyboard (Unit Code) 2
4340 BZJ**	Terminal, BSR Tractor Feed, 2	43K202/GAF*	Keyboard (Unit Code) 2
		43K202/GAG*	Keyboard (Unit Code) 2

43FG110/BA/01*	Feature Group 5
43FG210/AA/01*	Feature Group 5
43FG210/BA/01*	Feature Group 5

Modification Kits

430900	Modification Kit, Answer-back
430910	Modification Kit, Selective Calling

*A maintenance spare stocking ratio of one spare for each 50 terminals in a maintenance area should be available.
**One spare should be available for each 200 terminals in a maintenance area.