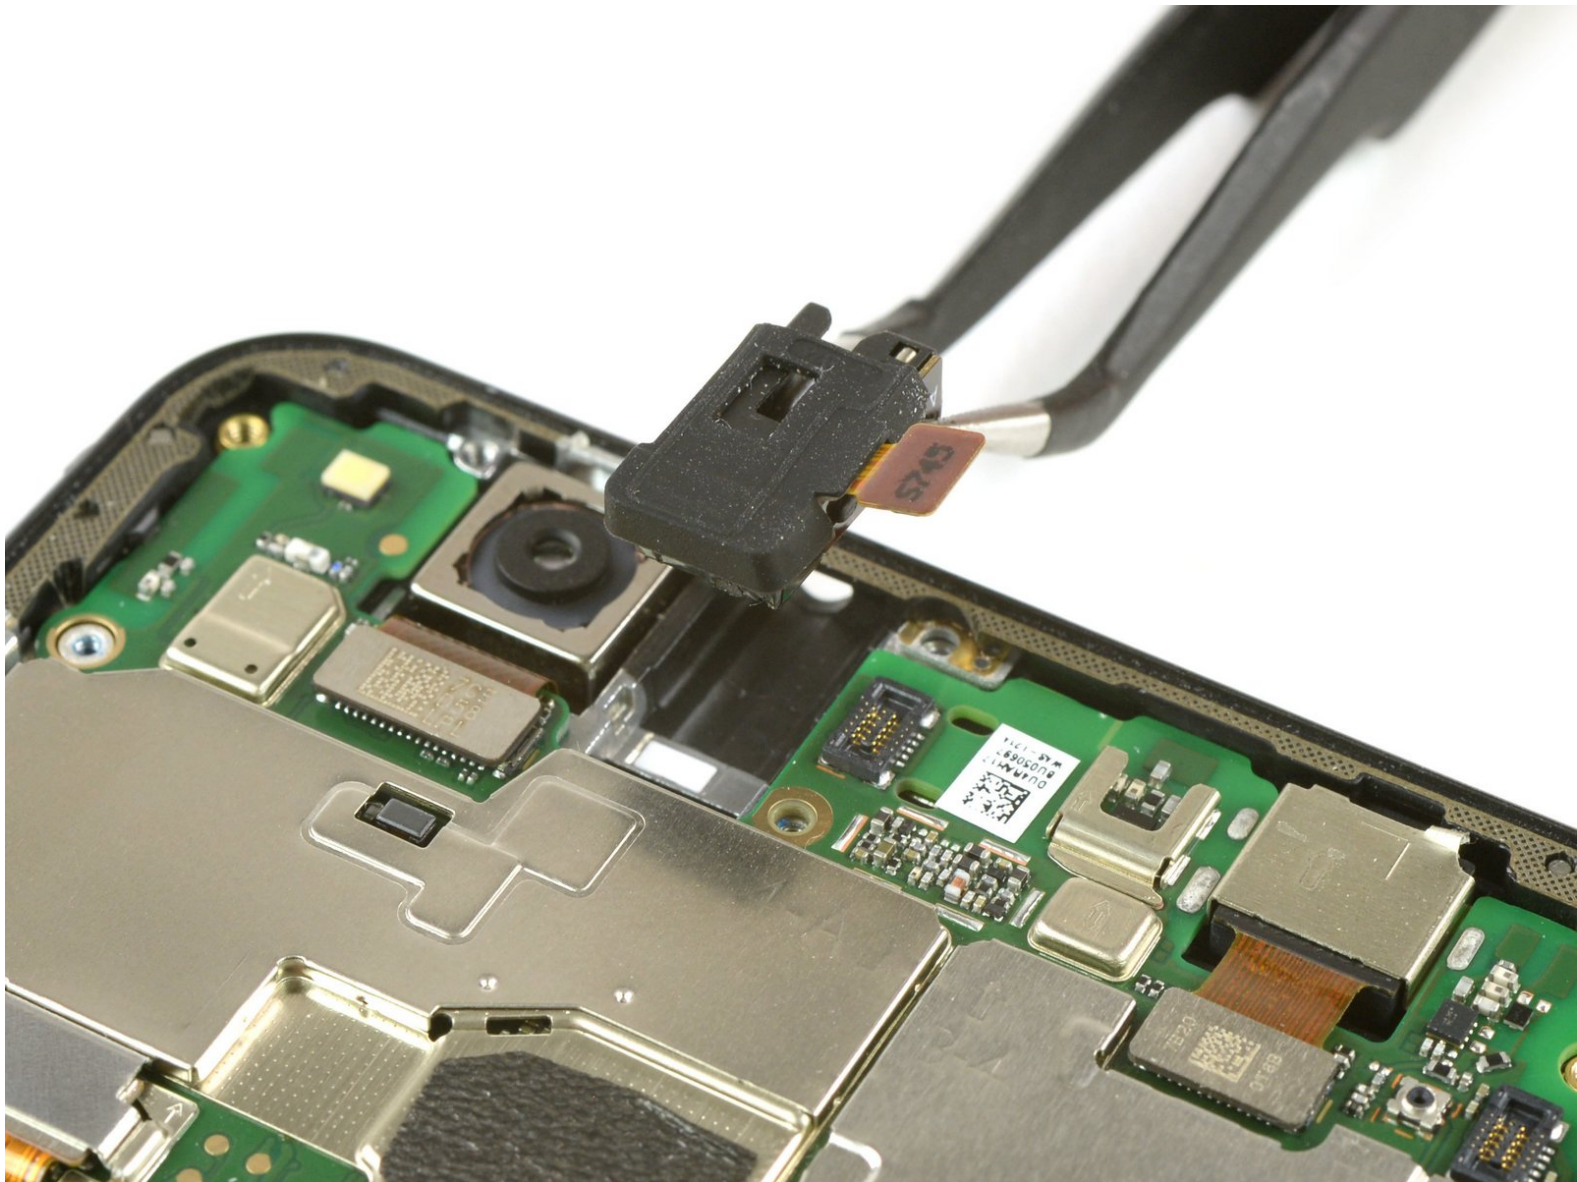# Huawei P10 Lite Headphone Jack Replacement

Replace the headphone jack in your Huawei P10 Lite smartphone.

Written By: Dominik Schnabelrauch

# INTRODUCTION

Use this guide to replace the headphone jack in your Huawei P10 Lite smartphone. When reassembling your phone apply new adhesive where it is necessary.

## 🔧 TOOLS:

- Phillips #000 Screwdriver (1)
- Spudger (1)
- iFlex Opening Tool (1)
- Tweezers (1)

This document was generated on 2019-09-23 10:57:25 AM (MST).
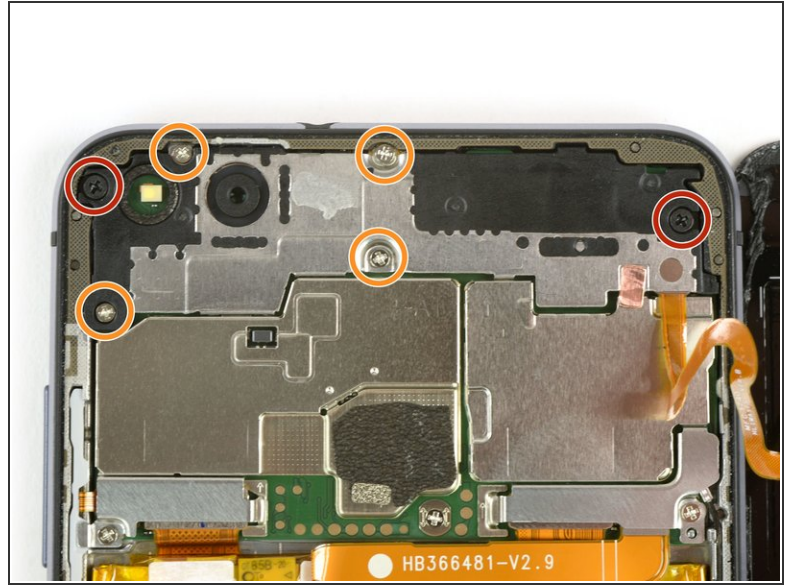
## Step 1 — Back cover





- Insert the tip of an opening pick between the back cover and the mid frame and slide it around the phone, to cut the adhesive.

  - Using a suction handle to lift the back cover may help to get an initial gap for the opening pick to put in.

  (i) If the adhesive is hard to cut, [use an iOpener](#) to loosen it.

## Step 2





- After you cut the adhesive on every edge, twist your opening pick, to separate the rear cover from the phone.

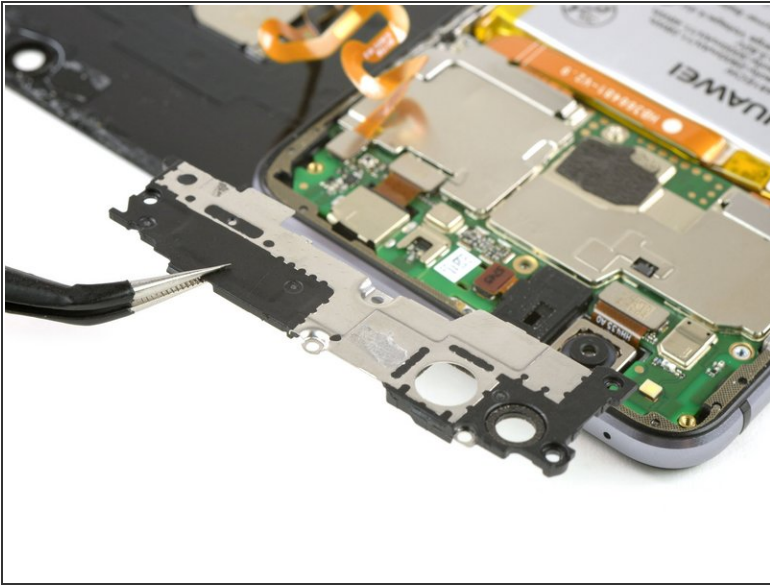- Flip the rear cover over to the right side of the phone.

## Step 3



- Use a pair of tweezers to remove the sticker.

- Remove the two Phillips #00 screws.

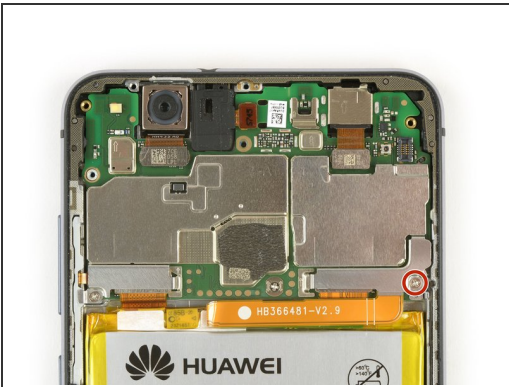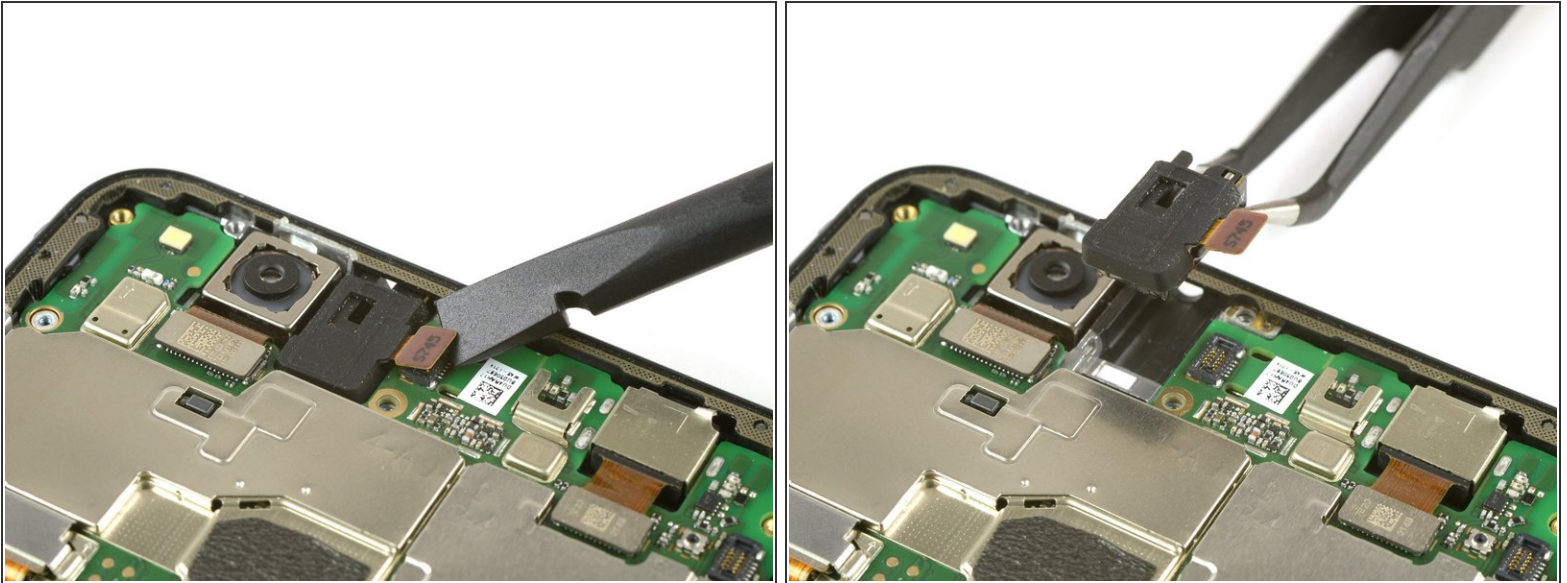- Remove the four 2.5 mm Phillips #00 screws.

## Step 4



- Use tweezers to remove the mainboard shield.

- Use the flat end of a spudger to disconnect the finger print sensor flex cable.
  - (i) When reassembling apply new adhesive where it is necessary.

## Step 5 — Battery Disconnection



- Remove the Phillips screw holding the battery connector plate in place.

- Remove the battery connector plate.

- Use the flat end of a spudger to disconnect the battery flex cable.

## Step 6 — Headphone Jack



- Use the flat end of a spuder to disconnect the headphone jack flex cable.

⚠ Altough the headphone jack is not glued to the mid frame it is a little bit tucked in its bracket. Be careful not to damage it during the removal.

- Remove the headphone jack.

---

To reassemble your device, follow these instructions in reverse order. When reassembling your phone apply new adhesive where it is necessary.