# Toshiba Satellite A305-S6848 Keyboard Replacement

Replace the keyboard to fix any keyboard dysfunctions.

Written By: Joshua E Hong
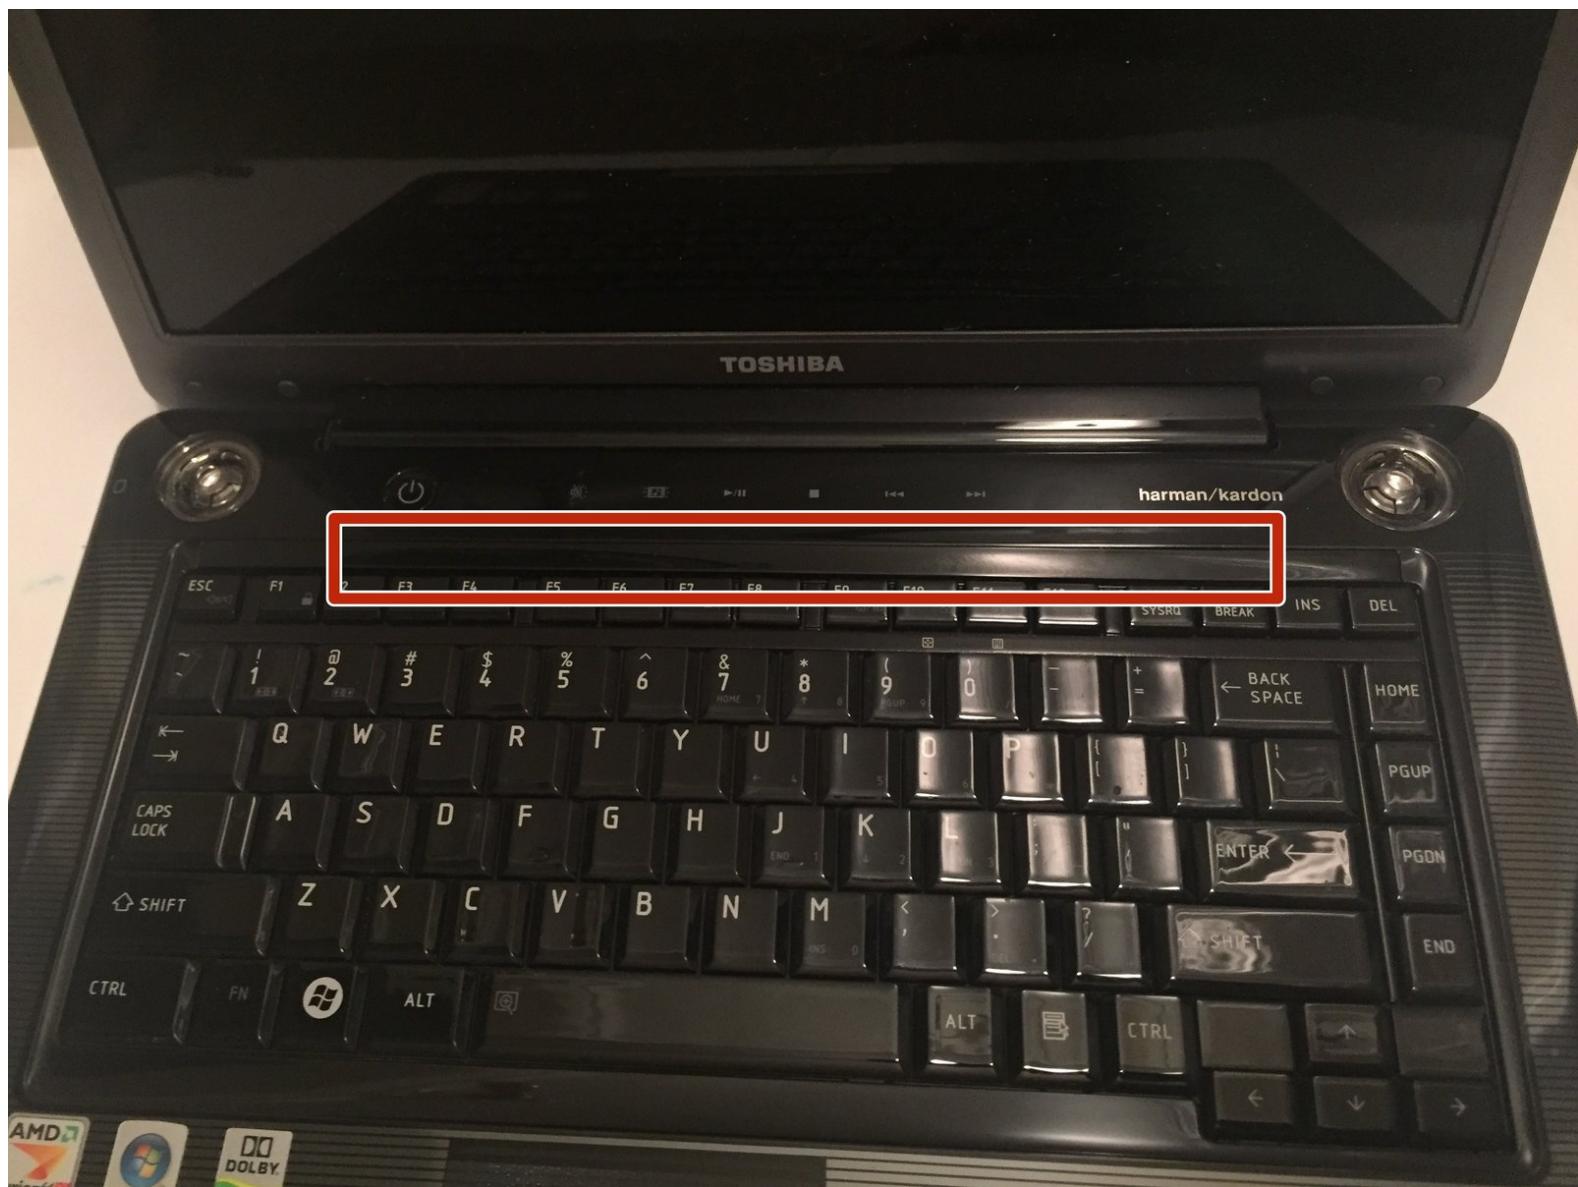
INTRODUCTION

This guide teaches you how to replace the battery in a Toshiba Satellite A305-S6848 laptop.

🔧 TOOLS:

- [Metal Spudger](#) (1)
- [Phillips #0 Screwdriver](#) (1)

This document was generated on 2019-10-11 12:37:03 PM (MST).

Step 1 — Battery
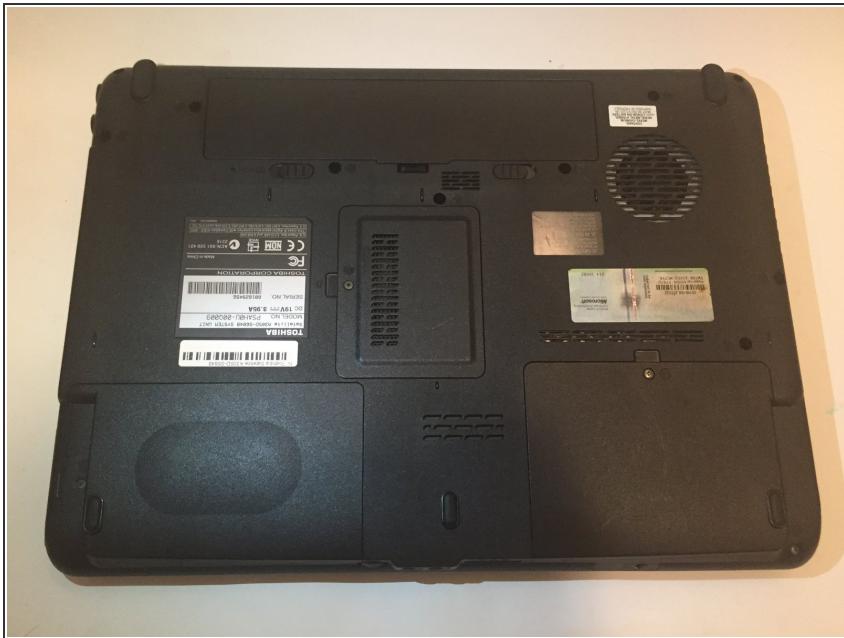
- Close laptop and turn it upside down.

Step 2
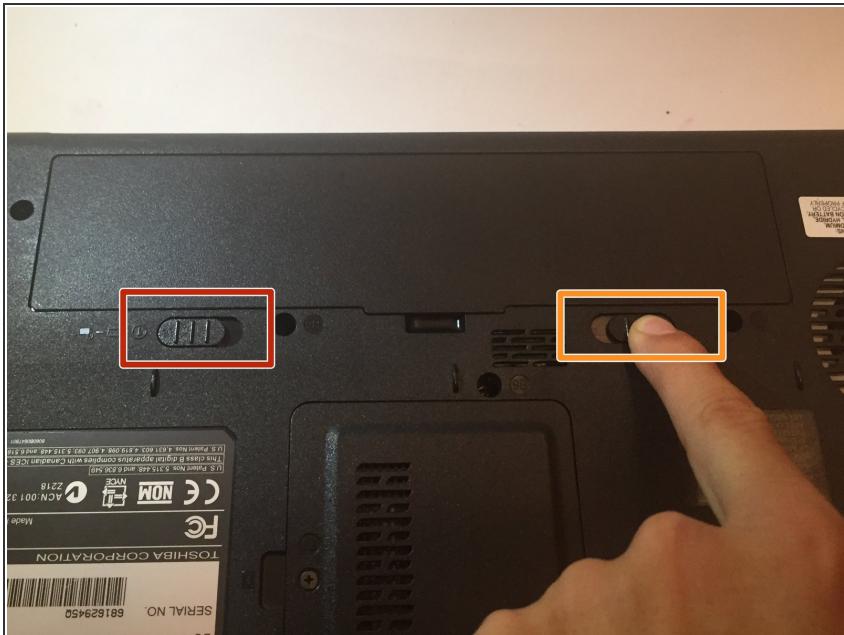
- Move the left locking hatch to the left.

- Hold the right spring latch to the right.

This document was generated on 2019-10-11 12:37:03 PM (MST).

© iFixit — CC BY-NC-SA   www.iFixit.com   Page 3 of 7

Step 3

● Carefully remove the battery from the laptop.

Step 4 — Keyboard
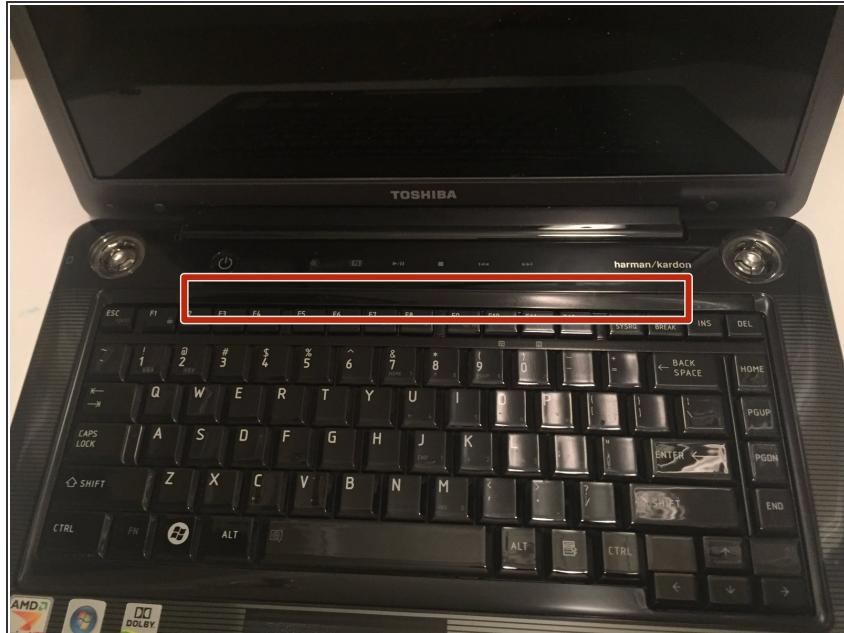
● The keyboard is held in by a locking strip between the screen and the keyboard.

This document was generated on 2019-10-11 12:37:03 PM (MST).

Step 5
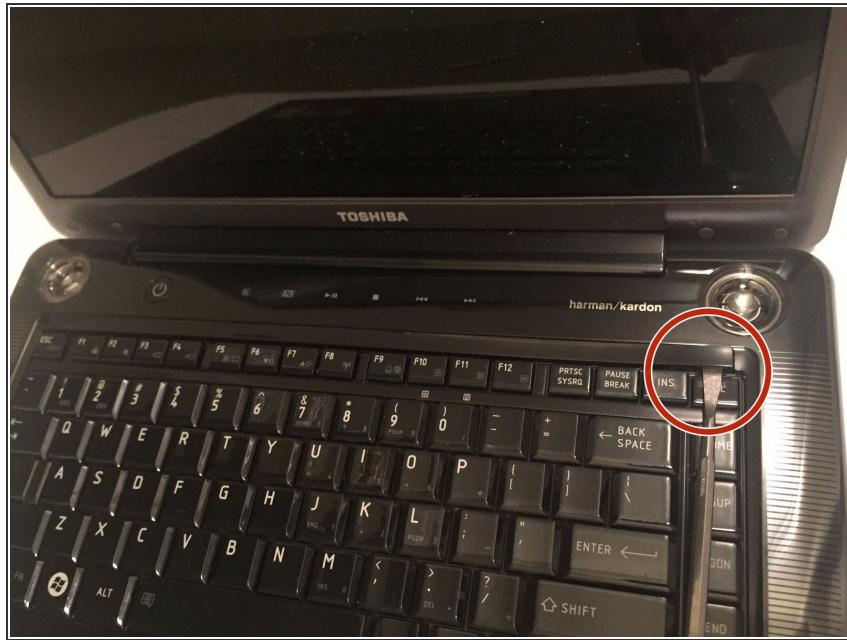
- Use the metal spudger to pry out the right portion of the locking piece just above the DEL key.

Step 6
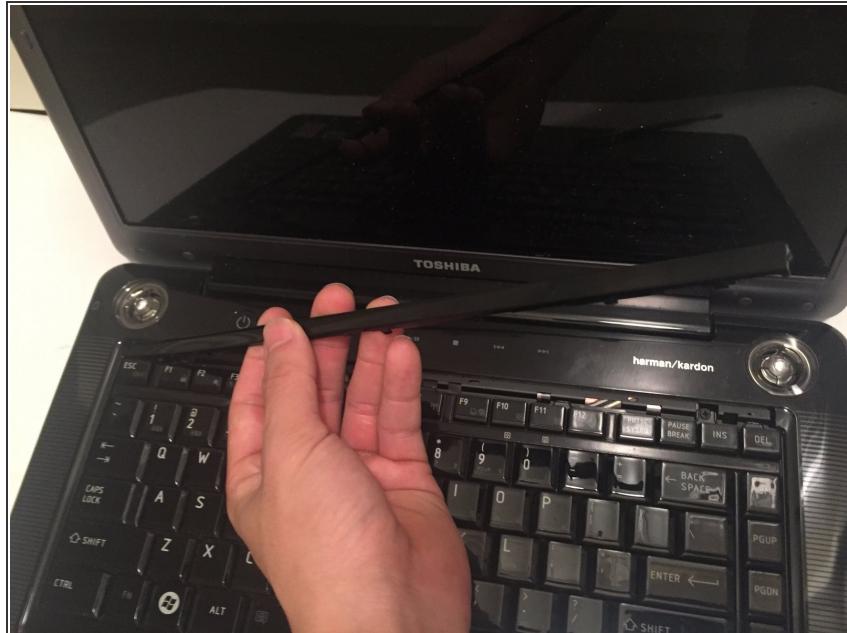
- Use your hand to take out locking strip from the right portion that was pried out.

This document was generated on 2019-10-11 12:37:03 PM (MST).

© iFixit — CC BY-NC-SA

www.iFixit.com

Page 5 of 7

Step 7
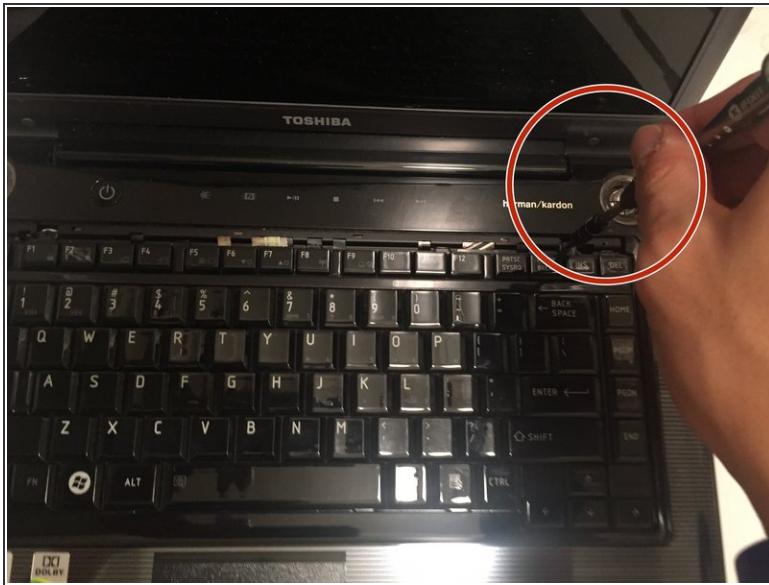
- Use the Phillip's #0 screwdriver to take out the two 5.8 mm Phillip's #0 screws from the top right and left corners of the keyboard.

Step 8
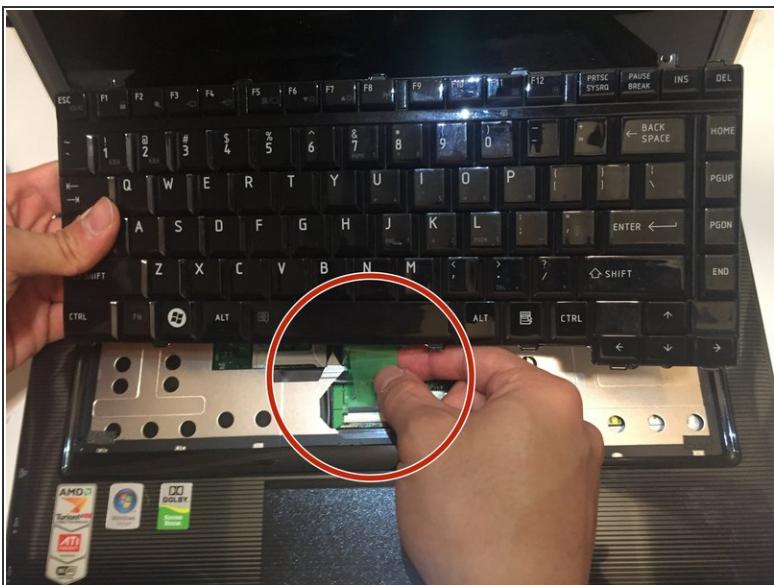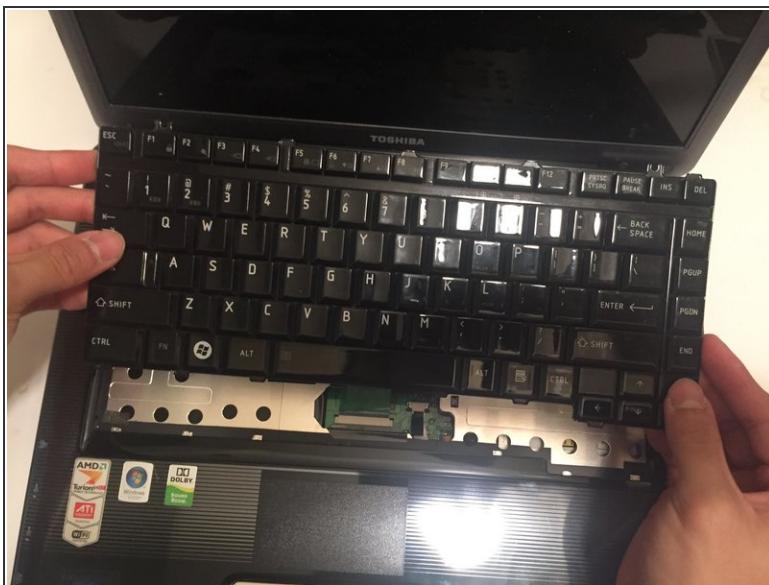
- Lift the keyboard up slightly. Use caution as the keyboard ribbon cable is still attached below the keyboard.

- Disconnect the keyboard by flipping the locking clip upwards.

This document was generated on 2019-10-11 12:37:03 PM (MST).

To reassemble your device, follow these instructions in reverse order.