


URGENT INFORMATION SUPPLEMENT
AUTOMATIC NUMBER ANNOUNCEMENT CIRCUIT
NUMBER VERIFICATION
MULTIFREQUENCY RECEIVER TEST

1. GENERAL

1.1 This UIS is being issued to clarify the test procedure to be followed and to show the proper use of the ITE-4508 connecting cord.

2. INSTRUCTION

- 2.1 Paragraph 5.13 - Add the following to Step 2 Operation: (OFF position).
- 2.2 Paragraph 5.13 - Add the following to Step 3 Operation: (See Sketch A).
- 2.3 Paragraph 5.13 - Change Step 6 Operation to read: On ITE-4508 Oscillator turn the OSC-AMP control clockwise until-
- 2.4 Paragraph 5.13 - Change Step 6 Observation to read: Between 2V and 6V is read on the ITE-4442A voltmeter.
- 2.5 Add Sketch A-

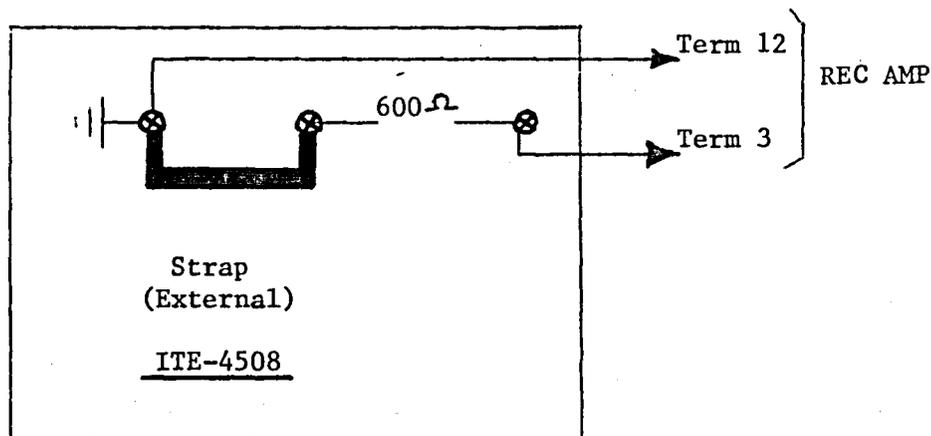

Manager, Crossbar and
Common Systems PECC

NOTICE - NOT FOR USE OR DISCLOSURE OUTSIDE THE
BELL SYSTEM EXCEPT UNDER WRITTEN AGREEMENT