

"DATASPEED"
SENDER CABINET 1A AND RECEIVER CABINET 1B
LUBRICATION

1. GENERAL

1.01 This section contains the specific lubrication procedures for the "DATASPEED" sender cabinet 1A and receiver cabinet 1B. Unless otherwise specified herein, the general routines for maintaining this apparatus, the tools and materials to be used, and their methods of application are the same as those shown in the sections giving general maintenance information for teletypewriter apparatus.

1.02 The following are the lubrication symbols and their meaning as used in this section:

| <u>SYMBOL</u> | <u>MEANING</u> |
|---------------|---------------------|
| O | One drop of oil |
| O3 | Three drops of oil |
| G | Thin coat of grease |

Note: Lubriplate is applied to the cabinet slides in the initial lubrication at the factory. In this section the symbol G indicates that the cabinet slides should be lubricated in the field as covered in the general lubrication section.

1.03 The cabinets should be lubricated before being placed in service, as specified in the section entitled Preparation of Teletypewriter Apparatus for Installation. After a few weeks in service, it should be relubricated to make certain that all specified points have lubricant. Therefore, because of varying conditions at each station, the apparatus should be lubricated as often as specified by the local instructions. However, it is suggested that under normal operating conditions, the cabinets should be lubricated at the intervals specified for the apparatus contained in them.

* This section replaces Section 592-210-707, Issue 1.


SECTION 592-800-701

2. LUBRICATION DETAILS

A. Sender Cabinet 1A and Receiver Cabinet 1B

2.01 Cabinets

CABINET

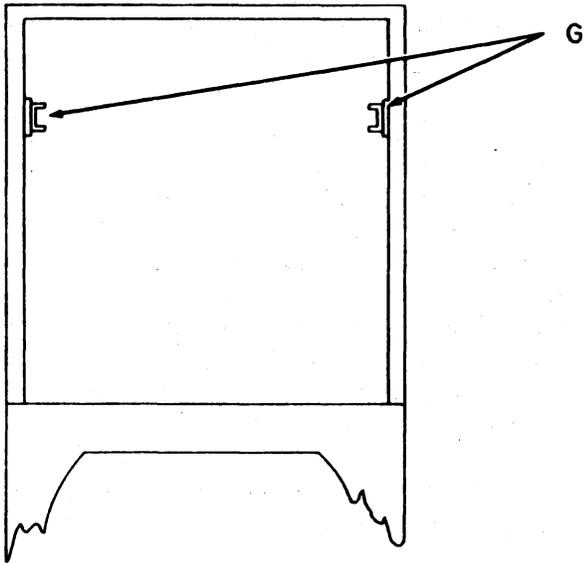


SLIDES


CABINET

B. Sender Cabinet 1A

2.02 Winder Mechanism

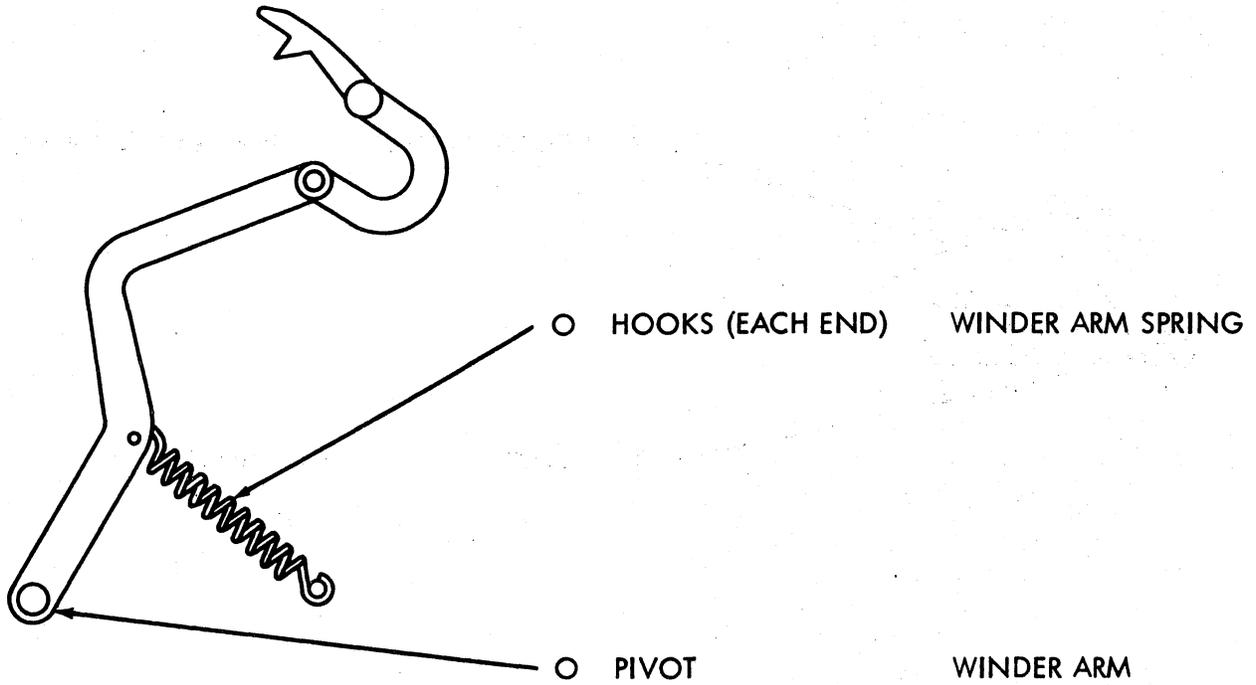

2.03 Unwinder Mechanism

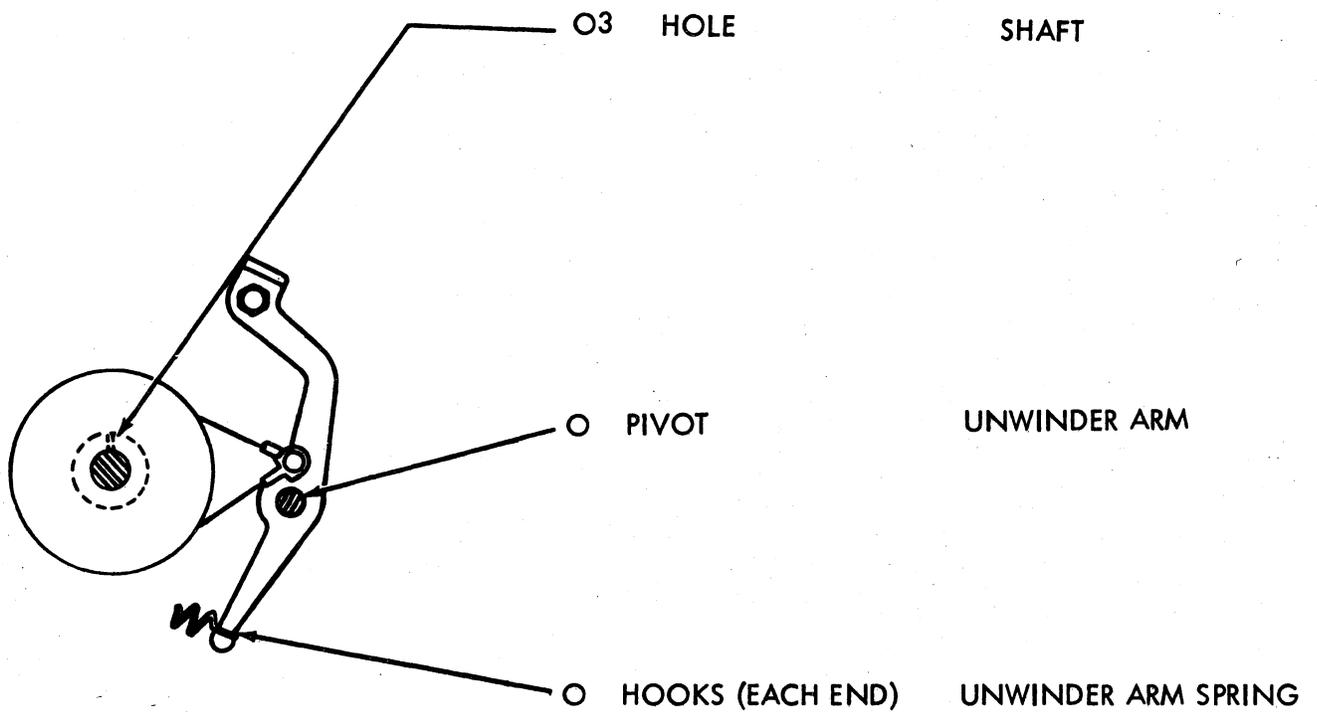

SECTION 592-800-701

C. Receiver Cabinet 1B

2.04 Winder Mechanism

