




# Oregon Scientific Meep! 4.0 Battery Replacement

Follow this guide to replace the battery of your Oregon Scientific Meep! 4.0 tablet.

Written By: Jess Forte

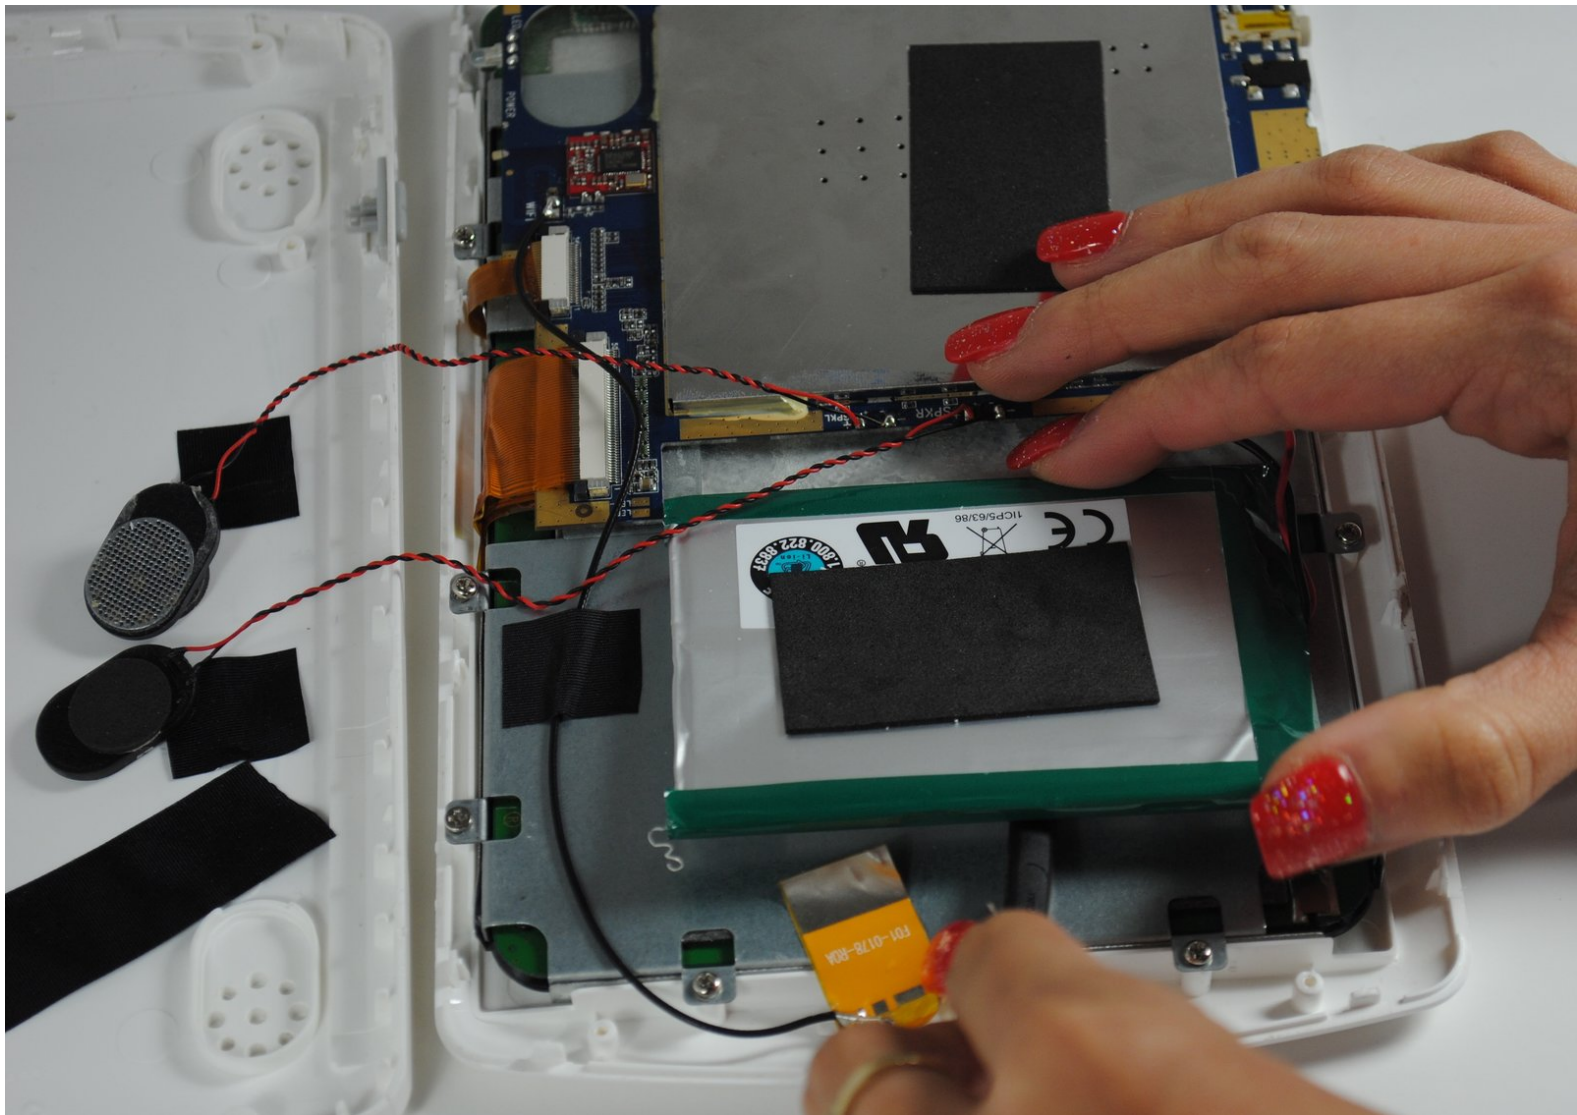

---

## INTRODUCTION

Using this guide, you will be able to open your Oregon Scientific Meep! and remove your faulty battery, which can be replaced with a new one.


---



### TOOLS:

- [Screwdriver](#) (1)
  - [Soldering Iron](#) (1)
  - [Spudger](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Oregon Scientific Meep! 4.0 Disassembly

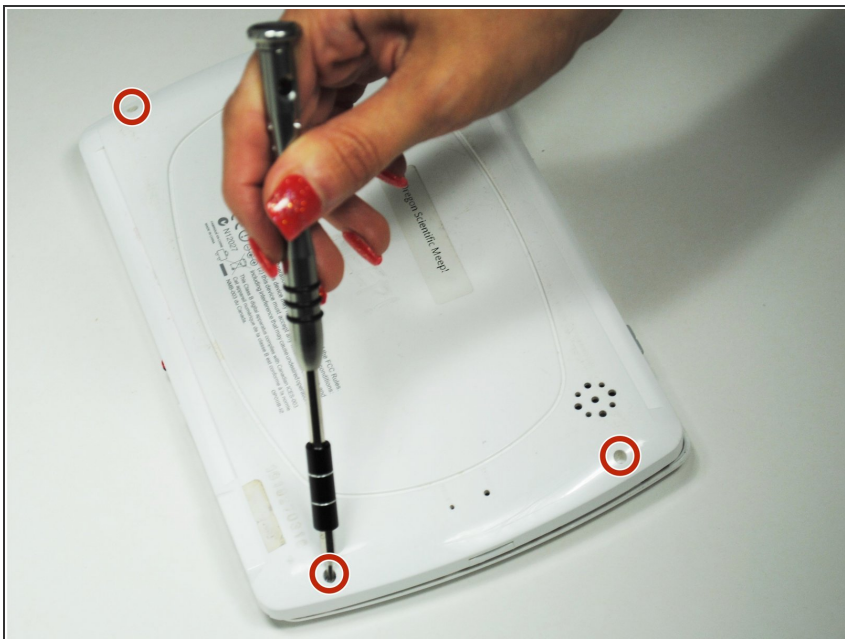


- Use a screwdriver to remove the four 7.0 mm Philips #00 screws from the back of the device.

## Step 2




- Use a plastic opening tool to detach the clips on the inside of the device.

## Step 3 — Battery

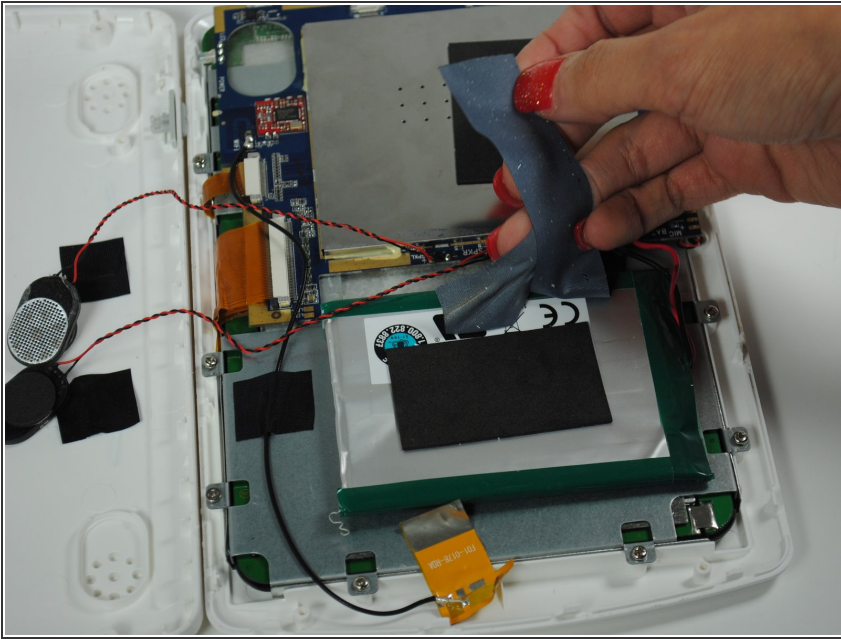

- Remove the black tape holding the battery in place.


## Step 4

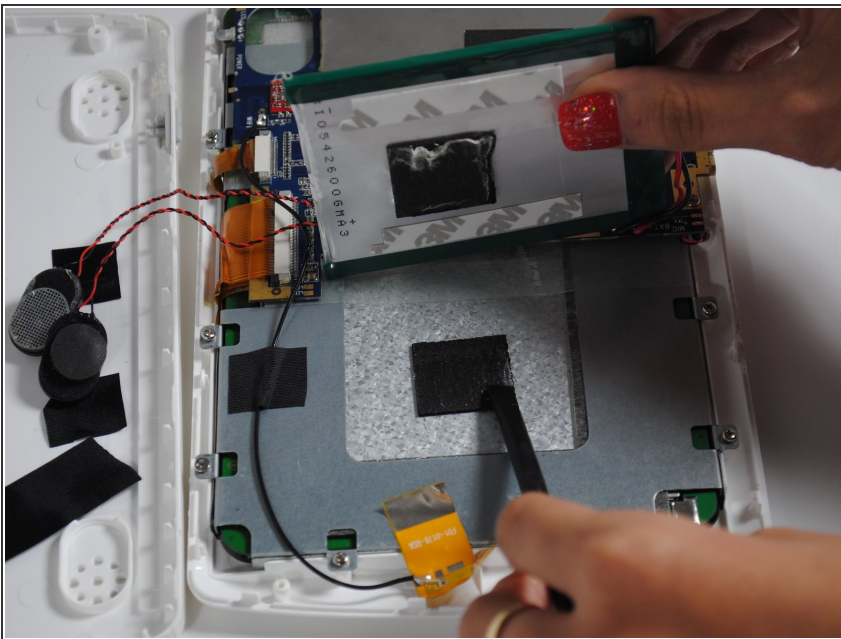

- Use a spudger to separate the battery from its adhesive.



## Step 5

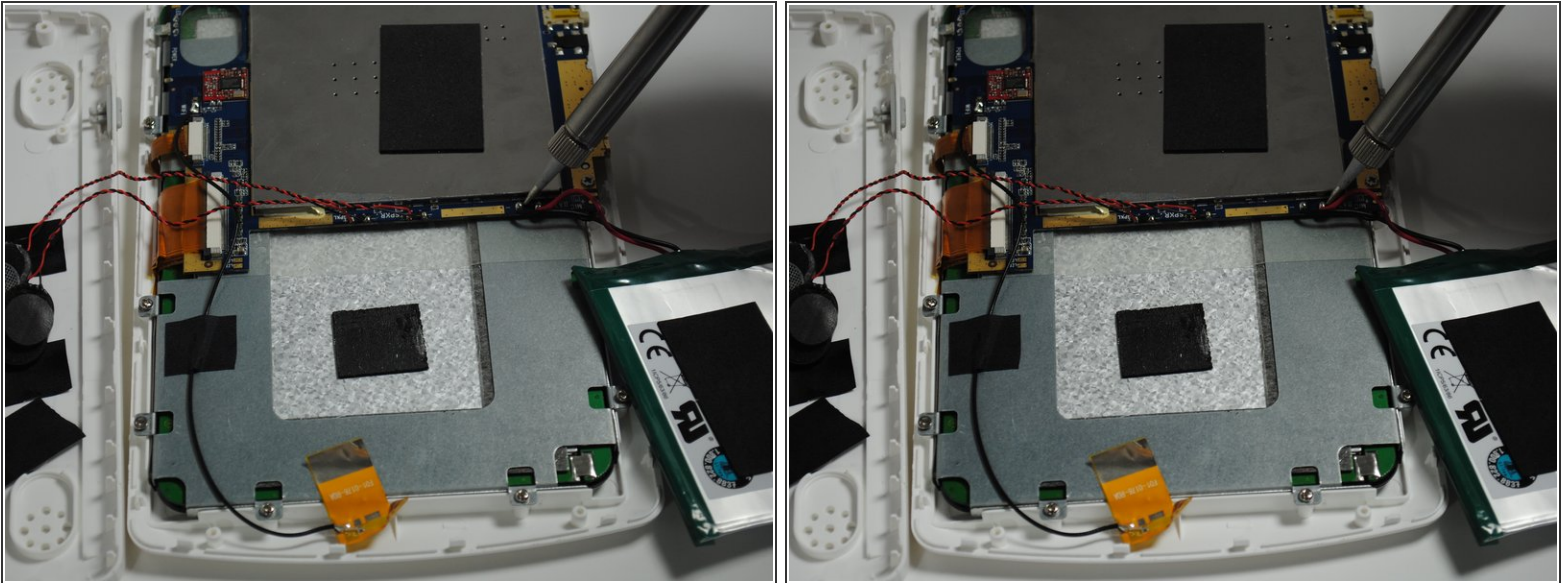

- Use a soldering station to separate the battery from its connecting wires.

To reassemble your device, follow these instructions in reverse order.