




Oregon Scientific Meep! 4.0 Disassembly

Use this guide to open your Oregon Scientific Meep! 4.0.

Written By: Jess Forte

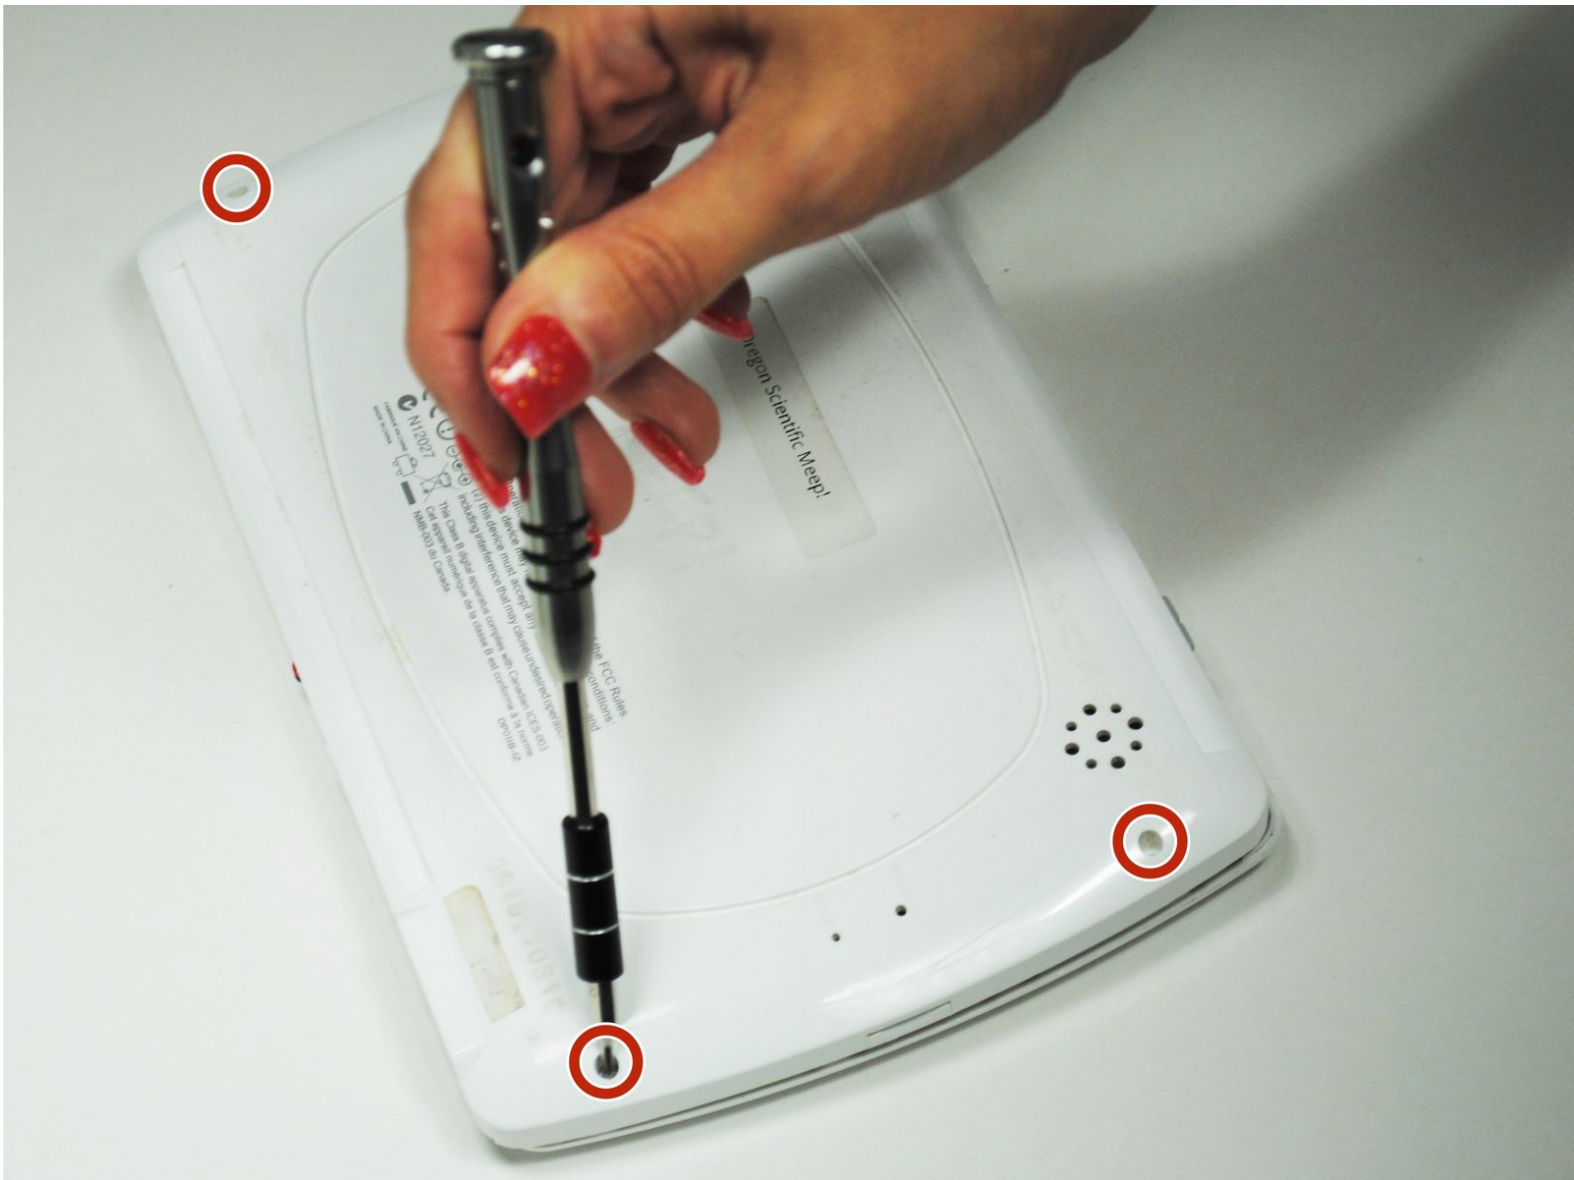

INTRODUCTION


Follow the steps in this guide to open your Meep! tablet in order to perform repairs.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Oregon Scientific Meep! 4.0 Disassembly

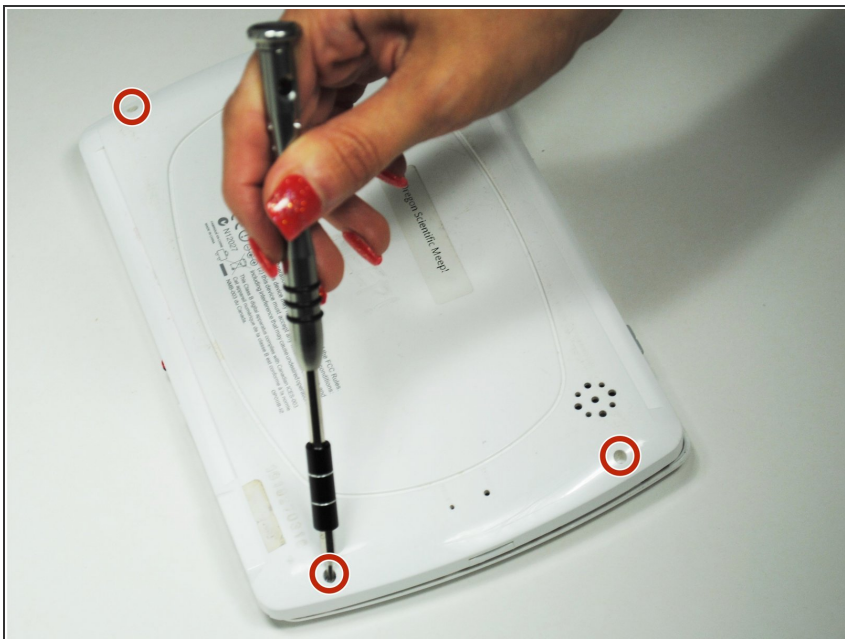

- Use a screwdriver to remove the four 7.0 mm Philips #00 screws from the back of the device.

Step 2



- Use a plastic opening tool to detach the clips on the inside of the device.

To reassemble your device, follow these instructions in reverse order.