



Oregon Scientific Meep! X2 Rear Casing Replacement

In this guide you will learn how to replace the back casing for your Meep! X2 device.

Written By: J'mel Henneman



INTRODUCTION

This guide will show you how to replace the orange back case from your Oregon Scientific Meep! X2 tablet.



TOOLS:



- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Rear Casing



- Remove the orange covers from the left and right sides of the device by sliding up against the tabs.

Step 2

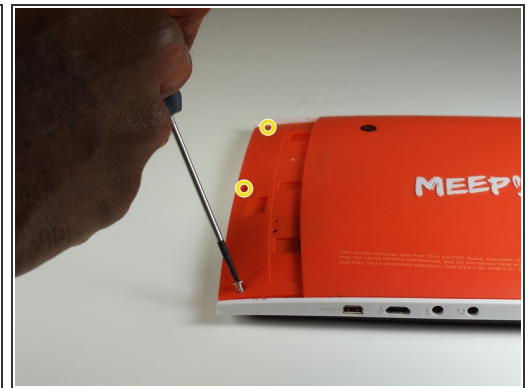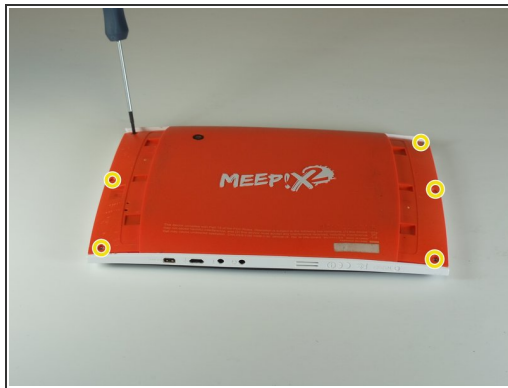

- You can remove the rear casing by unscrewing all six phillips #00(3.5mm x 4.5mm)screws from the left and right side of the device.

Step 3



- Use the plastic opening tools to undo the clips around the edges of the device.

To reassemble your device, follow these instructions in reverse order.