


**COIN COLLECTORS — PREPAY**  
174CS, GS; CT, GT  
**COMMON BATTERY — CONNECTIONS**

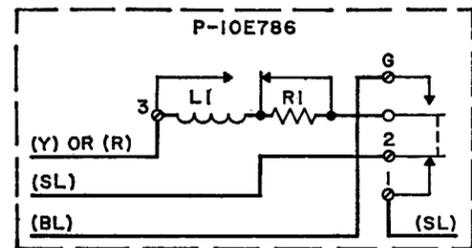

Note 1: The 174CT, GT coin collectors are equipped with P-10E786 coin relays wired as shown above.

Note 2: In some upper housings transfer contacts may be designated Y, BB, YY, W, BK-YY, and X, respectively.

Note 3: Brown gong signal lead or black filter lead may be connected to X terminal on coin chute instead of 5 terminal.

Note 4: Dotted lines in diagram show manual set connections.

Note 5: When a 61R filter is required for radio-frequency suppression, move yellow dial lead from Y upper housing contact spring and connect filter leads as follows:

- Yellow lead to filter bracket terminal
- Black lead to No. 5 upper housing contact
- Red lead to Y upper housing contact.

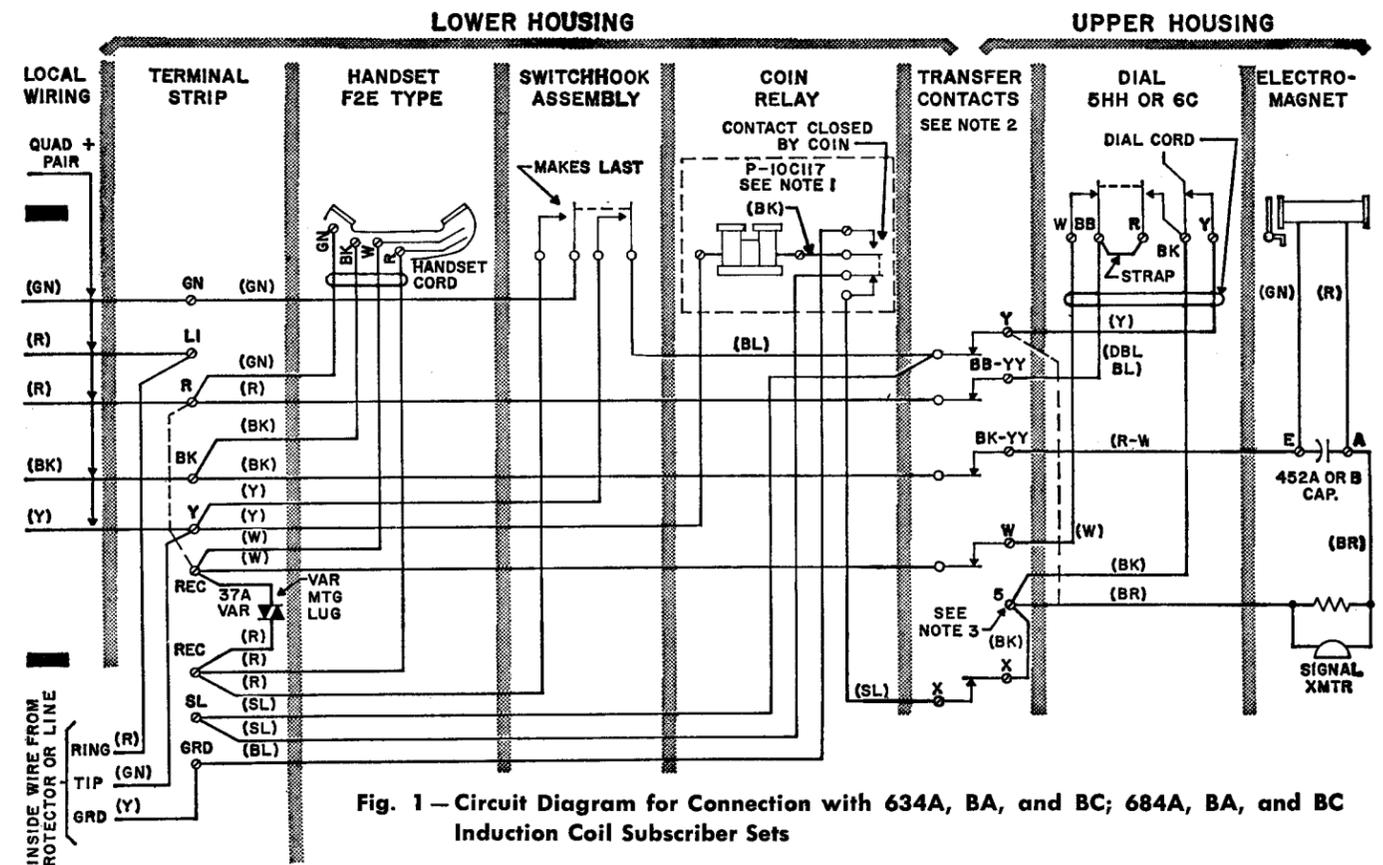


Fig. 1 - Circuit Diagram for Connection with 634A, BA, and BC; 684A, BA, and BC Induction Coil Subscriber Sets

SEE NOTES ON FACING PAGE

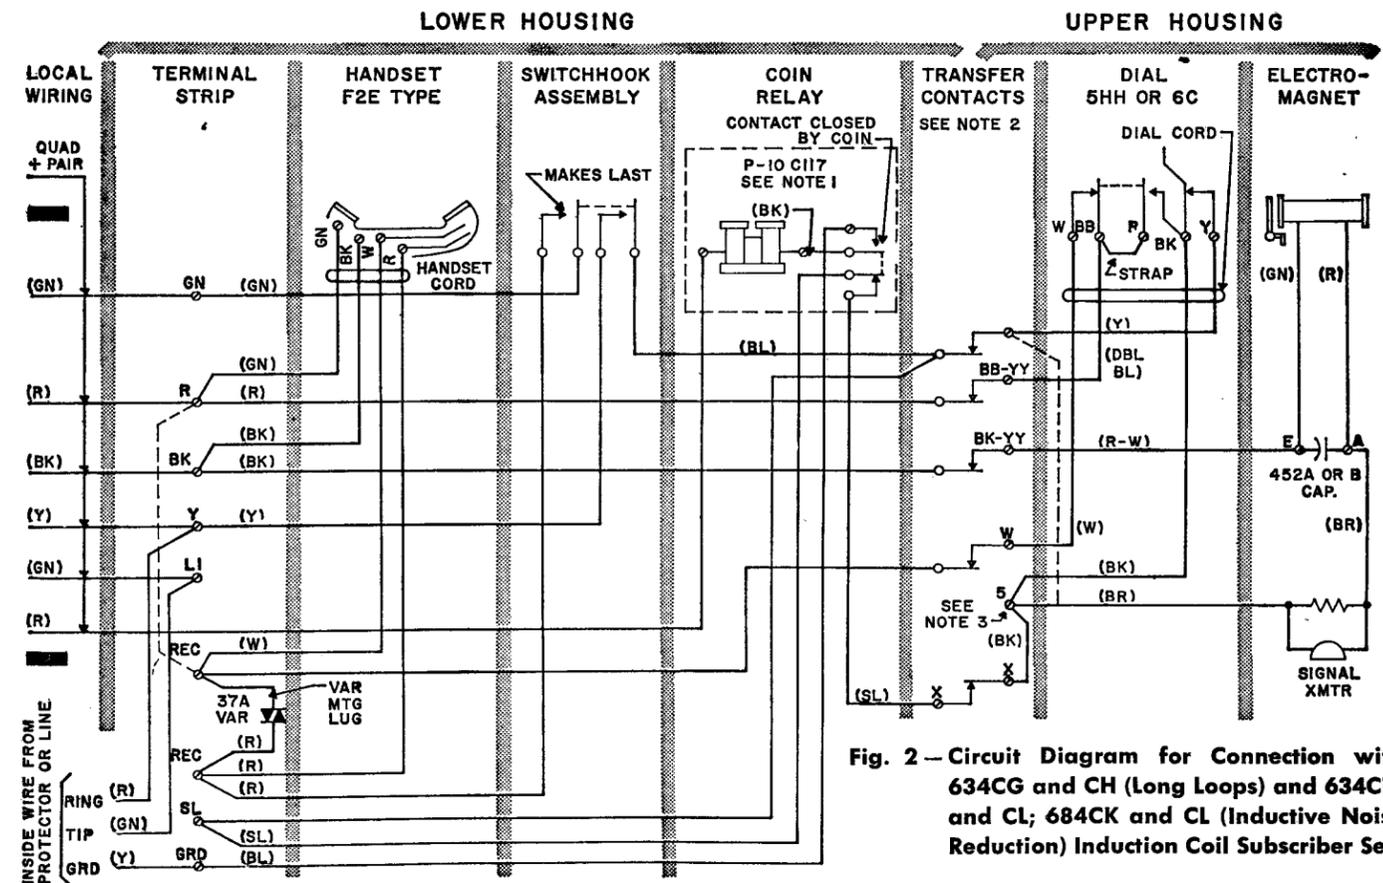


Fig. 2 - Circuit Diagram for Connection with 634CG and CH (Long Loops) and 634CK, and CL; 684CK and CL (Inductive Noise Reduction) Induction Coil Subscriber Sets