




# Mr. Coffee BVMC-SJX33GT Heating Plate Replacement

This guide will demonstrate how to replace the heating plate of your Mr. Coffee BVMC-SJX33GT.

Written By: Mackenzie Aiken

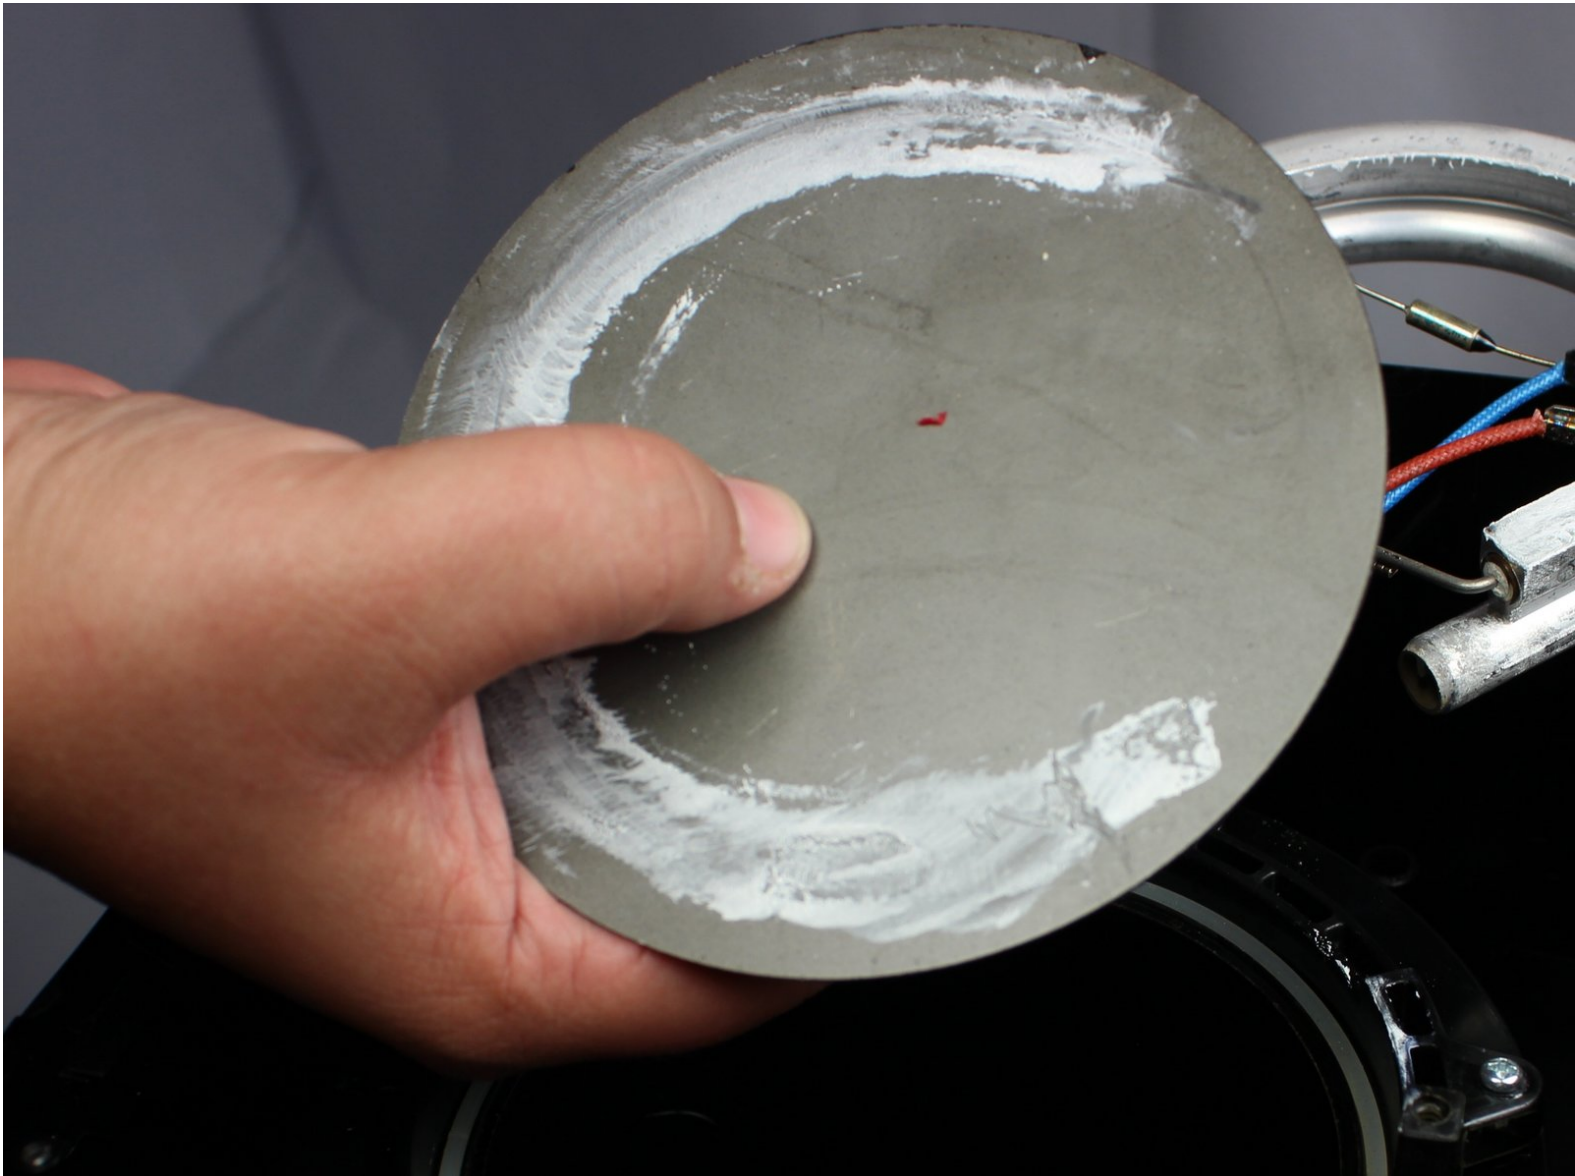

---

## INTRODUCTION

This guide to replace the heating plate of the Mr. Coffee BVMC-SJX33GT will be particularly useful if the heating plate your carafe sits on burns or corrodes in some way.

Make sure your coffee maker is unplugged and empty of all water before attempting to make any repairs.

---

### TOOLS:

- [Phillips #2 Screwdriver](#) (1)
  - [Small Needle Nose Pliers](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Base



- Turn your coffee maker over so that the base is facing up.

## Step 2






- Locate the seven 13.5mm screws securing the base to the coffee maker.
- Unscrew the screws using a #2 Phillips head screwdriver.
- ⓘ Use a screwdriver with a magnetic tip to more easily remove the three screws in the back and two in the middle.

### Step 3



- Lift base to remove.
- ⓘ If the base sticks along one edge, do not pull at an angle. Gently tug straight up while sliding a finger along the edge in order to pop the clips.


### Step 4 — Rubber Hose

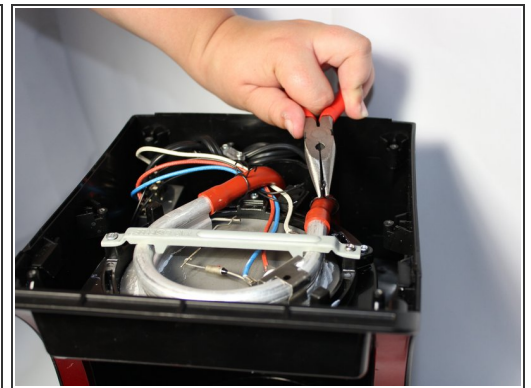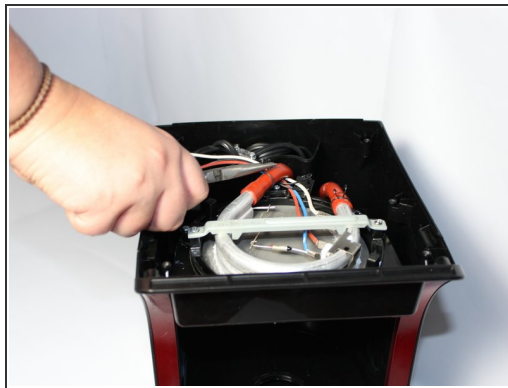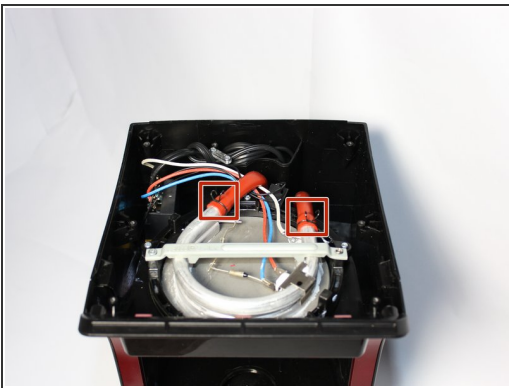

- Locate the metal clamps.
  - Using a pair of pliers or your fingers, slide clamps away from tube opening.
- ★ All following steps regarding the rubber hoses should be completed for both hoses.




## Step 5

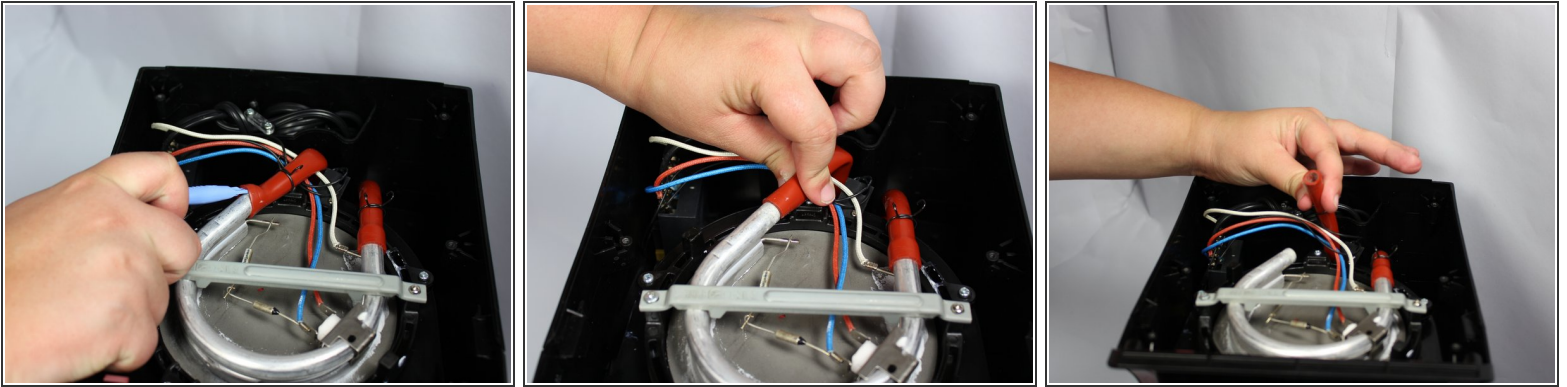



- Using a plastic opening tool, loosen rubber hose from metal tubing.
- Once loosened, grip the hose and pull it from the metal tubing.

## Step 6

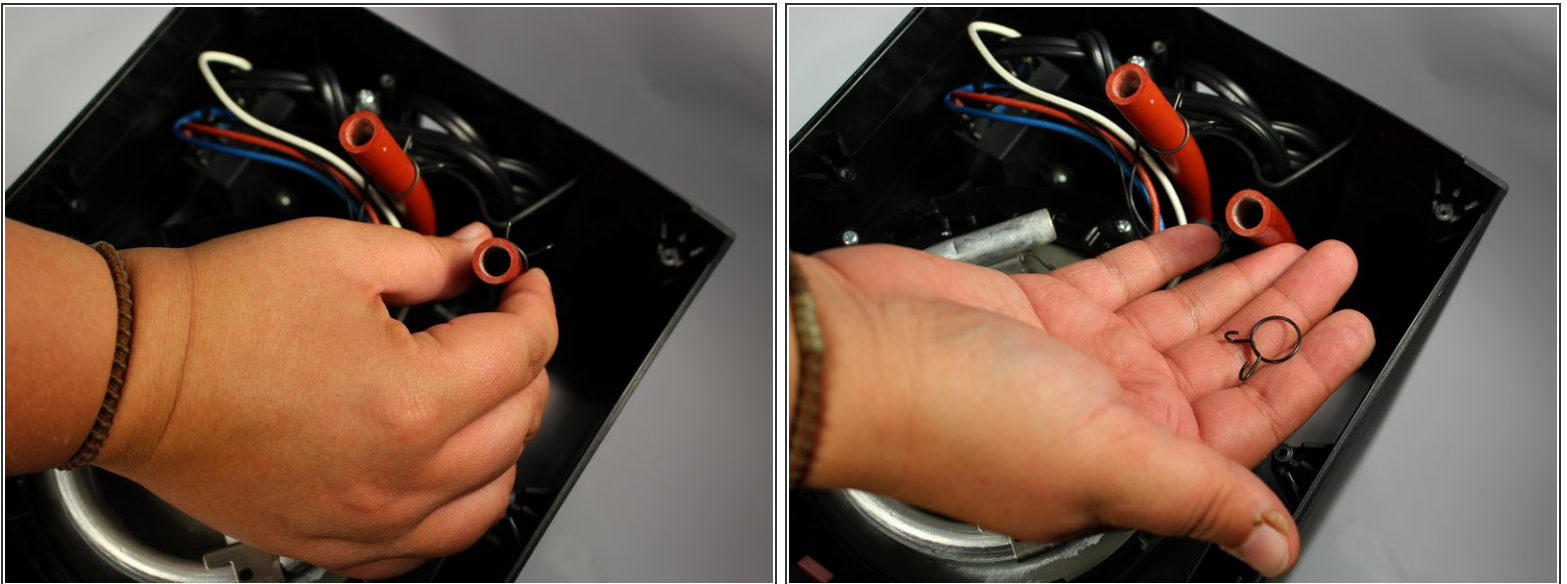


- Slide metal clamps off hoses.

## Step 7

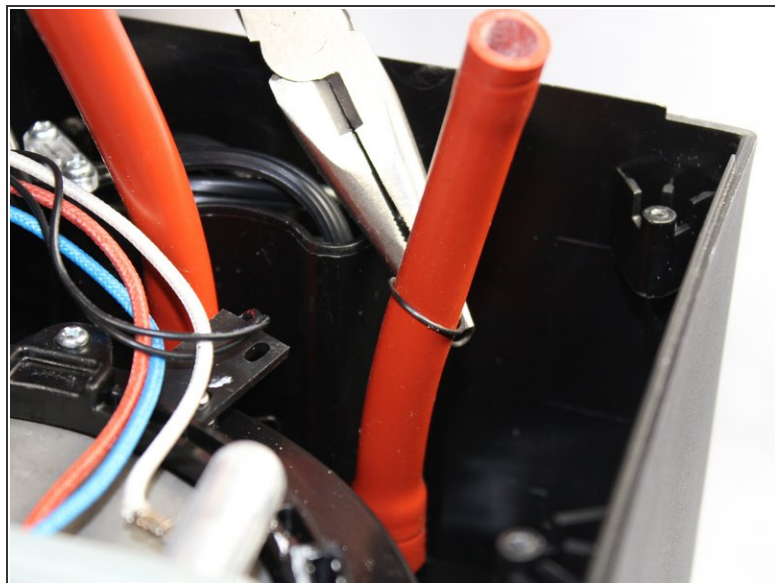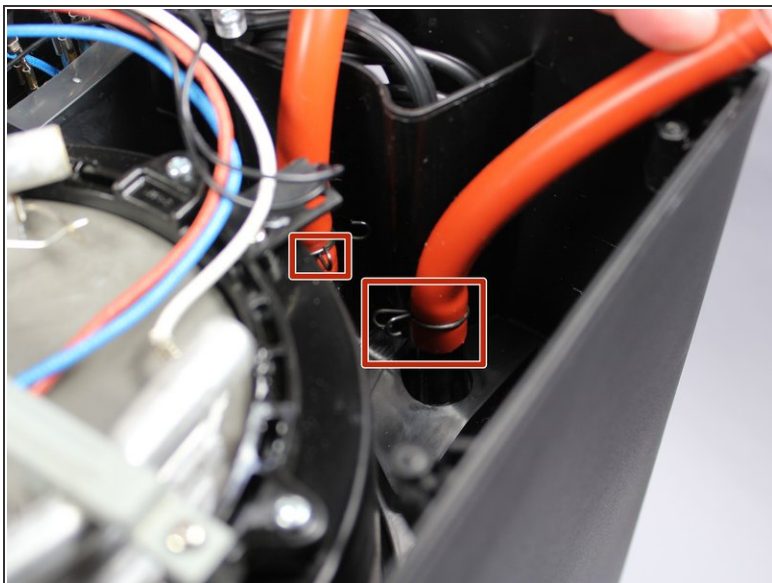

- Locate the other set of metal clamps.
- Using needle nose pliers or your fingers remove these clamps by pinching the clamps and sliding them up the tubes.


## Step 8

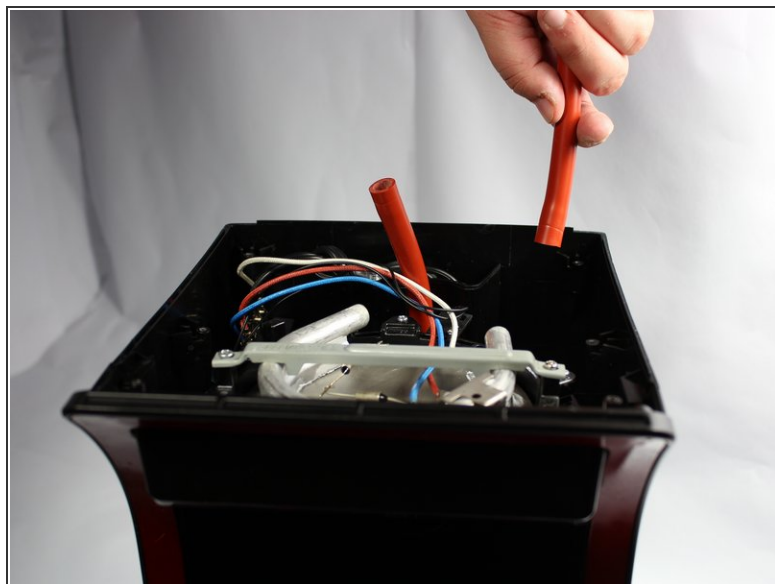

- Grip the hoses and pull them straight up and out.




## Step 9 — Heating Plate

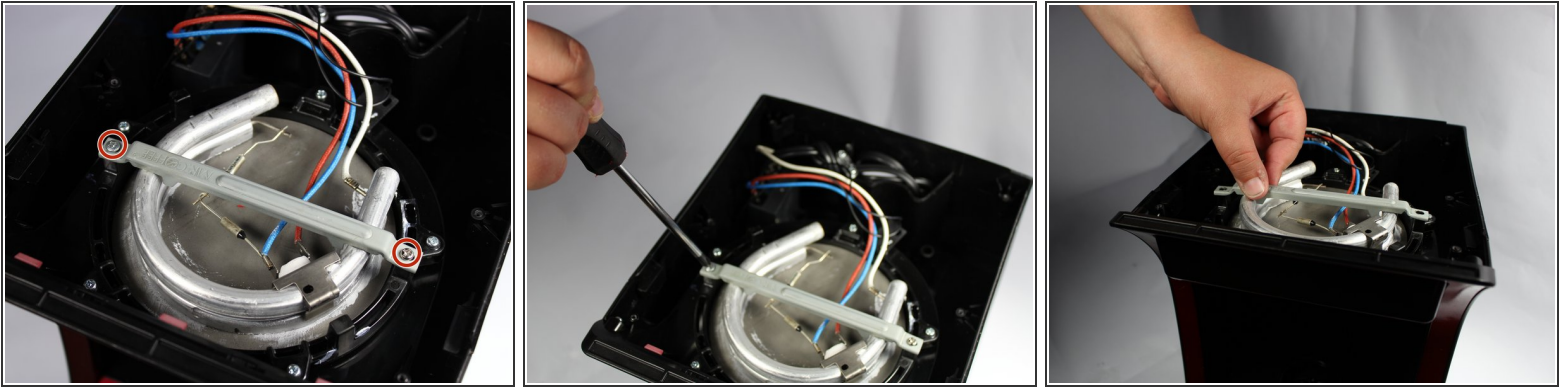


- Locate the two 17mm screws securing the bracing bar.
- Unscrew the screws with a #2 Phillip's head screwdriver and remove the bracing bar

## Step 10

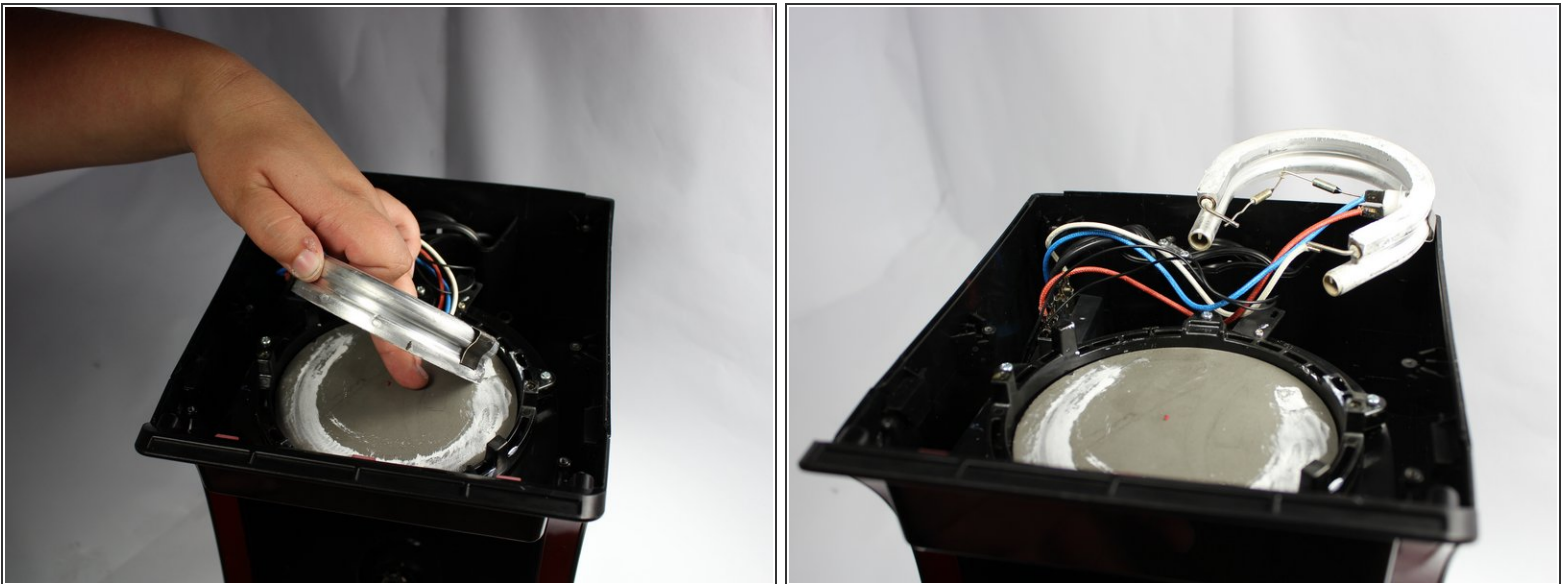

- Using a finger to keep the heating plate in place, grip the metal tubing and gently pull it away from the plate.
- Set the metal tubing aside.

## Step 11

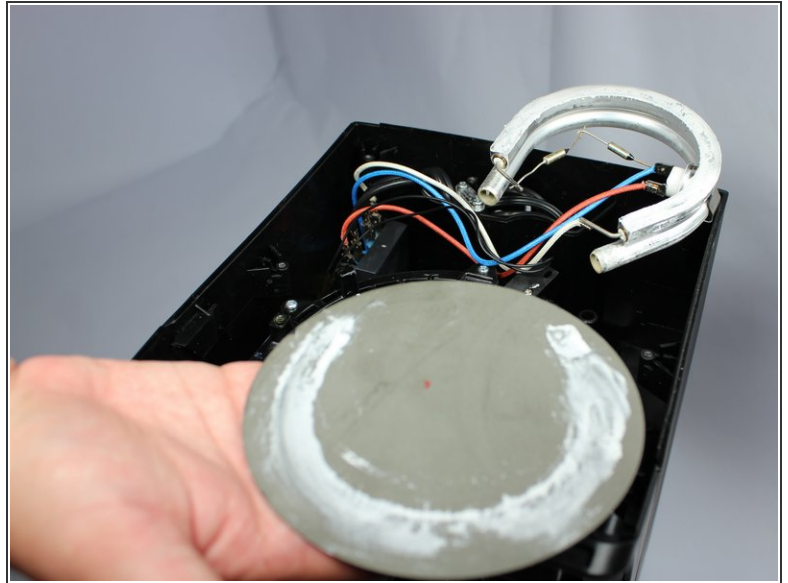

- Push the heating plate up from below and remove.

To reassemble your device, follow these instructions in reverse order.