



iPhone 6 Volume Control Buttons Replacement

Replace the volume control buttons in an iPhone 6.

Written By: Sam Goldheart



INTRODUCTION

Use this guide to remove or replace the volume button covers in your iPhone 6. This guide is just for the physical buttons, and not the electronic switches beneath.

If you need to replace the volume control cable, follow [this guide](#).

TOOLS:

- [P2 Pentalobe Screwdriver iPhone](#) (1)
- [iSclack](#) (1)
- [iFixit Opening Tools](#) (1)
- [Suction Handle](#) (1)
- [Tweezers](#) (1)
- [Phillips #000 Screwdriver](#) (1)
- [iOpener](#) (1)
- [Plastic Cards](#) (1)

PARTS:

- [iPhone 6 Case Button Set](#) (1)

Step 1 — Pentalobe Screws



Before disassembling your iPhone, discharge the battery below 25%. A charged lithium-ion battery can catch fire and/or explode if accidentally punctured.

- Power off your iPhone before beginning disassembly.
- Remove the two 3.6 mm-long Pentalobe screws next to the Lightning connector.

Step 2 — iSclack Opening Procedure



i The next three steps demonstrate using the iSclack, a great tool for safely opening the iPhone 6 that we recommend for anyone doing more than one repair. **If you aren't using the iSclack, skip down three steps for an alternate method.**

- If the plastic depth gauge is attached at the center of the iSclack, remove it now—it's not needed for larger phones like the iPhone 6.
- Close the handle on the iSclack, opening the suction-cup jaws.

Step 3



- Place the bottom of your iPhone in between the suction cups.
- Position the iSclack's upper suction cup against the display, just above (but not covering) the home button.
- Open the handles to close the jaws of the iSclack. Center the suction cups and press them firmly onto the top and bottom of the iPhone.


(i) If your display or back glass is badly cracked, [covering it with a layer of clear packing tape](#) may help the suction cups adhere. The iSclack also includes two pieces of tape for this purpose.

Step 4



- Hold onto your iPhone securely and close the handle of the iSclack to separate the suction cups, pulling the front panel up from the rear case.
- The iSclack is designed to safely open your iPhone just enough to separate the pieces, but not enough to damage the display cables.
- Peel the two suction cups off your iPhone.
- **Skip the next three steps and continue on to Step 8.**

Step 5 — Manual Opening Procedure

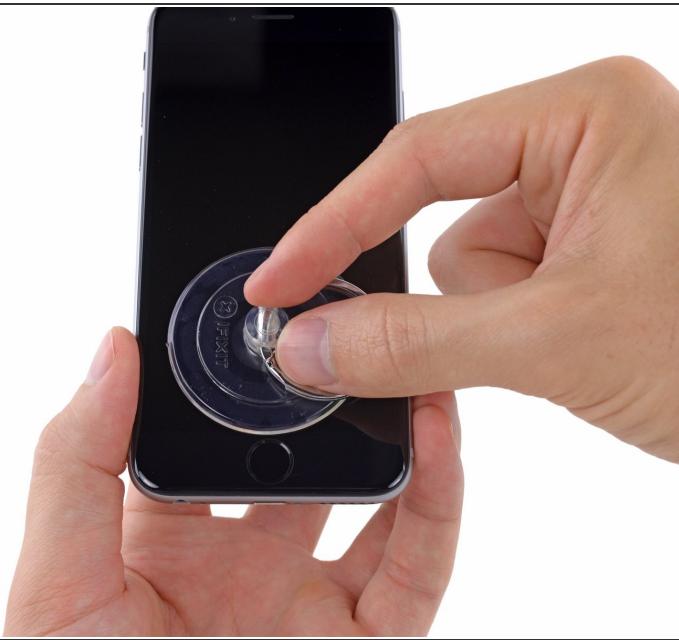

- If you don't have an iSlack, use a single suction cup to lift the front panel:
 - Press a suction cup onto the screen, just above the home button.

i Be sure the cup is pressed securely onto the screen to get a tight seal.


i If your display is badly cracked, [covering it with a layer of clear packing tape](#) may allow the suction cup to adhere. Alternatively, very strong tape may be used instead of the suction cup. If all else fails, you can superglue the suction cup to the broken screen.

Step 6



- While holding the iPhone down with one hand, pull up on the suction cup to slightly separate the front panel assembly from the rear case.
 - ⚠ Take your time and apply firm, constant force. The display assembly is a much tighter fit than most devices.
- Using a plastic opening tool, begin to gently pry the rear case down, away from the display assembly, while continuing to pull up with the suction cup.
 - ⓘ There are several clips holding the front panel assembly to the rear case, so you may need to use a combination of the suction cup and plastic opening tool to free the front panel assembly.

Step 7

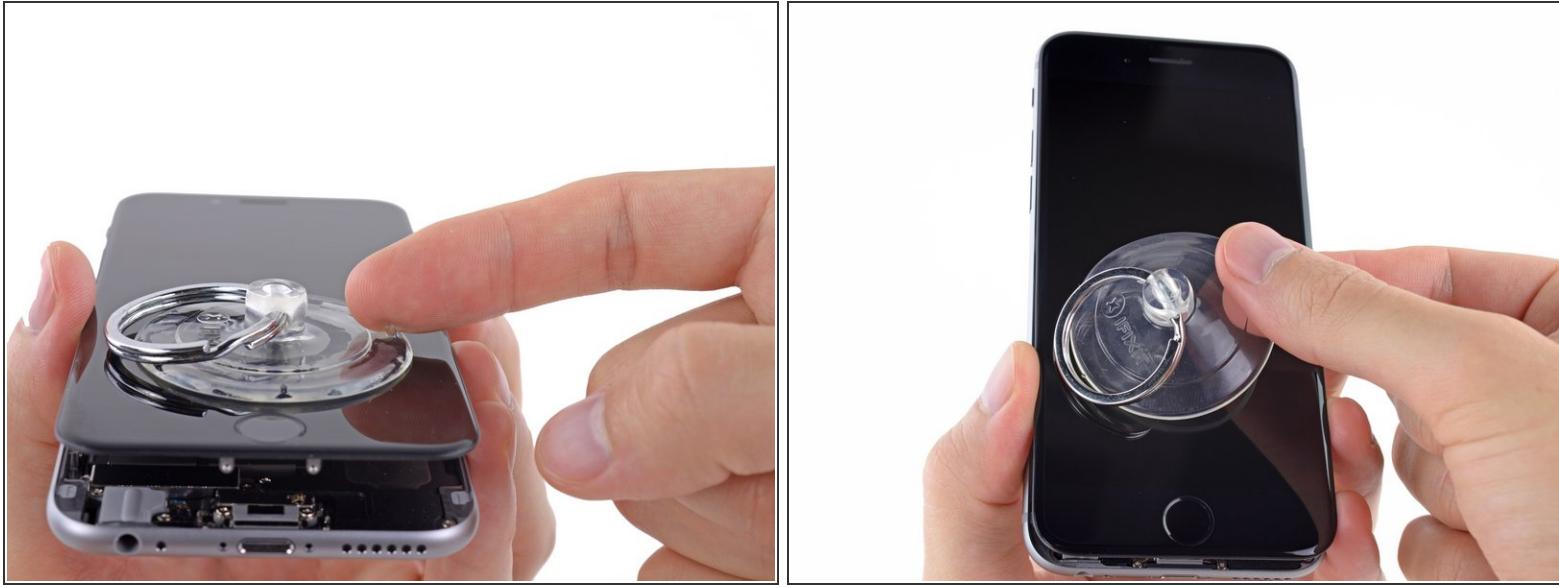

- Pull the plastic nub to release the vacuum seal on the suction cup.
- Remove the suction cup from the display assembly.

Step 8 — Opening up the phone



- Open the iPhone by swinging the home button end of the front panel assembly away from the rear case, using the top of the phone as a hinge.

(i) Several clips along the top edge of the front panel form a partial hinge.

(n) During reassembly, align the clips just below the top edge of the rear case. Then, slide the front panel upward until its top edge is flush with that of the rear case.

Step 9



- Open the display to about a 90° angle, and lean it against something to keep it propped up while you're working on the phone.
 - *i* In a pinch, an unopened canned beverage works well for this.
- Add a rubber band to keep the display securely in place while you work. This prevents undue strain on the display cables.


Step 10 — Removing the battery connector bracket screws



- Remove the following Phillips screws from the battery connector bracket:
 - One 2.2 mm screw
 - One 3.2 mm screw

i During your repair, keep track of each screw and make sure it goes back exactly where it came from to avoid damaging your phone.

Step 11

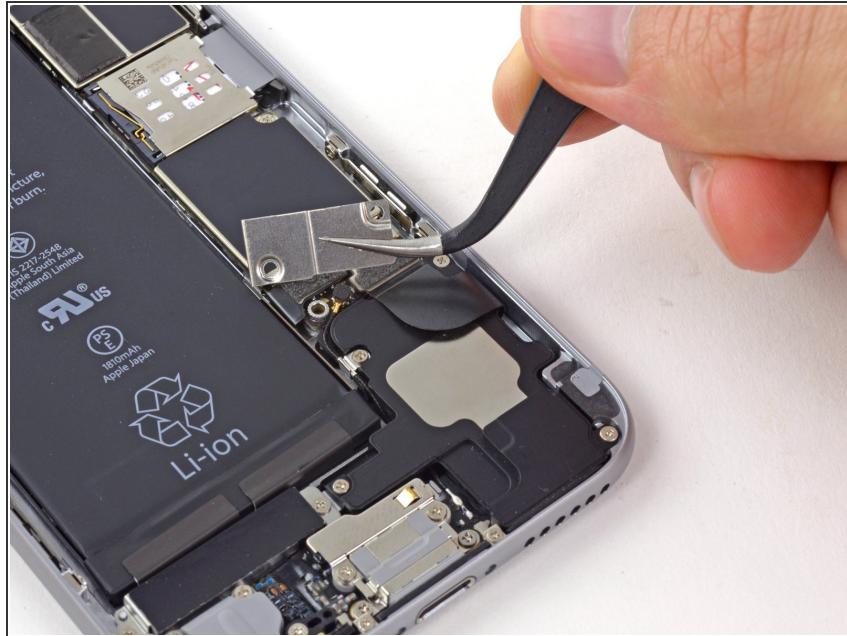

- Remove the metal battery connector bracket from the iPhone.

Step 12 — Disconnecting the battery connector



- Use a plastic opening tool to gently pry the battery connector up from its socket on the logic board.

 Take care to only pry up on the battery connector, and not the socket on the logic board. If you pry up on the logic board socket, you may break the connector entirely.


Step 13 — Removing the front panel assembly cable bracket screws



- Remove the following five Phillips screws securing the front panel assembly cable bracket:
 - Three 1.2 mm screws
 - One 1.7 mm screw
 - One 3.1 mm screw

 Incorrect placement of these screws during reassembly will cause permanent damage to your iPhone's logic board.

Step 14

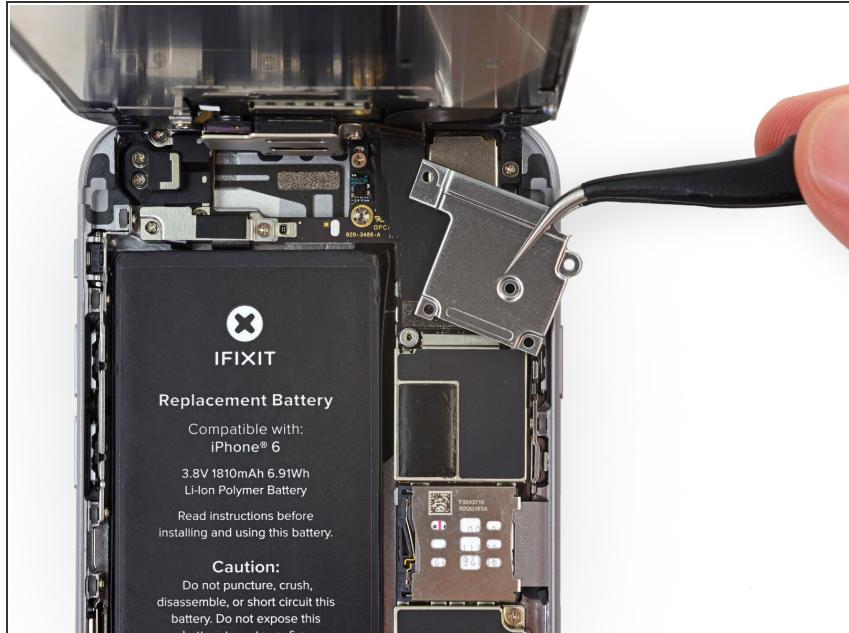

- Remove the front panel assembly cable bracket from the logic board.


Step 15



⚠ In the next four steps, take care to pry up **only** on the cable connectors, and not on their sockets on the logic board.

- Use a spudger or a fingernail to disconnect the front-facing camera and sensor cable connector.

Step 16

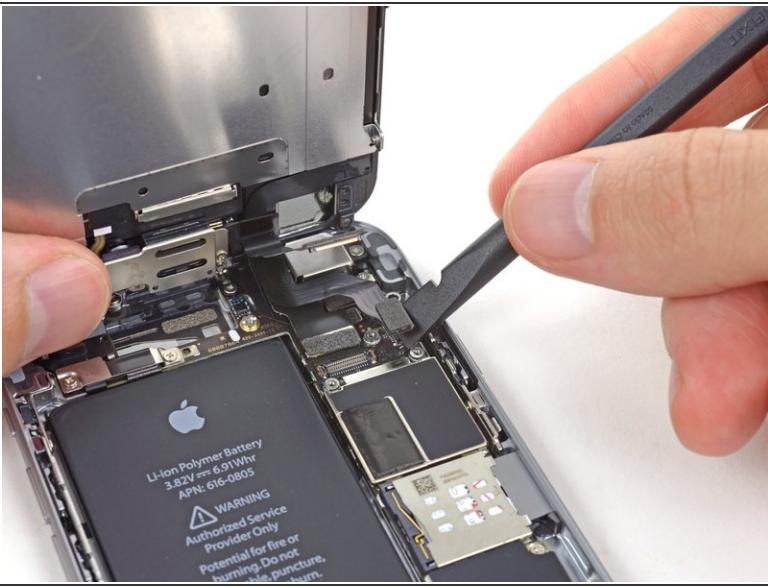

- Use a spudger or a fingernail to disconnect the home button cable connector.


Step 17



! Make sure the battery is disconnected before you disconnect or reconnect the cable in this step.

- Use a spudger or a fingernail to disconnect the display data cable connector.
- When reassembling your phone, the display data cable may pop off its connector. This can result in white lines or a blank screen when powering your phone back on. If that happens, simply reconnect the cable and power cycle your phone. The best way to power cycle your phone is to [disconnect and reconnect the battery connector](#).

Step 18

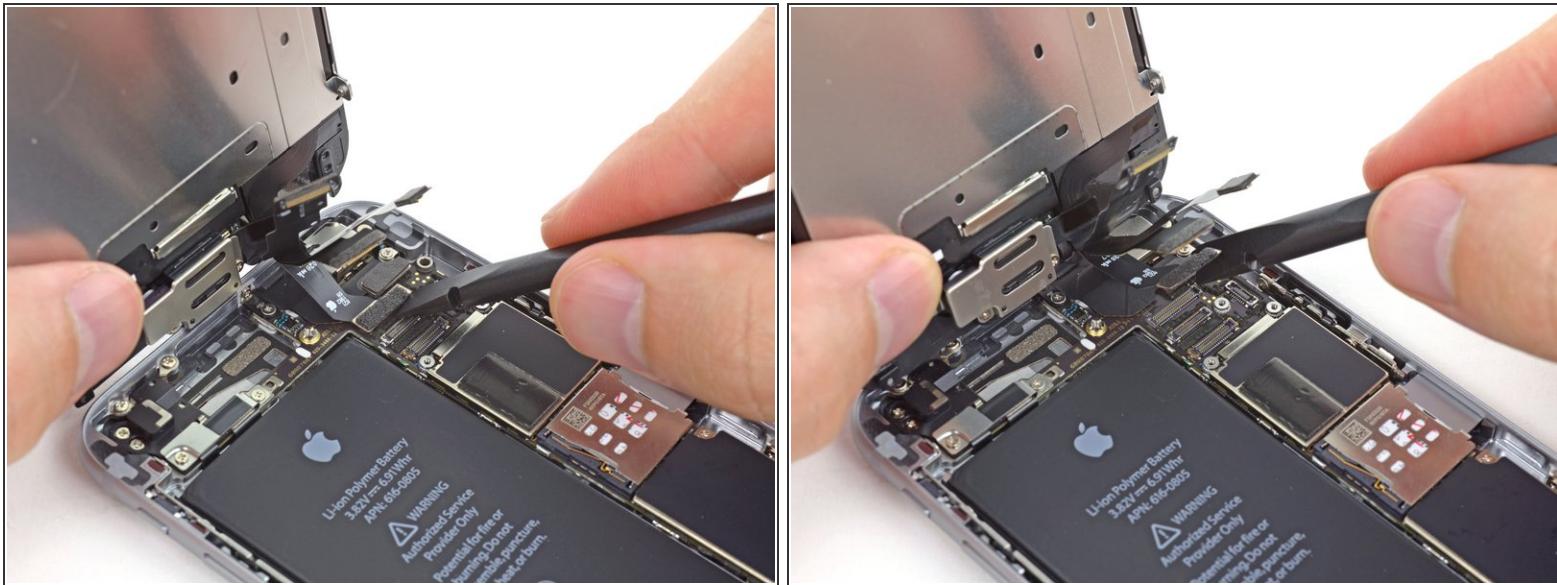


- Use the flat end of a spudger to disconnect the digitizer cable connector.
- ★ When reconnecting the digitizer cable, **do not press the center of the connector**. Press one end of the connector, then press the opposite end. Pressing in the center of the connector can bend the component and cause digitizer damage.

Step 19 — Separating front panel assembly and rear case



- Remove the front panel assembly from the rear case.

Step 20 — Battery

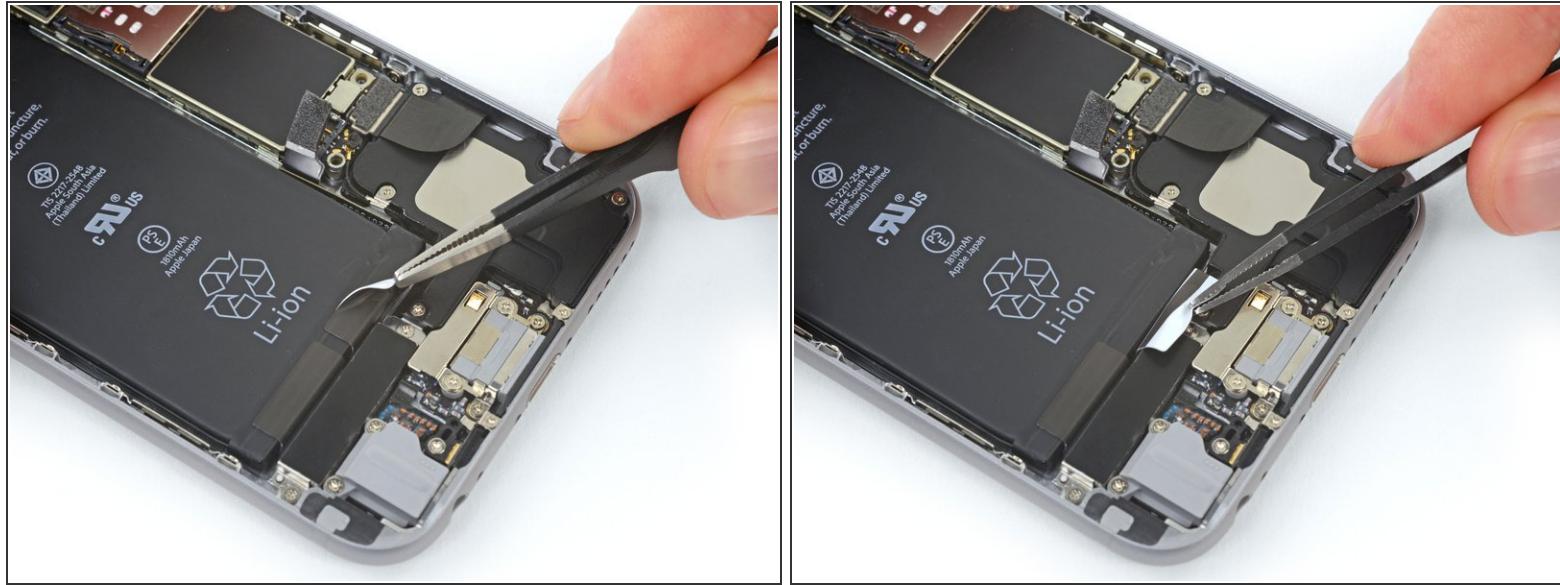


- Peel back the first battery adhesive tab from the bottom right edge of the battery.

⚠ Use your fingers or blunt tweezers, and be extra careful when working near the battery—puncturing a lithium-ion battery can release dangerous chemicals and cause a fire.

i Optionally, before proceeding further, you may [remove the two Phillips screws securing the vibrator](#) and lift the vibrator out to allow more clearance for extracting the battery strips successfully.


Step 21

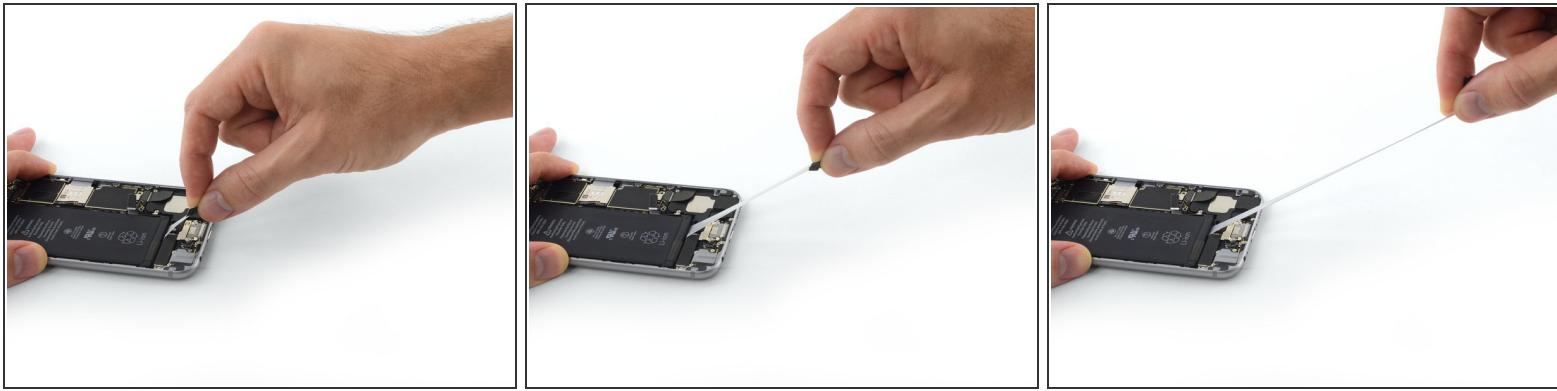

⚠ Try to keep the strips flat and unwrinkled during this procedure; wrinkled strips will stick together and break instead of pulling out cleanly.

- Slowly pull the adhesive tab away from the battery, toward the bottom of the iPhone.
- ⚠** To avoid tearing the adhesive strip, be careful not to snag it against the vibrator or other components near the battery.
- Pull steadily, maintaining constant tension on the strip until it slips out from between the battery and the rear case. For best results, pull the strip at a 60° angle or less.
- i** The strip will stretch to many times its original length. Continue pulling and re-grab the strip near the battery if necessary.
- If the strip breaks, carefully try to retrieve it with your tweezers (without damaging the battery) and continue pulling. If the strip breaks off underneath the battery and can't be retrieved, continue with the steps below.

Step 22

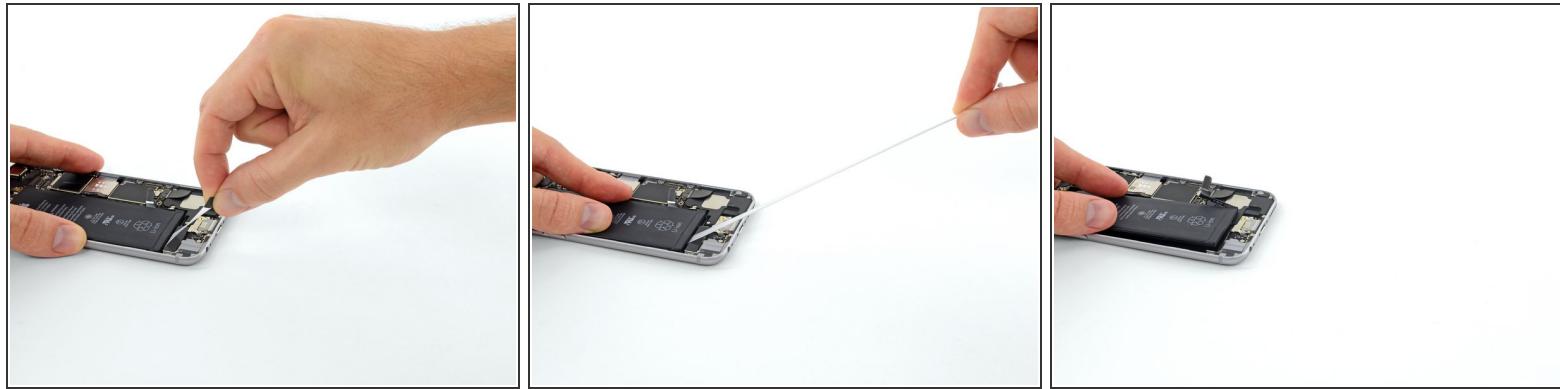

- Repeat for the second strip.

⚠ Hold down the battery as you remove the second strip, or the strip may fling the battery when it separates from the case.

- If you removed both adhesive strips successfully, skip the next two steps.

⚠ If either of the adhesive strips broke off underneath the battery and could not be retrieved, **continue with the next step below**.


Step 23 — The iOpener



- If any of the adhesive strips broke off and the battery remains stuck to the rear case, [prepare an iOpener](#) or use a hair dryer to heat the rear case directly behind the battery. It should be slightly too warm to touch comfortably.

⚠ Overheating the iPhone may ignite the battery.

Step 24

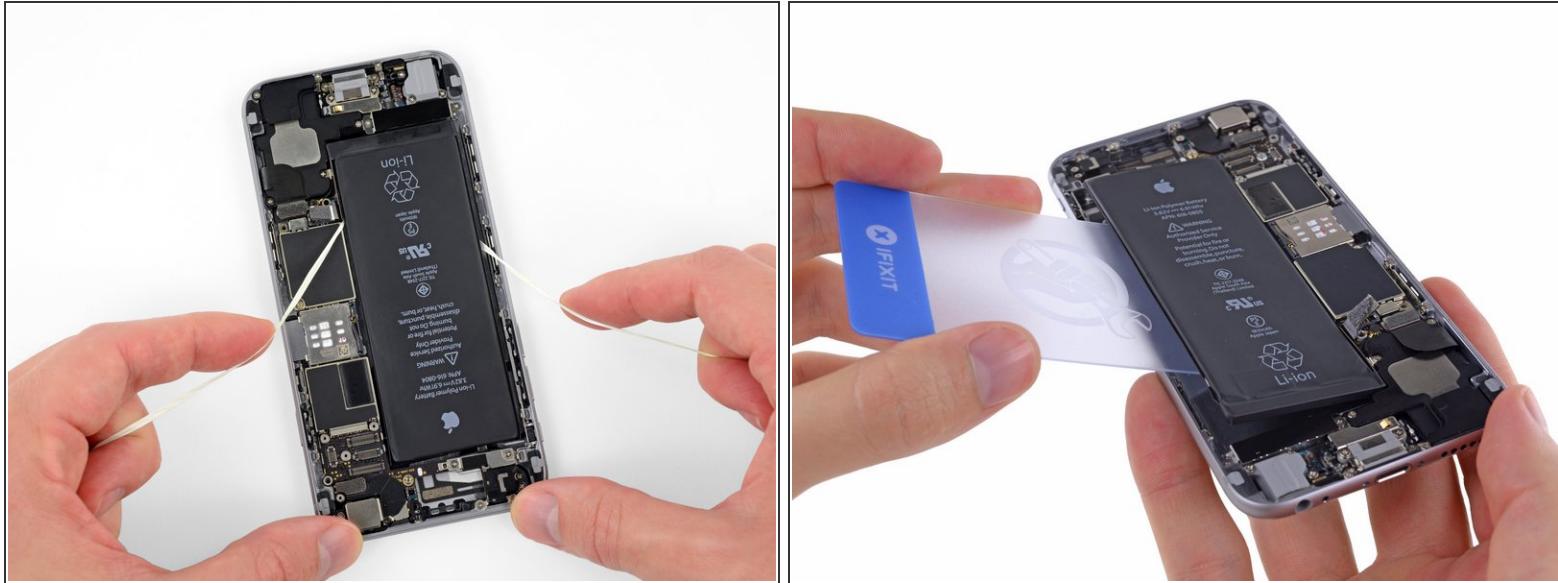


- Flip the iPhone back over and thread a piece of dental floss or strong string behind the battery. Then, slowly pull back and forth in a sawing motion to separate the adhesive.
 - A stronger alternative to floss is an unwound guitar string, such as a 0.009 E string from a 12-string set.
- Alternatively, insert a plastic card between the case side of the battery and the rear case.
 - **⚠ Do not** insert your card in the area between the volume down (-) button and the top edge of the battery, or you may damage the [volume control cable](#) lying underneath.
 - **⚠ Do not** pry against the logic board or you may damage the phone.
 - **⚠** Keep the card as flat as possible to avoid bending the battery, which may damage it and cause it to release dangerous chemicals or catch fire. Do not use any sharp tools to pry at the battery.
- Press the card in farther to break up the adhesive behind the battery.

Step 25 — Removing the battery





- Remove the battery from the iPhone.
- **i** If your replacement battery came in a plastic sleeve, remove the sleeve before installation by pulling it away from the the ribbon cable.
- **?** If your new battery doesn't have adhesive preinstalled, refer to [this guide](#) to replace the adhesive strips.
- **?** Perform a [hard reset](#) after reassembly. This can prevent several issues and simplify troubleshooting.

Step 26 — Volume Control Cable

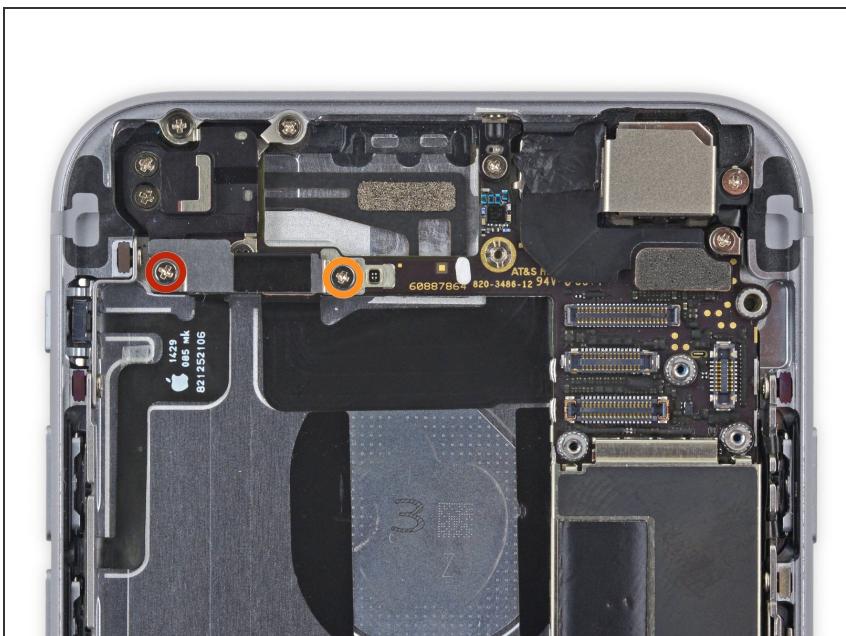


- Remove the following Phillips #00 screws from the upper cable bracket:
 - One 2.9 mm screw
 - One 2.2 mm screw

Step 27

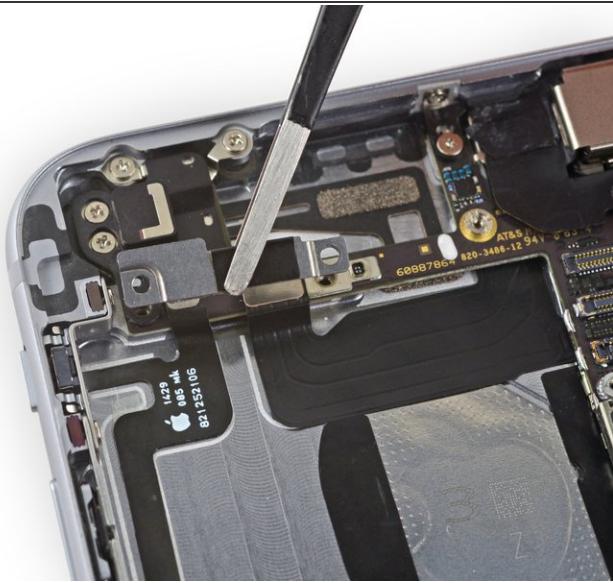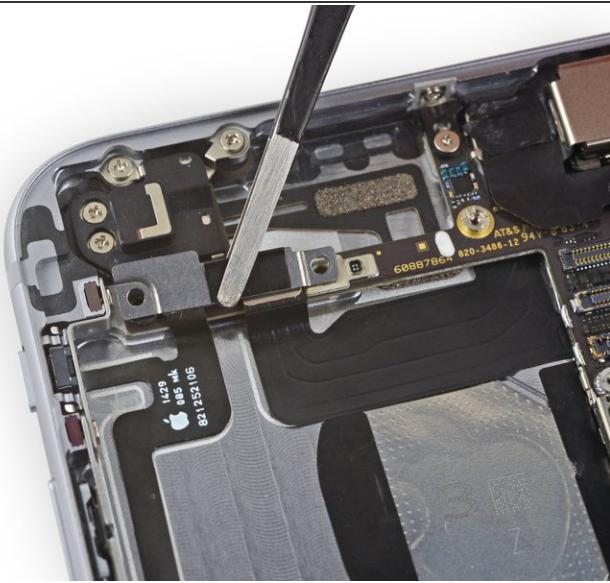


- Remove the upper cable bracket from the iPhone.

Step 28

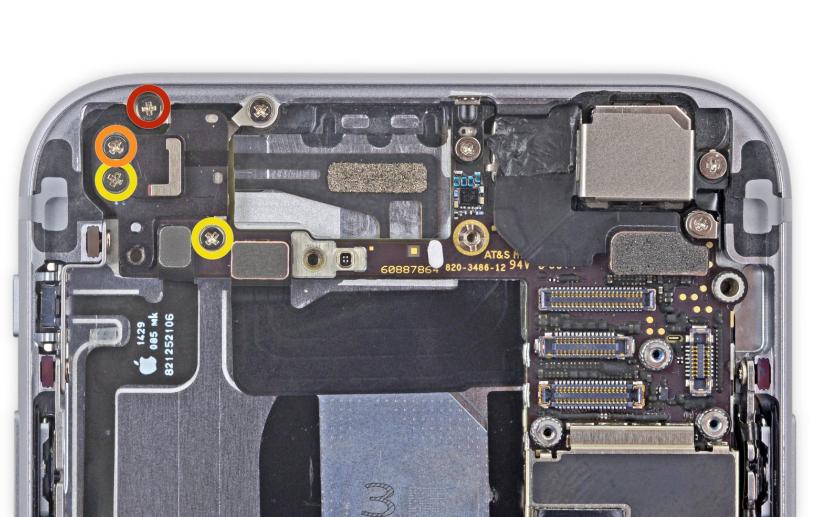


- Remove the following four Phillips #00 screws from the contact bracket:
 - One 1.5 mm screw
 - One 1.4 mm screw
 - Two 2.1 mm screws

Step 29

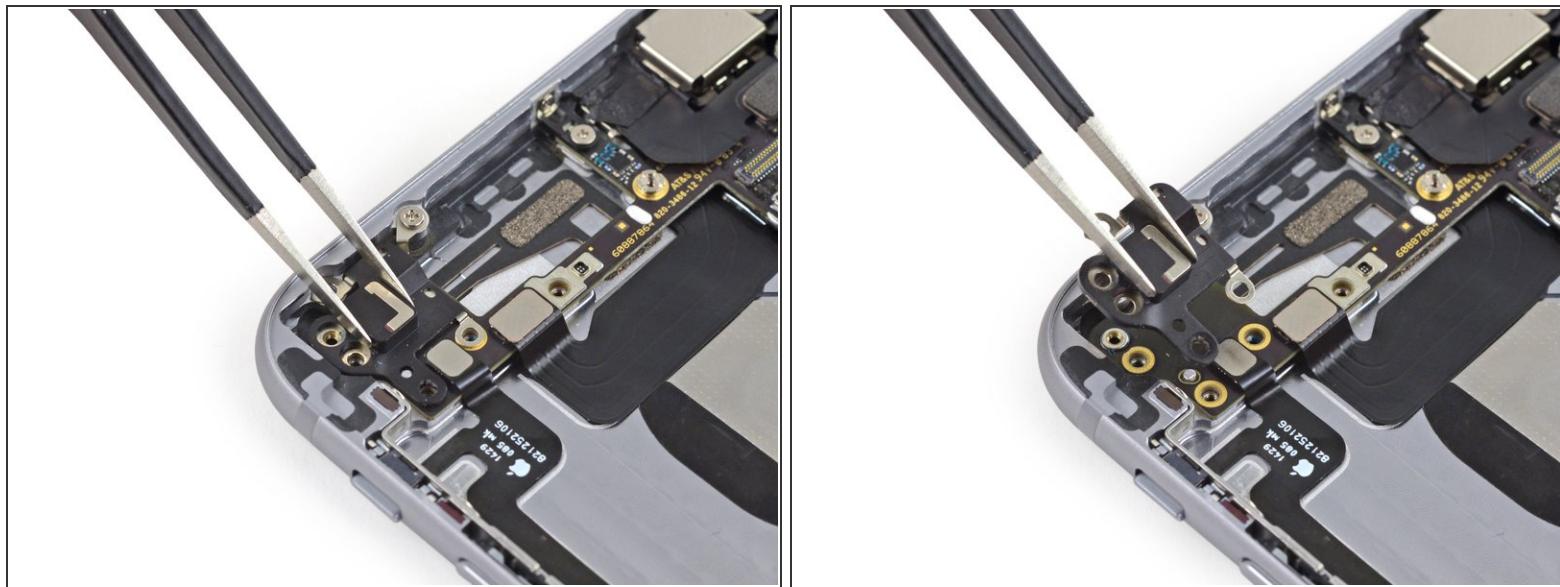

- Remove the contact bracket from the iPhone.


Step 30

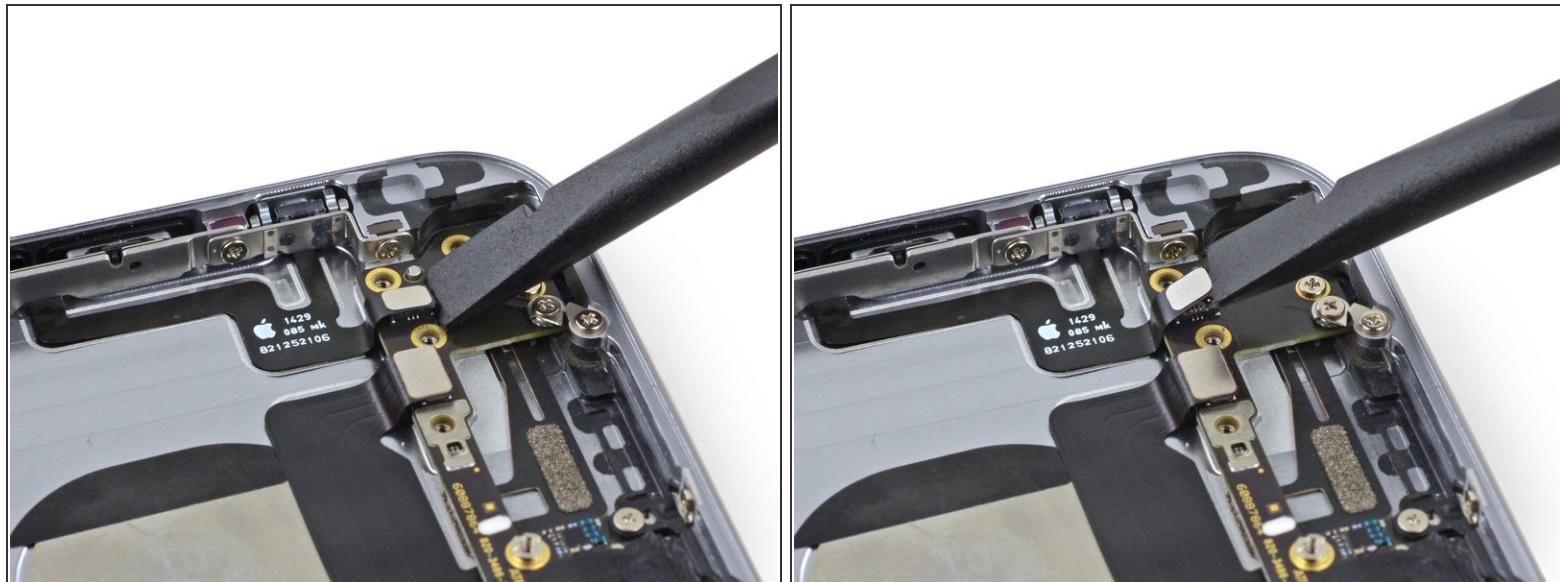

- Use the flat end of a spudger to lift the volume control cable connector up off of its socket.

⚠ Only pry up on the connector, not the socket on the logic board or you risk permanent damage.

Step 31

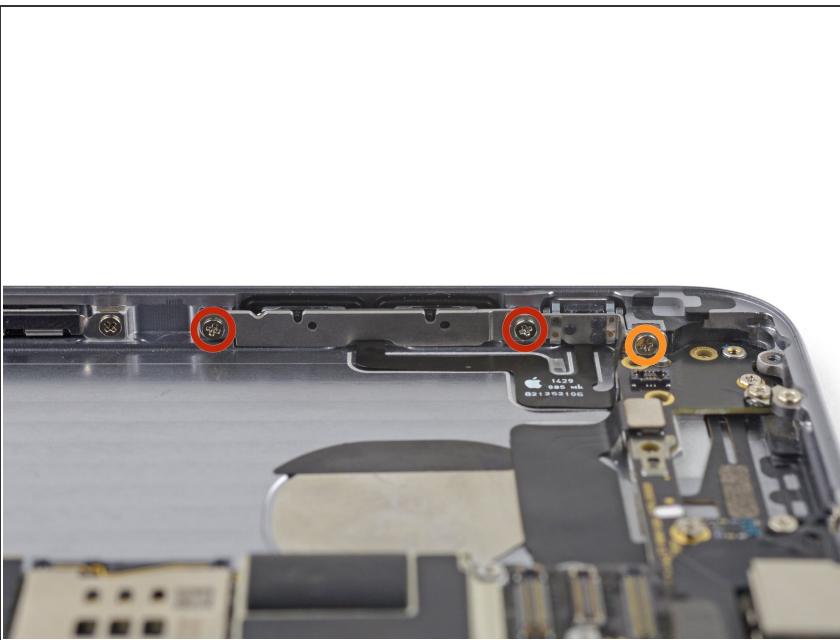


- Remove the following Phillips #00 screws from the volume control cable brackets:
 - Two 2.3 mm screws
 - One 1.8 mm screw

Step 32



- Pull the hold switch and volume control button brackets away from the rear case to allow access to the button covers.

Step 33

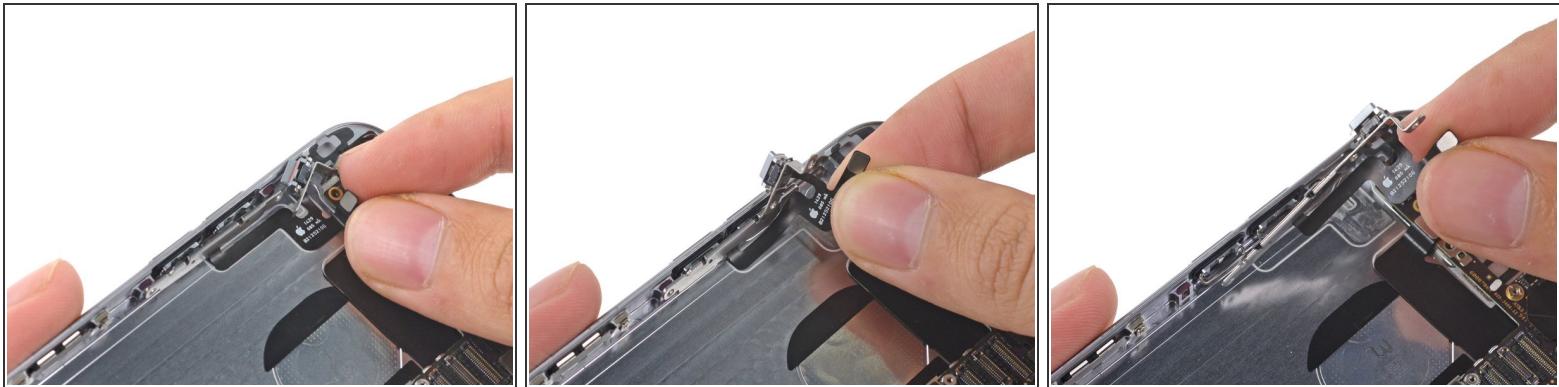

- Begin to peel the volume control button cable up from the rear case starting from the connector end.
- Be gentle when peeling the thin portions of the cable up from the case.
- Remove the volume control button cable from the rear case.

Step 34 — Volume Control Buttons



- Pull the volume control buttons by the metal bar to remove them from the rear case.
- The buttons are held to the case with an adhesive gasket, pull carefully to prevent ripping the membrane.

To reassemble your device, follow these instructions in reverse order.