



# iPhone 8 Plus Home/Touch ID Sensor Replacement

How to remove, transfer, or replace the solid-state home button in an iPhone 8 Plus.

Written By: Jeff Suovanen



## INTRODUCTION

The iPhone 8 Plus home “button” is actually a solid-state sensor, which also includes Touch ID (fingerprint recognition) capability.

**Most replacement home buttons won't work**, so check carefully before starting your repair. Your iPhone's original home button is uniquely paired to the logic board at the factory—and without Apple's proprietary calibration process, even a genuine replacement home button from another iPhone won't work. To fix a broken home button, you should install a specially-made, [universal-style home button](#). Note that these replacements only work as a button; Touch ID will not function.

If you are only replacing a broken screen, you can use this guide to carefully remove and transfer your working original home button to a new screen, preserving all functions, including Touch ID.

During this procedure, to avoid accidentally straining or tearing the display cables, it's best to completely detach the display assembly before beginning repairs on the home/Touch ID sensor. But if you are comfortable doing so, you may skip the display assembly section of this guide and go straight to the home/Touch ID sensor section.

### TOOLS:

- [P2 Pentalobe Screwdriver iPhone](#) (1)
- [iOpener](#) (1)
- [Suction Handle](#) (1)
- [iFixit Opening Picks set of 6](#) (1)
- [Phillips #000 Screwdriver](#) (1)
- [Spudger](#) (1)
- [Tweezers](#) (1)
- [iFixit Opening Tools](#) (1)
- [Tri-point Y000 Screwdriver Bit](#) (1)

### PARTS:

- [iPhone 7/7 Plus/8/8 Plus Replacement Home Button](#) (1)

## Step 1 — Pentalobe Screws



**⚠** Before you begin, discharge your iPhone battery below 25%. A charged lithium-ion battery can catch fire and/or explode if accidentally punctured.

- Power off your iPhone before beginning disassembly.
- Remove the two 3.5 mm pentalobe screws from the bottom edge of the iPhone.

**i** Opening the iPhone's display will compromise its waterproof seals. Have [replacement seals](#) ready before you proceed past this step, or take care to avoid liquid exposure if you reassemble your iPhone without replacing the seals.


## Step 2 — Opening Procedure



**i** Heating the lower edge of the iPhone will help soften the adhesive securing the display, making it easier to open.

- Use a hairdryer or [prepare an iOpener](#) and apply it to the lower edge of the iPhone for about 90 seconds in order to soften up the adhesive underneath.

## Step 3

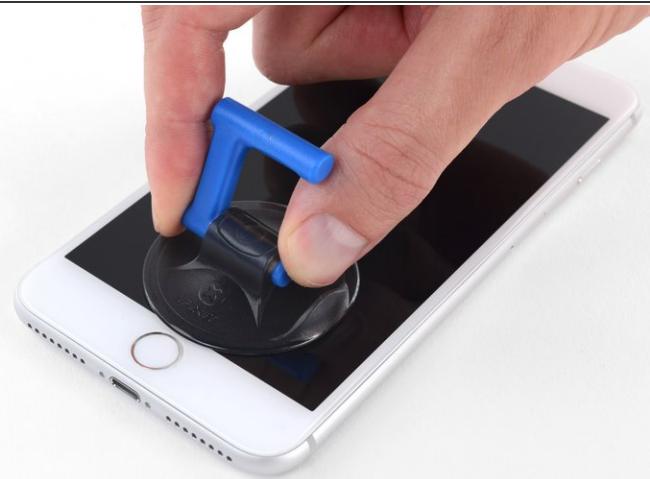

- Apply a suction cup to the lower half of the front panel, just above the home button.
- i** Be sure the suction cup does not overlap with the home button, as this will prevent a seal from forming between the suction cup and front glass.

## Step 4



- Pull up on the suction cup with firm, constant pressure to create a slight gap between the front panel and rear case.
- Insert an opening pick or other thin pry tool a few millimeters into the gap.
  - The watertight adhesive holding the display in place is very strong; creating this initial gap takes a significant amount of force. If you're having a hard time opening a gap, apply more heat, and gently rock the screen up and down to weaken the adhesive until you create enough of a gap to insert your tool.

## Step 5



- Slide your pick around the corner and up the left edge of the phone, moving towards the volume control buttons and silent switch, breaking up the adhesive holding the display in place.
- Stop near the top left corner of the display.


## Step 6



- Re-insert your tool at the lower right corner of the iPhone, and slide it around the corner and up the right side of the phone to separate the adhesive.

**⚠** Don't insert the pick very far, or you may damage the display cables along this side of the iPhone. Insert it only a few millimeters, or about the width of the display bezel.

## Step 7

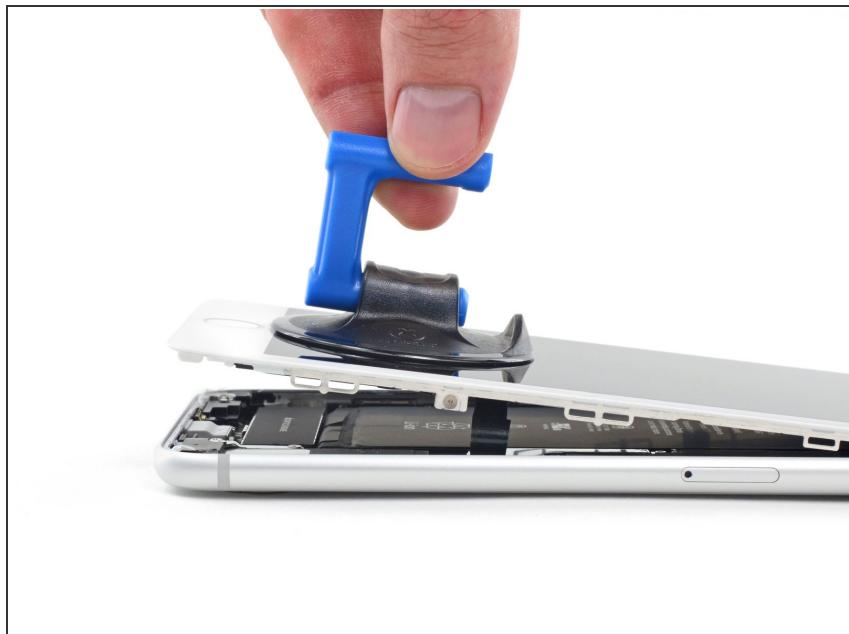

- Gently pull up on the suction cup to lift up the bottom edge of the display.

**⚠** **Do not raise the display more than 15°** or you'll risk straining or tearing the ribbon cables connecting the display.

## Step 8



- Pull on the small nub on the suction cup to remove it from the front panel.

## Step 9



- Slide an opening pick underneath the display along the top edge of the phone to loosen the last of the adhesive.

## Step 10





- Slide the display assembly slightly down (away from the top edge of the phone) to disengage the clips holding it to the rear case.

## Step 11



- Open the iPhone by swinging the display up from the left side, like the back cover of a book.
- ⚠** Don't try to fully separate the display yet, as several fragile ribbon cables still connect it to the iPhone's logic board.
- Lean the display against something to keep it propped up while you're working on the phone.


## Step 12 — Battery Disconnection

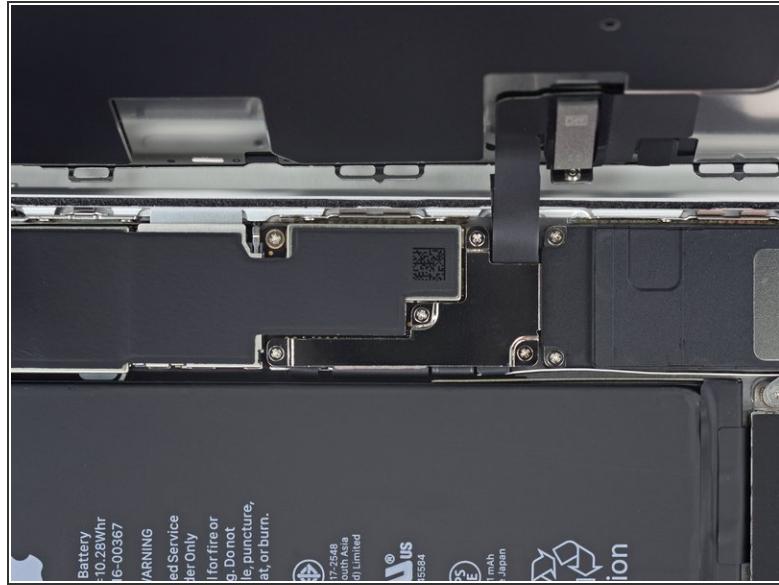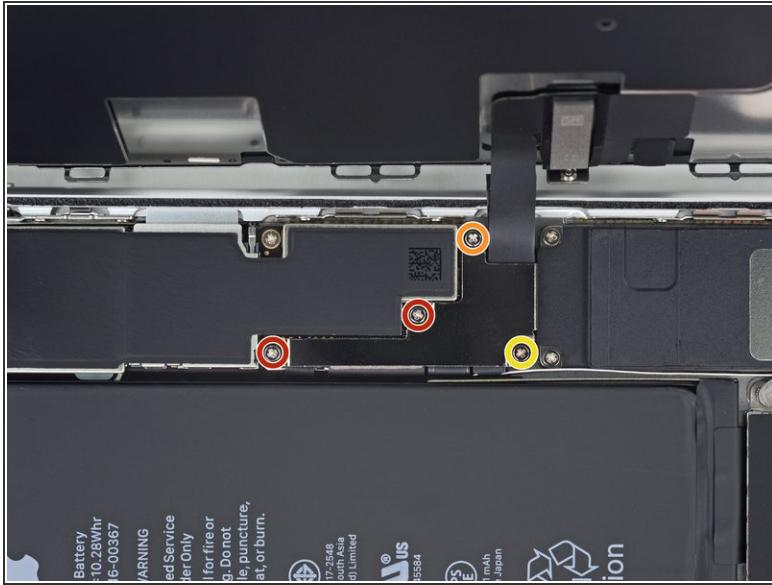

- Remove four Phillips (JIS) screws securing the lower display cable bracket to the logic board, of the following lengths:
  - Two 1.3 mm screws
  - One 1.4 mm screw
  - One 2.7 mm screw


► Throughout this guide, [keep careful track of your screws](#) so that each one goes back where it came from during reassembly. Installing a screw in the wrong place can cause permanent damage.

## Step 13

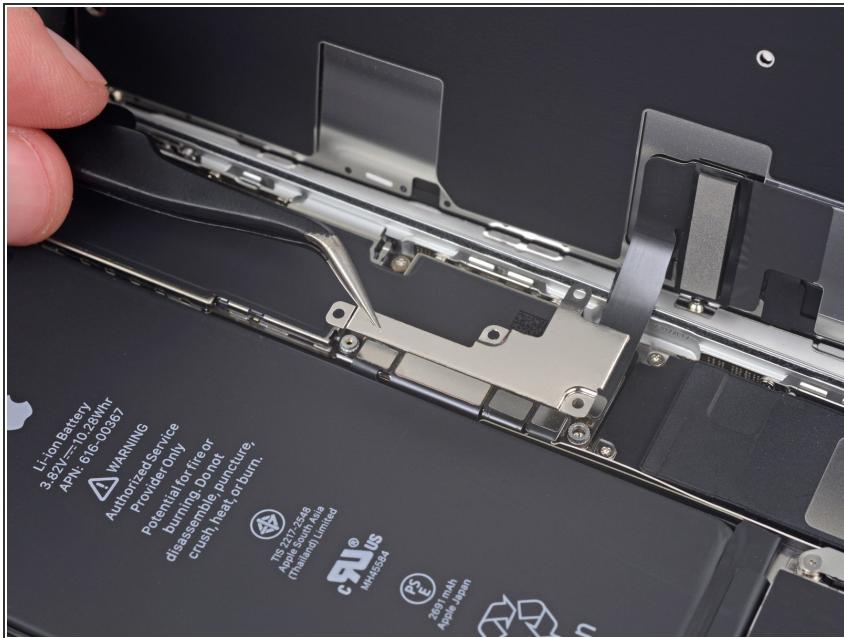


- Remove the lower display cable bracket.

## Step 14

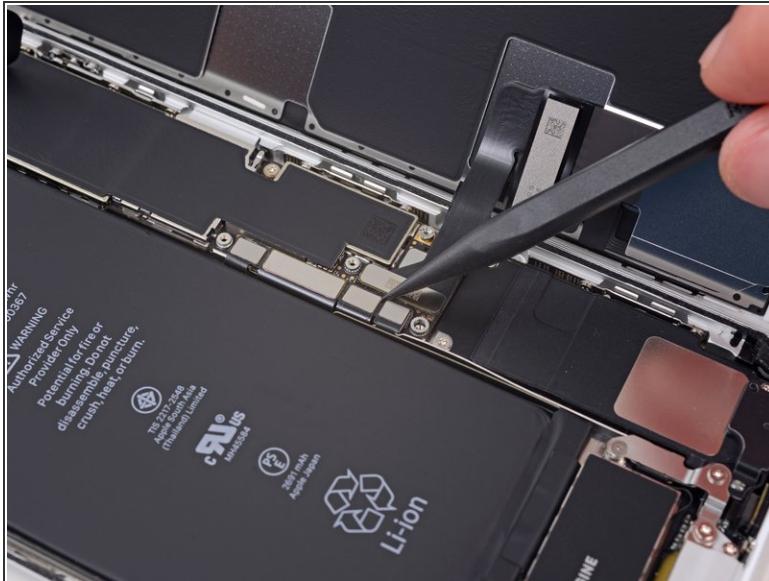


- Use the point of a spudger to pry the battery connector up from its socket on the logic board.
- Bend the connector cable up slightly to prevent it from accidentally making contact with the socket and providing power to the phone during your repair.

## Step 15 — Display Assembly

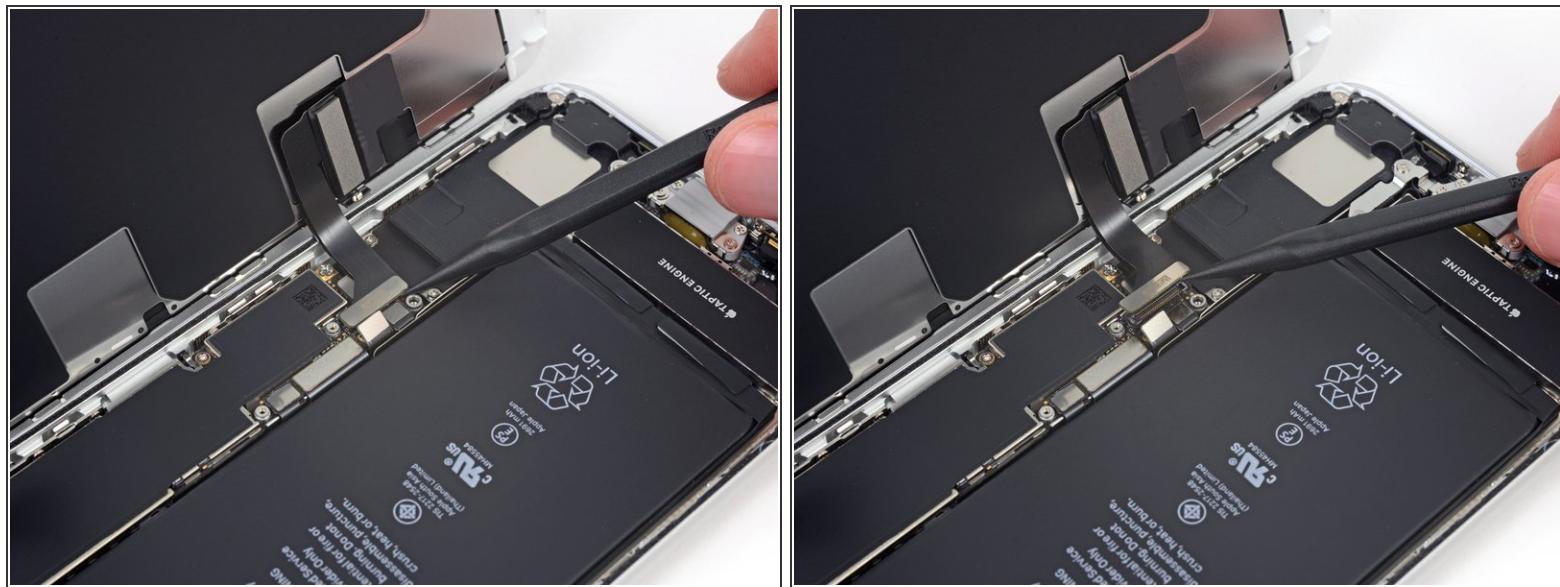


- Use the tip of a spudger or a fingernail to disconnect the large lower display connector by prying it straight up from its socket.
- ☒ To re-attach press connectors like this one, press down on one side until it clicks into place, then repeat on the other side. Do not press down on the middle. If the connector is even slightly misaligned, the connector can bend, causing permanent damage.

## Step 16

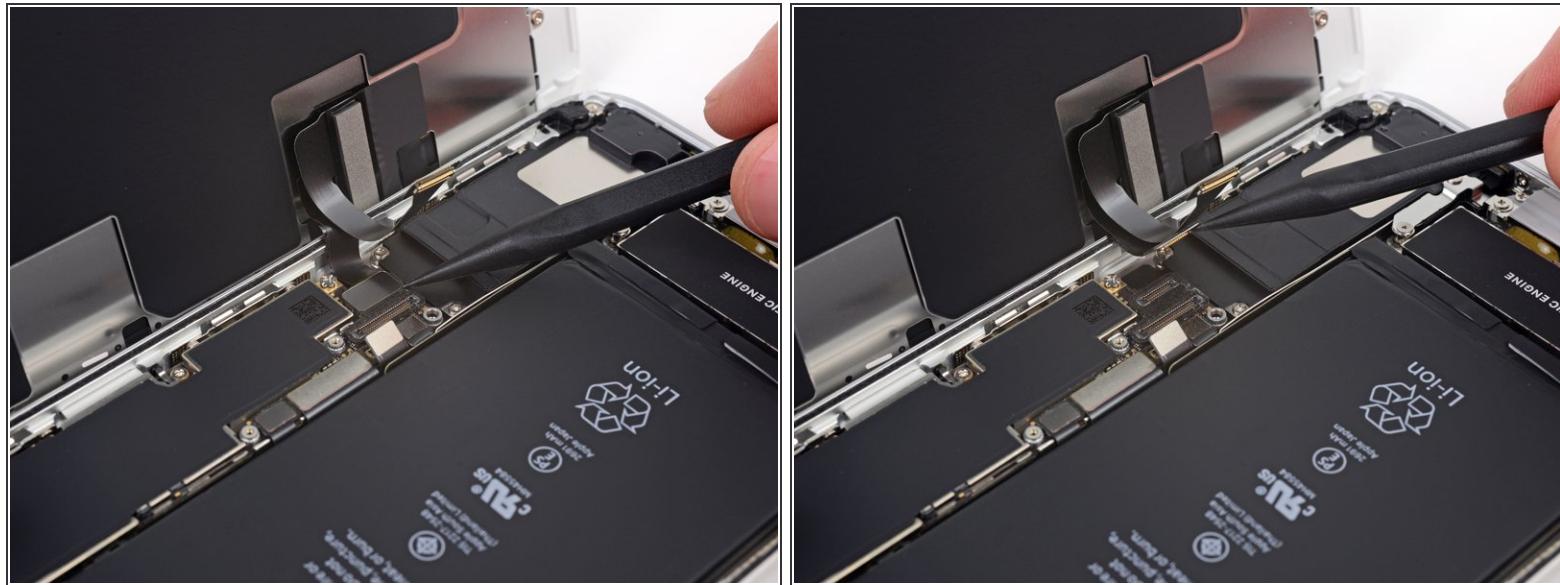

- Disconnect the second lower display cable connector, directly behind the one you disconnected in the previous step.

## Step 17

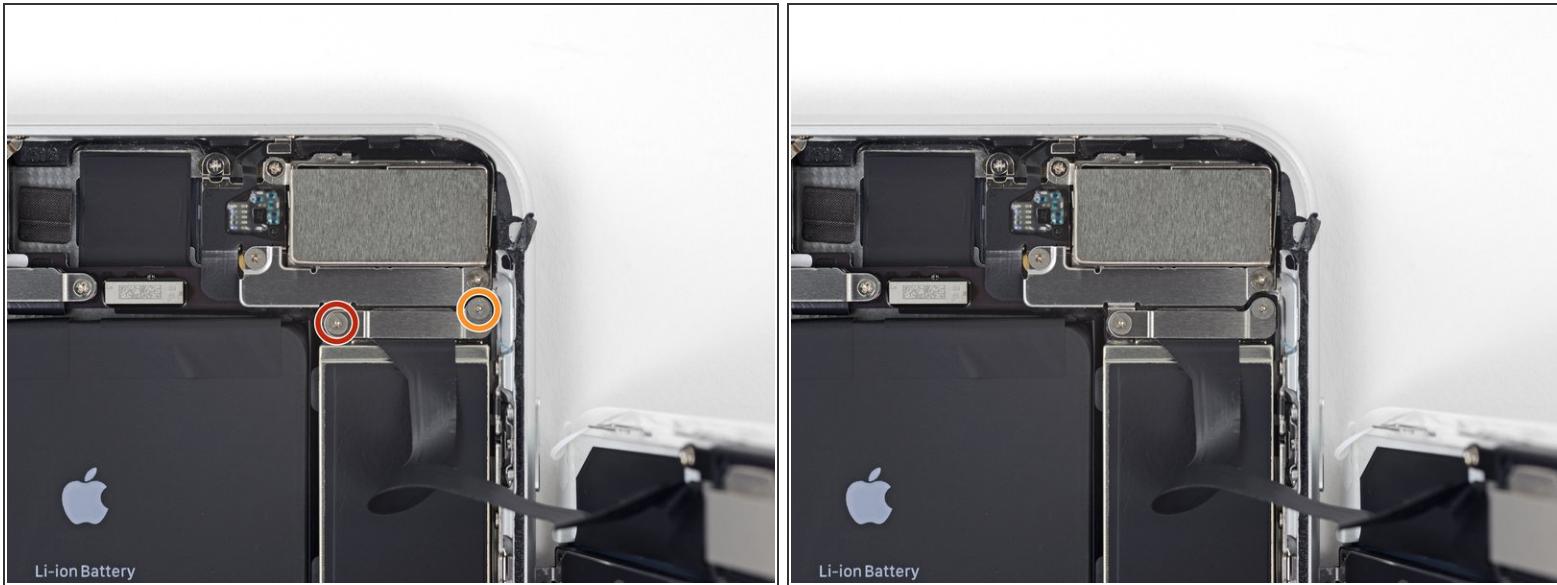

- Remove the two tri-point Y000 screws securing the bracket over the front panel sensor assembly connector:
  - One 1.0 mm screw
  - One 1.2 mm screw

## Step 18



- Remove the bracket covering the front panel sensor assembly connector.

## Step 19



- Use the tip of a spudger or a fingernail to disconnect the front panel sensor assembly connector from its socket.


## Step 20



- Remove the display assembly.

☞ During reassembly, pause here if you wish to [replace the adhesive around the edges of the display](#).


## Step 21 — Home/Touch ID Sensor

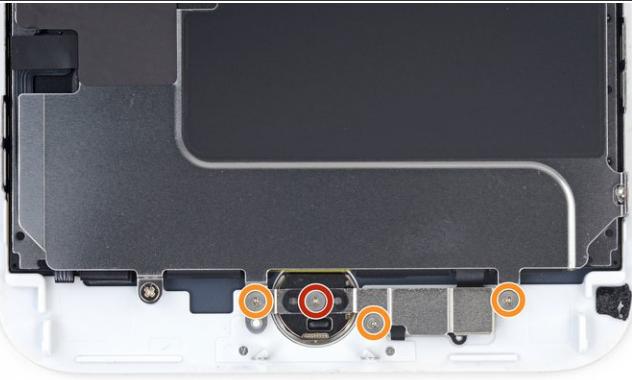

- Remove the four Y000 screws securing the bracket over the home/Touch ID sensor:
  - One 1.2 mm screw
  - Three 1.3 mm screws

 During reassembly, be careful not to overtighten these screws, or your home button may not work.

## Step 22

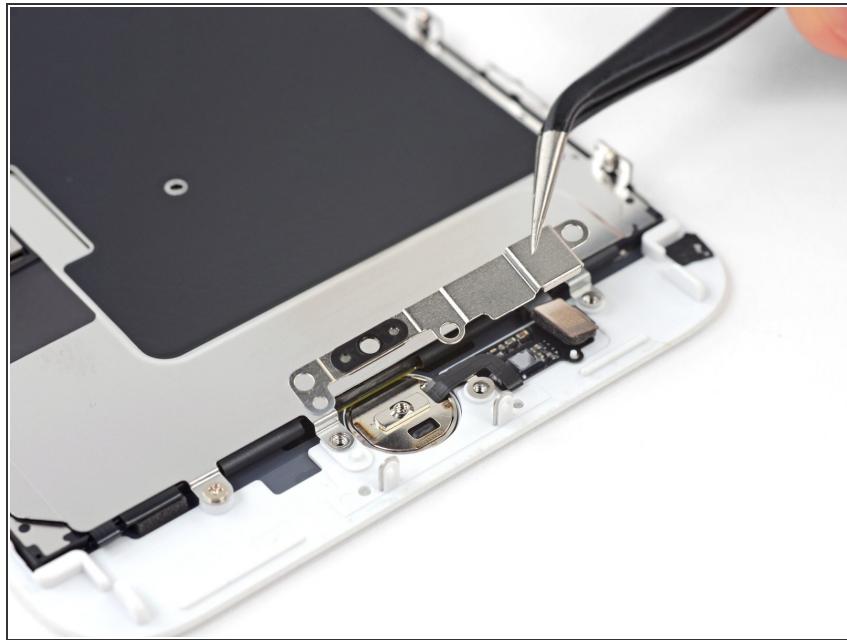

- Remove the bracket that secures the home/Touch ID sensor.

## Step 23



- Pry under the left edge of the home button cable connector to disconnect it from its socket.

**⚠** If the entire connector begins to flip up without separating, press down on the cable at the top edge of the connector with the flat of your spudger, while simultaneously prying up the left edge of the connector. Be very careful not to damage the cable or connector, or you will permanently disable the sensor.

## Step 24



**i** Heating the area around the home/Touch ID sensor will help soften the adhesive holding its delicate cable in place, making it easier to remove safely.

- Flip the display assembly over. Use a hairdryer or [prepare an iOpener](#) and apply it to the lower edge of the display for about 90 seconds in order to soften up the adhesive underneath.

**⚠** Don't overheat the display. It should be slightly too hot to touch comfortably.

## Step 25



- Use an opening pick to gently separate the adhesive holding the home/Touch ID sensor cable to the back side of the display panel.

## Step 26



- Remove the home/Touch ID sensor assembly by lifting it through the front side of the display.

 To reinstall, first feed the cable through the hole in the front of the display as shown.

 Your replacement part may come with [extra Y000 screws](#) already installed near the Home Button. Remove the unnecessary screws so that you can reinstall the home button bracket.

If your replacement screen did not come with a front camera and cable sensor, [follow these steps](#) to transfer them over.

Compare your new replacement part to the original part—you may need to transfer remaining components or remove adhesive backings from the new part before installing.

**To reassemble your device, follow the above steps in reverse order.**

Take your e-waste to an [R2 or e-Stewards certified recycler](#).

Repair didn't go as planned? Try some [basic troubleshooting](#), or search our [Answers forum](#) for help.