



Administering Network Connectivity on Avaya Aura™ Communication Manager

555-233-504
Issue 14
May 2009

Notice

While reasonable efforts have been made to ensure that the information in this document is complete and accurate at the time of printing, Avaya assumes no liability for any errors. Avaya reserves the right to make changes and corrections to the information in this document without the obligation to notify any person or organization of such changes.

Documentation disclaimer

Avaya shall not be responsible for any modifications, additions, or deletions to the original published version of this documentation unless such modifications, additions, or deletions were performed by Avaya.

End User agree to indemnify and hold harmless Avaya, Avaya's agents, servants and employees against all claims, lawsuits, demands and judgments arising out of, or in connection with, subsequent modifications, additions or deletions to this documentation, to the extent made by End User.

Link disclaimer

Avaya is not responsible for the contents or reliability of any linked Websites referenced within this site or documentation(s) provided by Avaya. Avaya is not responsible for the accuracy of any information, statement or content provided on these sites and does not necessarily endorse the products, services, or information described or offered within them. Avaya does not guarantee that these links will work all the time and has no control over the availability of the linked pages.

Warranty

Avaya provides a limited warranty on this product. Refer to your sales agreement to establish the terms of the limited warranty. In addition, Avaya's standard warranty language, as well as information regarding support for this product, while under warranty, is available to Avaya customers and other parties through the Avaya Support Website: <http://www.avaya.com/support>. Please note that if you acquired the product from an authorized Avaya reseller outside of the United States and Canada, the warranty is provided to you by the said Avaya reseller and not by Avaya.

Licenses

The software license terms available on the Avaya Website, <http://support.avaya.com/licenseinfo/> are applicable to anyone who downloads, uses and/or installs Avaya software, purchased from Avaya Inc., any Avaya affiliate, or an authorized Avaya reseller (as applicable) under a commercial agreement with Avaya or an authorized Avaya reseller. Unless otherwise agreed to by Avaya in writing, Avaya does not extend this license if the software was obtained from anyone other than Avaya, an Avaya affiliate or an Avaya authorized reseller, and Avaya reserves the right to take legal action against you and anyone else using or selling the software without a license. By installing, downloading or using the software, or authorizing others to do so, you, on behalf of yourself and the entity for whom you are installing, downloading or using the software (hereinafter referred to interchangeably as "you" and "end user"), agree to these terms and conditions and create a binding contract between you and Avaya Inc. Or the applicable Avaya affiliate ("Avaya").

Avaya grants End User a license within the scope of the license types described below. The applicable number of licenses and units of capacity for which the license is granted will be one (1), unless a different number of licenses or units of capacity is specified in the Documentation or other materials available to End User. "Designated Processor" means a single stand-alone computing device. "Server" means a Designated Processor that hosts a software application to be accessed by multiple users. "Software" means the computer programs in object code, originally licensed by Avaya and ultimately utilized by End User, whether as stand-alone products or pre-installed on Hardware. "Hardware" means the standard hardware originally sold by Avaya and ultimately utilized by End User.

License types

- Designated System(s) License (DS):
End User may install and use each copy of the Software on only one Designated Processor, unless a different number of Designated Processors is indicated in the Documentation or other materials available to End User. Avaya may require the Designated Processor(s) to be identified by type, serial number, feature key, location or other specific designation, or to be provided by End User to Avaya through electronic means established by Avaya specifically for this purpose.
- Concurrent User License (CU):
End User may install and use the Software on multiple Designated Processors or one or more Servers, so long as only the licensed number of Units are accessing and using the Software at any given time. A "Unit" means the unit on which Avaya, at its sole discretion, bases the pricing of its licenses and can be, without limitation, an agent, port or user, an e-mail or voice mail account in the name of a person or corporate function (e.g., webmaster or helpdesk), or a directory entry in the administrative database utilized by the

Software that permits one user to interface with the Software. Units may be linked to a specific, identified Server.

- Named User License (NU):
End User may: (i) install and use the Software on a single Designated Processor or Server per authorized Named User (defined below); or (ii) install and use the Software on a Server so long as only authorized Named Users access and use the Software. "Named User" means a user or device that has been expressly authorized by Avaya to access and use the Software. At Avaya's sole discretion, a "Named User" may be, without limitation, designated by name, corporate function (for example, webmaster or helpdesk), an e-mail or voice mail account in the name of a person or corporate function, or a directory entry in the administrative database utilized by the Software that permits one user to interface with the Software.
- Shrinkwrap License (SR):
Customer may install and use the Software in accordance with the terms and conditions of the applicable license agreements, such as "shrinkwrap" or "clickthrough" license accompanying or applicable to the Software ("Shrinkwrap License"). (See Third-party Components for more information).

Copyright

Except where expressly stated otherwise, no use should be made of materials on this site, the Documentation(s) and Product(s) provided by Avaya. All content on this site, the documentation(s) and the product(s) provided by Avaya including the selection, arrangement and design of the content is owned either by Avaya or its licensors and is protected by copyright and other intellectual property laws including the sui generis rights relating to the protection of databases. You may not modify, copy, reproduce, republish, upload, post, transmit or distribute in any way any content, in whole or in part, including any code and software. Unauthorized reproduction, transmission, dissemination, storage, and or use without the express written consent of Avaya can be a criminal, as well as a civil, offense under the applicable law.

Third Party Components

Certain software programs or portions thereof included in the Product may contain software distributed under third party agreements ("Third Party Components"), which may contain terms that expand or limit rights to use certain portions of the Product ("Third Party Terms"). Information regarding distributed Linux OS source code (for those Products that have distributed the Linux OS source code), and identifying the copyright holders of the Third Party Components and the Third Party Terms that apply to them is available on the Avaya Support Website: <http://support.avaya.com/Copyright>.

Preventing toll fraud

"Toll fraud" is the unauthorized use of your telecommunications system by an unauthorized party (for example, a person who is not a corporate employee, agent, subcontractor, or is not working on your company's behalf). Be aware that there can be a risk of toll fraud associated with your system and that, if toll fraud occurs, it can result in substantial additional charges for your telecommunications services.

Avaya fraud intervention

If you suspect that you are being victimized by toll fraud and you need technical assistance or support, call Technical Service Center Toll Fraud Intervention Hotline at +1-800-643-2353 for the United States and Canada. For additional support telephone numbers, see the Avaya Support Website:

<http://www.support.avaya.com/>.

Suspected security vulnerabilities with Avaya products should be reported to Avaya by sending mail to: securityalerts@avaya.com.

Trademarks

Avaya® and Avaya Aura™ are trademarks of Avaya Inc.

The trademarks, logos and service marks ("Marks") displayed in this site, the documentation(s) and product(s) provided by Avaya are the registered or unregistered Marks of Avaya, its affiliates, or other third parties. Users are not permitted to use such Marks without prior written consent from Avaya or such third party which may own the Mark. Nothing contained in this site, the documentation(s) and product(s) should be construed as granting, by implication, estoppel, or otherwise, any license or right in and to the Marks without the express written permission of Avaya or the applicable third party. All non-Avaya trademarks are the property of their respective owners.

Downloading documents

For the most current versions of documentation, see the Avaya Support Website: <http://www.avaya.com/support>.

Contact Avaya Support

Avaya provides a telephone number for you to use to report problems or to ask questions about your product. The support telephone number is 1-800-242-2121 in the United States. For additional support telephone numbers, see the Avaya Website: <http://www.avaya.com/support>.

Notice

Every effort was made to ensure that the information in this document was complete and accurate at the time of printing. However, information is subject to change.

Warranty

Avaya Inc. provides a limited warranty on this product. Refer to your sales agreement to establish the terms of the limited warranty. In addition, Avaya's standard warranty language as well as information regarding support for this product, while under warranty, is available through the following Web site: <http://www.avaya.com/support>.

Preventing Toll Fraud

"Toll fraud" is the unauthorized use of your telecommunications system by an unauthorized party (for example, a person who is not a corporate employee, agent, subcontractor, or is not working on your company's behalf). Be aware that there may be a risk of toll fraud associated with your system and that, if toll fraud occurs, it can result in substantial additional charges for your telecommunications services.

Avaya Fraud Intervention

If you suspect that you are being victimized by toll fraud and you need technical assistance or support, in the United States and Canada, call the Technical Service Center's Toll Fraud Intervention Hotline at 1-800-643-2353.

Disclaimer

Avaya is not responsible for any modifications, additions or deletions to the original published version of this documentation unless such modifications, additions or deletions were performed by Avaya. Customer and/or End User agree to indemnify and hold harmless Avaya, Avaya's agents, servants and employees against all claims, lawsuits, demands and judgments arising out of, or in connection with, subsequent modifications, additions or deletions to this documentation to the extent made by the Customer or End User.

How to Get Help

For additional support telephone numbers, go to the Avaya support Web site: <http://www.avaya.com/support>. If you are:

- Within the United States, click the *Escalation Contacts* link that is located under the *Support Tools* heading. Then click the appropriate link for the type of support that you need.
- Outside the United States, click the *Escalation Contacts* link that is located under the *Support Tools* heading. Then click the *International Services* link that includes telephone numbers for the international Centers of Excellence.

Providing Telecommunications Security

Telecommunications security (of voice, data, and/or video communications) is the prevention of any type of intrusion to (that is, either unauthorized or malicious access to or use of) your company's telecommunications equipment by some party.

Your company's "telecommunications equipment" includes both this Avaya product and any other voice/data/video equipment that could be accessed via this Avaya product (that is, "networked equipment").

An "outside party" is anyone who is not a corporate employee, agent, subcontractor, or is not working on your company's behalf. Whereas, a "malicious party" is anyone (including someone who may be otherwise authorized) who accesses your telecommunications equipment with either malicious or mischievous intent.

Such intrusions may be either to/through synchronous (time-multiplexed and/or circuit-based), or asynchronous (character-, message-, or packet-based) equipment, or interfaces for reasons of:

- Utilization (of capabilities special to the accessed equipment)
- Theft (such as, of intellectual property, financial assets, or toll facility access)
- Eavesdropping (privacy invasions to humans)
- Mischief (troubling, but apparently innocuous, tampering)
- Harm (such as harmful tampering, data loss or alteration, regardless of motive or intent)

Be aware that there may be a risk of unauthorized intrusions associated with your system and/or its networked equipment. Also realize that, if such an intrusion should occur, it could result in a variety of losses to your company (including but not limited to, human/data privacy, intellectual property, material assets, financial resources, labor costs, and/or legal costs).

Responsibility for Your Company's Telecommunications Security

The final responsibility for securing both this system and its networked equipment rests with you - Avaya's customer system administrator, your telecommunications peers, and your managers. Base the fulfillment of your responsibility on acquired knowledge and resources from a variety of sources including but not limited to:

- Installation documents
- System administration documents
- Security documents
- Hardware-/software-based security tools
- Shared information between you and your peers
- Telecommunications security experts

To prevent intrusions to your telecommunications equipment, you and your peers should carefully program and configure:

- Your Avaya-provided telecommunications systems and their interfaces
- Your Avaya-provided software applications, as well as their underlying hardware/software platforms and interfaces
- Any other equipment networked to your Avaya products

TCP/IP Facilities

Customers may experience differences in product performance, reliability and security depending upon network configurations/design and topologies, even when the product performs as warranted.

Product Safety Standards

This product complies with and conforms to the following international Product Safety standards as applicable:

- IEC 60950 or IEC 60950-1, including all relevant national deviations as listed in the IECCE Bulletin—Product Category OFF: IT and Office Equipment.
- CAN/CSA-C22.2 No. 60950 / UL 60950 or CAN/CSA-C22.2 No. 60950-1 / UL 60950-1.

This product may contain Class 1 laser devices.

- Class 1 Laser Product
- Luokan 1 Laserlaite
- Klass 1 Laser Apparat

Electromagnetic Compatibility (EMC) Standards

This product complies with and conforms to the following international EMC standards, as applicable:

- CISPR 22, including all national standards based on CISPR 22.
- CISPR 24, including all national standards based on CISPR 24.
- IEC 61000-3-2 and IEC 61000-3-3.

Avaya Inc. is not responsible for any radio or television interference caused by unauthorized modifications of this equipment or the substitution or attachment of connecting cables and equipment other than those specified by Avaya Inc. The correction of interference caused by such unauthorized modifications, substitution or attachment will be the responsibility of the user. Pursuant to Part 15 of the Federal Communications Commission (FCC) Rules, the user is cautioned that changes or modifications not expressly approved by Avaya Inc. could void the user's authority to operate this equipment.

Federal Communications Commission Part 15 Statement:

For a Class A digital device or peripheral:

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

For a Class B digital device or peripheral:

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Equipment With Direct Inward Dialing ("DID"):

Allowing this equipment to be operated in such a manner as to not provide proper answer supervision is a violation of Part 68 of the FCC's rules.

Proper Answer Supervision is when:

A. This equipment returns answer supervision to the public switched telephone network (PSTN) when DID calls are:

- answered by the called station,
- answered by the attendant,
- routed to a recorded announcement that can be administered by the customer premises equipment (CPE) user
- Routed to a dial prompt

B. This equipment returns answer supervision signals on all (DID) calls forwarded back to the PSTN.

Permissible exceptions are:

- A call is unanswered
- A busy tone is received
- A reorder tone is received

Avaya attests that this registered equipment is capable of providing users access to interstate providers of operator services through the use of access codes. Modification of this equipment by call aggregators to block access dialing codes is a violation of the Telephone Operator Consumers Act of 1990.

Automatic Dialers:

When programming emergency numbers and (or) making test calls to emergency numbers:

- Remain on the line and briefly explain to the dispatcher the reason for the call.
- Perform such activities in the off-peak hours, such as early morning or late evenings.

Toll Restriction and least Cost Routing Equipment:

The software contained in this equipment to allow user access to the network must be upgraded to recognize newly established network area codes and exchange codes as they are placed into service.

Failure to upgrade the premises systems or peripheral equipment to recognize the new codes as they are established will restrict the customer and the customer's employees from gaining access to the network and to these codes.

For equipment approved prior to July 23, 2001:

This equipment complies with Part 68 of the FCC rules. On either the rear or inside the front cover of this equipment is a label that contains, among other information, the FCC registration number, and ringer equivalence number (REN) for this equipment. If requested, this information must be provided to the telephone company.

For equipment approved after July 23, 2001:

This equipment complies with Part 68 of the FCC rules and the requirements adopted by the Administrative Council on Terminal Attachments (ACTA). On the rear of this equipment is a label that contains, among other information, a product identifier in the format US:AAAEQ##TXXX. If requested, this number must be provided to the telephone company.

The REN is used to determine the quantity of devices that may be connected to the telephone line. Excessive RENs on the telephone line may result in devices not ringing in response to an incoming call. In most, but not all areas, the sum of RENs should not exceed 5.0. To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company. For products

approved after July 23, 2001, the REN for this product is part of the product identifier that has the format US:AAAEQ##TXXX. The digits represented by ## are the REN without a decimal point (for example, 03 is a REN of 0.3). For earlier products, the REN is separately shown on the label.

Means of Connection:

Connection of this equipment to the telephone network is shown in the following table:

Manufacturer's Port Identifier	FIC Code	SOC/ REN/A.S. Code	Network Jacks
Off premises station	OL13C	9.0F	RJ2GX, RJ21X, RJ11C
DID trunk	02RV2.T	AS.2	RJ2GX, RJ21X, RJ11C
CO trunk	02GS2	0.3A	RJ21X, RJ11C
	02LS2	0.3A	RJ21X, RJ11C
Tie trunk	TL31M	9.0F	RJ2GX
Basic Rate Interface	02IS5	6.0F, 6.0Y	RJ49C
1.544 digital interface	04DU9.BN	6.0F	RJ48C, RJ48M
	04DU9.1KN	6.0F	RJ48C, RJ48M
	04DU9.1SN	6.0F	RJ48C, RJ48M
120A4 channel service unit	04DU9.DN	6.0Y	RJ48C

If this equipment causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice is not practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of the equipment. If this happens, the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service.

If trouble is experienced with this equipment, for repair or warranty information, please contact the Technical Service Center at 1-800-242- 2121 or contact your local Avaya representative. If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved.

A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant.

Connection to party line service is subject to state tariffs. Contact the state public utility commission, public service commission or corporation commission for information.

Installation and Repairs

Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

Repairs to certified equipment should be coordinated by a representative designated by the supplier. It is recommended that repairs be performed by Avaya certified technicians.

FCC Part 68 Supplier's Declarations of Conformity

Avaya Inc. in the United States of America hereby certifies that the equipment described in this document and bearing a TIA TSB-168 label identification number complies with the FCC's Rules and Regulations 47 CFR Part 68, and the Administrative Council on Terminal Attachments (ACTA) adopted technical criteria.

Avaya further asserts that Avaya handset-equipped terminal equipment described in this document complies with Paragraph 68.316 of the FCC Rules and Regulations defining Hearing Aid Compatibility and is deemed compatible with hearing aids.

Copies of SDoCs signed by the Responsible Party in the U. S. can be obtained by contacting your local sales representative and are available on the following Web site: <http://support.avaya.com/DoC>.

Canadian Conformity Information

This Class A (or B) digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe A (ou B) est conforme à la norme NMB-003 du Canada.

This product meets the applicable Industry Canada technical specifications/Le présent matériel est conforme aux spécifications techniques applicables d'Industrie Canada.

European Union Declarations of Conformity



Avaya Inc. declares that the equipment specified in this document bearing the "CE" (Conformité Européenne) mark conforms to the European Union Radio and Telecommunications Terminal Equipment Directive (1999/5/EC), including the Electromagnetic Compatibility Directive (2004/108/EC) and Low Voltage Directive (2006/95/EC).

Copies of these Declarations of Conformity (DoCs) can be obtained by contacting your local sales representative and are available on the following Web site: <http://support.avaya.com/DoC>.

European Union Battery Directive



Avaya Inc. supports European Union Battery Directive 2006/66/EC. Certain Avaya Inc. products contain lithium batteries. These batteries are not customer or field replaceable parts. Do not disassemble. Batteries may pose a hazard if mishandled.

Japan

The power cord set included in the shipment or associated with the product is meant to be used with the said product only. Do not use the cord set for any other purpose. Any non-recommended usage could lead to hazardous incidents like fire disaster, electric shock, and faulty operation.

本製品に同梱または付属している電源コードセットは、本製品専用です。本製品以外の製品ならびに他の用途で使用しないでください。火災、感電、故障の原因となります。

If this is a Class A device:

This is a Class A product based on the standard of the Voluntary Control Council for Interference by Information Technology Equipment (VCCI). If this equipment is used in a domestic environment, radio disturbance may occur, in which case, the user may be required to take corrective actions.

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラス A 情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

If this is a Class B device:

This is a Class B product based on the standard of the Voluntary Control Council for Interference from Information Technology Equipment (VCCI). If this is used near a radio or television receiver in a domestic environment, it may cause radio interference. Install and use the equipment according to the instruction manual.

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラス B 情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。取扱説明書に従って正しい取り扱いをして下さい。

Downloading documents

For the most current versions of documentation, see the Avaya Support Web site:

<http://www.avaya.com/support>

Contents

Chapter 1: Networking overview	15
About “network” terminology	15
About digital telephone calls	16
About network regions	16
Establishing inter-switch trunk connections	17
Interconnecting port networks	17
Networking branch offices	18
Control networks	18
Enabling spanning tree protocol (STP)	18
Inter-Gateway Alternate Routing (IGAR)	19
Dial Plan Transparency	19
Network quality management	19
About VoIP-transmission hardware	20
Processor Ethernet (PE)	21
Support for Processor Ethernet and Port Networks on an ESS server	21
Firmware for optimal performance	22
Providing LAN security	22
Connection Preservation	23
Session refresh handling	24
Connection Preserving Migration	24
H.248 and H.323 Link Recovery	24
Auto fallback to primary	25
Local Survivable Processor (LSP)	25
Enterprise Survivable Server (ESS)	25
Standard Local Survivability (SLS)	25
Chapter 2: Port network configurations	
with S8500-series and S8700-series Servers	27
Fiber-PNC and IP-PNC	27
Reliability	28
S8500-series Server	28
S8700-series Server	28
S8500-series IP-PNC (single control network)	30
Duplicated TN2602AP circuit packs in IP-PNC PNs	31
S8500-series direct-connect (single control network)	33
TN2602AP circuit packs for duplicated bearer	35
Rules for TN570B circuit pack placement with SCC1/MCC1	
Media Gateways	35

Contents

S8700-series IP-PNC (single control network)	37
S8700-series IP-PNC (duplicated control network)	40
S8700-series IP-PNC (duplicated control and duplicated bearer network)	42
S8700-series direct-connect (single control network)	44
TN2602AP circuit packs for duplicated bearer.	46
S8700-series direct-connect (duplicated control network)	48
S8700-series direct-connect (duplicated control and bearer networks)	50
Rules for TN570B circuit pack placement with SCC1/MCC1 Media Gateways	52
S8700-series Center Stage Switch (single control network)	54
TN2602AP circuit packs for duplicated bearer.	56
S8700-series Center Stage Switch (duplicated control network).	59
TN2602AP circuit packs for duplicated bearer.	59
S8700-series Center Stage Switch (duplicated control and bearer networks)	62
TN2602AP circuit packs for duplicated bearer.	62
S8700-series ATM Switch (single control network)	65
TN2602AP circuit packs for duplicated bearer.	65
S8700-series ATM Switch (duplicated control networks)	70
TN2602AP circuit packs for duplicated bearer.	70
S8700-series ATM Switch (duplicated control and bearer networks)	73
TN2602AP circuit packs for duplicated bearer.	73
Distance options with fiber-optic connections	76
Fiber connections up to 200 feet (61 meters)	76
Fiber connections up to 22 miles (35.4 kilometers)	78
Fiber connection up to 200 miles	80
Metallic cable for intracabinet connections	81
Configurations with both IP-PNC and fiber-PNC PNs	82
Possibilities for combining IP-PNC and fiber-PNC PNs in a configuration.	83
Media gateway combinations	84
Options for multiple levels of reliability	86
Administering an S8700-series Server for duplicated and single control networks	86
Dedicated and non-dedicated control networks.	86
Requirements for using both IP-PNC and fiber-PNC PNs.	86
TN2602AP circuit packs in fiber-PNC PNs	88
Examples of combining IP-PNC and fiber-PNC PNs	88
Example of combining direct- and IP-PNC PNs	88
Example of IP-PNC PNs with different reliability levels	90
Example of combining IP- and fiber-PNC PNs with different reliability levels	92

Example of combining IP- and ATM-connected PNs and different reliability levels	95
MCC1 Media Gateway with IP-PNC PNs or a combination of IP- and fiber-PNC PNs	97
Options for IP-PNC PNs in an MCC1 Media Gateway	98
Options for combined IP- and fiber-PNC PNs in an MCC1 Media Gateway (single control network)	99
Options for combined IP- and fiber-PNC PNs in an MCC1 Media Gateway (duplicated control networks)	99
Options for combined IP- and fiber-PNC PNs in an MCC1 Media Gateway (duplicated control and bearer networks)	100
Example of MCC1 IP-PNC	101
Example of MCC1 with IP- and fiber-PNC PNs	103
ESS support for combined IP- and fiber-PNC PNs	106
Chapter 3: Control Networks for S8700-Series and S8500-series Servers	107
Combining fiber-PNC and IP-PNC in a single configuration	108
Layer 2 connectivity options	109
Layer 3 connectivity options	111
Control network C	112
CNC configuration: Multi-site private CNA, CNB, with remote PNs on the enterprise LAN	113
Control network on customer LAN (CNOCL)	115
CNOCL configuration — not recommended	121
Network administration for Figure 32	122
Preferred CNOCL configuration	123
Network administration for Figure 33	124
Chapter 4: Administering converged networks	125
About Voice over IP converged networks	125
Providing a network assessment.	126
Setting up VoIP hardware	127
About Universal DS1 circuit packs and MM710 T1/E1Media Module	127
Working with echo cancellation	127
Administering echo cancellation on the DS1 circuit pack or MM710 media module	128
Administering echo cancellation on trunks	130
About the TN799DP Control LAN	132
Physical addressing for the C-LAN board	132

Contents

IP addressing techniques for the C-LAN board	133
Installing the TN799DP C-LAN	133
Administering the C-LAN bus bridge (Avaya DEFINITY Server csi only)	133
Installing C-LAN cables to a hub or ethernet switch	134
Assigning IP node names	135
Defining a LAN default gateway	136
Setting up Alternate Gatekeeper and C-LAN load balancing	136
About the TN2302AP IP Media Processor	138
Improving theTN2302AP transmission interface	139
Supporting TN2302AP hairpinning	139
Testing TN2302AP ports.	139
Enabling a survivable remote EPN	139
About the TN2602AP IP Media Resource 320	139
Load balancing.	140
Bearer duplication	140
Combining duplication and load balancing	141
Features	142
Firmware download	142
I/O adapter	143
About the TN2312BP IP Server Interface (IPSI)	143
Detailed description	144
Firmware requirements	144
IP Server Interface parameters	144
Communication Manager alarm on settings mismatch	145
Default settings of IPSI QoS parameters	146
Backward compatibility	146
About the MM760 VoIP Media Module	147
MM760 Ethernet interface	147
Voice compression on the MM760	147
TN8400AP Server circuit pack	148
TN8412AP S8400 server IP Interface	148
Administering Avaya gateways	150
Administering IP trunks	150
Administering SIP trunks	150
Administering H.323 trunks	151
Setting up H.323 trunks for administration	151
Completing H.323 trunk administration	163
Dynamic generation of private/public calling party numbers.	171
Administering Avaya phones	172

Administering IP Softphones	172
Administering a Telecommuter phone	173
Administering a Road-warrior phone.	175
Installing and administering Avaya IP telephones	176
About the 4600-series IP telephones	177
About the 9600-series IP telephones	177
About the 1600-series IP telephones	178
About IP telephone hardware/software requirements.	178
Administering Avaya IP telephones	180
About hairpinning and shuffling	181
What hardware and endpoints are required	182
About shuffled audio connections	182
Examples of shuffling	183
About hairpinned audio connections.	185
Example of a hairpinned call	186
Hairpinning and shuffling administration interdependencies	188
About Network Address Translation (NAT)	189
What are the types of NAT	190
What are the issues between NAT and H.323	191
About the Communication Manager NAT Shuffling feature	191
Administering hairpinning and shuffling.	192
Choosing how to administer hairpinning and shuffling.	192
Administering hairpinning and shuffling at the system-level.	193
Administering hairpinning and shuffling in network regions.	195
Administering H.323 trunks for hairpinning and shuffling	198
Administering IP endpoints for hairpinning and shuffling	199
Administering FAX, modem, TTY, and H.323 clear channel calls over IP Trunks .	202
What is relay mode	202
What is pass-through mode.	203
Overview of steps to administer FAX, TTY, modem, and clear channel calls over IP trunks	204
FAX, TTY, modem, and clear channel transmission modes and speeds . . .	206
Considerations for administering FAX, TTY, modem, and clear channel transmission	209
Bandwidth for FAX, modem, TTY, and clear channel calls over IP networks .	212
Media encryption for FAX, modem, TTY, and clear channel	213
SRTP media encryption	214
Platforms	214
Administering SRTP.	215

Chapter 5: Voice and Network quality administration	217
About factors causing voice degradation	218
Packet delay and loss	219
Echo	220
Echo cancellers	220
Echo cancellation plans (TN464HP/TN2464CP circuit packs)	221
Echo cancellation plans (TN464GP/TN2464BP circuit packs)	222
Transcoding	225
Bandwidth	225
About Quality of Service (QoS) and voice quality administration	226
Layer 3 QoS	226
DiffServ	226
RSVP	227
Layer 2 QoS: 802.1p/Q.	227
Using VLANs	228
Administering IP CODEC sets	230
Administering IP network regions	238
Defining an IP network region	240
Call Admission Control	246
Setting up Inter-Gateway Alternate Routing (IGAR)	251
Setting up Dial Plan Transparency	252
Network Region Wizard (NRW)	255
Manually interconnecting the network regions	256
Administering inter-network region connections	257
Pair-wise administration of IGAR between network regions	258
Port network to network region mapping for boards other than IP boards	260
Status of inter-region usage	261
Reviewing the network region administration	262
Setting network performance thresholds	262
Enabling spanning tree protocol (STP).	264
Adjusting jitter buffers	266
Configuring UDP ports	266
About Media Encryption.	267
What is Media Encryption?	267
What are the limitations of Media Encryption?	268
What types of media encryption are available?	268
Is there a license file requirement?	271
Is Media Encryption currently enabled?	271
Administering Media Encryption	272

Administering Media Encryption for IP Codec Sets	272
Administering Media Encryption for signaling groups	274
Viewing encryption status for stations and trunks	276
About legal wiretapping	276
About possible failure conditions	276
How does Media Encryption interact with other features?	277
Network recovery and survivability	278
About network management	278
Monitoring network performance	278
Controlling QoS policies	279
About H.248 link loss recovery	281
Auto fallback to primary controller for H.248 media gateways	281
Basic feature operation	283
G250 interworking	284
G350 interworking	284
G700 interworking	285
Older media gateway loads	285
Administering auto fallback to primary	285
Administrable IPSI Socket Sanity Timeout.	292
Enterprise Survivable Servers (ESS)	293
Improved Port Network Recovery from Control Network Outages.	295
Port Network Recovery Rules screen	296
No Service Time Out Interval	297
Field description	297
PN Cold Reset Delay Timer (sec)	297
Configuration impacts on availability	297
Survivability	297
Index	299

Chapter 1: Networking overview

This chapter provides background information to help you understand and use the information in this book. Telephony delivered over digital networks capitalizes on the flexibility of technology itself, and can be implemented in a variety of ways. Users might find that they need to reference only a portion of the information in this book. Other readers might need most of its information before understanding how to tailor a telephony network to suit their needs.

About “network” terminology

The Communication Manager *network* can contain multiple interconnected servers and all of the equipment, including data networking devices, controlled by those servers. Such equipment may be geographically dispersed among a variety of sites, and the equipment at each site may be segregated into distinct logical groupings, referred to as *network regions*. A single server system has one or more *network regions*. Each *network region* is a logical grouping of endpoints, including stations, trunks, and media gateways. In cases where one server is insufficient for controlling all of the equipment, multiple systems can be networked together. So, one or more *network region(s)* comprise a *site*, and one or more sites comprise a *system*, which in turn is a component of a *network*.

For the purposes of this book and to clarify what we mean by the word, consider these uses of the word “network”:

- Businesses often have a “corporate network,” meaning a Local Area Network (LAN) or a Wide Area Network (WAN), over which they distribute E-mail, data files, run applications, access the Internet, and send and receive fax and modem calls.

We use *non-dedicated* to describe this type of network and the traffic that it bears. This means that the network is a heterogeneous mix of data types.

- When a non-dedicated network carries digitized voice signals along with other data types, we call this a *converged* network, because it is a confluence of voice and non-voice data.
- Network segments that exclusively carry telephony traffic are *dedicated*, since they carry only telephony-related information.
- When a digital network carries telephony and non-telephony data in a packet-switched (TCP/IP), instead of a circuit-switched (TDM) environment, we call this an *IP network*.

About digital telephone calls

A digital phone call consists of voice (bearer) data and call-signaling messages. Some transmission protocols require sending signaling data over a separate network, virtual path, or “channel,” from the voice data. The following list describes the data that are transmitted between switches during a phone call:

- Voice (bearer) data — digitized voice signals
- Call-signaling data — control messages
 - Set up the call connection
 - Maintain the connection during the call
 - Tear down the connection when the call is finished
- Distributed Communications System (DCS) signaling data — an Avaya DEFINITY® Server proprietary signaling protocol also supported by Avaya IP Telephony Systems.

Distributed Communications System (DCS) allows two or more communications switches to be configured as if they were a single switch. DCS provides attendant and voice-terminal features between these switch locations. DCS simplifies dialing procedures and allows transparent use of some Communication Manager features. Feature transparency means that features are available to all users on DCS regardless of the switch location.

About network regions

A network region is a group of IP endpoints that share common characteristics and resources. Every IP endpoint on the Communication Manager system belongs to a network region.

By default, all IP endpoints are in network region 1. If left that way, all IP endpoints would all share the same characteristics defined by network region 1 and use the same resources. But in many cases, this is not sufficient to allow for certain differences that may be based upon location or network characteristic, and therefore multiple network regions should be configured.

The most common of these cases are:

- One group of endpoints requires a different CODEC (COder-DECoder) set than another group.

This could be based on requirements related to bandwidth or encryption.
- Calls between separate groups of endpoints require a different codec set than calls within a single group of endpoints, again based on requirements related to bandwidth or encryption.
- Specific C-LAN or MedPro or other resources must be accessible to only a specific group of endpoints.

- One group of endpoints requires a different UDP port range or QoS parameters than another group.
- One group of endpoints reports to a different VoIP Monitoring Manager server than another group.

Somewhat related to network regions is the concept of locations. The *location* parameter is used to identify distinct geographic locations, primarily for call routing purposes. In other words, the location parameter is used primarily to ensure that calls access the proper trunks, based on the origin and destination of each call.

Establishing inter-switch trunk connections

Connected switches enable people within an enterprise to communicate easily with one another, regardless of their physical location or the particular communications server they use. Inter-switch connections also provide shared communications resources such as messaging and Call Center services.

Switches communicate with each other over trunk connections. There many types of trunks that provide different sets of services. Commonly-used trunk types are:

- Central Office (CO) trunks that provide connections to the public telephone network through a central office.
- H.323 trunks that transmit voice and fax data over the Internet to other systems with H.323 trunk capability.
H.323 trunks that support DCS+ and QSIG signaling.
- Tie trunks that provide connections between switches in a private network.

These and other common trunk types are described in the *Administering Avaya Aura™ Communication Manager*, 03-300509.

Interconnecting port networks

Note:

See [Chapter 2: Port network configurations with S8500-series and S8700-series Servers](#) on page 27 for detailed examples of IP-connected (IP-PNC) and fiber-connected (fiber-PNC) port networks.

Avaya systems with more than three fiber-connected port networks (fiber-PNC, formerly called "Multi-Connect") must use a center stage switch (CSS) or an ATM configuration to interconnect the port networks.

Networking branch offices

For Communication Manager environments, The MultiVOIP™ voice over IP gateways (Multi-Tech Systems, Inc.) provide distributed networking capabilities to small branch offices of large corporations. MultiVOIP extends the call features of a centralized Avaya Server and provides local office survivability to branch offices of up to 15 users using analog or IP phones.

For more information, see: <http://www.multitech.com/PARTNERS/Alliances/Avaya/>.

Control networks

Control networks are the networks over which servers, such as the S8700-series or S8500-series Servers, exchange signaling data with the port networks through the IPSI circuit packs.

With Communication Manager 3.0 and later, Avaya extends “Control Network on Customer LAN” functionality to simplify network configuration by allowing both IP-PNC and fiber-PNC port networks in a single configuration. With this combined port network functionality, enterprises can attach IP-connected, ATM-connected, or center-stage-connected port networks to their S8700-series or S8500-series servers.

To support combined port networks, Avaya has enhanced the flexibility of control networks for port network attachment. In addition to private control networks A and B, Avaya allows the “Customer LAN” Ethernet interface to be used as a third, public control network, control network C.

Note:

See [Chapter 3: Control Networks for S8700-Series and S8500-series Servers](#) on page 107 for more information about control networks.

Enabling spanning tree protocol (STP)

Spanning Tree Protocol (STP) is a loop avoidance protocol. If you don't have loops in your network, you don't need STP. The “safe” option is to always leave STP enabled. Failure to do so on a network with a loop (or a network where someone inadvertently plugs the wrong cable into the wrong ports) can lead to a complete cessation of all traffic.

However, STP is slow to converge after a network failure, and slow to allow a new port into the network (~50 sec by default).

A modified version of STP, Rapid Spanning Tree converges faster than the earlier STP, and enables new ports much faster (sub-second) than the older protocol. **Rapid Spanning Tree** works with all Avaya equipment, and is *recommended* by Avaya.

Inter-Gateway Alternate Routing (IGAR)

For single-server systems that use the IP-WAN to connect bearer traffic between port networks or media gateways, Inter-Gateway Alternate Routing (IGAR) provides a means of alternately using the PSTN when the IP-WAN is incapable of carrying the bearer connection. IGAR may request that bearer connections be provided by the PSTN under the following conditions:

- The number of calls allocated or bandwidth allocated via Call Admission Control-Bandwidth Limits (CAC-BL) has been reached.
- VoIP RTP resource exhaustion in a MG/PN is encountered.
- A codec set is not specified between a network region pair.
- Forced redirection between a pair of network regions is configured.

IGAR takes advantage of existing public and private-network facilities provisioned in a network region. Most trunks in use today can be used for IGAR. Examples of the better trunk facilities for use by IGAR would be:

- Public or Private ISDN PRI/BRI
- R2MFC

IGAR provides enhanced Quality of Service (QoS) to large distributed single-server configurations.

Dial Plan Transparency

Dial Plan Transparency (DPT) preserves the dial plan when a media gateway registers with an LSP or when a port network registers with an ESS due to the loss of contact with the primary controller. DPT establishes a trunk call and reroutes the call over the PSTN to connect endpoints that can no longer connect over the corporate IP network.

Network quality management

A successful Voice over Internet Protocol (VoIP) implementation involves quality of service (QoS) management that is impacted by three major factors:

- *Delay*: Significant end-to-end delay may result in echo and talker overlap.
- *Packet Loss*: Under peak network loads and periods of congestion, voice data packets may be dropped.
- *Jitter (Delay Variability)*: Jitter results when data packets arrive at their destination at irregular intervals as a result of variable transmission delay over the network.

Note:

For more information about these QOS factors and network quality management, see:

- [Chapter 5: Voice and Network quality administration](#) on page 217
- *Avaya Application Solutions: IP Telephony Deployment Guide*, 555-245-600

About VoIP-transmission hardware

The following circuit packs are essential in an Avaya telecommunications network.

For more information about these and other Avaya hardware devices, see *Avaya Aura™ Communication Manager Hardware Description and Reference*, 555-245-207.

For information about the administration tasks for this equipment, see [Setting up VoIP hardware](#) on page 127.

- TN799DP control LAN (C-LAN) interface

The TN799DP control LAN (C-LAN) interface provides TCP/IP connectivity over Ethernet between servers and gateways or Point to Point Protocol (PPP) between servers and adjuncts.

- TN2312BP IP Server Interface (IPSI)

The IPSI provides for the transport of control messages between servers and port networks.

- TN2302AP IP Media Processor and TN2602AP IP Media Resource 320

The TN2302AP and TN2602AP provide high-capacity VoIP audio access to the switch for local stations and outside trunks.

- TN8400AP Server circuit pack

The TN8400 Server circuit pack is the hardware platform for an S8400 Server, which is a Linux-based server that occupies a single slot in a standard TN carrier.

- TN8412AP S8400 server IP Interface (SIPI)

The SIPI is used in an S8400-based system to provide transport of control messages between the S8400 Server and the port network (PN) using direct connections.

- H.248 media gateways

The H.248 media gateways include the G700, G250, G350, G430, G450, and IG550.

The H.248 media gateways provide:

- Extension of Communication Manager telephony features to branch offices when controlled by a remote server.
- Standalone telephony systems when controlled by an embedded S8300 Server.

- Local Survivable Processor (LSP) backup for a remote server.
- MM760 VoIP Media Module

The MM760 VoIP Media Module is a clone of the G700 motherboard VoIP engine. The MM760 provides an additional 64 VoIP channels in the G700.

Processor Ethernet (PE)

Much like a C-LAN board, Processor Ethernet provides connectivity to IP endpoints, gateways, and adjuncts. The PE interface is a logical connection in the Communication Manager software that uses a port on the NIC in the server (that is, the s-called “native NIC”). No additional hardware is needed to implement PE. Processor Ethernet uses the PROCR IP-interface type.

During the configuration of a server, the PE is assigned to a Computer Ethernet (CE). The PE and the CE share the same IP address, but are very different in nature. The CE interface is a native computer interface while the PE interface is the logical appearance of the CE interface within Communication Manager software. The interface that is assigned to the PE can be a control network or a corporate LAN. The interface that is selected determines which physical port the PE uses on the server. For more information on how to configure the server, see *Administering Avaya Aura™ Communication Manager*, 03-300509.

An LSP or an ESS server enables the Processor Ethernet interface automatically. On an LSP, the H.248 and the H.323 fields default to a **yes** on the **IP Interface Procr** screen, to allow the registration of H.248 gateways and H.323 endpoints using the Processor Ethernet interface.

In Communication Manager release 5.2 and later, H.248 Media Gateway and H.323 endpoint registration on an ESS server is allowed if you administer the **Enable PE for H.248 Gateways** and **Enable PE for H.323 Endpoints** fields on the **Survivable Processor** screen on the main server. Therefore the H.248 and H.323 fields on the **IP Interface Procr** screen of the ESS server display the values that you administered.



Important:

Both the ESS server and the LSP require the use of the Processor Ethernet interface to register to the main server. Do not disable the Processor Ethernet interface on an ESS server or an LSP.

Support for Processor Ethernet and Port Networks on an ESS server

In Communication Manager Release 5.2 and later, the capabilities of ESS servers are enhanced to support connection of IP devices to the Processor Ethernet interface as well as to C-LAN interfaces located in G650 (port network) gateways.

An Enterprise Survivable Server (ESS) can use its Processor Ethernet interface to support IP devices such as H.248 Media Gateways, H.323 Media Gateways, IP Adjuncts, IP telephones, IP trunks, and SIP trunks. The ESS can optionally control port networks (G650 Media Gateways) through IPSI at the same time. When there are no port networks in the configuration,

ESS may provide the equivalent benefit of an LSP. The ESS can be duplicated, providing additional redundancy to the survivability of the system.

For Processor Ethernet on duplex servers to work, you must assign the Processor Ethernet interface to the PE Active Server IP Address (IP-alias) and not the server unique address. The NIC assigned to the Processor Ethernet interface must be on a LAN connected to the main server.

- If the LSP or ESS registers to the C-LAN on the main server, the C-LAN must have IP connectivity to the LAN assigned to the NIC used for Processor Ethernet on the ESS.
- If the LSP or ESS registers to the Processor Ethernet on the main server, the Processor Ethernet on the main server must have IP connectivity to the LAN assigned to the NIC used for Processor Ethernet on the ESS.

Firmware for optimal performance

Processor Ethernet on duplex servers works effectively only when the H.248 gateways and IP telephones are on the most current release of firmware.

Avaya recommends that you use the following IP telephone models to ensure optimal system performance when you use Processor Ethernet on duplex servers:


- 9610, 9620, 9630, 9640, and 9650 telephones with firmware 3.0 or later; any future 96xx models that support TTS (Time to Service) will work optimally.
- 4601+, 4602SW+, 4610SW, 4620SW, 4621SW, 4622SW, and 4625SW Broadcom telephones with firmware R 2.9 SP1 or later, provided the 46xx telephones are not in the same subnet as the servers

All other IP telephone models will re-register in case of server interchange. The 46xx telephones will re-register if they are in the same subnet as the servers.

To ensure that you have the most current versions, go to the Avaya Support web site, <http://avaya.com/support>. Click **Downloads** and select the product.

Providing LAN security

Some customers are concerned that a user could access the switch using the INADS line, gain access to C-LAN, and then access to the customer's LAN. The Avaya architecture prevents access to the customer's LAN as depicted in [Figure 1: Security-related system architecture](#) on page 23, which shows a high-level switch schematic with a TN799 (C-LAN) circuit pack.

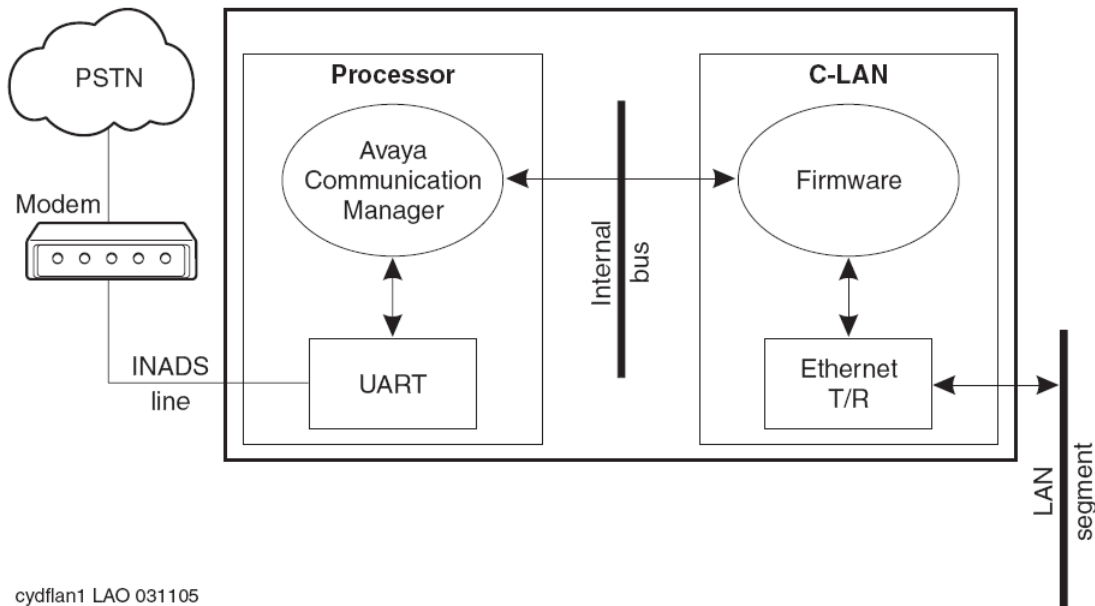Figure 1: Security-related system architecture


Logins through the INADS line terminate in software; software communicates with firmware over an internal bus through a limited message set. There are two main reasons why a user cannot access a customer's LAN through the INADS line:

- A user logging into software cannot obtain direct access to the C-LAN firmware.
The user can only enter SAT commands that request C-LAN information or to configure C-LAN connections.
- The C-LAN application TFTP is currently disabled and cannot be enabled by Communication Manager.
TELNET only interconnects C-LAN Ethernet clients to the system management application on the switch. FTP exists only as a server, is used only for firmware downloads, and it cannot connect to the client network.

Connection Preservation

Communication Manager supports connection preservation and call presentation for handling SIP calls. Any SIP telephone connected through a SIP Enablement Server with Communication Manager can use this feature. SIP connection preservation and call preservation are always active.

- Call preservation and connection preservation during LAN failure:
When near-end failure is detected, the SIP signaling group state is placed into Out-of-service state. The SIP-trunk in the trunk group is in a deactivated state and cannot be used either for incoming or outgoing calls. Stable or active calls on the SIP-trunk are not dropped and are kept in In-service/active state. When the active connection is dropped, SIP-trunk changes to Out-of-service state.
When far-end failure is detected, the SIP signaling group is placed into the Far-end-bypass state. Stable or active calls are not dropped and the SIP-trunk changes to pending-busyout state. When the active connection is dropped, SIP-trunk changes into Out-Of-Service/FarEnd-idle state.
- Call preservation and connection preservation when LAN connectivity is revived:
When near-end failure is ended, SIP signaling group state changes to In-service. Stable or active calls on the SIP-trunk are kept in In-service/active state.
When far-end failure ends, the SIP signaling group state changes to In-service. State of Stable or active calls on the SIP-trunk changes from pending-busyout to In-service/active state.

Session refresh handling

When SIP session refresh handling fails, the SIP call is set to connection preservation and a net-safety timer starts to keep the call active for 2 hours. After 2 hours the call drops, unless the user ends the call before time.

Connection Preserving Migration

The Connection Preserving Migration (CPM) feature preserves existing bearer (voice) connections while an H.248 media gateway migrates from one Communication Manager server to another because of network or server failure. However, users on connection-preserved calls cannot use such features as Hold, Conference, or Transfer, etc. In addition to preserving the audio voice paths, CPM extends the time period for recovery operations and functions during Avaya's complementary recovery strategies.

H.248 and H.323 Link Recovery

H.248 Link Recovery is an automated way in which the media gateway reacquires the H.248 link when it is lost from either a primary call controller or an LSP. The H.248 link between a server running Communication Manager and a media gateway, and the H.323 link between a media gateway and an H.323-compliant IP endpoint, provide the signaling protocol for:

- Call setup
- Call control (user actions such as Hold, Conference, or Transfer) while the call is in progress
- Call tear-down

If the link goes down, Link Recovery preserves any existing calls and attempts to re-establish the original link. If the gateway/endpoint cannot reconnect to the original server/gateway, then Link Recovery automatically attempts to connect with alternate TN799DP (C-LAN) circuit packs within the original server's configuration or to a Local Survivable Processor (LSP).

Auto fallback to primary

The intent of the auto fallback to primary controller feature is to return a fragmented network, in which a number of H.248 Media Gateways are being serviced by one or more LSPs (Local Survivable Processors), to the primary server in an automatic fashion. This feature is targeted towards all H.248 media gateways. By migrating the media gateways back to the primary automatically, the distributed telephony switch network can be made whole sooner without human intervention.

Local Survivable Processor (LSP)

Either an S8300 or S8500-series Server can act as survivable call-processing servers for remote or branch customer locations. As an LSP, the S8300 Server carries a complete set of Communication Manager features, and its license file allows it to function as a survivable call processor. If the link between the remote media gateways—G700, G450, G430, G350, or G250 and the primary controller is broken, the telephones and media gateways designated to receive backup service from the LSP register with the LSP. The LSP will provide control to those registered devices in a license error mode (see *Avaya Aura™ Communication Manager Hardware Description and Reference*, 555-245-207).

Note:

The LSP, in contrast to the [Standard Local Survivability \(SLS\)](#) feature on the G250, G350, G430, and G450 Media Gateways, is also known as ELS, or Enhanced Local Survivability.

Enterprise Survivable Server (ESS)

The Enterprise Survivable Server (ESS) feature provides survivability to port networks by allowing backup servers to be placed in various locations in the customer's network. The backup servers supply service to port networks in the case where the Avaya S8500-series Server, or S8700-series Server pair fails, or connectivity to the main Communication Manager server(s) is lost. Servers for ESS can be either S8500-series or S8700-series servers, and offer full Communication Manager functionality when in survivable mode, provided sufficient connectivity exists to other Avaya components (for example, endpoints, gateways, and messaging servers).

Standard Local Survivability (SLS)

Standard Local Survivability (SLS) consists of a module built into the G250 Media Gateway to provide partial backup media gateway controller functionality, in the event that the connection

Networking overview

with the primary controller is lost. This feature allows a G250, with no S8300 installed locally, to provide a degree of Communication Manager functionality when no link is available to an external controller. It is configured on a system-wide basis, or, alternatively, it can be configured on an individual G250 using the CLI.

Chapter 2: Port network configurations with S8500-series and S8700-series Servers

The S8500-series and S8700-series Servers can control call processing of port networks in a large variety of ways. Control networks can be established using Ethernet connections only or a combination of Ethernet connections and fiber connections (direct-connect, CSS, or ATM). Voice, fax, TTY, and modem can be transmitted over the LAN/WAN connections, fiber connections, or both. Reliability with the S8700-series Server can include single control and bearer networks (standard reliability), duplicated control networks (high reliability), duplicated control and bearer networks (critical reliability), or a combination of reliabilities.

Each of the following configurations show how the various options can be used. [Configurations with both IP-PNC and fiber-PNC PNs](#) on page 82 describes the possibilities and considerations when fiber-PNC options are combined with IP-PNC options.

Fiber-PNC and IP-PNC

Fiber port network connectivity (fiber-PNC) uses fiber connections and/or DS1-C connections between port networks (PNs) for:

- Voice bearer transmission
- Control signaling from the server to PNs that do not have a control TN2312BP IPSI circuit pack
- Sharing of Touch-tone Receiver (TTR) and media processor resources. If these resources are not available in one fiber-PNC PN, the resources on another fiber-PNC PN can be used across the fiber links.

Fiber-PNC includes Direct Connect, Center Stage Switch (CSS), and ATM configurations. One or more PNs in the CSS or ATM configurations have an IPSI connection to the server for control signaling. Only one PN in a Direct Connect configuration has an IPSI connection.

IP port network connectivity (IP-PNC) uses LAN/WAN connections exclusively between port networks for bearer transmission and control signaling from the server. Each PN must have either one or two control ISPI circuit packs for control signaling.

An S8500-series or S8700-series Server can support both types of port network connectivity simultaneously within a single Communication Manager configuration.

Reliability

Reliability is the ability of a Communication Manager configuration to maintain service when components such as Ethernet switches, circuit packs, or gateways within the configuration fail. The available reliability levels and their precise definitions depend on whether the port networks use IP-PNC or fiber-PNC and whether the server is an S8500-series or S8700-series Server.

S8500-series Server

An S8500-series Server has several reliability options, and the implementation of reliability levels differs somewhat between fiber-PNC and IP-PNC.

Fiber-PNC

- Standard reliability

For fiber-PNC, an S8500-series Server supports only Direct Connect with up to 3 fiber-PNC PNs. This configuration supports a single control IPSI in one of the fiber-PNCs. IPSIs in other PNs serve only as tone clocks and do not carry control signaling. There can be only a single fiber connection between each of the fiber PNs.

IP-PNC

- Standard reliability

For IP-PNC, an S8500-series Server supports a single IPSI for control in every IP-PNC PN. TN2302BP or TN2602AP circuit packs are used for the bearer network. However, TN2602AP circuit packs are implemented in load-balancing mode only.

- Duplicated bearer reliability

For IP-PNC, an S8500-series Server does not support duplicated control. However, any or all IP-PNC PNs may have duplicated TN2602AP circuit packs to duplicate the bearer connections. Control signaling to a PN with duplicated TN2602AP circuit packs always occurs over a direct IPSI connection to the server. Duplicated bearer using TN2602AP circuit packs is implemented for individual PNs and does not require uniform implementation for all PNs within the configuration.

S8700-series Server

An S8700-series Server has multiple levels of reliability, and the implementation of reliability levels differs somewhat between fiber-PNC and IP-PNC.

Fiber-PNC

All port networks that use fiber-PNC within a single Communication Manager configuration must have the same level of reliability and may be one of the following:

- Standard duplex reliability — The standard S8700-series Server configuration includes duplicated servers. A single IPSI circuit pack for control resides in one or more PNs. A single fiber interface connects all fiber-PNC PNs.
- High reliability — The high reliability S8700-series Server configuration includes the standard duplicated servers and, in addition, duplicated IPSIs in one or more PNs. A single fiber interface connects all fiber-PNC PNs.
- Critical Reliability — The standard reliability S8700-series Server configuration includes the following:
 - Standard duplicated servers
 - Duplicated control IPSIs in one or more PNs.
 - Duplicated fiber interfaces connect all fiber-PNC PNs.

IP-PNC

Reliability for PNs that use IP-PNC within a single Communication Manager configuration is implemented for individual PNs and does not require uniform implementation for other IP-PNC PNs within the configuration. In addition, duplicated bearer and duplicated control can be implemented independently of each other. Duplicated control is not required for a PN to have duplicated bearer reliability.

An IP-PNC PN can have one of the following reliability levels:

- Standard duplicated servers
A single IPSI provides control signaling between the PN and the server. Only single or load-balancing TN2302BP or TN2602AP circuit pack pairs.
- Duplicated control
In addition to the standard duplicated servers, duplicated IPSIs for control reside in each PN. The PN contains only single or load balancing TN2302BP or TN2602AP circuit pack pairs.
- Single control and duplicated bearer
In addition to the standard duplicated servers, duplicated TN2602AP circuit packs reside in each PN to provide duplicated bearer.

Note:

Duplicated IPSI control is recommended, but not required, for duplicated bearer for IP-PNC PNs.

- Duplicated control and bearer
In addition to the standard duplicated servers, duplicated IPSIs for control reside in each PN and duplicated TN2602AP circuit packs reside in each PN to provide duplicated bearer.

S8500-series IP-PNC (single control network)

In this configuration, the S8500-series Server uses IP connections to control call processing on the port networks (PNs) and to send voice between PNs over an IP network. An existing VoIP-ready IP infrastructure can be used. This solution saves customers the cost of building a separate telephony network. In this type of configuration, all PNs are connected to the server and to each other over the customer's network. Up to 64 PNs can be configured in an IP-PNC network. Depending on the type of Ethernet switches used to connect PNs, the number of PNs, and the PN locations in the LAN and WAN, the network may require multiple Ethernet switches to support the PNs.

Only the G650 media gateway is available for new installations. However, because different migrations from older systems are supported, the following media gateways can be used in an IP-PNC network:

- G650 media gateway

A G650 PN can consist of one to five G650 gateways in a stack connected by a TDM/LAN bus cable. One gateway, serving as control gateway in position A at the bottom of the stack, contains the following:

- TN2312BP IPSI circuit pack

- G600 media gateway

A PN can consist of one to four G600 gateways in a stack connected by a TDM/LAN bus cable. One gateway, serving as control gateway in position A at the bottom of the stack, contains the following:

- TN2312AP/BP IPSI circuit pack

Note:

The TN2314 Processor and TN744E Call Classifier and Tone Detector circuit packs, needed for the S8100 model, are *not* used and must be removed if the G600 is being migrated from an S8100 Server. All gateways are port gateways, though the bottom gateway (serving as control cabinet A) contains the IPSI circuit pack.

- CMC1 media gateway

A PN can consist of one to three CMC1 gateways in a stack connected by a TDM/LAN bus cable. One gateway, serving as control gateway in position A at the bottom of the stack, contains the following:

- TN2312AP/BP IPSI circuit pack

Note:

The TN795 processor board, needed for the CSI model, is *not* used and must be removed if the CMC1 is being migrated from a DEFINITY server. The CMC1 or CMC1 stack may not be used with additional PNs.

IP/TDM conversion resource: Each PN must contain at least one TN2302AP IP Media Interface or TN2602AP IP Media Resource 320 circuit pack. The TN2302AP or TN2602AP circuit pack provides IP-TDM voice processing of endpoint connections between PNs. These circuit packs can be inserted in any gateway in the PN. Each PN may optionally house a TN799DP C-LAN circuit pack for control of the G150 Media Gateway, the H.248 media gateways (G700, G450, G430, G350, G250), IP endpoints, adjunct systems such as messaging, and firmware downloads.

Ethernet connections. In the IP-PNC configuration, the S8500-series Server connects to the media gateways through a single Ethernet switch. Each PN also has a connection to the S8500 Server through a local Ethernet switch. As a result, remote PNs in an IP-PNC configuration over a WAN, which normally requires routers to complete the connection, may require their own Ethernet switches, in addition to the Ethernet switch that supports the S8500-series Server. IP connections to the S8500-series Server may be administered as dedicated private LAN connections or connections over the customer LAN.

Duplicated TN2602AP circuit packs in IP-PNC PNs

For an S8500-series Server, any individual IP-PNC PN can contain load-balancing or duplicated TN2602AP circuit packs. However, TN2602AP circuit packs do *not* need to be implemented uniformly within the system. Thus, some PNs may have a single TN2602AP circuit pack, some PNs may have load-balancing TN2602AP circuit packs, and some PNs may have duplicated TN2602AP circuit packs. Thus, an S8500-series Server can have duplicated bearer connections, even though it does not support duplicated control.

Figure 2: S8500 IP-PNC

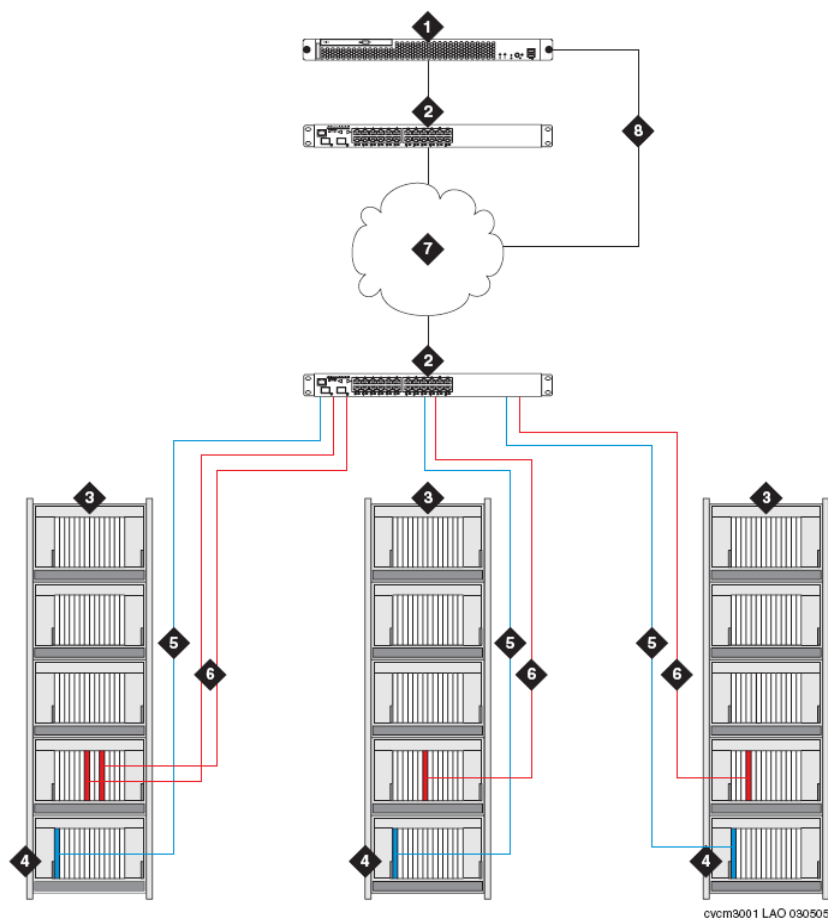


Figure notes: S8500 IP-PNC

1. S8500C or S8500B Server
2. Ethernet Switch. For local LAN connections, the same Ethernet switch can connect both the servers and the media gateways. For remote LAN/WAN connections the remote gateway(s) must have an Ethernet switches at the remote location.
3. PNs (G650 Media Gateway or stack [shown in figure]). May also be a G600 or CMC1 Media Gateway or stack from an S8100 or DEFINITY Server CSI migration, an MCC1 Media Gateway from a DEFINITY Server SI or R migration, or an SCC1 Media Gateway.
4. PN control gateway in the A position in the gateway stack which contains:
 - A TN2312AP/BP IPSI circuit pack for IP connection to server.

NOTE: For the G650 Media Gateway, the BP version of the TN2312 is required in order to provide environmental maintenance.
5. IPSI-to-server control network connection via Ethernet switch

Figure notes: S8500 IP-PNC (continued)

6. LAN connections of TN2302AP IP Media Interface or TN2602AP IP Media Resource 320 for IP-TDM voice processing and optional TN799DP C-LAN for control of IP endpoints
NOTE: The number of TN2302AP, TN2602AP, and TN799DP circuit packs varies, depending on the number of IP endpoints, PNs, and adjunct systems. These circuit packs may be inserted into a port gateway (shown in figure) or the PN control gateway.
7. Customer LAN/WAN
8. LAN connections of servers for remote administration

2 of 2

S8500-series direct-connect (single control network)

In this configuration, one PN is connected to the server over an Ethernet connection. Fiber links connect up to two additional PNs to each other. This configuration also requires either a dual-NIC card in the S8500-series Server or an interim Ethernet switch so that the S8500-series Server can have an Ethernet port to the customer LAN and a dedicated Ethernet connection to the media gateways.

IPSI-connected PN

Only the G650 media gateway is available for new installations. However, because different migrations from older systems are supported, the PN connected to the S8500-series Server can consist of one of three gateways:

- G650 media gateway
A G650 PN can consist of one to five G650 gateways in a stack connected by a TDM/LAN bus cable. One gateway, serving as control gateway in position A at the bottom of the stack, contains the following:
 - TN2312BP IPSI circuit pack
- SCC1 media gateway
An SCC1 PN can consist of one to four SCC1 gateways in a stack connected by a TDM/LAN bus cable. One gateway, serving as control gateway in position A at the bottom of the stack, contains the following:
 - TN2312AP/BP IPSI circuit pack

Note:

The TN2404 and TN2401 processor circuit packs, needed for the SI model, are *not* used and must be removed if the SCC1 is being migrated from a DEFINITY server.

- MCC1 media gateway

An MCC1 PN has from one to five carriers in an MCC1 gateway connected by a TDM/LAN bus cables. One carrier, serving as control carrier in position A in the middle of the stack, contains the following:

- TN2312AP/BP IPSI circuit pack

Note:

The control carrier for a DEFINITY Server SI or R is not used and must be removed and replaced with an expansion control carrier if the MCC1 is being migrated. The processor circuit packs, needed for the SI or R models, are not used and must be removed. Other PNs can also be MCC1 Gateways.

PNs not IPSI-connected

In a S8500-series direct-connect configuration, additional PNs (up to two only) may be connected using fiber optic cable. The additional PNs connect to the IPSI-connected PN using fiber optic cable between external interface (EI) TN570B (version 7 or later) circuit packs. The cables are connected to the circuit packs using short-range or long-range multi-mode transceivers, or single-mode transceivers, depending on the distance between PNs.

The TN570B circuit packs reside in the control carrier (MCC1) or control gateway (G650 or SCC1) of each PN. The control carrier or gateway in each additional PN also must contain a TN2182C Tone Clock circuit pack (SCC1 or MCC1) or a maintenance-only TN2312BP IPSI circuit pack (G650).

Note:

Straight fiber connections between TN570B circuit packs may be up to 200 feet (61 meters) (see [TN570B Expansion Interface PN connections up to 200 ft.](#) on page 77). If the distance between PNs is greater, Light guide interface units (LIUs) must also be used to connect the fiber cables or the connection must use TN1654 DS1 converters. Lengths of fiber, including connections through LIUs or DS1 converters, are:

- 4900 feet (1493.5 meters) (see [TN570B Expansion Interface PN connections up to 4900/25000 ft. and 22 miles.](#) on page 79)
- 25,000 feet (7620 meters) in multimode (see [TN570B Expansion Interface PN connections up to 4900/25000 ft. and 22 miles.](#) on page 79)
- 21.7 miles (34.9 kilometers) in single mode (see [TN570B Expansion Interface PN connections up to 4900/25000 ft. and 22 miles.](#) on page 79)
- 200 miles (322 kilometers) (see [TN1654 DS1 Converter/TN570B Expansion Interface PN connections up to 200 miles.](#) on page 81)

Note:

You *cannot* connect additional PNs that contain CMC1 or G600 Media Gateways.

TN2602AP circuit packs for duplicated bearer

For an S8500-series Server, any individual fiber-PNC PN can contain load-balancing or duplicated TN2602AP circuit packs. However, TN2602AP circuit packs do *not* need to be implemented uniformly within the system. Thus, some PNs may have no TN2602AP circuit pack, some PNs may have load-balancing TN2602AP circuit packs, and some PNs may have duplicated TN2602AP circuit packs. Thus, an S8500-series Server can have duplicated bearer connections, even though it does not support duplicated control.

Rules for TN570B circuit pack placement with SCC1/MCC1 Media Gateways

Fiber-PNC MCC1 and SCC1 Media Gateways have rules on the placement of TN570B External Interface circuit packs in direct connect configurations. See [Rules for TN570B circuit pack placement with SCC1/MCC1 Media Gateways](#) on page 52. However, for MCC1/SCC1 Media Gateways configured with an S8500-series Server, only the rules that apply to single control networks apply.

Figure 3: S8500 direct-connect

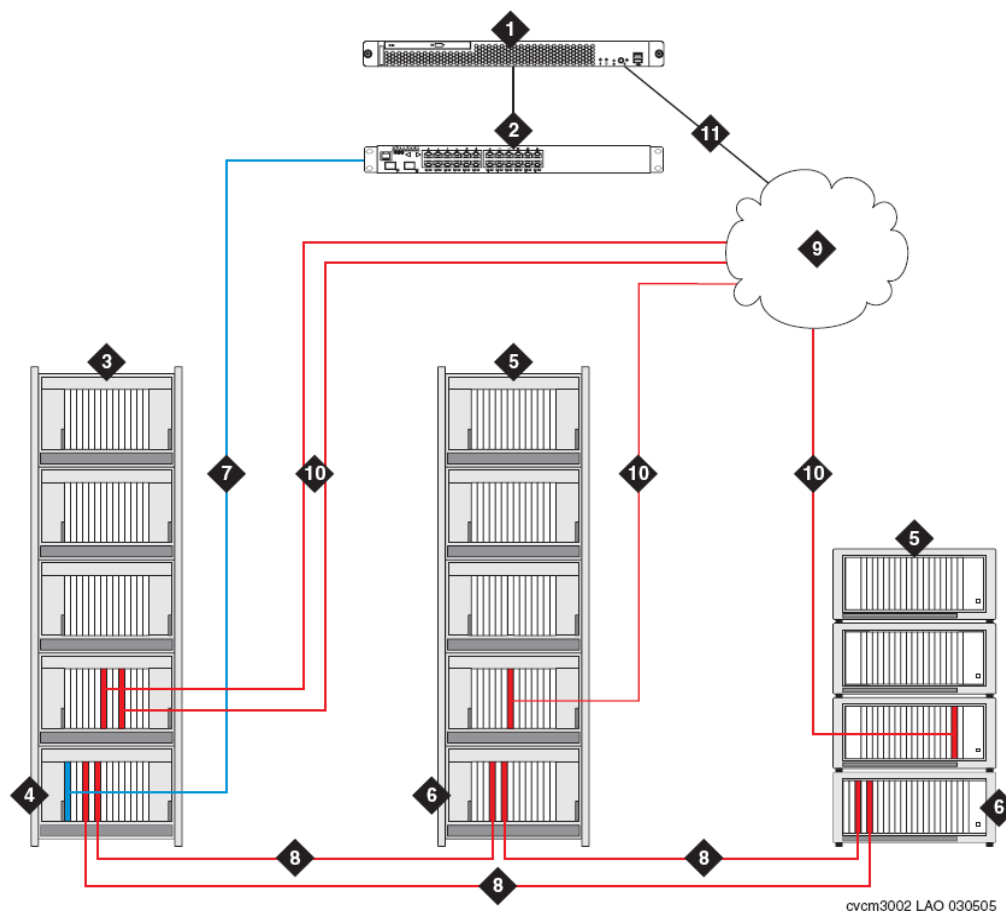


Figure notes: S8500 direct-connect

1. S8500C or S8500B Server
2. LAN connections of server for remote administration
3. IPSI-connected PN (G650 Media Gateway or G650 stack [shown in figure], MCC1 Media Gateway or SCC1 Media Gateway or SCC1 stack).
NOTE: G600 or CMC1 Media Gateways can be used in IP-PNC configurations only.
4. Media gateway (G650) or expansion port network (EPN) control gateway (SCC1) or carrier (MCC1), in the A position, which contains:
 - A TN2312AP/BP IPSI circuit pack for IP connection to server.
NOTE: For the G650 Media Gateway, the BP version of the TN2312 is required in order to provide environmental maintenance.
 - Two TN570B EI circuit packs for bearer and control network connections to the other two PNs (if any).
5. PN (G650 Media Gateway or G650 stack [shown in figure], MCC1 Media Gateway, or SCC1 Media Gateway or SCC1 stack).

Figure notes: S8500 direct-connect (continued)

6. PN control gateway or carrier, which contains two TN570B EI circuit packs for bearer and control network connections to the other two PNs.
NOTE: One TN2182C Tone Clock circuit pack must also be present per PN if the PN(s) consist of SCC1 or MCC1 Media Gateways. One maintenance-only TN2312BP IPSI circuit pack must be present per PN if the PN(s) consist of G650 Media Gateways.
The control gateway or carrier is always in the A position in the MCC1 or gateway stack.
7. IPSI-to-server control network connection. Requires dual NIC card on the server.
8. TN 570B/570B fiber connections between PNs.
9. Customer LAN.
10. LAN connections, if any, of optional TN2302AP IP Media Interface or TN2602AP IP Media Resource 320 for IP-TDM voice processing.
NOTE: Optionally, at least one TN799DP C-LAN can be present for the system for control of IP endpoints, adjunct systems such as messaging, and firmware downloads.
NOTE: The number of TN2302AP, TN2602AP, and TN799DP circuit packs varies, depending on the number of IP endpoints, PNs, and adjunct systems. These circuit packs are optional for PNs in a direct-connect network and may be inserted into a port carrier (shown in figure) or the PN control carrier. However, the C-LAN circuit pack is required for downloads of firmware updates.
11. LAN connection.

2 of 2

S8700-series IP-PNC (single control network)

In this configuration, the S8700-series Servers connect to one or more PNs over an Ethernet connection using either an interim Ethernet switch and a dedicated LAN connection or the customer's LAN. Each PN is connected to the Ethernet switch or LAN with a CAT5 cable to a TN2312AP/BP IP Server Interface (IPSI) card.

This solution saves customers the cost of building a separate telephony network. In this type of configuration, all PNs are connected to the customer's network and call control from the S8700-series Server is also sent over the customer's network. Up to 64 PNs can be configured in an IP-PNC network.

Only the G650 media gateway is available for new installations. However, because different migrations from older systems are supported, the following media gateways can be used in an IP-PNC network:

- G650 media gateway

A G650 PN can consist of one to five G650 gateways in a stack connected by a TDM/LAN bus cable. One gateway, serving as control gateway in position A at the bottom of the stack, contains the following:

- TN2312BP IPSI circuit pack

- G600 media gateway

A PN can consist of one to four G600 gateways in a stack connected by a TDM/LAN bus cable. One gateway, serving as control gateway in position A at the bottom of the stack, contains the following:

- TN2312AP/BP IPSI circuit pack

Note:

The TN2314 Processor and TN744E Call Classifier and Tone Detector circuit packs, needed for the S8100 model, are *not* used and must be removed if the G600 is being migrated from an S8100 Server. All gateways are port gateways, though the bottom gateway (serving as control cabinet A) contains the IPSI circuit pack.

- CMC1 media gateway

A PN can consist of one to three CMC1 gateways in a stack connected by a TDM/LAN bus cable. One gateway, serving as control gateway in position A at the bottom of the stack, contains the following:

- TN2312AP/BP IPSI circuit pack

Note:

The TN795 processor board, needed for the CSI model, is *not* used and must be removed if the CMC1 is being migrated from a DEFINITY server. The CMC1 or CMC1 stack may not be used with additional PNs.

IP/TDM conversion resource: Each PN must contain at least one TN2302AP IP Media Interface or TN2602AP IP Media Resource 320 circuit pack. The TN2302AP or TN2602AP circuit pack provides IP-TDM voice processing of endpoint connections between PNs. Optionally, one or more TN799DP C-LAN circuit pack can be present for control of the G150 Media Gateway, the H.248 media gateways (G700, G450, G430, G350, G250), IP endpoints, adjunct systems such as messaging, and firmware downloads. These circuit packs may be inserted in any gateway in the PN.

Ethernet connections. In the IP-PNC configuration, the S8700-series Server connects to the media gateways through a single Ethernet switch. Each PN also has a connection to the network or the S8700-series Server through a local Ethernet switch. As a result, remote PNs in an IP-PNC configuration over a WAN, which normally requires routers to complete the connection, may require their own Ethernet switches in addition to the Ethernet switch that supports the S8700-series Server. IP connections to the S8700-series Server may be administered as dedicated private LAN connections or connections over the customer LAN.

Figure 4: S8700-series IP-PNC single control network

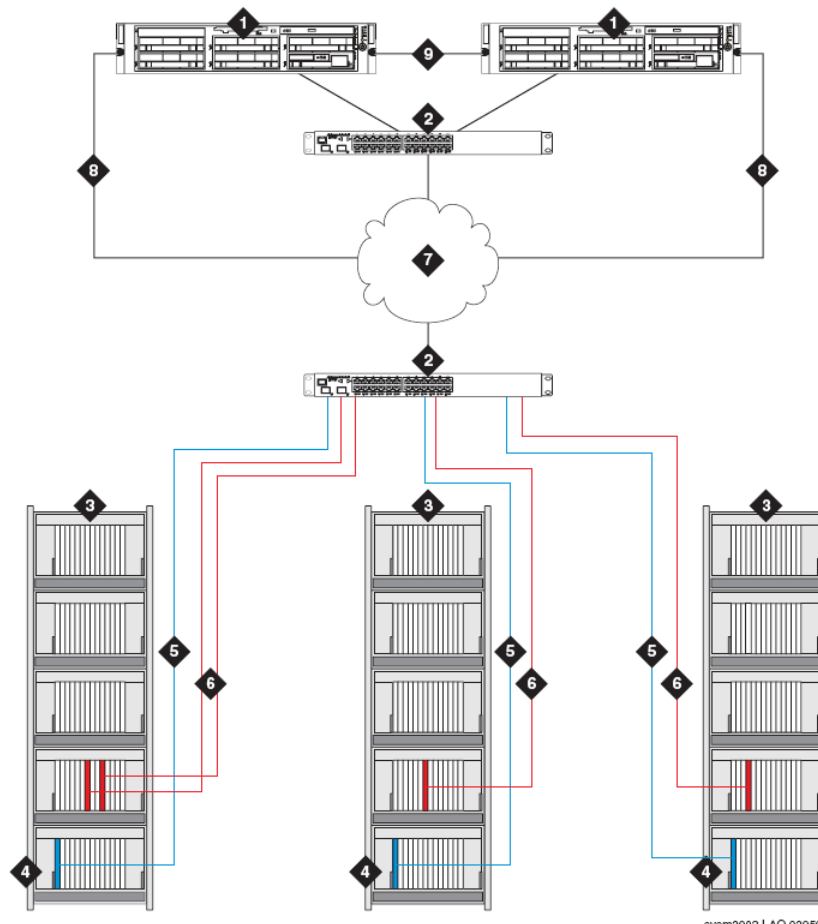


Figure notes: S8700-series IP-PNC single control network

1. S8700-series Server
2. Ethernet Switch. For local LAN connections, the same Ethernet switch can connect both the servers and the media gateways. For remote LAN/WAN connections, the remote gateway(s) must have an Ethernet switches at the remote location.
3. PNs (G650 Media Gateway or stack [shown in figure]). May also be a G600 or CMC1 Media Gateway or stack from an S8100 or DEFINITY Server CSI migration, an MCC1 Media Gateway from a DEFINITY Server SI or R migration, or an SCC1 Media Gateway.
4. PN control gateway, in the A position, which contains:
 - A TN2312AP/BP IPSI circuit pack for IP connection to server.

NOTE: For the G650 Media Gateway, the BP version of the TN2312 is required in order to provide environmental maintenance.
5. IPSI-to-server control network connection via Ethernet switch

Figure notes: S8700-series IP-PNC single control network (continued)

6. LAN connections of TN2302AP IP Media Interface or TN2602AP IP Media Resource 320 for IP-TDM voice processing and optional TN799DP C-LAN for control of IP endpoints
NOTE: The number of TN2302AP, TN2602AP, and TN799DP circuit packs varies, depending on the number of IP endpoints, PNs, and adjunct systems. These circuit packs may be inserted into a port gateway (shown in figure) or the PN control gateway.
7. Customer LAN/WAN
8. LAN connections of servers for remote administration
9. Duplicated server links, including the link for translations memory duplication and the link for control data sharing. The link for memory duplication is implemented through the DAL2 board or (for the S8720 and S8730 Server) through software duplication.

2 of 2

S8700-series IP-PNC (duplicated control network)

The S8700-series Server IP-PNC high reliability configuration is the same as the standard reliability configuration, except for the following differences:

- There are duplicated Ethernet switches, with each server connected to each Ethernet switch
- Each PN has duplicated TN2312AP/BP IPSI circuit packs. One IPSI circuit pack in each PN is connected through one Ethernet switch and the other IPSI circuit pack is connected through the other Ethernet switch

Figure 5: S8700-series IP-PNC duplicated control network

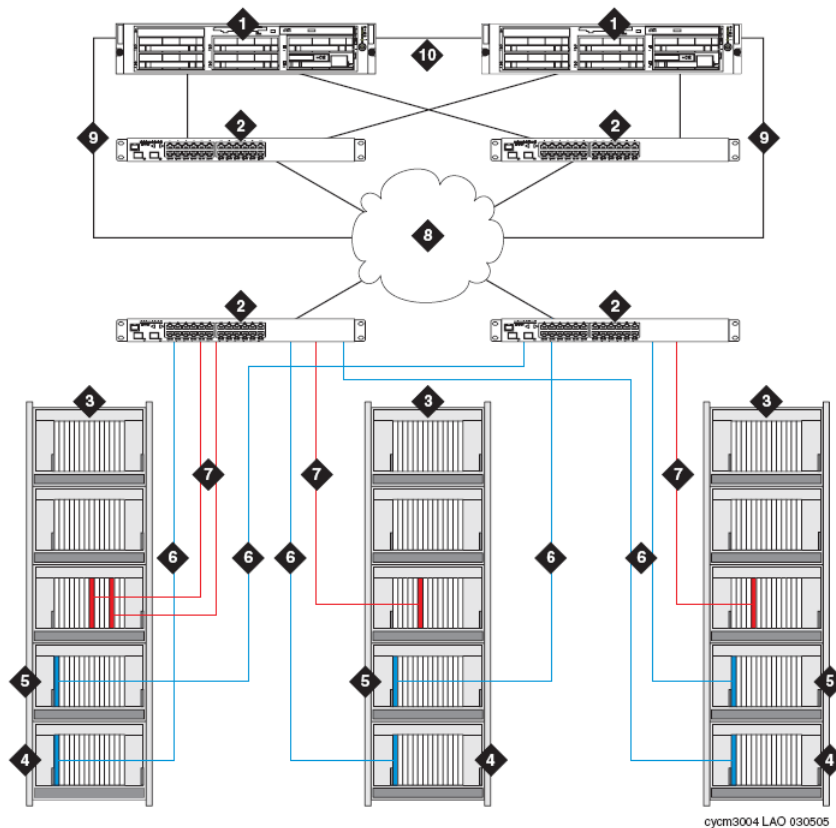


Figure notes: S8700-series IP-PNC duplicated control network

1. S8700-series Server
2. Ethernet Switch. For local LAN connections, the same pair of Ethernet switches can connect both the servers and the media gateways. For remote LAN/WAN connections, the remote gateway(s) must have a pair of Ethernet switches at the remote location.
3. PNs (G650 Media Gateway or stack [shown in figure]). May also be an SCC1 stack or MCC1 Media Gateway from a DEFINITY Server SI or R migration.
4. PN control gateway, in the A position, which contains:
 - A TN2312AP/BP IPSI circuit pack for IP connection to server.

NOTE: For the G650 Media Gateway, the BP version of the TN2312 is required in order to provide environmental maintenance.
5. Duplicated expansion control gateway, in the B position, which contains:
 - A TN2312AP/BP IPSI circuit pack for IP connection to control network.
6. IPSI-to-server control network connection via Ethernet switch
7. LAN connections of TN2302AP IP Media Interface or TN2602AP IP Media Resource 320 for IP-TDM voice processing and optional TN799DP C-LAN for control of IP endpoints

NOTE: The number of TN2302AP, TN2602AP, and TN799DP circuit packs varies, depending on the number of IP endpoints, PNs, and adjunct systems. These circuit packs may be inserted into a port carrier (shown in figure), the PN control carrier, or the duplicated control carrier.

Figure notes: S8700-series IP-PNC duplicated control network (continued)

8. Customer LAN
9. LAN connections of servers for remote administration
10. Duplicated server links, including the link for translations memory duplication and the link for control data sharing. The link for memory duplication is implemented through the DAL2 board or (for the S8720 and S8730 Server) through software duplication.

2 of 2

S8700-series IP-PNC (duplicated control and duplicated bearer network)

The S8700-series Server IP-PNC critical reliability configuration (duplicated control and duplicated bearer network) is the same as the high reliability configuration, except for the following differences:

- Each PN has duplicated TN2602AP IP Media Resource 320 circuit packs. One TN2602 circuit pack in each PN is connected through one Ethernet switch and the other TN2602 circuit pack is connected through the other Ethernet switch.
- A TN771DP Maintenance Test circuit pack must also be installed in each PN that has duplicated control and bearer network connections.

Figure 6: S8700-series IP-PNC duplicated control and duplicated bearer network

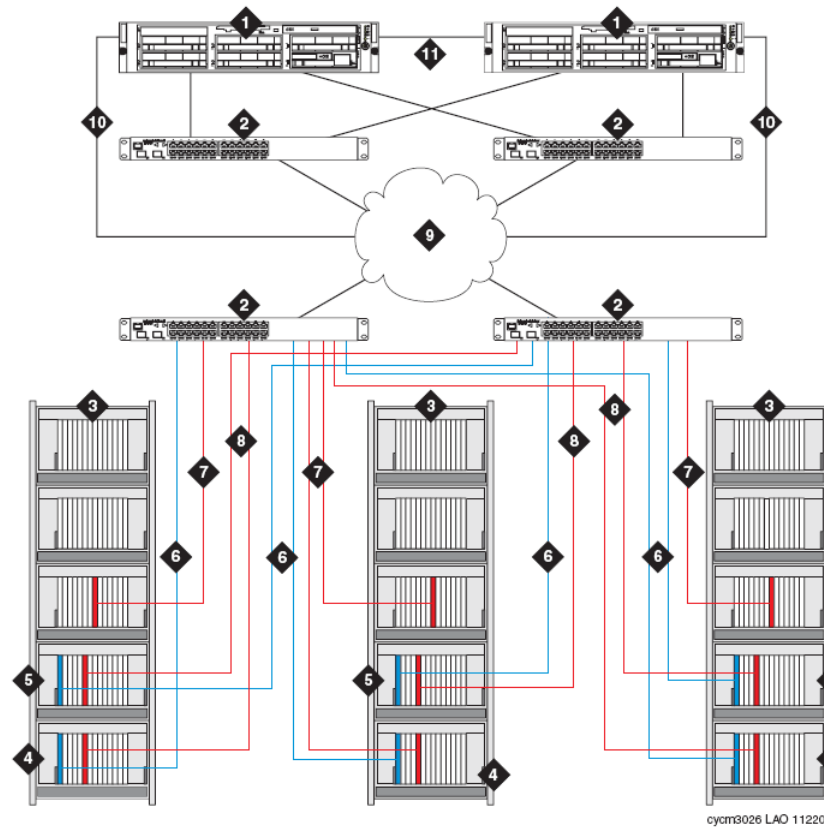


Figure notes: S8700-series IP-PNC duplicated control and duplicated bearer network

1. S8700-series Server
2. Ethernet Switch. For local LAN connections, the same pair of Ethernet switches can connect both the servers and the media gateways. For remote LAN/WAN connections, the remote gateway(s) must have a pair of Ethernet switches at the remote location.
3. PNs (G650 Media Gateway or stack [shown in figure]). May also be an SCC1 stack or MCC1 Media Gateway from a DEFINITY Server SI or R migration.
4. PN control gateway, in the A position, which contains:
 - A TN2312AP/BP IPSI circuit pack for IP connection to server.
NOTE: For the G650 Media Gateway, the BP version of the TN2312 is required in order to provide environmental maintenance.
 - A TN2602AP IP Media Resource 320 for PN bearer connections over the LAN
NOTE: The TN2602AP circuit pack may be placed in any gateway in the PN. However, the pair of TN2602 circuit packs should be separated between two different gateways whenever possible.
5. Duplicated expansion control gateway, in the B position, which contains:
 - A TN2312AP/BP IPSI circuit pack for IP connection to control network.
 - A TN2602AP IP Media Resource 320 for PN bearer connections over the LAN
NOTE: The TN2602AP circuit pack may be placed in any gateway in the PN. However, the pair of TN2602 circuit packs should be separated between two different gateways whenever possible.

Figure notes: S8700-series IP-PNC duplicated control and duplicated bearer network

6. IPSI-to-server control network connection via Ethernet switch
7. LAN connection of the TN799DP C-LAN for control of IP endpoints
NOTE: The number of TN799DP circuit packs varies, depending on the number of IP endpoints, PNs, and adjunct systems. These circuit packs may be inserted into a port carrier (shown in figure), the PN control carrier, or the duplicated control carrier.
8. LAN connections of TN2602AP IP Media Resource 320 circuit packs for IP-TDM voice processing
9. Customer LAN
10. LAN connections of servers for remote administration
11. Duplicated server links, including the link for translations memory duplication and the link for control data sharing. The link for memory duplication is implemented through the DAL2 board or (for the S8720 and S8730 Server) through software duplication.

2 of 2

S8700-series direct-connect (single control network)

In this configuration, one PN is connected to the server over an Ethernet connection. Fiber links connect up to two additional PNs to each other. This configuration also requires either a dual-NIC card in the S8700-series Server or an interim Ethernet switch.

IPSI-connected PN

Only the G650 media gateway is available for new installations. However, because different migrations from older systems are supported, the PN connected to the S8700-series Server can consist of one of three gateways:

- G650 media gateway
A G650 PN can consist of one to five G650 gateways in a stack connected by a TDM/LAN bus cable. One gateway, serving as control gateway in position A at the bottom of the stack, contains the following:
 - TN2312BP IPSI circuit pack
- SCC1 media gateway
An SCC1 PN can consist of one to four SCC1 gateways in a stack connected by a TDM/LAN bus cable. One gateway, serving as control gateway in position A at the bottom of the stack, contains the following:
 - TN2312AP/BP IPSI circuit pack

Note:

The TN2404 and TN2401 processor circuit packs, needed for the SI model, are *not* used and must be removed if the SCC1 is being migrated from a DEFINITY server.

- MCC1 media gateway

An MCC1 PN has from one to five carriers in an MCC1 gateway connected by a TDM/LAN bus cables. One carrier, serving as control carrier in position A in the middle of the stack, contains the following:

- TN2312AP/BP IPSI circuit pack

Note:

The control carrier for a DEFINTY Server SI or R is not used and must be removed and replaced with an expansion control carrier if the MCC1 is being migrated. The processor circuit packs, needed for the SI or R models, are not used and must be removed. Other PNs can also be MCC1 Gateways.

PNs not IPSI-connected

In a S8700-series Server direct connect configuration, additional PNs (up to two only) may be connected to the IPSI-connected PN using fiber optic cable between external interface (EI) TN570B (version 7 or later) circuit packs. The cables are connected to the circuit packs using short-range or long-range multi-mode transceivers, or single-mode transceivers, depending on the distance between PNs.

The TN570B circuit packs reside in the control carrier (MCC1) or control gateway (G650 or SCC1) of each PN. The control carrier or gateway in each additional PN also must contain a TN2182 Tone Clock circuit pack (SCC1 or MCC1) or a maintenance-only TN2312ABP IPSI circuit pack (G650).

Note:

Straight fiber connections between TN570B circuit packs may be up to 200 feet (61 meters) (see [TN570B Expansion Interface PN connections up to 200 ft.](#) on page 77). If the distance between PNs is greater, Light guide interface units (LIUs) must also be used to connect the fiber cables or the connection must use TN1654 DS1 converters. Lengths of fiber, including connections through LIUs or DS1 converters, are:

- 4900 feet (1493.5 meters) (see [TN570B Expansion Interface PN connections up to 4900/25000 ft. and 22 miles.](#) on page 79)
- 25,000 feet (7620 meters) in multimode (see [TN570B Expansion Interface PN connections up to 4900/25000 ft. and 22 miles.](#) on page 79)
- 21.7 miles (34.9 kilometers) in single mode (see [TN570B Expansion Interface PN connections up to 4900/25000 ft. and 22 miles.](#) on page 79)
- 200 miles (322 kilometers) (see [TN1654 DS1 Converter/TN570B Expansion Interface PN connections up to 200 miles.](#) on page 81)

Note:

You *cannot* connect additional PNs that contain CMC1 or G600 Media Gateways.

TN2602AP circuit packs for duplicated bearer

For an S8700-series Server, any individual fiber-PNC PN can contain load-balancing or duplicated TN2602AP circuit packs. However, TN2602AP circuit packs do *not* need to be implemented uniformly within the system. Thus, some PNs may have no TN2602AP circuit pack, some PNs may have load-balancing TN2602AP circuit packs, and some PNs may have duplicated TN2602AP circuit packs. Thus, an S8700-series Server can have duplicated bearer connections, even though it does not support duplicated control or fiber-based duplicated bearer.

Figure 7: S8700-series direct-connect single control network

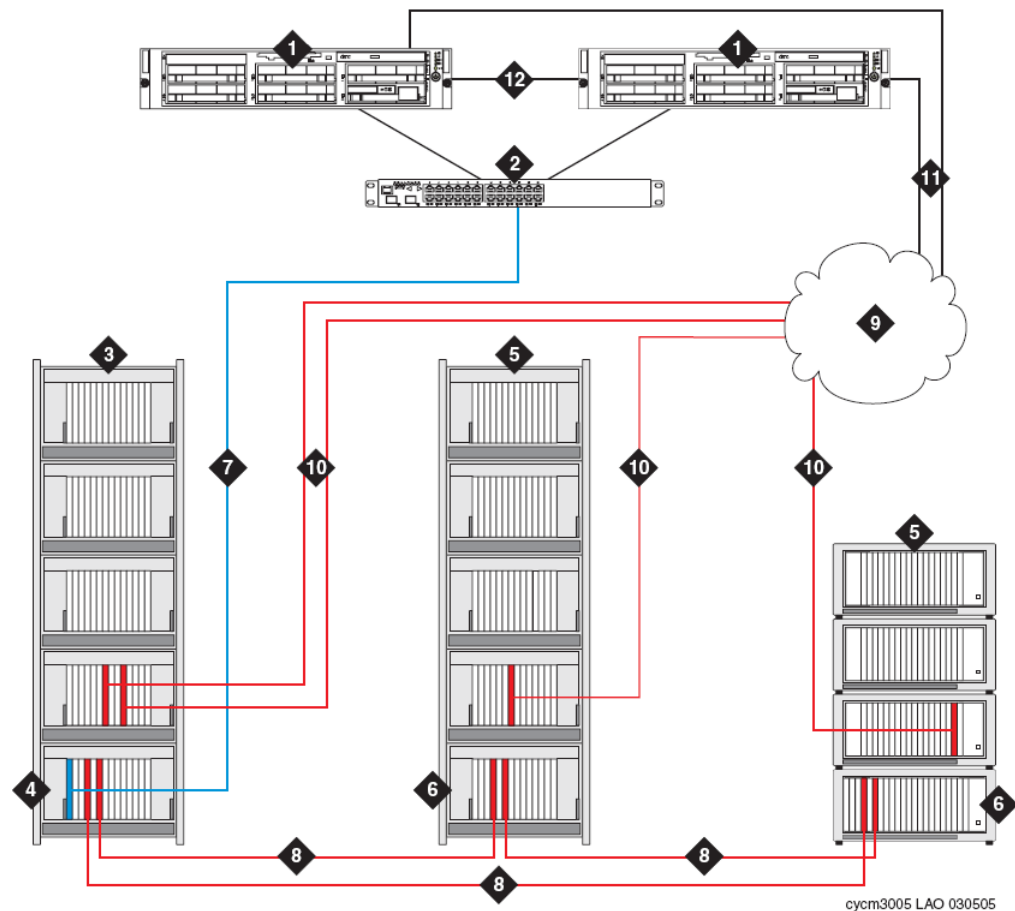


Figure notes: S8700-series direct-connect single control network

1. S8700-series Server
2. Ethernet Switch
3. Direct-connect PN (G650 Media Gateway stack [shown in figure], MCC1 Media Gateway, or SCC1 Media Gateway stack [shown in figure], consisting of at least two media gateways or carriers).
4. Media Gateway (G650) or expansion port network (EPN) control gateway (SCC1) or carrier (MCC1), in the A position, which contains:
 - A TN2312AP/BP IPSI circuit pack for IP connection to server.

NOTE: For the G650 Media Gateway, the BP version of the TN2312 is required in order to provide environmental maintenance.

 - Two TN570B EI circuit packs for bearer and control network connections to the other two PNs (if any).
5. PN (G650 Media Gateway or G650 stack [shown in figure], MCC1 Media Gateway, or SCC1 Media Gateway or SCC1 stack).

1 of 2

Figure notes: S8700-series direct-connect single control network (continued)

6. PN control gateway or carrier, in the A position, which contains two TN570B EI circuit packs for bearer and control network connections to the other two PNs.
NOTE: One TN2182 Tone Clock circuit pack must also be present per PN if the PN(s) consist of SCC1 or MCC1 Media Gateways. One maintenance-only TN2312AP/BP IPSI circuit pack must be present per PN if the PN(s) consist of G650 Media Gateways.
7. IPSI-to-server control network connection via Ethernet switch
8. TN 570/570 fiber connections between PNs
9. Customer LAN
10. LAN connections, if any, of optional TN2302AP IP Media Interface or TN2602AP IP Media Resource 320 for IP-TDM voice processing and optional TN799DP C-LAN for control of IP endpoints
NOTE: The number of TN2302AP, TN2602AP, and TN799DP circuit packs varies, depending on the number of IP endpoints, PNs, and adjunct systems. These circuit packs are optional for PNs in a direct-connect network and may be inserted into a port carrier (shown in figure) or the PN control carrier. However, the C-LAN circuit pack is required for downloads of firmware updates.
11. LAN connections of servers for remote administration
12. Duplicated server links, including the link for translations memory duplication and the link for control data sharing. The link for memory duplication is implemented through the DAL2 board or (for the S8720 and S8730 Server) through software duplication.

2 of 2

S8700-series direct-connect (duplicated control network)

For high reliability in a direct-connect configuration, the control network is duplicated. This configuration is basically the same as that of the single control network configuration, except that a second carrier or gateway is added in the B position to provide a second IPSI connection to the servers. In this case, the normally-active server is connected to the control carrier/gateway IPSI circuit pack, and the standby server is connected to the second carrier/gateway IPSI circuit pack. See [S8700-series direct-connect duplicated control network](#) on page 49.

All other connections between the PNs are the same.

Figure 8: S8700-series direct-connect duplicated control network

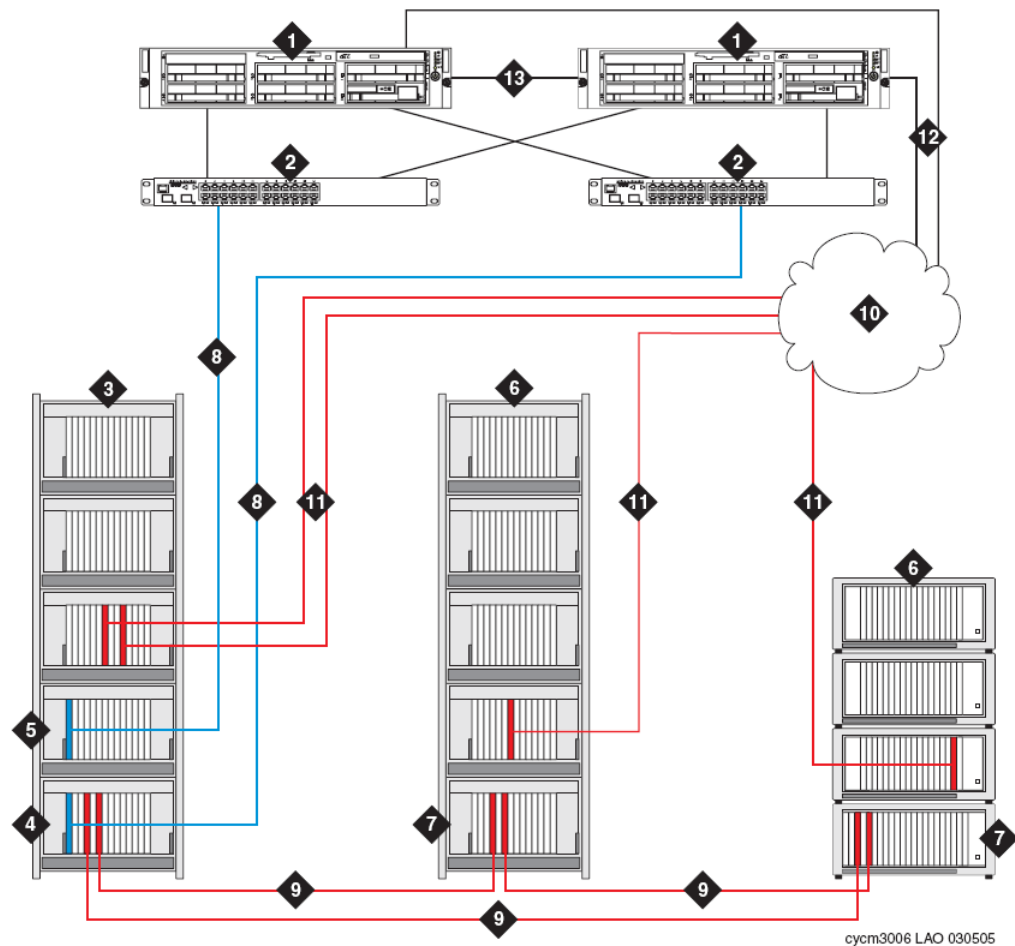


Figure notes: S8700-series direct-connect duplicated control network

1. S8700-series Server
2. Ethernet Switch
3. Direct-connect PN (G650 Media Gateway stack [shown in figure], MCC1 Media Gateway, or SCC1 Media Gateway stack), consisting of at least two media gateways or carriers.
4. PN control gateway or carrier, in the A position, which contains:
 - A TN2312AP/BP IPSI circuit pack for IP connection to server.

NOTE: For the G650 Media Gateway, the BP version of the TN2312 is required in order to provide environmental maintenance.

 - Two TN570B EI circuit packs for bearer and control network connections to the other two PNs (if any).
5. Duplicated expansion control gateway or carrier, in the B position, which contains:
 - A TN2312AP/BP IPSI circuit pack for IP connection to control network

Figure notes: S8700-series direct-connect duplicated control network (continued)

6. PN (G650 Media Gateway stack [shown in figure], MCC1 Media Gateway, SCC1 Media Gateway stack [shown in figure]), consisting of at least two media gateways or carriers.
7. PN control gateway or carrier, which contains two TN570B EI circuit packs for bearer and control network connections to the other two PNs.
NOTE: One TN2182 Tone Clock circuit pack must also be present per PN if the PN(s) consist of SCC1 or MCC1 Media Gateways. One maintenance-only TN2312BP IPSI circuit pack must be present per PN if the PN(s) consist of G650 Media Gateways.
The control gateway or carrier is always in the A position in the MCC1 or gateway stack.
8. IPSI-to-server control network connection via Ethernet switch
9. TN 570/570 fiber connections between PNs
10. Customer LAN
11. LAN connections, if any, of optional TN2302AP IP Media Interface or TN2602AP IP Media Resource 320 for IP-TDM voice processing and optional TN799DP C-LAN for control of IP endpoints
NOTE: The number of TN2302AP, TN2602AP, and TN799DP circuit packs varies, depending on the number of IP endpoints, PNs, and adjunct systems. These circuit packs are optional for PNs in a direct-connect network and may be inserted into a port carrier (shown in figure), the PN control carrier, or the duplicated control carrier. However, the C-LAN circuit pack is required for downloads of firmware updates.
12. LAN connections of servers for remote administration
13. Duplicated server links, including the link for translations memory duplication and the link for control data sharing. The link for memory duplication is implemented through the DAL2 board or (for the S8720 and S8730 Server) through software duplication.

2 of 2

S8700-series direct-connect (duplicated control and bearer networks)

For critical reliability in a direct-connect configuration, both the control network and bearer network are duplicated. This configuration is basically the same as the duplicated-control-network-only (high reliability) configuration, except that a second carrier or gateway is added in each additional PN with optic fiber link connections to the second carrier or gateway of the IPSI-connect PN. See [S8700-series direct-connect duplicated control network and duplicated voice-bearer network](#) on page 51.

All other connections between the PNs are the same as those of the duplicated-control-network-only configuration.

Figure 9: S8700-series direct-connect duplicated control network and duplicated voice-bearer network

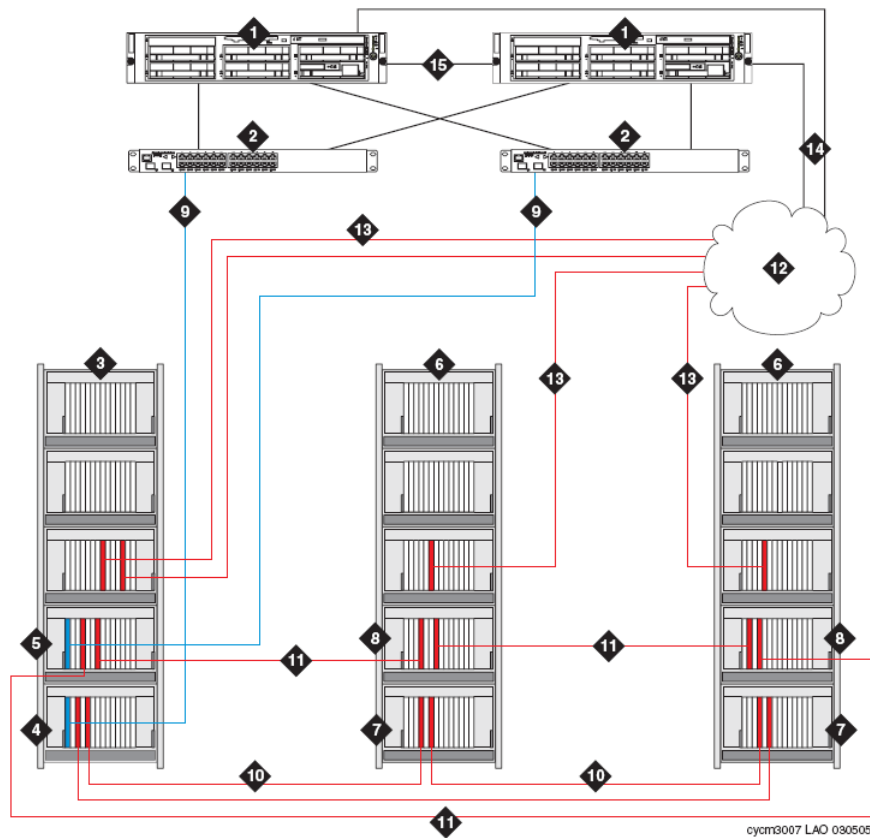


Figure notes: S8700-series direct-connect duplicated control network and duplicated voice-bearer network

1. S8700-series Server
2. Ethernet Switch
3. Direct-connect PN (G650 Media Gateway stack [shown in figure], MCC1 Media Gateway, or SCC1 Media Gateway stack, consisting of at least two media gateways or carriers).
4. PN control gateway or carrier, in the A position, which contains:
 - A TN2312AP/BP IPSI circuit pack for IP connection to server.

NOTE: For the G650 Media Gateway, the BP version of the TN2312 is required in order to provide environmental maintenance.

 - Two TN570B EI circuit packs for bearer and control network connections to the other two PNs (if any).
5. Duplicated expansion control cabinet or carrier, in the B position, which contains:
 - A TN2312AP/BP IPSI circuit pack for IP connection to control network.
 - Two TN570B EI circuit packs for bearer and control network connections to the other two PNs.

Figure notes: S8700-series direct-connect duplicated control network and duplicated voice-bearer network (continued)

6. PN (G650 Media Gateway stack (shown in figure), MCC1 Media Gateway, SCC1 Media Gateway stack), consisting of at least two media gateways or carriers.
7. PN control gateway or carrier, in the A position, which contains two TN570B EI circuit packs for bearer and control network connections to the other two PNs.
NOTE: One TN2182 Tone Clock circuit pack must also be present per PN if the PN(s) consist of SCC1 or MCC1 Media Gateways. One maintenance-only TN2312AP/BP IPSI circuit pack must be present per PN if the PN(s) consist of G650 Media Gateways.
8. Duplicated expansion control cabinet or carrier, in the B position, which contains:
 - Two TN570B EI circuit packs for bearer and control network connections to the other two PNs.
9. IPSI-to-server control network connection via Ethernet switch
10. TN 570/570 fiber connections between PNs
11. Duplicated TN 570/570 fiber connections between PNs
12. Customer LAN
13. LAN connections, if any, of optional TN2302AP IP Media Interface or TN2602AP IP Media Resource 320 for IP-TDM voice processing and optional TN799DP C-LAN for control of IP endpoints
NOTE: The number of TN2302AP, TN2602AP, and TN799DP circuit packs varies, depending on the number of IP endpoints, PNs, and adjunct systems. These circuit packs are optional for PNs in a direct-connect network and may be inserted into a port carrier (shown in figure), the PN control carrier, or the duplicated control carrier. However, the C-LAN circuit pack is required for downloads of firmware updates.
14. LAN connections of servers for remote administration
15. Duplicated server links, including the link for translations memory duplication and the link for control data sharing. The link for memory duplication is implemented through the DAL2 board or (for the S8720 and S8730 Server) through software duplication.

2 of 2

Rules for TN570B circuit pack placement with SCC1/MCC1 Media Gateways

Fiber-PNC MCC1 and SCC1 Media Gateways have the following rules on the placement of TN570B External Interface circuit packs in direct connect configurations.

With a single and duplicated control network

For a direct connect configuration with a single (standard reliability) or duplicated control (high reliability) network, the placement rules are as follows:

- The IPSI-connected PN houses up to two TN570B circuit packs, the first in the A01 slot and the second in the A02 slot. These circuit packs connect to the TN570B circuit packs residing in the A01 slots only of the non-IPSI-connected PNs (up to two).
- With three PNs in the direct connect configuration, the non-IPSI-connected PNs connect over fiber to each other with a TN570B circuit pack that resides in the A02 slot in each PN.

With duplicated bearer network

For a direct connect configuration with duplicated control and a duplicated bearer (critical reliability) network, the rules for a single/duplicated control network still apply. In addition, the following rules apply for the TN570B circuit packs in the B cabinets/carriers:

- The IPSI-connected PN houses up to two TN570B circuit packs in the duplicated control cabinet/carrier, the first in the B02 slot and the second in the B03 slot. These circuit packs connect to the TN570B circuit packs residing in the B02 slots only of the non-IPSI-connected PNs (up to two).
- With three PNs in the direct connect configuration, the non-IPSI-connected PNs connect over fiber to each other with a TN570B circuit pack that resides in the B03 slot in each PN.

The following table illustrates the exact TN570B-to-TN570B connections and the required placement of the TN570B circuit packs in the PNs.

Table 1: Slot positions of connected TN570B circuit packs in SCC1/MCC1 direct connect configurations (single and duplicated control networks)

		With PN1 IPSI-connected	With PN2 IPSI-connected	With PN3 IPSI-connected
Slot Positions of connected TN570Bs ¹	Single control (A position)	1A01 connects to 2A01	2A01 connects to 1A01	3A01 connects to 1A01
		1A02 connects to 3A01	2A02 connects to 3A01	3A02 connects to 2A01
		2A02 connects to 3A02	1A02 connects to 3A02	1A02 connects to 2A02
	Duplicated control (B position)	1B02 connects to 2B02	2B02 connects to 1B02	3B02 connects to 1B02
		1B02 connects to 3B02	2B03 connects to 3B02	3B03 connects to 2B02
		2B03 connects to 3B03	1B03 connects to 3B03	1B03 connects to 2B03

1. Slot positions are in the form *σσccss*, where *σσ* is the port network number, *cc* is the cabinet or carrier, and *ss* is the slot number.

Implications for migrations from DEFINITY R and SI Servers: In a migration from a DEFINITY Server R or SI to an S8700-series Server with a single or duplicated control network, one of the port networks in the new configuration must have either one or two IPSIs installed in the PN for connections to the server. It is recommended that the IPSI be installed in the converted processor port network (PPN) of the DEFINITY system because the TN570B fiber connections can remain as they were prior to the migration. If the IPSI is installed in a converted EPN instead, the fiber connections between the TN570Bs must be changed. [Table 1](#) illustrates the necessary changes, assuming that PN1 represents the converted PPN.

Likewise, if the migrated configuration includes a duplicated bearer network, the recommendation to install the IPSIs in the converted PPN becomes even more compelling. If the PPN does *not* become the IPSI-connected PN, then changes to fiber connections between the TN570Bs are necessary in both the A and B positions.

Note:

The G650 Media Gateway does not restrict where the TN570B EI circuit packs are placed, except that they cannot be inserted into the A01 and B01 slots.

S8700-series Center Stage Switch (single control network)

The Center Stage Switch (CSS) is an MCC1 Media Gateway that contains a switch node carrier (SNC) in the bottom E position. The SNC, in turn, houses TN573B switch node interface (SNI) circuit packs, which connect to PNs over optic fiber cable to TN570B EI circuit packs in the PNs. A single SNC allows 15 PNs to be connected with fiber to the IPSI-connected PN. In large configurations, a second or third MCC1 may be equipped with an SNC. The SNC expansion of port networks, therefore, is as follows:

- One SN can expand to up to 15 PNs.
- Two SNs can expand to up to 29 PNs.
- Three SNs can expand to up to 44 PNs.

Note:

The fiber link connections in an S8700-series CSS configuration follow the same distance rules as those of the S8700-series direct-connect configurations.

A single IPSI circuit pack allows the server to control up to 5 PNs only. Therefore, in a configuration with many PNs, multiple PNs may be IPSI-connected.

PN configurations

The MCC1 Media Gateway with a CSS is a IPSI-connected PN that also houses an SNC. However, the MCC1 as a CSS can also be configured to house *only* the SNC, with no control or port carriers. In this case, the MCC1 connects to a IPSI-connected PN using the SNI-to-TN570B fiber connection. Therefore, in a CSS configuration, the PNs can be any of the following:

- MCC1 Media Gateway

IPSI-connected. An MCC1 PN that is connected to the server has the same configuration as that of a IPSI-connected PN in a direct-connect with duplex-servers-only configuration.

However, if the MCC1 PN also contains an SNC, the IPSI-connected expansion control carrier of the MCC1 must also be connected to the SNC with optic fiber from a TN570B circuit pack. Also, only 4 carriers are then available for control and port circuit packs.

Non-IPSI-connected. An MCC1 PN that is *not* connected directly to the server has the same configuration as that of an additional MCC1 PN in a direct-connect with single control network configuration.

- G650 media gateway

IPSI-connected. A G650 PN can consist of one or more G650 gateways in a stack (up to 5 in a stack connected by TDM/LAN bus cables). A G650 PN that is connected to the server has the same configuration as that of a IPSI-connected PN in a direct-connect with single control network configuration.

Not IPSI-connected. A G650 PN that is *not* connected directly to the server but is connected to the SNC has the same configuration as that of an additional G650 PN in a direct-connect with single control network configuration.

- SCC1 media gateway

IPSI-connected. An SCC1 PN can consist of one or more SCC1 gateways in a stack (up to 4 in stack connected by TDM/LAN bus cables). An SCC1 PN that is connected to the server has the same configuration as that of a IPSI-connected PN in a direct-connect with single control network configuration.

Not IPSI-connected. An SCC1 PN that is *not* connected directly to the server but is connected to the SNC has the same configuration as that of an additional SCC1 PN in a direct-connect with single control network configuration.

Note:

With the S8700-series Server, the SNC is *not* connected to the other carriers in the MCC1 cabinet with TDM/LAN bus cables.

In the following example, 5 PNs, one of which is embedded in the MCC1 with the CSS, requires two IPSIs.

TN2602AP circuit packs for duplicated bearer

For an S8700-series Server, any individual fiber-PNC PN can contain load-balancing or duplicated TN2602AP circuit packs. However, TN2602AP circuit packs do *not* need to be implemented uniformly within the system. Thus, some PNs may have no TN2602AP circuit pack, some PNs may have load-balancing TN2602AP circuit packs, and some PNs may have duplicated TN2602AP circuit packs. Thus, an S8700-series Server can have duplicated bearer connections, even though it does not support duplicated control or fiber-based duplicated bearer.

Figure 10: S8700-series Center Stage Switch single control network

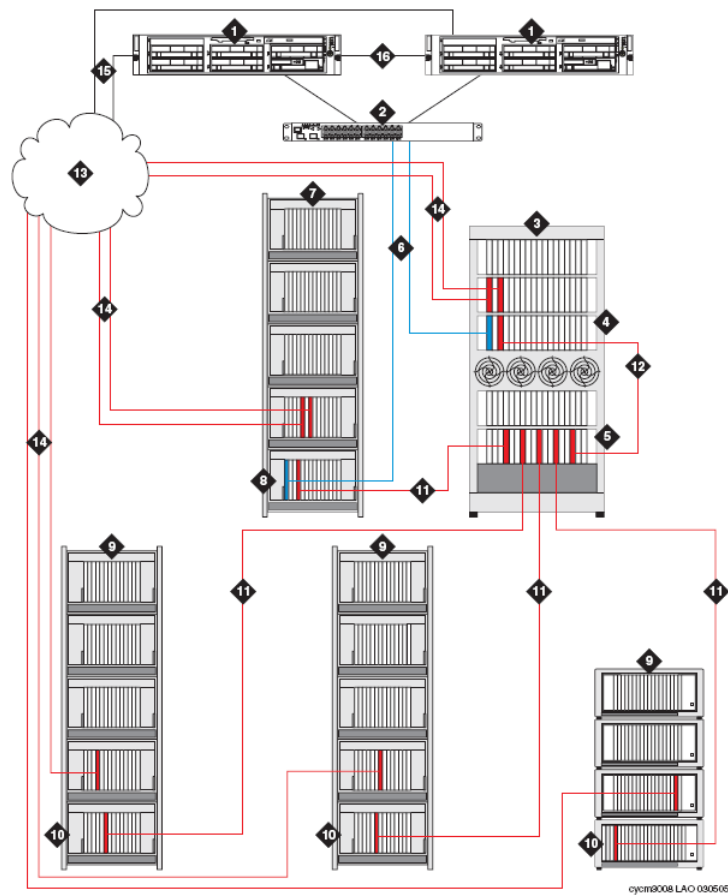


Figure notes: S8700-series Center Stage Switch single control network

1. S8700-series Server
2. Ethernet Switch
3. MCC1 Media Gateway (CSS and PN)
4. PN control carrier, in the A position, which contains:
 - A TN2312AP/BP IPSI circuit pack for IP connection to server.
 - A TN570B EI circuit pack for bearer and control network connections to the Switch Node Carrier (SNC).
5. SNC, in the E position, which contains:
 - Multiple TN573B SNI circuit packs for EI connections to PNs
6. IPSI-to-server control network connection via Ethernet switch
7. IPSI-connected PN (G650 Media Gateway or stack [shown in figure], MCC1 Media Gateway, or SCC1 Media Gateway stack).

Figure notes: S8700-series Center Stage Switch single control network

8. PN control gateway or carrier, in the A position, which contains:
 - A TN2312AP/BP IPSI circuit pack for IP connection to server.
NOTE: For the G650 Media Gateway, the BP version of the TN2312 is required in order to provide environmental maintenance.
 - A TN570B EI circuit pack for bearer and control network connections to the SNI.
 9. PN (MCC1 Media Gateway, SCC1 Media Gateway stack [shown in figure], or G650 Media Gateway stack [shown in figure]) consisting of one or more media gateways or carriers.
 10. PN control gateway or carrier, in the A position, which contains:
 - A TN570B EI circuit pack for bearer and control network connections to the SNI.
NOTE: One TN2182 Tone Clock circuit pack must also be present per PN if the PN(s) consist of SCC1 or MCC1 Media Gateways. One maintenance-only TN2312BP IPSI circuit pack must be present per PN if the PN(s) consist of G650 Media Gateways.
 11. TN 570B/573B fiber connections between PNs and SNC
 12. TN 573B/570B fiber connections between the SNC and the MCC1's A carrier (if the MCC1 is a PN)
 13. Customer LAN
 14. LAN connections, if any, of optional TN2302AP IP Media Interface or TN2602AP IP Media Resource 320 for IP-TDM voice processing and optional TN799DP C-LAN for control of IP endpoints
NOTE: The number of TN2302AP, TN2602AP, and TN799DP circuit packs varies, depending on the number of IP endpoints, PNs, and adjunct systems. These circuit packs are optional for PNs in a CSS-connected network and may be inserted into a port carrier (shown in figure), the PN control carrier, or the duplicated control carrier. However, the C-LAN circuit pack is required for downloads of firmware updates.
 15. LAN connections of servers for remote administration
 16. Duplicated server links, including the link for translations memory duplication and the link for control data sharing. The link for memory duplication is implemented through the DAL2 board or (for the S8720 and S8730 Server) through software duplication.
-

S8700-series Center Stage Switch (duplicated control network)

For high reliability in a CSS configuration, the control network is duplicated. This configuration is basically the same as that of the single control network configuration, except that a second carrier or gateway is added in the B position of each IPSI-connected PN to provide a second IPSI connection to the servers. In addition, this configuration contains duplicated Ethernet switches, each connected to both S8700-series Servers.

Note:

With the S8700-series Server, the SNC is *not* connected to the other carriers in the MCC1 cabinet with TDM/LAN bus cables.

IPSI-connected PNs

Because a single IPSI circuit pack allows the server to control up to 5 PNs only, a configuration with many PNs and duplicated control networks can require many IPSI circuit packs.

TN2602AP circuit packs for duplicated bearer

For an S8700-series Server, any individual fiber-PNC PN can contain load-balancing or duplicated TN2602AP circuit packs. However, TN2602AP circuit packs do *not* need to be implemented uniformly within the system. Thus, some PNs may have no TN2602AP circuit pack, some PNs may have load-balancing TN2602AP circuit packs, and some PNs may have duplicated TN2602AP circuit packs. Thus, an S8700-series Server can have duplicated bearer connections, even though it does not support duplicated control or fiber-based duplicated bearer.

Figure 11: S8700-series Center Stage Switch duplicated control networks

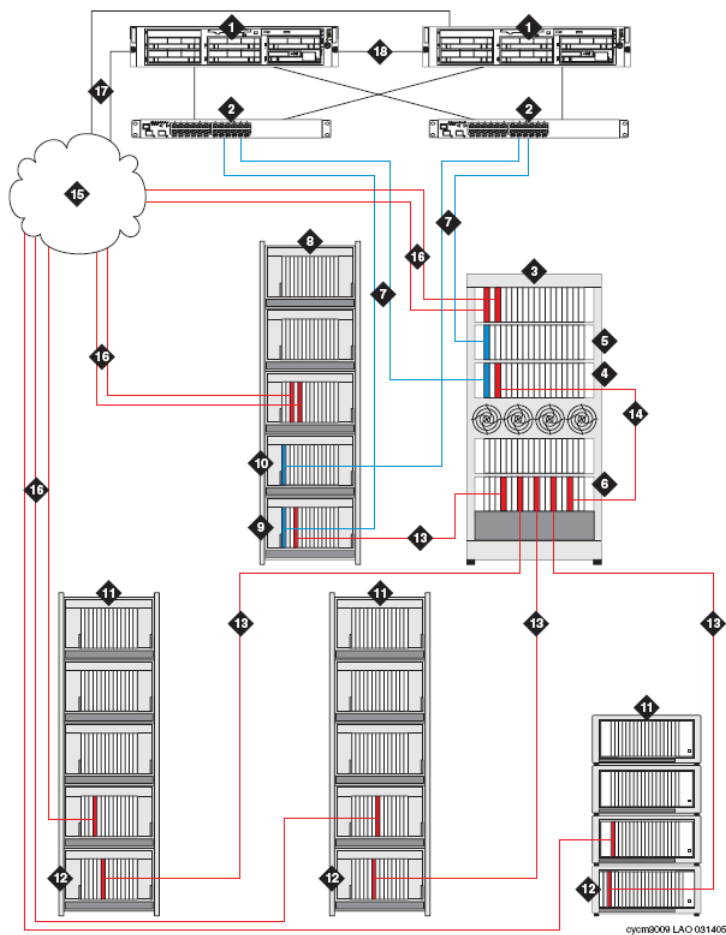


Figure notes: S8700-series Center Stage Switch duplicated control networks

1. S8700-series Server
 2. Ethernet Switch
 3. MCC1 Media Gateway (CSS and PN)
 4. PN control carrier, in the A position, which contains:
 - A TN2312AP/BP IPSI circuit pack for IP connection to server.
 - A TN570B EI circuit pack for bearer and control network connections to the Switch Node Carrier (SNC).
 5. Duplicated control carrier, in the B position, which contains:
 - A TN2312AP/BP IPSI circuit pack for IP connection to duplicated control network.
 6. SNC, in the E position, which contains:
 - Multiple TN573B SNI circuit packs for EI connections to PNs
 7. Dedicated IPSI-to-server control network connection via Ethernet switch
 8. IPSI-connected PN (G650 Media Gateway stack [shown in figure], MCC1 Media Gateway, or SCC1 Media Gateway stack, consisting of at least two media gateways or carriers).
 9. PN control gateway or carrier, in the A position, which contains:
 - A TN2312AP/BP IPSI circuit pack for IP connection to server.

NOTE: For the G650 Media Gateway, the BP version of the TN2312 is required in order to provide environmental maintenance.
 - A TN570B EI circuit pack for bearer and control network connections to the SNC.
 10. Duplicated control gateway, in the B position, which contains:
 - A TN2312AP/BP IPSI circuit pack for IP connection to server.
 11. Fiber-PNC PN (G650 Media Gateway stack [shown in figure], MCC1 Media Gateway, SCC1 Media Gateway stack [shown in figure]), consisting of at least two media gateways or carriers.
 12. PN control gateway or carrier, in the A position which contains:
 - A TN570B EI circuit pack for bearer and control network connections to the SNI.

NOTE: One TN2182 Tone Clock circuit pack must also be present per PN if the PN(s) consist of SCC1 or MCC1 Media Gateways. One maintenance-only TN2312BP IPSI circuit pack must be present per PN if the PN(s) consist of G650 Media Gateways.
 13. TN 570B/573B fiber connections between PNs and SNC
 14. TN 573B/570B fiber connections between the SNC and the MCC1's A carrier (if the MCC1 is a PN)
 15. Customer LAN
 16. LAN connections, if any, of optional TN2302AP IP Media Interface or TN2602AP IP Media Resource 320 for IP-TDM voice processing and optional TN799DP C-LAN for control of IP endpoints

NOTE: The number of TN2302AP, TN2602AP, and TN799DP circuit packs varies, depending on the number of IP endpoints, PNs, and adjunct systems. These circuit packs are optional for PNs in a CSS-connected network and may be inserted into a port carrier (shown in figure), the PN control carrier, or the duplicated control carrier. However, the C-LAN circuit pack is required for downloads of firmware updates.
 17. LAN connections of servers for remote administration
 18. Duplicated server links, including the link for translations memory duplication and the link for control data sharing. The link for memory duplication is implemented through the DAL2 board or (for the S8720 and S8730 Server) through software duplication.
-

S8700-series Center Stage Switch (duplicated control and bearer networks)

Like the high reliability CSS configuration, the critical reliability CSS configuration duplicates the control network between the servers and the PNs. In addition, this configuration contains duplicated switch node carriers in each CSS, which duplicates the bearer network between PNs. Each PN, in turn, contains duplicated TN570B external interface circuit packs that connect to both switch node carriers. In addition, each non-IPSI-connected PN must have duplicate TN2182CTone Clock circuit packs. And finally, in each location of a PN or group of PNs, one of the PNs must have a TN771 Maintenance Test circuit pack.

Note:

With the S8700-series Server, the SNCs are *not* connected to the other carriers in the MCC1 cabinet with TDM/LAN bus cables.

TN2602AP circuit packs for duplicated bearer

For an S8700-series Server, any individual fiber-PNC PN can contain load-balancing or duplicated TN2602AP circuit packs. However, TN2602AP circuit packs do *not* need to be implemented uniformly within the system. Thus, some PNs may have no TN2602AP circuit pack, some PNs may have load-balancing TN2602AP circuit packs, and some PNs may have duplicated TN2602AP circuit packs. Thus, an S8700-series Server can have duplicated bearer connections, even though it does not support duplicated control or fiber-based duplicated bearer.

Figure 12: S8700-series Center Stage Switch duplicated control and duplicated voice-bearer networks

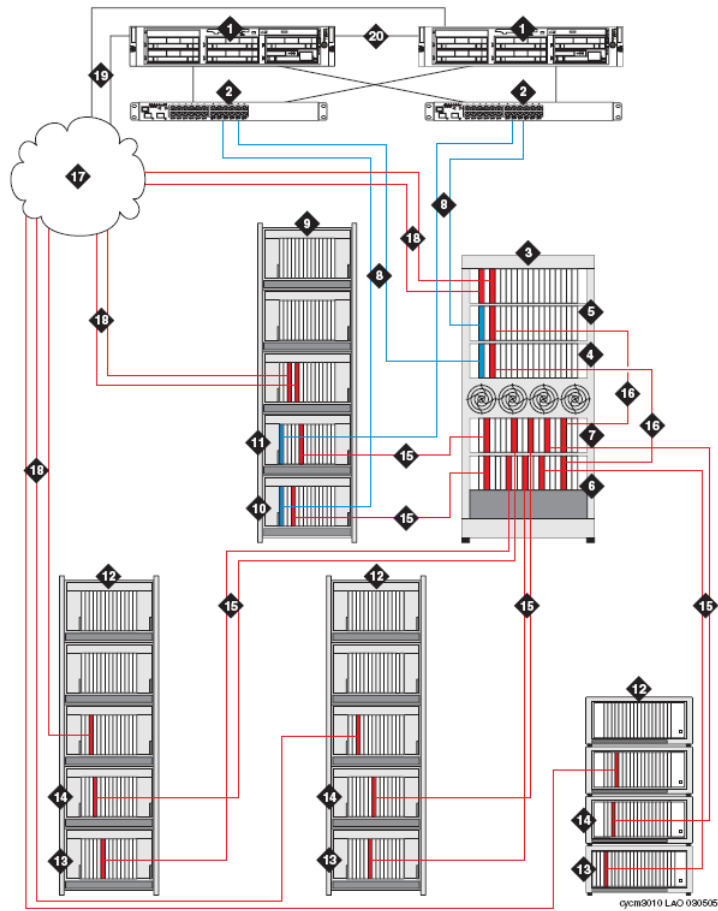


Figure notes: S8700-series Center Stage Switch duplicated control and duplicated voice-bearer networks

1. S8700-series Server
2. Ethernet Switch
3. IPSI-connected PN (MCC1 Media Gateway, consisting of at least two carriers).
4. Expansion port network (EPN) control carrier, in the A position, which contains:
 - A TN2312AP/BP IPSI circuit pack for IP connection to server.
 - A TN570B EI circuit pack for bearer and control network connections to the Switch Node Carrier (SNC).
5. Duplicated control carrier, in the B position, which contains:
 - A TN2312AP/BP IPSI circuit pack for IP connection to duplicated control network.
 - A TN570B circuit pack for bearer and control network connections to the SNC.

NOTE: For the duplicated control and bearer network configurations, each location of a PN or a group of PNs must contain a TN771 Maintenance Test circuit pack.
6. SNC, in the E position, which contains:
 - Multiple TN573B SNI circuit packs for EI connections to PNs
7. Duplicated SNC, in the D position, which duplicates the EI connections of the primary SNC.
8. Dedicated IPSI-to-server control network connection via Ethernet switch
9. IPSI-connected PN (G650 Media Gateway stack [shown in figure], MCC1 Media Gateway, or SCC1 Media Gateway stack), consisting of at least two media gateways or carriers).
10. PN control gateway or carrier, in the A position, which contains:
 - A TN2312AP/BP IPSI circuit pack for IP connection to server.

NOTE: For the G650 Media Gateway, the BP version of the TN2312 is required in order to provide environmental maintenance.

 - A TN570B EI circuit pack for bearer and control network connections to the SNC.
11. Duplicated control gateway, in the B position, which contains:
 - A TN2312AP/BP IPSI circuit pack for IP connection to server.
 - A TN570B EI circuit pack for bearer and control network connections to the SNI.
12. Fiber-PNC PN (G650 Media Gateway stack [shown in figure], MCC1 Media Gateway, SCC1 Media Gateway stack [shown in figure]), consisting of at least two media gateways or carriers.
13. PN control gateway or carrier, in the A position, which contains:
 - A TN570B EI circuit pack for bearer and control network connections to the SNI.
 - One TN2182 Tone Clock circuit pack if the PN consists of SCC1 or MCC1 Media Gateways, or one maintenance-only TN2312AP/BP IPSI circuit pack if the PN(s) consist of G650 Media Gateways
14. Duplicated control gateway, in the B position, which contains:
 - A TN570B EI circuit pack for bearer and control network connections to the SNI.
 - One TN2182 Tone Clock circuit pack if the PN consists of SCC1 or MCC1 Media Gateways, or one maintenance-only TN2312AP/BP IPSI circuit pack if the PN(s) consist of G650 Media Gateways
15. TN 570B/573B fiber connections between PNs and SNCs
16. TN 573B/570B fiber connections between the SNCs and the MCC1's A and B carriers (if the MCC1 is a PN)
17. Customer LAN

1 of 2

Figure notes: S8700-series Center Stage Switch duplicated control and duplicated voice-bearer networks (continued)

18. LAN connections, if any, of optional TN2302AP IP Media Interface or TN2602AP IP Media Resource 320 for IP-TDM voice processing and optional TN799DP C-LAN for control of IP endpoints
NOTE: The number of TN2302AP, TN2602AP, and TN799DP circuit packs varies, depending on the number of IP endpoints, PNs, and adjunct systems. These circuit packs are optional for PNs in a CSS-connected network and may be inserted into a port carrier (shown in figure), the PN control carrier, or the duplicated control carrier. However, the C-LAN circuit pack is required for downloads of firmware updates.
19. LAN connections of servers for remote administration
20. Duplicated server links, including the link for translations memory duplication and the link for control data sharing. The link for memory duplication is implemented through the DAL2 board or (for the S8720 and S8730 Server) through software duplication.

2 of 2

S8700-series ATM Switch (single control network)

An S8700-series Server can support up to 64 PNs by using Asynchronous Transmission Mode (ATM) switching for PN connections. Each PN in the configuration must have a TN2305B ATM interface circuit pack (for multimode fiber) or a TN2306B ATM interface circuit pack (for single-mode fiber) in order to connect to every other PN in the system. The PNs can be MCC1, SCC1, or G650 Media Gateways (or gateway stacks). At least one PN is IPSI-connected to the S8700-series Servers. The ATM switch connects to the fiber with an OC-3 interface.

Note:

The ATM configuration illustrations show multi-mode fiber connections using TN2305B ATM-CES circuit packs and multi-mode fiber. With single-mode fiber connections, the configurations are the same, but the ATM connections uses TN2306B ATM-CES circuit packs and single-mode fiber.

A single IPSI circuit pack allows the server to control up to 5 PNs only. Therefore, in a configuration with many PNs, multiple PNs may be IPSI-connected.

TN2602AP circuit packs for duplicated bearer

For an S8700-series Server, any individual fiber-PN can contain load-balancing or duplicated TN2602AP circuit packs. However, TN2602AP circuit packs do *not* need to be implemented uniformly within the system. Thus, some PNs may have no TN2602AP circuit pack, some PNs may have load-balancing TN2602AP circuit packs, and some PNs may have duplicated TN2602AP circuit packs. Thus, an S8700-series Server can have duplicated bearer connections, even though it does not support duplicated control or fiber-based duplicated bearer.

IPSI-connected PN

Only the G650 media gateway is available for new installations. However, because different migrations from older systems are supported, the PN connected to the S8700-series Server in an ATM configuration can consist of one of three gateways:

- G650 media gateway

A G650 PN can consist of one to five G650 gateways in a stack connected by a TDM/LAN bus cable. One gateway, serving as control gateway in position A at the bottom of the stack, contains the following:

- TN2312BP IPSI circuit pack
- TN2305B or TN2306B ATM-CES circuit pack for bearer and control network connections to the ATM switch
- TN464GP DS-1 circuit pack for clock synchronization with a network resource

- SCC1 media gateway

An SCC1 PN can consist of one to four SCC1 gateways in a stack connected by a TDM/LAN bus cable. One gateway, serving as control gateway in position A at the bottom of the stack, contains the following:

- TN2312AP/BP IPSI circuit pack
- TN2305B or TN2306B ATM-CES circuit pack for bearer and control network connections to the ATM switch
- TN464GP DS-1 circuit pack for clock synchronization with a network resource

The control gateway or another gateway in the PN also contains a TN464GP DS-1 circuit pack for clock synchronization with a network resource

Note:

The TN2404 and TN2401 processor circuit packs, needed for the SI model, are *not* used and must be removed if the SCC1 is being migrated from a DEFINITY server.

- MCC1 media gateway

An MCC1 PN has from one to five carriers in an MCC1 gateway connected by a TDM/LAN bus cables. One carrier, serving as control carrier in position A in the middle of the stack, contains the following:

- TN2312AP/BP IPSI circuit pack
- TN2305B or TN2306B ATM-CES circuit pack for bearer and control network connections to the ATM switch

The control carrier or another carrier in the PN also contains a TN464GP DS-1 circuit pack for clock synchronization with a network resource

Note:

The control carrier for a DEFINTY Server SI or R is not used and must be removed and replaced with an expansion control carrier if the MCC1 is being migrated. The processor circuit packs, needed for the SI or R models, are not used and must be removed. Other PNs can also be MCC1 Gateways.

PNs not IPSI-connected

In an ATM switch with a single control network configuration, additional PNs (up to 64) may be connected to the IPSI-connected PN using fiber optic cable between TN2305B/TN2306B ATM-CES circuit packs and an ATM switch. The cables are connected to the circuit packs using short-range or long-range multi-mode transceivers, or single-mode transceivers, depending on the distance between PNs.

The TN2305B/2306B ATM-CES circuit packs reside in the control carrier (MCC1) or control gateway (G650 or SCC1) of each PN. The control carrier or gateway in each additional PN also must contain a TN2182 Tone Clock circuit pack (SCC1 or MCC1) or a maintenance-only TN2312BP IPSI circuit pack (G650).

Figure 13: S8700-series ATM single control network

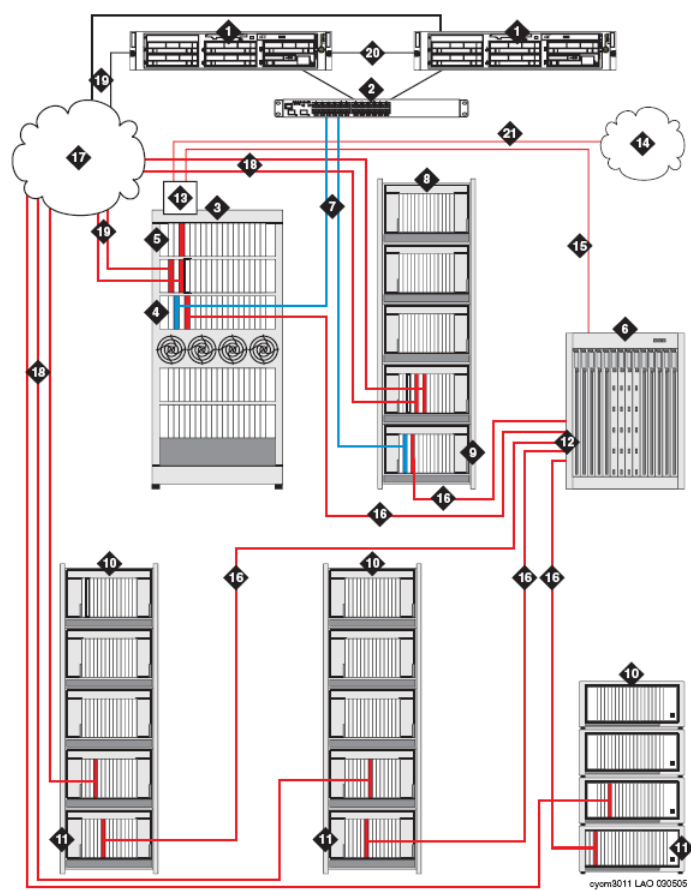


Figure notes: S8700-series ATM single control network

1. S8700-series Server
 2. Ethernet Switch
 3. IPSI-connect PN (G650 Media Gateway stack, MCC1 Media Gateway [shown in figure], or SCC1 Media Gateway stack), consisting of at least two media gateways or carriers.
 4. PN control gateway or carrier, in the A position which contains:
 - A TN2312AP/BP IPSI circuit pack for IP connection to server.
NOTE: For the G650 Media Gateway, the BP version of the TN2312 is required in order to provide environmental maintenance.
 - A TN2305B or T2306B ATM-CES circuit pack for bearer and control network connections to the ATM switch.
 5. TN464GP DS-1 circuit pack, for clock synchronization with a network resource
 6. ATM switch.
 7. IPSI-to-server control network connection via Ethernet switch
 8. IPSI-connect PN (G650 Media Gateway stack [shown in figure], MCC1 Media Gateway, or SCC1 Media Gateway stack).
 9. PN control gateway or carrier, in the A position which contains:
 - A TN2312AP/BP IPSI circuit pack for IP connection to server.
NOTE: For the G650 Media Gateway, the BP version of the TN2312 is required in order to provide environmental maintenance.
 - A TN2305B or T2306B ATM-CES circuit pack for bearer and control network connections to the ATM switch.
 10. Fiber-PNC PN (G650 Media Gateway stack [shown in figure], MCC1 Media Gateway, SCC1 Media Gateway stack [shown in figure])
 11. PN control gateway or carrier, in the A position, which contains:
 - A TN2305B or T2306B ATM-CES circuit pack for bearer and control network connections to the ATM switch.
NOTE: One TN2182 Tone Clock circuit pack must also be present per PN if the PN(s) consist of SCC1 or MCC1 Media Gateways. One maintenance-only TN2312BP IPSI circuit pack must be present per PN if the PN(s) consist of G650 Media Gateways.
 12. OC-3 connections to the ATM switch
 13. 401A/B sync splitter, attached to the back of the TN464GP DS1 circuit pack
 14. Public network (PSTN)
 15. Timing signal to ATM switch from sync splitter.
 16. Fiber connections from TN2305B/TN2306B to ATM switch.
 17. Customer LAN
 18. LAN connections, if any, of optional TN2302AP IP Media Interface or TN2602AP IP Media Resource 320 for IP-TDM voice processing and optional TN799DP C-LAN for control of IP endpoints. These circuit packs are optional for PNs in an ATM-connected network. However, the C-LAN circuit pack is required for downloads of firmware updates.
 19. LAN connections of servers for remote administration
 20. Duplicated server links, including the link for translations memory duplication and the link for control data sharing. The link for memory duplication is implemented through the DAL2 board or (for the S8720 and S8730 Server) through software duplication.
 21. DS1 connection from sync splitter.
-

S8700-series ATM Switch (duplicated control networks)

The high reliability ATM configuration duplicates the control network between the servers and the PNs. This configuration contains duplicated Ethernet switches, each connected to both S8700-series Servers. Remote IPSI-connected PNs also require duplicated Ethernet switches. However, IPSI-connected PNs that are collocated with the servers may share Ethernet switches with the server. The high reliability configuration also includes duplicated IPSIs in a second carrier or gateway of the IPSI-connected PN. In an ATM high reliability configuration, the $n + 1$ formula for IPSIs is not required.

TN2602AP circuit packs for duplicated bearer

For an S8700-series Server, any individual fiber-PNC PN can contain load-balancing or duplicated TN2602AP circuit packs. However, TN2602AP circuit packs do *not* need to be implemented uniformly within the system. Thus, some PNs may have no TN2602AP circuit pack, some PNs may have load-balancing TN2602AP circuit packs, and some PNs may have duplicated TN2602AP circuit packs. Thus, an S8700-series Server can have duplicated bearer connections, even though it does not support duplicated control or fiber-based duplicated bearer.

Figure 14: S8700-series ATM duplicated control networks

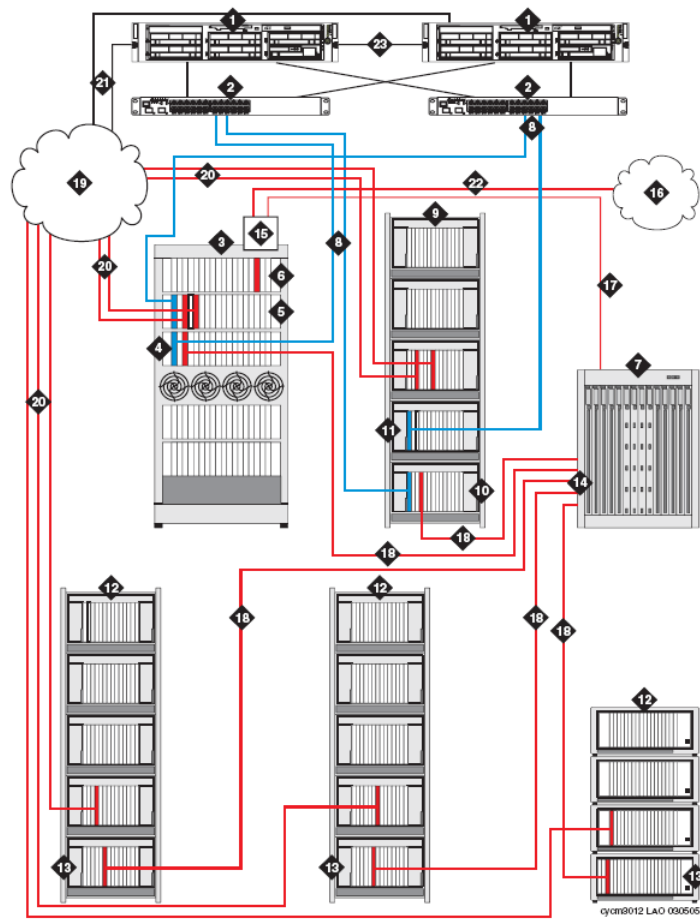


Figure notes: S8700-series ATM duplicated control networks

1. S8700-series Server
 2. Ethernet Switch
 3. IPSI-connected PN (G650 Media Gateway stack, MCC1 Media Gateway [shown in figure], or SCC1 Media Gateway stack), consisting of at least two media gateways or carriers.
 4. PN control gateway or carrier, in the A position, which contains:
 - A TN2312AP/BP IPSI circuit pack for IP connection to server.
NOTE: For the G650 Media Gateway, the BP version of the TN2312 is required in order to provide environmental maintenance.
 - A TN2305B or T2306B ATM-CES circuit pack for bearer and control network connections to the ATM switch.
 5. Duplicated control carrier, in the B position, which contains:
 - A TN2312AP/BP IPSI circuit pack for IP connection to duplicated control network
 6. TN464GP DS-1 circuit pack, for clock synchronization with a network resource
 7. ATM switch.
 8. IPSI-to-server control network connection via Ethernet switch
 9. IPSI-connected PN (G650 Media Gateway stack [shown in figure], MCC1 Media Gateway, or SCC1 Media Gateway stack).
 10. PN control gateway or carrier, in the A position, which contains:
 - A TN2312AP/BP IPSI circuit pack for IP connection to server.
 - A TN2305B or T2306B ATM-CES circuit pack for bearer and control network connections to the ATM switch.
 11. Duplicated control gateway, in the B position, which contains:
 - A TN2312AP/BP IPSI circuit pack for IP connection to server.
 12. Fiber-PNC PN (G650 Media Gateway stack [shown in figure], MCC1 Media Gateway, SCC1 Media Gateway stack [shown in figure]).
 13. PN control gateway or carrier, in the A position, which contains:
 - A TN2305B or T2306B ATM-CES circuit pack for bearer and control network connections to the ATM switch.
NOTE: One TN2182 Tone Clock circuit pack must also be present per PN if the PN(s) consist of SCC1 or MCC1 Media Gateways. One maintenance-only TN2312BP IPSI circuit pack must be present per PN if the PN(s) consist of G650 Media Gateways.
 14. OC-3 connections to the ATM switch
 15. 401A/B sync splitter, attached to the back of the TN464GP DS1 circuit pack
 16. Public network (PSTN)
 17. Timing signal to ATM switch from sync splitter.
 18. Fiber connections from TN2305B/TN2306B to ATM switch.
 19. Customer LAN
 20. LAN connections, if any, of optional TN2302AP IP Media Interface or TN2602AP IP Media Resource 320 for IP-TDM voice processing and optional TN799DP C-LAN for control of IP endpoints. These circuit packs are optional for PNs in an ATM-connected network. However, the C-LAN circuit pack is required for downloads of firmware updates.
 21. LAN connections of servers for remote administration
 22. DS1 connection from sync splitter.
 23. Duplicated server links, including the link for translations memory duplication and the link for control data sharing. The link for memory duplication is implemented through the DAL2 board or (for the S8720 and S8730 Server) through software duplication.
-

S8700-series ATM Switch (duplicated control and bearer networks)

Like the high reliability ATM configuration, the critical reliability ATM configuration duplicates the control network between the servers and the PNs. In addition, the critical reliability configuration contains duplicated ATM switches and ATM connections, with each PN containing duplicated TN2305B/TN2306B ATM-CES circuit packs with connections to both ATM switches. In addition, each non-IPSI-connected PN must have duplicate TN2182CTone Clock circuit packs. And finally, in each location of a PN or group of PNs, one of the PNs must have a TN771 Maintenance Test circuit pack.

As with an ATM high reliability configuration, the $n + 1$ formula for IPSIs is not required.

TN2602AP circuit packs for duplicated bearer

For an S8700-series Server, any individual fiber-PNC PN can contain load-balancing or duplicated TN2602AP circuit packs. However, TN2602AP circuit packs do *not* need to be implemented uniformly within the system. Thus, some PNs may have no TN2602AP circuit pack, some PNs may have load-balancing TN2602AP circuit packs, and some PNs may have duplicated TN2602AP circuit packs. Thus, an S8700-series Server can have duplicated bearer connections, even though it does not support duplicated control or fiber-based duplicated bearer.

Figure 15: S8700-series ATM duplicated control and duplicated voice-bearer networks

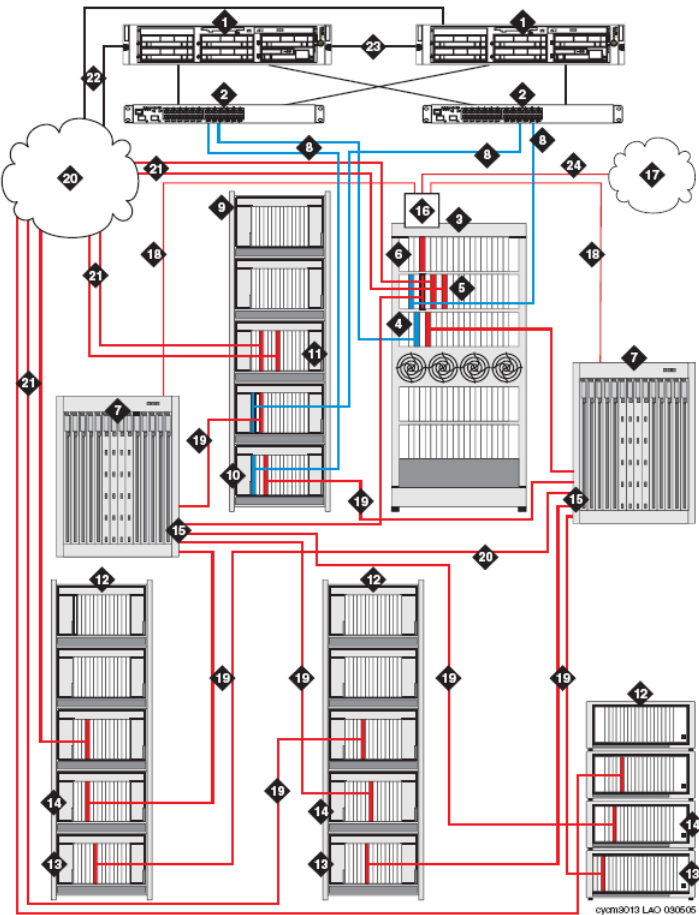


Figure notes: S8700-series ATM duplicated control and duplicated voice-bearer networks

1. S8700-series Server
2. Ethernet Switch
3. IPSI-connect PN (G650 Media Gateway stack, MCC1 Media Gateway [shown in figure], or SCC1 Media Gateway stack), consisting of at least two media gateways or carriers.
4. PN control gateway or carrier, in the A position, which contains:
 - A TN2312AP/BP IPSI circuit pack for IP connection to server.
NOTE: For the G650 Media Gateway, the BP version of the TN2312 is required in order to provide environmental maintenance.
 - A TN2305B or T2306B ATM-CES circuit pack for bearer and control network connections to the ATM switch.
5. Duplicated control carrier or gateway, in the B position, which contains:
 - A TN2312AP/BP IPSI circuit pack for IP connection to duplicated control network
 - A TN2305B (for multimode fiber) or TN2306B (for single-mode fiber) ATM-CES circuit pack for bearer and control network connections to the duplicated ATM switch.
NOTE: For the duplicated control and bearer network configurations, each location of a PN or a group of PNs must contain a TN771 Maintenance Test circuit pack.
6. TN464GP DS-1 circuit pack, for clock synchronization with a network resource
7. ATM switch. There are two ATM switches in this configuration.
8. IPSI-to-server control network connection via Ethernet switch
9. IPSI-connected PN (G650 Media Gateway stack [shown in figure], MCC1 Media Gateway, or SCC1 Media Gateway stack, consisting of at least two media gateways or carriers).
10. PN control gateway or carrier, in the A position, which contains:
 - A TN2312AP/BP IPSI circuit pack for IP connection to server.
 - A TN2305B or T2306B ATM-CES circuit pack for bearer and control network connections to the ATM switch.
11. Duplicated control gateway or carrier, in the B position, which contains:
 - A TN2312AP/BP IPSI circuit pack for IP connection to server.
 - A TN2305B or TN2306B ATM-CES circuit pack for bearer and control network connections to the duplicated ATM switch.
12. Fiber-PNC PN (G650 Media Gateway stack [shown in figure], MCC1 Media Gateway, SCC1 Media Gateway stack [shown in figure]), consisting of at least two media gateways or carriers.
13. PN control gateway or carrier, in the A position which contains:
 - A TN2305B or T2306B ATM-CES circuit pack for bearer and control network connections to the ATM switch.
 - One TN2182 Tone Clock circuit pack if the PN consists of SCC1 or MCC1 Media Gateways. One maintenance-only TN2312BP IPSI circuit pack if the PN consists of G650 Media Gateways.
14. Duplicated control gateway or carrier, in the B position which contains:
 - A TN2305B or T2306B ATM-CES circuit pack for bearer and control network connections to the ATM switch.
 - One TN2182 Tone Clock circuit pack if the PN consists of SCC1 or MCC1 Media Gateways. One maintenance-only TN2312BP IPSI circuit pack if the PN consists of G650 Media Gateways.
15. OC-3 connections to the ATM switch
16. 401A/B sync splitter, attached to the back of the TN464GP DS1 circuit pack
17. Public network (PSTN)
18. Timing signal to ATM switch from sync splitter.

1 of 2

Figure notes: S8700-series ATM duplicated control and duplicated voice-bearer networks (continued)

19. Fiber connections from TN2305B/TN2306B to ATM switch.
20. Customer LAN
21. LAN connections, if any, of optional TN2302AP IP Media Interface or TN2602AP IP Media Resource 320 for IP-TDM voice processing and optional TN799DP C-LAN for control of IP endpoints. These circuit packs are optional for PNs in an ATM-connected network. However, the C-LAN circuit pack is required for downloads of firmware updates.
22. LAN connections of servers for remote administration
23. Duplicated server links, including the link for translations memory duplication and the link for control data sharing. The link for memory duplication is implemented through the DAL2 board or (for the S8720 and S8730 Server) through software duplication.
24. DS1 connection from sync splitter.

2 of 2

Distance options with fiber-optic connections

Fiber connections up to 200 feet (61 meters)

EI-to-EI or EI-to-SNI intercabinet connections are implemented by installing a lightwave transceiver on the I/O connector plate for each of the administered fiber endpoints. Each lightwave transceiver has a receive and a transmit connector for either a 62.5-micron or 50-micron fiber connection. Standard fibers are available in various lengths up to 150 feet (46 m) for single-mode fiber and up to 200 feet (61 m) for multimode fiber. These fibers are used to connect lightwave transceivers to each other when they are close enough together, or to optical cross-connect facilities for greater distances.

See [TN570B Expansion Interface PN connections up to 200 ft.](#) on page 77.

Figure 16: TN570B Expansion Interface PN connections up to 200 ft.

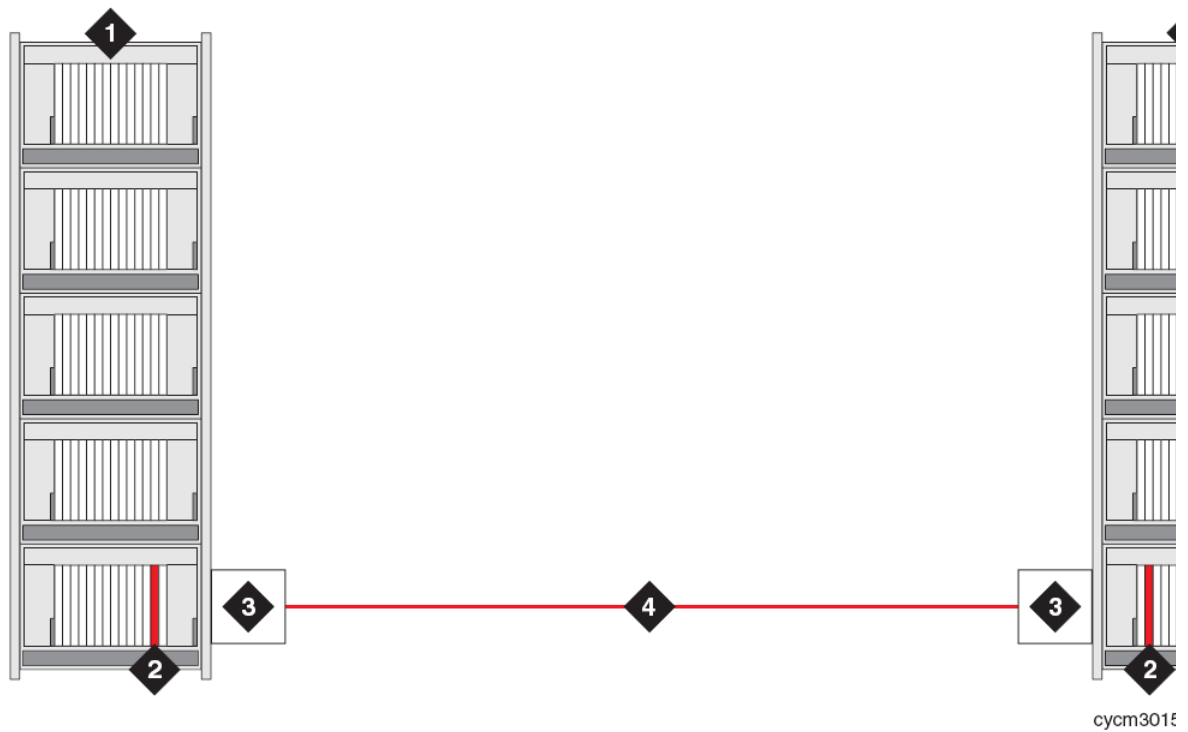


Figure notes:

1. Local PN
 2. TN570B Expansion Interface circuit pack
 3. 9823A short range transceiver
 4. Multimode fiber cable
-

Fiber connections up to 22 miles (35.4 kilometers)

The lightwave transceivers are powered from I/O connector plate leads attached to TN570 Expansion Interface circuit pack or a TN573 SNI circuit pack. The transceivers include loop-around capabilities to support fiber fault isolation. [Table 2](#) lists part number and distance specifications for the two length-dependent 9823-type multimode transceivers and the 300A single mode fiber transceiver. The transceivers at each end of the fiber should match.

Table 2: Lightwave transceiver specifications

Lightwave transceiver part number	Maximum fiber length	Fiber mode
9823A	4900 feet (1494 m)	Multimode
9823B	25,000 feet (7620 m)	Multimode
300A	22 miles (35.4 km)	Single mode

Figure 17: TN570B Expansion Interface PN connections up to 4900/25000 ft. and 22 miles.

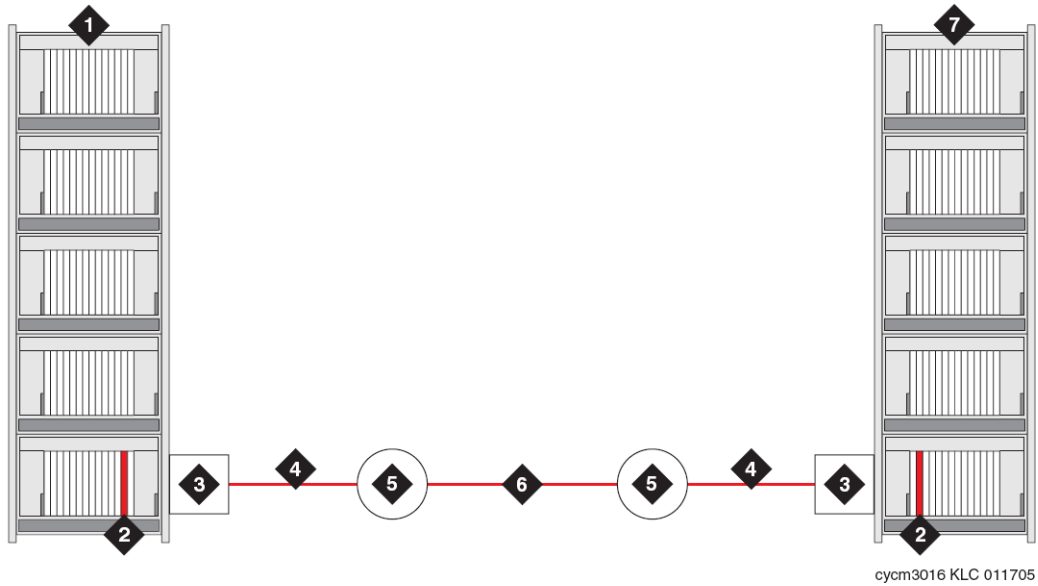


Figure notes:

1. Local PN
2. TN570B Expansion Interface circuit pack
3. 9823A short range transceiver (up to 4900 ft. or 1494 m), 9823B long range transceiver (up to 25000 ft. or 7620 m), or 300A transceiver (22 miles or 35.4 km)
4. Optic fiber
5. Lightguide Interconnect Unit (LIU)
6. Single-mode or multimode fiber cable

Fiber connection up to 200 miles

When fiber-optic cabling is not practical, Digital Service 1 (DS1) can be used to connect PNs up to 200 miles (322 km) apart. A TN574 or TN1654 DS1 Converter (DS1 CONV) circuit pack serves as the interface between the network and an EI or SNI on the switch. DS1 cabling on a carrier consists of a Y-cable that connects a DS1 CONV to an EI or SNI and to the network.

[Table 3](#) lists the lengths and uses for DS1 CONV cables, depending upon where the DS1 CONV and the EI or SNI are located.

Table 3: DS1 CONV cable specifications

Connection location	Length
On same half carrier	1 foot (30.48 cm)
On different half carriers in same cabinet	5.5 feet (1.68 m)
Between two adjacent cabinets	1 foot (30.48 cm), used with two 9823As, and 1 20-foot (6.1 m) fiber-optic cable

The DS1 CONV to EI/SNI cable is a shielded metallic Y-cable held in place at the EI/SNI port connector by a 4B retainer and at the DS1 CONV port connector by a 4C retainer. The cable end with one 25-pair amphenol connector attaches to the I/O Plate connector for the EI or SNI. The end with two 25-pair amphenol connectors attaches to the DS1 CONV I/O plate connector.

The 13-inch (33-centimeter) cable 846448652 or 847245776 connects the DS1 CONV to a fiber-optic cable, enabling the DS1 CONV to connect to an EI or SNI at a greater distance. The cable end with one 25-pair amphenol connector attaches to a lightwave transceiver using the 846885259 bracket. The end with two 25-pair amphenol connectors attaches to the DS1 CONV I/O plate connector. The other end of the fiber-optic cable connects to a lightwave transceiver attached to the I/O plate connector of the EI or SNI.

An H600-348 cable connects the DS1 CONV cable to a CSU (channel service unit), which connects to a wall field. Alternatively, connection is sometimes made directly from the Y-cable to the wall field. This cable provides from one to four DS1 connections. One end of the H600-348 cable is plugged into the 50-pin amphenol piggy-back connector on the 8464486xx cable connected to the DS1 CONV port connector. The other end of the H600-348 cable has four 15-pin sub-miniature D-type connectors that plug into the CSU. [Table 4](#) lists the H600-348 cable specifications.

Table 4: H600-348 cable specifications

Group No.	Length	Group No.	Length
G1	25 feet (7.62 m)	G5	125 feet (38.1 m)
G2	50 feet (15.24 m)	G6	200 feet (60.96 m)

Table 4: H600-348 cable specifications

Group No.	Length	Group No.	Length
G3	75 feet (22.86 m)	G7	400 feet (121.9 m)
G4	100 feet (30.48 m)	G8	650 feet (198 m)

See [TN1654 DS1 Converter/TN570B Expansion Interface PN connections up to 200 miles.](#) on page 81.

Figure 18: TN1654 DS1 Converter/TN570B Expansion Interface PN connections up to 200 miles.

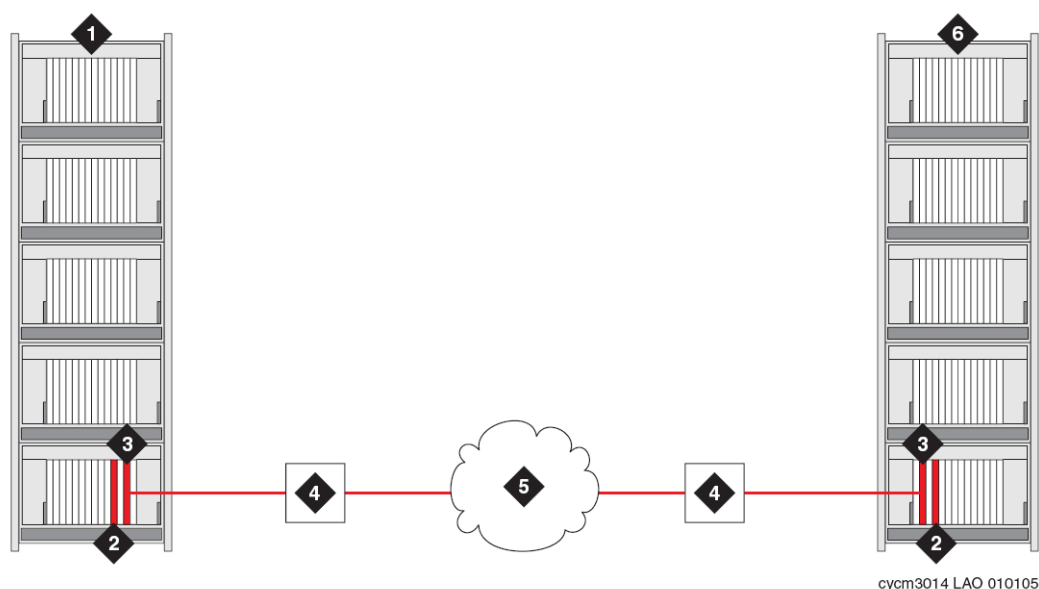


Figure notes:

1. Local PN
2. TN570B Expansion Interface circuit pack
3. TN1654 DS1 Converter circuit pack
4. Channel service units (up to 4), each with at T1 trunk
5. Public network (PSTN)

Metallic cable for intracabinet connections

Metallic cable can be substituted for fiber-optic cable for “fiber” connections between EIs or between an EI and an SNI in the same MCC cabinet, using the same I/O plate connectors.


DANGER:

The metallic cables should not be used for intercabinet connections, since doing so would violate system ground integrity.

[Table 5](#) lists the part numbers and uses for the two (2) metallic cable lengths.

Table 5: Metallic cable specifications

Metallic cable part numbers	Length	Use
H600-278,G1	13 inches (33 cm)	From an EI in slot 1 of a switch node carrier to an SNI in the same half of the carrier (usually the adjacent slot)
H600-278,G2	66 inches (168 cm)	From an EI to an SNI in the same cabinet, but in a different carrier or different half of a carrier

Configurations with both IP-PNC and fiber-PNC PNs

Communication Manager R3.1 allows the S8700-series, S8500-series, S8500B, and S8500C Servers to support configurations that combine IP-PNC port networks (PNs) with direct-connect PNs, CSS-connected PNs or ATM-connected PNs. Additionally, Communication Manager R3.1 allows the servers to support configurations that contain both single control networks and duplicated control networks and both single bearer networks and duplicated bearer networks.

This capability allows customers to do the following:

- Add IP PNs to a fiber-PNC configuration using the simpler, less costly connections over the customer LAN. In this way, customers can avoid the complication and cost of adding fiber-PNC PNs. This capability can be especially attractive when it eliminates the need for installing a DS1C circuit pack and a connection over a T1 trunk to the new PN.
- Convert and consolidate, in an easy, cost-effective way, remote standalone DEFINITY servers (R, SI, CSI, or S8100) and their PNs into a single network of PNs controlled by, and administered with, one server.
- Configure, within the single footprint of an MCC1 Media Gateway, multiple port networks, using IP-PNC, fiber-PNC PNs, or a variety of combinations of the two. In this way, customers have tremendous flexibility in configuring MCC1 Media Gateways to balance reliability, call capacities and feature richness.
- Configure reliability into a network in a more cost-effective, flexible way. Duplication of control and bearer networks can be configured based on the criticality of the location or the needs of users connected to a particular PN.

Note:

All port networks that are fiber-PNC within a direct-connect, CSS or ATM switch configuration must still have the same reliability level — all single control and bearer network, all duplicated control network, or all duplicated control and bearer network.

Possibilities for combining IP-PNC and fiber-PNC PNs in a configuration

A Communication Manager configuration can contain one of the following combinations of port network connection methods:

- IP-PNC and direct-connect — available with S8500-series, S8500B, S8500C, or S8700-series Servers as main servers, but not as Enterprise Survivable Servers (ESSs)
- IP-PNC and Center Stage Switch (CSS) — available with S8700-series Servers as both main servers and ESSs
- IP-PNC and Asynchronous Transmission Mode (ATM) — available with S8700-series Servers as both main servers and ESSs

Note:

You *cannot* mix CSS and ATM port network connections in the same configuration. You also *cannot* mix direct-connect PN connections with ATM or CSS port network configurations.

Note:

The DEFINITY Server CSI does not support multiple port networks and, therefore, does not support combining PN connection methods.

Regardless of the combinations of PN connection methods, the maximum number of PNs allowed continues to be 64. However, since a server can support IP-PNC and CSS PNs simultaneously, the following capacity rules apply to a configuration with both IP-PNC and fiber-PNC PNs:

- With CSS, two to 44 CSS PNs, with additional IP-PNC PNs for a maximum total of 64 PNs
- With ATM, 64 ATM and IP-PNC PNs in any combination
- With direct-connect, two to three direct-connect PNs, with 1 to 62 IP-PNC PNs, for a maximum total of 64 PNs

Media gateway combinations

Like the G650 Media Gateway, SCC1 and MCC1 Media Gateways can connect to other port networks using either IP-PNC or fiber-PNC options (direct/CSS/ATM-connect). The CMC1 and G600 media gateways can be IP-PNC only and cannot be fiber-PNC in any configuration. But, because a server can use the IP-PNC method with any of the direct, CSS, or ATM connection methods simultaneously, the server can simultaneously connect CMC1s and/or G600s as IP-PNC media gateways in the same network that includes direct, CSS, or ATM-connected G650, SCC1, and/or MCC1 Media Gateways. As a result, a configuration with IP-PNC and fiber-PNC PNs may contain any or all media gateways that are supported by the current release of Communication Manager. The following table lists, by server, the media gateways and connection methods that the servers can simultaneously support in a port network configuration.

Server	Supported Media Gateways	IP-PNC	Direct-connect	CSS/ATM-connect ¹	Reliabilities supported
S8500C/ S8500B	CMC1	yes	no	no	single control and bearer only
	G600	yes	no	no	same as CMC1
	G650	yes	yes	no	single control and bearer, single control and duplicated bearer
	SCC1	yes	yes	no	same as G650
	MCC1	yes	yes	no	same as G650

Configurations with both IP-PNC and fiber-PNC PNs

Server	Supported Media Gateways	IP-PNC	Direct-connect	CSS/ ATM-connect ¹	Reliabilities supported
S8700-series	CMC1	yes	no	no	single control and bearer only
	G600	yes	no	no	same as CMC1
	G650	yes	yes	yes (requires an MCC1 for SNC/CSS)	single control and bearer, duplicated control only, single control and duplicated bearer, and duplicated control and bearer
	SCC1	yes	yes	yes (requires an MCC1 for SNC/CSS)	same as G650
	MCC1	yes	yes	yes	same as G650

1. For any system, either CSS or ATM connections may be used, but not both.

Options for multiple levels of reliability

Within the fiber-PNC portion of a system (direct-, CSS, or ATM-connected PNs), duplicated bearer reliability using fiber must be uniformly applied, and IPSI duplication must also be uniform among the PNs that have IPSIs. However, a mixed configuration of IP-PNC and fiber-PNC PNs may collectively have multiple levels of reliability. The system-wide network of PNs does not have to be "all duplicated IPSI" or "all simplex IPSI," or "all duplicated bearer" or "all simplex bearer." TN2602AP circuit pack duplication does not have to be uniform.

Administering an S8700-series Server for duplicated and single control networks

With direct/CSS/ATM PN connections and duplicated control networks, an S8700-series Server's control network A and control network B interfaces are administered as dedicated control networks and connected to duplicated IPSI circuit packs in the fiber-PNC PNs. If a remote IP-PNC PN is introduced into the configuration, the S8700-series Server and IP-PNC PN is administered for a control network over the customer's LAN. In this case, a third control network C may be administered on the S8700-series Server. The S8700-series Server automatically uses its own customer LAN interface port for Control network C. Therefore, to administer control network C for IP-PNC PNs, you only have to tell the server to turn on control network C.

Dedicated and non-dedicated control networks

Control networks A and B can be separately configured for dedicated and non-dedicated control networks. You can also use control network C to connect IP-PNC PNs, while using control networks A and B for dedicated control networks with the fiber-PNC PNs. Control network C uses the customer LAN exclusively for the control signaling, while control networks A and B may use either dedicated Ethernet switch connections or the customer LAN for control signaling.

Requirements for using both IP-PNC and fiber-PNC PNs

A configuration that has both IP-PNC and fiber-PNC PNs requires the following:

- A Communication Manager license that has IP port network Connectivity (IP-PNC) turned off (that is the feature keyword in the license file, FEAT_IP_PNC, is off and the **IP PNC?** field on the Customer Options screen is **n**)

Communication Manager allows IP-PNC PNs to be added to an existing fiber-PNC configuration because IP-PNC is already turned off.

**CAUTION:**

If you want to convert or migrate fiber-PNC SCC1 or MCC1 PNs to IP-PNC PNs, the RFA license file entry, FEAT_IP_PNC keyword, must be **off**.

- At least one TN2302AP IP Media Processor or TN2602AP IP Media Resource 320 circuit pack in a PN in the fiber-PNC PN configuration.

Since an IP-PNC PN does not have fiber connections with the direct, CSS, or ATM PNs, bearer transmission between IP-PNC PNs and direct/CSS/ATM PNs must occur over the IP network. Because they convert TDM calls to IP, and IP calls to TDM, the TN2302AP or TN2602AP circuit packs enable bearer transmission over IP networks.

- The fiber-PNC PN or PNs that contain the TN2302AP or TN2602AP circuit packs serve as gateways between the IP-PNC and fiber-PNC portions of the configuration. As a result, the gateway TN2602AP circuit pack or circuit packs must be in a network region that can reach, and is reachable by, TN2602AP circuit packs in any and all IP-PNC PNs. To be reachable, the gateway TN2602AP circuit packs can be one or both of the following:
 - In the same network region as the TN2602AP or TN2302BP circuit packs of other PNs.
 - Mapped to the IP PNC addresses in other network regions.
- Like IP-PNC PNs, fiber-PNC PNs can have up to two TN2602AP circuit packs installed. In addition, in a fiber-PNC PN, the TN2602AP circuit packs can be either in load-balancing mode or in duplicated bearer mode.

**CAUTION:**

The addition of a TN2302AP or TN2602AP circuit pack to a fiber-PNC PN may have a significant impact on traffic that must be handled by the PN. That is, in some scenarios, the PN may not have enough timeslot availability.

For example, the targets of a large number of IP station or trunk calls may be TDM stations or trunks in fiber-PNC PNs that do not have TN2302AP/TN2602AP circuit packs. In this case, the talk paths are routed through a fiber-PNC PN containing the TN2302AP/TN2602AP circuit packs. This routing may exhaust the 484 time slots of the gateway PN and cause calls to be blocked.

To avoid this media processor linking, TN2302AP/TN2602AP circuit packs should generally be placed in every fiber-PNC PN. This need becomes more apparent when the gateway PN uses a 320-channel TN2602 instead of an 80-channel TN2602.

As a result, you should analyze the traffic measurements on such PNs prior to configuring a PN as a IP-to-TDM gateway.

Note:

IP-PNC PNs always require at least one TN2302AP or TN2602AP circuit pack.

TN2602AP circuit packs in fiber-PNC PNs

Any fiber-PNC PN can optionally contain TN2302BP or TN2602AP circuit packs in order to support IP endpoints and trunks. However, to combine IP-PNC PNs in a configuration with fiber-PNC PNs, a TN2602AP (or optionally, a TN2302BP) circuit pack is *required* in at least one of the fiber-PNC PNs that also contains an IPSI connection. A fiber-PNC PN with one of these circuit packs can then serve as a gateway between the fiber-PNC and IP-PNC portions of the Communication Manager configuration so the portions can communicate via the LAN/WAN.


Any individual fiber-PNC PN can also contain load-balancing or duplicated TN2602AP circuit packs. TN2602AP circuit packs do *not* need to be implemented uniformly within the fiber-PNC portion of the system. Thus, some PNs may have no TN2602AP circuit packs, some PNs may have load-balancing TN2602AP circuit packs, and some PNs may have duplicated TN2602AP circuit packs. Duplicated TN2602AP circuit packs can provide duplicated bearer capability when the fiber connections do not.

Examples of combining IP-PNC and fiber-PNC PNs

The following sample configurations illustrate some examples of combining IP-PNC and fiber-PNC PNs. Some examples also illustrate combining different reliability levels.

Example of combining direct- and IP-PNC PNs

[Figure 19](#) illustrates an S8500-series Server configuration that combines direct-connect PNs with IP-PNC PNs. The IP-PNC PN is labeled as item 11. The other PNs, items 3 and 5, are direct-connect PNs.

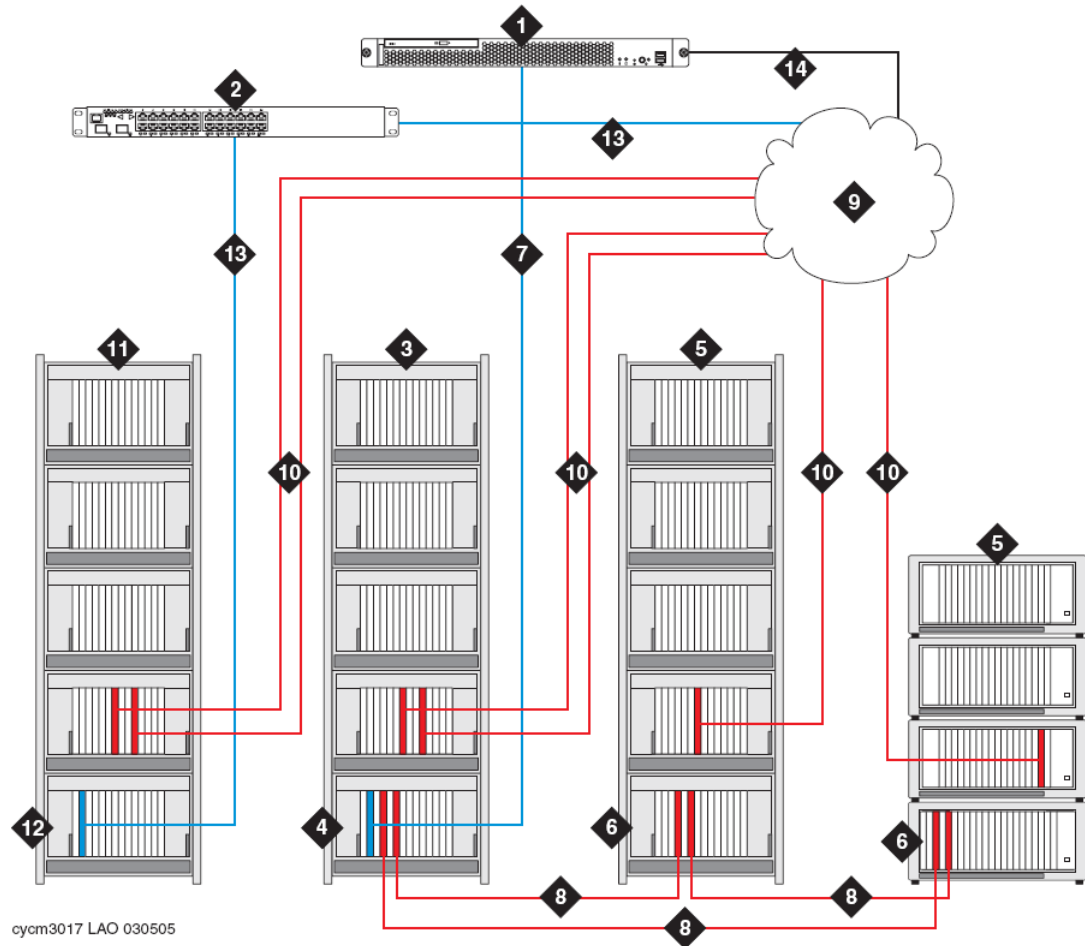Figure 19: Direct- and IP-PNC PNs example (with S8500 Server)**Figure notes: Direct- and IP-PNC PNs example (with S8500 Server)**

1. S8500C or S8500B Server
2. LAN connections of server for remote administration
3. IPSI-connected port network (G650 Media Gateway or G650 stack [shown in figure], MCC1 Media Gateway or SCC1 Media Gateway or SCC1 stack). The PN is part of the fiber-PNC bearer network.
NOTE: G600 or CMC1 Media Gateways can be used in IP-PNC configurations only.
4. PN control gateway or carrier, in the A position in PN 3, which contains:
 - A TN2312AP/BP IPSI circuit pack for IP connection to server.
 - Two TN570Bv7/C/D EI circuit packs for bearer network connections to the other two PNs (if any).
5. Fiber-PNC PN (G650 Media Gateway or G650 stack [shown in figure], MCC1 Media Gateway, or SCC1 Media Gateway or SCC1 stack [shown in figure]).

1 of 2

Figure notes: Direct- and IP-PNC PN example (with S8500 Server) (continued)

6. PN control gateway or carrier within PNs labeled 5, in the A position in the gateway stack or MCC1. The control gateway contains two TN570Bv7/C/D EI circuit packs for bearer network connections to the other two PNs.
NOTE: One TN2182 Tone Clock circuit pack must also be present per PN if the PN(s) consist of SCC1 or MCC1 Media Gateways. One maintenance-only TN2312AP/BP IPSI circuit pack must be present per PN if the PN(s) consist of G650 Media Gateways.
7. IPSI-to-server control network connection. Requires dual NIC card on the server.
8. TN 570Bv7/C/D to 570Bv7/C/D fiber connections between PNs
9. Customer LAN
10. LAN connections, if any, of TN2302AP IP Media Interface or TN2602AP IP Media Resource 320 for IP-TDM voice processing and optional TN799DP C-LAN for control of IP endpoints and firmware downloads
NOTE: The number of TN2302AP, TN2602AP, and TN799DP circuit packs varies, depending on the number of IP endpoints, port networks, and adjunct systems. These circuit packs may be inserted into a port carrier (shown in figure), the PN control carrier, or the duplicated control carrier.
11. IP-PNC PN (G650 Media Gateway or stack [shown in figure]). May also be a G600, SCC1, MCC1, or CMC1 from an S8100 or DEFINITY Server migration.
12. Control gateway in PN 11, in the A position in the gateway stack. The control gateway contains:
 - A TN2312AP/BP IPSI circuit pack for IP connection to server.
13. IPSI-to-server control network connection through Ethernet switch and customer LAN.

2 of 2

Example of IP-PNC PNs with different reliability levels

[Figure 20](#) illustrates an S8700-series Server configuration that combines duplicated control/duplicated bearer network, duplicated control-only network, and single control network reliability configurations in an IP-PNC network. The PN with a single control network is labeled as item 11. Other PNs, items 3, have duplicated control networks.

Figure 20: IP-PNC PNs with single control network, duplicated control networks, and duplicated control/bearer network example (with S8700-series Server)

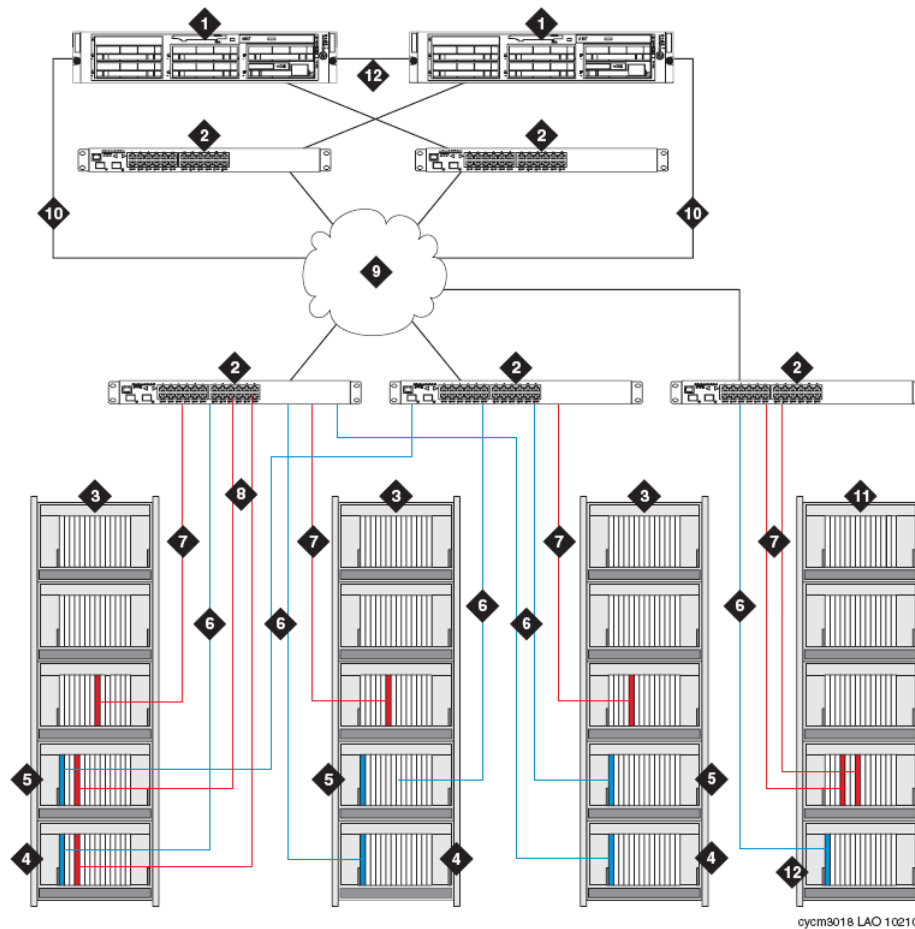


Figure notes: IP-PNC PNs with single, duplicated control networks, and duplicated control/bearer network (with S8700-series Server)

1. S8700-series Server
2. Ethernet Switch. For local LAN connections, the same pair of Ethernet switches may connect both the servers and the media gateways. For remote LAN/WAN connections, the remote gateway(s) must have a pair of Ethernet switches at the remote location.
3. IP-PNC PNs (G650 Media Gateway or stack [shown in figure]). May also be SCC1 or MCC1 Media Gateways from a DEFINITY Server migration.
4. Control gateway for PN 3, in the A position in the gateway stack. The control gateway contains:
 - A TN2312AP/BP IPSI circuit pack for IP connection to server.
5. Duplicated PN control gateway for PN3, in the B position in the gateway stack. The control gateway contains:
 - A TN2312AP/BP IPSI circuit pack for IP connection to control network.
6. IPSI-to-server control network connection via Ethernet switch

Figure notes: IP-PNC PN with single, duplicated control networks, and duplicated control/bearer network (with S8700-series Server) (continued)

7. LAN connections of TN2302AP IP Media Interface or TN2602AP IP Media Resource 320 for IP-TDM voice processing and optional TN799DP C-LAN for control of IP endpoints
NOTE: The number of TN2302AP, TN2602AP, and TN799DP circuit packs varies, depending on the number of IP endpoints, port networks, and adjunct systems. These circuit packs may be inserted into a port carrier (shown in figure), the PN control carrier, or the duplicated control carrier.
8. Customer LAN
9. LAN connections of servers for remote administration
10. Duplicated server links, including the link for translations memory duplication and the link for control data sharing. The link for memory duplication is implemented through the DAL2 board or (for the S8720 and S8730 Server) through software duplication.
11. IP-PNC PN (G650 Media Gateway or stack [shown in figure]). May also be a G600 Media Gateway or stack or a CMC1 from an S8100 Server or a DEFINITY Server migration, an MCC1 Media Gateway from a DEFINITY Server migration, or an SCC1 Media Gateway.
12. PN control gateway, in the A position in the gateway stack, for PN 11. The control gateway contains:
 - A TN2312AP/BP IPSI circuit pack for IP connection to server.

2 of 2

Example of combining IP- and fiber-PNC PN with different reliability levels


[Figure 21](#) illustrates an S8700-series Server configuration that combines the following:

- Fiber-PNC PN (CSS-connected PN in this example) with standard single control network reliability and duplicated (item 3 in [Figure 21](#)), load-balancing (item 7 in [Figure 21](#)), single (item 9 in [Figure 21](#)), and no (item 21 in [Figure 20](#)) TN2602AP circuit packs.
- An IP-PNC PN (item 17 in [Figure 21](#)) with duplicated control and duplicated bearer network reliability.

Note:

The IP-PNC PN (item 17 in [Figure 21](#)) is connected to two Ethernet switches on the customer network since the CSS-connected PN is connected to the server over a single dedicated Ethernet switch.

Figure 21: CSS-connected PNs (single control network) and IP-PNC PNs (duplicated control and duplicated bearer network) example

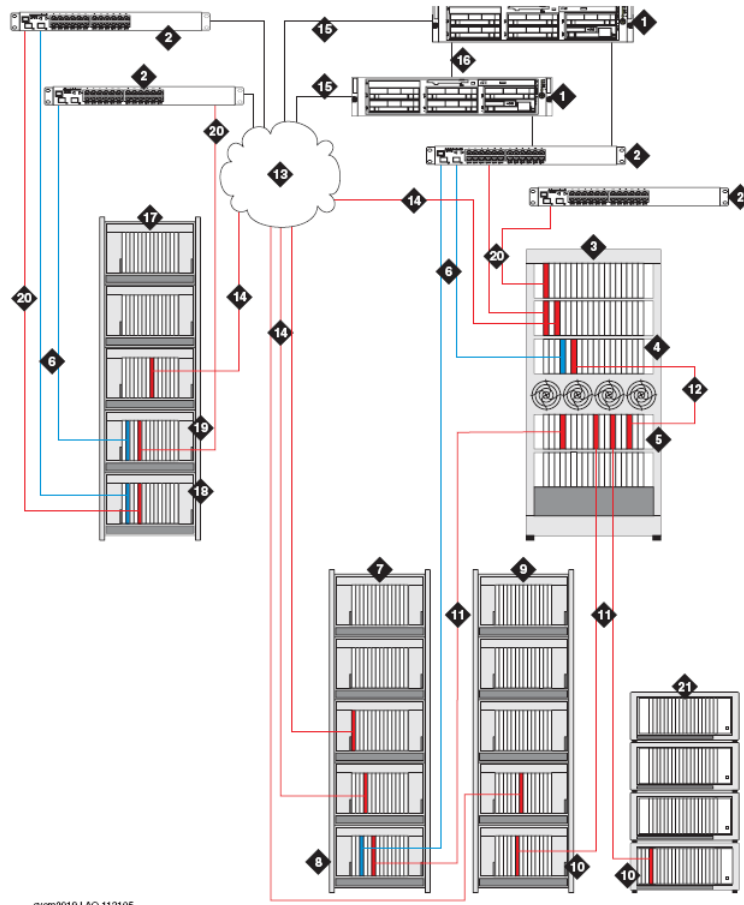

nvsm00191 A/C 119105

Figure notes: CSS-connected PNs (single control network) and IP-PNC PNs (duplicated control and duplicated bearer network) example

1. S8700-series Server
2. Ethernet Switch
3. Fiber-PNC MCC1 Media Gateway (CSS and PN) with duplicated TN2602AP circuit packs. This PN serves as the gateway PN to IP-PNC PNs.
4. Control carrier for PN 3, in the A position in the MCC1. The control carrier contains:
 - A TN2312AP/BP IPSI circuit pack for IP connection to server.
 - A TN570Bv7/C/D EI circuit pack for bearer network connections to the Switch Node Carrier (SNC).
5. Switch node carrier (SNC), which contains:
 - Multiple TN573 SNI circuit packs for EI connections to PNs
6. IPSI-to-server control network connection via Ethernet switch
7. Second fiber-PNC and IPSI-connected PN (G650 Media Gateway or stack [shown in figure], MCC1 Media Gateway, or SCC1 Media Gateway stack). This PN has load-balancing TN2602AP circuit packs and also serves as a gateway to IP-PNC PNs.
8. Control gateway or carrier for PN 7, in the A position in the stack. The control gateway or carrier contains:
 - A TN2312AP/BP IPSI circuit pack for IP connection to server.
 - A TN570Bv7/C/D EI circuit pack for bearer network connections to the SNI.
9. Fiber-PNC PN (MCC1 Media Gateway, SCC1 Media Gateway, or G650 Media Gateway stack [shown]) consisting of one or more media gateways or carriers. This PN has one TN2602AP circuit pack.
10. Control gateway or carrier in the A position in the stack. The control gateway or carrier contains:
 - A TN570Bv7/C/D EI circuit pack for bearer network connections to the SNI.

NOTE: One TN2182 Tone Clock circuit pack must also be present per PN if the PN(s) consist of SCC1 or MCC1 Media Gateways. One maintenance-only TN2312AP/BP IPSI circuit pack must be present per PN if the PN(s) consist of G650 Media Gateways.
11. TN 570Bv7/C/D to TN573 fiber connections between PNs and SNC
12. TN 573/570Bv7/C/D fiber connections between the SNCs and the A carrier (if the MCC1 is a PN)
13. Customer LAN
14. LAN connections of TN2302AP IP Media Interface, TN2602AP IP Media Resource 320, or TN799DP C-LAN for control of IP endpoints

NOTE: The number of TN2302AP and TN799DP circuit packs varies, depending on the number of IP endpoints, port networks, and adjunct systems. These circuit packs may be inserted into a port carrier (shown in figure) or the PN control carrier.
15. LAN connections of servers for remote administration
16. Duplicated server links, including the link for translations memory duplication and the link for control data sharing. The link for memory duplication is implemented through the DAL2 board or (for the S8720 and S8730 Server) through software duplication.
17. IP-PNC PN (G650 Media Gateway or stack [shown in figure]). May also be an MCC1 from a DEFINITY Server migration or an SCC1.

1 of 2

Figure notes: CSS-connected PNs (single control network) and IP-PNC PNs (duplicated control and duplicated bearer network) example (continued)

18. Control gateway or carrier, in the A position in the gateway stack, for PN 17. The control gateway contains:
 - A TN2312AP/BP IPSI circuit pack for IP connection to server.

NOTE: For the G650 Media Gateway, the BP version of the TN2312 is required in order to provide environmental maintenance.
 - A TN2602AP IP Media Resource 320 for PN bearer connections over the LAN

NOTE: The TN2602AP circuit pack may be placed in any gateway in the PN. However, the pair of TN2602AP circuit packs should be separated between two different gateways whenever possible.
19. Media gateway or carrier, in the B position in the gateway stack, , which contains:
 - A duplicated TN2312AP/BP IPSI circuit pack for duplicated control network to PN 17.
 - A duplicated TN2602AP IP Media Resource 320 for PN bearer connections over the LAN.

NOTE: The TN2602AP circuit pack may be placed in any gateway in the PN. However, the pair of TN2602 circuit packs should be separated between two different gateways whenever possible.
20. LAN connections of duplicated TN2602AP IP Media Resource 320 circuit packs for IP-TDM voice processing. Connections to separate Ethernet switches are recommended, but not required.
21. Fiber-PNC PN (MCC1 Media Gateway, SCC1 Media Gateway, or G650 Media Gateway stack [shown]) consisting of one or more media gateways or carriers. This PN has no TN2602AP circuit packs and relies only on fiber connections for the bearer network.

2 of 2

Example of combining IP- and ATM-connected PNs and different reliability levels

[Figure 22](#) illustrates an S8710 Server configuration that combines ATM-connected PNs with standard duplex-server-only reliability and IP-PNC PNs with duplicated control network reliability.

Note:

In this example, the IP-PNC PN (item 22 in [Figure 22](#)) is connected to two Ethernet switches on the customer network since the ATM-connected PNs are connected to the server over a dedicated Ethernet switch.

Figure 22: Example of ATM-connect PNs with single control network and IP-PNC PNs with duplicated control network

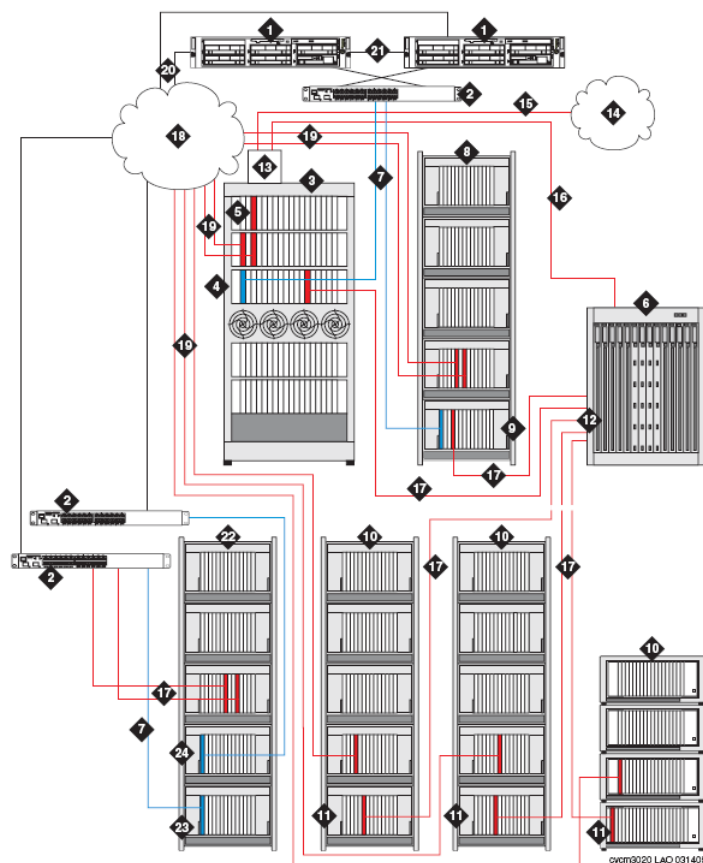


Figure notes: Example of ATM-connect PNs with single control network and IP-PNC PNs with duplicated control network

1. S8710/S8720 Server
2. Ethernet Switch
3. Fiber-PNC PN (MCC1 [shown], SCC1, or G650 Media Gateway)
NOTE: A TN2302AP Media Interface or TN23602 Media Resource 320 for IP-TDM voice processing is required in at least one fiber-PNC PN for the combined PN connection methods to work.
4. Control carrier, in the A position in the MCC1, for PN 3. The control carrier contains:
 - A TN2312AP/BP IPSI circuit pack for IP connection to server.
 - A TN2305 or TN2306 circuit pack for bearer network connections to the ATM switch.
5. Carrier with TN464GP DS-1 circuit pack, for clock synchronization with a network resource
6. ATM switch.
7. IPSI-to-server control network connection via Ethernet switch
8. Fiber-PNC and server-connected PN (G650 Media Gateway stack [shown], MCC1 Media Gateway, or SCC1 Media Gateway stack, consisting of at least two media gateways or carriers).

Figure notes: Example of ATM-connect PNs with single control network and IP-PNC PNs with duplicated control network (continued)

9. Control gateway or carrier, in the A position in the stack, for PN 8. The control gateway contains:
 - A TN2312AP/BP IPSI circuit pack for IP connection to server.
 - A TN2305 or T2306 circuit pack for bearer network connections to the ATM switch.
10. Fiber-PNC PN (G650 Media Gateway stack (shown), MCC1 Media Gateway, SCC1 Media Gateway stack [shown]), consisting of at least two media gateways or carriers.
11. Control gateway or carrier, in the A position in the stack, for PN 10. The control gateway contains:
 - A TN2305 or TN2306 circuit pack for bearer network connections to the ATM switch.

NOTE: One TN2182 Tone Clock circuit pack must also be present per PN if the PN(s) consist of SCC1 or MCC1 Media Gateways. One maintenance-only TN2312BP IPSI circuit pack must be present per PN if the PN(s) consist of G650 Media Gateways.
12. OC-3 connections to the ATM switch
13. Sync splitter
14. Public network (PSTN)
15. DS1 connection to sync splitter.
16. Timing signal to ATM switch from sync splitter.
17. Fiber connections from TN2305/TN2306 to ATM switch.
18. Customer LAN
19. LAN connections of TN2302AP Media Interface or TN2602AP Media Resource 320 for IP-TDM voice processing and optional TN799DP C-LAN for control of IP endpoints
20. LAN connections of servers for remote administration
21. Duplicated server links, including the link for translations memory duplication and the link for control data sharing. The link for memory duplication is implemented through the DAL2 board or (for the S8720 and S8730 Server) through software duplication.
22. IP-PNC PN (G650 Media Gateway or stack [shown in figure]). May also be an MCC1 from a DEFINITY Server migration or an SCC1.
23. Control gateway, in the A position in the gateway stack, for PN 22. The control gateway contains:
 - A TN2312AP/BP IPSI circuit pack for IP connection to server.
24. Media gateway, in the B position in the gateway stack, with duplicated TN2312AP/BP IPSI circuit pack for duplicated control network to server.

MCC1 Media Gateway with IP-PNC PNs or a combination of IP- and fiber-PNC PNs

An MCC1 Media Gateway may contain up to 5 PNs, with each carrier administered as a fiber-PNC PN. For migrations and conversions only to Communication Manager R3.0, an MCC1 can also support from 1 to 5 IP-PNC PNs, or both IP-PNC and fiber-PNC PNs. In this way, a combination of PN connection methods may exist on a single MCC1 Media Gateway.

An MCC1 may also contain up to two IP-PNC PNs with duplicated control networks. However, if a server-connected MCC1 uses duplicated bearer networks with CSS, such that switch node carriers must occupy the D and E positions on the MCC1, the MCC1 Media Gateway may house up to three PNs, but only one PN can have duplicated control.

The following tables identify the port network configuration options for IP-PNC and combined IP- and fiber-PNC PNs in an MCC1 Media Gateway.

Options for IP-PNC PNs in an MCC1 Media Gateway

The following diagrams indicate the PN options available using a single MCC1 Media Gateway with all-IP-PNC PNs. Each PN within the MCC1 Media Gateway is indicated by bold borders (—). Carriers within PNs are indicated by thin borders (—).

	MCC1 with 1 PN with single control	MCC1 with 1 PN with duplicated control	MCC1 with 2 PNs with single control	MCC1 with 2 PNs one with duplicated control	MCC1 with 2 PNs both with duplicated control
C Carrier					
B Carrier		IPSI (secondary)			IPSI (secondary)
A Carrier	IPSI	IPSI (primary)	IPSI	IPSI	IPSI (primary)
D Carrier				IPSI (secondary)	IPSI (secondary)
E Carrier			IPSI	IPSI (primary)	IPSI (primary)

	MCC1 with 3 PNs with single control	MCC1 with 3 PNs one with duplicated control	MCC1 with 4 PNs with single control	MCC1 with 4 PNs one with duplicated control	MCC1 with 5 PNs with single control
C Carrier			IPSI	IPSI	IPSI
B Carrier	IPSI	IPSI	IPSI	IPSI	IPSI
A Carrier	IPSI	IPSI	IPSI	IPSI	IPSI
D Carrier	IPSI	IPSI (secondary)	IPSI	IPSI (secondary)	IPSI
E Carrier		IPSI (primary)		IPSI (primary)	IPSI

Options for combined IP- and fiber-PNC PNs in an MCC1 Media Gateway (single control network)

The following diagrams indicate the PN options available using a single MCC1 Media Gateway with IP-PNC PNs, fiber-PNC (direct, CSS, or ATM-connected) PNs, and single control networks. Where "fiber-PNC" is indicated, the PN may contain an IPSI for a connection to the server or may only contain expansion interface circuit packs for fiber connections to other PNs. Each PN within the MCC1 Media Gateway is indicated by bold borders (—). Carriers within PNs are indicated by thin borders (—).

	MCC1 with 2 PNs	MCC1 with 3 PNs with single control	MCC1 with 4 PNs with single control	MCC1 with 5 PNs with single control
C Carrier			IP-PNC or fiber-PNC	IP-PNC or fiber-PNC
B Carrier		IP-PNC or fiber-PNC	IP-PNC or fiber-PNC	IP-PNC or fiber-PNC
A Carrier	IP-PNC or fiber-connected	IP-PNC or fiber-PNC	IP-PNC or fiber-PNC	IP-PNC or fiber-PNC
D Carrier		IP-PNC or fiber-PNC	IP-PNC or fiber-PNC	IP-PNC or fiber-PNC
E Carrier	IP-PNC or fiber-PNC			IP-PNC or fiber-PNC

Options for combined IP- and fiber-PNC PNs in an MCC1 Media Gateway (duplicated control networks)

The following diagram indicates the PN options available using a single MCC1 Media Gateway with IP-PNC PNs, fiber-PNC (direct, CSS, or ATM-connected) PNs, and duplicated control networks. Each PN within the MCC1 Media Gateway is indicated by bold borders (—). Carriers within PNs are indicated by thin borders (—).

Note:

The configurations in the following diagram assume the bearer network for the fiber-PNC PNs is *not* duplicated. For configurations with duplicated bearer networks, see [Options for combined IP- and fiber-PNC PNs in an MCC1 Media Gateway \(duplicated control and bearer networks\)](#) on page 100.

Port network configurations with S8500-series and S8700-series Servers

	MCC1 with 2 PNs one with duplicated control	MCC1 with 2 PNs one with duplicated control ¹	MCC1 with 2 PNs both with duplicated control	MCC1 with 3 PNs one with duplicated control	MCC1 with 4 PNs one with duplicated control
C Carrier					IPSI for IP-PNC or fiber-PNC with no IPSI
B Carrier	IPSI for IP-PNC or IPSI for fiber-PNC (secondary)		IPSI for IP-PNC (secondary)	IPSI for IP-PNC or fiber-PNC with no IPSI ¹	PSI for IP-PNC or fiber-PNC with no IPSI
A Carrier	IPSI for IP-PNC or IPSI for fiber-PNC (primary)	IPSI for IP-PNC, IPSI for fiber-PNC, or fiber-PNC with no IPSI	IPSI for IP-PNC (primary)	IPSI for IP-PNC or fiber-PNC with no IPSI ¹	IPSI for IP-PNC or fiber-PNC with no IPSI
D Carrier		IPSI for IP-PNC or IPSI for fiber-PNC (secondary)	IPSI for IP-PNC (secondary)	IPSI for IP-PNC (secondary)	IPSI for IP-PNC (secondary)
E Carrier	IPSI for IP-PNC, IPSI for fiber-PNC, or fiber-PNC with no IPSI	IPSI for IP-PNC or IPSI for fiber-PNC (primary)	IPSI for IP-PNC (primary)	IPSI for IP-PNC (primary)	IPSI for IP-PNC (primary)

1. If the PN using Carriers D and E is fiber-PNC with duplicated IPSIs, Carriers A, B, and C may not contain IP-PNC PNs.

Options for combined IP- and fiber-PNC PNs in an MCC1 Media Gateway (duplicated control and bearer networks)

The following diagram indicates the PN options available using a single MCC1 Media Gateway with an IP-PNC PN with a duplicated control network and a fiber-PNC (direct, CSS, or ATM-connected) PN with duplicated control and bearer networks. Each PN within the MCC1 Media Gateway is indicated by bold borders (—). Carriers within PNs are indicated by thin borders (—).

Note:

In the following illustration, the IPSIs that enable a duplicated control network for the fiber-PNC PN reside in another fiber-PNC PN.

	MCC1 with 2 PNs one with duplicated control and bearer network¹	MCC1 with 2 PNs one with duplicated control and bearer network¹
C Carrier		
B Carrier	IPSI for IP-PNC (secondary)	Fiber-PNC with no IPSI (secondary)
A Carrier	IPSI for IP-PNC (primary)	Fiber-PNC with no IPSI (primary)
D Carrier	Fiber-PNC with no IPSI (secondary)	IPSI for IP-PNC (secondary)
E Carrier	Fiber-PNC with no IPSI (primary)	IPSI for IP-PNC (primary)

1. Duplicated bearer only available with PN that is fiber-PNC. Duplicated control exists in a different IPSI-connected PN.

Example of MCC1 IP-PNC

[Figure 23](#) illustrates an S8700-series Server configuration that uses the carriers in an MCC1 Media Gateway as IP-PNC PNs. This configuration is available with a migration from a DEFINITY Server SI or R or a conversion from fiber-PNC to IP-PNC only. The example shows one PN with duplicated IPSIs (item 5) and two PNs (items 4 and 6) with single IPSIs, one consisting of a single carrier and the other with two carriers.

Figure 23: MCC1 Media Gateway with carriers as IP-PNC PNs (duplicated control network) example

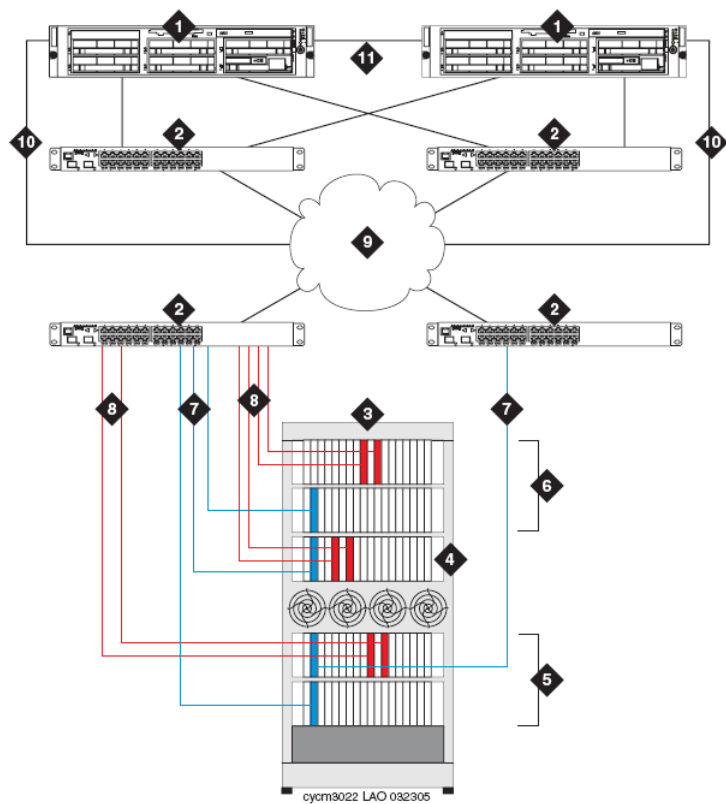


Figure notes: MCC1 Media Gateway with carriers as IP-PNC PNs (duplicated control network) example

1. S8700-series Server
 2. Ethernet Switch
 3. MCC1 Media Gateway
 4. IP-PNC PN, with one expansion port carrier in the A position, which contains:
 - A TN2312AP/BP IPSI circuit pack for IP connection to server.
 - A TN2302AP Media Interface or TN2602AP IP Media Resource 320 for IP-TDM voice processing
 - An optional TN799DP C-LAN for control of IP endpoints
 5. IP-PNC PN, with two carriers, which contains:
 - E-position port carrier
 - A TN2312AP/BP IPSI circuit pack for IP connection to server.
 - D-position port carrier
 - A TN2312AP/BP IPSI circuit pack for IP connection to server.
 - A TN2302AP IP Media Interface or TN2602AP IP Media Resource 320 for IP-TDM voice processing
 - An optional TN799DP C-LAN for control of IP endpoints
 6. IP-PNC PN, with two carriers, which contains:
 - C-position port carrier
 - A TN2302AP IP Media Interface or TN2602AP IP Media Resource 320 for IP-TDM voice processing
 - An optional TN799DP C-LAN for control of IP endpoints
 - B-position port carrier
 - A TN2312AP/BP IPSI circuit pack for IP connection to server.
 7. IPSI-to-server control network connection via Ethernet switch
 8. LAN connections of TN2302AP IP Media Interface or TN2602AP IP Media Resource 320 for IP-TDM voice processing and optional TN799DP C-LAN for control of IP endpoints

NOTE: The number of TN2302AP, TN2602AP, and TN799DP circuit packs varies, depending on the number of IP endpoints, port networks, and adjunct systems. These circuit packs may be inserted into a port carrier (shown in figure) or the PN control carrier.
 9. Customer LAN
 10. LAN connections of servers for remote administration
 11. Duplicated server links, including the link for translations memory duplication and the link for control data sharing. The link for memory duplication is implemented through the DAL2 board or (for the S8720 and S8730 Server) through software duplication.
-

Example of MCC1 with IP- and fiber-PNC PNs

[Figure 24](#) illustrates an S8700-series Server configuration that uses the carriers in an MCC1 Media Gateway as both fiber-PNC and IP-PNC PNs. The MCC1 Media Gateway (item 3) contains two IP-PNC PNs (items 5 and 6) with a third CSS-connected PN consisting of a single carrier (item 4). With a TN2602AP IP Media Resource 320 or TN2302AP IP Media Processor, the CSS-connected PN serves as a gateway between the IP-PNC PNs and the fiber-PNC PNs. Note that the MCC1 Media Gateway also contains a CSS or Switch Node Carrier (SNC).

Figure 24: MCC1 Media Gateway with IP- and fiber-PNC PNs example

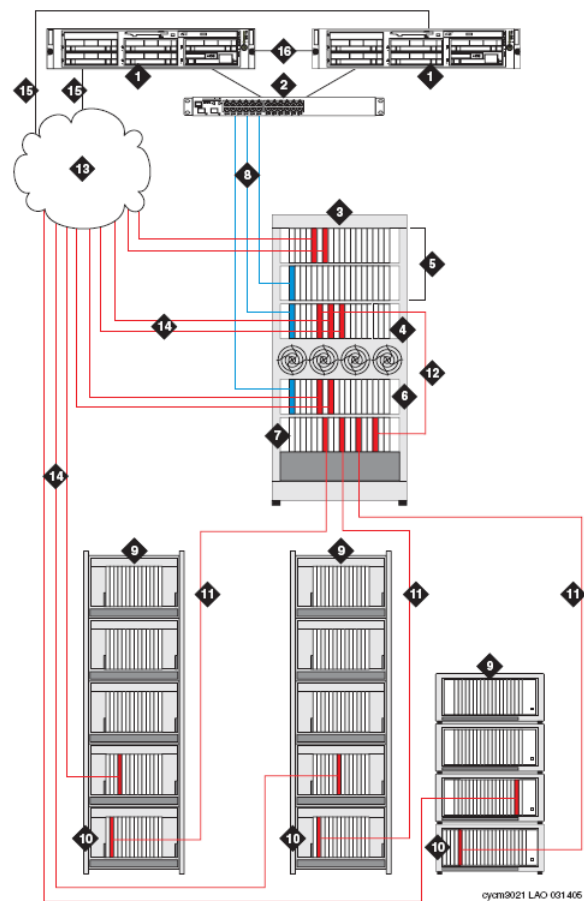


Figure notes: MCC1 Media Gateway with IP- and fiber-PNC PNs

1. S8700-series Server
 2. Ethernet Switch
 3. MCC1 Media Gateway (CSS and PN)
 4. CSS-connected PN carrier, in the A position, which serves as a gateway to IP-PNC PNs. The PN contains:
 - A TN2312AP/BP IPSI circuit pack for IP connection to server.
 - A TN570Bv7/C/D EI circuit pack for bearer network connections to the Switch Node Carrier (SNC).
 - A TN2302AP IP Media Processor or TN2602AP IP Media Resource 320 circuit pack. These circuit packs enable the PN to be a gateway between the fiber-PNC and IP-PNC PNs.
 - An optional TN799DP C-LAN circuit pack for control of IP endpoints
 5. IP-PNC PN, consisting of carriers in the B and C positions. Carrier B contains:
 - A TN2312AP/BP IPSI circuit pack for IP connection to server. The bottom carrier in the PN must contain the primary IPSI circuit pack.

Carrier C contains:

 - A TN2302AP IP Media Processor or TN2602AP IP Media Resource 320 circuit pack.
 - An optional TN799DP C-LAN circuit pack for control of IP endpoints

These circuit packs can actually be inserted in any carrier within the PN.
 6. IP-PNC PN, consisting of one carrier in the D position. Carrier D contains:
 - A TN2312AP/BP IPSI circuit pack for IP connection to server.
 - A TN2302AP IP Media Processor or TN2602AP IP Media Resource 320 circuit pack.
 - An optional TN799DP C-LAN circuit pack for control of IP endpoints
 7. Switch node carrier (SNC) or CSS, which contains:
 - Multiple TN573 SNI circuit packs for EI connections to PNs
 8. IPSI-to-server control network connection via Ethernet switch
 9. CSS-connected PN (G650 Media Gateway or stack [shown in figure], MCC1 Media Gateway, or SCC1 Media Gateway stack [shown in figure]).
 10. Control gateway or carrier, in the A position in the stack, for PNs labeled 9. The control gateway contains:
 - A TN2312AP/BP IPSI circuit pack for IP connection to server.
 - A TN570Bv7/C/D EI circuit pack for bearer network connections to the SNI.
 11. TN 570Bv7/C/D to TN573 fiber connections between PNs and SNC
 12. TN 573/570Bv7/C/D fiber connections between the SNCs and the B carriers (if the MCC1 is a PN)
 13. Customer LAN
 14. LAN connections of TN2302AP IP Media Interface or TN2602AP IP Media Resource 320 for IP-TDM voice processing and optional TN799DP C-LAN for control of IP endpoints

NOTE: The number of TN2302AP, TN2602AP, and TN799DP circuit packs varies, depending on the number of IP endpoints, port networks, and adjunct systems. These circuit packs may be inserted into a port carrier or the PN control carrier.
 15. LAN connections of servers for remote administration
 16. Duplicated server links, including the link for translations memory duplication and the link for control data sharing. The link for memory duplication is implemented through the DAL2 board or (for the S8720 and S8730 Server) through software duplication.
-

ESS support for combined IP- and fiber-PNC PNs

Any Enterprise Survivable Server (ESS) can also support a combined IP- and fiber-PNC configuration in the event of failover to the ESS. Both an S8500-series/S8500B/S8500C and an S8700-series ESS can support single control and duplicated control networks for both the IP-PNC and fiber-PNC portions of the configuration. However, the ESSs can support only those CSS- or ATM-connected PNs that individually have a TN2312AP/BP IPSI circuit pack and either a TN2302AP IP Media Processor or TN2602AP IP Media Resource 320 circuit pack. This limitation exists because the ESS provides only IP-PNC control and bearer service to PNs.

For more information on ESS, see the *Using the Avaya Enterprise Survivable Servers (ESS)*, 03-300428.

Chapter 3: Control Networks for S8700-Series and S8500-series Servers

Control networks carry the call signaling data between call servers and the port networks. A control network is an Ethernet link between an Ethernet port on the S8500-series or S8700-Series Server and an Ethernet port on an IPSI circuit pack in a port network, possibly with intermediate switches and routers.

This chapter provides information on how to set up control networks. Topics covered include:

- [Combining fiber-PNC and IP-PNC in a single configuration](#)
- [Layer 2 connectivity options](#)
- [Control network on customer LAN \(CNOCL\)](#)
- [Control network C](#)
- [CNOCL configuration — not recommended](#)
- [Preferred CNOCL configuration](#)

Combining fiber-PNC and IP-PNC in a single configuration

With Communication Manager 3.0 and later, Avaya extends “Control Network on Customer LAN” functionality to simplify network configuration by allowing both fiber-connected (fiber-PNC) and IP-connected (IP-PNC) port networks in a single configuration. With combined port network connectivity, enterprises can attach IP-connected, ATM-connected, or center-stage-connected port networks to their S8700-series Server. Likewise, they can attach IP-PNC or fiber-PNC port networks to their S8500-series Server(s).

The Avaya S8700 solution requires IP connectivity between S8700-series interfaces and Avaya media gateways. IP-connected port networks use IPSI cards in the port networks to communicate with the server and with each other. This connection will be referred to as the “Control Connection.” There are many network options to provide this connectivity, and it is at the enterprise’s discretion how this is best implemented in its environment.

If IP connectivity, including the control connection, between the server and port network is lost, the server is unable to provide call control resulting in an unstable system. Although the Avaya S8700-series Server interfaces provide for Denial of Service protection, they cannot affect the ability of the network to successfully forward packets during a virus or worm attack, or when the network becomes unstable due to network outages or administrative errors.

In hybrid environments with both IP and TDM endpoints and trunks, the incentive to minimize disruption of the IP control connection is increased. By maintaining the control connection when other network components have failed, TDM-connected endpoints will continue to function.


The following examples illustrate common methods for designing the control connection between S8700-series servers and IP-connected port networks. They identify advantages and disadvantages of each, so enterprises can select the appropriate solution for their environment.

Layer 2 connectivity options

[Figure 25](#) and [Figure 26](#) illustrate single and duplicated control networks, respectively, using Layer 2 connectivity.


L2 Example 1: Layer 2 single control network

Figure 25: Layer 2 control network connectivity

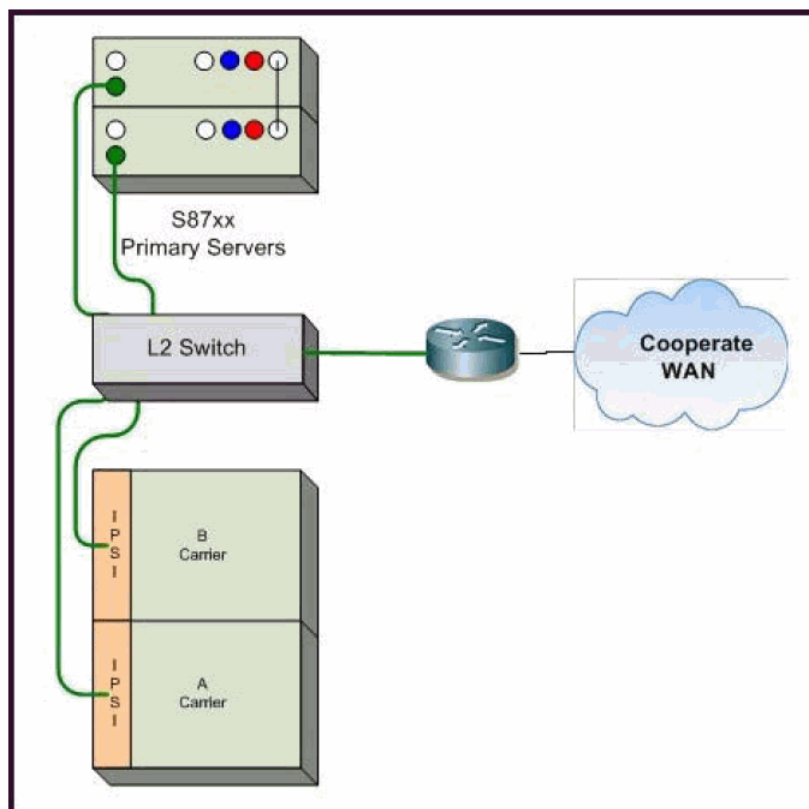

L2 Example 2: Layer 2 duplicated control network

Figure 26: Layer 2 redundant control network connectivity

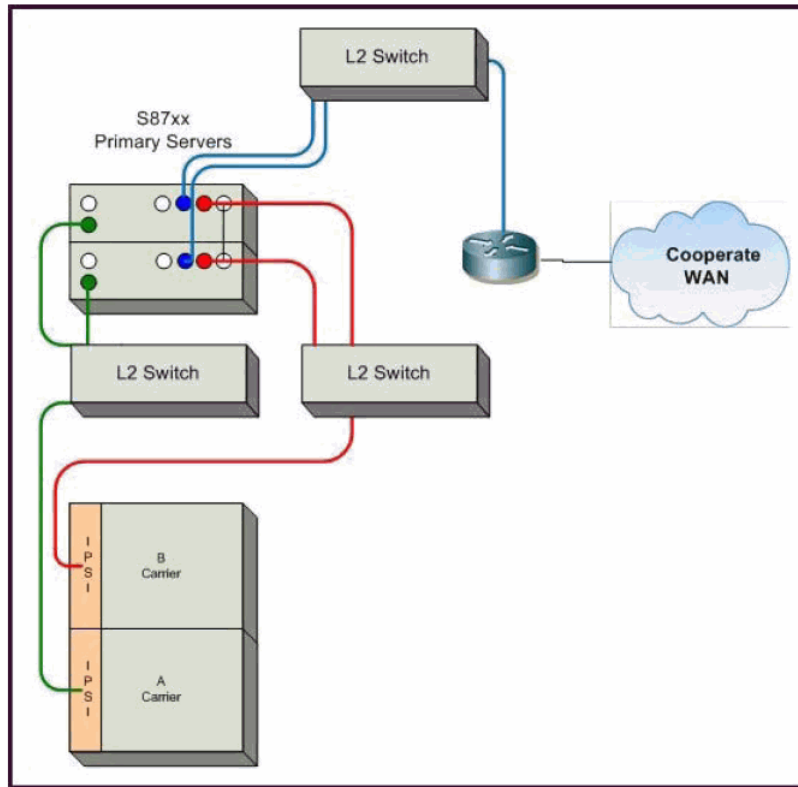


Layer 3 connectivity options

The following example configuration shows a remote backup server with Layer 3 connectivity routed over the corporate WAN.

The configuration shown in [Figure 27](#) connects all Avaya server and gateway interfaces to a single VLAN per location. It is important to note that for the primary cluster to control the port networks at the remote site, the primary servers must have IP connectivity to the remote IPSIs. Also, for the backup cluster to take control of the primary site port networks, it must have IP connectivity to the primary site IPSIs across the network. This design is not often used. Most large sites have chosen to separate the control network for increased reliability.

Figure 27: Multi-site, single interface

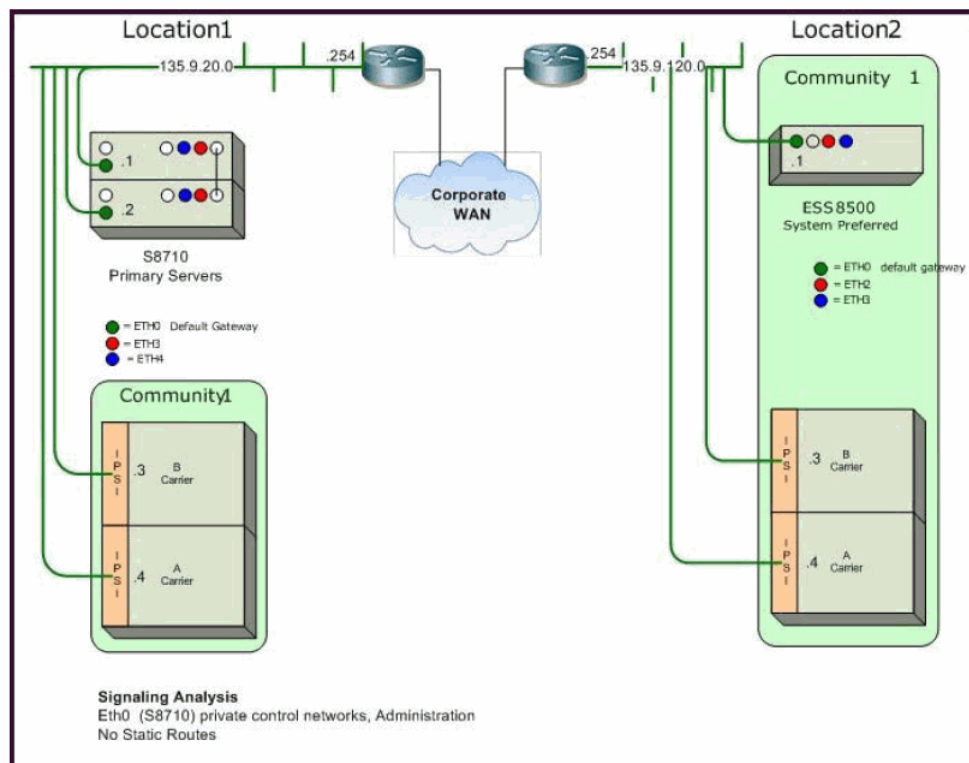

Netstat information

Destination	Gateway	Genmask	Interface
<u>Location 1 Netstat</u>			
135.9.20.0 (CNA, CNB)	135.9.20.1	255.255.255.0	Eth0

Netstat information

Destination	Gateway	Genmask	Interface
0.0.0.0 (Default gateway)	135.9.20.254	0.0.0.0	Eth0
<u>Location 2 Netstat</u>			
135.9.120.0 (CNA, CNB)	135.9.120.1	255.255.255.0	Eth0
0.0.0.0 (Default gateway)	135.9.120.254	0.0.0.0	Eth0
No static routes are required			

Advantages: - Simple; no host-based static routing required.

Disadvantages: - Provides no control point to protect the “control connection” from network conditions that would not allow IP packets to reach their destinations. Using this design, the control connection can be negatively affected by DoS attacks, viruses, spanning tree calculations, and so on. Any disruption in IP connectivity will also disrupt the TDM connections.

Control network C

Control network C (CNC) was introduced in Communication Manager 3.0 to allow control connectivity to be passed through the customer network interface on the server. This functionality is introduced to simplify the network design for enterprises with local private control networks (control network A and control network B) who wish to use their corporate network to support remote IPSI-controlled port networks.

Control network C functionality is useful in situations where an enterprise is adding distributed port networks at remote sites connected to a centralized S8700-series or S8500-series server. Using control network C allows the enterprise to keep CNA and CNB on a private network while remote port networks communicate over the shared enterprise data network. This can help maintain the security and reliability of the existing port networks connected to control networks A and B. New port networks can still connect to the server without extending control networks A and B to remote sites nor requiring the use of static routes on the S8700-series or S8500-series servers.



Important:

Control network C is a *server* enhancement. Control network C could be used in an all IP-connected (IP-PNC) configuration or in a configuration with both fiber-connected (fiber-PNC) and IP-connected port networks.

To enable, disable, or report the current status for control network C on an Avaya S8700-series or S8500-series Server, use the System Management Interface web pages.

Avaya recommends that port networks be attached to private control networks A and B within a building, but that remote port networks connect to the servers through control network C. This offers protection against network disruptions and Denial of Service (DoS) attacks to Port Networks in the central site, while offering flexibility and reducing costs when attaching port networks at remote sites.

CNC configuration: Multi-site private CNA, CNB, with remote PNs on the enterprise LAN

[Figure 28](#) shows the connection of local private control networks using the existing "public" enterprise network to provide connectivity to a remote site with an IPSI-controlled port network and an S8500-series ESS server.

Note:

The local control networks are designated as *private* in this case because the IP addressing of these control networks is not routable through the enterprise network. The control network to the remote site is designated as *public* because it is fully routable throughout the enterprise network.

The Control connection from the S8700 to the remote IPSI is established through the "Customer LAN", or the interface on the server connected to the enterprise network. This configuration is particularly appropriate for large main sites, which require a fully redundant architecture, with smaller remote sites that do not require the same level of redundancy.


This design provides for total protection of the local control networks from any enterprise network failures. However, the remote site may be affected by enterprise network issues. This configuration is simplified because the default route of the CNC interface allows the CNC interface to communicate across the enterprise routed network infrastructure without requiring static routes.

The table below [Figure 28](#) shows routing information that would be obtained from the netstat command for this configuration.

Advantages: - The dedicated control network provides total isolation from outages in the enterprise network, so all local TDM communication at the main site can remain active during a total enterprise network failure. There are no static routes to maintain.

Disadvantages: - The remote site can be affected by public enterprise network issues. The remote ESS server cannot control the port networks at the main site.

Figure 28: Multi-site CNC

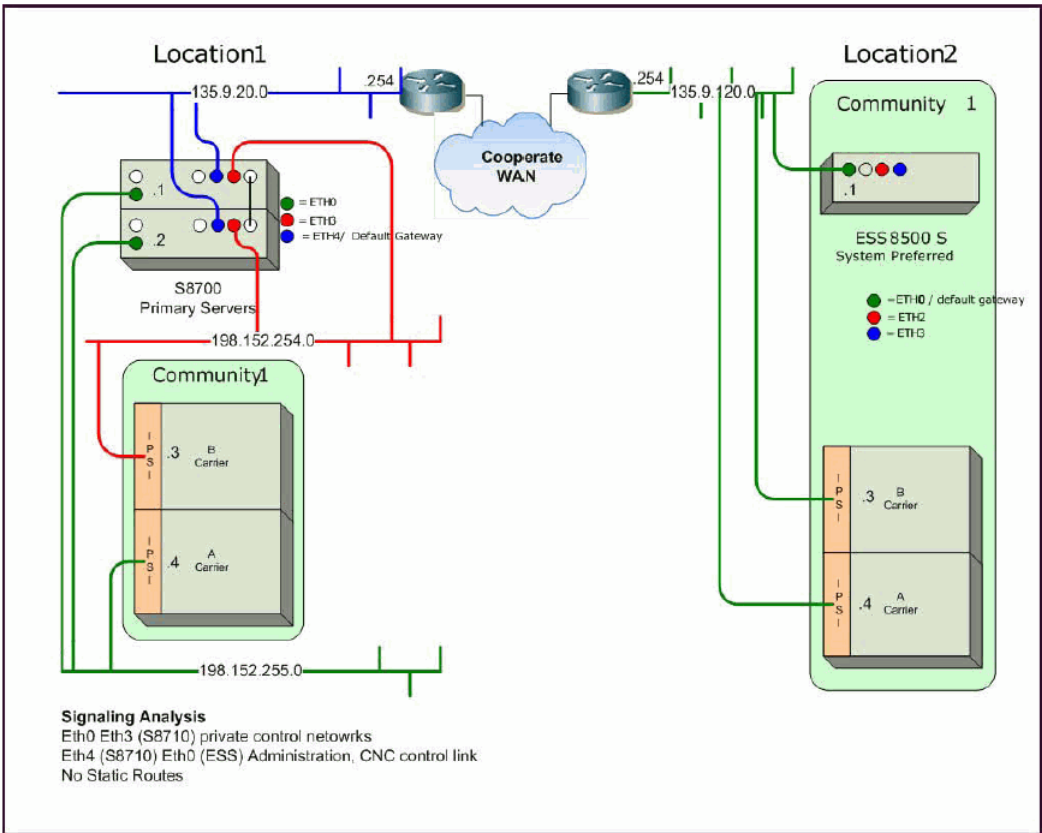

Netstat information

Destination	Gateway	Genmask	Interface
<u>Location 1</u>			
135.9.20.0 (CNC)	135.9.20.1	255.255.255.0	Eth4
198.152.255.0 (CNA)	198.152.255.1	255.255.255.0	Eth0
198.152.254.0 (CNB)	198.152.254.1	255.255.255.0	Eth3
0.0.0.0 (Default gateway)	135.9.20.254	0.0.0.0	Eth4
<u>Location 2</u>			
135.9.120.0 (CNC)	135.9.120.1	255.255.255.0	Eth0
0.0.0.0 (Default gateway)	135.9.120.254	0.0.0.0	Eth0

Control network on customer LAN (CNOCL)


Communication Manager 2.0 introduced the control network on Customer LAN option, which allows the use of routed control networks. CNOCL removed many of the IP connectivity differences between an IP-connected and fiber-connected (formally Multi-Connect). The only true difference remaining is the type of inter-port network bearer paths, IP or fiber. CNOCL provides enterprises with several options to create and extend control networks.

Example 1: Multi-site CNOCL using merged enterprise and control network

[Figure 29](#) and [Figure 30](#) show the connection of the two private control networks to the customers enterprise network, making them "public." They are designated public in this case because the IP addressing of these control networks must be routable through the enterprise network.

This design has been used successfully in several Avaya deployments, but opens the control networks to all network issues experienced in the enterprise. Firewalls or strong access lists should be used to protect each site's control network, but inter-site connectivity cannot truly be protected. The use of the third interface connecting to the enterprise infrastructure for management is no longer necessary, and can be collapsed on the one of the other two networks.

Figure 29: Multi-site, CNOCL (host routes)

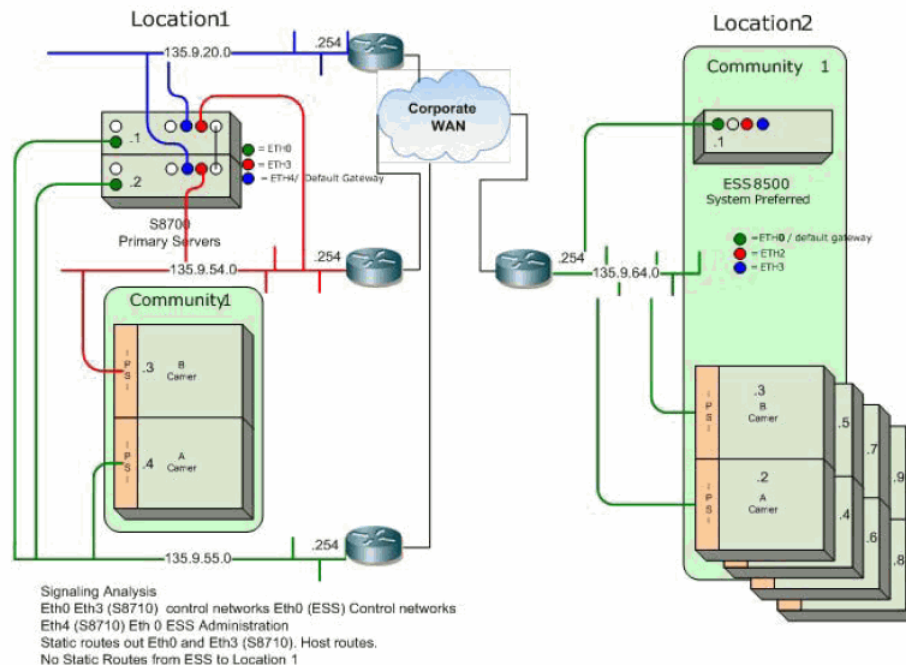

Netstat information

Destination	Gateway	Genmask	Interface
Location 1			
135.9.20.0 (LAN)	135.9.20.1	255.255.255.0	Eth4
135.9.54.0 (CNB)	135.9.54.1	255.255.255.0	Eth3
135.9.55.0 (CNA)	135.9.55.1	255.255.255.0	Eth0
135.9.64.3	135.9.54.254	255.255.255.255	Eth3
135.9.64.5	135.9.54.254	255.255.255.255	Eth3
135.9.64.7	135.9.54.254	255.255.255.255	Eth3
135.9.64.9	135.9.54.254	255.255.255.255	Eth3
135.9.64.2	135.9.55.254	255.255.255.255	Eth0
135.9.64.4	135.9.55.254	255.255.255.255	Eth0
135.9.64.6	135.9.55.254	255.255.255.255	Eth0
135.9.64.8	135.9.55.254	255.255.255.255	Eth0
0.0.0.0 (Default gateway)	135.9.20.254	0.0.0.0	Eth4
Location 2			
135.9.64.0	0.0.0.0	255.255.255.0	Eth0
0.0.0.0 (Default gateway)	135.9.120.254	0.0.0.0	Eth0


Static (host) routes

Destination	Subnet Mask	Gateway	Interface
Location 1			
135.9.64.2	255.255.255.255	135.9.55.254	0
135.9.64.3	255.255.255.255	135.9.54.254	3
135.9.64.4	255.255.255.255	135.9.55.254	0
135.9.64.5	255.255.255.255	135.9.54.254	3
135.9.64.6	255.255.255.255	135.9.55.254	0
135.9.64.7	255.255.255.255	135.9.54.254	3
135.9.64.8	255.255.255.255	135.9.55.254	0
135.9.64.9	255.255.255.255	135.9.54.254	3
Location 2 No static routes required			

Advantages: - Provides a control point to limit traffic allowed on the control network. With additional Ethernet switches, it can provide protection against utilization failures and spanning tree recalculations. This design can allow TDM connections to continue during specific network failures. No host-based static routing required.

Disadvantages: - Requires additional VLANs and/or dedicated switches and router interfaces.

Figure 30: Multi-site, CNOCL (subnet routes)

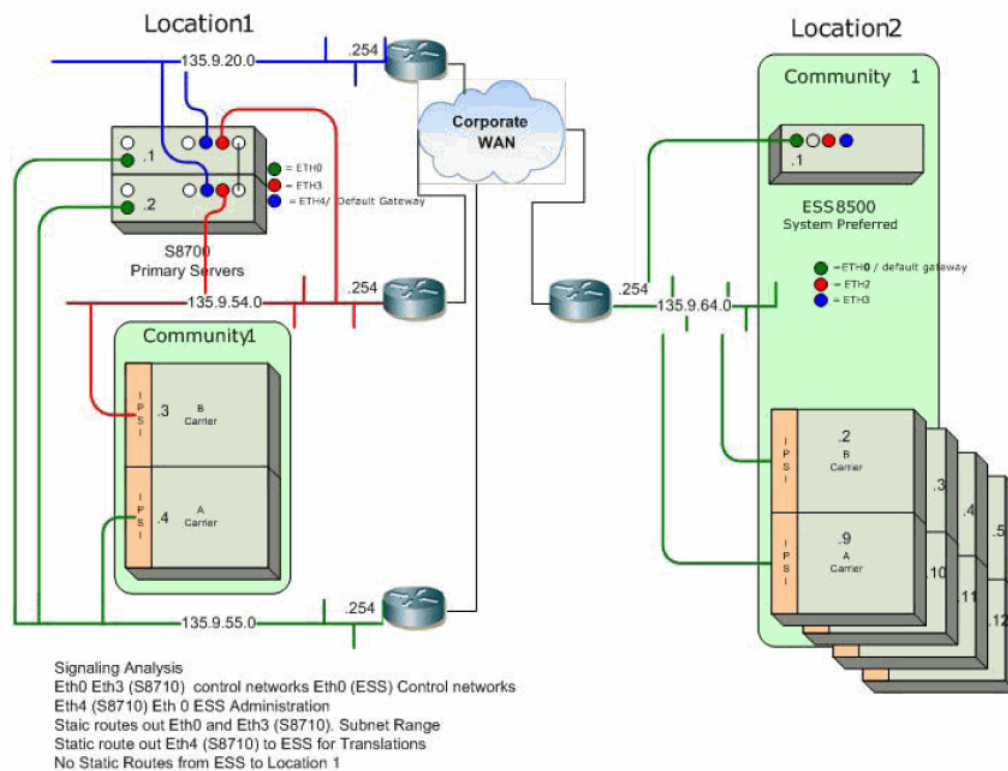

Netstat information

Destination	Gateway	Genmask	Interface
Location 1			
135.9.20.0 (LAN)	135.9.20.1	255.255.255.0	Eth4
135.9.54.0 (CNB)	135.9.54.1	255.255.255.0	Eth3
135.9.55.0 (CNA)	135.9.55.1	255.255.255.0	Eth0
135.9.64.0	135.9.54.254	255.255.255.248	Eth3
135.9.64.8	135.9.55.254	255.255.255.248	Eth0
135.9.64.1	135.9.20.254	255.255.255.255	Eth4

Netstat information

Destination	Gateway	Genmask	Interface
0.0.0.0 (Default gateway)	135.9.20.254	0.0.0.0	Eth4
Location 2			
135.9.64.0 (LAN)	0.0.0.0	255.255.255.0	Eth0
0.0.0.0 (Default gateway)	135.9.120.254	0.0.0.0	Eth0

Static routes

Destination	Subnet Mask	Gateway	Interface
Location 1			
135.9.64.0	255.255.255.248	135.9.54.254	3
135.9.64.8	255.255.255.248	135.9.55.254	0
135.9.64.1	255.255.255.255	135.9.20.254	4
Location 2 No static routes required			

Advantages: - Provides a control point to limit traffic allowed on the control network. Uses the enterprise's existing network infrastructure.


Disadvantages: - This will not allow TDM connections to continue during most network failures. Static routing is required on both Main and MBS/ESS servers. Multiple interfaces to the enterprise network may become complex to administer. Changes in network architecture will have to be synchronized with changes in the static route table, and will be service-affecting.

Example 2: Multi-site CNOCL using extended private networks

This example shows the connection of the two private control networks using a dedicated routed infrastructure. They are designated private in this case because the IP addressing of these control networks is not routable through the enterprise network.

This design provides for total protection of the control networks from any enterprise network failures. With proper architecture, the static routing for CNA and CNB can be reduced to single summary routes, rather than static routes per IPSI.

Figure 31: Multi-site, critical reliability using extended private networks

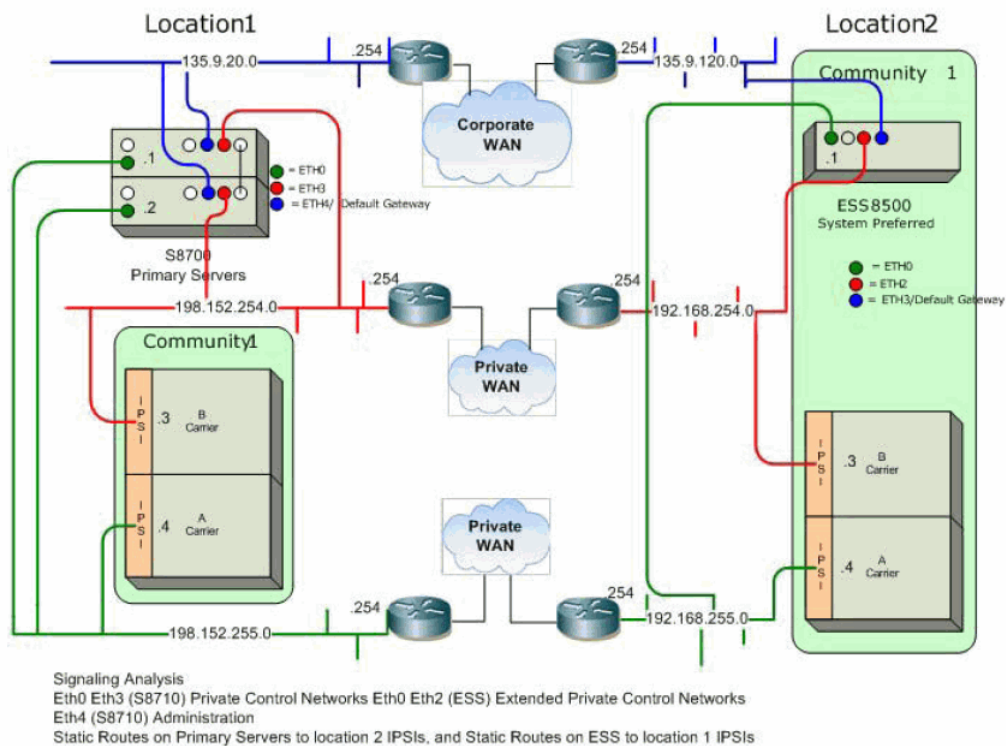

Netstat information

Destination	Gateway	Genmask	Interface
Location 1			
135.9.20.0	135.9.20.1	255.255.255.0	Eth4
198.152.254.0	198.152.254.1	255.255.255.0	Eth3
198.152.255.0	198.152.255.1	255.255.255.0	Eth0
198.168.254.0	198.152.254.254	255.255.255.248	Eth3
198.168.255.0	198.152.255.254	255.255.255.248	Eth0
0.0.0.0 (Default gateway)	135.9.20.254	0.0.0.0	Eth4
Location 2			
135.9.64.0	135.9.64.1	255.255.255.0	Eth3
192.168.254.0	192.168.254.1	255.255.255.0	Eth2
192.168.255.0	192.168.255.1	255.255.255.0	Eth0
192.152.254.0	192.168.254.254	255.255.255.0	Eth2
192.152.255.0	192.168.255.254	255.255.255.0	Eth0
0.0.0.0 (Default gateway)	135.9.20.254	0.0.0.0	Eth3

Static routes

Destination	Subnet Mask	Gateway	Interface
Location 1			
192.168.254.0	255.255.255.0	198.152.254.254	3
192.168.255.0	255.255.255.0	198.152.255.254	0
Location 2			
198.152.254.0	255.255.255.0	192.168.254.254	2
198.152.255.0	255.255.255.0	192.168.255.254	0


Advantages: - The dedicated Control network provides total isolation from outages in the enterprise network, so all TDM communication can remain active during total enterprise network failure. The use of simple summary routes instead of possibly complex static routing provides for a more reliable system. The synchronization of network changes with Communication Manager can be logistically difficult.

Disadvantages: - Requires a dedicated infrastructure.

CNOCL configuration — not recommended

The configuration shown in [Figure 32](#) should be avoided because it requires complex network administration.

Figure 32: Multisite high reliability CNOCL

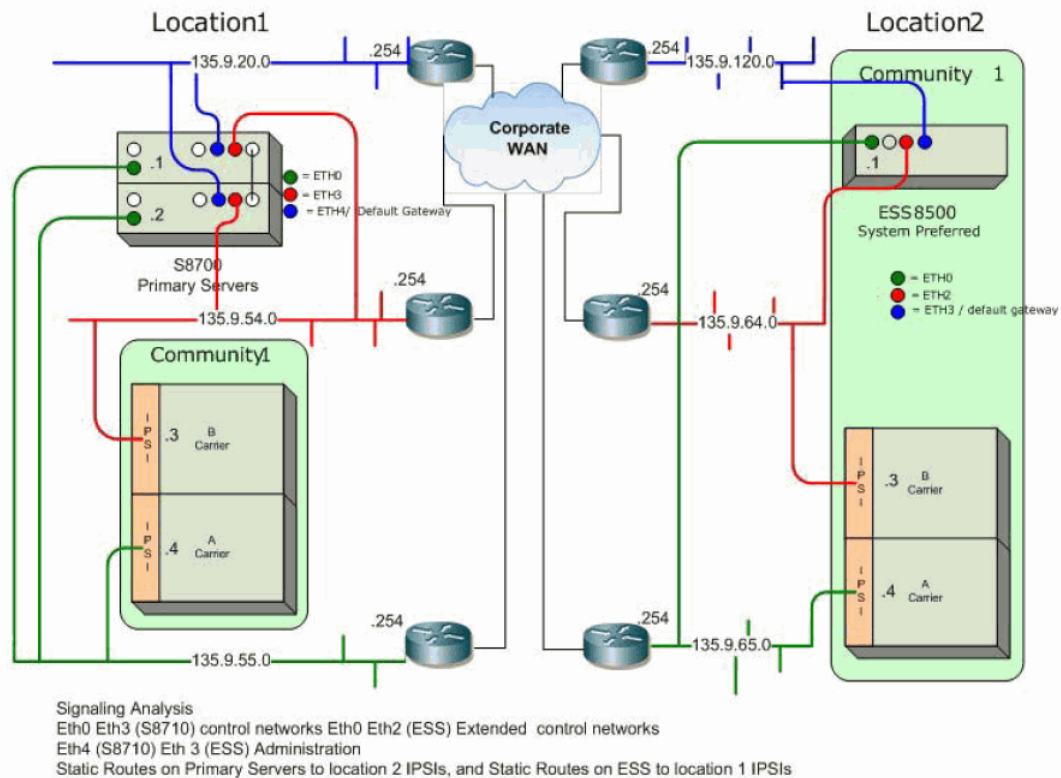

Advantages - None

Disadvantages - Maximizes the number static routes required. Requires complex administration multiple enterprise network connections.

See [Figure 32: Multisite high reliability CNOCL](#) on page 121 for the netstat and static routes details.

Network administration for [Figure 32](#).

Netstat information

Destination	Gateway	Genmask	Interface
Location 1			
135.9.20.0 (LAN)	135.9.20.1	255.255.255.0	Eth4
135.9.54.0 (CNB)	135.9.54.1	255.255.255.0	Eth3
135.9.55.0 (CNA)	135.9.55.1	255.255.255.0	Eth0
135.9.64.0	135.9.54.254	255.255.255.0	Eth3
135.9.65.0	135.9.55.254	255.255.255.0	Eth0
0.0.0.0 (Default gateway)	135.9.20.254	0.0.0.0	Eth4
Location 2			
135.9.120.0 (LAN)	135.9.120.1	255.255.255.0	Eth3
135.9.64.0 (CNB)	135.9.64.1	255.255.255.0	Eth2
135.9.65.0 (CNA)	135.9.65.1	255.255.255.0	Eth0
135.9.54.0	135.9.64.254	255.255.255.0	Eth2
135.9.55.0	135.9.65.254	255.255.255.0	Eth0
0.0.0.0 (Default gateway)	135.9.120.254	0.0.0.0	Eth3


Static routes

Destination	Subnet Mask	Gateway	Interface
Location 1			
135.9.64.0	255.255.255.0	135.9.54.254	3
135.9.65.0	255.255.255.0	135.9.55.254	0
Location 2			
135.9.54.0	255.255.255.0	135.9.64.254	2
135.9.55.0	255.255.255.0	135.9.65.254	0

Preferred CNOCL configuration

The configuration shown in [Figure 33](#) is the preferred CNOCL configuration because it minimizes static routes and other network administration.

Figure 33: Control network on customer LAN

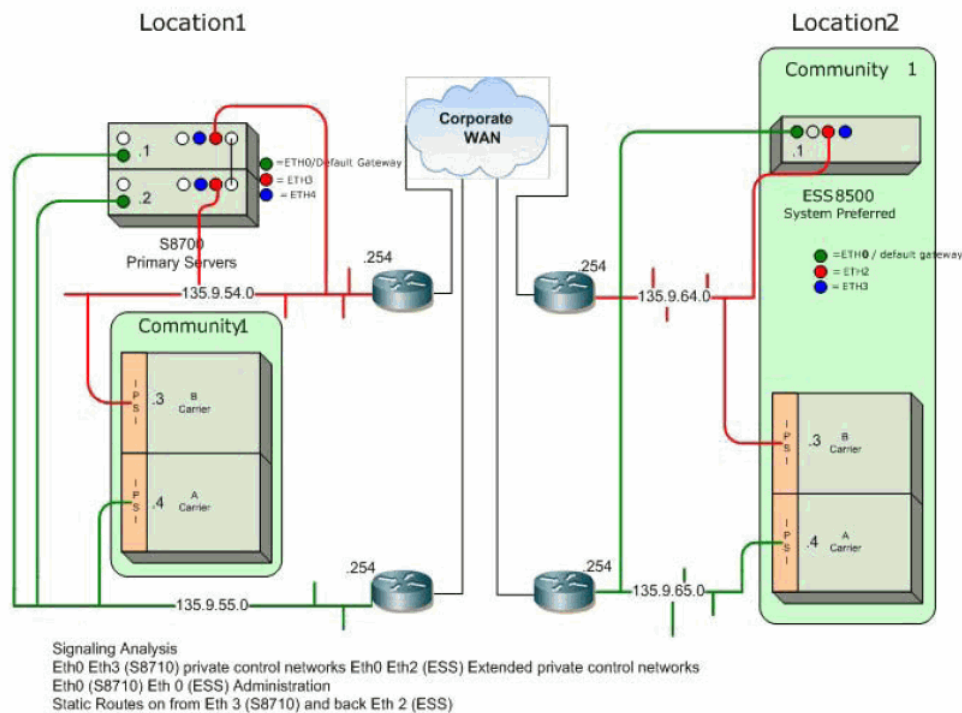

Advantages - Minimizes static routing. Provides duplication of all network interfaces while minimizing the number of enterprise network connections, providing reduced administration.

Disadvantages - None.

See [Control network on customer LAN](#) on page 123 for the netstat and static routes details.

Network administration for [Figure 33](#).**Netstat information**

Destination	Gateway	Genmask	Interface
Location 1			
135.9.54.0 (CNB)	135.9.54.1	255.255.255.0	Eth3
135.9.55.0 (CNA, LAN)	135.9.55.1	255.255.255.0	Eth0
135.9.64.0	135.9.54.254	255.255.255.0	Eth3
0.0.0.0 (Default gateway)	135.9.55.254	0.0.0.0	Eth0
Location 2			
135.9.64.0 (CNB)	135.9.64.1	255.255.255.0	Eth2
135.9.65.0 (CNA, LAN)	135.9.65.1	255.255.255.0	Eth0
135.9.54.0	135.9.64.254	255.255.255.0	Eth2
0.0.0.0 (Default gateway)	135.9.65.254	0.0.0.0	Eth0

Static routes

Destination	Subnet Mask	Gateway	Interface
Location 1			
135.9.64.0	255.255.255.0	135.9.54.254	3
Location 2			
135.9.54.0	255.255.255.0	135.9.64.254	2

Chapter 4: Administering converged networks

This section provides information for administering converged network components.

- [About Voice over IP converged networks](#)
- [Providing a network assessment](#)
- [Setting up VoIP hardware](#)
- [Administering Avaya gateways](#)
- [Administering IP trunks](#)
 - [Administering H.323 trunks](#)
 - [Administering SIP trunks](#)
- [Administering Avaya phones](#)
 - [Administering IP Softphones](#)
 - [Installing and administering Avaya IP telephones](#)
- [About hairpinning and shuffling](#)
- [Administering FAX, modem, TTY, and H.323 clear channel calls over IP Trunks](#)
- [SRTP media encryption](#)

About Voice over IP converged networks

Until recently, voice, video, and data were delivered over separate, single-purpose networks. A converged network brings voice, data, and video traffic together on a single IP network. Avaya's VoIP technology provides a cost-effective and flexible way of building enterprise communications systems through a converged network.

Some of the flexible elements of a converged network include:

- Separation of call control and switching functions (see the *Separation of Bearer and Signaling Job Aid*, 555-245-770, on the library CD, 555-233-825)
- Different techniques for handling data, voice, and FAX
- Communications standards and protocols for different network segments
- Constant and seamless reformatting of data for differing media streams

Digital data and voice communications superimposed in a converged network compete for the network bandwidth, or the total information throughput that the network can deliver. Data traffic tends to require significant network bandwidth for short periods of time, while voice traffic demands a steady, relatively constant transmission path. Data traffic can tolerate delays, while

voice transmission degrades, if delayed. Data networks handle data flow effectively, but when digitized voice signals are added to the mix, networks must be managed differently to ensure constant, real-time transmission needed by voice.

Providing a network assessment

Even if your network appears to perform acceptably, adding VoIP taxes network resources and performance, because VoIP requires dedicated bandwidth and is more sensitive to network problems than data applications alone. Many customer IP infrastructures appear to be stable and perform at acceptable levels, but have performance and stability issues that create problems for Avaya VoIP Solutions. While a customer network may appear to be ready to support full-duplex VoIP applications, Avaya cannot assure performance and quality without a network assessment.

The network assessment services for Avaya VoIP consist of 2 phases:

- Basic Network Assessment — is a high-level LAN/WAN infrastructure evaluation that determines the suitability of an existing network for VoIP.
- Detailed Network Assessment — is typically the second phase in the Network Assessment for IP Telephony solutions.

The detailed network assessment takes information gathered in the basic network assessment, performs problem diagnosis, and provides functional requirements for the network to implement Avaya VoIP.

For more information, see

- "Network assessment offer" in *Avaya Application Solutions: IP Telephony Deployment Guide*, 555-245-600.
- Avaya Communication Solutions and Integration (CSI)

Avaya Communication Solutions and Integration (CSI) supports a portfolio of consulting and engineering offers to help plan and design voice and data networks, including:

- IP Telephony
- Data Networking Services
- Network Security Services.

You can contact Avaya CSI:

- On the Web -- <http://csi.avaya.com>.
 - by E-Mail: bcsius@avaya.com
 - by phone: +1 866 282 9266
- <http://netassess.avaya.com> for a description of the Avaya network assessment policy.
Note: this link is available only from within the Avaya corporate network.

Setting up VoIP hardware

This section contains descriptions and administration information for the following circuit packs and media modules:

- [About Universal DS1 circuit packs and MM710 T1/E1Media Module](#)
- [About the TN799DP Control LAN](#)
- [About the TN2302AP IP Media Processor](#)
- [About the TN2602AP IP Media Resource 320](#)
- [About the TN2312BP IP Server Interface \(IPSI\)](#)
- [About the MM760 VoIP Media Module](#)
- [TN8400AP Server circuit pack](#)
- [TN8412AP S8400 server IP Interface](#)

About Universal DS1 circuit packs and MM710 T1/E1Media Module

The TN464HP/TN2464CP circuit packs and the MM710 Media Module (version 3 and later) have the same functionality as other DS1 circuit packs with the addition of echo cancellation circuitry, which offers echo cancellation tail lengths of up to 96 milliseconds (ms). The TN574, TN2313, and TN2464 DS1 circuit packs do not support echo cancellation.

The TN464HP/TN2464CP and MM710 are intended for users who encounter echo over circuits connected to the Direct Distance Dialing (DDD) network. Echo is most likely to be noticeable when Communication Manager is configured for ATM, IP, and wideband. With these configurations, the delay between the primary signal and the echoed signal is greater than with a TDM configuration. In addition, echo can occur on system interfaces to local service providers that do not routinely install echo cancellation equipment in all their circuits.

Echo cancellation is a software right-to-use feature that supports voice channels, and is not intended for data. When a data call is received, these circuit packs detect a modem tone and turn off echo cancellation for the duration of the data call.

Working with echo cancellation

You can determine whether echo cancellation is enabled for TN464HP/TN2464CP circuit packs and MM710 T1/E1 Media Modules by displaying the **system-parameters customer-options** screen.

1. Type `display system-parameters customer-options`.

2. Find and review the following fields.

The fields may appear on different pages of the screen.

Field	Conditions/Comments
Maximum Number of DS1 Boards with Echo Cancellation	Specifies the number of DS1 boards that have echo cancellation turned on.
DS1 Echo Cancellation	If y , echo cancellation is enabled.

3. Exit the screen.

Administering echo cancellation on the DS1 circuit pack or MM710 media module

Note:

Any changes made to the echo cancellation settings on the DS1 Circuit Pack screen take effect immediately.

The **DS1 Circuit Pack** screen for the TN464HP/TN2464CP circuit packs and MM710 media module has fields to support echo cancellation: **Echo Cancellation**, **EC Direction**, and **EC Configuration**. The **Echo Cancellation** field appears when the Echo Cancellation feature is activated on the **System-Parameters Customer Options** screen. The **EC Direction** and **EC Configuration** fields appear when the **DS1 Echo Cancellation** field is enabled.

- **EC Direction** determines the direction from which echo will be eliminated, either inward or outward.
- **EC Configuration** is the set of parameters used when cancelling echo.

This information is stored in firmware on the UDS1 circuit pack.

To administer the DS1 circuit pack and MM710 media module

1. Type `add ds1 <port>` and press **Enter** to open the **DS1 Circuit Pack** screen, where `<port>` is the location of the DS1 circuit pack, or the MM710 media module.

DS1 Circuit Pack screen

add ds1 01c04	DS1 CIRCUIT PACK	Page 1 of 2
Location: 01C04 Bit Rate: _____ Name: _____ Line Coding: _____ Signaling Mode: isdn-pri____ Connect: _____ TN-C7 Long Timers? _____ Interworking Message: _____ Interface Companding: _____ Idle Code: _____ Interface: _____ Country Protocol: _____ Protocol Version: _____ CRC? _____ DCP/Analog Bearer Capability: _____ Slip Detection? _ El Sync-Splitter? _ Echo Cancellation? y EC Direction: _ EC Configuration: _ T303 Timer (sec): _____ Near-end CSU Type: _____		

2. On the **DS1 Circuit Pack** screen, complete the following fields:

Field	Conditions/Comments
Echo Cancellation	Enter y to enable echo cancellation on the Universal DS-1 circuit pack.
EC Direction	Indicates the direction of the echo that is being cancelled. Enter inward or outward. - The inward setting cancels echo energy coming back into the switch — energy from an outgoing call is reflected from an external reflection point (party "inside" the switch hears the echo). - The outward setting cancels echo energy going outside the switch — energy from an incoming call is reflected from an internal reflection point (party "outside" the switch hears the echo).

Field	Conditions/Comments
EC Configuration	Indicates the set of echo cancellation defaults to administer. Appears when the Echo Cancellation field is set to y. Enter digits between 1-15. • Enter 1 or 5-15 to provide most rapid adaptation in detecting and correcting echo at the beginning of a call, regardless of the loudness of the talker's voice. For very loud talkers and severe echo, the far-end talker's speech is heard as clipped when both parties talk at the same time. • Enter 2 for slightly slower adaptation to echo, use if speech is often clipped when both parties talk at the same time. • Enter 3 for slightly slower adaptation to echo, may result in a 2 or 3 second fade on strong echo for quiet talkers. Completely removes speech clipping. • Enter 4 in cases of extreme echo, excessive clipping or breakup of speech. May result in slight echo or background noise. Note: For the MM710, the values 1 and 4 are reversed. That is, 1 for the MM710 is the same as 4 for the TN464HP/TN2464CP, and 4 for the MM710 is the same as 1 for the TN464HP/TN2464CP

Administering echo cancellation on trunks

Note:

Changes to echo cancellation settings on the Trunk Features screen do not take effect until after a port or trunk group is busied-out/released, or the SAT command **test trunk group** is performed, or periodic maintenance is run.

Echo cancellation is turned on or off on a per trunk-group basis using the **change trunk-group** command. If the trunk group field, **DS1 Echo Cancellation** is **y**, echo cancellation is applied to every TN464HP/TN2464CP trunk member in that trunk group. The echo cancellation parameters used for a given trunk member are determined by the **EC**

Configuration number administered on the **DS1 Circuit Pack** screen for that specific trunk's board.

Echo cancellation applies to voice channels and supports echo cancellation on the following trunk group types:

- CO
- TIE
- ISDN-PRI
- FX
- WATS
- DID
- DIOD
- DMI-BOS
- Tandem
- Access
- APLT

Administration of echo cancellation on a trunk group is done on the **TRUNK FEATURES** screen.

To administer a trunk group for echo cancellation

1. Type **change trunk-group n**
where *n* is the trunk group number.
2. Go to the Trunk Features page. Note: the fields displayed depend on the trunk group type.

Trunk Features screen

change trunk-group n
Page 3 of x

TRUNK FEATURES

ACA Assignment? _ Measured: ____

Maintenance Tests? _

Data Restriction? _

Abandoned Call Search? _

Suppress # Outpulsing? _

Charge Conversion: ____

Decimal Point: ____

Currency Symbol: ____

Charge Type: ____

Per Call CPN Blocking Code: ____

Per Call CPN Unblocking Code: ____

MF Tariff Free? _

Outgoing ANI: **DS1 Echo Cancellation?** _

3. Move to the following field

Field	Conditions/Comments
DS1 Echo Cancellation	Enter y to enable echo cancellation on a per trunk group basis.

4. Save the changes.

About the TN799DP Control LAN

Systems in a private network are interconnected by both tie trunks (for voice communications) and data links (for control and transparent feature information). Various DS1, IP, and analog trunk circuit packs provide the voice-communications interface. For TCP/IP connectivity, the data-link interface is provided by a TN799DP Control LAN (C-LAN) circuit pack. (For more information about this VoIP transmission hardware, see [TN799DP control LAN \(C-LAN\) interface](#) on page 20 in the [Network quality management](#) section of the Networking Overview chapter.)

The C-LAN handles the data-link signaling information in one of two configurations: Ethernet, or point-to-point (PPP). The C-LAN circuit pack has one 10/100baseT ethernet connection and up to 16 DS0 physical interfaces for PPP connections. C-LAN also extends ISDN capabilities to csi models by providing packet-bus access.

- In the Ethernet configuration, the C-LAN passes the signaling information over a separate TCP/IP network, usually by means of a hub or Ethernet switch.

Avaya recommends an Ethernet switch for optimal performance. For this configuration, install the C-LAN circuit pack and connect the appropriate pins of the C-LAN I/O field to the hub or Ethernet switch.

- In the PPP configuration, the C-LAN passes the data-link signaling to the DS1 for inclusion in the same DS1 bit stream as the DCS voice transmissions.

For this configuration, install the C-LAN circuit pack; no other connections are needed. The appropriate DS1 circuit packs must be installed, if they are not already present.

Physical addressing for the C-LAN board

The Address Resolution Protocol (ARP) on the C-LAN circuit pack relates the 32-bit IP address configured in software to the 48-bit MAC address of the C-LAN circuit pack. The MAC address is burned into the board at the factory. The C-LAN board has an ARP table that contains the IP addresses associated with each hardware address. This table is used to route messages across the network. Each C-LAN board has one MAC address, one Ethernet address, and up to 16 PPP addresses.

IP addressing techniques for the C-LAN board

The C-LAN supports both Classless Inter-domain Routing and Variable-Length Subnet Masks. These addressing techniques provide greater flexibility in addressing and routing than class addressing alone.

Installing the TN799DP C-LAN

TCP/IP connections (Ethernet or PPP) require a TN799DP C-LAN circuit pack, unless your system has embedded Ethernet capabilities. Before you install the C-LAN circuit pack, be sure you understand the requirements of your LAN. For information about LAN requirements for VoIP, go to <http://www.extremenetworks.com/LIBRARIES/Avaya/AvayaIPvoiceQualityNetworkRequirements.pdf> and look in the white paper titled *Avaya IP Voice Quality Network Requirements (EF-LB1500)*.

The following steps describe installation for the TN799DP C-LAN.

1. Determine the carrier/slot assignments of the circuit packs to be added.

You can insert the C-LAN circuit pack into any port slot.

2. Insert the circuit packs into the slots specified in step 1.

Note:

You do not need to power down the cabinet to install a C-LAN circuit pack.

Administering the C-LAN bus bridge (Avaya DEFINITY Server csi only)

For the Avaya DEFINITY Server csi only, complete the following steps to administer the bus bridge for the C-LAN circuit pack. Only an Avaya representative using the *craft* or higher login can change the maintenance parameters.

Note:

If there are 2 C-LAN circuit packs installed in this csi switch, administer the bus bridge for *only one* of them.

To administer the C-LAN bus bridge (Avaya DEFINITY Server csi only)

1. Type `change system-parameters maintenance`.
2. Move to the **Packet Intf2** field and enter `y`.
3. Enter the location of the C-LAN circuit pack in the **Bus Bridge** field
(for example, **01a08** for cabinet 1, carrier A, and slot 8).
4. Enter the port bandwidths or use the defaults in the **Pt0**, **Pt1**, and **Pt2 Inter-Board Link Timeslots** fields.
5. Submit the screen.

6. Verify that the bus bridge LED is lit on the C-LAN circuit pack.

This indicates that the packet bus is enabled.

Testing the packet bus and C-LAN circuit pack

In order to test the packet bus and the TN799DP C-LAN circuit pack, the cabinet needs an installed TN771D Maintenance/Test circuit pack.

To test the packet bus and C-LAN circuit pack

1. If there is no TN771D circuit pack in the cabinet, place one in a port slot.

This is for testing purposes only, and you will remove the board when finished.

2. Enter `test pkt port-network 1 long`

For more information about these tests, refer to the **test pkt command** section in *Maintenance Commands for Avaya Aura™ Communication Manager 2.1, Media Gateways and Servers*, 03-300191.

3. If the TN771D circuit pack was already in the cabinet, leave it there.
4. If you added the TN771D circuit pack to the cabinet in order to test the TN799DP circuit pack, remove it from the cabinet.


Installing C-LAN cables to a hub or ethernet switch

In the Ethernet configuration, the C-LAN passes the signaling information over a separate TCP/IP network, usually by means of a hub or Ethernet switch. Connect the appropriate pins of the C-LAN I/O field to the hub or Ethernet switch.

See [Figure 34: Cable connection for C-LAN connectivity](#).

1. Connect the 259A connector to the backplane connector of the port slot containing the C-LAN circuit pack.
2. Connect the Category 5 UTP cable between the 259A connector and a hub or Ethernet switch.

This connects port 17 on the C-LAN circuit pack to the LAN.

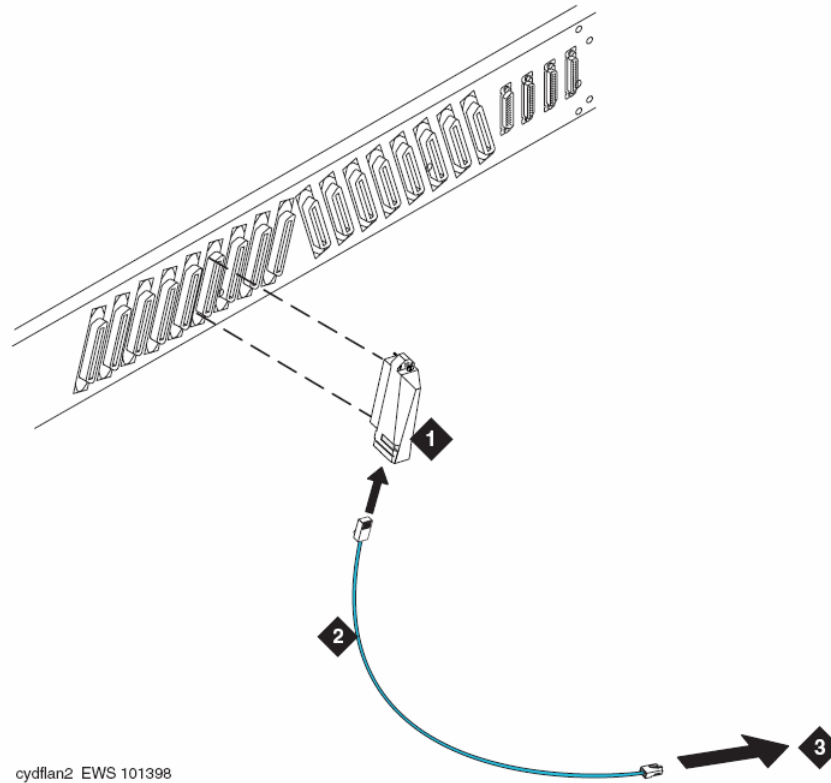Figure 34: Cable connection for C-LAN connectivity**Figure notes:**

- | | |
|---|--------------------|
| 1. 259A Connector | 3. Ethernet switch |
| 2. Category 5 UTP Cable (max length 100m) | |

Assigning IP node names

You must assign node names and IP addresses to each node in the network. Administer the **IP Node Names** screen on each call server or switch in the network.

You should assign the node names and IP addresses logically and consistently across the entire network. These names and addresses should be assigned in the planning stages of the network and should be available from the customer system administrator or from an Avaya representative.

To assign IP node names:

1. Type **change node-names ip** and press **Enter** to open the **IP Node Names** screen.

change node-names ip

Page 1

IP NODE NAMES

Name	IP Address
default	0_.0_.0_.0_
node-1	192.168.10_.31_
node-2	192.168.10_.32_
	.._._.

2. Enter values.

Field	Conditions/Comments
Name	Enter unique node names for each switch or adjunct that will connect to this switch through the C-LAN board.
IP Address	The unique IP addresses of the nodes named in the previous field.

3. Submit the screen.

Defining a LAN default gateway

On LANs that connect to other networks or subnetworks, Avaya recommends that you define a default gateway. The default gateway node is a routing device that is connected to different (sub)networks. Any packets addressed to a different (sub)network, and for which no explicit IP route is defined, are sent to the default gateway node.

You must use the **IP Interfaces** screen to administer a node (C-LAN port, PROCR or IP Interface port) as the default gateway.

The default node on the **Node Names** screen is a display-only entry with IP address 0.0.0.0. It acts as a variable that takes on unknown addresses as values. When the “default” IP route is set up, any address not known by the C-LAN is substituted for the default address in the default IP route, which uses the router as the default gateway.

Setting up Alternate Gatekeeper and C-LAN load balancing

Alternate Gatekeeper gives IP endpoints a list of available C-LAN circuit packs. Alternate Gatekeeper addresses and C-LAN load-balancing spread IP endpoint registration across more than one C-LAN circuit pack. The C-LAN load-balancing algorithm allocates endpoint registrations within a network region to the C-LAN with the least number of sockets in use. This increases system performance and reliability.

If registration with the original C-LAN circuit pack IP address is successful, the software sends back the IP addresses of all the C-LAN circuit packs in the same network region as the IP endpoint. If the network connection to one C-LAN circuit pack fails, the IP endpoint re-registers with a different C-LAN. If the system uses network regions based on IP address, the software also sends the IP addresses of C-LANs in interconnected regions. These alternate C-LAN addresses are also called *gatekeeper* addresses. These addresses can also be used if the data network carrying the call signaling from the original C-LAN circuit pack fails.

IP Telephones can be programmed to search for a gatekeeper independently of load-balancing. The IP Telephone accepts gatekeeper addresses in the message from the Dynamic Host Configuration Protocol (DHCP) server or in the script downloaded from the Trivial File Transfer Protocol (TFTP) server. If the phone cannot contact the first gatekeeper address, it uses an alternate address. If the extension and password is rejected by the first gatekeeper, the IP Telephone contacts the next gatekeeper. The number of gatekeeper addresses the phone accepts depends on the length of the addresses administered on the DHCP server.

Note:

A single Alternate Gatekeeper list is typically used in configurations with multiple servers. In this case, the DHCP server sends the same Alternate Gatekeeper list to all IP endpoints, but a given IP endpoint may not be able to register with some of the gatekeepers in the list and a registration attempt to those gatekeepers will be rejected.

C-LAN load balancing and alternate gatekeeper addresses require IP stations that accept multiple IP addresses, such as:

- IP telephone
- IP Softphone
- Avaya IP Agent

Endpoint capabilities

Table 6: Endpoint capabilities

Endpoint	Number of Gatekeepers	How set
IP Telephone	1	Default - DNS name AvayaCallServer, or manually, one fixed IP address
	8	Through DHCP - DNS names or fixed IP addresses. DHCP limits all options to a total of 255 bytes.
	10	Through TFTP - DNS names or fixed IP addresses. TFTP overwrites any gatekeepers provided by DHCP
	72	Fixed IP addresses from Communication Manager. Communication Manager 2.0 and later supersedes any gatekeeper address provided previously.
IP Softphone R5	30	Manually through options or properties of the IP Softphone after it is installed.
IP Agent R3	30	Manually through options or properties of the IP agent after it is installed, or from Communication Manager.

Note:

DHCP servers send a list of alternate gatekeeper and C-LAN addresses to the IP Telephone endpoint. It is possible for a hacker to issue a false request and thereby obtain IP addresses from the DHCP server. However, the alternate gatekeeper IP addresses will only be sent to an endpoint that successfully registers.

About the TN2302AP IP Media Processor

Use the TN2302AP IP Media Processor to transmit voice and FAX data (non-DCS signaling) over IP connections, and for H.323 multimedia applications in H.323 V2 compliant endpoints.

The TN2302AP IP Media Processor provides port network connectivity for an IP-connected configuration. The TN2302AP IP Media Processor includes a 10/100BaseT Ethernet interface to support H.323 endpoints for IP trunks and H.323 endpoints, and its design improves voice quality through its dynamic jitter buffers.

The TN2302AP IP Media Processor additionally performs the functions:

- Echo cancellation
- Silence suppression

- DTMF detection
- Conferencing

It supports the following codecs, FAX detection for them, and conversion between them:

- G.711 (mu-law or a-law, 64Kbps)
- G.723.1 (6.3Kbps or 5.3Kbps audio)
- G.729 (8Kbps audio)

Improving the TN2302AP transmission interface

The TN2302AP IP Media Processor provides improved voice quality through its dynamic jitter buffers. The TN2302AP's digital signal processors (DSPs), by default, insert 5.0 dB of loss in the signal from the IP endpoints, and insert 5.0 dB of gain in the signal to the IP endpoints. System administrators can administer loss/gain, based on country code on the **terminal-parameters** screen.

Supporting TN2302AP hairpinning

The TN2302AP IP Media Processor supports 64 ports of shallow hairpin. IP packets that do not require speech codec transcoding can be looped back at the UDP/IP layers with a simple change of addressing. This reduces delay and leaves DSP resources available.

Testing TN2302AP ports

The TN2302AP IP Media Processor is a service circuit pack, not a trunk circuit pack. Therefore, an H.323 tie trunk cannot be used for facility test calls. Use the ping command to test the TN2302AP ports.

Enabling a survivable remote EPN

Any survivable remote EPN containing a C-LAN board and H.323 station sets should also contain a TN2302AP IP Media Processor.

About the TN2602AP IP Media Resource 320

The TN2602AP IP Media Resource 320 provides high-capacity voice over Internet protocol (VoIP) audio access to the switch for local stations and outside trunks. The IP Media Resource 320 provides audio processing for the following types of calls:

- TDM-to-IP and IP-to-TDM
- IP-to-IP

The TN2602AP IP Media Resource 320 circuit pack has two capacity options, both of which are determined by the license file installed on Communication Manager:

- 320 voice channels, considered the standard IP Media Resource 320
- 80 voice channels, considered the low-density IP Media Resource 320

Only two TN2602AP circuit packs are allowed per port network.

Note:

The TN2602AP IP Media Resource 320 is not supported in CMC1 and G600 Media Gateways.

Load balancing

Up to two TN2602AP circuit packs can be installed in a single port network for load balancing. The TN2602AP circuit pack is also compatible with and can share load balancing with the TN2302 and TN802B IP Media Processor circuit packs. Actual capacity may be affected by a variety of factors, including the codec used for a call and fax support.

Note:

When two TN2602AP circuit packs, each with 320 voice channels, are used for load balancing within a port network, the total number of voice channels available is 484, because 484 is the maximum number of time slots available for a port network.

Bearer duplication

Two TN2602AP circuit packs can be installed in a single port network (PN) for duplication of the bearer network. In this configuration, one TN2602AP is an active IP media processor and one is a standby IP media processor. If the active media processor, or connections to it, fail, active connections failover to the standby media processor and remain active. This duplication prevents active calls in progress from being dropped in case of failure. The interchange between duplicated circuit packs affects only the PN in which the circuit packs reside.

Note:

The 4606, 4612, and 4624 IP telephones do not support the bearer duplication feature of the TN2602AP circuit pack. If these telephones are used while an interchange from the active to the standby media processor is in process, then calls might be dropped.

Virtual IP and MAC addresses to enable bearer duplication

Duplicated TN2602AP circuit packs in a PN share a virtual IP and virtual MAC address. These virtual addresses are owned by the currently-active TN2602. In addition to the virtual IP address, each TN2602 has a "real" IP address. All bearer packets sent to a PN that contains duplicated TN2602AP circuit packs, regardless of whether the packets originate from TN2602s

in other PNs or from IP phones or gateways, are sent to the virtual IP address of the TN2602 pair in that PN. Whichever TN2602AP circuit pack is active is the recipient of those packets.

When failover to the standby TN2602 occurs, a negotiation between TN2602s to determine which TN2602 is active and which is standby takes place. State-of-health, call state, and encryption information is shared between TN2602s during this negotiation. The newly-active TN2602AP circuit pack sends a gratuitous address resolution protocol (ARP) request to ensure that the LAN infrastructure is updated appropriately with the location of the active TN2602. Other devices within the LAN will update their old mapping in ARP cache with this new mapping.

Requirements for bearer duplication

The Communication Manager license file must have entries for each circuit pack, with the entries having identical voice channels enabled. In addition, both circuit packs must have the latest firmware that supports bearer duplication.

Duplicated TN2602AP circuit packs must be in the same subnet. In addition, the Ethernet switch or switches that the circuit packs connect to must also be in the same subnet. This shared subnet allows the Ethernet switches to use signals from the TN2602AP firmware to identify the MAC address of the active circuit pack. This identification process provides a consistent virtual interface for calls.

Combining duplication and load balancing

A single port network can have up to two TN2602AP circuit packs only. As result, the port network can have either two duplicated TN2602AP circuit packs or two load balancing TN2602AP circuit packs, but not both a duplicated pair and a load-balancing pair. However, in a Communication Manager configuration, some port networks can have a duplicated pair of TN2602AP circuit packs and other port networks can have a load-balancing pair of TN2602AP circuit packs. Some port networks can also have single or no TN2602AP circuit packs.

Note:

If a pair of TN2602AP circuit packs previously used for load balancing are re-administered to be used for bearer duplication, only the voice channels of whichever circuit pack is active can be used. For example, If you have two TN2602 AP circuit packs in a load balancing configuration, each with 80 voice channels, and you re-administer the circuit packs to be in bearer duplication mode, you will have 80 (not 160) channels available. If you have two TN2602 AP circuit packs in a load balancing configuration, each with 320 voice channels, and you re-administer the circuit packs to be in bearer duplication mode, you will have 320 (rather than 484) channels available.

Features

The IP Media Resource 320 supports hairpin connections and the shuffling of calls between TDM connections and IP-to-IP direct connections. The IP Media Resource 320 can also perform the following functions:

- Echo cancellation
- Silence suppression
- Adaptive jitter buffer (320 ms)
- Dual-tone multifrequency (DTMF) detection
- AEA Version 2 and AES media encryption
- Conferencing
- QOS tagging mechanisms in layer 2 and 3 switching (Diff Serv Code Point [DSCP] and 802.1pQ layer 2 QoS)
- RSVP protocol

The TN2602AP IP Media Resource 320 circuit pack supports the following codecs for voice, conversion between codecs, and fax detection:

- G.711, A-law or Mu-law, 64 kbps
- G.726A-32 kbps
- G.729 A/AB, 8 kbps audio

The TN2602AP also supports transport of the following devices:

- Fax, Teletypewriter device (TTY), and modem calls using pass-through mode
- Fax, V.32 modem, and TTY calls using proprietary relay mode

Note:

V.32 modem relay is needed primarily for secure SCIP telephones (formerly known as Future Narrowband Digital Terminal (FNBDT) telephones) and STE BRI telephones.

- T.38 fax over the Internet, including endpoints connected to non-Avaya systems
- 64-kbps clear channel transport in support of firmware downloads, BRI secure telephones, and data appliances

Firmware download

The IP Media Resource 320 can serve as an FTP or SFTP server for firmware downloads to itself. However, this capability is activated by and available for authorized services personnel only.

As with the TN2302AP IP Media Processor, firmware upgrades of the TN2602AP circuit pack, are not call preserving. However, by using the `campon-busyout media-processor`

command, a single or load-balanced TN2602AP circuit pack can be busied out without dropping calls, and then upgraded. In addition, with duplicated TN2602AP circuit packs, the standby TN2602AP circuit pack can be upgraded first, and then the circuit packs interchanged. The active circuit pack becomes the standby and can then be busied out and upgraded without dropping calls.

I/O adapter

The TN2602AP IP Media Resource 320 circuit pack has a services Ethernet port in the faceplate. The TN2602AP circuit pack also requires an input/output adapter that provides for one RS-232 serial port and two 10/100 Mbs Ethernet ports for LAN connections (though only the first Ethernet port is used). This Ethernet connection is made at the back of the IP Media Resource 320 slot.

Note:

The [About the TN2302AP IP Media Processor](#) on page 138 can also use this I/O adapter.

About the TN2312BP IP Server Interface (IPSI)

In configurations with the S8700-series Server controlling media gateways, the bearer paths and the control paths are separate. Control information for port networks (PNs) travels over a LAN through the Ethernet switch. The control information terminates on the S8700-series Server at one end and on a TN2312BP IP Server Interface (IPSI) on the other end. Each IPSI may control up to five port networks by tunneling control messages over the Center-Stage or ATM network to PNs that do not have IPSIs.

Note:

IPSIs cannot be placed in a PN that has a Stratum-3 clock interface. Also, IPSIs cannot be placed in a remote PN that is using a DS1 converter.

In configurations that use a dedicated LAN for the control path, IPSI IP addresses are typically assigned automatically using DHCP service from the server. Also, a dedicated IPSI Ethernet connection to a laptop can be used to assign static IP addresses or for maintenance. In configurations using the customer's LAN, only static addressing is supported.

Consult the *Avaya S8300, S8500, and S8700-series Server Library* CD (555-233-825) for information on installing and upgrading S8700-series servers and IPSI configurations.

You can use the `status qos-parameters ipserver-interface` command to view the IPSI settings. The board location must be a valid TN2312 or TN8412 board location. For more information about the `status qos-parameters ipserver-interface` command, see *Maintenance Commands for Avaya Aura™ Communication Manager, Media Gateways and Servers*, 300431.

Detailed description

In Communication Manager Release 5.2, as an administrator, you can manage the following IPSI related parameters using a SAT interface or the System Management Interface:

- Set the values of QoS parameter fields (**DiffServ** and **802.1p**) on the System Parameters IP Server Interface screen. Default value for **DiffServ** is **46** and **802.1p** is **6**.
- Download QoS parameters to all IPSI boards. By default, **add ipserver-interface** or **change ipserver-interface** command pre-populates the QoS parameters if any IPSI boards are added.
- Set the values of Ethernet interface fields (**Auto**, **Speed**, or **Duplex**) on the IP Server Interface screen. **Speed** and **Duplex** fields appear on the IP Server Interface screen, if **Auto** field is set to **n**.
- Changes to IPSI IP addresses (**IP Address**, **Subnet Mask**, **Gateway** address) on the IP Server Interface screen.

Note:

The initial IPSI IP address must be set manually by locally logging on to each IPSI board through a telnet or an ssh connection).

Firmware requirements

The IPSI and the Communication Manager system use a capabilities exchange message to determine if an IPSI/SIPI board is capable of supporting the IPSI administration feature. IPSI firmware version 46 or greater and SIPI firmware version 16 or greater are required to support this capabilities exchange upon the port network coming into service.

IP Server Interface parameters

The IPSI sends QoS parameters, Ethernet settings, and IP address information to Communication Manager as specified in the [Table 7](#). The exchange of information is shared on socket creation.



WARNING:

If the Ethernet interface settings (**Auto**, **Speed**, and **Duplex**) or the IPSI IP address settings (**IP Address**, **Subnet Mask**, and **Gateway** address) do not match with the network entity that the IPSI is communicating with, network communication may stop. To recover the settings you must go to the physical site of the IPSI, log in to the IPSI services port, and change the settings.

Table 7: IP Server Interface parameters

Description	Conditions/Comments	Required board is busied out
QoS parameters: On the System Management Interface, select Installation > Configure Server . Enable VLAN 802.1q priority tagging On the IP Server Interface screen Use System Level Parameter Values 802.1p value DiffServ value		No
Ethernet interface settings: On the IP Server Interface screen Auto Speed Duplex	You need to reset the IPSI board for Auto , Speed , and Duplex values to take effect.	Yes
IP Address information: On the IP Server Interface screen IPSI IP Address Subnet Mask Gateway address	You need to reset the IPSI board for IP Address , Subnet Mask , and Gateway address values to take effect.	Yes

Communication Manager alarm on settings mismatch

Communication Manager compares its administered values on the SAT with the reported IPSI board values. The system generates a warning alarm if Communication Manager finds any discrepancies in the following values:

- **802.1p** value
- **DiffServ** value
- Ethernet **Auto** value
- Ethernet **Speed** value
- Ethernet **Duplex** value

You can view the alarm using the **display alarms** command or can enter an error type of **1** on the Display Errors screen.

Note:

Discrepancy between the SAT administration and the IPSI board values can happen if you have changed any of the IPSI board values using the CLI interface.

You can clear the alarm in one of the following ways:

- Set the correct values, and busyout or release the IPSI board.
- Change the values on the IP Server Interface screen and submit the screen.
- Change the values on the affected IPSI board using the CLI interface.

Default settings of IPSI QoS parameters

In the IPSI administration feature, QoS settings are standardized to communicate between the IPSI and Communication Manager. You can administer QoS parameters information on the Change IP Server Interface screen. The QoS default settings are shown in the following [Table 8](#).

Table 8: QoS default settings

Description	Defaults	How to administer
Communication Manager to IPSI	DiffServ = 46	DiffServ field on change ipserver-interface SAT screen.
	802.1p = 6	802.1p field on change ipserver-interface SAT screen.
	802.1p/Q enabled = no	On the System Management Interface, select Installation > Configure Server . The system displays the Configure Server wizard. Click Configure Interface .
IPSI to Communication Manager	DiffServ = 46 (vintage >= 38) DiffServ = 40 (vintage < 38)	DiffServ field on change ipserver-interface SAT screen. Or, IPSI CLI interface
	802.1p = 6	802.1p field on change ipserver-interface SAT screen. Or, IPSI CLI interface
	802.1p/Q enabled = no	IPSI CLI interface

Backward compatibility

The IPSI administration inter-operates with Communication Manager Release 5.0 or earlier by using the pre-existing QoS and administration interface. An IPSI uses the IPSI administration feature if IPSI firmware version is 46 or greater, SIPI firmware version is 16 or greater, and Communication Manager system supports Release 5.2 features.

The IPSI administration feature with Communication Manager Release 5.2 works with earlier IPSI boards as described in the following:

- Communication Manager assesses the administration capability of an IPSI board based on the capabilities exchange message.
- In general, if an older IPSI is unable to support this feature, then that IPSI needs to be administered using the CLI interface. If Communication Manager is not able to exchange the capabilities message with an older IPSI board, the following happens:
 - Communication Manager stops sending any IPSI QoS or Ethernet settings to the IPSI.
 - Communication Manager stops receiving the IPSI QoS or the Ethernet settings from IPSI.
- The IPSI reports its status on the IP Server Interface screen.

About the MM760 VoIP Media Module

The Avaya MM760 Media Module is a clone of the motherboard VoIP engine. The MM760 provides the audio bearer channels for voice over IP calls, and is under control of the G700. Based on system administration of audio codecs, a MM760 can handle either 64 or 32 simultaneous channels of H.323 audio processing. If the IP Parameters screen specifies only G.711 mu-law or G.711 a-law as the audio codecs, the MM760 can service 64 channels. If any other codec type (G.723-5.3K, G.723-6.3K, or G.729) is administered, the MM760 can only service 32 channels. These call types can be mixed on the same resource. In other words, the simultaneous call capacity of the resource is 64 G.711 Equivalent Calls.

Note:

Customers who want an essentially non-blocking system must add an additional MM760 Media Module, if they use more than two MM710 Media Modules in a single chassis. The additional MM760 provides an additional 64 channels and is supported by only G700 Media Gateway. The MM760 is **not** supported by G250, G350, G430 and G450 Media Gateways.

MM760 Ethernet interface

The MM760 must have its own Ethernet address. The MM760 requires a 10/100 Base T Ethernet interface to support H.323 endpoints for Avaya IP trunks and stations from another G700 Media Gateway. The MM760 is supported by only G700 Media Gateway. The MM760 is **not** supported by G250, G350, G430 and G450 Media Gateways.

Voice compression on the MM760

The MM760 supports on-board resources for compression and decompression of voice for G.711 (A- and μ -law), G.729 and 729B, and G.723 (5.3K and 6.3K). The VoIP engine supports the following functionality:

- RTP and RTCP interfaces
- Dynamic jitter buffers
- DTMF detection
- Hybrid echo cancellation
- Silence suppression
- Comfort noise generation
- Packet loss concealment

The MM760 also supports transport of the following:

- Teletypewriter device (TTY) tone relay over the Internet
- Faxes over a corporate IP intranet

Note:

The path between endpoints for FAX transmissions must use Avaya telecommunications and networking equipment.



SECURITY ALERT:

Faxes sent to non-Avaya endpoints cannot be encrypted.

- Modem tones over a corporate IP intranet

Note:

The path between endpoints for modem tone transmissions must use Avaya telecommunications and networking equipment.

TN8400AP Server circuit pack

The TN8400 Server circuit pack is the platform for the Avaya S8400 Server, which is a Linux-based server that occupies a single slot on a standard TN carrier. The S8400 Server efficiently provides Communication Manager processing functions in stand-alone, single port network telephony systems requiring up to 500 stations.

For more information on the Avaya S8400 Server and TN8400AP Server circuit pack, see the section on “Linux-based servers” in the *Avaya Aura™ Communication Manager Hardware Description and Reference* (555-245-207). For more information about administering the S8400 Server and TN8400 circuit pack, see *Installing and Configuring the Avaya S8400 Server*, 03-300678, at <http://www.avaya.com/support>.

TN8412AP S8400 server IP Interface

The TN8412AP S8400 server IP interface (SIPI) is used in an S8400-based system. It provides transport of control messages between the S8400 Server and the port network (PN) using direct connections. (Connections using the customer’s LAN and WAN are possible but not typical.) Through these control messages, the server controls the PN.

The SIPI always resides in the tone clock slot on a media gateway and uses an Ethernet interface to connect to:

- The S8400 server
- A laptop computer connected to the server through a services port

The SIPI provides the following functions:

- PN clock generation and synchronization for Stratum 4 type II only
- PN tone generation
- PN tone detection, global call classification, and international protocols
- Environmental maintenance

The SIPI can be accessed remotely using the Telnet and SSH protocols. The SIPI can serve as an SSH client, as well, for remote access from the SIPI to the Communication Manager server. The C-LAN can also serve as an FTP or SFTP server for file transfers and firmware downloads.

Note:

The SIPI cannot serve as an SFTP client. Additionally, the SSH/SFTP capability is only for the control network interface, not the Services interface.

The SIPI supports the following functions and devices:

- Eight global call classification ports
- Network diagnostics
- Download of SIPI firmware updates using Communication Manager Web pages, the `loadipsi` command from the server's Linux command line, or the Software Update Manager.

The TN8412AP SIPI is compatible with the S8400 Server and the G650 gateway. It is also compatible with the G600 and CMC1 gateways in migration systems.

Note:

An S8400 system is shipped with a TN8412AP SIPI circuit pack. However, the TN2312BP IPSI circuit pack is also compatible with S8400 systems.

For more information on the S8400 Server and TN8412 circuit pack, see the section on "Linux-based servers" in the *Avaya Aura™ Communication Manager Hardware Description and Reference* (555-245-207). For more information about administering the TN8412 circuit pack, see *Installing and Configuring the Avaya S8400 Server*, 03-300678, at <http://www.avaya.com/support>.

Administering Avaya gateways

The following documents additional information about the administration of the Avaya gateways:

- *Administering Avaya Aura™ Communication Manager* (03-300509).
- *Upgrading, Migrating, and Converting Servers and Media Gateways*, 03-300412.

Administering IP trunks

The following sections describe the administration of IP trunks:

- [Administering SIP trunks](#)
- [Administering H.323 trunks](#)

Administering SIP trunks

SIP is the Session Initiation Protocol, an endpoint-oriented messaging standard defined by the Internet Engineering Task Force (IETF). As implemented by Avaya for release 2.0 and later of Communication Manager, SIP "trunking" functionality is available on any of the Linux-based servers (S8300, S8500 or S8700-series). These servers function as Plain Old Telephone Service (POTS) gateways, and they also support name/number delivery between and among the various non-SIP endpoints supported by Communication Manager (analog, DCP or H.323 stations and analog, digital or IP trunks), and SIP-enabled endpoints, such as the Avaya 4600-series SIP Telephones. In addition to its calling capabilities, IP Softphone R5 and later also includes optional instant-messaging client software, which is a SIP-enabled application, while continuing its full support of the existing H.323 standard for call control. Avaya SIP Softphone R2 and later releases fully support SIP for voice call control, as well as instant messaging and presence.

For more information on SIP trunk administration and usage, see *SIP Support in Avaya Aura™ Communication Manager*, 555-245-206, and for information on proxy and registrar functions on the SIP server, see *Installing and Administering SIP Enablement Services* (03-600768).

Administering H.323 trunks

H.323 trunks use an ITU-T IP standard for LAN-based multimedia telephone systems. IP-connected trunks allow trunk groups to be defined as ISDN-PRI-equivalent tie lines between switches over an IP network.

The TN2302AP or TN2602AP enables H.323 trunk service using IP connectivity between an Avaya IP solution and another H.323 v2-compliant endpoint.

H.323 trunk groups can be configured as:

- Tie trunks supporting ISDN trunk features such as DCS+ and QSIG
- Generic tie-trunks permitting interconnection with other vendors' H.323 v2-compliant switches
- Direct-inward-dial (DID) type public trunks, providing access to the switch for unregistered users

Setting up H.323 trunks for administration

This section describes the preliminary administration steps needed to set up H.323 trunks. Before you can administer an H.323 trunk, perform the following tasks:

- [Verifying customer options for H.323 trunking](#)
- [Administering C-LAN and IP Media Processor circuit packs \(S8500/S8700-series\)](#)

Note:

These circuit packs are not required if your system has built-in Ethernet capabilities (S8300).

- [Administering QoS parameters](#)
- [Assigning IP node names and IP addresses](#)
- [Defining IP interfaces \(C-LAN, TN2302AP, or TN2602AP Load Balanced\)](#)
- [Assigning link through Ethernet data module \(S8500/S8700-series\)](#)
- [Implementing Best Service Routing \(optional\)](#)

Verifying customer options for H.323 trunking

Verify that H.323 trunking is set up correctly on the **system-parameters customer-options** screen. If any changes need to be made to fields on this screen, call your Avaya representative for more information.

To verify customer options for H.323 trunking:

1. Type **display system-parameters customer-options**, and go to the **Optional Features** screen.

Administering converged networks

2. Verify that the following fields have been completed on pages 1 and 2 of this screen:

Field	Conditions/Comments
G3 Version	This value should reflect the current version of Communication Manager.
Maximum Administered H.323 Trunks	Number of trunks purchased. Value must be greater than 0. On Page 2 of the screen.
Maximum Administered Remote Office Trunks	Number of remote office trunks purchased. This is also located on page 2 of the screen.

3. Go to the page that displays the **IP trunks** and **ISDN-PRI** fields.
4. Verify that **IP Trunks** and **ISDN-PRI** are enabled.
If not, you need to obtain a new license file.

Administering C-LAN and IP Media Processor circuit packs (S8500/S8700-series)

To administer the C-LAN and IP Media Processor circuit packs:

1. Type **change circuit-packs** to open the **Circuit Packs** screen.

Circuit Packs screen

Page 2 of 5			
Circuit Packs			
Cabinet 1		Carrier: B	
		Carrier Type: port	
Slot Code	SF Mode	Name	Slot Code SF Mode Name
00 TN799	C	C-LAN	
01 TN2302	AP	IP Media Processor	
02			
03			
04			

2. To administer a C-LAN circuit pack, complete the following fields:

Fields for C-LAN	Conditions/Comments
Code	TN799DP
Name	C-LAN (displays automatically)

3. To administer an IP Media Processor, complete the following fields:

x

Fields for IP Media	Conditions/Comments
Code	TN2302AP or TN2602AP
Name	IP Media Processor (displays automatically)

4. Submit the screen.

Administering QoS parameters

Four parameters on the **IP-Options System-Parameters** screen determine threshold Quality of Service (QoS) values for network performance. You can use the default values for these parameters, or you can change them to fit the needs of your network. (See [Setting network performance thresholds](#)).

Administer additional QoS parameters, including defining IP Network Regions and specifying the codec type to be used. See [Chapter 5: Voice and Network quality administration](#).

Assigning IP node names and IP addresses

Communication Manager uses node names to reference IP addresses throughout the system. Use the **IP Node Names** screen to assign node names and IP addresses to each node in the network with which this switch communicates through IP connections. The **Node Names** screen must be administered on each node in an IP network.

An IP node name can be any of these:

- Processor Ethernet (PE) IP Address
- C-LAN Ethernet or PPP IP Address
- Bridge or router IP Address
- CMS IP Address
- INTUITY AUDIX IP Address

Enter the AUDIX name and IP address on the **AUDIX Node Names** screen. Enter data for all other node types on the **IP Node Names** screen.

For H.323 connections, each MedPro Ethernet port (IP interface) on the local switch must also be assigned a node name and IP address on the **IP Node Names** screen.

Assign the node names and IP addresses in the network in a logical and consistent manner from the point of view of the whole network. Assign the names and addresses in the planning stages of the network and should be available from the customer system administrator or from an Avaya representative.

To assign IP Node Names:

1. Type `change node-names ip` to open the **IP Node Names** screen.

IP Node Names screen

change node-names ip		Page 2 of 6
IP NODE NAMES		
Name	IP Address	
clan-a1	192.168.10.31	
clan-a2	192.168.20.31	
default	0 .0 .0 .0	
medpro-a1	192.168.10.81	
medpro-a2	192.168.10.80	
medpro-a3	192.168.10.82	
medpro-b1	192.168.10.83	

2. Move to the fields below and complete them as follows:

Field	Conditions/Comments
Name	Enter unique node names for: ● Each C-LAN Ethernet port on the network ● Each IP Media Processor ● Each Remote Office ● Other IP gateways, hops, etc. The default node name and IP address is used to set up a default gateway, if desired. This entry is automatically present on the Node Names screen and cannot be removed. When the Node Names screen is saved, the system automatically alphabetizes the entries by node name.
IP Address	Enter unique IP addresses for each node name.

3. Submit the screen.

Defining IP interfaces (C-LAN, TN2302AP, or TN2602AP Load Balanced)

The IP interface for each C-LAN, TN2302AP Media Processor, or TN2602AP (load-balanced) circuit pack on the switch must be defined on the **IP Interfaces** screen. Each switch in an IP network has one **IP Interfaces** screen.

To define IP interfaces for each C-LAN and Media Processor circuit pack:

1. Type `add ip-interface CCcss` or `procr` to open the **IP Interfaces** screen.

Note:

This screen shows the display for the S8500/S8700-series servers.

IP Interfaces screen

<pre> add ip-interface 01a08 Type: CLAN Slot: 01A08 Code/Suffix: TN799 Node Name: makita-clan1 IP Address: 172.28.5.254 Subnet Mask: 255.255.255.0 Gateway Address: Enable Ethernet Port? y Network Region: 20 VLAN: n Target socket load and Warning level: 400 Receive Buffer TCP Window Size: ETHERNET OPTIONS Auto? n Speed:100Mbps Duplex: Full </pre>	Page 1 of x IP INTERFACES Link? Allow H.323 Endpoints? Allow H.248 Gateways? Gatekeeper Priority?
---	--

2. Complete the following fields as shown:

Field	Conditions/Comments
Critical Reliable Bearer	Appears only for the TN2602AP. Type n when the TN2602AP is in load balancing mode or is the only TN2602AP circuit pack in the port network.
Type	Display only. This field is automatically populated with C-LAN , MEDPRO , or PROCR . The fields differ on the screens for each of the IP Interface types. Required entries may also differ for Processor Ethernet (PE). See the Screen Reference chapter of the <i>Administering Avaya Aura™ Communication Manager</i> , 03-300509.
Slot	Display only. The slot location for the circuit pack.
Code/Suffix	Display only. This field is automatically populated with TN799DP for C-LAN, TN2302AP for IP Media Processor, or TN2602AP for IP Media Resource 320, and the suffix letter(s).
Node name	The node name for the IP interface. This node name must already be administered on the IP Node Names screen.
IP Address	Display only. The IP address for this IP interface. The IP address is associated with the node name on the IP Node Names screen.

Field	Conditions/Comments
Subnet Mask	The subnet mask associated with the IP address for this IP interface.
Link?	Display only. Shows the administered link number for an Ethernet link. See Assigning link through Ethernet data module (S8500/S8700-series) on page 161
Gateway Address	The address of a network node that serves as the default gateway for the IP interface.
Enable Ethernet Port?	Enter y
Allow H.323 Endpoints?	Controls whether IP endpoints can register on the interface. On a single main server, enter y to allow H.323 endpoint connectivity to the PE interface. Enter n if you do not want H.323 endpoint connectivity to the PE interface. Note: For an Enterprise Survivable Server (ESS), this field is display-only and is set to n . H.323 endpoint connectivity using the PE interface on an ESS server is not supported. For a Local Survivable Processor (LSP), this field is display-only and is set to y .
Network Region	The region number for the IP interface. Enter a value between 1-250
Allow H.248 Gateways?	Controls whether H.248 media gateways (G700, G450, G430, G350, G250) can register on the interface. On a single main server, enter y to allow H.248 endpoint connectivity to the PE interface. Enter n if you do not want H.248 endpoint connectivity to the PE interface. Note: For an Enterprise Survivable Server (ESS), this field is display-only and is set to n . H.248 endpoint connectivity using the PE interface on an ESS server is not supported. For a Local Survivable Processor (LSP), this field is display-only and is set to y .
VLAN	The 802.1Q virtual LAN value (0 - 4094) or n (no VLAN). This VLAN field interfaces with the TN799 (C-LAN) or TN802B Media Processor circuit packs; it does not send any instructions to IP endpoints.
Gatekeeper Priority?	Appears only if Allow H.323 Endpoints is y and the Communication Manager server is a main server or an LSP. This field does not display on an ESS server. This field allows a priority to be set on the interface. This affects where the interface appears on the gatekeeper list. Enter the desired priority number, a value from 1 to 9 . The value in this field is used on the alternate gatekeeper list. The lower the number, the higher the priority. Default is 5 .

Field	Conditions/Comments
VOIP Channels	Appears only for a TN2602AP circuit pack. Enter the number of VoIP channels assigned to the TN2602AP circuit pack, either 0, 80, or 320. 0 means the circuit pack will not be used. Note: If two TN2602 circuit packs in a port network are administered for 320 channels, only 512 channels are used due to the 512 TDM timeslot maximum for a port network. The system-wide number of TN2602 circuit packs administered for 80 channels cannot exceed the number of 80-channel licenses installed on system. Similarly, the number of TN2602 circuit packs administered for 320 channels cannot exceed the number of 320-channel licenses installed on the system.
Target socket load and Warning level	Always leave the default (400) unless instructed to enter a different value (1 to 499) by Avaya Services.
Receive Buffer TCP Window Size	A value of 512 to 8320
Auto? Speed Duplex	Set Ethernet Options to match the customers network. The recommended settings are: ● Auto? n If you set Auto to n, also complete the following fields. The recommended values are displayed. ● Speed: 100 Mbps ● Duplex: Full See <i>IP Telephony Implementation Guide</i>, for a discussion of the Ethernet Options settings.

3. Submit the screen.

Defining IP interfaces (duplicated TN2602AP)

To define IP interfaces for duplicate TN2602AP Media Resource 320 circuit packs:

1. Type `add ip-interface CCccss` to open the **IP Interfaces** screen.

The IP Interfaces screen appears.

Note:

This screen shows the display for the S8500/S8700-series servers.

add ip-interface 1a03
Page 1 of 1

IP INTERFACES

Critical Reliable Bearer? n

Type: MEDPRO

Slot: 01A03

Code/Suffix: TN2602

Node Name: medres03a01

IP Address: 192.168.1.82

Subnet Mask: 255.255.255.0

Gateway Address: . . .

Enable Ethernet Port? y

Network Region: 1

VLAN: n

ETHERNET OPTIONS

Auto? n

Speed: 100 Mbps

Duplex: Full

- In the **Critical Reliable Bearer?** field, type **y**, and press **Enter**.

A second column of data for a standby TN2602AP appears on the right of the screen.

add ip-interface 1a03
Page 1 of 1

IP INTERFACES

Critical Reliable Bearer? y

Type: MEDPRO	Slot:
Slot: 01A03	Code/Suffix:
Code/Suffix: TN2602	Node Name:
Node Name: medpro03a01	IP Address:
IP Address: 192.168.1.82	
Subnet Mask: 255.255.255.0	
Gateway Address: . . .	
Enable Ethernet Port? y	Enable Ethernet Port? y
Network Region: 1	
VLAN: n	VLAN: n
VOIP Channels: xxx	
Shared Virtual Address: 255.255.255.255	
Virtual MAC Table:	Virtual MAC Address:

ETHERNET OPTIONS

Auto? n

Speed: 100 Mbps

Duplex: Full

Auto? n

Speed: 100 Mbps

Duplex: Full

3. Complete the following fields as shown:

Field	Conditions/Comments
Type	Display only. This field is automatically populated with MEDPRO .
Slot	Slot location entered in the command line. Enter the location of the second TN2602AP circuit pack for a non-duplicated board. The second (right-side) Slot field is automatically populated when Critical Reliable Bearer is y .
Code/Sfx	Circuit pack TN code and suffix. Display only for TN2602AP when Critical Reliable Bearer is n . The second (right-side) Code/Sfx field is automatically populated based on the corresponding Slot field information, when Critical Reliable Bearer is y .
Node name	The node name for the IP interface. This node name must already be administered on the IP Node Names screen.
IP Address	Display only. The IP address for this IP interface. The IP address is associated with the node name on the IP Node Names screen.
Subnet Mask	Enter the Subnet Mask for TN2602AP. This entry also applies to the second TN2602AP circuit pack when Critical Reliable Bearer is y
Gateway Address	The IP address of the LAN gateway associated with the TN2602AP. This entry also applies to the second TN2602AP circuit pack when Critical Reliable Bearer is y
Enable Ethernet Pt	y/n y = The Ethernet Port associated with the TN2602AP is in service. If this is an active board, set to n only when there is no standby, or when the standby has been disabled. Note: Note: You may be required to enter n in this field before you make changes to this screen.
Network Region	Number of the Network Region where the interface resides. This entry also applies to the second TN2602AP circuit pack when Critical Reliable Bearer is y
VLAN	The 802.1Q virtual LAN value (0 - 4094) or n (no VLAN). This VLAN field interfaces with the media processor circuit packs; it does not send any instructions to IP endpoints.
1 of 3	

Field	Conditions/Comments
VOIP Channels	0 (will not support voice calls) 80 (low density) 320 (standard) The number of VoIP channels that are allocated to the associated TN2602. Appears for a TN2602 circuit pack on Communication Manager 3.0/V13 or greater. This number also applies to the second TN2602AP circuit pack when Critical Reliable Bearer is y Users will be blocked from administering 80 or 320 VoIP channels if there is no available capacity for the corresponding "Maximum TN2602 boards with 80 VoIP Channels"/"Maximum TN2602 boards with 320 VoIP Channels" license feature.
Shared Virtual Address	The virtual IP address shared by the two TN2602AP circuit packs, when duplicated. This address enables Communication Manager to connect endpoints through the TN2602AP circuit packs to the same address, regardless of which one is actually active. Appears when Critical Reliable Bearer is y.
Virtual MAC Table	1 through 4, default = 1 Table number where the virtual MAC address, shared by duplicated TN2602AP circuit packs, is obtained. Appears when Critical Reliable Bearer is y. You might choose a different table number other than 1 if all of the following conditions exist: ● A port network under the control of a different Communication Manager main server has duplicated TN2602AP circuit packs. ● That port network controlled by a different main server has the same number as the port network in which you are administering the TN2602AP circuit packs. ● The port network or its main server connects to the same Ethernet switch as the port network in which you are administering the TN2602AP circuit packs. Selecting a different Virtual MAC Table from that chosen for a port network that has the previously-listed conditions helps prevent the possibility that two TN2602AP circuit packs within the customer's network will have the same virtual MAC address.
2 of 3	

Field	Conditions/Comments
Virtual MAC Address	Virtual MAC address that is shared by duplicated TN2602AP circuit packs. Automatically populated based on the Virtual MAC address table. Appears when Critical Reliable Bearer is y .
Auto?	Set Ethernet Options to match the customers network. The recommended settings are: ● Auto? n If you set Auto to n, also complete the following fields. The recommended values are displayed. ● Speed: 100 Mbps ● Duplex: Full See <i>IP Telephony Implementation Guide</i>, for a discussion of the Ethernet Options settings.
3 of 3	

4. Submit the screen.

Assigning link through Ethernet data module (S8500/S8700-series)

Note:

The S8300 Server does not support data modules.

This section describes how to administer an Ethernet data module for the connection between the C-LAN circuit pack's Ethernet port (port 17) and the LAN. The data module associates a link number and extension number with the C-LAN Ethernet port location. This association is used by the processor to set up and maintain signaling connections for multimedia call handling.

The C-LAN Ethernet port is indirectly associated with the C-LAN IP address through the slot location (which is part of the port location) on the **IP Interfaces** screen and the node name, which is on both the **IP Interfaces** and **Node Names** screens.

To assign a link through an Ethernet data module:

1. Type **add data-module next** to open the **Data Module** screen.

Data Module screen

<pre>add data-module next</pre> Page 1 of 1 DATA MODULE Data Extension: 700 Type: Ethernet Port: Link: Name: _____ Network uses 1's for Broadcast Addresses? y
--

2. Complete the following fields as shown:

Field	Conditions/Comments
Data Extension	Populated automatically with the next qualifier or type the extension number.
Type	Enter Ethernet . This indicates the data-module type for this link.
Port	Ethernet connections must be assigned to port 17 on the C-LAN circuit pack.
Link	Enter the link number, a link not previously assigned on this switch.
Name	Display only. The name appears in lists generated by the <code>list data module</code> command.
Network uses 1's for broadcast addresses	Enter y if the private network contains only Avaya switches and adjuncts. Enter n if the network includes non-Avaya switches that use the 0's method of forming broadcast addresses.

For more information on the fields that may appear on this screen, see the *Administering Avaya Aura™ Communication Manager*, 03-300509.

3. Submit the screen.

Implementing Best Service Routing (optional)

Use H.323 trunks to implement Best Service Routing (BSR). You can use H.323 trunks for polling, or for both polling and interflow. Because polling requires only a small amount of data exchange, the additional network traffic is insignificant. However, interflow requires a significant

amount of bandwidth to carry the voice data. Depending on the other uses of the LAN/WAN and its overall utilization rate, voice quality could be degraded to unacceptable levels.

Avaya recommends that if H.323 trunks are used for BSR interflow, the traffic should be routed to a low-occupancy or unshared LAN/WAN segment. Alternatively, you might want to route internal interflow traffic, which may have lower quality-of-service requirements, over H.323 trunks, and route customer interflow traffic over circuit-switched tie trunks.

Completing H.323 trunk administration

In the previous sections, you have completed the pre-administration tasks to set up H.323 trunks (see [Setting up H.323 trunks for administration](#)). This section describes the tasks that you need to complete to administer an H.323 trunk. Sample values are used to populate the fields to show the relationships between the screens and fields. Perform the following tasks:

- [Creating an H323 trunk signaling group](#)

Create a signaling group for the H.323 trunks that connect this switch to a far-end switch.

- [Creating a trunk group for H.323 trunks](#)

- [Modifying the H.323 trunk signaling group](#)

Modify the signaling group by entering the H.323 trunk group number in the **Trunk Group** for the **Channel Selection** field of the **Signaling Group** screen.

Creating an H323 trunk signaling group

Create a signaling group that is associated with H.323 trunks that connect this switch to a far-end switch. One or more unique signaling groups must be established for each far-end node to which this switch is connected through H.323 trunks.

Note:

The following steps address only those fields that are specifically related to H.323 trunks. The other fields are described in the *Administering Avaya Aura™ Communication Manager*, 03-300509.

To create an H.323 trunk signaling group, do the following:

1. Type `add signaling-group number` to open the **Signaling Group** screen.

Signaling Group screen

change signaling-group xx
Page 1 of 6

SIGNALING GROUP

Group Number: 1	Group Type: h.323	
	Remote Office? n	Max number of NCA TSC: 0
	SBS? n	Max number of CA TSC: 0
IP Video? y	Priority Video? n	Trunk Group for NCA TSC:
Trunk Group for Channel Selection: 10		
TSC Supplementary Service Protocol: a		
T303 Timer(sec): 10		
H.245 DTMF Signal Tone Duration(msec):		
Near-end Node Name: procr	Far-end Node Name: elmer	
Near-end Listen Port: 1720	Far-end Listen Port: 1720	
	Far-end Network Region: 1	
LRQ Required? n	Calls Share IP Signaling Connection? n	
RRQ Required? n		
Media Encryption? n	Bypass If IP Threshold Exceeded? n	
	H.235 Annex H Required? n	
DTMF over IP: out-of-band	Direct IP-IP Audio Connections? y	
Link Loss Delay Timer(sec): 90	IP Audio Hairpinning? n	
Enable Layer 3 Test? y	Interworking Message: PROGRESS	
H.323 Outgoing Direct Media? n	DCP/Analog Bearer Capability: 3.1kHz	

2. Complete the following fields as shown:

Table 9: Signaling Group screen options

Field	Conditions/Comments
Group Type	Enter h.323
Trunk Group for Channel Selection	Leave blank until you create a trunk group in the following task, then use the change command and enter the trunk group number in this field.
T303 Timer	Use this field to enter the number of seconds the system waits for a response from the far end before invoking Look Ahead Routing. Appears when the Group Type field is isdn-pri (DS1 Circuit Pack screen) or h.323 (Signaling Group screen).
H.245 DTMF Signal Tone Duration (msec)	This field specifies the tone duration of DTMF tones sent in H.245-signal message when DTMF over IP: field is set to out-of-band on the Signaling Group screen for IP Trunks. The value of this field can be either in the range 80 ms to 350 ms or blank. The default Value is blank.

1 of 4

Table 9: Signaling Group screen options (continued)

Field	Conditions/Comments
Near-end Node Name	Enter the node name for the C-LAN IP interface on this switch. The node name must be administered on the Node Names screen and the IP Interfaces screen.
Far-end Node Name	This is the node name for the far-end C-LAN IP Interface used for trunks assigned to this signaling group. The node name must be administered on the Node Names screen on this switch. Leave blank when the signaling group is associated with an unspecified destination.
Near-end Listen Port	Enter an unused port number from the range 1719, 1720 or 5000–9999 . Avaya recommends 1720 . If the LRQ field is y , enter 1719 .
Far-end Listen Port	Enter the same number as the one in the Near-end Listen Port field. This number must match the number entered in the Near-end Listen Port field on the Signaling Group screen for the far-end switch. Leave blank when the signaling group is associated with an unspecified destination.
Far-end Network Region	Identify network assigned to the far end of the trunk group. The region is used to obtain the codec set used for negotiation of trunk bearer capability. If specified, this region is used instead of the default region (obtained from the C-LAN used by the signaling group) for selection of a codec. Enter a value between 1-250 . Leave blank to select the region of the near-end node (C-LAN).
LRQ Required	Enter n when the far-end switch is an Avaya product and H.235 Annex H Required? is set to n . Enter y when: • H.235 Annex H Required? is set to y, or • the far-end switch requires a location request to obtain a signaling address in its signaling protocol.
Calls Share IP Signaling Connection	Enter y for connections between Avaya equipment. Enter n when the local and/or remote switch is not Avaya's.
RRQ Required	Enter y when a vendor registration request is required.
Bypass if IP Threshold Exceeded	Enter y to automatically remove from service trunks assigned to this signaling group when IP transport performance falls below limits administered on the Maintenance-Related System Parameters screen.

2 of 4

Table 9: Signaling Group screen options (continued)

Field	Conditions/Comments
H.235 Annex H Required	Enter y to indicate that the CM server requires the use of H.235 amendment 1 with annex H protocol for authentication during registration.
DTMF Over IP	Signifies the transmission of the DTMF digits. The valid options for SIP signaling groups are: in-band and rtp-payload. The valid options for H.323 signaling groups are: in-band, in-band-g711, out-of-band, and rtp-payload.
Direct IP-IP Audio Connections	Allows direct audio connections between H.323 endpoints. For SIP Enablement Services (SES) trunk groups, this is the value that allows direct audio connections between SES endpoints. Enter a y to save on bandwidth resources and improve sound quality of voice over IP (VoIP) transmissions.
Link Loss Delay Timer	Use this field to specify how long to hold the call state information in the event of an IP network failure or disruption. Communication Manager preserves calls and starts this timer at the onset of network disruption (signaling socket failure). If the signaling channel recovers before the timer expires, all call state information is preserved and the signaling channel is recovered. If the signaling channel does not recover before the timer expires, the system: • raises an alarm against the signaling channel • maintains all connections with the signaling channel • discards all call state information about the signaling channel
IP Audio Hairpinning	The IP Audio Hairpinning field entry allows the option for H.323 and SIP Enablement Services (SES)-enabled endpoints to be connected through the IP circuit pack in the server or switch, without going through the time division multiplexing (TDM) bus. Type y to enable hairpinning for H.323 or SIP trunk groups. Default is n .

3 of 4

Table 9: Signaling Group screen options (continued)

Field	Conditions/Comments
Interworking Message	This field determines what message Communication Manager sends when an incoming ISDN trunk call interworks (is routed over a non-ISDN trunk group). Normally select the value, PROGress, which asks the public network to cut through the B-channel and let the caller hear tones such as ringback or busy tone provided over the non-ISDN trunk. Selecting the value ALERTing causes the public network in many countries to play ringback tone to the caller. Select this value only if the DS1 is connected to the public network, and it is determined that callers hear silence (rather than ringback or busy tone) when a call incoming over the DS1 interworks to a non-ISDN trunk.
DCP/Analog Bearer Capability	This field sets the information transfer capability in a bearer capability IE of a setup message to speech or 3.1kHz. The latter is the default. The default value provides 3.1kHz audio encoding in the information transfer capability. Selecting the value of speech provides speech encoding in the information transfer capability.

4 of 4

3. If using DCS, go to the **Administered NCA TSC Assignment** page of this screen.

Enter NCA TSC information on this screen according to the detailed descriptions contained in the Screen Reference chapter of the *Administering Avaya Aura™ Communication Manager*, 03-300509.

4. Submit the screen.

Creating a trunk group for H.323 trunks

This task creates a new trunk group for H.323 trunks. Each H.323 trunk must be a member of an ISDN trunk group and must be associated with an H.323 signaling group.

Note:

The following steps address only those fields that are specifically related to H.323 trunks. The other fields are described in the *Administering Avaya Aura™ Communication Manager*, 03-300509.

To create an ISDN trunk group, do the following:

1. Type `add trunk-group next` to open the **Trunk Group** screen.

Trunk Group screen

add trunk-group next Page 1 of x

TRUNK GROUP

Group Number: 3__	Group Type: isdn	CDR Reports: y
Group Name: TG 3 for H.323 trunks	COR: 1	TN: 1__ TAC: 103
Direction: two-way	Outgoing Display? n	Carrier Medium: H.323
Dial Access? y	Busy Threshold: 99	Night Service: _____
Queue Length: 0		
Service Type: tie	Auth Code? n	Test Call ITC: unre
	Far End Test Line No:	
Test Call BCC: 0	ITC? unre	

add trunk-group next Page 2 of x

TRUNK GROUP

Group Type: isdn	
TRUNK PARAMETERS	
Codeset to Send Display: 0	Codeset to Send National IEs: 6
Max Message Size to Send: 260	Charge Advice: none
Supplementary Service Protocol: a	Digit Handling (in/out): enbloc/enbloc
Trunk Hunt: cyclical	
	Digital Loss Group: 13
Incoming Calling Number - Delete:	Insert: Format:
Bit Rate: 1200	Synchronization: async Duplex: full
Disconnect Supervision - In? y Out? n	
Answer Supervision Timeout: 0	
Administer Timers? n	

2. Complete the following fields as shown:

Field	Conditions/Comments
Group Type	Enter isdn
Carrier Medium	Enter H.323
Service Type	Enter tie
TestCall ITC	Enter unre (unrestricted).
TestCall BCC	Enter 0
Codeset to Send Display	Enter 0
Outgoing Display	This field might need to be changed if the far-end is not Avaya's.

3. Go to the **Trunk Features** page of this screen.

Trunk Features screen

add trunk-group next		Page 3 of x
TRUNK FEATURES		
ACA Assignment? n	Measured: none	Wideband Support? n
		Maintenance Tests? y
	Data Restriction? n	NCA-TSC Trunk Member:
	Send Name: y	Send Calling Number: y
Used for DCS? n		Send EMU Visitor CPN? n
Suppress # Outpulsing? n	Format: public	
Outgoing Channel ID Encoding: exclusive	UUI IE Treatment: service-provider	
		Replace Restricted Numbers? n
		Replace Unavailable Numbers? n
		Send Connected Number: n
		Hold/Unhold Notifications? n
Send UUI IE? y		
Send UCID? n		
Send Codeset 6/7 LAI IE? y		DS1 Echo Cancellation? n
Apply Local Ringback? n	US NI Delayed Calling Name Update? n	
Show ANSWERED BY on Display? y		
	Network (Japan) Needs Connect Before Disconnect? n	

4. Complete the following fields as shown:

Field	Conditions/Comments
Send Name Send Calling Number Send Connected Number	If y is entered, either the ISDN Numbering - Public/Unknown Format screen, or the ISDN Numbering - Private screen (based on the Format field) is accessed to construct the actual number to be sent to the far end.

5. To add a second signaling group, go to the **Group Member Assignments** page of this screen.

add trunk-group next		Page 6 of x
TRUNK GROUP		
	Administered Members (min/max):	0/0
GROUP MEMBER ASSIGNMENTS	Total Administered Members:	0
Port	Code Sfx Name	Night Sig Grp
1: ip	H.323 Tr 1	3
2: ip	H.323 Tr 2	3
3: ip	H.323 Tr 3	
4:		
5:		

Note:

Each signaling group can support up to 31 trunks. If you need more than 31 trunks between the same two switches, add a second signaling group with different listen ports and add the trunks to the existing or second trunk group.

6. Enter group numbers using the following fields:

Field	Conditions/Comments
Port	Enter ip . When the screen is submitted, this value is automatically changed to a T number (Txxxxx).
Name	Enter a 10-character name to identify the trunk.
Sig Grp	Enter the number for the signaling group associated with this H.323 trunk.

Modifying the H.323 trunk signaling group

Modify the **Signaling Group** screen to add a trunk group number to the **Trunk Group for Channel Selection** field.

To modify an H.323 trunk signaling group:

1. Type **busy signaling-group number** to busy-out the signaling group.
2. Type **change signaling-group number** to open the **Signaling Group** screen.

Signaling Group screen

change signaling-group xx

Page 1 of 5

SIGNALING GROUP

Group Number

Group Type: h.323

Remote Office?

Max Number of NCA TSC: 0

SBS?

Max number of CA TSC: 0

IP Video? n

Trunk Group for NCA TSC:

Trunk Group for Channel Selection: 75

TSC Supplementary Service Protocol: a

T303 Timer (sec): 10

Near-end Node Name: clan-a1

Far-end Node Name: clan-b1

Near-end Listen Port: 1720

Far-end Listen Port: 1720

Far-end Network Region:

LRQ Required? n

Calls Share IP Signaling Connection? n

RRQ Required? n

Media Encryption? y

Passphrase:

Bypass If IP Threshold Exceeded? y

H.235 Annex H Required? n

DTMF over IP: out-of-band

Direct IP-IP Audio Connections? y

Link Loss Delay Timer(sec): 90

IP Audio Hairpinning? n

H.323 Outgoing Direct Media? n

Interworking Message: PROgress

DCP/Analog Bearer Capability: 3.1kHz

3. Complete the following field:

Field	Conditions/Comments
Trunk Group for Channel Selection	Enter the trunk group number. If there is more than one trunk group assigned to this signaling group, the group entered in this field is the group that accepts incoming calls.

4. Submit the screen.


5. Type **release signaling-group *number*** to release the signaling group.

Dynamic generation of private/public calling party numbers

Often it is necessary to generate a private Calling Party Number (CPN) for calls within a network, but a public CPN for calls that route through the main network switch to the PSTN.

Consider a network such as the following:

Private/public calling party numbers (CPN)

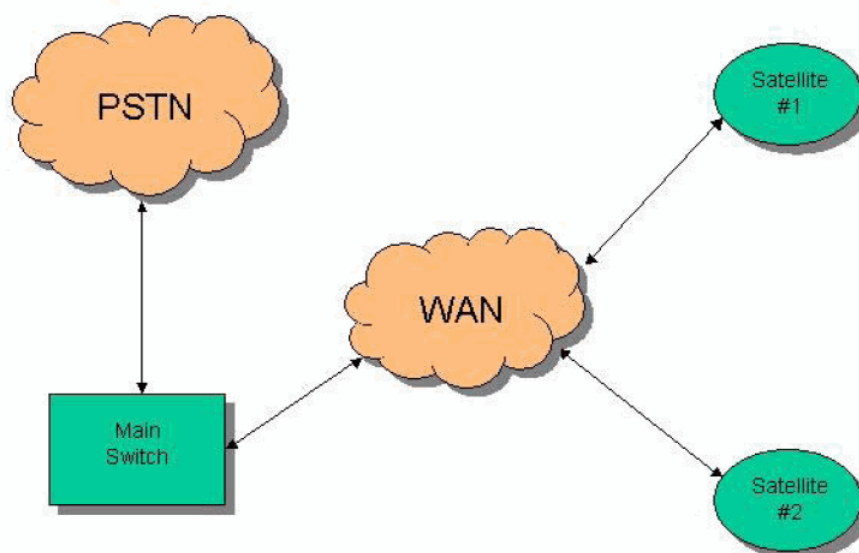

In this network, the customer wants to use internal numbering among the nodes of the network (for example, a 4-digit Uniform Dial Plan (UDP)), but when any node dials the PSTN, to route the call to the PSTN through the main switch.

On page 2 of the ISDN **Trunk Group** screen, set the **Numbering Format** field to **private** or **unk-pvt**. (The value **unk-pvt** means "encode the number as an "unknown" type of number, but use the **Numbering-Private Format** screen to generate the actual number.)

Note:

IP trunks function as ISDN trunks in this respect.

In the network example, the system only generates a Private CPN if the caller dials a Private (level 0/1/2) or Unknown (unk-unk) number. If the caller dials a Public number, the system generates a Public CPN. It is necessary to fill out the **Numbering-Private Format** and **Numbering-Public/Unknown Format** forms appropriately, and then to set the IP trunk groups on the two satellites to use **private** or **unk-pvt Numbering Format** for their CPNs.

Note:

You can designate the type of number for an outgoing call as Private (level 0/1/2) either on the **AAR Analysis** screen or on the **Route Pattern** screen, but you can only designate the type of number as Unknown (**unk-unk**) on the **Route Pattern** screen. If the customer uses UDP, Unknown is the better Type of Number to use.

The default **Call Type** on the **AAR Analysis** screen is **aar**. For historical reasons, **aar** maps to a "public" numbering format. Therefore, you must change the **Call Type** for calls within your network from **aar** to a **private** or **unk-unk** type of number. For a UDP environment, the recommended way is to set the **Numbering Format** to **unk-unk** on the **Route Pattern** screen.

Administering Avaya phones

The following sections describe the installation and administration of Avaya IP telephones:

- [Administering IP Softphones](#)
- [Installing and administering Avaya IP telephones](#)

Administering IP Softphones

IP Softphones operate on a PC equipped with Microsoft Windows and with TCP/IP connectivity through Communication Manager. Avaya offers the following Softphone applications:

- IP Softphone for any phone user
- IP Agent for call center agents
- Softconsole for console attendants
- One-X Communicator
- SIP softphone
- one-X Portal as software-only phone

IP Softphones can be configured to operate in any of the following modes:

- **Road-warrior** mode consists of a PC running the Avaya IP Softphone application and Avaya iClarity IP Audio, with a single IP connection to an Avaya server or gateway.
- **Telecommuter** mode consists of a PC running the Avaya IP Softphone application with an IP connection to the server, and a standard telephone with a separate PSTN connection to the server.
- **Shared Control** mode provides a registration endpoint configuration that will allow an IP Softphone and a non-Softphone telephone to be in service on the same extension at the same time. In this new configuration, the call control is provided by both the Softphone and the telephone endpoint. The audio is provided by the telephone endpoint.

Documentation on how to set up and use the IP Softphones is included on the CD-ROM containing the IP Softphone software. Procedures for administering Communication Manager to support IP Softphones are given in *Administering Avaya Aura™ Communication Manager*, 03-300509.

This section focuses on administration for the trunk side of the Avaya IP Solutions offer, plus a checklist of IP Softphone administration. Comprehensive information on the administration of IP Softphones is given in *Administering Avaya Aura™ Communication Manager*, 03-300509.

There are two main types of IP Softphone configurations:

- [Administering a Telecommuter phone](#)
- [Administering a Road-warrior phone](#)

Communication Manager can distinguish between various IP stations at RAS using the product ID and release number sent during registration. An IP phone with an Avaya manufacturer ID can register if the number of stations with the same product ID and the same or lower release number *is less than* the administered system capacity limits. System limits are based on the number of simultaneous registrations. Note that a license is required for each station that is to be IP softphone enabled.

Administering a Telecommuter phone

The Telecommuter uses two connections: one to the PC over the IP network and another connection to the telephone over the PSTN. IP Softphone PC software handles the call signaling. With IP Softphone R5 or greater, iClarity is automatically installed to handle voice communications.

Note:

The **System Parameters Customer Options** screen is display only. Use the **display system-parameters customer-options** command to review the screen. The License File controls the system software release, the Offer Category, features, and capacities. The *init* login does not have the ability to change the customer options, offer options, or special applications screens.

To administer a Telecommuter phone:

1. Type **display system-parameters customer-options** and press **Enter** to open the **System Parameters Customer Options** screen.

Verify that IP Softphone is enabled. Review the following fields on the screen:

Field	Value
Maximum Concurrently Registered IP Stations	Identifies the maximum number of IP stations that are simultaneously registered, not the maximum number that are simultaneously administered. This value must be greater than 0 , and must be less than or equal to the value for Maximum Ports.
Maximum Concurrently Registered Remote Office Stations	Specifies the maximum number of remote office stations that are simultaneously registered, not the maximum number that are simultaneously administered. This value must be greater than 0 , and must be less than or equal to the value for Maximum Ports.
IP Stations	This value should be y .
Product ID	This is a 10-character field that allows any character string. For new installations, IP Soft, IP Phone, IP Agent and IP ROMax, the product IDs automatically appear
Rel. (Release)	Identifies the release number.
Limit	This field defaults to the maximum allowed value, based on the Concurrently Registered Remote Office Stations field on page 1 of the System Parameters Customer Options screen.

2. Type **add station next** and press **Enter** to open the **Station** screen and complete the fields listed in the table below to add a DCP station (or change an existing DCP station):

Field	Value
Type	Enter the phone model, such as 6408D .
Port	Enter x if virtual, or the port number of an existing phone.

Field	Value
Security Code	Enter the user's password.
IP Softphone	Enter y .

- Go to page 2; verify whether the field **Service Link Mode**: *as-needed* is set as shown.
- Install the IP Softphone software on the user's PC.

Administering a Road-warrior phone

The sofphone application runs on a PC that is connected over an IP network. In road-warrior mode, the application uses two channels: one for call control signaling and one for voice.

Note:

The **System Parameters Customer Options** screen is display only. Use the **display system-parameters customer-options** command to review the screen. The License File controls the system software release, the Offer Category, features, and capacities. The *init* login does not have the ability to change the customer options, offer options, or special applications screens.

To administer a Road-warrior phone:

- Type **display system-parameters customer-options**.

Verify that IP Softphone is enabled. Go to the appropriate pages on the **System Parameters Customer Options** screen to review the following fields:

Field	Value
Maximum Concurrently Registered IP Stations	Specifies the maximum number of IP stations that are simultaneously registered, not the maximum number that are simultaneously administered. This value must be greater than 0 .
IP Stations	Must be y .
Product ID	This is a 10-character field that allows any character string. For new installations, IP Soft, IP Phone, IP Agent and IP ROMax product IDs automatically display.
Rel. (Release)	Identifies the release number
Limit	Defaults to 1

2. Type **add station next** and press **Enter** to open the **Station** screen and complete the fields listed in the table below to add a DCP station (or change an existing DCP station):

Field	Value
Type	Enter the phone model you wish to use, such as 6408D .
Port	Enter x if virtual, or the port number of an existing phone. If only an IP Softphone, enter IP .
Security Code	Enter the user's password.
IP Softphone	Enter y .

3. Go to page 2; **Service Link Mode:** *as-needed*.

Install the IP Softphone software on the user's PC (iClarity automatically installed with the IP Softphone R2 or greater).

Installing and administering Avaya IP telephones

The Avaya line of digital business phones uses Internet Protocol (IP) technology with Ethernet line interfaces and has downloadable firmware.

IP Telephones provide support for dynamic host configuration protocol (DHCP) and either Trivial File Transfer Protocol (TFTP) or Hypertext Transfer Protocol (HTTP) over IPv4/UDP, which enhance the administration and servicing of the phones.

For information on feature functionality of the IP telephones, see the *Avaya Aura™ Communication Manager Hardware Description and Reference* (555-245-207), or the appropriate IP Telephone user's guides.

For more information on installing and administering Avaya IP telephones, see

- *4600 Series IP Telephone Installation Guide*, 555-233-128
- *4600 Series IP Telephone LAN Administrator's Guide*, 555-233-507
- *Avaya one-X Deskphone Edition 9600 Series IP Telephone Installation and Maintenance Guide*, 16-300694
- *Avaya one-X Deskphone Edition 9600 Series IP Telephones Administrator Guide*, 16-300698
- *Avaya one-X Deskphone Value Edition 1600 Series IP Telephones Installation and Maintenance Guide*, 16-601438
- *Avaya one-X Deskphone Value Edition 1600 Series IP Telephones Administrator Guide Release 1.0*, 16-601443

For more information on IP Wireless Telephone Solutions, visit <http://support.avaya.com>

About the 4600-series IP telephones

The 4600-series IP Telephone product line possesses a number of shared model features and capabilities. All models also feature

- Downloadable firmware
- Automatic IP address resolution through DHCP
- Manual IP address programming.

The 4600-series IP Telephone product line includes the following telephones:

- Avaya 4601 IP telephone
- Avaya 4602 and 4602SW IP telephone
- Avaya 4610SW IP telephone
- Avaya 4620 and 4620SW IP telephone
- Avaya 4622SW IP telephone
- Avaya 4625 IP telephone
- Avaya 4630SW IP Screenphone
- Avaya 4690 IP conference telephone

Support for SIP-enabled applications may be added to several of these IP telephones via a model-specific firmware update. See the Avaya Firmware Download Web site for more details.

About the 9600-series IP telephones

The 9600-series IP Telephone product line possesses a number of shared model features and capabilities. All models also feature

- Downloadable firmware
- Automatic IP address resolution through DHCP
- Manual IP address programming.

The 9600-series IP Telephone product line includes the following telephones:

- Avaya 9610 IP telephone for Walkup users
- Avaya 9620 IP telephone for the Everyday user
- Avaya 9630 IP telephone with advanced communications capabilities
- Avaya 9640 IP telephone with advanced communications capabilities, color display
- Avaya 9650 IP telephone for the executive administrative assistant

Support for SIP-enabled applications may be added to several of these IP telephones via a model-specific firmware update. See the Avaya Firmware Download Web site for more details.

About the 1600-series IP telephones

The 1600-series IP Telephone product line possesses a number of shared model features and capabilities. All models also feature

- Downloadable firmware
- Automatic IP address resolution through DHCP
- Manual IP address programming.

The 4600-series IP Telephone product line includes the following telephones:

- Avaya 1603 IP telephone for Walkup users
- Avaya 1608 IP telephone for the Everyday user
- Avaya 1616 IP telephone for the Navigator user

Support for SIP-enabled applications may be added to several of these IP telephones via a model-specific firmware update. See the Avaya Firmware Download Web site for more details.

About IP telephone hardware/software requirements

IP Telephones are shipped from the factory with operational firmware installed. Some system-specific software applications are downloaded from a TFTP or HTTP server through automatic power-up or reset. The IP Telephones search and download new firmware from the file server before attempting to register with Communication Manager.

During a Communication Manager upgrade, any data in the /tftpboot directory is overwritten with new software and firmware. For more detailed information on managing the firmware and configuration files for the 4600-series IP telephones during Communication Manager upgrades, see *Installing and Upgrading the Avaya G700 Media Gateway and Avaya S8300 Server* (555-234-100), or *Upgrading, Migrating, and Converting Servers and Gateways* (03-300412).

The software treats the 4600-series and 9600-series IP Telephones as any new station type, including the capability to **list/display/change/duplicate/remove station**.

Note:

Audio capability for the IP Telephones requires the presence of the TN2302AP IP Media Processor or TN2602AP Media Resource 320 circuit pack, either of which provide hairpinning and IP-IP direct connections. Using a media processor resource conserves TDM bus and timeslot resources and improves voice quality.

The 4600-series IP Telephone also requires a TN799DP Control- LAN (C-LAN) circuit pack for the signaling capability on the DEFINITY Server csi platform. You do not need a C-LAN circuit pack to connect an IP Telephone if your system has built-in (for example, using an Avaya S8300 Server or Avaya S8700-series Server) or Processor Ethernet capability.

To install required TN2302AP, TN2602AP, and TN799DP circuit packs, if necessary

1. Determine the carrier/slot assignments of the circuit packs to be added.
2. Insert the circuit pack into the slot specified in step 1.

Note:

You do not have to power down the cabinet to install the circuit packs.

Administering Avaya IP telephones

IP Telephones R1.5 or greater use a single connection, and you only need to administer the station type.

To add an IP telephone

1. Type **add station next** to go to the **Station** screen.

Station screen

add station next		Page 1 of 5
STATION		
Extension: 2010	Lock Messages? n	BCC: 0
Type: 4624	Security Code:	TN: 1
Port: IP	Coverage Path 1:	COR: 1
Name:	Coverage Path 2:	COS: 1
	Hunt-to Station:	
STATION OPTIONS		
Loss Group: 2	Time of Day Lock Table:	
	Personalized Ringing Pattern: 1	
Speakerphone: 2-way	Message Lamp Ext: 2010	
Display Language: english	Mute Button Enabled? y	
Survivable GK Node Name:		
Survivable COR: internal	Media Complex Ext:	
Survivable Trunk Dest? y	IP Softphone? y	

2. Complete the fields as shown in the following table:

Field	Value
Type	Enter the IP Telephone 4600-series model number, such as 4624 . The following phones are administered with an alias: ● 4601 (administer as a 4602) ● 4602SW (administer as a 4602) ● 4690 (administer as a 4620)
Port	Enter x , or IP .

Note:

A 4600-series IP Telephone is always administered as an X port, and then once it is successfully registered by the system, a virtual port number will be assigned. (Note that a station that is registered as “unnamed” is not associated with any logical extension or administered station record.)

3. For dual-connection architecture IP Telephones (R2 or earlier), complete the fields as shown in the following table:

Field	Value
Media Complex Ext	Enter the H.323 administered extension.
Port	Enter x .

4. Submit the screen.

About hairpinning and shuffling

Communication Manager can shuffle or hairpin call path connections between two IP endpoints by rerouting the voice channel away from the usual TDM bus connection and creating a direct IP-to-IP connection. Shuffling and hairpinning are similar because they preserve connection and conversion resources that might not be needed, depending on the compatibility of the endpoints that are attempting to interconnect.

Shuffling and hairpinning techniques differ in the way that they bypass the unnecessary call-path resources (compare either [Figure 35: Shuffled audio connection between IP endpoints in the same network region](#) on page 183 or [Figure 36: Shuffled audio connection between IP endpoints in different network regions](#) on page 184 with [Figure 37: Hairpinned audio connection between 2 IP endpoints in the same network region](#) on page 187).

Shuffled or hairpinned connections:

- Conserve channels on the TN2302AP IP Media Processor and TN2602AP IP Media Resource 320.
- Bypass the TDM bus, conserving timeslots.
- Improve voice quality by bypassing the codec on the TN2302AP IP Media Processor and TN2602AP IP Media Resource 320 circuit packs.

Because shuffling frees up more resources on the TN2302AP IP Media Processor and TN2602AP IP Media Resource 320 circuit packs than hairpinning does, Communication Manager first checks both endpoints to determine whether the [Determining if shuffling is possible](#) on page 182 are met. If the shuffling criteria are not met, Communication Manager routes the call according to the [What are the criteria for hairpinning](#) on page 186, if hairpinning is enabled. If hairpinning is not enabled, Communication Manager routes the call to the TDM bus. Both endpoints must connect through the same TN2302AP IP Media Processor and TN2602AP IP Media Resource 320 for Communication Manager to shuffle or hairpin the audio connection.

For information on interdependencies that enable hairpinning and shuffling audio connections, see [Hairpinning and shuffling administration interdependencies](#) on page 188. For a discussion of Network Address Translation (NAT), see [About Network Address Translation \(NAT\)](#) on page 189.

What hardware and endpoints are required

The TN2302AP IP Media Processor or TN2602AP IP Media Resource 320 circuit pack is required for shuffling or hairpinning audio connections.

The specific endpoint types that you can administer for hairpinning or shuffling are:

- All Avaya IP stations
- Other vendors' H.323-compatible stations

About shuffled audio connections

Shuffling an audio connection between two IP endpoints means rerouting voice channel away from the usual TDM bus connection and creating a direct IP-to-IP connection. Shuffling saves such resources as TN2302AP or TN2602AP channels and TDM bus time slots and improves voice quality because the shuffled connection bypasses the TN2302AP's or TN2602AP's codec. Both endpoints must be capable of shuffling (support H.245 protocol) before Communication Manager can shuffle a call.

Determining if shuffling is possible

Communication Manager uses the following criteria to determine whether a shuffled audio connection is possible:

- A point-to-point voice connection exists between two endpoints.
- No other active call (in-use or held) that requires TDM connectivity (for example, applying tones, announcement, conferencing, and others) exists on either endpoint.
- The endpoints are in the same network region or in different, interconnected regions.
- Both endpoints or connection segments are administered for shuffling by setting the **Direct IP-IP Audio Connections** field on the [Station screen](#) on page 200 or the [Signaling group screen](#) on page 198) to **y**.
- If the **Direct IP-IP Audio Connections** field is **y** (yes), but during registration the endpoint indicates that it does not support audio shuffling, then a call cannot be shuffled.

If the **Direct IP-IP Audio Connections** field is **n** (no), but during registration the endpoint indicates that it can support audio shuffling, then calls to that endpoint cannot be shuffled, giving precedence to the endpoint administration.

- The rules for [Inter-network region connection management](#) on page 195 are met.
- There is at least one common codec between the endpoints involved and the Inter-network region Connection Management codec list.
- The endpoints have at least one codec in common as shown in their current codec negotiations between the endpoint and the switch.
- Both endpoints can connect through the same TN2302AP IP Media Processor or TN2602AP IP Media Resource 320 circuit packs.

Examples of shuffling

Shuffling within the same network region

[Figure 35: Shuffled audio connection between IP endpoints in the same network region](#) on page 183 and [Figure 36: Shuffled audio connection between IP endpoints in different network regions](#) on page 184 provide examples of shuffled audio connections.

Figure 35: Shuffled audio connection between IP endpoints in the same network region

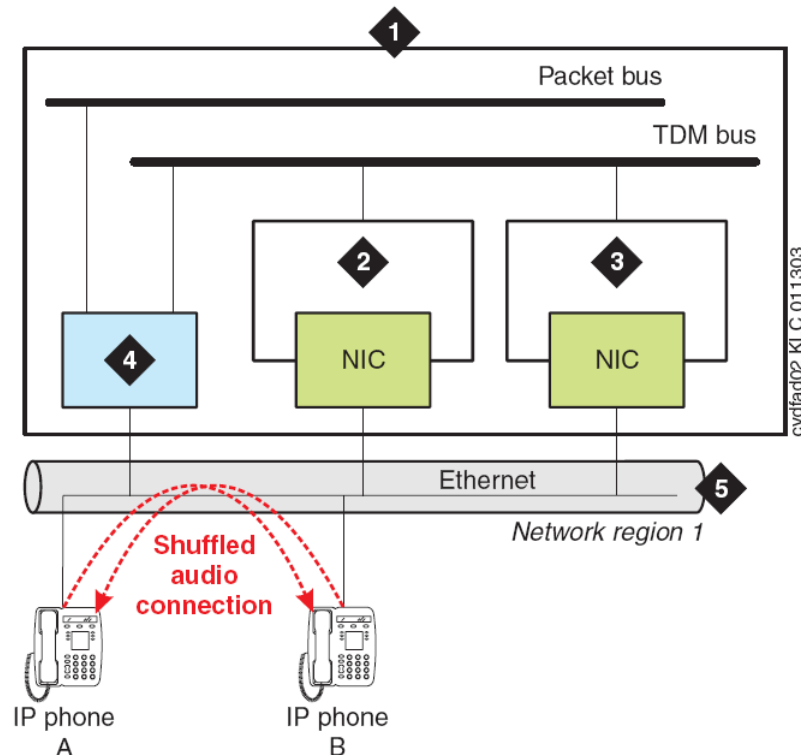


Figure notes:

- | | |
|--|---|
| 1. Avaya server | 4. TN799 Control LAN (C-LAN) circuit pack |
| 2. TN2302AP IP Media Processor and TN2602AP IP Media Resource 320 circuit pack | 5. LAN/WAN segment administered in Communication Manager as network region 1. |
| 3. TN2302AP IP Media Processor and TN2602AP IP Media Resource 320 circuit pack | |

[Figure 35: Shuffled audio connection between IP endpoints in the same network region](#) on page 183 is a schematic of a shuffled connection between two IP endpoints within the same network region. After the call is shuffled, the IP Media Processors are out of the audio connection, and those channels are free to serve other media connections.

Shuffling between different network regions

Figure 36: Shuffled audio connection between IP endpoints in different network regions

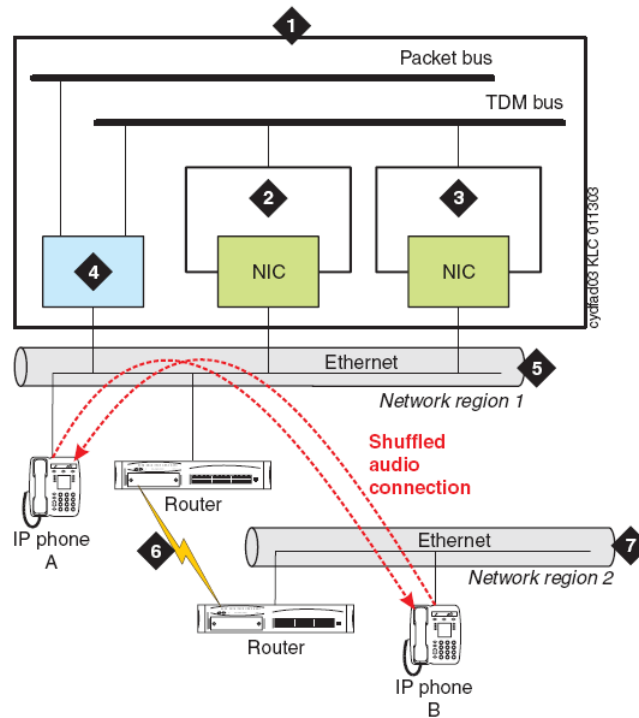


Figure notes:

- | | |
|--|---|
| 1. Avaya server | 5. LAN/WAN segment administered in Communication Manager as network region 1. |
| 2. TN2302AP IP Media Processor and TN2602AP IP Media Resource 320 circuit pack | 6. IP voice packet path between LAN routers |
| 3. TN2302AP IP Media Processor and TN2602AP IP Media Resource 320 circuit pack | 7. LAN/WAN segment administered in Communication Manager as network region 2. |
| 4. TN799 Control LAN (C-LAN) circuit pack | |

[Figure 36: Shuffled audio connection between IP endpoints in different network regions](#) on page 184 is a schematic of a shuffled audio connection between two IP endpoints that are in different network regions that are interconnected and the inter-network region connection management rules are met. After the call is shuffled, both Media Processors are bypassed, making those resources available to serve other media connections. The voice packets from IP endpoints flow directly between LAN routers.

Determining whether an endpoint supports shuffling

Placing a test call from an endpoint that is capable of shuffling to another endpoint whose shuffling capability is unknown can help you to determine whether an endpoint supports audio shuffling or not.

To determine whether an endpoint supports shuffling:

1. Administer the **Direct IP-IP Audio Connections** field on page 2 as **y** (yes) on both endpoint's station screen (**change station extension**).
2. From the endpoint that can support shuffling, place a call to the endpoint that you are testing.
Wait 2 minutes.
3. At the SAT type **status station extension** (administered extension of the endpoint that you are testing) and press **Enter** to display the **Station** screen for this extension.
4. Note the **Port** field value in the **GENERAL STATUS** section of page 1.
5. Scroll to page 4

In the **AUDIO CHANNEL** section note the value of the **Audio** field under the **Switch Port** column.

- If the values are the same, the endpoint is capable of shuffling.
Administer the **Direct IP-IP Audio Connections** field (**change station extension**, page 2) as **y** (yes).
- If the values are different, then the endpoint cannot shuffle calls.
Administer the **Direct IP-IP Audio Connections** field (**change station extension**, page 2) as **n** (no).

Administrable loss plan

To prevent audio levels from changing when a 2-party call changes from the TDM bus to a shuffled or hairpinned connection, two party connections between IP endpoints are not subject to the switch's administrable loss plan. Although IP endpoints can be assigned to administrable loss groups, the switch is only able to change loss on IP Softphone calls including circuit-switched endpoints. Conference calls of three parties or more are subject to the administrable loss plan, whether those calls involve IP endpoints or not.

About hairpinned audio connections

Hairpinning means rerouting the voice channel connecting two IP endpoints so that the voice channel goes through the TN2302AP IP Media Processor and TN2602AP IP Media Resource 320 circuit packs in IP format instead of through the TDM bus. Communication Manager provides only shallow hairpinning, meaning that only the IP and Real Time Protocol (RTP) packet headers are changed as the voice packets go through the TN2302AP or TN2602AP circuit pack. This requires that both endpoints use the same codec (coder/decoder), a circuit that takes a varying-voltage analog signal through a digital conversion algorithm to its digital equivalent or vice-versa (digital to analog). Throughout this section, when the word "hairpin" is used, it means shallow hairpinning.

What are the criteria for hairpinning

Communication Manager uses the following criteria to determine whether to hairpin the connection:

- A point-to-point voice connection exists between two endpoints.
- The endpoints are in the same network region, or in different, interconnected regions.
- A single TN2302AP IP Media Processor or TN2602AP IP Media Resource 320 circuit pack serves both endpoints.
- The endpoints use a single, common codec.
- The endpoints are administered for hairpinning: the **Direct IP-IP Audio Connections** field on the [Station screen](#) on page 200 or the [Signaling group screen](#) on page 198) is **y**.
- If the **IP Audio Hairpinning** field is **y** (yes), but during registration the endpoint indicates that it does not hairpinning, then a call cannot be hairpinned.

If the **IP Audio Hairpinning** field is **n** (no), but during registration the endpoint indicates that it can support hairpinning, then calls to that endpoint cannot be hairpinned, giving precedence to the endpoint administration.

- The [Determining if shuffling is possible](#) on page 182 are *not* met.
- Both endpoints can connect through the same TN2302AP IP Media Processor or TN2602AP IP Media Resource 320 circuit pack.

Example of a hairpinned call

Hairpinned audio connections:

- Set up within approximately 50 ms
- Preserve the Real-Time Protocol (RTP) header (for example the timestamp and packet sequence number).
- Do not require volume adjustments on Avaya endpoints, however non-Avaya endpoints might require volume adjustment after the hairpinned connection is established.

[Figure 37: Hairpinned audio connection between 2 IP endpoints in the same network region](#) on page 187 is a schematic of a hairpinned audio connection between two IP endpoints in the same network region.

Figure 37: Hairpinned audio connection between 2 IP endpoints in the same network region

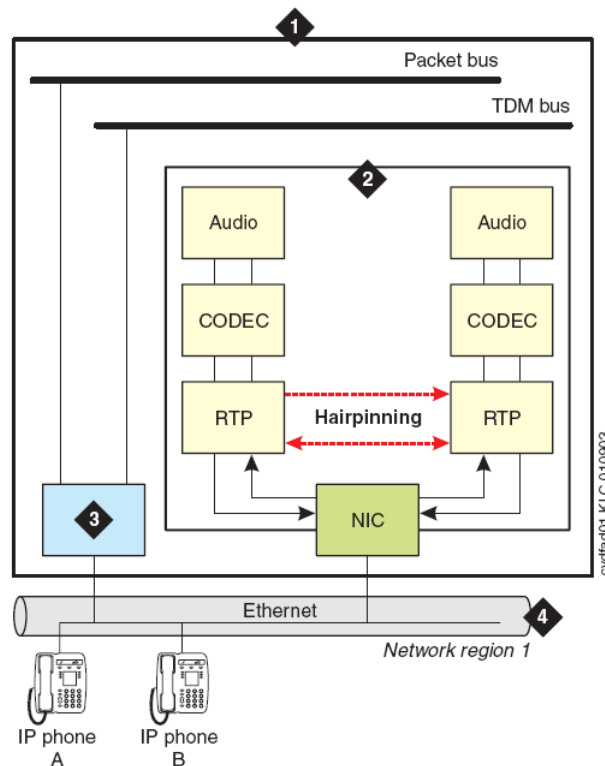


Figure notes:

- | | |
|--|---|
| 1. Avaya server | 3. TN799 Control LAN (C-LAN) circuit pack |
| 2. TN2302AP IP Media Processor and TN2602AP IP Media Resource 320 circuit pack | 4. LAN/WAN segment administered in Communication Manager as network region 1. |

[Figure 37: Hairpinned audio connection between 2 IP endpoints in the same network region](#) on page 187 shows that hairpinned calls bypass the TN2302AP's or TN2602AP's codec, thus freeing those resources for other calls. The necessary analog/digital conversions occur in the common codec in each endpoint.

What causes a hairpinned call to be redirected

Whenever a third party is conferenced into a hairpinned call or a tone or announcement must be inserted into the connection, the hairpinned connection is broken and the call is re-routed over the TDM bus.

Determining which TN2302AP or TN2602AP circuit pack is hairpinning

Whenever a TN2302AP IP Media Processor or TN2602AP IP Media Resource 320 circuit pack is hairpinning any calls, its yellow LED is on steady. Although there is no simple way to identify all of the extension numbers that are hairpinning through a particular TN2302AP or TN2602AP circuit pack, you can determine which TN2302AP or TN2602AP circuit pack a particular extension is using for hairpinning.

To determine which TN2302AP or TN2602AP circuit pack is hairpinning:

1. At the SAT, type **status station extension** and press **Enter** to display the **Station** screen for that extension.
2. Scroll to page 4 of the report.
3. In the **AUDIO CHANNEL** section, check whether there is a value in the **Audio** field under the **Switch Port** column.

If there is no port listed, then the call is hairpinned.

Hairpinning and shuffling administration interdependencies

[Table 10: Hairpinning and shuffling administration](#) on page 189 summarizes the Communication Manager interdependencies that enable hairpinning and shuffling audio connections.

Note:

In order to use hairpinning or shuffling with either Category A or B features, the **Software Version** field (**list configuration software-versions**) must be **R9** or greater.



Important:

Encryption must be *disabled* for hairpinning to work, because encryption requires the involvement of resources that are not used in the shallow hairpinning connection. This not the case for shuffling, however.

Table 10: Hairpinning and shuffling administration

Administration screen	Required customer options ¹	Other interactions
Station	IP Stations Remote Office	Hairpinning is not available if Service Link Mode field on Station screen is permanent . Shuffling is available only for the endpoints ² Avaya IP telephone R2 and Avaya IP Softphone (R2 or newer)
Signaling group	H.323 Trunks	
Inter network region	H.323 Trunks IP Stations Remote Office	User login must have features permissions.
Feature-Related System Parameters	H.323 Trunks IP Stations Remote Office	

1. The fields listed in this column must be enabled through the License File. To determine if these customer options are enabled, use the `display system-parameters customer-options` command. If any of the fields listed in this column are not enabled, then either the fields for hairpinning and shuffling are not displayed or, in the case of the **Inter Network Region Connection Management** screen, the second page (the actual region-to-region connection administration) does not display.

2. Although other vendors' fully H.323v2-compliant products should have shuffling capability, you should test that before administering such endpoints for hairpinning or shuffling. See the section titled [Determining whether an endpoint supports shuffling](#) on page 185.

About Network Address Translation (NAT)

Network address translation (NAT) is a function, typically in a router or firewall, by which an internal IP address is translated to an external IP address. The terms "internal" and "external" are generic and ambiguous, and they are more specifically defined by the application. For example, the most common NAT application is to facilitate communication from hosts on private networks to hosts on the public Internet. In such a case, the internal addresses are private addresses, and the external addresses are public addresses.

Note:

This common NAT application does not use a web proxy server, which would be an entirely different scenario.

Another common NAT application is for some VPN clients. The internal address in this case is the physical address, and the external address is the virtual address. This physical address does not necessarily have to be a private address as shown here, as the subscriber could pay for a public address from the broadband service provider. But regardless of the nature of the physical address, the point is that it cannot be used to communicate back to the enterprise through a VPN tunnel. Once the tunnel is established, the enterprise VPN gateway assigns a virtual address to the VPN client application on the enterprise host. This virtual address is part of the enterprise IP address space, and it must be used to communicate back to the enterprise.

The application of the virtual address varies among VPN clients. Some VPN clients integrate with the operating system in such a way that packets from IP applications (for example, FTP or telnet) on the enterprise host are sourced from the virtual IP address. That is, the IP applications inherently use the virtual IP address. With other VPN clients this does not occur. Instead, the IP applications on the enterprise host inherently use the physical IP address, and the VPN client performs a NAT to the virtual IP address. This NAT is no different than if a router or firewall had done the translation.

What are the types of NAT

Static 1-to-1 NAT

Static 1-to-1 NAT is what has already been covered up to this point. In static 1-to-1 NAT, for every internal address there is an external address, with a static 1-to-1 mapping between internal and external addresses. It is the simplest yet least efficient type of NAT, in terms of address preservation, because every internal host requires an external IP address. This limitation is often impractical when the external addresses are public IP addresses. Sometimes the primary reason for using NAT is to preserve public IP addresses, and for this case there are two other types of NAT: many-to-1 and many-to-a-pool.

Dynamic Many-to-1 NAT

Dynamic many-to-1 NAT is as the name implies. Many internal addresses are dynamically translated to a single external address. Multiple internal addresses can be translated to the same external address, when the TCP/UDP ports are translated in addition to the IP addresses. This is known as network address port translation (NAPT) or simply port address translation (PAT). It appears to the external server that multiple requests are coming from a single IP address, but from different TCP/UDP ports. The NAT device remembers which internal source ports were translated to which external source ports.

In the simplest form of many-to-1 NAT, the internal host must initiate the communication to the external host, which then generates a port mapping within the NAT device, allowing the external host to reply back to the internal host. It is a paradox with this type of NAT (in its simplest form) that the external host cannot generate a port mapping to initiate the communication with the internal host, and without initiating the communication, there is no way to generate the port mapping. This condition does not exist with 1-to-1 NAT, as there is no mapping of ports.

Dynamic Many-to-a-Pool NAT

Many-to-a-pool NAT combines some of the characteristics of both 1-to-1 and many-to-1 NAT. The general idea behind many-to-a-pool NAT is that a 1-to-1 mapping is not desired, but there are too many internal hosts to use a single external address. Therefore, a pool of multiple external addresses is used for NAT. There are enough external addresses in the pool to support all the internal hosts, but not nearly as many pool addresses as there are internal hosts.

What are the issues between NAT and H.323

Some of the hurdles that NAT presents to H.323 include:

- H.323 messages, which are part of the IP payload, have embedded IP addresses in them.
NAT translates the IP address in the IP header, but not the embedded addresses in the H.323 messages. This is a problem that can be and has been addressed with H.323-aware NAT devices. It has also been addressed with Communication Manager 1.3 and later versions of the NAT feature.
- When an endpoint (IP telephone) registers with the gatekeeper (call server), that endpoint's IP address must stay the same for the duration of the registration.
This rules out almost all current implementations of many-to-a-pool NAT.
- TCP/UDP ports are involved in all aspects of IP telephony — endpoint registration, call signaling, and RTP audio transmission.

These ports must remain unchanged for the duration of an event, duration of the registration, or duration of a call. Also, the gatekeeper must know ahead of time which ports will be used by the endpoints for audio transmission, and these ports can vary on a per call basis. These requirements make it very difficult for H.323 to work with port address translation (PAT), which rules out almost all current implementations of many-to-1 and many-to-a-pool NAT.

About the Communication Manager NAT Shuffling feature

The Communication Manager NAT Shuffling feature permits IP telephones and IP Softphones to work behind a NAT device. This feature was available prior to release 1.3, but it did not work with shuffled calls (**Direct IP-IP Audio** enabled). The NAT feature now works with shuffled calls.

Terms:

The following terms are used to describe the NAT Shuffling feature:

- Native Address — The original IP address configured on the device itself (internal address)
- Translated Address — The IP address after it has gone through NAT, as seen by devices on the other side of the translation (external address)

- Gatekeeper — The Avaya device that is handling call signaling.
It could be a portal to the gatekeeper, such as a C-LAN, or the gatekeeper itself, such as an S8300 Server.
- Gateway — The Avaya device that is handling media conversion between TDM and IP, such as a MedPro board, G700 VoIP Media Module, or any of the following Media Gateways—G450, G430, G350 or G250.

The essence of this feature is that Communication Manager keeps track of the native and translated IP addresses for every IP station (IP telephone or IP Softphone). If an IP station registration appears with different addresses in the IP header and the RAS message, the call server stores the two addresses and alerts the station that NAT has taken place.

This feature works with static 1-to-1 NAT. It does not work with NAPT, so the TCP/UDP ports sourced by the IP stations must not be changed. Consequently, this feature does not work with many-to-1 NAT. This feature *may* work with many-to-a-pool NAT, if a station's translated address remains constant for as long as the station is registered, and there is no port translation.

The NAT device must perform plain NAT – not H.323-aware NAT. Any H.323-aware feature in the NAT device must be disabled, so that there are not two independent devices trying to compensate for H.323 at the same time.

Rules:

The following rules govern the NAT Shuffling feature. The **Direct IP-IP Audio** parameters are configured on the SAT **ip-network-region** screen.

1. When **Direct IP-IP Audio** is enabled (default) and a station with NAT and a station without NAT talk to one another, the translated address is always used.
2. When two stations with NAT talk to one another, the native addresses are used (default) when **Yes** or **Native (NAT)** is specified for **Direct IP-IP Audio**, and the translated addresses are used when **Translated (NAT)** is specified.
3. The Gatekeeper and Gateway must *not* be enabled for NAT. As long as this is true, they may be assigned to any network region.

Administering hairpinning and shuffling

Choosing how to administer hairpinning and shuffling

You can administer shuffled and hairpinned connections:

- Independently for system-wide applicability
- Within a network region
- At the user level

[Table 11: Hairpinning and shuffling administration](#) on page 193 lists the forms and provides links to all three levels:

Table 11: Hairpinning and shuffling administration

Level	Communication Manager screen	Link to procedure
System	Feature-Related System Parameters	Administering hairpinning and shuffling at the system-level on page 193
Network region	Network Region	Administering hairpinning and shuffling in network regions on page 195
IP Trunks	Signaling Group	Administering H.323 trunks for hairpinning and shuffling on page 198
IP endpoints	Station	Administering IP endpoints for hairpinning and shuffling on page 199

Administering hairpinning and shuffling at the system-level

You can administer hairpinning or shuffling as a system-wide parameter.

To administer hairpinning and shuffling as a system-level parameter

1. At the SAT, type `change system-parameters features` and press **Enter** to display the **Feature-Related System Parameters** screen:

Feature-Related System Parameters screen

change system-parameters features Page x of y

FEATURE-RELATED SYSTEM PARAMETERS

AUTOMATIC EXCLUSION PARAMETERS

Automatic Exclusion by COS? n

Recall Rotary Digit: 2

Duration of Call Timer Display (seconds): 3

WIRELESS PARAMETERS

Radio Controllers with Download Server Permission (enter board location)

1: 2: 3: 4: 5:

IP PARAMETERS

Direct IP-IP Audio Connections? n

IP Audio Hairpinning? n

RUSSIAN MULTI-FREQUENCY PACKET SIGNALING

Retry?_

T2 (Backward signal) Activation Timer (secs):__

2. To allow shuffled IP calls using a public IP address (default), go to the page with IP PARAMETERS and set the **Direct IP-IP Audio Connections** field to **y**.
To disallow shuffled IP calls set this field to **n**. Be sure that you understand the interactions in [Hairpinning and shuffling administration interdependencies](#) on page 188 and the notes below.
3. To allow hairpinned audio connections, type **y** (yes) in the **IP Audio Hairpinning** field, noting the interactions in [Hairpinning and shuffling administration interdependencies](#) on page 188 and the notes below.
4. Save the changes.

Note:

The **Direct IP-IP Audio Connections** and **IP Audio Hairpinning** fields do not display if the **IP Stations** field, the **H.323 Trunks** field, and the **Remote Office** field on the **Customer Options** screen are set to **n**.

Administering hairpinning and shuffling in network regions

Inter-network region connection management

Shuffling and hairpinning endpoints or media processing resources in any given network region is independently administered per network region, which uses a matrix to define the desired connections between pairs of regions.

The matrix is used two ways:

- It specifies what regions are valid for resource allocation when resources in the preferred region are unavailable.
- When a call exists between two IP endpoints in different regions, the matrix specifies whether those two regions can be directly connected.

To administer hairpinning or shuffling within a network region:

1. At the SAT type **change ip-network-region number** and press **Enter** to display the **IP Network Region** screen.

IP Network Region screen

change ip-network-region 1		Page 1 of 19
IP NETWORK REGION		
Region: 1		
Location:	Authoritative Domain:	
Name:		
MEDIA PARAMETERS		Intra-region IP-IP Direct Audio: yes
Codec Set: 1	Inter-region IP-IP Direct Audio: yes	
UDP Port Min: 2048	IP Audio Hairpinning? n	
UDP Port Max: 3028	RTCP Reporting Enabled? n	
DIFFSERV/TOS PARAMETERS		RTCP MONITOR SERVER PARAMETERS
Call Control PHB Value: 34	Use Default Server Parameters? y	
Audio PHB Value: 46		
Video PHB Value: 26		
802.1P/Q PARAMETERS		
Call Control 802.1p Priority: 7		
Audio 802.1p Priority: 6		
Video 802.1p Priority: 5	AUDIO RESOURCE RESERVATION PARAMETERS	
H.323 IP ENDPOINTS		RSVP Enabled? n
H.323 Link Bounce Recovery? y		
Idle Traffic Interval (sec): 20		
Keep-Alive Interval (sec): 5		
Keep-Alive Count: 5		

2. Administer the **IP-IP Direct Audio** fields:

- The **Intra-region IP-IP Direct Audio** field permits shuffling if both endpoints are in the same region.

- The **Inter-region IP-IP Direct Audio** field permits shuffling if the two endpoints are in two different regions.

The allowable values for both fields are:

- **y** -- permits shuffling the call
- **n** -- disallows shuffling the call
- **native**-- the IP address of a phone itself, or no translation by a Network Address Translation (NAT) device
- **translated** -- the translated IP address that a Network Address Translation (NAT) device provides for the native address

Note:

If there is no NAT device in use at all, then the native and translated addresses are the same. For more information on NAT, see the *Administering Avaya Aura™ Communication Manager*, 03-300509 and *Avaya Application Solutions: IP Telephony Deployment Guide* (555-245-600).

Note:

The hairpinning and shuffling fields on the **IP Network Regions** screen do not display unless the **IP Stations**, the **H.323 Trunks**, or the **Remote Office** field is set to **y** (yes) on the **Optional Features (display system-parameter customer-options)** screen. These features must be enabled in the system's License File.

3. Go to page 3 and administer the common codec sets on the **Inter Network Region Connection Management** screen ([Inter Network Region Connection Management screen](#) on page 197). For more detailed information about the fields on this screen, see the Screen Reference chapter of the *Administering Avaya Aura™ Communication Manager*, 03-300509.

Note:

You cannot connect IP endpoints in different network regions or share TN799 C-LAN or TN2032 IP Media Processor resources between/among network regions unless you make a codec entry in this matrix specifying the codec set to be used. For more information, see [Administering IP CODEC sets](#) on page 230.

Inter Network Region Connection Management screen

change ip-network-region n Page 3 of x

Inter Network Region Connection Management

src rgn	dst rgn	codec set	direct WAN	WAN-BW-limits Units	Video Total Norm Prio Shr	Intervening-regions	Dyn CAC	IGAR
3	1	1	y	256:Kbits				
3	2	1	n		n 1	— — —		n
3	3	1						
3	4	1	n		y 1	— — —		n
3	5	1	n		y 6	— — —		
3	6	1	y	NoLimit				
3	7	1	y	10:Calls				
3	8							
3	9	3	y					
3	10							
3	11							
3	12							
3	13							
3	14							
3	15							

For this example screen, network region 3 communicates with:

- Network regions 1 through 7 using codec set 1
- Network region 9 using codec set 3.

Note:

Use the `list ip-codec-set` command for a list of codecs.

4. Save the changes.

Administering and selecting codecs

When an IP endpoint calls another IP endpoint, Communication Manager asks that the 2nd endpoint choose the same codec that the 1st endpoint offered at call setup. However, if the 2nd endpoint cannot match the 1st's codec, the call is set up with each endpoint's administered (preferred) codec, and the data streams are converted between them, often resulting in degraded audio quality because of the different compressions/decompressions or multiple use of the same codec. For more information, see [Administering IP CODEC sets](#) on page 230.

When an endpoint (station or trunk) initially connects to the server, Communication Manager selects the first codec that is common to both the server and the endpoint. The **Inter Network Region Connection Management** screen specifies codec set(s) to use *within* an individual region (intra-region) and a codec set to use *between/among* (inter-region) network regions. Depending upon the network region of the requesting H.323 endpoint or trunk and the network region of the TN2302AP IP Media Processor or TN2602AP IP Media Resource 320 circuit pack:

- If the endpoint and the TN2302AP or TN2602AP are in same region, the administered intra-region codec set is chosen.

- If the endpoint and the TN2302AP or TN2602AP are in different regions, the administered inter-region codec set is chosen.

For example, a region might have its intra-network codec administered as G.711 as the first choice, followed by the other low bit rate codecs. The **Inter Network Region Connection Management** screen for the inter-network region might have G.729 (a low-bit codec that preserves bandwidth) as the only choice. Initially, when a call is set up between these two interconnected regions, the TN2302AP IP Media Processor or TN2602AP IP Media Resource 320 provides the audio stream conversion between G.711 and G.729. When the media stream is shuffled away from a TDM-based connection, the two endpoints can use only the G.729 codec.

Note:

If you are administering an H.323 trunk that uses Teletype for the Deaf (TTD), use the G.711 codec as the primary choice for those trunks. This ensures accurate TTD tone transmission through the connection.

Administering H.323 trunks for hairpinning and shuffling

To administer an H.323 trunk for hairpinning or shuffling

1. At the SAT, type **change signaling group number** and press **Enter** to display the **Signaling Group** screen ([Signaling group screen](#) on page 198).

Signaling group screen

change signaling-group 4		Page 1 of 5
SIGNALING GROUP		
Group Number: 4	Group Type: h.323	
Remote Office?_	Max number of NCA TSC: 5	
SBS?_	Max number of CA TSC: 5	
IP Video? n	Trunk Group for NCA TSC: 44	
Trunk Group for Channel Selection: 44		
TSC Supplementary Service Protocol: a	Network Call Transfer?_	
T303 Timer (sec): 10		
Near-end Node Name: mipsn01A	Far-end Node Name: dr98	
Near-end Listen Port: 1800	Far-end Listen Port: 1800	
	Far-end Network Region:_	
LRQ Required? y	Calls Share IP Signaling Connection? y	
RRQ Required?_		
Media Encryption?_	Bypass If IP Threshold Exceeded? y	
	H.323 Annex H Required?	
DTMF over IP:_	Direct IP-IP Audio Connections? n	
Link Loss Delay Timer(sec): 90	IP Audio Hairpinning? n	
	Interworking Message: PROGRESS	
H.323 Outgoing Direct Media? n	DCP/Analog Bearer Capability: 3.1kHz	

2. To allow shuffled IP calls using a public IP address (default), set the **Direct IP-IP Audio Connections** field to **y**.

To disallow shuffled IP calls set this field to **n**. Be sure that you understand the interactions in [Hairpinning and shuffling administration interdependencies](#) on page 188 and the notes below.

3. To allow hairpinned audio connections, type **y** (yes) in the **IP Audio Hairpinning** field, noting the interactions in [Hairpinning and shuffling administration interdependencies](#) on page 188 and the notes below.
4. Save the changes.

Note:

The hairpinning and shuffling fields on the **Signaling Group** screen do not display unless either the **H.323 Trunks** or **Remote Office** field is set to **y** (yes) on the **Optional Features** (`display system-parameters customer-options`) screen. These features must be enabled in the system's License File.

Note:

If you are administering an H.323 trunk that uses Teletype for the Deaf (TTD), use the G.711 codecs as the primary codec choice for those trunks to ensure accurate TTD tone transmission through the connection.

Administering IP endpoints for hairpinning and shuffling

Whether any given station is allowed to shuffle or hairpin is independently administered per endpoint on the **Station** screen. The specific station types that you can administer for hairpinning or shuffling are:

- All Avaya IP stations
- Other vendors' H.323-compatible stations

To administer an IP endpoint for hairpinning or shuffling

1. At the SAT, type `change station extension` and press **Enter** to display the **Station** screen ([Station screen](#) on page 200)

Station screen

change station 57493		Page 2 of 4
FEATURE OPTIONS		STATION
LWC Reception: spe	Auto Select Any Idle Appearance? n	
LWC Activation? y	Coverage Msg Retrieval? y	
LWC Log External Calls? n	Auto Answer: none	
CDR Privacy? n	Data Restriction? n	
Redirect Notification? y	Idle Appearance Preference? n	
Per Button Ring Control? n	Bridged Idle Line Preference? n	
Bridged Call Alerting? n	Restrict Last Appearance? y	
Active Station Ringing: single		
H.320 Conversion? n	Per Station CPN - Send Calling Number?	
Service Link Mode: as-needed		
Multimedia Mode: basic	Audible Message Waiting? n	
MWI Served User Type:	Display Client Redirection? n	
AUDIX Name:	Select Last Used Appearance? n	
IP Hoteling? n	Coverage After Forwarding? s	
	Multimedia Early Answer? n	
	Direct IP-IP Audio Connections? y	
Emergency Location Ext: 12345	Always use? n IP Audio Hairpinning? n	

- To allow shuffled IP calls using a public IP address (default), set the **Direct IP-IP Audio Connections** field to **y**.

To disallow shuffled IP calls set this field to **n**. Be sure that you understand the interactions in [Hairpinning and shuffling administration interdependencies](#) on page 188 and the notes below.

- To allow hairpinned audio connections, type **y** in the **IP Audio Hairpinning** field, noting the interactions in [Hairpinning and shuffling administration interdependencies](#) on page 188 and the notes below.
- Save the changes.

Note:

The hairpinning and shuffling fields on the **Station** screen do not display unless either the **IP Stations** or **Remote Office** field is set to **y** (yes) on the **Optional Features (display system-parameter customer-options)** screen. These features must be enabled in the system's License File.

Note:

The **Direct IP-IP Audio Connections** field cannot be set to **y** if the **Service Link Mode** field is set to **permanent**.

Contradictory IP station administration

- If an IP station is administered for dual-connect, and if the two extension numbers for that station have differing values administered in their **Direct IP-IP audio Connections** fields, then the station cannot shuffle calls.

- If an IP station is administered for dual-connect, and if the two extension numbers for that station have differing values administered in their **IP-IP Audio Hairpinning** fields, then the station cannot hairpin calls.

IP stations used for call center service-observing

If a Call Center agent is active on a shuffled call, and a Call Center supervisor wants to service-observe the call, the agent might notice the 200 ms break in the speech while the call is redirected to the TDM bus. For this reason, Avaya recommends that you administer the shuffling and hairpinning fields as **n** (no) for stations that are used for service-observing.

Administering IP endpoint signal loss

The amount of loss applied between any two endpoints on a call is administrable. However, the Telecommunications Industry Association (TIA) has published standards for the levels that IP endpoints should use. The IP endpoints will always transmit audio at TIA standard levels, and expect to receive audio at TIA standard levels. If an IP audio signal goes to or comes from the TDM bus through a TN2302AP Media Processor or TN2602AP IP Media Resource 320, the circuit pack adjusts the levels to approximately equal the levels of a signal to or from a DCP set. By default, IP endpoints are the same loss group as DCP sets, Group 2.

Adjusting loss to USA DCP levels

The switch instructs the TN2302AP or TN2602AP circuit pack to insert loss into the signal coming from the IP phone, and insert gain in the signal going to the IP phone, to equal the levels of a signal to or from a DCP set.

Note:

The voice level on a shuffled call is not affected by entries administered in the **2-Party Loss Plan** screen.

Note:

The loss that is applied to a hairpinned or shuffled audio connection is constant for all three connection types: station-to-station, station-to-trunk, and trunk-to-trunk

Administering FAX, modem, TTY, and H.323 clear channel calls over IP Trunks

Communication Manager transports FAX, modem, TTY, and clear channel calls over IP interfaces using relay mode (see [What is relay mode](#) on page 202), pass-through mode (see [What is pass-through mode](#) on page 203), or both. As a result, Communication Manager supports transport of the following:

- Teletypewriter device (TTY) tone relay over the corporate IP intranet and the Internet
- Faxes over a corporate IP intranet

Note:

The path between endpoints for FAX transmissions must use Avaya telecommunications and networking equipment.

Note:

Faxes sent to non-Avaya endpoints cannot be encrypted.

- T.38 FAX over the Internet (including endpoints connected to non-Avaya systems)
- Modem tones over a corporate IP intranet
- Clear channel data calls over IP

The path between endpoints for modem tone transmissions must use Avaya telecommunications and networking equipment.

What is relay mode

In relay mode, the firmware on the device (the G700/G450/G430/G350/G250 media gateway, the MM760 VoIP media module, TN2302AP Media Processor, or TN2602AP IP Media Resource 320) detects the tones of the call (FAX, modem, or TTY) and uses the appropriate modulation protocol (for FAX or modem) or Baudot transport representation (TTY) to terminate or originate the call so that it can be carried over the IP network. The modulation and demodulation for FAX and modem calls reduces bandwidth use over the IP network and improves the reliability of transmission. The correct tones are regenerated before final delivery to the endpoint.

Note:

The number of simultaneous calls that a device (gateway, media module, TN2302AP or TN2602AP) can handle is reduced by the modulation and demodulation that the device must perform for relay mode.

What is pass-through mode

In pass-through mode, the firmware on the device (the G700/G450/G430/G350/G250 media gateway, the MM760 VoIP media module, TN2302AP Media Processor, or TN2602AP IP Media Resource 320) detects the tones of the call (FAX, modem, or TTY) and uses G.711 encoding to carry the call over the IP network. pass-through mode provides higher quality transmission when endpoints in the network are all synchronized to the same clock source. The call is un-encoded before final delivery to the endpoint.

Note:

Though pass-through mode increases the bandwidth usage (per channel), it allows the same number of simultaneous FAX/modem calls on the device as the number of simultaneous voice calls. For example, on a G700 Media Gateway, pass-through allows 64 simultaneous FAX/modem calls instead of only 16 with relay.


Note:

For pass-through mode on modem and TTY calls over an IP network, the sending and receiving servers should have a common synchronization source. Synchronized clocks can be established by using a source on the public network. See [Figure 38: IP network connections over which FAX, modem, and TTY calls are made](#) on page 204.

Note:

You cannot send FAXes in pass-through mode with the T.38 standard.

Figure 38: IP network connections over which FAX, modem, and TTY calls are made

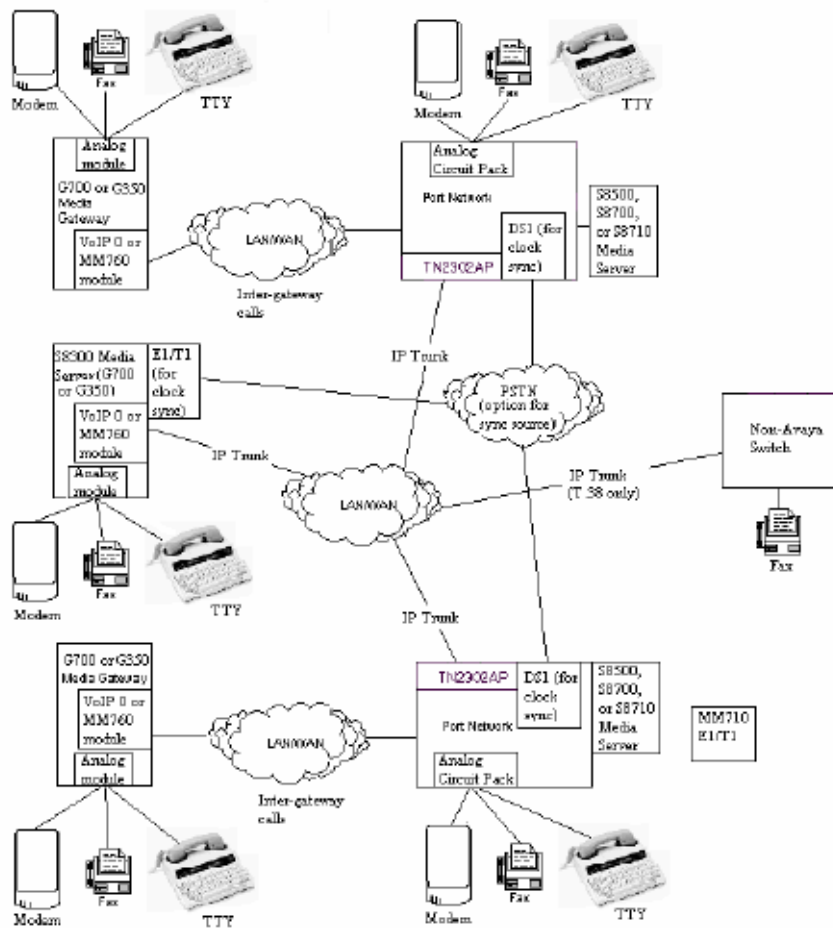

Overview of steps to administer FAX, TTY, modem, and clear channel calls over IP trunks

The information in this section assumes the following:

- The endpoints sending and receiving the calls are connected to a private network that uses H.323 trunking or LAN connections between gateways and/or port networks.
- Calls can either be passed over the public network using ISDN-PRI trunks or passed over an H.323 private network to Communication Manager switches that are similarly enabled.

To administer FAX, TTY, modem, and clear channel calls over IP trunks, first consider the following:

- [FAX, TTY, modem, and clear channel transmission modes and speeds](#) on page 206
- [Considerations for administering FAX, TTY, modem, and clear channel transmission](#) on page 209
- [Bandwidth for FAX, modem, TTY, and clear channel calls over IP networks](#) on page 212
- [Media encryption for FAX, modem, TTY, and clear channel](#) on page 213

After considering the criteria from the preceding list, complete the following tasks:

1. Create one or more IP Codec sets that enable the appropriate transmission modes for the endpoints on your gateways. See [Administering IP CODEC sets](#) on page 230.

Note:

You create the FAX, modem, TTY, and clear channel settings (including redundancy) on the second page of the IP Codec Set screen.

2. Assign each codec set to the appropriate network region. See [Administering IP network regions](#) on page 238.
3. Assign the network region to the appropriate device(s):
 - TN2302AP or TN2602AP (see [Defining IP interfaces \(C-LAN, TN2302AP, or TN2602AP Load Balanced\)](#) on page 154)
 - Avaya G250, G350, G430, G450, or G700 Media Gateway
4. If the TN2302AP or TN2602AP resources are shared among administered network regions, administer inter-network region connections. See [Figure 42: IGAR system parameter](#) on page 256.

FAX, TTY, modem, and clear channel transmission modes and speeds

Communication Manager provides the following methods for supporting FAX, TTY, modem, and clear channel transmission over IP (see [Table 12: FAX, TTY, modem, and clear channel transmission modes and speeds](#) on page 206).

Table 12: FAX, TTY, modem, and clear channel transmission modes and speeds

Mode	Maximum Rate	Comments
T.38 FAX Standard (relay only)	9600 bps	This capability is standards-based and uses IP trunks and H.323 signaling to allow communication with non-Avaya systems. Additionally, the T.38 FAX capability uses the Universal Datagram Protocol (UDP). Note: FAX endpoints served by two different Avaya servers can also send T.38 FAXes to each other if both systems are enabled for T.38 FAX. In this case, the servers also use IP trunks. However, if the T.38 FAX sending and receiving endpoints are on port networks or media gateways that are registered to the same server, the gateways or port networks revert to Avaya FAX relay mode. Both the sending and receiving systems must announce support of T.38 FAX data applications during the H.245 capabilities exchange. Avaya systems announce support of T.38 FAX if the capability is administered on the Codec Set screen for the region and a T.38-capable media processor was chosen for the voice channel. In addition, for a successful FAX transmission, both systems should support the H.245 null capability exchange (shuffling) in order to avoid multiple IP hops in the connection. Note: To use the T.38 FAX capability, modem relay and modem pass-through must be disabled. Additionally, the T.38 FAX capability does not support TCP, FAX relay, or FAX pass-through. You can assign packet redundancy to T.38 standard faxes to improve packet delivery and robustness of FAX transport over the network.

1 of 4

Table 12: FAX, TTY, modem, and clear channel transmission modes and speeds (continued)

Mode	Maximum Rate	Comments
FAX Relay	9600 bps	Because the data packets for faxes in relay mode are sent almost exclusively in one direction, from the sending endpoint to the receiving endpoint, bandwidth use is reduced.
FAX pass-through	V.34 (33.6 kbps)	The transport speed is up to the equivalent of circuit-switched calls and supports G3 and Super G3 FAX rates.  CAUTION: If users are using Super G3 FAX machines as well as modems, do <i>not</i> assign these FAX machines to a network region with an IP Codec set that is modem-enabled as well as FAX-enabled. If its Codec set is enabled for both modem and FAX signaling, a Super G3 FAX machine incorrectly tries to use the modem transmission instead of the FAX transmission. Therefore, assign modem endpoints to a network region that uses a modem-enabled IP Codec set, and assign the Super G3 FAX machines to a network region that uses a FAX-enabled IP Codec set. You can assign packet redundancy in both pass-through and relay mode, which means the media gateways use packet redundancy to improve packet delivery and robustness of FAX transport over the network. pass-through mode uses more network bandwidth than relay mode. Redundancy increases bandwidth usage even more.
TTY Relay	16 kbps	This transport of TTY supports US English TTY (Baudot 45.45) and UK English TTY (Baudot 50). TTY uses RFC 2833 or RFC 2198 style packets to transport TTY characters. Depending on the presence of TTY characters on a call, the transmission toggles between voice mode and TTY mode. The system uses up to 16 kbps of bandwidth, including packet redundancy, when sending TTY characters and normal bandwidth of the audio codec for voice mode.

2 of 4

Table 12: FAX, TTY, modem, and clear channel transmission modes and speeds (continued)

Mode	Maximum Rate	Comments
TTY pass-through	87-110 kbps	In pass-through mode, you can also assign packet redundancy, which means the media gateways send duplicated TTY packets to ensure and improve quality over the network. pass-through mode uses more network bandwidth than relay mode. pass-through TTY uses 87-110 kbps, depending on the packet size, whereas TTY relay uses, at most, the bandwidth of the configured audio codec. Redundancy increases bandwidth usage even more.
Modem Relay	V.32 (9600 bps)	The maximum transmission rate may vary with the version of firmware. The packet size for modem relay is determined by the packet size of the codec selected but is always at least 30ms. Also, each level of packet redundancy, if selected, increases the bandwidth usage linearly (that is, the first level of redundancy doubles the bandwidth usage; the second level of redundancy triples the bandwidth usage, and so on). Note: Modem over IP in relay mode is currently available only for use by specific secure analog telephones that meet the Future Narrowband Digital Terminal (FNBDT) standard. See your sales representative for more information. Additionally, modem relay is limited to V.32/V.32bis data rates.
Modem pass-through	V.34 (33.6 kbps) and V.90/V.92 (43.4 kbps)	Transport speed is dependent on the negotiated rate of the modem endpoints. Though the servers and media gateways support modem signaling at v.34 (33.6 bps) or v.90 and v.92 (43.4 kbps), the modem endpoints may automatically reduce transmission speed to ensure maximum quality of signals. V.90 and V.92 are speeds typically supported by modem endpoints only when directly connected to a service provider Internet service. You can also assign packet redundancy in pass-through mode, which means the media gateways send duplicated modem packets to improve packet delivery and robustness of FAX transport over the network. pass-through mode uses more network bandwidth than relay mode. Redundancy increases bandwidth usage even more. The maximum packet size for modem pass-through is 20 ms.

3 of 4

Table 12: FAX, TTY, modem, and clear channel transmission modes and speeds (continued)

Mode	Maximum Rate	Comments
Clear Channel	64 kbps (unrestricted)	Clear channel mode supports only clear channel data. It does not support analog data transmission functionality such as FAX, modem, TTY, or DTMF signals. It is purely clear channel data. In addition, no support is available for echo cancellation, silence suppression, or conferencing. H.320 video over IP using clear channel is supported, if the port networks or the media gateways have a reliable synchronization source and transport for framing integrity.
4 of 4		

Considerations for administering FAX, TTY, modem, and clear channel transmission

There are a number of factors to consider when configuring your system for FAX, TTY, modem, and clear channel calls over an IP network:

- Encryption

You can encrypt most types of relay and pass-through calls using either the Avaya Encryption Algorithm (AEA) or the Advanced Encryption Standard (AES). See [Media encryption for FAX, modem, TTY, and clear channel](#) on page 213.

- Bandwidth usage

Bandwidth usage of modem relay varies, depending on packet size used and the redundancy level selected. The packet size for modem relay is determined by the packet size of the codec selected. Bandwidth usage of modem pass-through varies depending on the redundancy level and packet size selected. The maximum packet size for modem pass-through is 20 ms.

Bandwidth usage for other modes also varies, depending on the packet size used, whether redundant packets are sent, and whether the relay or pass-through method is used.

See [Table 13: Bandwidth for FAX, modem, and TTY calls over IP networks](#) on page 212 for the bandwidth usage.

- Calls with non-Avaya systems

For FAX calls where one of the communicating endpoints is connected to a non-Avaya communications system, the non-Avaya system and the Avaya system should both have T.38 defined for the associated codecs.

Modem and TTY calls over the IP network *cannot* be successfully sent to non-Avaya systems.

- Differing transmission methods at the sending/receiving endpoints

The transmission method or methods used on both the sending and receiving ends of a FAX/modem/TTY/clear channel call should be the same.

In some cases, a call succeeds even though the transmission method for the sending and receiving endpoints is different. Generally, however, for a call to succeed, the two endpoints must be administered for the same transmission method.

- H.320 Video over IP using Clear Channel

H.320 Video over IP using Clear Channel is supported, if the Port Networks or the Media Gateways involved have reliable individual Synchronization Sources and transport for framing integrity of the channels.

- Hardware requirements

The relay and pass-through capabilities require the following hardware:


- For DEFINITY CSI servers, S8500/S8500B Servers, or S8700-series Servers, certain minimum hardware vintages and firmware versions are required for the TN2302AP or the TN2602AP circuit pack; see the document titled *Avaya Aura™ Communication Manager Minimum Firmware/Hardware Vintages* at <http://www.avaya.com/support>.
- For the G700 and G350 Media Gateways, the respective firmware version 22.14.0, and VoIP firmware Vintage 40 or greater to support Communication Manager 2.2 is required. An MM760 Media Module with firmware Vintage 40 or greater may be used for additional VoIP capacity. Check the latest firmware on the <http://www.avaya.com/support> website.
- For the Avaya S8300/S8300B Servers, the Avaya G250 Media Gateway, and the Multi-Tech MultiVoIP Gateway, the firmware should be updated to the latest available on the <http://www.avaya.com/support> website.
- For T.38 FAX capability, endpoints on other non-Avaya T.38 compliant communications systems may send FAX calls to or receive FAX calls from endpoints on Avaya systems.

- Multiple hops and multiple conversions

If a FAX call must undergo more than one conversion cycle (from TDM protocol to IP protocol and back to TDM protocol), FAX pass-through should be used. If FAX relay mode is used, the call may fail due to delays in processing through more than one conversion cycle. A modem or TTY call may undergo no more than one conversion cycle (from TDM protocol to IP protocol and back to TDM protocol) on the communication path. If multiple conversion cycles occur, the call fails. As a result, both endpoint gateways and any intermediate servers in a path containing multiple hops must support shuffling for a modem or TTY call to succeed.

For example, in [Figure 39: Shuffling for FAX, modem, and TTY calls over IP](#) on page 211, a hop occurs in either direction for calls between port network A and Media Gateway C because the calls are routed through port network D. In this case, shuffling is required on port network A for calls going to Media Gateway C, and shuffling is required on port network D for calls going from Media Gateway C to port network A.

Figure 39: Shuffling for FAX, modem, and TTY calls over IP

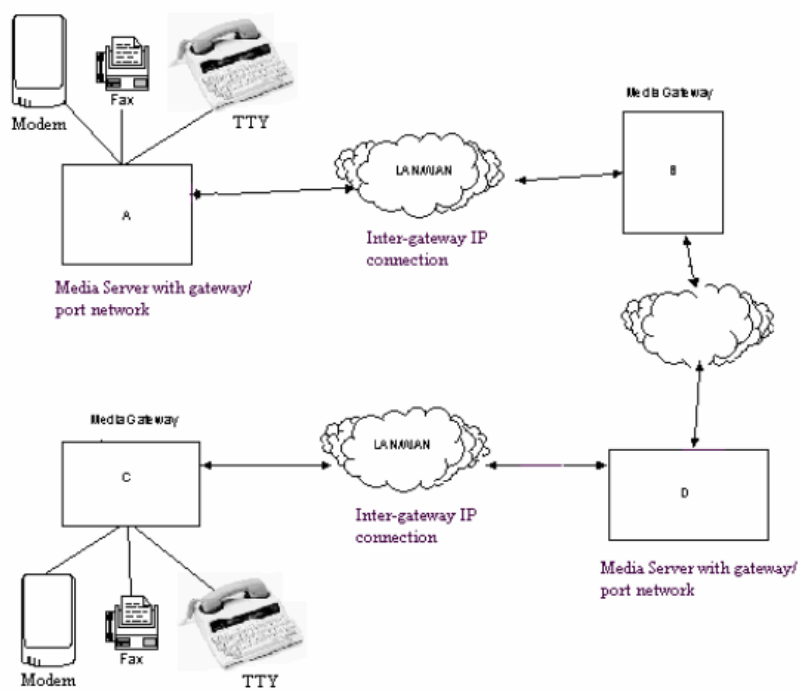

Bandwidth for FAX, modem, TTY, and clear channel calls over IP networks

The following table identifies the bandwidth of FAX, modem, TTY, and clear channel calls based on packet sizes used, redundancy used, and whether the relay or pass-through method is used.

Table 13: Bandwidth for FAX, modem, and TTY calls over IP networks

Packet Size (in msec)	Bandwidth (in kbps) (bidirectional) ¹									
	Redundancy = 0					Redundancy = 1		Red. = 2	Red. = 3	
	TTY at G.711	TTY at G.729	TTY at G.723 ²	FAX Relay ³	Modem Relay at 9600 Baud ⁴	Clear Channel FAX/Modem pass-through ^{5 6}	FAX Relay ^{3 4}	Clear Channel FAX/Modem pass-through	FAX Relay ^{3 4}	FAX Relay ^{3 4}
10	110	54	-	-	-	110	-	221	-	-
20	87	31	-	-	-	87	-	174	-	-
30	79	23	22	25	22.9	-	50	-	75	100
40	76	20	-	-	19.6	-	-	-	-	-
50	73	17	-	-	17.6	-	-	-	-	-
60	72	16	14	-	16.3	-	-	-	-	-

1. TTY, Modem Relay, Modem pass-through and FAX pass-through calls are full duplex. Multiply the mode's bandwidth by 2 to get the network bandwidth usage.

2. TTY at G723 supports packet size 30 and 60 ms.

3. FAX Relay supports packet size 30ms.

4. Non-zero redundancy options increase the bandwidth usage by a linear factor of the bandwidth usage when the redundancy is zero.

5. FAX and Modem pass-through supports packet sizes 10 and 20 ms.

6. Clear Channel transport supports a packet size of 20 ms.

Media encryption for FAX, modem, TTY, and clear channel

If media encryption is configured, the algorithm used during the audio channel setup of the call will be maintained for most FAX relay and pass-through modes. The exception is the T.38 standard for FAX over IP, for which encryption is not used.

Note:

Encrypted calls reduce Digital Signal Processing (DSP) capacity by 25% compared to non-encrypted calls.

Encryption is applicable as shown in the following table.

Table 14: Encryption options

Call Type	AEA	AES	SRTP ¹	Transport
Modem Pass-through	Y	Y	Y	RTP (RFC2198)
Modem Relay	Y	N	N	Proprietary
FAX Pass-through	Y	Y	Y	RTP
FAX Relay	Y	(Y) ²	N	Duplicate Packets
TTY Pass-through	Y	Y	Y	RTP
TTY Relay	Y	Y	Y	RTP
T.38 FAX Standard	(Y) ³	(Y) ³	N	T.38 UDPTL Redundancy
Clear Channel	Y	Y	Y	Clear 64 kbps over RTP

1. See [SRTP media encryption](#) on page 214 for a description of the SRTP encryption protocol.
2. AES encryption in FAX Relay is available only with Avaya equipment (TN2302) with the correct vintages.
3. The T.38 Fax standard does not support encryption. An enhancement of the T.38 standard enables AES and AEA encryption only with Avaya equipment (TN2302) with the correct vintage.

If the audio channel is encrypted, the FAX digital channel is also encrypted except for the limitations described above. AEA-encrypted FAX and modem relay calls that switch back to audio continue to be encrypted using the same key information used at audio call setup.

For the cases of encrypting FAX, modem, and TTY pass-through and TTY relay, the encryption used during audio channel setup is maintained for the call's duration.

The software behaves in the following way for encryption:

1. For FAX, modem, and TTY pass-through and relay, the VoIP firmware encrypts calls as administered on the CODEC set screen. These calls begin in voice, so voip encrypts the voice channel as administered. If the media stream is converted to FAX, modem, or TTY digital, the VoIP firmware automatically disables encryption as appropriate. When the call switches back to audio, VoIP firmware encrypts the stream again.

2. For T.38 FAX, the VoIP firmware encrypts the voice channel as administered on the codec set screen. When the call is converted to FAX, the VoIP firmware automatically turns off encryption. If the call later reverts back to audio, VoIP firmware encrypts the stream again.

SRTP media encryption

Secure Real Time Protocol (SRTP) is a media encryption standard that provides encryption of RTP media streams for SIP and 9600-series IP telephones. SRTP is defined in RFC 3711.

The following SRTP features are supported by Communication Manager, release 4.0 and later:

- Encryption of RTP (optional but recommended)
- Authentication of RTCP streams (mandatory)
- Authentication of RTP streams (optional but recommended)
- Protection against replay

The following SRTP features are currently not supported by Communication Manager:

- Encryption of RTCP streams
- Several automatic rekeying schemes
- Various other options within SRTP which are not expected to be used for VoIP, such as key derivation rates or MKIs

Previous releases of Communication Manager supported AEA and AES media encryption for H.323 calls but no media encryption was available for SIP calls. Starting with release 4.0, SRTP provides encryption and authentication of RTP streams for SIP and provides authentication of RTP and RTCP for SIP and H.323 calls using the 9600-series telephones.

SRTP encryption of FAX and modem relay and T.38 is not supported because they are not transmitted in RTP. For this reason, in the case where an SRTP voice call changes to fax relay, fax will not be encrypted.

SRTP is available only if Media Encryption is enabled in the license file and is activated by IP codec set administration in the same manner as for the other encryption algorithms.

Platforms

The SRTP feature is supported on all Linux-based platforms running Communication Manager and on all versions of SES, regardless of platform, starting with the 4.0 release.

The following gateway platforms also support SRTP:

- TN2602AP Media Resource 320

- MM760
- VoIP Media Modules and on-board VoIP engines (G350 and G250).

Administering SRTP

Administering SRTP encryption is the same as administering AES and AEA encryption.

1. Ensure that media encryption is enabled. The Media Encryption? field must be set to **y** on the Customer Options form.
2. Administer the Media Encryption type on the ip-codec-set form:
Media Encryption field — This field appears only if the **Media Encryption over IP** feature is enabled in the license file. Use this field to specify a priority listing of the three possible options for the negotiation of encryption.
3. Administer the ip-network-region form for SIP options:
Allow SIP URI Conversion? field — Use this field to specify whether a SIP Uniform Resource Identifier (URI) is permitted to change. For example, if "sips://" in the URI is changed to "sip://" then the call would be less secure but this may be necessary to complete the call. If you enter **n** for 'no' URI conversion, then calls made from SIP endpoints that support SRTP to other SIP endpoints that do not support SRTP will fail. Enter **y** to allow conversion of SIP URIs. The default is **y**.
4. You must configure an endpoint (telephone) to use SRTP. For an endpoint, set SRTP as media encryption and TLS as transport.

To enable the SRTP on an endpoint:

- Use 46xxSettings.txt to set MEDIAENCRYPTION "1,9" (Support 1-srtp-aescm128-hmac80 , 9=none as recommended)
- Use 46xxSettings.txt to set SIPSIGNAL 2 (2 to use Transport protocol as TLS)

See [About Media Encryption](#) on page 267 for more information about administering SRTP.

Chapter 5: Voice and Network quality administration

This chapter provides information about:

- improving voice quality by adjusting the voice packet traffic behavior through an IP network, also known as implementing Quality of Service (QoS).
- Network recovery and survivability

The topics covered are:

[About factors causing voice degradation](#) introduces the types of voice degradation and their causes.

[About Quality of Service \(QoS\) and voice quality administration](#) tells you how to administer your Avaya equipment for better voice quality and offers suggestions for other network problems.

[About Media Encryption](#) discusses media encryption capabilities, requirements, and administration in Communication Manager.

[Network recovery and survivability](#) includes information about administering H.248 Link Recovery and the Avaya Policy Manager (APM) and Avaya VoIP Monitoring Manager network monitoring tools.

Note:

Implementing QoS requires administration adjustments to Avaya equipment as well as LAN/WAN equipment (switches, routers, hubs, etc.).

For more information about QoS in Avaya IP Telephony networks, see *Avaya Application Solutions: IP Telephony Deployment Guide*, 555-245-600.

For more information on implementing QoS, see the White Paper, *Avaya IP Voice Quality Network Requirements (LB1500-02)*, at <http://www.avaya.com/master-usa/en-us/resource/assets/whitepapers/lb1500-02.pdf>.

About factors causing voice degradation

VoIP applications put severe constraints on the amount of end-to-end transfer delay of the voice signal and routing. If these constraints are not met, users complain of garbled or degraded voice quality, gaps, and pops. Due to human voice perception, VoIP applications can afford to randomly lose a few voice packets and the user can still understand the conversation. However, if voice packets are delayed or systematically lost, the destination experiences a momentary loss of sound, often with some displeasing artifacts like clicks or pops. Some of the general complaints and their causes are listed in [Table 15: User complaints and their causes](#) on page 218.

Table 15: User complaints and their causes 1 of 2

Complaint	Possible causes and links to information
'Talking over' the far end	• Packet delay and loss • Echo • Network architecture between endpoint and intermediate node • Switching algorithms
Near-end/ far-end hear(s) echo	• Impedance mismatch • Improper coupling • Codec administration
Voice is too soft or too loud	• PSTN loss • Digital loss • Automatic Gain Control • Conference loss plan

1 of 2

Table 15: User complaints and their causes 2 of 2

Complaint	Possible causes and links to information
Clicks, pops, or stutters	● Packet loss ● Timing drift due to clocks ● Jitter ● False DTMF detection ● Silence suppression algorithms
Voice sounds muffled, distorted, or noisy	● Codec administration ● Transducers ● Housings ● Environment ● Analog design
2 of 2	

Some of the factors causing voice degradation are:

- [Packet delay and loss](#)
- [Echo](#)
- [Transcoding](#)
- [Transcoding](#)

Packet delay and loss

The causes of voice degradation include:

- Packet delay (latency)
 - Buffer delays
 - Queuing delays in switches and routers
 - Bandwidth restrictions
- Jitter (statistical average variance in end-to-end packet travel times)
- Packet loss
 - Network overloaded
 - Jitter buffers filled

- Echo

For a detailed discussion of packet delay and loss, see the section on "Voice quality network requirements" in *Avaya Application Solutions: IP Telephony Deployment Guide* (555-245-600).

**Tip:**

Avaya recommends a network assessment that measures and solves latency issues before implementing VoIP solutions. For more information, see *Avaya Application Solutions: IP Telephony Deployment Guide* (555-245-600).

Echo

When you hear your own voice reflected back with a slight delay, this is echo and it happens for the following reasons:

- Electrical -- from unbalanced impedances or cross-talk
- Acoustical -- introduced by speakerphone or room size

The total round-trip time from when a voice packet enters the network to the time it is returned to the originator is echo path delay. In general, calls over a WAN normally have a longer echo path delay compared to calls over a LAN.

Note:

VoIP itself is not a cause of echo. However, significant amounts of delay and/or jitter associated with VoIP can make echo perceptible that would otherwise not be perceived.

Echo cancellers

Echo cancellers minimize echo by comparing the original voice pattern with the received patterns, and canceling the echo if the patterns match. However echo cancellers are not perfect, especially:

- When the round-trip delay from the echo canceller to the echo reflection point and back is longer than the time that the original (non-echoed) signal is buffered in the echo canceller memory. The larger the echo canceller's memory the longer the signal is held in the buffer, maximizing the number of packets that the canceller can compare in the allotted time.
- During Voice Activity Detection (VAD), which monitors the level of the received signal:
 - An energy drop of at least 3dB weaker than the original signal indicates echo.
 - An energy level 3dB greater indicates far-end speech.

Echo cancellers do not work well over analog trunks and with speakerphones with volume controls that permit strong signals. Although VADs can greatly conserve bandwidth, overly-aggressive VADs can cause voice clipping and reduce voice quality. VAD administration is done on the **station** screen for the particular IP phone.

Analog trunks in IP configurations need careful network balance settings to minimize echo. A test tone of known power is sent out and the return signal measured to determine the balance setting, which is critical for reducing echo on IP calls across these trunks.

Echo cancellation plans (TN464HP/TN2464CP circuit packs)

The following summarizes the echo cancellation plans that are available exclusively for the TN464HP/TN2464CP circuit packs. For echo cancellation plans that are available for the TN464GP/TN2464BP circuit packs, see [Echo cancellation plans \(TN464GP/TN2464BP circuit packs\)](#) on page 222.

Echo Cancellation Configuration 1 - TN464HP/TN2464CP

This plan is the recommended choice. It has comfort noise generation and residual echo suppression turned on. During "single talk", background noise and residual echo from the distant station may be suppressed and replaced with comfort noise. The comfort noise substitution reduces the perception of background noise pumping, as observed by the talker. In this plan, the EC direction is assumed chosen to cancel the talker's echo. Since this plan turns on comfort noise and echo suppression, it is similar to EC plans 8 and 9 for the TN464GP/TN2464BP circuit packs.

Echo Cancellation Configuration 2 - TN464HP/TN2464CP

This configuration has comfort noise generation turned off and residual echo suppression turned on. This plan may work well in a quiet background environment. In a noisy background environment, background noise pumping/clipping may be heard by the talker. In this case, EC direction is assumed chosen to cancel the talker's echo. This plan may be a good compromise for a small percent of users, who do not care for the comfort noise and prefer the silence during the residual echo suppression periods. Since the plan turns off comfort noise and turns on residual suppression, it is similar to EC configurations 1-6 for the TN464GP/TN2464BP circuit packs.

Echo Cancellation Configuration 3 - TN464HP/TN2464CP

This configuration has comfort noise generation and residual echo suppression turned off. This configuration can be a good choice only if EC plans 1 and 2 do not satisfy the user's preferences. Situations that require configuration 3 should be very rare. (For example, the user does not care for the sound of comfort noise nor the pumping/clipping of background noise.) This configuration allows the user to hear sound from the earpiece as natural as possible. However, the user may hear residual echo during training periods, or all the time if echo is sufficiently high and residual echo is always present. Convergence may be very slow. Since comfort noise and residual suppression are turned off, this configuration is similar to EC configuration 7 for the TN464GP/TN2464BP circuit packs.

Echo cancellation plans (TN464GP/TN2464BP circuit packs)

Communication Manager supports several echo cancellation (EC) plans for the TN464GP/TN2464BP circuit packs.

Note:

An EC configuration setting can be changed in real time. The change takes effect immediately. That is, it is not necessary to busyout/release the circuit pack – you simply change the setting on the **DS1 Circuit Pack** screen. This can be done without disruption to existing calls - in fact, you immediately hear the effect of the change.



Important:

When there are TN2302AP or TN2602AP circuit pack(s) and TN464GP/TN2464BP circuit pack(s) being used for a call, the echo canceller on the TN2302AP or TN2602AP is turned off and the echo canceller on the TN464GP/TN2464BP is used instead, because it has the greater echo canceller.

The following summarizes the echo cancellation plans that are available for the TN464GP/TN2464BP circuit packs. For echo cancellation plans that are available exclusively for the TN464HP/TN2464CP circuit packs, see [Echo cancellation plans \(TN464HP/TN2464CP circuit packs\)](#) on page 221.

Echo Cancellation Configuration 1 – Highly Aggressive Echo Control

This configuration can control very strong echo from a distant party. It (as well as Echo Cancellation Configuration 4) provides the most rapid convergence in detecting and correcting echo at the beginning of a call. The initial echo fades faster than the other settings (generally in a small fraction of a second), regardless of the loudness of the talker's voice. EC Configurations 1 and 4 are the same except for loss. EC Configuration 1 has 6dB of loss and EC 4 has 0dB of loss. This makes EC Configuration 1 a good choice for consistently high network signal levels. EC Configuration 1 can cause low-volume complaints and/or complaints of clipped speech utterances, particularly when both parties speak simultaneously (doubletalk). Because EC Configuration 1 relies strongly on echo suppression to help control echo, "pumping" of the distant party's background noise may occur and lead to complaints. Prior to Communication Manager Release 2.0, EC Configuration 1 was the default configuration.

The 6dB of loss in EC Configuration 1 is in one direction only and depends on the setting of the **EC Direction** field on the **DS1 Board** screen. If the direction is set to **inward**, then the 6dB of loss is inserted in the path out from the board towards the T1/E1 circuit. Conversely, if the setting is **outward**, then the 6dB of loss is inserted into the path from the T1/E1 circuit towards the TDM bus.

Echo Cancellation Configuration 2 – Aggressive, Stable Echo Control

This configuration is nearly identical to EC Configuration 1, except that it does not inject an additional 6dB of signal loss, *and* convergence of the echo canceller is slower, but more stable than that provided by EC Configuration 1. If EC Configuration 1 is found to diverge during doubletalk conditions – noticeable by the sudden onset of audible echo, EC Configuration 2 should be used in place of EC Configuration 1. Because the echo canceller converges somewhat slower, some initial echo may be noticeable at the start of a call, while the system is "training". EC Configuration 2 can cause complaints of clipped speech utterances, particularly during doubletalk. Because EC Configuration 2 relies strongly on echo suppression to help control echo, "pumping" of the distant party's background noise may occur and lead to complaints.

Echo Cancellation Configuration 3 – Aggressive, Very Stable Echo Control

This configuration is nearly identical to EC Configuration 2, but is even more stable. Because the echo canceller converges somewhat slower, some initial echo may be noticeable at the start of a call. EC Configuration 3 can cause complaints of clipped speech utterances, particularly during doubletalk. Because EC Configuration 3 relies strongly on echo suppression to help control echo, "pumping" of the distant party's background noise may occur and lead to complaints.

Echo Cancellation Configuration 4 – Highly Aggressive Echo Control

Echo Cancellation Configuration 4 is identical to EC Configuration 1, but does not provide the 6dB loss option as described for EC Configuration 1. All other comments from EC Configuration 1 apply to EC Configuration 4. EC Configuration 4 can cause complaints of clipped speech utterances, particularly during doubletalk. Because EC Configuration 4 strongly relies on echo suppression to help control echo, “pumping” of the distant party’s background noise may occur, and lead to complaints.

Echo Cancellation Configuration 5 – Very Moderate, Very Stable Echo Control

Echo Cancellation Configuration 5 departs significantly from EC Configurations 1 –4. The echo canceller is slower to converge and is very stable once it converges. Some initial echo may be heard at the beginning of a call. EC Configuration 5 will not, in general, lead to complaints of clipped speech or pumping of the distant party’s background noise.

Echo Cancellation Configuration 6 – Highly Aggressive Echo Control

Echo Cancellation Configuration 6 is identical to EC Configuration 4, but reliance on the echo suppressor to control echo is about one-half that of EC Configuration 4. As a result, EC Configuration 6 will not clip speech as much as EC Configuration 4, but may cause somewhat more audible echo, particularly at the start of a call. Some pumping of the distant party’s background noise may be perceptible.

Echo Cancellation Configuration 7 – Extremely Moderate & Stable Echo Control

Echo Cancellation Configuration 7 provides very stable and transparent control of weak to low-level echoes. For connections having audible echo at the start of a call, the residual echo may linger for several seconds as the echo canceller converges.

Echo Cancellation Configuration 8 –Aggressive, Very Transparent Echo Control 1

Echo Cancellation Configuration 8 provides aggressive control of echo at the start of a call and more moderate control during the call. Unlike all prior settings, EC Configuration 8 uses “comfort noise” injection to match the actual noise level of the distant party’s speech signal. The effect is one of echo canceller “transparency,” in which complaints of clipped speech or noise pumping should be few to none. To many people, EC Configuration 8 and EC Configuration 9 will be indistinguishable.

Echo Cancellation Configuration 9 – Aggressive, Transparent Echo Control 2

Echo Cancellation Configuration 9 is nearly identical to EC Configuration 8, but provides somewhat more residual echo control at a slight expense of transparency. To many people, EC Configuration 8 and EC Configuration 9 will be indistinguishable.

Transcoding

When IP endpoints are connected through more than one network region, it is important that each region use the same CODEC, the circuitry that converts an audio signal into its digital equivalent and assigns its companding properties. Packet delays occur when different CODECs are used within the same network region. In this case the IP Media Processor acts as a gateway translating the different CODECs, and an IP-direct (shuffled) connection is not possible.

Bandwidth

In converged networks that contain coexistent voice and data traffic, the volume of either type of traffic is unpredictable. For example, transferring a file using the File Transfer Protocol (FTP) can cause a sharp burst in the network traffic. At other times there may be no data in the network.

While most data applications are insensitive to small delays, the recovery of lost and corrupted voice packets poses a significant problem. For example, users might not really be concerned if the reception of E-mail or files from file transfer applications is delayed by a few seconds. In a voice call, the most important expectation is the real-time exchange of speech. To achieve this the network resources are required for the complete duration of the call. If in any instance, there are no resources or the network too busy to carry the voice packets, then the destination experiences clicks, pops and stutters. Therefore, there is a continuous need for a fixed amount of bandwidth during the call to keep it real-time and clear.

About Quality of Service (QoS) and voice quality administration

Of the VoIP network issues described in the [About factors causing voice degradation](#) section, delay is the most crucial. And because many of the other causes are highly interdependent with delay, the primary goal is to reduce delay by improving the routing in the network, or by reducing the processing time within the end points and the intermediate nodes.

For example, when delay is minimized:

- Jitter and electrically-induced echo abate.
- Intermediate node and jitter buffer resources are released making packet loss insignificant.

As packets move faster in the network, the resources at each node are available for the next packet that arrives, and packets will not be dropped because of lack of resources.

Delay cannot be eliminated completely from VoIP applications, because delay includes the inevitable processing time at the endpoints plus the transmission time. However, the delay that is caused due to network congestion or queuing can be minimized by adjusting these Quality of Service (QoS) parameters:

- [Layer 3 QoS](#)
 - [DiffServ](#)
 - [RSVP](#)
- [Layer 2 QoS: 802.1p/Q](#)

These parameters are administered on the **IP Network Region** screen (see [Administering IP network regions](#) on page 238).

Layer 3 QoS

DiffServ

The Differentiated Services Code Point (DSCP) or “DiffServ” is a packet prioritization scheme that uses the Type of Service (ToS) byte in the packet header to indicate the packet’s forwarding class and Per Hop Behaviors (PHBs). After the packets are marked with their forwarding class, the interior routers and gateways use this ToS byte to differentiate the treatment of packets.

A DiffServ policy must be established across the entire IP network, and the DiffServ values used by Communication Manager and by the IP network infrastructure must be the same.

If you have a Service Level Agreement (SLA) with a service provider, the amount of traffic of each class that you can inject into the network is limited by the SLA. The forwarding class is directly encoded as bits in the packet header. After the packets are marked with their forwarding class, the interior nodes (routers & gateways) can use this information to differentiate the treatment of packets.

RSVP

Resources ReSerVation Protocol (RSVP) can be used to lower DiffServ priorities of calls when bandwidth is scarce. The RSVP signaling protocol transmits requests for resource reservations to routers on the path between the sender and the receiver for the voice bearer packets only, not the call setup or call signaling packets.

Layer 2 QoS: 802.1p/Q

802.1p is an Ethernet tagging mechanism that can instruct Ethernet switches to give priority to voice packets.



CAUTION:

If you change 802.1p/Q on the IP Network Region screen, it changes the format of the Ethernet frames. 802.1p/Q settings in Communication Manager must match similar settings in your network elements.

The 802.1p feature is important to the endpoint side of the network since PC-based endpoints must prioritize audio traffic over routine data traffic.

IEEE standard 802.1Q allows you to specify both a virtual LAN (VLAN) and a frame priority at layer 2 for LAN switches or Ethernet switches, which allows for routing based on MAC addresses.

802.1p/Q provides for 8 priority levels and for a large number of Virtual LAN identifiers. Interpretation of the priority is controlled by the Ethernet switch and is usually based on highest priority first. The VLAN identifier permits segregation of traffic within Ethernet switches to reduce traffic on individual links. 802.1p operates on the MAC layer. The switch always sends the QoS parameter values to the IP endpoints. Attempts to change the settings by DHCP or manually are overwritten. The IP endpoints ignore the VLAN on/off options, because turning VLAN on requires that the capabilities be administered on the closet LAN switch nearest the IP endpoint. VLAN tagging can be turned on manually, by DHCP, or by TFTP.

If you have varied 802.1p from LAN segment to LAN segment, then you must administer 802.1p/Q options individually for each network interface. This requires a separate network region for each network interface.

Using VLANs

Virtual Local Area Networks (VLANs) provide security and create smaller broadcast domains by using software to create virtually-separated subnets. The broadcast traffic from a node that is in a VLAN goes to all the nodes that are members of this VLAN. This reduces CPU utilization and increases security by restricting the traffic to a few nodes rather than every node on the LAN.

Any end-system that performs VLAN functions and protocols is “VLAN-aware,” although currently very few end-systems are VLAN-aware. VLAN-unaware switches cannot handle VLAN packets (from VLAN-aware switches), and this is why Avaya’s gateways have VLAN configuration turned off by default.

Avaya strongly recommends creating separate VLANs for VoIP applications. VLAN administration is at two levels:

- Circuit pack-level administration on the **IP-Interfaces** screen (see [Defining IP interfaces \(C-LAN, TN2302AP, or TN2602AP Load Balanced\)](#) on page 154)
- Endpoint-level administration on the **IP Address Mapping** screen

To administer endpoints for IP address mapping

1. Type **change ip-network-map** and press **Enter** to display the IP Address Mapping screen.

change ip-network-map

Page 1 of X

IP ADDRESS MAPPING

FROM IP Address	(TO IP Address	Subnet or Mask)	Region	VLAN	Emergency Location Extension
1. 2. 3. 0	1. 2. 3. 255	24	1	3	
1. 2. 4. 4	1. 2. 4. 4	32	2	0	
1. 2. 4. 5	1. 2. 4. 5		3	0	
1. 2. 4. 6	1. 2. 4. 9		4	4	
. . .	. . .				
. . .	. . .				
. . .	. . .				
. . .	. . .				
. . .	. . .				
. . .	. . .				
. . .	. . .				
. . .	. . .				
. . .	. . .				

2. Complete the following fields:

Table 16: IP Address Mapping screen fields

Field	Conditions/Comments
FROM IP Address	Defines the starting IP address. A 32-bit address (four decimal numbers, each in the range 0-255).
TO IP Address	Defines the termination of the IP address. If this field and the Subnet Mask field are blank when submitted, the address in the From IP Address field is copied into this field. A 32-bit address (four decimal numbers, each in the range 0-255).
or Subnet Mask	Specifies the mask to be used to obtain the subnet work identifier from the IP address. If this field is non-blank on submission, then: - Mask applied to From IP Address field, placing zeros in the non-masked rightmost bits. This becomes the stored "From" address. - Mask applied to To IP Address field, placing 1's in the non-masked rightmost bits. This becomes the stored "To" address. If this field and the To IP Address field are blank when submitted, the address in the From IP Address field is copied into the To IP Address field. Valid entries: 0-32, or blank.
Region	Identifies the network region for the IP address range. Valid entries: 1-250 (Enter the network region number for this interface.)

1 of 2

Table 16: IP Address Mapping screen fields (continued)

Field	Conditions/Comments
VLAN	Sends VLAN instructions to IP endpoints such as IP telephones/IP Softphones. This field does not send instructions to the PROCR, C-LAN, or Media Processor boards. Valid entries: 0-4095 (specifies the virtual LAN value); n (disabled).
Emergency Location Extension	Enter a value of 1-7 digits in length for the emergency location extension. Default is blank. (A blank entry typically would be used for an IP softphone dialing in through PPP from somewhere outside your network.) If the entry on this screen differs from the value entered in the Emergency Location Extension field on the Station screen, then it is the extension entered on this screen that will be sent to the Public Safety Answering Point (PSAP).

2 of 2

3. Submit the screen.

Administering IP CODEC sets

The **IP Codec Set** screen allows you to specify the type of CODEC used for voice encoding and companding, and compression/decompression. The CODECs on the **IP Codec Set** screen are listed in the order of preferred use. A call across a trunk between two systems is set up to use the first common CODEC listed.

Note:

The CODEC order must be administered the same for each system of an H.323 trunk connection. The set of CODECs listed does not have to be the same, but the *order* of the listed CODECs must.

The **IP Codec Set** screen allows you to define the CODECs and packet sizes used by each IP network region. You can also enable or disable silence suppression for each CODEC in the set. The screen dynamically displays the packet size in milliseconds (ms) for each CODEC in the set, based on the number of 10ms-frames you administer per packet.

Finally, you use this screen to assign the following characteristics to a codec set:

- Whether or not endpoints in the assigned network region can route FAX, modem, TTY, or clear channel calls over IP trunks
- Which mode the system uses to route the FAX, modem, TTY, or clear channel calls

- Whether or not redundant packets will be added to the transmission for higher reliability and quality. Note: For pass-through mode, payload redundancy per RFC2198 is used.

These characteristics must be assigned to the codec set, and the codec set must be assigned to a network region for endpoints in that region to be able to use the capabilities established on this screen.



CAUTION:

If users are using Super G3 FAX machines as well as modems, do *not* assign these FAX machines to a network region with an IP Codec set that is modem-enabled as well as FAX-enabled. If its Codec set is enabled for both modem and FAX signaling, a Super G3 FAX machine incorrectly tries to use the modem transmission instead of the FAX transmission.

Therefore, assign modem endpoints to a network region that uses a modem-enabled IP Codec set, and assign the Super G3 FAX machines to a network region that uses a FAX-enabled IP Codec set.

To administer an IP Codec set

1. Type `change ip-codec-set set#` and press **Enter** to open the **IP Codec Set** screen.

IP Codec Set screen, Page 1

change ip-codec-set 1
Page 1 of 2

IP CODEC SET

Codec Set: 1

	Audio Codec	Silence Suppression	Frames per Pkt	Packet Size (ms)
1.	G.711mu	n	2	20
2.	G.729	n	2	20
3.	G.711mu	y	2	20
4.				
5.				
6.				
7.				

Media Encryption:

1: aes
 2: aea
 3: 1-srtp-aescm128-hmac80

2. Complete the fields in [.Figure 17](#)

Note:

Use these *approximate* bandwidth requirements to decide which CODECs to administer. These numbers change with packet size, and include layer 2 overhead. With 20 ms packets the following bandwidth is required:

- G.711 A-law — 85 kbps
- G.711 mu-law — 85 kbps (used in U.S. and Japan)

- G.729 — 30 kbps
- G.729A/B/AB — 30 kbps audio

Table 17: IP Codec Set screen fields, page 1

Field	Conditions/Comments
Audio Codec	Specifies an audio CODEC. Valid values are: • G.711A (a-law) • G.711MU (mu-law) • G.722- 64k • G.722.1- 24k • G.722.1- 32k • G.723- 5.3k • G.723- 6.3k • G.726A- 32k • G.729 • G.729A • G.729B • G.729AB • SIREN14- 24k • SIREN14- 32k • SIREN14- 48k • SIREN14- S48k • SIREN14- S56k • SIREN14- S64k • SIREN14- S96k
Silence Suppression	Enter n (recommended). Enter y if you require silence suppression on the audio stream. This may affect audio quality.
Frames per Pkt	Specifies frames per packet. Enter a value between 1-6. Default values are: • 2 for G.711 Codec (frame size 10ms) • 2 for G.729 Codec (frame size 10ms)

1 of 3

Table 17: IP Codec Set screen fields, page 1 (continued)

Field	Conditions/Comments
Packet Size (ms)	Automatically appears.
2 of 3	

Table 17: IP Codec Set screen fields, page 1 (continued)

Field	Conditions/Comments
Media Encryption	This field appears only if the Media Encryption over IP feature is enabled. It specifies one of three possible options for the negotiation of encryption. The selected option for an IP codec set applies to all codecs defined in that set. Valid entries are: • aes — Advanced Encryption Standard (AES), a standard cryptographic algorithm for use by U.S. government organizations to protect sensitive (unclassified) information. Use this option to encrypt these links: – Server-to-gateway (H.248) – Gateway-to-endpoint (H.323) • aea — Avaya Encryption Algorithm. Use this option as an alternative to AES encryption when: – All endpoints within a network region using this codec set must be encrypted. – All endpoints communicating between two network regions and administered to use this codec set must be encrypted. • SRTP — All of the following 8 SRTP encryption options include authentication of RTCP with a 10- or 4-byte (80- or 32-bit) tag size. Encrypted RTCP is not currently supported. – 1-srtp-aescm128-hmac80 — AES encryption of RTP. Authentication of RTP with a 10-byte (80-bit) tag size. – 2-srtp-aescm128-hmac32 — AES encryption of RTP. Authentication of RTP with a 4-byte (32-bit) tag size. – 3-srtp-aescm128-hmac80-unauth — AES encryption of RTP. No authentication of RTP. – 4-srtp-aescm128-hmac32-unauth — AES encryption of RTP. No authentication of RTP. – 5-srtp-aescm128-hmac80-unenc — No encryption of RTP. Authentication of RTP with a 10-byte (80-bit) tag size. – 6-srtp-aescm128-hmac32-unenc — No encryption of RTP. Authentication of RTP with a 4-byte (32-bit) tag size. – 7-srtp-aescm128-hmac80-unenc-unauth — No encryption or authentication of RTP. – 8-srtp-aescm128-hmac32-unenc-unauth — No encryption or authentication of RTP. • none — Media stream is unencrypted. This is the default setting.

3 of 3

- Press **Next Page** to display page 2 of the screen.

Page 2 appears.

IP-Codec-Set, page 2

change ip-codec-set n		Page 2 of x
IP Codec Set		
Allow Direct-IP Multimedia? y		
Maximum Call Rate for Direct-IP Multimedia: 384:Kbits		
Maximum Call Rate for Priority Direct-IP Multimedia: 384:Kbits		
	Mode	Redundancy
FAX	<u>relay</u>	0
Modem	<u>off</u>	0
TDD/TTY	<u>us</u>	0
Clear-channel	<u>n</u>	0

- Complete the fields as described in the following table.

Table 18: IP Codec Set screen fields, page 2

Field	Conditions/Comments
All Direct-IP Multimedia?	Enter y to allow direct multimedia via the following codecs: ● H.261 ● H.263 ● H.264 (video) ● H.224 H.224.1 (data, far-end camera control).
Maximum Bandwidth Per Call for Direct-IP Multimedia	This field displays only when Allow Direct-IP Multimedia is y . Enter the unit of measure, kbits or mbits , corresponding to the numerical value entered for the bandwidth limitation. Default is kbits

1 of 4

Table 18: IP Codec Set screen fields, page 2 (continued)

Field	Conditions/Comments
FAX Mode	Specifies the mode for fax calls. Valid values are: off Turn off special fax handling when using this codec set. In this case, the fax is treated like an ordinary voice call. This setting could cause transmission errors or dropped calls. The pass-through setting is recommended if the codec set uses codecs other than G.711. For a codec set that uses G.711, this setting is required to send faxes to non-Avaya systems that do not support T.38 fax. relay For users in regions using this codec set, use Avaya relay mode for fax transmissions over IP network facilities. This is the default for new installations and upgrades to Communication Manager R2.1. pass-through For users in regions using this codec set, use pass-through mode for fax transmissions over IP network facilities. This mode uses G.711-like encoding. t.38-standard For users in regions using this codec set, use T.38 standard signaling for fax transmissions over IP network facilities.
2 of 4	

Table 18: IP Codec Set screen fields, page 2 (continued)

Field	Conditions/Comments
Modem Mode	Specifies the mode for modem calls. Valid values are: off Turn off special modem handling when using this codec set. In this case, the modem transmission is treated like an ordinary voice call. This is the default for new installations and upgrades to Communication Manager R2.1. This setting could cause transmission errors or dropped calls. The pass-through setting is recommended if the codec set uses codecs other than G.711. For a codec set that uses G.711, this setting is required to send modem calls to non-Avaya systems. relay For users in regions using this codec set, use relay mode for modem transmissions over IP network facilities. pass-through For users in regions using this codec set, use pass-through mode for modem transmissions over IP network facilities.
TDD/TTY Mode	Specifies the mode for TDD/TTY calls. Valid values are: off Turn off special TTY handling when using this codec set. In this case, the TTY transmission is treated like an ordinary voice call. This setting could cause transmission errors or dropped calls. The pass-through setting is recommended if the codec set uses codecs other than G.711. For a codec set that uses G.711, this setting is required to send TTY calls to non-Avaya systems. US For users in regions using this codec set, use U.S. Baudot 45.45 mode for TTY transmissions over IP network facilities. This is the default for new installations and upgrades to Communication Manager R2.1. UK For users in regions using this codec set, use U.K. Baudot 50 mode for TTY transmissions over IP network facilities. pass-through For users in regions using this codec set, use pass-through mode for TTY transmissions over IP network facilities.

3 of 4

Table 18: IP Codec Set screen fields, page 2 (continued)

Field	Conditions/Comments
Clear Channel	• "y"es allows 64 kbps clear channel data calls for this codec set. • "n"o disallows 64 kbps clear channel data calls for this codec set.
Redundancy	For the call types TTY, fax, or modem that do not use pass-through mode, enter the number of duplicated packets, from 0 to 3, that the system sends with each primary packet in the call. 0 means that you do not want to send duplicated packets. For the clear-channel call type and call types for which you selected the pass-through mode, you can enter either 0 (do not use redundant payloads) or 1 (use redundant payloads).

4 of 4

5. Submit the screen.
6. Type **list ip-codec-set** and press **Enter** to list all CODEC sets on the **CODEC Set** screen.

Codec Sets screen

list ip-codec-set					Page 1 of 1
Codec Sets					
Codec Set	Codec 1	Codec 2	Codec 3	Codec 4	Codec 5
1.	G.711MU	G.729			
2.	G.729B	G.729	G.711MU	G.711A	

7. Review your CODEC sets.

Administering IP network regions

Network regions enable you to group IP endpoints and/or VoIP and signaling resources that share the same characteristics. Signaling resources include Media Processor and C-LAN circuit packs. In this context, *IP endpoint* refers to IP stations, IP trunks, and G150, G250, G350, G430, G450, and G700 Media Gateways. Some of the characteristics that can be defined for these IP endpoints and resources are:

- Audio Parameters
 - Codec Set
 - UDP port Range
 - Enabling Direct IP-IP connections
 - Enabling Hairpinning

- Quality of Service Parameters:
 - Diffserv settings
 - Call Control per-hop behavior (PHB)
 - VoIP Media PHB
 - 802.1p/Q settings
 - Call Control 802.1p priority
 - VoIP Media 802.1p priority
 - VLAN ID
 - Better than Best Effort (BBE) PHB
 - RTCP settings
 - RSVP settings
 - Location
- WAN bandwidth limitations
 - Call Admission control - Bandwidth Limitation (CAC-BL)
 - Inter-Gateway Alternate Routing (IGAR)

For more information on ip-network-region, see *Administering Avaya Aura™ Communication Manager 03-300509*.

The following sections tell you about:

- [Defining an IP network region](#)
- [Setting up Inter-Gateway Alternate Routing \(IGAR\)](#)
- [Setting up Dial Plan Transparency](#)
- [Network Region Wizard \(NRW\)](#)
- [Manually interconnecting the network regions](#)
- [Administering inter-network region connections](#)
- [Pair-wise administration of IGAR between network regions](#)
- [Reviewing the network region administration](#)

Note:

For more information on using network regions, with examples, see the application note *Network Regions for Avaya MultiVantage™ Solutions - A Tutorial*, which is available at: http://www.avaya.com/gcm/master-usa/en-us/resource/assets/applicationnotes/advantages_of_implem.pdf (requires Adobe Reader). For more information on configuring network regions in Communication Manager, see the application note *Avaya Aura™ Communication Manager Network Region Configuration Guide*, which is available at: <http://www.avaya.com/master-usa/en-us/resource/assets/applicationnotes/netw-region-tutorial.pdf> (requires Adobe Reader).

Defining an IP network region



CAUTION:

Never define a network region to span a WAN link.

Avaya strongly recommends that you accept the default values for the following screen.

To define an IP network region

1. Type `change ip-network-region` to open the **IP Network Region** screen.

IP Network Region screen

change ip-network-region 1
page 1 of 19

IP NETWORK REGION

Region: 1
Location:
Name:

Authoritative Domain:

MEDIA PARAMETERS
Codec Set: 1
UDP Port Min: 2048
UDP Port Max: 3049

Intra-region IP-IP Direct Audio: no
Inter-region IP-IP Direct Audio: no
IP Audio Hairpinning? n

DIFFSERV/TOS PARAMETERS
Call Control PHB Value: 46
Audio PHB Value:
Video PHB Value:

Reporting Enabled? y
RTCP MONITOR SERVER PARAMETERS
Use Default Server Parameters?

802.1P/Q PARAMETERS
Call Control 802.1p Priority: 6
Audio 802.1p Priority: 6
Video 802.1p Priority: 7

AUDIO RESOURCE RESERVATION PARAMETERS
RSVP Enabled? y
RSVP Refresh Rate(secs) 15
Retry upon RSVP Failure Enabled? y
RSVP Profile:
RSVP unreserved (BBE) PHB Value: 40

H.323 IP ENDPOINTS
H.323 Link Bounce Recovery? y
Idle Traffic Interval (sec): 20
Keep-Alive Interval (sec): 6
Keep-Alive Count: 5

2. Complete the fields using the information in [Table 19: IP Network Region field descriptions](#) on page 241.

Table 19: IP Network Region field descriptions

Field	Descriptions/Comments
Region	Network Region number, 1–250 .
Location	Blank or 1–250. Enter the number for the location for the IP network region. The IP endpoint uses this as its location number. This applies to IP telephones and IP Softphones. 1-44 (DEFINITY CSI) 1-250 (S8300, S8500, S8700, S8710, S8700-series Servers) blank The location is obtained from the cabinet containing the C-LAN that the endpoint registered through, or the media gateway containing the Internal Call Controller or Local Survivable Processor on an Avaya S8300 Server through which the endpoint registered. This applies to IP telephones and IP Softphones. Traditional cabinets, Remote Offices, and the Avaya S8300 Server all have their locations administered on their corresponding screens.
Name	Describes the region. Enter a character string up to 20 characters.
Home Domain	The network domain of the server.
AUDIO PARAMETERS	
Codec Set	Specifies the CODEC set assigned to a region. Enter a value between 1-7 (default is 1). Note: CODEC sets are administered on the CODEC Set screen (see Administering IP CODEC sets).
UDP Port-Min	Specifies the lowest port number to be used for audio packets. Enter a value between 2-65406 (default is 2048). Note: This number must be twice the number of calls that you want to support plus one, must start with an even number, and must be consecutive. Minimum range is 128 ports.  CAUTION: Avoid the range of “well-known” or IETF-assigned ports. Do not use ports below 1024.
1 of 5	

Table 19: IP Network Region field descriptions (continued)

Field	Descriptions/Comments
UDP Port-Max	Specifies the highest port number to be used for audio packets. Enter a value between 130-65535 (default is 65535).  CAUTION: Avoid the range of well-known or IETF-assigned ports. Do not use ports below 1024.
DIFFSERVE/TOS PARAMETERS	
Call Control PHB Value	The decimal equivalent of the Call Control PHB value. Enter a value between 0-63. • Use PHB 46 for expedited forwarding of packets. • Use PHB 46 for audio for legacy systems that only support IPv4 Type-of-Service, which correlates to the older ToS critical setting. • Use PHB 46 if you have negotiated a Call Control PHB value in your SLA with your Service Provider.
Audio PHB Value	The decimal equivalent of the VoIP Media PHB value. Enter a value between 0-63: • Use PHB 46 for expedited forwarding of packets. • Use PHB 46 for audio for legacy systems that only support IPv4 Type-of-Service, which correlates to the older ToS critical setting.
802.1p/Q PARAMETERS	
Call Control 802.1p Priority	Specifies the 802.1p priority value, and appears only if the 802.1p/Q Enabled field is y . The valid range is 0–7 . Avaya recommends 6 (high). See “Caution” below this table.
Audio 802.1p Priority	Specifies the 802.1p priority value, and appears only if the 802.1p/Q Enabled field is y . The valid range is 0–7 . Avaya recommends 6 (high). See “Caution” below this table.
Video 802.1p Priority	Specifies the Video 802.1p priority value, and appears only if the 802.1p/Q Enabled field is y . The valid range is 0–7 .
H.323 IP ENDPOINTS	
H.323 Link Bounce Recovery	y/n Specifies whether to enable H.323 Link Bounce Recovery feature for this network region.

2 of 5

Table 19: IP Network Region field descriptions (continued)

Field	Descriptions/Comments
Idle Traffic Interval (sec)	5-7200 Enter the maximum traffic idle time in seconds. Default is 20 .
Keep-Alive Interval (sec)	1-120 Specify the interval between KA retransmissions in seconds. Default is 5 .
Keep-Alive Count	1-20 Specify the number of retries if no ACK is received. Default is 5 .
Intra-region IP-IP Direct Audio	y/n Enter y to save on bandwidth resources and improve sound quality of voice over IP transmissions. Enter native (NAT) if the IP address from which audio is to be received for direct IP-to-IP connections within the region is that of the IP telephone/IP Softphone itself (without being translated by NAT). IP phones must be configured behind a NAT device <i>before</i> this entry is enabled. Enter translated (NAT) if the IP address from which audio is to be received for direct IP-to-IP connections within the region is to be the one with which a NAT device replaces the native address. IP phones must be configured behind a NAT device <i>before</i> this entry is enabled.
Inter-region IP-IP Direct Audio	y/n Enter y to save on bandwidth resources and improve sound quality of voice over IP transmissions. Enter translated (NAT) if the IP address from which audio is to be received for direct IP-to-IP connections between regions is to be the one with which a NAT device replaces the native address. IP phones must be configured behind a NAT device <i>before</i> this entry is enabled. Enter native (NAT) if the IP address from which audio is to be received for direct IP-to-IP connections between regions is that of the telephone itself (without being translated by NAT). IP phones must be configured behind a NAT device <i>before</i> this entry is enabled.
IP Audio Hairpinning?	y/n Enter y to allow IP endpoints to be connected through the server's IP circuit pack in IP format, without first going through the Avaya TDM bus.
RTCP Reporting Enabled?	Specifies whether you want to enable RTCP reporting. If this field is set to y , then the RTCP Monitor Server Parameters fields appear.

3 of 5

Table 19: IP Network Region field descriptions (continued)

Field	Descriptions/Comments
RTCP MONITOR SERVER PARAMETERS	
Use Default Server Parameters?	This field only appears when the RTCP Reporting Enabled field is set to y. - Enter y to use the default RTCP Monitor server parameters as defined on the IP Options System Parameters screen. If set to y, you must complete the Default Server IP Address field on the IP Options System Parameters screen (<code>change system-parameters ip-options</code>). - If you enter n, you need to complete the Server IP Address, Server Port, and RTCP Report Period fields.
Server IP Address	This field only appears when the Use Default Server Address field is set to n and the RTCP Enabled field is set to y. Enter the IP address for the RTCP Monitor server in nnn.nnn.nnn.nnn format, where nnn=0-255.
Server Port	This field only appears when the Use Default Server Address field is set to n and the RTCP Enabled field is set to y. Enter the port (1-65535) for the RTCP Monitor server.
RTCP Report Period (secs)	This field only appears when the Use Default Server Address field is set to n and the RTCP Enabled field is set to y. Range of values is 5-30 (seconds).
AUDIO RESOURCE RESERVATION PARAMETERS	
RSVP Enabled?	y/n Specifies whether or not you want to enable RSVP.
RSVP Refresh Rate (sec)	Enter the RSVP refresh rate in seconds (1-99). This field only appears if the RSVP Enabled field is set to y .
Retry upon RSVP Failure Enabled	Specifies whether to enable retries when RSVP fails (y/n). This field only appears if the RSVP Enabled field is set to y .

4 of 5

Table 19: IP Network Region field descriptions (continued)

Field	Descriptions/Comments
RSVP Profile	This field only appears if the RSVP Enabled field is set to y. You set this field to what you have configured on your network ● guaranteed-service places a limit on the end-to-end queuing delay from the sender to the receiver. This is the most appropriate setting for VoIP applications. ● controlled-load (a subset of guaranteed-service) provides for a traffic specifier but not the end-to-end queuing delay.
RSVP unreserved (BBE) PHB Value	Provides scalable service discrimination in the Internet without per-flow state and signaling at every hop. Enter the decimal equivalent of the DiffServ Audio PHB value, 0-63. This field only appears if the RSVP Enabled field is set to y. Note: The "per-flow state and signaling" is RSVP, and when RSVP is not successful, the BBE value is used to discriminate between Best Effort and voice traffic that has attempted to get an RSVP reservation, but failed.

5 of 5**CAUTION:**

If you change 802.1p/Q on the **IP Network Region** screen, it changes the format of the Ethernet frames. 802.1p/Q settings in Communication Manager must match those in all of the interfacing elements in your data network.

3. Press **Enter** to save the changes.

Call Admission Control


Call Admission Control (CAC) is a feature that allows a limit to be set on the bandwidth consumption or number of calls between network regions.

Note:

If SRTP media encryption is used for SIP and H.323 calls, CAC must be adjusted for the additional overhead imposed by the authentication process. SRTP authentication can add 4 (HMAC32) or 10 (HMAC80) bytes to each packet.

The primary use of this feature is to prevent WAN links from being overloaded with too many calls. This is done by setting either a bandwidth limit or a number-of-calls limit between network regions, as follows:

- Bandwidth consumption is calculated using the methodology explained in the *Avaya Application Solutions: IP Telephony Deployment Guide (555-245-600)*.
- The L2 overhead is assumed to be 7 bytes, which is the most common L2 overhead size for WAN protocols.
- The calculated bandwidth consumption is rounded up to the nearest whole number.
- The calculated bandwidth consumption takes into account the actual IP CODEC being used for each individual call. It does not assume that all calls use the same CODEC.
- If the administrator chooses not to have the server calculate the bandwidth consumption, he/she may enter in a manual limit for the number of calls. However, this manually entered limit is adhered to regardless of the codec being used. Therefore, the administrator must be certain that either all calls use the same CODEC, or that the manual limit takes into account the highest possible bandwidth consumption for the specified inter-region CODEC set.
- If a call between two network regions traverses an intervening network region (for example, a call from 1 to 3 actually goes 1 to 2 to 3), then the call server keeps track of the bandwidth consumed across both inter-region connections, that is, both 1 to 2 and 2 to 3.

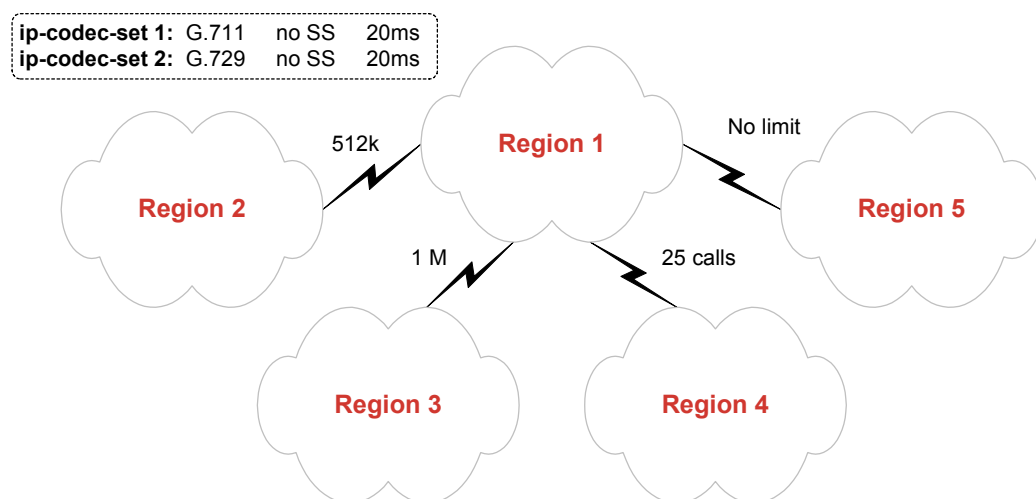

The figure above shows a simple hub-spoke network region topology. The WAN link between network regions 1 and 2 has 512kbps reserved for VoIP. The WAN link between network regions 1 and 3 has 1Mbps reserved for VoIP. The link between network regions 1 and 4 is one where the 7-byte L2 overhead assumption would not hold, such as an MPLS or VPN link. In this case, the administration is such that all inter-region calls terminating in region 4 use the G.729 codec (with no SS at 20ms).

Therefore, it is feasible to set a limit on the number of inter-region calls to region 4, knowing exactly how much bandwidth that CODEC consumes (with the MPLS or VPN overhead added). Finally, the link between network regions 1 and 5 requires no limit, either because there are very few endpoints in region 5 or because there is practically unlimited bandwidth to region 5.

The corresponding **IP Network Region** screens for each network region are shown below.

change ip-network-region 1										Page	3 of 19
Source Region: 1 Inter Network Region Connection Management										I	M
										G	A
										A	G
dst	codec	direct	WAN-BW-limits	Video	Intervening	Dyn		C&C		R	L
rgn	set	WAN	Units	Total Norm	Prio Shr	Regions		CAC			s
1	1									all	
2	3	y	Kbits	2000	1000	0	y			n	
3	1	y	NoLimit							n	
4	1	y	NoLimit							n	
5	4	y	Kbits	4096	1088	0	y			n	
6	1	y	NoLimit							n	
7											
8											
9											
10											
11											
12											
13											
14											
15											

change ip-network-region 2										Page 3 of 19		
Source Region: 2 Inter Network Region Connection Management										I	M	
										G	A	e
dst	codec	direct	WAN-BW-limits		Video		Intervening		Dyn	A	G	a
rgn	set	WAN	Units	Total	Norm	Prio	Shr	Regions	CAC	R	L	s
1	3	y	Kbits	2000	1000	0	y		n			
2	1										all	
3	2	y	NoLimit						n			
4												
5												
6												
7												
8												
9												
10												
11												
12												
13												
14												
15												

change ip-network-region 3 Page 3 of 19

Source Region: 3		Inter Network Region Connection Management										I	M
												G	A
												A	e
dst	codec	direct	WAN-BW-limits		Video		Intervening		Dyn		C&C		R
rgn	set	WAN	Units	Total	Norm	Prio	Shr	Regions				L	s
1	1	y	NoLimit								n		
2	2	y	NoLimit								n		
3	1											all	
4													
5													
6													
7													
8													
9													
10													
11													
12													
13													
14													
15													

change ip-network-region 4										Page 3 of 19		
Source Region: 4		Inter Network Region Connection Management							I	M		
									G	A	e	
dst	codec	direct	WAN-BW-limits		Video	Intervening		Dyn	A	G	a	
rgn	set	WAN	Units	Total	Norm	Prio	Shr	Regions	CAC	R	L	s
1	1	y	NoLimit						n			
2												
3												
4	1									all		
5												
6												
7												
8												
9												
10												
11												
12												
13												
14												
15												

change ip-network-region 5										Page 3 of 19		
Source Region: 5 Inter Network Region Connection Management										I		M
dst	codec	direct	WAN-BW-limits		Video		Intervening		Dyn	G	A	e
rgn	set	WAN	Units	Total	Norm	Prio	Shr	Regions	CAC	R	L	s
1	4	y	Kbits	4096	1088	0	y			n		
2												
3												
4												
5	5										all	
6												
7												
8												
9												
10												
11												
12												
13												
14												
15												

Setting up Inter-Gateway Alternate Routing (IGAR)

Whenever the Communication Manager needs an inter-gateway connection and sufficient IP bandwidth is not available, it attempts to substitute a trunk connection for the IP connection. This happens in any of a large variety of scenarios, including the following examples:

- A party in one Network Region (NR) calls a party in another NR, or
- A station in one NR bridges onto a call appearance of a station in another NR, or
- An incoming trunk in one NR routes to a hunt group with agents in another NR, or
- An announcement or music source from one NR must be played to a party in another NR.

Communication Manager software automatically attempts to use a trunk for inter-region voice bearer connection when *all* of the following five conditions are met:

- An inter-gateway connection is needed.
- IGAR has been “triggered” by one (or more) of the following conditions:
 - The administered bandwidth limit between two NRs has been exhausted, or
 - The VoIP resources between two PN/MGs have been exhausted, or
 - IGAR has been “forced” between two NRs, or
 - The codec set is set to pstn.
- IGAR is enabled for the NRs associated with each end of the call.
- The System Parameter **Enable Inter-Gateway Alternate Routing** is set to ‘y’. See [Figure 42](#).
- The number of trunks used by IGAR in each of the two NRs has not reached the limit administered for that NR.

A Trunk IGC is established using ARS to route a trunk call from one NR to the *IGAR LDN Extension* administered for other NR. Because the Trunk IGC is independent of the actual call being placed, Communication Manager can originate the IGC in either direction — that is, from the calling party’s NR to the NR of the called party, or vice versa. However, because some customers wish to use Facility Restriction Levels or Toll Restriction to determine who gets access to IGAR resources during a WAN outage, the calling user is considered the originator of the Trunk IGC for the purposes of authorization (for example, FRL checking) and routing (for example, determining which Location-specific ARS and Toll tables to use). However, if the outgoing trunk group is administered to send the Calling Number, the *IGAR Extension* in the originating NR is used to create this number using the appropriate administration (performed on the public/unknown or private numbering screen).

The following are examples of certain failure conditions and how Communication Manager handles them:

- On a direct call, the call proceeds to the first coverage point of the unreachable called endpoint, or if no coverage path is assigned, busy tone is played to the calling party.
- If the unreachable endpoint is being accessed through a coverage path, it is skipped.
- If the unreachable endpoint is the next available agent in a hunt group, that agent is considered unavailable, and the system tries to terminate to another agent using the administered group type (Circular, Percent Allocation Distribution, etc.).

Setting up Dial Plan Transparency

Dial Plan Transparency (DPT) preserves the dial plan when a media gateway registers with an LSP or when a port network registers with an ESS due to the loss of contact with the primary controller. In this scenario, DPT establishes a trunk call and reroutes the call over the PSTN to connect endpoints that can no longer connect over the corporate IP network.

DPT does not need to be activated in the license file. DPT is available as a standard feature for Communication Manager Release 4.0 and later.

DPT is similar to IGAR in that they both provide alternate routing of calls when normal connections are not available. A major difference between DPT and IGAR is that DPT routes calls between endpoints controlled by two independent servers while IGAR routes calls between endpoints controlled by a single server. The DPT and IGAR features are independent of each other but can be activated at the same time.

Limitations of DPT include the following:

- DPT only handles IP network connectivity failures *between* network regions.
- Because DPT calls are trunk calls, many station features are not supported.
- For Release 4.0, DPT applies only to endpoints that are dialed directly. Redirected calls or calls to groups cannot be routed by DPT.
- DPT cannot reroute calls involving a SIP endpoint that has lost registration with its Home SES.
- Failover strategies for gateways and port networks, and alternate gatekeeper lists for IP stations, must be kept consistent for DPT to work.

Use the following procedure to administer DPT

1. Enable DPT on the Feature-Related System Parameters screen
 - a. set **Enable Dial Plan Transparency in Survivable Mode** to **y**.
 - b. Set **COR to Use for DPT** to either **station** or **unrestricted**.

If set to **station**, the Facility Restriction Level (FRL) of the calling station determines whether that station is permitted to make a trunk call and if so, which trunks it is eligible to access. If set to **unrestricted**, the first available trunk preference pointed to by ARS routing is used.

Figure 40: Enabling DPT on the System Features screen

Page 5 of x

```

change system -parameters features
                                FEATURE-RELATED SYSTEM PARAMETERS

SYSTEM PRINTER PARAMETERS
  Endpoint: 24099                Lines Per Page: 40

SYSTEM-WIDE PARAMETERS
                                Switch Name: Mercury
                                Emergency Extension Forwarding (min): 4
                                Enable Inter-Gateway alternate Routing? n
                                Enable Dial Plan Transparency in Survivable Mode? y
                                COR to Use for DPT: station

MALICIOUS CALL TRACE PARAMETERS
                                Apply MCT Warning Tone? n    MCT Voice Recorder Trunk Group:
                                Delay SEnding RElease (seconds)? 0

SEND ALL CALLS OPTIONS
                                Send All Calls Applies to: extension  Auto Inspect on Send All Calls? n

UNIVERSAL CALL ID
                                Create Universal Call ID (UCID)? y    UCID Network Node ID: 10

```

2. Enable DPT for the appropriate Network Regions. On page 2 of the IP Network Region screen, set the **Dial Plan Transparency in Survivable Mode** field to **y**.

Figure 41: Enabling DPT on the Network Region screen

Page 2 of 19

```

change ip-network-region 1
                                IP NETWORK REGION

INTER-GATEWAY ALTERNATE ROUTING / DIAL PLAN TRANSPARENCY
  Incoming LDN Extension: 852-3999
  Conversion To Full Public Number - Delete: 0    Insert: +1732_____
  Maximum Number of Trunks To Use for IGAR: 23
  Dial Plan Transparency in Survivable Mode? y

BACKUP SERVERS(IN PRIORITY ORDER)
  1 _____
  2 _____
  3 _____
  4 _____
  5 _____
  6 _____

H.323 SECURITY PROFILES
  1 challenge
  2
  3
  4

  Allow SIP URI Conversion? y

TCP SIGNALING LINK ESTABLISHMENT FOR AVAYA H.323 ENDPOINTS
  Near End Establishes TCP Signaling Socket? n
                                Near End TCP Port Min: 61440
                                Near End TCP Port Max: 61444

```

3. If not already completed for IGAR, allocate on incoming DID / LDN extension for incoming DPT calls. This extension can be shared by IGAR and DPT.
4. As for IGAR, ensure that a sufficient number of trunks are available. You do not need to set the maximum number of trunks for DPT.
5. Use existing routing techniques to ensure that an outgoing DPT call from a given Network Region has access to an outgoing trunk. The outgoing trunk need not be in the same Network Region as the calling endpoint, as long as the endpoint and trunk Network Regions are interconnected.

Network Region Wizard (NRW)

The Avaya Network Region Wizard (NRW) is a browser-based wizard that is available on Avaya Servers running Communication Manager 2.1 or higher software. The NRW supports IGAR along with prior support for CAC and codec set selection for inter-connected region pairs. For any system that has several network regions, the use of the wizard can save time for the software specialist or business partner provisioning the system, as well as help to configure the system for optimum IP performance.

The NRW guides you through the steps required to define network regions and set all necessary parameters through a simplified, task-oriented interface. The purpose of the NRW is to simplify and expedite the provisioning of multiple IP network regions, including Call Admission Control via Bandwidth Limits (CAC-BL) for large distributed single-server systems that have several network regions. The NRW is especially valuable for provisioning systems with dozens or hundreds of network regions, for which administration using the System Access Terminal (SAT) scales poorly.

NRW provisioning tasks include:

- Specification and assignment of codec sets to high-bandwidth (intra-region) LANs and lower-bandwidth (inter-region) WANs
- Configuration of IP network regions, including all intra-region settings, as well as inter-region administration of CAC-BL for inter-region links
- Ongoing network region administration by the customer as well as by Avaya technicians and Business Partners to accommodate changes in the customer network following cutover
- Assignment of VoIP resources (C-LANs, TN2302/TN2602 circuit packs, Media Gateways), and endpoints to IP network regions.

The NRW simplifies and expedites network region provisioning in several ways:

- NRW uses algorithms and heuristics based on graph theory to greatly reduce the repetitive manual entry required by the SAT to configure codecs, and CAC-BL for inter-region links. With the SAT, the number of inter-region links that need to be configured by the user does not scale well; with the NRW, the number of region pairs that require manual administration will increase *linearly* with the number of regions.

- NRW provides templates of widely applicable default values for codec sets and intra-region parameter settings. Users have the ability to customize these templates with their own default values.
- NRW runs on any Internet browser supported by the Avaya Integrated Management (IM) product line, and takes advantage of browser capabilities to offer user-friendly prompting and context-sensitive online help.

The NRW has its own Job Aid and worksheet (one of Avaya's wizard tools that are available from <http://support.avaya.com/avayaiw>), and is a standard IM support tool delivered with every Linux-based Communication Manager system.

Manually interconnecting the network regions

Use the **Enable Inter-Gateway Alternate Routing?** field on the Feature-Related System Parameters screen to enable IGAR on a system-wide basis. Using this parameter, IGAR can be quickly disabled without changing/removing other feature administration associated with IGAR. This parameter is included under the **System-Wide Parameters**, as shown in [Figure 42](#).

Figure 42: IGAR system parameter

change system-parameters features Page 5 of 14

FEATURE-RELATED SYSTEM PARAMETERS

SYSTEM PRINTER PARAMETERS

Endpoint: **SYS_PRNT** Lines Per Page: 60

SYSTEM-WIDE PARAMETERS

Switch Name: Skipper

Emergency Extension Forwarding (min): 10

Enable Inter-Gateway Alternate Routing? **n**

Enable Dial Plan Transparency in Survivable Mode? **y**

COR to Use for DPT: station

MALICIOUS CALL TRACE PARAMETERS

Apply MCT Warning Tone? **y** MCT Voice Recorder Trunk Group: 256

Delay Sending RElease (seconds)? 0

SEND ALL CALLS OPTIONS

Send All Calls Applies to: station Auto Inspect on Send All Calls? **n**

UNIVERSAL CALL ID

Create Universal Call ID (UCID)? **y** UCID Network Node ID: 10040

If TN799DP (C-LAN) and TN2302AP (IP Media Processor) resources are shared between/ among administered network regions, you must define which regions communicate with which other regions and with what CODEC set on the **Inter-Network Region Connection Management** screen (**change/display/status ip-network-region**).

Note:

You cannot connect IP endpoints in different network regions or communicate between/among network regions unless you specify the CODEC set on this screen.

You can also specify for the *Call Admission Control - Bandwidth Limitation* feature:

- Whether regions are directly connected or indirectly connected through intermediate regions.
- Bandwidth limits for IP bearer traffic between two regions using either a maximum bit rate or number of calls.

When a bandwidth limit is reached, additional IP calls between those regions are diverted to other channels or blocked.

Typically, the bandwidth limit is specified as the number of calls when the codec set administered across a WAN link contains a single codec. When the codec set administered across a WAN link contains multiple codecs, the bandwidth limit is usually specified as a bit-rate. For regions connected across a LAN, the normal bandwidth limit setting is **nolimit**.

For more information on using network regions, with examples, see the application note *Network Regions for Avaya MultiVantage™ Solutions - A Tutorial*, which is available at: http://www.avaya.com/gcm/master-usa/en-us/resource/assets/applicationnotes/advantages_of_implement.pdf (requires Adobe Reader). For more information on configuring network regions in Communication Manager, see the application note *Avaya Aura™ Communication Manager Network Region Configuration Guide*, which is available at: <http://www.avaya.com/master-usa/en-us/resource/assets/applicationnotes/netw-region-tutorial.pdf> (requires Adobe Reader). For information on using the Network Region Wizard, see the *Network Region Job Aid*, 14-300283, which is available at <http://www.avaya.com/support>.

Administering inter-network region connections

An **Alternate Routing Extension** field has been added to the second page of the **IP Network Region** screen. This unassigned extension (up to 7 digits long), together with two other fields are required for each network region in order to route the bearer portion of the IGAR call. The following must be performed:

- If IGAR is enabled for any row on pages 3 through 19, then the user shall be:
 - Required to enter an IGAR extension before submitting the screen
 - Blocked from blanking out a previously administered IGAR extension
- If IGAR is disabled by the System Parameter, the customer is warned if any of these fields are updated.

The warning is "WARNING: The IGAR System Parameter is disabled."

Type `change ip-network-region #` and press **Enter** to open the **Inter Network Region Connection Management** screen. Go to Page 2.

Figure 43: Alternate Routing Extension field

change ip-network-region 1
Page 2 of 19

IP NETWORK REGION

INTER-GATEWAY ALTERNATE ROUTING / DIAL PLAN TRANSPARENCY
 Incoming LDN Extension: 852-3999
 Conversion To Full Public Number - Delete: 0 Insert: +1732
 Maximum Number of Trunks To Use for IGAR: 23
 Dial Plan Transparency in Survivable Mode? n

BACKUP SERVERS (IN PRIORITY ORDER)
 1 _____
 2 _____
 3 _____
 4 _____
 5 _____
 6 _____

H.323 SECURITY PROFILES
 1 challenge
 2
 3
 4

 Allow SIP URI Conversion? y

TCP SIGNALING LINK ESTABLISHMENT FOR AVAYA H.323 ENDPOINTS
 Near End Establishes TCP Signaling Socket? n
 Near End TCP Port Min: 61440
 Near End TCP Port Max: 61444

Pair-wise administration of IGAR between network regions

An **IGAR** column has been added to the **IP Network Region** screen to allow pair-wise configuration of IGAR between network regions. If the field is set to “y” the IGAR capability is enabled between the specific network region pair. If it is set to “n” the IGAR capability is disabled between the network region pair.

The following screen validations must be performed:

- If no IGAR Extension is administered on page 2 of the **IP Network Region** screen, the user is blocked from submitting the screen, if any network region pair has IGAR enabled.
- If IGAR is disabled using the System Parameter, the customer will be warned, if IGAR is enabled for any network region pair.

The warning is “WARNING: The IGAR System Parameter is disabled.”

Normally, the administration between Network Region pairs would have a codec set identified for compressing voice across the IP WAN. Only if bandwidth in the IP WAN is exceeded, and the **IGAR** field is set to “y”, would the voice bearer be routed across an alternate trunk facility. However, under some conditions you may wish to force all calls to the PSTN.

The “forced” option can be used during initial installation to verify the alternative PSTN facility selected for a Network Region pair. This option may also be used to move traffic off of the IP WAN temporarily, if an edge router is having problems, or an edge router needs to be replaced between a Network Region pair.

When the codec set type is set to “pstn” the following fields are defaulted:

- **IGAR** field defaults to “y”. Options: f(orced), n(o), y(es).

This field must be defaulted to “y” because the Alternate Trunk Facility is the only means of routing the voice bearer portion of the call.

- When the codec set is set to “pstn” the following fields are hidden:
 - Direct-WAN
 - WAN-BW Limits, and
 - Intervening Regions

When the codec set is not “pstn” and not blank, the **IGAR** field is defaulted to “n”.

A “f(orced)” option is supported in the **IGAR** column in addition to the options “n(o)” and “y(es)”.

Figure 44: Inter network region connection management

change ip-network-region 3 Page 3 of 19

Inter Network Region Connection Management												
src	dst	codec	direct	WAN-BW-limits		Video		Intervening-regions				Dyn
rgn	rgn	set	WAN	Units	Total	Norm	Prio	Shr				CAC
3	1	1	y	256:Kbits								f
3	2	1	n					1				y
3	3	1										n
3	4	1	n					1				n
3	5	1	n					6				y
3	6	1		:NoLimit								y
3	7	1	y	10:Calls								n
3	8	pstn										y
3	9	pstn										y
3	10											
3	11											

Specify CODEC sets for your shared network regions by placing a CODEC set number in the **codec-set** column. Specify the type of inter-region connections and bandwidth limits in the remaining columns.

In the example, network region 3 is directly connected to regions 6, and 7, and is indirectly connected to regions 2 and 4 (through region 1) and 5 (through region 6).

Press **Enter** to save the changes.

Port network to network region mapping for boards other than IP boards

Existing IP Media Processor or Resource Modules, for example, the MedPro, C-LAN, and VAL, have assigned IP network regions. The new mapping from cabinet to IP Network Region does not override this administration.

The critical non-IP boards of interest are the trunk circuit packs over which IGAR calls are routed. When an IP connection between two port network/media gateways (PN/MGs) cannot be established, the system tries to establish an IGAR trunk connection between the two PN/MGs. The system tries to use trunks in the specific PN/MG requested. However, because Communication Manager does not require every PN/MG to have PSTN trunks, it may be necessary to obtain trunks from another PN/MG. The system may only obtain trunks from a PN/MG in the same Network Region as the one in which the original request was made. This means Communication Manager must let customers associate a port network with a Network Region. This can already be done with Media Gateways.

Note:
Cabinets connected through a center stage switch (CSS) are required to be in network region 1.

Figure 45: IP network region field on cabinet screen to map PNs to network regions

display cabinet 1 SPE B

CABINET

CABINET DESCRIPTION

Cabinet: 1

Cabinet Layout: five-carrier

Cabinet Type: processor

Number of Portnetworks: 1

Survivable Remote EPN? n

Location: 1

Cabinet Holdover: A-carrier-only

Room: 1K26

IP Network Region: 1

Floor:

Building: 22

CARRIER DESCRIPTION

Carrier	Carrier Type	Number	Duplicate
C	port	PN 01	
B	processor	PN 01	
A	processor	PN 01	
X	fan		
D	dup-sw-node	SN 01	01E
E	switch-node	SN 01	01D

Status of inter-region usage

You can check the status of bandwidth usage between network regions using:

status ip-network-region *n* or ***n/m***. Using the *n*, the connection status, bandwidth limits, and bandwidth usage is displayed for all regions directly connected to *n*. For regions indirectly connected to *n*, just the connection status is displayed. If regions *n* and *m* are indirectly connected, using ***n/m*** in the command displays the connection status, bandwidth limits, and bandwidth usage, for each intermediate connection.

The IGAR Now/Today column on the **Inter Network Region Bandwidth Status** screen displays the number of times IGAR has been invoked for a network region pair, as shown in [Figure 46](#).

Type **status ip-network-region *n***, and press **Enter** to display the **Inter Network Region Bandwidth Status** screen.

Figure 46: IP network region status screen

```
status ip-network-region 2
```

Inter Network Region Bandwidth Status											
						Number of		# Times			
Src Rgn	Dst Rgn	Conn Type	Conn Stat	BW-Limit	BW-Used (Kbits)	Tx	Rx	Tx	Rx	Hit Today	IGAR Now/Today
2	1	direct	pass	128 Kbits	xxx	xxx	xxx	xxx	xxx	xxx	xxx/ xxx
		Video:	NoLimit		xxx	xxx	xxx	xxx	xxx	xxx	xxx/ xxx
		Priority:	NoLimit		xxx	xxx	xxx	xxx	xxx	xxx	xxx/ xxx
2	3	indirect	pass	NoLimit	xxx	xxx	xxx	xxx	xxx	xxx	xxx/ xxx
		Video:	NoLimit		xxx	xxx	xxx	xxx	xxx	xxx	xxx/ xxx
		Priority:	NoLimit		xxx	xxx	xxx	xxx	xxx	xxx	xxx/ xxx
2	4	indirect	pass	NoLimit	xxx	xxx	xxx	xxx	xxx	xxx	xxx/ xxx
		Video:	NoLimit		xxx	xxx	xxx	xxx	xxx	xxx	xxx/ xxx
		Priority:	NoLimit		xxx	xxx	xxx	xxx	xxx	xxx	xxx/ xxx
2	11	indirect	pass	NoLimit	xxx	xxx	xxx	xxx	xxx	xxx	xxx/ xxx
		Video:	NoLimit		xxx	xxx	xxx	xxx	xxx	xxx	xxx/ xxx
		Priority:	NoLimit		xxx	xxx	xxx	xxx	xxx	xxx	xxx/ xxx

The numbers in the column titled "IGAR Now/Today" have the following meanings:

- The first number (up to 3 digits or 999) displays the number of active IGAR connections for the pair of network regions at the time the command was invoked.
- The second number (up to 3 digits or 999) displays the number of times IGAR has been invoked for the pair of network regions since the previous midnight.

To administer the network region on the Signaling Group screen

Note:

The S8300 Server in LSP mode does not support signaling groups.

1. Type **change signaling-group *group#*** and press **Enter** to display the **Signaling Group** screen.

2. Type the number of the network region that corresponds to this signaling group in the **Far-end Network Region** field. The range of values is: **1-250** (S8300, S8500 or S8700-series servers)
3. Press **Enter** to save the changes.

Reviewing the network region administration

To check the network region administration:

1. Type **list ip-network-region qos** and press **Enter** to display the **IP Network Regions QOS** screen.

list ip-network-region qos										Page 1 of x
IP NETWORK REGIONS QOS										
		---- PHB Values ----				802.1p Priority			RSVP	Refr
Region	Name	Audio	Video	Ctrl	BBE	Audio	Video	Ctrl	Profile	Rate
1	Denver	46	26	34	46	0	5	7	guaranteed	15
2	Cheyenne	19	19	19	46	0	2	1	controlled-load	15

2. Ensure that you have the proper values for each network region and that the regions are interconnected according to your design.
3. Type **list ip-network-region monitor** and press **Enter** to see the **IP Network Regions Monitor** screen, which includes information about the CODEC sets.

list ip-network-region monitor										Page 1 of x
IP NETWORK REGIONS MONITOR										
		RTCP Monitor		Port	Report	Codec	UDP Port Range			
Region	Name	IP Address		Number	Period	Set	Min	Max		
1	Denver	123.123.123.123		5005	5	1	2048	3049		
2	Cheyenne	123.123.123.123		5005	5	1	2048	65535		

4. Ensure that the audio transport parameters are administered according to your design.

Setting network performance thresholds

Note:

The *craft* (or higher) login is required to perform this administration.

Communication Manager gives you control over four IP media packet performance thresholds to help streamline VoIP traffic. You can use the default values for these parameters, or you can change them to fit the needs of your network. These threshold values apply only to IP trunks and do not affect other IP endpoints.

Note:

You cannot administer these parameters unless these conditions are met:

- The **Group Type** field on the **Signaling Group** screen is **h.323** or **sip**.
- The **Bypass If IP Threshold Exceeded** field is set to **y** on the **Signaling Group** screen.

If bypass is activated for a signaling group, ongoing measurements of network activity collected by the system are compared with the values in the **IP-options system-parameters** screen. If the values of these parameters are exceeded by the current measurements, the bypass function terminates further use of the network path associated with the signaling group. The following actions are taken when thresholds are exceeded:

- Existing calls on the IP trunk associated with the signaling group are not maintained.
- Incoming calls are not allowed to arrive at the IP trunks on the bypassed signaling group and are diverted to alternate routes.
- Outgoing calls are blocked on this signaling group.

If so administered, blocked calls are diverted to alternate routes (either IP or circuits) as determined by the administered routing patterns.

Note:

Avaya strongly recommends that you use the default values.

To administer network performance parameters

1. Enter **change system-parameters ip-options** to open the **IP Options System Parameters** screen.

```

change system-parameters ip-options

                                IP-OPTIONS SYSTEM PARAMETERS

IP MEDIA PACKET PERFORMANCE THRESHOLDS
  Roundtrip Propagation Delay (ms)      High: 30          Low: 20
                                Packet Loss (%)      High: 10          Low: 5
                                Ping Test Interval (sec): 10
  Number of Pings Per Measurement Interval: 10

RTCP MONITOR SERVER
  Default Server IP Address: 192.168.15 .210
  Default Server Port: 5005
  Default RTCP Report Period(secs): 5

AUTOMATIC TRACEROUTE ON
  Link Failure? n

H.248 MEDIA GATEWAY                                H.323 IP ENDPOINT
  Link Loss Delay Timer (Min): 5          Link Loss Delay Timer (min): 60
                                           Primary Search Time (sec): 75
                                           Periodic Registration Timer (min): 20
  
```

2. Enter values for the fields suitable for your network needs (defaults shown in the table below).

Field	Conditions/
Roundtrip Propagation Delay (ms)	High: 800 Low: 400
Packet Loss (%)	High: 40 Low: 15
Ping Test Interval (sec)	20
Number of Pings per Measurement Interval	10

3. Press **Enter** to save the changes.

Enabling spanning tree protocol (STP)

Spanning Tree Protocol (STP) is a loop avoidance protocol. If you don't have loops in your network, you don't need STP. The "safe" option is to always leave STP enabled. Failure to do so on a network with a loop (or a network where someone inadvertently plugs the wrong cable into the wrong ports) can lead to a complete cessation of all traffic.

However, STP is slow to converge after a network failure, and slow to allow a new port into the network (~50 sec by default).

A modified version of STP, Rapid Spanning Tree converges faster than the earlier STP, and enables new ports much faster (sub-second) than the older protocol. **Rapid Spanning Tree** works with all Avaya equipment, and is *recommended* by Avaya.

To enable/disable spanning tree

1. Open a telnet session on the P330 stack processor, using the serial cable connected to the Console port of the G700.
2. At the **P330-x(super)#** prompt, type **set spantree help** and press **Enter** to display the set spantree commands selection.

The full set of Spanning Tree commands is displayed in [Figure 47](#).

Figure 47: Set Spantree commands

```
P330-1(super)# set spantree help
Set spantree commands:
-----
set spantree enable          Set spanning tree enable.
set spantree disable        Set spanning tree disable.
set spantree max-age        Set spanning tree bridge max-age.
set spantree hello-time     Set spanning tree bridge hello-time.
set spantree forward-delay  Set spanning tree bridge forward-delay.
set spantree version        Set spanning tree version.
set spantree tx-hold-count   Set spanning tree bridge tx-hold-count.
set spantree priority       Set spanning tree bridge priority
set spantree default-path-cost
                             Set spanning tree default-path-cost.

P330-1(super)# set spantree version help
Set spantree version commands:
-----
Usage: set spantree version <version>
<version> - the version of the spanning tree protocol
            common-spanning-tree - compatible with ieee802.1D standard
            rapid-spanning-tree  - compatible with ieee802.1w standard

P330-1(super)#
```

3. To enable Spanning Tree, type **set spantree enable** and press **Enter**.
4. To set the version of Spanning Tree, type **set spantree version help** and press **Enter**.

The selection of Spanning Tree protocol commands displays (see [Figure 47](#)).

5. To set the **rapid spanning tree** version, type **set spantree version rapid-spanning-tree** and press **Enter**.

The 802.1w standard defines differently the default path cost for a port compared to STP (802.1d). In order to avoid network topology change when migrating to RSTP, the STP path cost is preserved when changing the spanning tree version to RSTP. You can use the default RSTP port cost by typing the CLI command **set port spantree cost auto**.

Note:

Avaya P330s now support a "Faststart" or "Portfast" function, because the 802.1w standard defined it. An edge port is a port that goes to a device that cannot form a network loop.

To set an **edge-port**, type `set port edge admin state module/port edgeport`.

For more information on the Spanning Tree CLI commands, see the *Avaya P330 User's Guide* at <http://www.avaya.com/support>.

Adjusting jitter buffers

Since network packet delay is usually a factor, jitter buffers should be no more than twice the size of the largest statistical variance between packets. The best solution is to have dynamic jitter buffers that change size in response to network conditions. Avaya equipment uses dynamic jitter buffers.

- Check for network congestion
- Bandwidth too small
- Route changes (can interact with network congestion or lack of bandwidth)

Configuring UDP ports

Communication Manager allows users to configure User Datagram Protocol (UDP) port ranges that are used by VoIP packets. Network data equipment uses these port ranges to assign priority throughout the network. Communication Manager can download default values to the endpoint when those values are not provided by the endpoint installer or the user.

About Media Encryption

This section provides information on the use and administration of Communication Manager Media Encryption. Use any of the following links to go to the appropriate section:

- [What is Media Encryption?](#)
- [What are the limitations of Media Encryption?](#)
- [What types of media encryption are available?](#)
- [Is there a license file requirement?](#)
- [Administering Media Encryption](#)
- [How does Media Encryption interact with other features?](#)
- [About legal wiretapping](#)
- [About possible failure conditions](#)

What is Media Encryption?

To provide privacy for media streams that are carried over IP networks, Communication Manager supports encryption for IP bearer channel — voice data transported in Real Time Protocol (RTP) — between any combination of media gateways and IP endpoints.

Digitally encrypting the audio (voice) portion of a VoIP call can reduce the risk of electronic eavesdropping. IP packet monitors, sometimes called sniffers, are to VoIP calls what wiretaps are to circuit-switched (TDM) calls, except that an IP packet monitor can watch for and capture unencrypted IP packets and can play back the conversation in real-time or store it for later playback.

With media encryption enabled, Communication Manager encrypts IP packets before they traverse the IP network. An encrypted conversation sounds like white noise or static when played through an IP monitor. End users do not know that a call is encrypted because there are:

- No visual or audible indicators to indicate that the call is encrypted.
- No appreciable voice quality differences between encrypted calls and non-encrypted calls.

What are the limitations of Media Encryption?



SECURITY ALERT:

Be sure that you understand these important media encryption limitations:

1. Any call that involves a circuit-switched (TDM) endpoint such as a DCP or analog phone is vulnerable to conventional wire-tapping techniques.
2. Any call that involves an IP endpoint or gateway that does not support encryption can be a potential target for IP monitoring. Common examples are IP trunks to 3rd-party vendor switches.
3. Any party that is not encrypting an IP conference call exposes all parties on the IP call between the unencrypted party and its supporting media processor to monitoring, even though the other IP links are encrypting.

What types of media encryption are available?

Avaya Encryption Algorithm (AEA) and Advanced Encryption Standard (AES) are supported by most Avaya IP endpoints. Starting with Communication Manager release 4.0, the Secure Real Time Protocol (SRTP) encryption standard is supported by SIP endpoints and trunks and by the 9600-series telephones.

[Table 20: Media Encryption support](#) lists the telephones and Communication Manager releases that support each type of media encryption.

Table 20: Media Encryption support 1 of 2

	Media Encryption Type		
	AEA	AES	SRTP
Communication Manager release	CM 1.3 and later	CM 2.0 and later	CM 4.0 and later
Avaya IP telephones:			
4601	Y	Y	N
4602	Y	Y	N
4606	Y	N	N
4610SW	Y	Y	N
4612	Y	N	N
4620	Y	Y	N
4620SW / 4621SW / 4622SW / 4625SW / 4630SW	Y	Y	N
4624	Y	N	N
4630	Y	N	N
4690	N	Y	N
1600-series IP telephones	N	Y	N
9600-series IP telephones	N	Y	Y
96xx SIP endpoints	N	N	Y
IP Softphone	Y	Y	N
IP Softphone for Windows Mobile	Y	Y	N
IP SoftConsole	Y	N	N
IP Agent	Y	Y	N
TN2302AP IP Media Processor circuit pack	Y	Y	N
TN2602AP IP Media Resource 320 circuit pack	Y	Y	Y
VoIP elements of H.248 media gateways	Y	Y	Y
Avaya one-X Communicator	N	Y	Y
OSPC	Y	N	N
Avaya 3616 / 3620 / 3626 / 3641 / 3645	N	N	N

Table 20: Media Encryption support 2 of 2

	Media Encryption Type		
	AEA	AES	SRTP
Avaya 3631	N	Y	N
Avaya 16CC (Call Center) SIP Phone	N	N	Y

Is there a license file requirement?

Media Encryption does not work unless the server has a valid license file with Media Encryption enabled. First check the current license file ([Is Media Encryption currently enabled?](#)) and if Media Encryption is not enabled, then you must install a license file with Media Encryption enabled.

Is Media Encryption currently enabled?

To determine whether Media Encryption is enabled in the current License File:

1. At the SAT type **display system-parameters customer-options** and press **Enter** to display the **Optional Features** screen.
2. Scroll to the page with the **Media Encryption Over IP?** field and verify that the value is **y**.

Media encryption field on Optional Features screen

```

display system-parameters customer-options                               Page  4 of  11
                                OPTIONAL FEATURES

Emergency Access to Attendant? y                                     IP Stations? y
  Enable 'dadmin' Login? y
  Enhanced Conferencing? n                                           ISDN Feature Plus? y
    Enhanced EC500? y                                           ISDN/SIP Network Call Redirection? y
Enterprise Survivable Server? n                                     ISDN-BRI Trunks? y
  Enterprise Wide Licensing? n                                     ISDN-PRI? y
    ESS Administration? y                                           Local Survivable Processor? n
      Extended Cvg/Fwd Admin? y                                       Malicious Call Trace? y
        External Device Alarm Admin? y                               Media Encryption Over IP? y
Five Port Networks Max Per MCC? y                               Mode Code for Centralized Voice Mail? y
  Flexible Billing? y
Forced Entry of Account Codes? y                                     Multifrequency Signaling? y
  Global Call Classification? y                                     Multimedia Call Handling (Basic)? n
    Hospitality (Basic)? y                                           Multimedia Call Handling (Enhanced)? n
Hospitality (G3V3 Enhancements)? y                               Multimedia IP SIP Trunking? n
  IP Trunks? y

IP Attendant Consoles?
(Note: You must logoff & login to effect the permission changes)

```

Media Encryption is enabled by default in the U. S. and other countries unless prohibited by export regulations.

Administering Media Encryption

This section contains Communication Manager administration procedures for:

- [Administering Media Encryption for IP Codec Sets](#)
- [Administering Media Encryption for signaling groups](#)

Note:
IP endpoints do not require any encryption administration, and end users do not have to do anything to use media encryption.

Administering Media Encryption for IP Codec Sets

The **IP Codec Set** screen enables you to administer the type of media encryption, if any, for each codec set.

Note:
See [Table 17: IP Codec Set screen fields, page 1](#) on page 232 for a description of the fields on the IP Codec Set screen.

To administer media encryption on an IP codec set:

1. At the SAT type **change ip-codec-set *number*** and press **Enter** to display the **IP Codec Set** screen.

Media Encryption field on the IP Codec Set screen

change ip-codec-set 7

Page1 of 2

IP Codec Set

Codec Set: 7

Audio Codec	Silence Suppression	Frames Per Pkt	Packet Size (ms)
1: G.711MU	n	2	20
2: G.729B_	n	1	10
3: _____	—	—	—
4: _____	—	—	—
5: _____	—	—	—
6: _____	—	—	—
7: _____	—	—	—

Media Encryption:
1: 1-srtp-aescm128-hmac80
2: aes
3: aea

2. Enter up to three media encryption types listed in [Table 21: Media Encryption Field Values \(IP Codec Set\)](#) on page 273:

Note:

The option that you select for the **Media Encryption** field for each codec set applies to all codecs defined in that set.

Note:

This field is hidden if the **Media Encryption Over IP?** field on the **Customer Options** screen ([Media encryption field on Optional Features screen](#) on page 271) is *n*. The **Media Encryption** field appears only if the **Media Encryption over IP** feature is enabled in the license file (and displays as *y* on the **Customer Options** screen).

The **Media Encryption** field specifies one, two, or three options for the negotiation of encryption — in this example, one of the modes of **SRTP**, **aes**, and **aea**. You can specify no encryption by entering **none** in the **Media Encryption** field. The order in which the options are listed signifies the preference of use, similar to the list of codecs in a codec set. Two endpoints must support at least one common encryption option for a call to be completed between them.

The selected options for an IP codec set applies to all codecs defined in that set.

Table 21: Media Encryption Field Values (IP Codec Set)

Valid entries	Usage
aes	Advanced Encryption Standard (AES), a standard cryptographic algorithm for use by U.S. government organizations to protect sensitive (unclassified) information. AES reduces circuit-switched-to-IP call capacity by 25%.
aea	Avaya Encryption Algorithm. AEA is not as secure an algorithm as AES but call capacity reduction with AEA is negligible. Use this option as an alternative to AES encryption when: • All endpoints within a network region using this codec set must be encrypted. • All endpoints communicating between two network regions and administered to use this codec set must be encrypted.
SRTP — several encryption modes	SRTP provides encryption and authentication of RTP streams for calls between SIP-SIP endpoints, H.323-H.323 endpoints, and SIP-H.323 endpoints. SIP endpoints cannot use AEA or AES encryption. See Table 17: IP Codec Set screen fields, page 1 on page 232 for a list of SRTP encryption modes.
none	Media stream is unencrypted. This option prevents encryption when using this codec set and is the default setting when Media Encryption is not enabled.

Note:

The initial default value for this field is *none* when the **Media Encryption Over IP?** field in the **Optional Features** screen (on the **Customer Options** screen) is enabled (*y*) for the first time. If this field is *n*, the **Media Encryption** field on the **IP Codec Set** screen is hidden and functions as if *none* was selected.

Administering Media Encryption for signaling groups

To administer Media Encryption for an IP signaling group:

1. At the SAT type change **signaling-group number** to display the **Signaling Group** screen

Media encryption and passphrase fields for signaling groups

change signaling-group 1		Page 1 of 5
SIGNALING GROUP		
Group Number: 1	Group Type: h.323	
Remote Office? n		Max number of NCA TSC: 0
SBS? n		Max number of CA TSC: 0
		Trunk Group for NCA TSC:
Trunk Group for Channel Selection:		
Supplementary Service Protocol: a		
T303 Timer (sec): 10		
Near-end Node Name:	Far-end Node Name:	
Near-end Listen Port: 1720	Far-end Listen Port:	
	Far-end Network Region:	
LRQ Required? n	Calls Share IP Signaling Connection? n	
RRQ Required? n		
Media Encryption? y	Bypass If IP Threshold Exceeded? n	
Passphrase:	H.235 Annex H Required? n	
DTMF over IP: out of band	Direct IP-IP Audio Connections? y	
Link Loss Delay Timer(sec): 90	IP Audio Hairpinning? n	
	Interworking Message: PROGRESS	
H.323 Outgoing Direct Media? n	DCP/Analog Bearer Capability: 3.1kHz	

2. Enter *y* in the **Media Encryption?** field to enable Media Encryption on trunk calls using this signaling group.

Note:

Leaving this field in the default state (**n**) overrides the encryption administration on the IP Codec Set screen ([Media Encryption field on the IP Codec Set screen](#) on page 272) for any trunk call using this signaling group. That is, if the IP codec set that is used between two networks is administered as **aes** or **aea** ([Table 21: Media Encryption Field Values \(IP Codec Set\)](#) on page 273), then a call between two endpoints over a H.323 trunk using this IP codec set fails because there is no voice path.

This field does not display if the **Media Encryption Over IP?** field is *n* on the **Customer Options** screen ([Media encryption field on Optional Features screen](#) on page 271).

3. Type an 8- to 30-character string in the **Passphrase** field.

This string:

- Must contain at least 1 alphabetic and 1 numeric symbol
- Can include letters, numerals, and !&*?;'^(),.-
- Is case-sensitive

You must administer *the same passphrase* on both signaling group forms at each end of the IP trunk connection. For example, if you have two systems A and B with trunk A-B between them, you must administer both Signaling Group forms with *exactly the same passphrase* for the A-to-B trunk connection.

If you have previously administered a passphrase, a single asterisk (*) appears in this field. If you have not administered a passphrase, the field is blank.

Note:

The **Passphrase** field does not appear if either the:

- **Media Encryption Over IP?** field on the **Customer Options** screen ([Media encryption field on Optional Features screen](#) on page 271) is *n*.
- or
- **Media Encryption?** field on the **Signaling Group** screen ([Media encryption and passphrase fields for signaling groups](#) on page 274) is *n*.

Viewing encryption status for stations and trunks

The current status of encryption usage by stations and trunks can be viewed using the **status station** and **status trunk** commands.

To check media encryption usage for a station, enter **status station <extension>**, and go to the **Connected Ports** page.

Connected ports screen

```
status station 60042                                     Page 6 of 7

                                SRC PORT TO DEST PORT TALKPATH

src port: s00001
S00001:TX:172.22.21.178:2976/g711u/20ms/1-srtp-aescm128-hmac80
S00001:TX:172.22.21.178:36226/g711u/20ms/1-srtp-aescm128-hmac80
```

This screen shows that a port is currently connected and using a G711 codec with SRTP media encryption.

To check media encryption usage for a trunk, enter **status trunk <group/member>**.

A display screen similar to the status station screen shows the trunk information.

About legal wiretapping

If you receive a court order requiring you to provide law enforcement access to certain calls placed to or from an IP endpoint, you can administer Service Observing permissions to a selected target endpoint (see [Service Observing](#) in [Table 22: Media Encryption interactions](#) on page 277). Place the observer and the target endpoint in a unique Class of Restriction (COR) with *exactly the same properties and calling permissions* as the original COR, otherwise the target user might be aware of the change.

About possible failure conditions

Using Media Encryption in combination with an administered security policy might lead to blocked calls or call reconfigurations because of restricted media capabilities. For example, if the IP codec set that is used between two network regions is administered as **aes** or **aea**, and if a call between two endpoints (one in each region) that do not support at least one common encryption option is set up, then there is no voice path.

How does Media Encryption interact with other features?

Media Encryption does not affect most Communication Manager features or adjuncts, except for those listed in [Table 22: Media Encryption interactions](#) on page 277.

Table 22: Media Encryption interactions

Interaction	Description
Service Observing	You can Service Observe a conversation between encrypted endpoints. The conversation remains encrypted to all outside parties except the communicants and the observer.
Voice Messaging	Any call from an encryption-enabled endpoint is decrypted before it is sent to a voice messaging system. When the TN2302AP IP Media Processor circuit pack receives the encrypted voice stream, it decrypts the packets before sending them to the voice messaging system, which then stores the packets in unencrypted mode.
Hairpinning	Hairpinning is not supported when one or both media streams are encrypted, and Communication Manager does not request hairpinning on these encrypted connections.
VPN	Media encryption complements virtual private network (VPN) security mechanisms. Encrypted voice packets can pass through VPN tunnels, essentially double-encrypting the conversation for the VPN “leg” of the call path.
H.323 trunks	Media Encryption behavior on a call varies based on these conditions at call set up: • Whether shuffled audio connections are permitted • Whether the call is an inter-region call • Whether IP trunk calling is encrypted or not • Whether the IP endpoint supports encryption • The media encryption setting for the affected IP codec sets These conditions also affect the codec set that is available for negotiation each time a call is set up. T.38 packets may be carried on an H.323 trunk that is encrypted; however the T.38 packet is sent in the clear.

Network recovery and survivability

This covers the following topics:

- [About network management](#)
- [About H.248 link loss recovery](#)
- [Administrable IPSI Socket Sanity Timeout](#)
- [Enterprise Survivable Servers \(ESS\)](#)
- [Controlling QoS policies](#)
- [Monitoring network performance](#)

About network management

Network management is the practice of using specialized software tools to monitor and maintain network components. Proper network management is a key component to the high availability of data networks.

The two basic network management models are:

- Distributed. Specialized, nonintegrated tools to manage discrete components.
- Centralized. Integrated network management tools and organizations for a more coherent management strategy.

Two integrated management tools, Avaya VoIP Monitoring Manager and Avaya Policy Manager are briefly described in this section.

For a detailed discussion of Avaya's network management products, common third-party tools, and the distributed and centralized management models, see *Avaya Application Solutions: IP Telephony Deployment Guide* (555-245-600).

Monitoring network performance

The Avaya VoIP Monitoring Manager, a VoIP Network Quality monitoring tool, allows you to monitor these quality-affecting network factors:

- Jitter levels
- Packet loss
- Delay
- CODECs used
- RSVP status

Controlling QoS policies

Avaya Policy Manager is a network management tool that allows you to control Quality of Service (QoS) policies in your IP voice network consistently:

- Avaya Policy Manager helps you implement QoS policies consistently for both the data and the voice networks.
- QoS policies are assigned according to network regions and are distributed through the Enterprise Directory Gateway to your systems and to routers and switching devices.

[Figure 48](#) illustrates how Avaya Policy Manager works.

Figure 48: Avaya Policy Manager application sequence

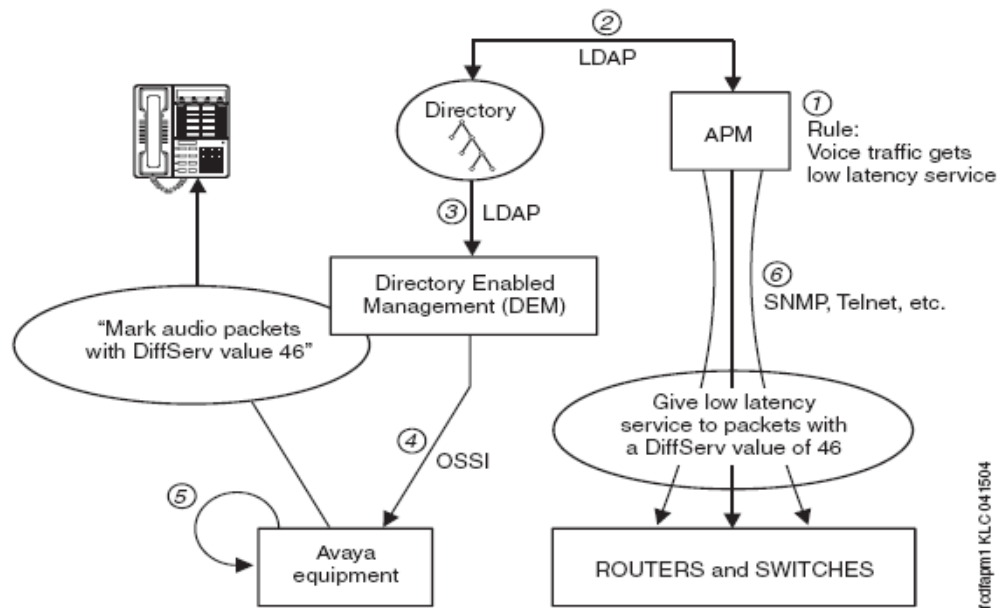


Figure notes:

1. Business rule established in Avaya Policy Manager
2. Avaya Policy Manager uses LDAP to update Communication Manager
3. Directory Enabled Management (DEM) identifies the change in the directory.
4. EDG updates Communication Manager administration through the Ethernet switch
5. Communication Manager tells the Media Processor, C-LAN, and IP Phones to mark audio packets with DSCP=46.
6. Avaya Policy Manager distributes policy information to other network devices, including low latency service for DiffServ value of 46.

Figure notes:

1. Business rule established in Avaya Policy Manager
2. Avaya Policy Manager uses LDAP to update Communication Manager
3. Directory Enabled Management (DEM) identifies the change in the directory.
4. EDG updates Communication Manager administration through the Ethernet switch
5. Communication Manager tells the Media Processor, C-LAN, and IP Phones to mark audio packets with DSCP=46.
6. Avaya Policy Manager distributes policy information to other network devices, including low latency service for DiffServ value of 46.

For more information about Avaya Policy Manager, see your Avaya representative.

About H.248 link loss recovery

H.248 Link Loss Recovery is an automated way in which the media gateway reacquires the H.248 link when it is lost from either a primary call controller or an LSP. The H.248 link between a server running Communication Manager and a media gateway, and the H.323 link between a media gateway and an H.323-compliant IP endpoint, provide the signaling protocol for:

- Call setup
- Call control (user actions such as Hold, Conference, or Transfer) while the call is in progress
- Call tear-down

If the link goes down, Link Recovery preserves any existing calls and attempts to re-establish the original link. If the gateway/endpoint cannot reconnect to the original server/gateway, then Link Recovery automatically attempts to connect with alternate TN799DP (C-LAN) circuit packs within the original server's configuration or to a Local Survivable Processor (LSP).

Overlap with the Auto Fallback to Primary feature occurs when the Link Loss Recovery starts while the media gateway is trying to migrate back to the primary, with its new registration message indicating that service is being obtained from elsewhere.

A race condition may exist in which there is an outstanding media gateway registration to the primary while the link to the LSP is lost. The media gateway awaits a denial or acceptance from the primary call controller. If it is an acceptance, then the Link Loss Recovery is terminated, and the media gateway is serviced by the primary call controller. If it is a denial, then the media gateway immediately sends a new registration to the primary call controller indicating no service, and the existing H.248 Link Loss Recovery feature takes over.

These features are similar in that they both attempt to return service to the primary call controller; however, Link Loss Recovery does it based upon a link failure, whereas auto fallback to primary does it based upon a working fragmented network.

Auto fallback to primary controller for H.248 media gateways

The intent of the auto fallback to primary controller feature is to return a fragmented network, in which a number of H.248 Media Gateways are being serviced by one or more LSPs (Local Survivable Processors), to the primary server in an automatic fashion. This feature is targeted towards all H.248 media gateways. By migrating the media gateways back to the primary automatically, the distributed telephony switch network can be made whole sooner without human intervention.

The auto-fallback migration, in combination with the connection preservation feature for H.248 gateways is connection-preserving. Stable connections are preserved; unstable connections (such as ringing calls) are not. There still may be a very short interval without dialtone for new calls.

The media gateway presents a new registration parameter that indicates that Service is being obtained from an LSP, and indicates the number of active user calls on the media gateway platform. The server administers each media gateway to have its own set of rules for Time of Day migration, enable/disable, and the setting of call threshold rules for migration.

This feature allows the administrator to define any of the following rules for migration:

- The media gateway should migrate to the primary automatically, or not.
- The media gateway should migrate immediately when possible, regardless of active call count.
- The media gateway should only migrate if the active call count is 0.
- The media gateway should only be allowed to migrate within a window of opportunity, by providing day of the week and time intervals per day. This option does not take call count into consideration.
- The media gateway should be migrated within a window of opportunity by providing day of the week and time of day, *or immediately* if the call count reaches 0. Both rules are active at the same time.

Internally, the primary call controller gives priority to registration requests from those media gateways that are currently not being serviced by an LSP. This priority is not administrable.

There are several reasons for denying an auto-fallback, which can result from general system performance requirements, or from administrator-imposed requirements. General system performance requirements can include denial of registration because:

- Too many simultaneous media gateway registration requests

Administrator-imposed requirements for denial of a registration can include:

- Registrations restricted to a windowed time of day
- Migration restricted to a condition of 0 active calls, that is, there are no users on calls within the media gateway in question.
- The administered minimum time for network stability has not been exceeded.

Other characteristics of this feature include:

- This feature does not preclude an older GW firmware release from working with Communication Manager 3.0 or vice versa; however, the auto-fallback feature would not be available.

For this feature to work, the call controller is required to have Communication Manager 3.0, while the media gateway is required to have the GW firmware available at the time of the Communication Manager 3.0 release.

- Existing H.248 media gateways are the targets.
- LSP operation is completely unaffected.

The LSP simply sees that a particular media gateway has lost its connection with the LSP. The existing H.248 Link Loss Recovery algorithm on the LSP cleans up all outstanding call records within the LSP after the prescribed time interval.

Basic feature operation

The following steps illustrate the basic operation of the auto-fallback to primary for H.248 media gateways feature. While not exactly so, the steps are approximately sequential.

1. The media gateway/server *by default* has this feature disabled.

If the media gateway is initially registered with an older server, the version information exchange is sufficient for the media gateway to know not to attempt to fallback to the primary automatically.

2. By means of administration on the server, this feature can be enabled for any or all media gateways controlled by that server.

The *enable/disable* administration on the server determines whether the server will *accept/deny* registration requests containing the new parameter that service is being obtained from an LSP. The media gateway continuously attempts to register with the server, however, even if the server has been administered never to accept the registration request (that is, the auto-fallback feature is disabled on the server). In such a case, a manual return of the media gateway is required, which generates a different registration message that is accepted by the server.

Note:

There is still value in receiving the registration messages when auto-fallback is disabled on the server, and that value is to see the stability of the network over time, since those messages act as "keep-alive" messages.

3. The permission-based rules that include time of day and context information are only known to the server.

There is no need for the LSP to have any of these translations.

4. When associated with a primary controller running Communication Manager 3.0, the media gateway attempts to register with the primary controller whenever it is connected to an LSP.

This registration attempt happens every 30 seconds, once the media gateway is able to communicate with the primary controller. The registration message contains an element that indicates:

- that the media gateway is being serviced by an LSP, and
- the number of active user calls on that media gateway.

5. Upon the initial registration request, the primary controller initializes the encrypted TCP link for H.248 messaging.

This is performed regardless of whether that initial registration is honored or not, and that encryption is maintained throughout the life of the registration requests. The encryption is also maintained once a registration is accepted by the primary controller. Encryption of the signaling link is performed at the outset during this automatic fallback process to ensure the security of the communication between the primary call controller and the media gateway.

6. The primary controller, based upon its administered rules, may allow or deny a registration. If the primary controller gets a registration message without Service State information, for example, an older media gateway, or if a new media gateway states it does not have service, then the primary honors those registration requests above all others immediately.
7. If the registration is denied, the media gateway continues to send the registration message every 30 seconds, which acts as a *de facto* "keep-alive" message.
8. The media gateway constantly monitors the call count on its platform, and asynchronously sends a registration message whenever 0 context is achieved.
9. Once the registration message is accepted by the primary, then the H.248 link to the LSP is dropped.

G250 interworking

When calls are made on the media gateway while it is controlled by Standard Local Survivability (SLS), the G250, G350, G430 and G450 behave as any LSP might behave. The SLS, using its administration and dial analysis plan, can allow local calls to be established from:

- Local station to local station (analog or registered IP)
- Local station to local analog two-way CO trunks

While operating in SLS mode, the G250 attempts to re-register with the primary controller on its MGC list. As soon as the gateway is able to re-register with the primary controller, it un-registers with SLS, and re-registers with the primary controller. In terms of re-registration with the primary controller, the Auto Fallback to Primary feature would therefore work in a similar way with the G250 SLS as it does with the LSPs in the G350 or G700.

Note:

The connection preserving aspects of this feature will not be available on the G250 for this release.

G350 interworking

The G350 firmware loads use the Object Identifier (OID) that has the longer Non-Standard Data format in the registration message. This format is only backward compatible to Communication Manager 2.0 loads. Older loads respond with a protocol error as the denial cause for the rejection of the new registration message. Given that the G350 was only introduced in the Communication Manager 2.0 timeframe, it is not backwards compatible with previous Communication Manager releases.

In a startup scenario, there is an exchange of version information between Communication Manager and the media gateway. If the Communication Manager load is pre-Communication Manager 3.0, then the auto-fallback mechanism remains disabled for the media gateway. Any subsequent registration with a primary controller (from the MGC list) that is running release Communication Manager 3.0 results in the auto fall-back feature being enabled for the media gateway.

The only time when the media gateway may send a registration message to an older primary call controller is in the rare case when the primary controller has been downgraded while the media gateway has been receiving service from an LSP. In this case, the media gateway receives a protocol error that can be used to send a registration message consistent with Communication Manager 2.0. Downgrading to earlier than Communication Manager 2.0 with a G350 would result in the G350 not being able to register at all.

G700 interworking

The G700 Media Gateway, even in Communication Manager 2.0, still used the same OID as when it was originally deployed. The OID available for the G350 was not ported to the G700. The auto fallback to primary feature requires that all G700s, running the Communication Manager 3.0-compliant firmware load, use the OID format. The NSD (Non-Standard Data) expansion with the OID is used to carry the context count.

If the media gateway receives any of the following errors in response to a registration message, then the media gateway sends the original OID registration message prior to the expansion of the NSD.

- 284 - NSD OID invalid
- 283 - NSD OID wrong length
- 345 - NSD Wrong Length - for Communication Manager 1.3 and earlier systems

Though not directly necessary for this feature, the media gateway responds to any of the aforementioned protocol errors by attempting to register with the lowest common denominator registration message. This allows new media gateways to be backward compatible with even older releases. This modification only applies to the G700.

Older media gateway loads

The auto-fallback feature on the server is passive in nature; therefore, an older media gateway load trying to register with the new Communication Manager 3.0 load registers with priority, since the value of the Service-State is that of a media gateway without service. Any defined rules for the media gateway are ignored, given that an older media gateway firmware release tries to register only when it no longer has service from another server; therefore, the administration of rules for old media gateway firmware loads are irrelevant.

Administering auto fallback to primary

For each media gateway, the following administration must be performed:

- [Adding Recovery Rule to Media Gateway screen](#)
- [Administering the System Parameters Media Gateway Automatic Recovery Rule screens](#) to schedule the auto-fallback within the system-parameters area.

Adding Recovery Rule to Media Gateway screen

The **Media Gateway** screen (`change media-gateway n`) has a field called **Recovery Rule** with the following attributes:

- Acceptable values for the field are **none**, **1 - 50**, or **1 - 250**, where
 - **50** is the maximum number of supported media gateways on an S8300 Server, and
 - **250** is the maximum number of supported media gateways on an S8500 or S8700-series Server.
- Default is **none**, which indicates that no automatic fallback registrations will be accepted.
- The value of **1 - 50**, or **1 - 250** applies a specific recovery rule to that numbered gateway.

Note:

A single recovery rule number may be applied to all media gateways, or each media gateway may have its own recovery rule number, or any combination in between.

By associating the recovery rule to the **Media Gateway** screen (see [Figure 49](#)), an administrator can use the `list media-gateway` command to see which media gateways have the same recovery rules. All the administration parameters for the media gateways are consolidated on a single screen. The actual logic of the recovery rule is separate, but an administrator can start from the Media Gateway screen and proceed to find the recovery rule.

Note:

These changes apply to the `display media-gateway` command, as well.

Figure 49: Media Gateway screen

change media-gateway 1
Page 1 of 1

MEDIA GATEWAY

Number: 1
 Type: g350
 Name:
 Serial Number:
 Encrypt Link? n
 Network Region: 1
 Location: 1
Recovery Rule: none

IP Address: xxx.xxx.xxx.xxx
 Fw Version/HW Vintage: xxx.yyy.zzz/nnn
 MGP IP Address: xxx.xxx.xxx.xxx
 Controller IP Address: xxx.xxx.xxx.xxx
 MAC Address: 00:04:0d:00:00:64
 Site Data: _____

Slot	Module Type	Name
V1:	S8300	ICC MM
V2:	MM714	4+4 ANA MM
V3:	MM722	2 TRUNK BRI MM
V4:	MM710	DS1 MM

Max Survivable IP Ext: 8

V8:
 V9:

In the above example, no automatic fallback registration requests will be accepted by the primary controller for Media Gateway 1 when it is active on an LSP.

Note:

For more detailed descriptions of the entries and values fields on this screen, see *Maintenance Commands for Avaya Aura™ Communication Manager, Media Gateways and Servers*, 03-300431, at <http://www.avaya.com/support>).

Administering the System Parameters Media Gateway Automatic Recovery Rule screens

Definition of recovery rules occurs on the **System Parameters Media Gateway Automatic Recovery Rule** screens (`change system-parameters mg-recovery-rule <n>`). This screen is contained within the 'system-parameters' area of administration screens. The maximum number of screens that can be administered correspond to the maximum number of media gateways supported by the server in question, and are:

- Up to 50 for the S8300 Server
- Up to 250 for the S8500 and S8700-series Servers

These screens provide a field, **Migrate H248 MG to primary**, with 4 administrable options:

Note:

For detailed information on all four options, see *Administering Avaya Aura™ Communication Manager*, 03-300509.

1. **immediately** — which means that the first media gateway registration that comes from the media gateway is honored, regardless of context count or time of day.
The Warning displayed in [Figure 50](#) is visible when a user selects this option. This option is the default for all rules.
2. **0-active calls** — which means that the first media gateway registration reporting “0 active calls” is honored (see [Figure 51](#)).
3. **Time-day-window** — means that a valid registration message received during any part of this interval is honored (see [Figure 52](#)).

Note:

Time of day is local to the media gateway.

There are no constraints on the number of active calls. The time scale provided for each day of the week goes from 00-23 hundred hours (military time). The user must specify an ‘x’ or ‘X’ for each hour where they want to permit the return migration. If they do not want to permit a given hour, then they leave it blank. This method gets around overlapping time issues between days of the week. Users can specify as many intervals as they wish.

4. **Time-window-OR-0-active-calls** — means that a valid registration is accepted *anytime*, when a 0 active call count is reported OR if a valid registration with *any* call count is received during the specified time/day intervals (see [Figure 53](#)).

Note:

Time of day is local to the media gateway.

The time scale provided for each day of the week goes from 00-23 hundred hours (military time). The user must specify an ‘x’ or ‘X’ for each hour where they want to permit the return migration. If they do not want to permit a given hour then they leave it blank. This method gets around overlapping time issues between days of the week. Users can specify as many intervals as they wish.

Figure 50: System-parameters mg-recovery-rule screen: immediately

```
change system-parameters mg-recovery-rule <n>

      SYSTEM PARAMETERS MEDIA GATEWAY AUTOMATIC RECOVERY RULE

Recovery Rule Number: n
Rule Name:
Migrate H.248 MG to primary:  immediately
Minimum time of network stability: 3

WARNING: The MG shall be migrated at the first possible opportunity. The MG
may be migrated with a number of active calls. These calls shall have their
talk paths preserved, but no additional call processing of features shall be
honored. The user must hang up in order to regain access to all features.

Note: set 'Migrate H.248 MG to primary' to Blank to disable rule.
```

Administer the following fields:

Field	Description
Recovery Rule Number	The number of the recovery rule: • Up to 50 for the S8300 Server • Up to 250 for the S8500 and S8700-series Servers
Rule Name	Optional text name for the rule, to aid in associating rules with media gateways.
Migrate H.248 MG to primary	One of 4 administrable options.
Minimum time of network stability	Administrable time interval for stability in the H.248 link before auto-fallback is allowed. Between 3-15 minutes (Default is 3 minutes).

[Figure 51](#) shows the screen for the **0-active calls** option.

Figure 51: System-parameters mg-recovery-rule screen: 0-active calls

```
change system-parameters mg-recovery-rule <n>

      SYSTEM PARAMETERS MEDIA GATEWAY AUTOMATIC RECOVERY RULE

Recovery Rule Number: n
Rule Name:
Migrate H.248 MG to primary: 0-active-calls
Minimum time of network stability: 3

WARNING: The MG shall only be migrated when there are no active calls.

Note: set 'Migrate H.248 MG to primary' to Blank to disable rule.
```

[Figure 52](#) shows the screen for the time-day-window option.

Figure 52: System-parameters mg-recovery-rule screen: time-day-window

change system-parameters mg-recovery-rule n

SYSTEM PARAMETERS MEDIA GATEWAY AUTOMATIC RECOVERY RULE

Recovery Rule Number: n

Rule Name:

Migrate H.248 MG to primary: time-day-window

Minimum time of network stability: 3

WARNING: The MG may be migrated with a number of active calls. These calls shall have their talk paths preserved, but no additional call processing of features shall be honored. The user must hang up in order to regain access to all features. Valid registrations shall only be accepted during these intervals.

	Time of Day		
	00	12	23
Day of week			
Sunday	- - - - -	- - - - -	- - - - -
Monday	- - - - -	- - - - -	- - - - -
Tuesday	- - - - -	- - - - -	- - - - -
Wednesday	- - - - -	- - - - -	- - - - -
Thursday	- - - - -	- - - - -	- - - - -
Friday	- - - - -	- - - - -	- - - - -
Saturday	- - - - -	- - - - -	- - - - -

Note: set 'Migrate H.248 MG to primary' to Blank to disable rule.

[Figure 53](#) shows the screen for the **time-window-OR-0-active-calls** option.

Figure 53: System-parameters mg-recovery-rule screen: time-window-OR-0-active-calls

```
change system-parameters mg-recovery-rule n
```

SYSTEM PARAMETERS MEDIA GATEWAY AUTOMATIC RECOVERY RULE

Recovery Rule Number: 1
Rule Name:
Migrate H.248 MG to primary: time-window-OR-0-active-calls
Minimum time of network stability: 3
WARNING: The MG shall be migrated at ANY time when there are no active calls, OR the MG may be migrated with a number of active calls when a registration is received during the specified intervals below. These calls shall have their talk paths preserved, but no additional call processing of features shall be honored.

	Time of Day		
	00	12	23
Day of week			
Sunday	- - - - -	- - - - -	- - - - -
Monday	- - - - -	- - - - -	- - - - -
Tuesday	- - - - -	- - - - -	- - - - -
Wednesday	- - - - -	- - - - -	- - - - -
Thursday	- - - - -	- - - - -	- - - - -
Friday	- - - - -	- - - - -	- - - - -
Saturday	- - - - -	- - - - -	- - - - -

Note: set 'Migrate H.248 MG to primary' to Blank to disable rule.

For administrators to see how the recovery rules are applied across all media gateways, the **Media Gateway Report** screen (**list media-gateway** command) identifies the recovery rule for each media gateway in the network (See [Figure 54](#)).

Figure 54: list mg-recovery screen

list media-gateway							Page 1 of 1	
MEDIA GATEWAY REPORT								
Num	Name	Serial No/ FW Ver/HW Vint	IP Address/ Cntrl IP Addr		Type	NetRgn/ RecRule	Reg?	
1	GW#1 Boxster Lab	01DR11131345 unavailable	135.8	.77 .62	g700	1 none	n	
2	MG2 Boxster MV Lab	02DR06750093 unavailable			g700	1 10	n	
3	MG3 Boxster MV Lab	01DR10245104 unavailable	135.8	.77 .68	g700	1 none	n	

In this example, media gateways #1 and #3 are administered such that no registration request would be accepted by the primary controller when the media gateway is active on an LSP. Media gateway #2, on the other hand, is administered with Recovery Rule #10. The SAT command:

```
display system-parameters mg-recovery-rule 10
```

would show the details of that specific recovery rule.

Administrable IPSI Socket Sanity Timeout

The IPSI Socket Sanity Timeout provides a link-bounce type of interval between Communication Manager and the IPSI to provide resiliency during short network outages. During normal operations, Communication Manager determines the health of a connection to an IPSI by monitoring a heartbeat sent by the IPSI every second. If a heartbeat is missed and Communication Manager does not receive any other data from the IPSI, an IPSI sanity failure occurs. The number of IPSI sanity failures are counted and compared to the value (three to 15 seconds) set by an administrator for the IPSI Socket Sanity Timeout. The administered value of the IPSI Socket Sanity Timeout is the amount of time Communication Manager waits for communication to the IPSI to be restored before a recovery action is initiated. If the value for the IPSI Socket Sanity Timeout is properly engineered, the IPSI is less prone to warm starts and more resilient to short network outages.

If the value of the IPSI Socket Sanity Timeout is greater than three and if there are more than three sanity failures, the port network (PN) is placed in a suspended state. An event is logged recording the transition of the PN from an available state to a suspended state. In a suspended state all messages sent from call processing to the PN and all messages sent from the PN to call processing are delayed until communication resumes. The PN will not go into a suspended state if the value for the IPSI Socket Sanity Timeout is equal to three or if the sanity failures is less than three.

If communication is restored between the server and the IPSI before the value set for the IPSI Sanity Timeout elapses, no action is taken and call processing resumes. If the timer expires before communication resumes, the socket between the server and the IPSI is torn down and Communication Manager attempts to re-connect to the IPSI. If the attempts to reconnect are successful, the PN resets. The type of reset is dependent on the length of the outage. If communication is restored within one minute a WARM restart is performed, after one minute a COLD restart is performed.

In Communication Manager Release 3.1.3 - 3.1.4 and Release 4.x, it was possible to change the IPSI Socket Sanity Timeout by contacting Avaya Services. For customers upgrading to Communication Manager Release 5.0 with a value set by Avaya Services other than the three second default, the value set by Avaya Services is carried over during the upgrade.

Note:

The value administered for the IPSI Socket Sanity Timeout has no impact on the ESS no service timer.

The IPSI Socket Sanity Timeout is administered on page one of the **system-parameters ipserver-interface** form in the **IPSI Socket Sanity Timeout** field. The range for this field is three to 15 seconds with the default set at three seconds.

Figure 55: system-parameters ipserver-interface

```
display system-parameters ipserver-interface
IP SERVER INTERFACE <IPSI> SYSTEM PARAMETERS

SERVER INFORMATION

    Primary Control Subnet Address: 172. 30.  0.  0*
    Secondary Control Subnet Address: 172. 30.  2.  0

OPTIONS

    Switch Identifier: A
    IPSI Control of Port Networks: enabled
    Preference switching to A-side IPSI: enabled
    IPSI Socket Sanity Timeout: 3

NOTE: * indicates data changed on the Server
```

Enterprise Survivable Servers (ESS)

The Enterprise Survivable Servers (ESS) feature provides survivability to port networks by allowing backup servers to be placed in various locations in the customer's network. The backup servers supply service to port networks in the case where the S8500 Server, or the S8700-series Server pair fails, or connectivity to the main Communication Manager server(s) is lost. ESS servers can be either S8500 or S8700-series Servers; an S8500 can back up an S8500 or S8700-series server, and an S8700-series server can also be used to back up a corresponding S8700-series server. ESS servers offer full Communication Manager functionality when in survivable mode, provided sufficient connectivity exists to other Avaya components (for example, endpoints, gateways, and messaging servers). One exception is that an ESS cannot control a Center Stage Switch.

When designing a network to support ESS servers, consider the following:

- ESS servers can only control port networks that they can reach over an IP-connected or ATM-connected network.

That is, ESS servers connected on an enterprise's public IP network will not be able to control port networks connected to control network A or B, unless:

- ESS can control a remote port network that is connected through ATM to port networks on control networks A or B, or
- Control networks A or B are exposed to the public IP network through control network on the Customer's LAN (CNOCL).
- Multiple ESSs can be deployed in a network. In the case above, an enterprise could deploy one or more ESSs on the public network, and an additional server on control networks A and B to backup port networks attached to the respective networks.

However, when port networks register with different ESS servers, system fragmentation may occur. In that case, care should be taken to establish adequate routing patterns to allow users at a particular location to be able to place calls where needed.

- ESS servers register to the main server(s) through a C-LAN. Each ESS must be able to communicate with a C-LAN in order to download translations from the main server. The file synchronization process uses the following ports:
 - UDP/1719 – ESS registers with the main server
 - TCP/21873 – Main server sends translations to the LSP(s) (pre-Release 3.0)
 - TCP/21874 – Main server sends translations to the ESS (Release 3.0 and above; also for LSP translations)

The media gateway cannot distinguish between registration through a C-LAN or registration to an S8300 directly. Prior to Communication Manager 3.0, without ESS, if a media gateway successfully registered with a primary call controller IP address, then the media gateway was properly registered with the primary call controller. However, in Communication Manager 3.0, when a media gateway completes a successful registration through an IP address defined as a primary call controller address, if that address is a C-LAN, the media gateway may not necessarily be registered with the true primary call controller. The port network that houses the C-LAN may be under control of an ESS, but the media gateway will not know that it is registered with an ESS.

When the traditional port network migrates back to the primary call controller, then the media gateway loses its H.248 link, and the Link Loss Recovery algorithm engages, and that should be sufficient. The Auto Fallback to Primary feature only engages if the media gateway drops the connection and registers with an LSP. The ESS migration should only occur if the port network is reasonably certain to return to the primary call controller, so the media gateway would simply return to the same C-LAN interface. Now, when the media gateway returns to the same C-LAN interface, the Link Loss Recovery feature performs a context audit with the primary controller and learns that the primary call controller is not aware of the media gateway. The controller in this case issues a warm start request to the media gateway, or potentially different behavior if connection preservation is active at the same time. The auto-fallback feature is not affected by ESS.

For more information on ESS, see the *Using the Avaya Enterprise Survivable Servers (ESS)*, 03-300428.

Improved Port Network Recovery from Control Network Outages

When the network fails, IP-connected port networks experience disproportionately long outages from short network disruptions. The improved port network recovery feature now provides customers using IP connected Port Networks with less downtime in the face of IP network failures.

The feature lessens the impact of network failures by:

- Improving TCP recovery times that increase the IPSI-PCD socket bounce coverage time from the current 6-8 seconds range for the actual network outage to something closer to 10 seconds. Results vary based on traffic rates.
- Modifying the PKTINT recovery action after a network outage to entail a warm interrupt rather than a **PKTINT application reset** (hardware interrupt)). This prevents H.323 IP telephones from having to re-register and/or have their sockets regenerated. This minimizes recovery time from network outages in the range of 15-60 seconds.

This feature also monitors the IPSI-PCD socket and helps in identifying and troubleshooting network related problems.

The IPSI-PCD socket bounce is developed by improving TCP recovery time that covers typical network outages, up to 10-11 seconds range. In this scenario, uplink and downlink messages are buffered, and operations very quickly return to normal after a network failure. In order to improve recovery time for longer outages, up to the 60 seconds range, the feature introduces the use of a PKTINT warm interrupt rather than a reset. This results in less drastic action being taken to recover links and H.323 IP telephones.

During the network outage, only stable calls already in progress have their bearer connections preserved. A call for which the talk path between the parties in the call has been established is considered stable. Call control is not available during the network outage, and this means that any call in a changing state is most likely not preserved.

Some examples are:

- Calls with dial tone
- Calls in dialing stage
- Calls in ringing stage
- Calls transitioning to/from announcements
- Calls transitioning to/from music-on-hold
- Calls on hold
- Calls in ACD queues
- Calls in vector processing

Further, no change in the state of a preserved call is possible. So, features such as conference or transfer are not available on the preserved calls. Button pushes are not recognized. Invocation of a feature by the user is given denial treatment. In a conference call, if a party in the call drops, the entire call is dropped.

The following are additional improvements:

- Improve TCP Recovery Time
- Increase IPSI Local Buffering to prevent data loss
- Reduce escalation impact between 15 and 60 seconds by using warm interrupt of PKTINT instead of **PKTINT application reset** (hardware interrupt)
- Reduce escalation impact between 60 and 90 seconds by extending PN cold reset action from 60 seconds to 90 seconds
- Reduce ESS **No Service Timer** minimum value from 3 minutes to 2 minutes to reduce local customer outage in case of prolonged network outage
- List measurements for the PCD-PKTINT socket for improved troubleshooting

With the introduction of a warm interrupt of the PKTINT instead of reset in the 15-60 seconds range, and the optional extension of the PN cold reset from 60 to 120 seconds.

Port Network Recovery Rules screen

Figure 1: PN Cold Reset Delay Timer

change system-parameters port-networks Page 2 of 2

PORT NETWORK RECOVERY RULES

FAILOVER PARAMETERS

FALLBACK PARAMETERS

No Service Time Out Interval (min): 5 Auto Return: no

PN Cold Reset Delay Timer (sec): 60

No Service Time Out Interval

Field description

Valid entries	Usage
2 - 15	No Service Time Out Interval in minutes

PN Cold Reset Delay Timer (sec)

Field description

Valid entries	Usage
60 -120 secs	PN Cold Reset Delay Timer in seconds. The default is 60 seconds

Configuration impacts on availability

Communication Manager reduces the downtime experienced by port networks after a short network outage. H.323 endpoint and application link and socket stability is greatly improved in the sub-60 second range. H.323 endpoints using TTS will not have to regenerate sockets, and H.323 endpoints not using TTS will not have to re-register or have their sockets regenerated.

Survivability

Reducing the minimum ESS No Service Time Out Interval from 3 to 2 minutes improves customer overall availability.

Index

Numerical

1600-series IP Telephones	178
4600-series IP phone, configuration files	178
4600-series IP Telephones	177
9600-series IP Telephones	177

A

administration	
H.323 Trunk	151
H.323 Trunk, task detail	163
H.323 Trunks.	151
IP telephones.	180
UDS1 circuit pack.	127
auto fallback to primary.	25

B

bandwidth limitation	257
Best Service Routing (BSR)	162
bus bridge.	133

C

cabling	
metallic	81
Call Admission Control (CAC)	257
circuit packs	
control LAN (C-LAN) interface	20
C-LAN	20
circuit pack TN799DP.	132
installation	133
testing	134
CNOCL	115
combined port network	108
connecting switches	17
connection preservation	23
control network C	112
Control Network on Customer LAN	115
control networks, mixing	86
converged networks	125

D

default gateway	136
default node	136
Dial Plan Transparency	252

Index

Duplicated bearer [46](#), [56](#), [59](#), [62](#), [65](#), [70](#), [73](#)
duplicated TN-2602AP circuit packs [31](#)
duplicated TN2602AP circuit packs [157](#)

E

echo cancellation [220](#)
 plans (TN464GP/TN2464BP circuit packs) [222](#)
 plans (TN464HP/TN2464CP circuit packs) [221](#)
echo path delay [220](#)
ELS [25](#)
encryption, media [267](#)
Enhanced Local Survivability (ELS) [25](#)
Enterprise Survivable Servers (ESS) [25](#)
ESS
 mixed PNC [106](#)

F

Fax over IP
 administration overview [204](#)
 overview [202](#)
 Super G3 fax machine [231](#)
Fax pass through
 administration [235](#)
 bandwidths [212](#)
 considerations for configuration [209](#)
 description [207](#)
 encryption [213](#)
 rates [207](#)
Fax relay
 administration [235](#)
 bandwidths [212](#)
 considerations for configuration [209](#)
 description [207](#)
 encryption [213](#)
 rates [207](#)
fiber
 connections, metallic cabling [81](#)
Fiber connections [76](#)

G

G250 Media Gateway [25](#), [284](#)
G700/G350 Media Gateways [20](#), [284](#), [285](#)
gateway
 default [136](#)

H

H.248 auto fallback to primary [25](#), [281](#)
H.248 link recovery [24](#)
H.323 clear channel over IP [202](#)
H.323 link recovery [24](#)

H.323 Trunk
 administration [151](#)
 hardware interface [20](#)

I

iClarity [176](#)
IGAR [19](#)
installation, C-LAN [133](#)
Inter-Gateway Alternate Routing (IGAR) [19](#), [251](#)
interworking
 G250 [284](#)
 G350 [284](#)
 G700 [285](#)
IP codec sets, administering [230](#)
IP interface [157](#)
IP interfaces [154](#)
IP network regions [238](#)
IP Softphone
 administration [172](#)
 Alternate Gatekeeper [136](#)
IP telephone [176](#)
 administration [180](#)
IP-PNC PNs in MCC1 example [101](#)
IP-PNC with MCC1 Media Gateway [98](#)
IPSI socket sanity timeout [292](#)

J

jitter [19](#)

L

link recovery [24](#)
load balanced TN2602AP circuit packs [154](#)
local survivable processor [25](#)
LSP [25](#)

M

MCC1 Media Gateway
 circuit pack placements [52](#)
 IP-PNC [101](#)
media encryption [267](#)
 FAX, modem, and TTY [213](#)
 SRTP [213](#)
 support by [268](#)
migrations
 TN570 circuit pack placements [54](#)
Mixed PNC [82](#)
 duplicated and single control [86](#)
 ESS in mixed PNC configuration [106](#)
 examples [88](#)
 MCC1 Media Gateway IP-PNC [98](#)

MCC1 Media Gateway with multiple IP-PNC PNs example	
multiple IP-PNC PNs in MCC1 Media Gateway example	101
MCC1 Media Gateway with multiple mixed PNC PNs	
multiple mixed PNC PNs in MCC1 Media Gateway 99 , 100	
MCC1 Media Gateway with multiple mixed PNC PNs example	
multiple mixed PNC PNs in MCC1 Media Gateway example	103
media gateway combinations	84
mixed ATM-connect and IP-PNC example	95
mixed CSS-connect and IP-PNC example	92
mixed direct-connect and IP-PNC example	88
mixed reliability example	95
mixed reliability with IP-PNC example	90
possible mixes	83
reliability options	86
requirements	86
MM710 T1/E1 Media Module	127
MM760 VoIP Media Module	21 , 147
Modem over IP	
administration overview	204
overview	202
Modem pass through	
administration	235
bandwidths	212
considerations for configuration	209
description	208
encryption	213
rates	208
Modem relay	
administration	235
bandwidths	212
considerations for configuration	209
description	208
encryption	213
rates	208

N

NAT.	189
Network Address Translation	189
NAPT	191
NAT and H.323 issues	191
Nat Shuffling feature	191
types of NAT	190
network recovery	278
network regions, IP	238
node	
default	136
node names, assigning.	153

O

overview	
converged networks	125

P

Pass through mode for fax, modem, TTY over IP	203
Per Hop Behaviors (PHBs)	226
plans	221
port address translation (PAT).	191
port network connectivity	
ESS in mixed PNC configuration	106
examples of mixing	88
fiber lengths.	76
length of fiber connections	76
MCC1 Media Gateway IP-PNC.	98
MCC1 Media Gateway with IP-PNC PNs example 101	
MCC1 Media Gateway with multiple mixed PNC PNs 99 , 100	
MCC1 Media Gateway with multiple mixed PNC PNs example.	103
mixed ATM-connect and IP-PNC example	95
mixed CSS-connect and IP-PNC example	92
mixed direct-connect and IP-PNC example	88
mixed port network connectivity	82
mixed reliability example	95
mixed reliability with IP-PNC example.	90
requirements for mixing	86
S8500	
direct-connect PNC.	33
IP-PNC	30
S8700-series	
ATM-connect PNC	65 , 70 , 73
CSS-connect PNC	54 , 59 , 62
direct-connect PNC.	44 , 48 , 50
IP-PNC	37 , 40 , 42
TN570 circuit pack placements	52 , 54

Q

QoS	19
Quality of Service (QoS)	19

R

Rapid Spanning Tree	18 , 265
Relay mode for fax, modem, TTY over IP	202
reliability with mixed PNC	86

S

S8500	
direct-connect PNC	33

Index

IP-PNC	30
S8700-series	
ATM-connect PNC	65 , 70 , 73
CSS-connect PNC	54 , 59 , 62
direct-connect PNC	44 , 48 , 50
duplicated bearer	62 , 73
duplicated control	50
duplicated control	40 , 42 , 48 , 59 , 62 , 70 , 73
IP-PNC	37 , 40 , 42
SCC1	
Media Gateway circuit pack placements	52
Session Initiation Protocol (SIP).	150
shuffled connections	225
signaling group	163 , 170
SIP trunks	150
SLS	25
spanning tree protocol (STP)	18 , 264
SRTP media encryption	214
for FAX, modem and TTY	213
Standard Local survivability (SLS).	25
STP	18 , 264
Super G3 fax machine	231
survivability	23 , 278

T

T.38 fax	
administration	235
bandwidths	212 , 213
considerations for configuration	209
description	206
overview	202
rates	206
task	
assign node names	135
telephone, IP	176
TN2302AP	138
TN2312BP (IPSI)	20 , 143
TN2602AP circuit pack	
administer for duplication	157
administer for load balancing	154
TN2602AP features	142
TN2602AP IP Media Resource 320	20 , 139 , 154 , 157
TN570 circuit pack placements	52
TN799 (C-LAN)	
Alternate Gatekeeper	20 , 136
TN8400AP Server	20 , 148
TN8412AP (SIPI)	20 , 148
trunk group	167
trunks	
H.323	151
SIP	150
TTY over IP	
administration overview	204
overview	202

TTY pass through	
administration	235
bandwidths	212
considerations for configuration	209
description	208
encryption	213
rates	208
TTY relay	
administration	235
bandwidths	212
considerations for configuration	209
description	207
encryption	213
rates	207

U

UDS1 circuit pack, administration	127
Universal DS1 (UDS1) circuit pack.	127
User Datagram Protocol (UDP)	266 , 294

V

Virtual Local Area Networks (VLANs)	228
Voice Activity Detection (VAD).	220