




# Asus X502C-RB01 Network Card Replacement

Locate, remove, and replace the network card in your Asus laptop.

Written By: Richard Hambrick

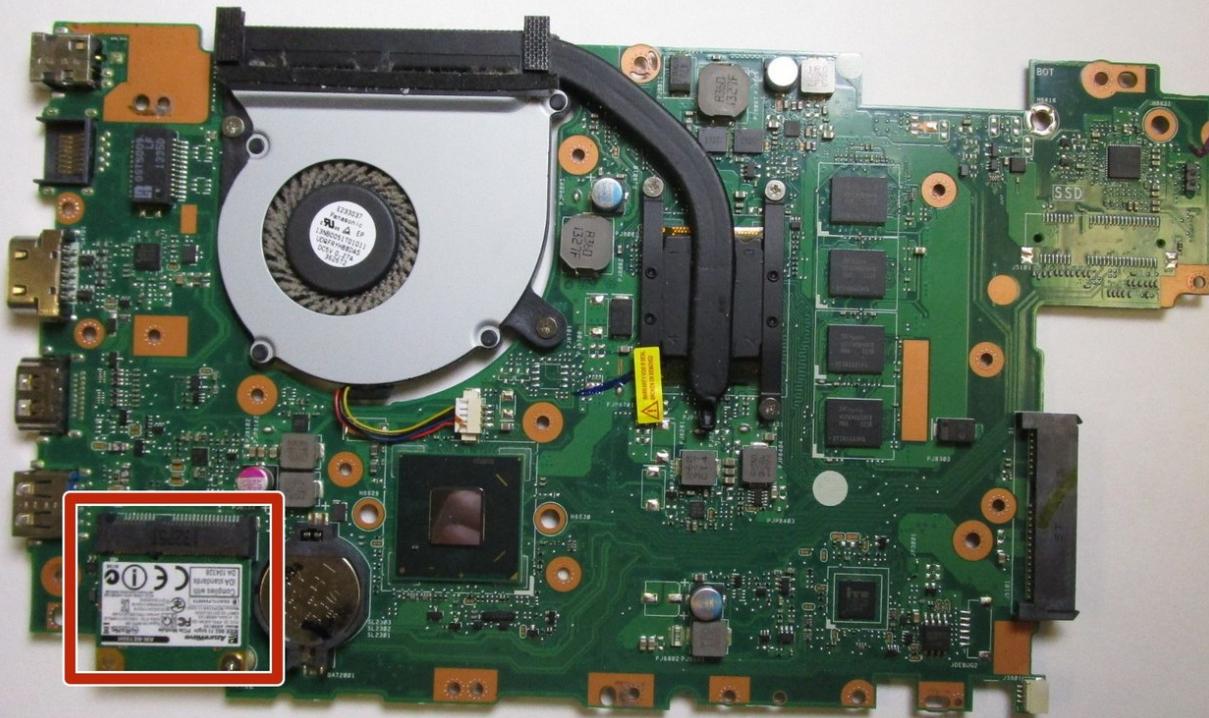

## INTRODUCTION

If your laptop's WiFi is out of whack, replacing the network card could be the solution. This guide shows you how.

### TOOLS:

- Spudger (1)
- Phillips #0 Screwdriver (1)
- iFixit Opening Tools (1)

Prying Tool

## Step 1 — Keyboard Panel



- Turn off the laptop and flip it face down.
- Using a Phillips #0 screwdriver, remove the seven 9mm screws circled in red.
- With the same screwdriver, remove the four 5mm screws circled in orange.



## Step 2



- Flip the laptop face up and open the lid.
- Use the plastic opening tool to pry around the entire edge of the keyboard panel to loosen the panel from the base.



**⚠** Be careful not to lift the panel just yet, as it is still connected to the motherboard.

## Step 3

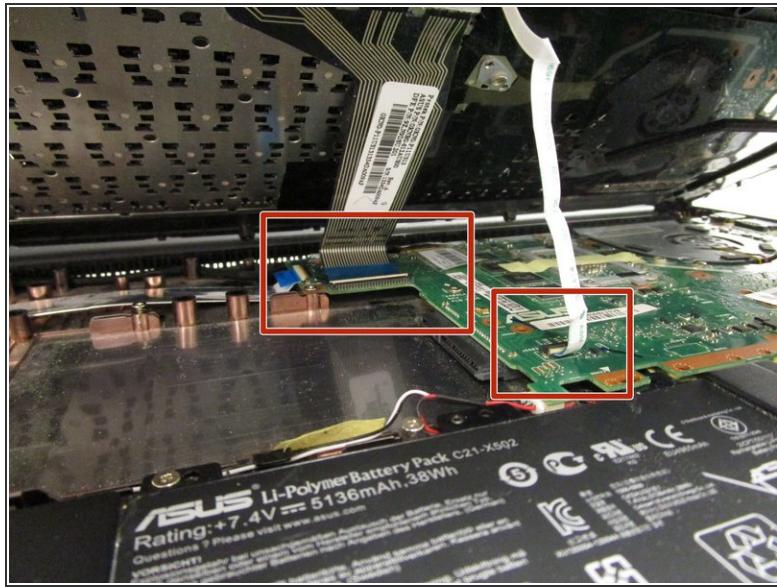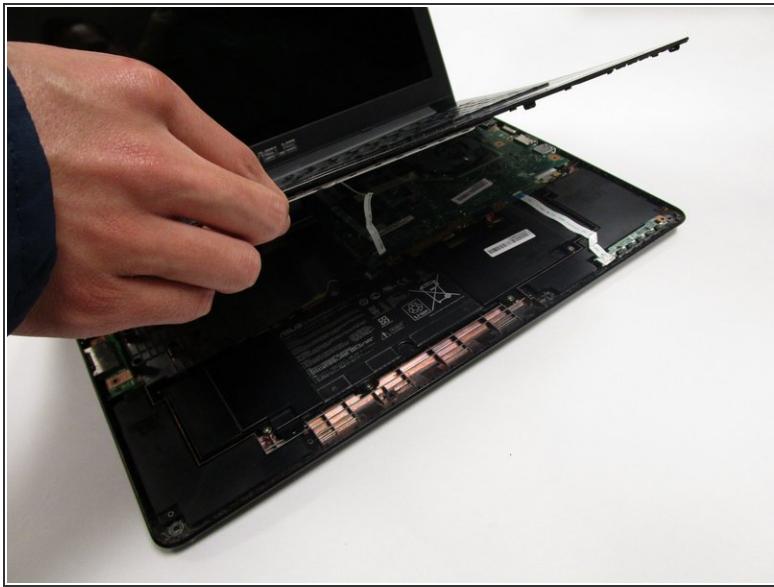

- Partially lift the panel up, revealing the two cables connected to the motherboard.

## Step 4

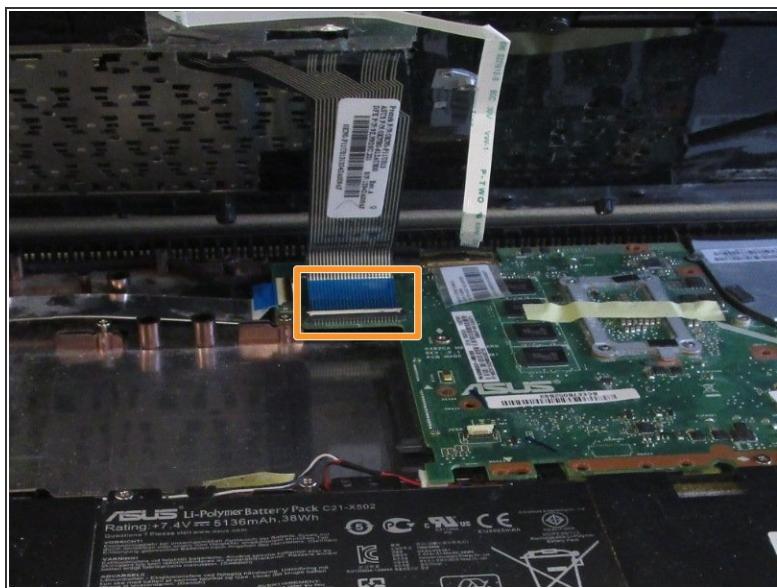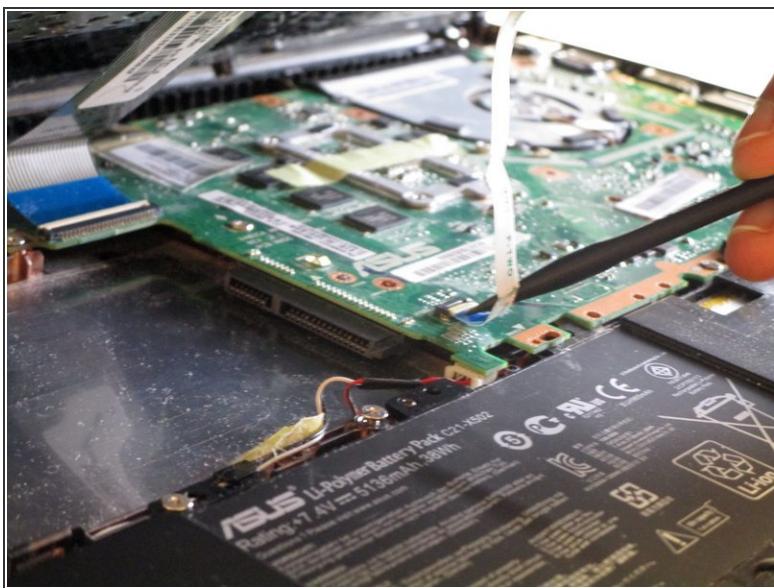

- Disconnect the first ZIF cable by lifting the tab using the spudger tool or your fingernail and gently pull the cable out.
- Disconnect the second ZIF cable by lifting the tab using your fingernail and gently pull the cable out. This one is more difficult to reach with the spudger.

## Step 5



- Remove the keyboard panel completely and set it aside. The internal components of the laptop are now exposed.


## Step 6 — Hard Drive



- Locate the hard drive in the area highlighted in red.


**i** This demonstration model does not have a mounting bracket around the hard drive.

## Step 7

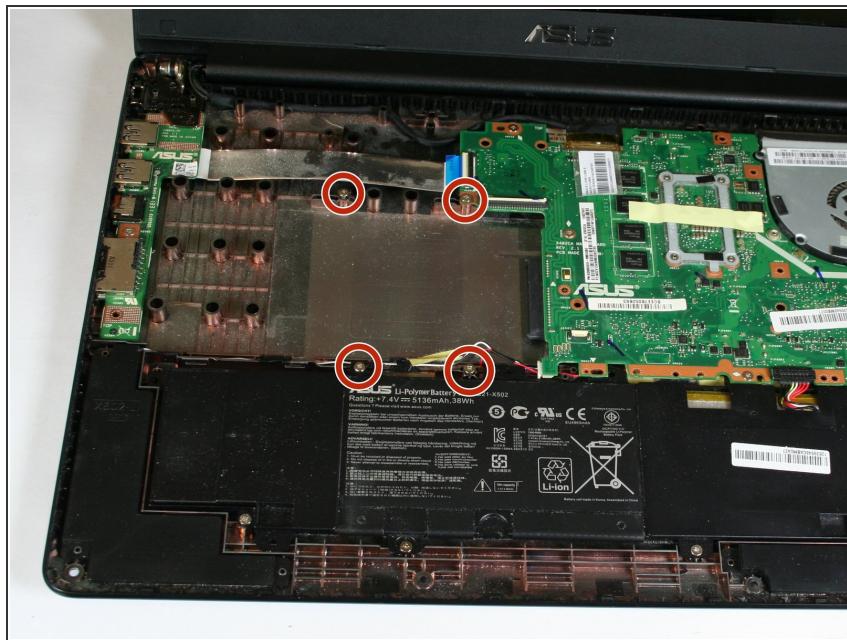

- Remove the four 5mm screws from the hard drive mounting bracket using the Phillips #0 screwdriver.

## Step 8

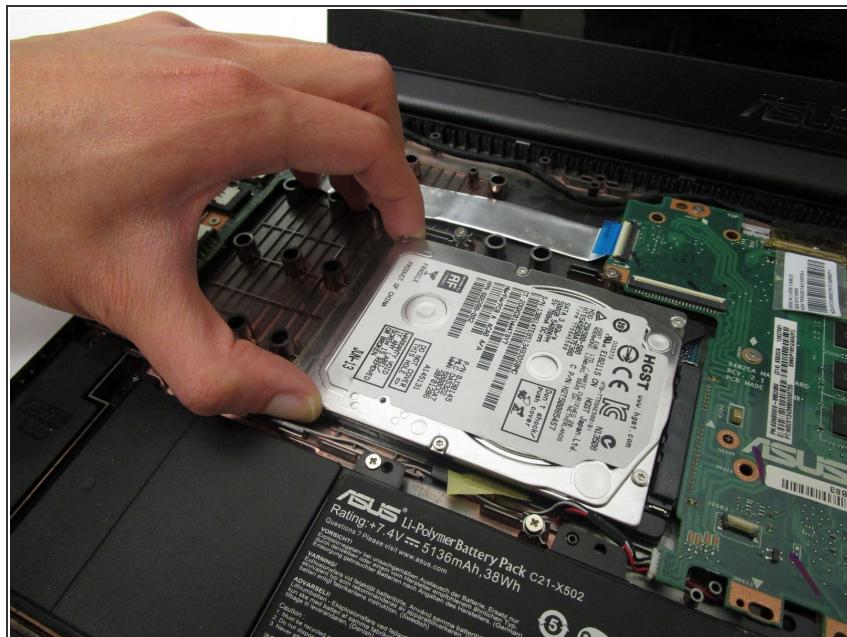


- Slide the hard drive in the direction away from the connector and lift it up to remove it.

## Step 9 — Motherboard





- Unplug the battery from the laptop by lifting the connector up with the flat end of the spudger.
- Unplug the two ZIF cables by lifting the tab using the spudger tool or your fingernail then pulling the cable out gently.

## Step 10

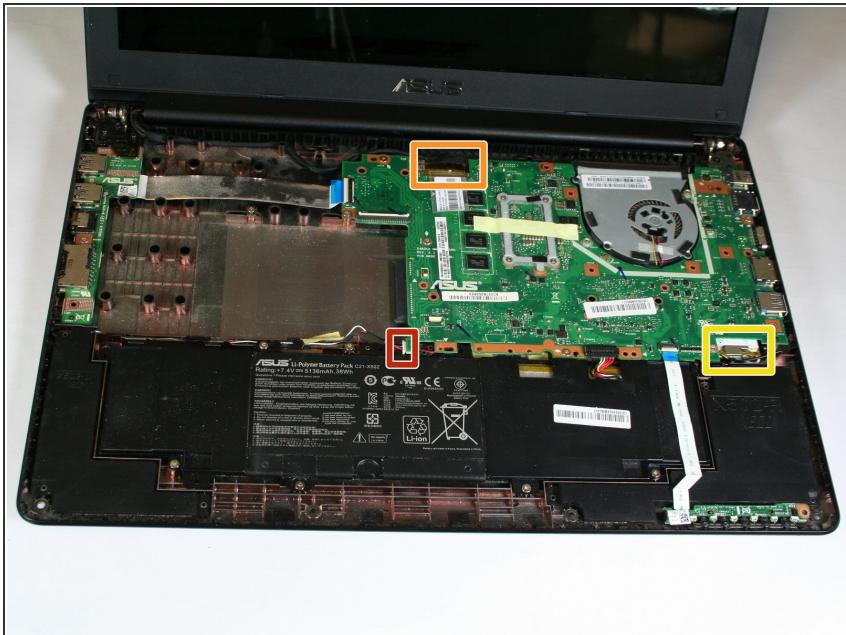


- Unplug the bundled cable by pulling it away from the connector with a bit of force.
- Unplug the display cable connector by lifting the tape and pulling it away from the connector.
- Unplug the two antenna cables connected to the network interface card by prying it off with the flat end of the spudger.

## Step 11

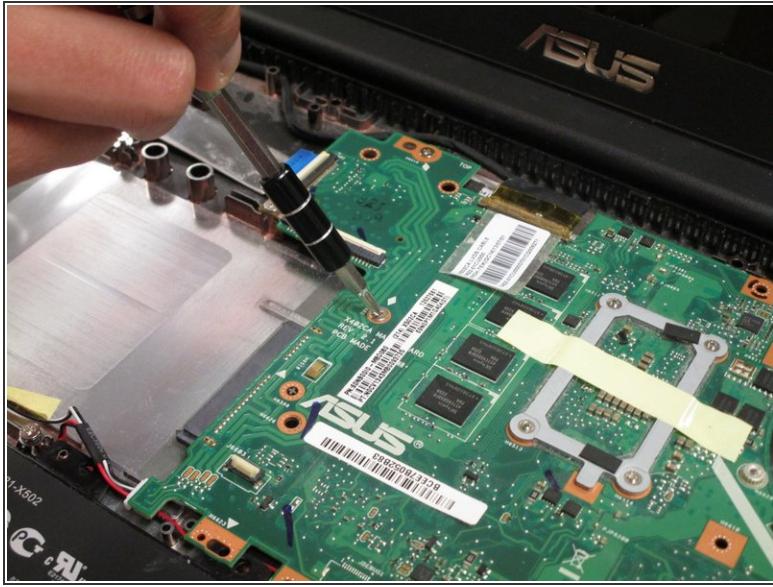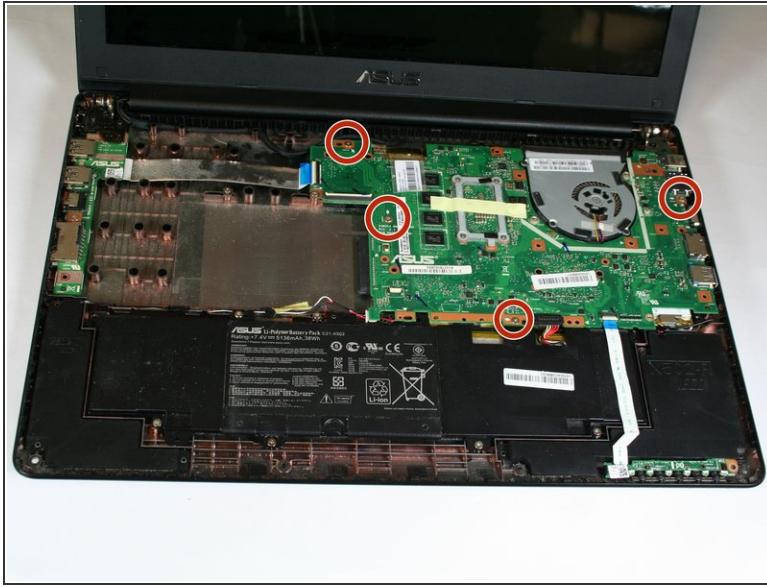


- Remove the four 5.5mm screws using the Phillips #0 screwdriver.

## Step 12

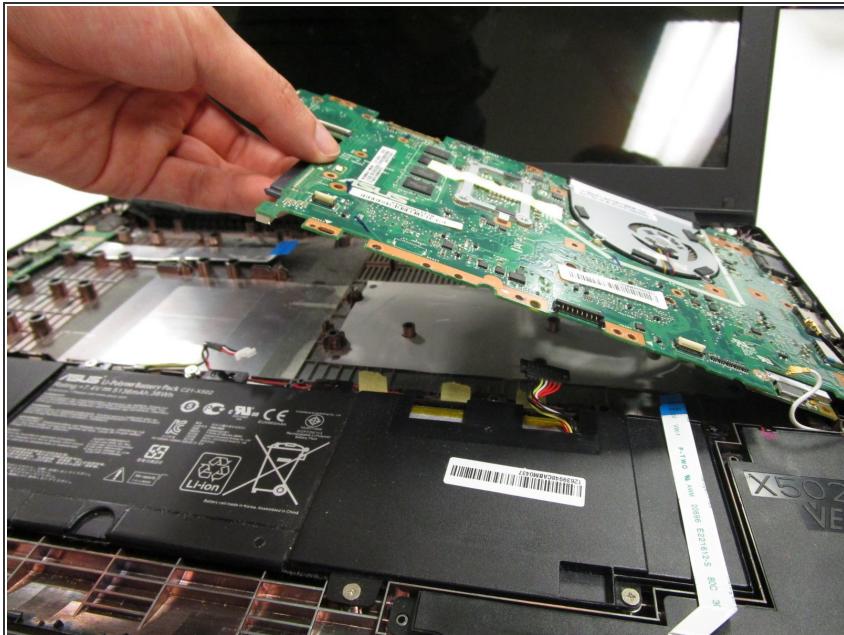


- Gently lift the motherboard out of the casing.

## Step 13 — Network Card

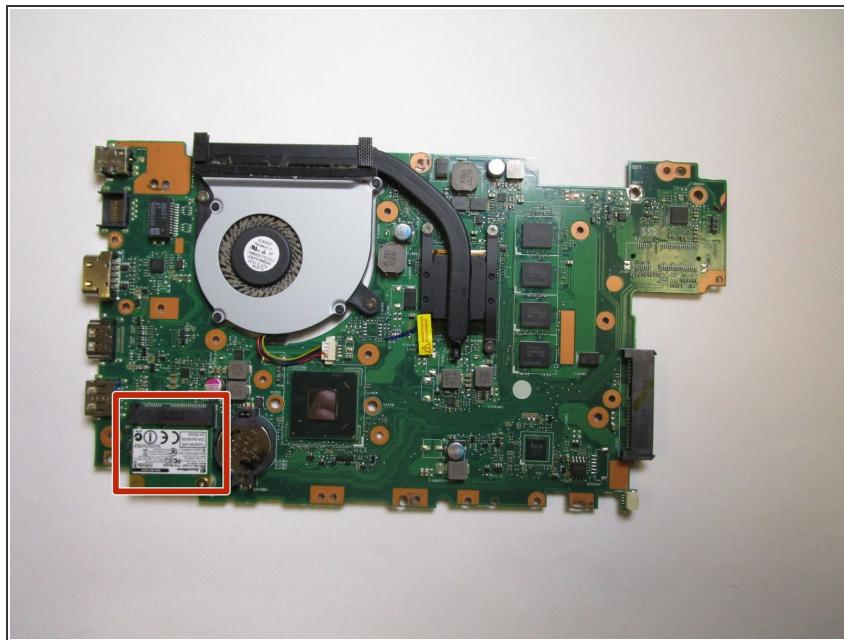


- Flip over the motherboard so that the network card is now visible.

## Step 14

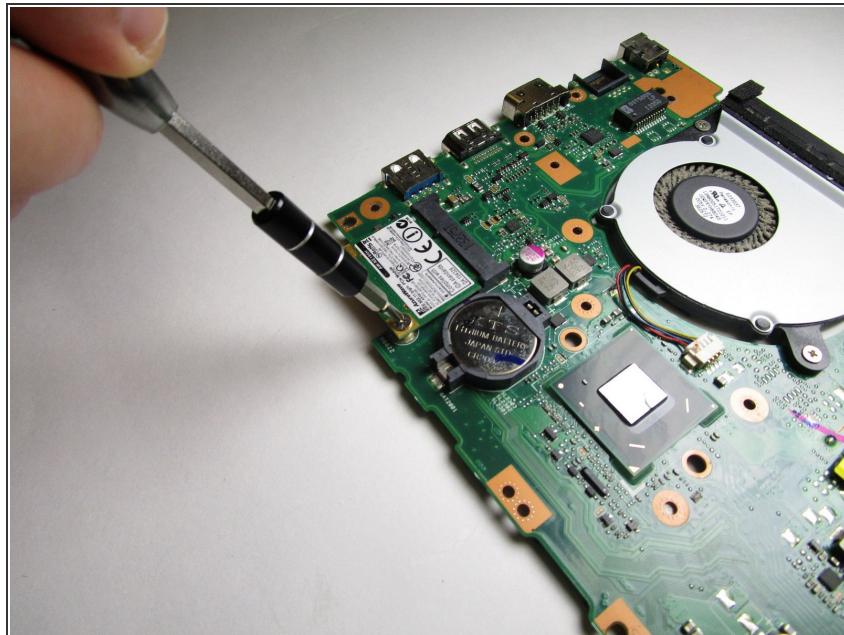

- Remove the 5mm screw in the corner of the network card with a Phillips #0 screwdriver.

## Step 15

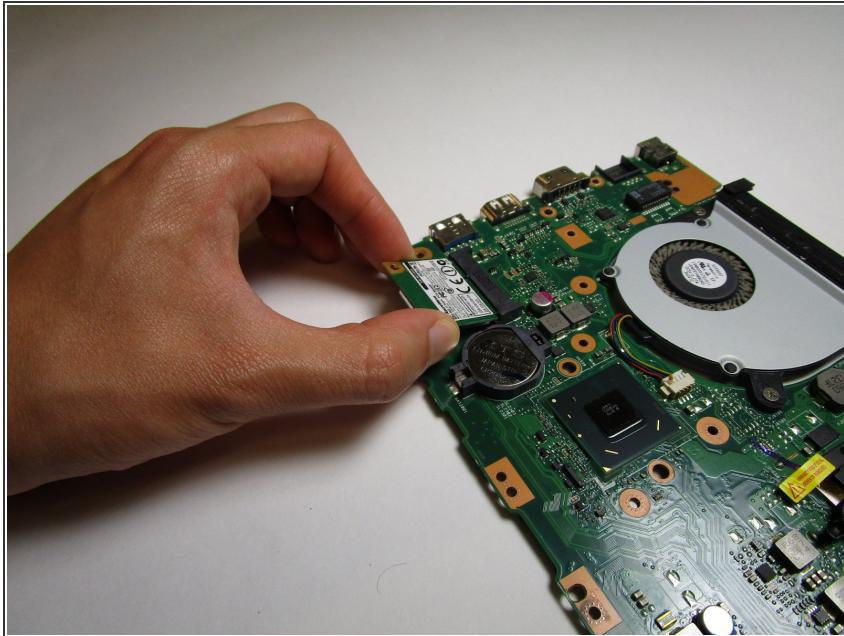

- Lift the network card up and pull it out.

*(i)* The network card may lift itself up to the angle pictured on its own.

To reassemble your device, follow these instructions in reverse order.