



# Google Pixel Midframe Replacement

Prereq guide for replacing the midframe of a Google Pixel.

Written By: Claudia Mendez



## INTRODUCTION

Prereq guide for midframe removal. Although the midframe itself rarely needs to be replaced, it must be removed in order to replace other components.

### TOOLS:


- [Suction Handle \(1\)](#)
- [iFixit Opening Picks set of 6 \(1\)](#)
- [iOpener \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [Spudger \(1\)](#)
- [T5 Torx Screwdriver \(1\)](#)
- [Tweezers \(1\)](#)

## Step 1 — Display



- Turn off the device.
- [Prepare an iOpener](#) to heat the edges of the display and soften the adhesive underneath. Alternatively, you may use a heat gun or a hair dryer.  
*(i)* The surfaces near the speaker and microphone (top and bottom respectively) have larger adhesive sections. These areas may require slightly longer heat exposure. The display should be heated until it's slightly too hot to touch, for roughly two minutes.

## Step 2

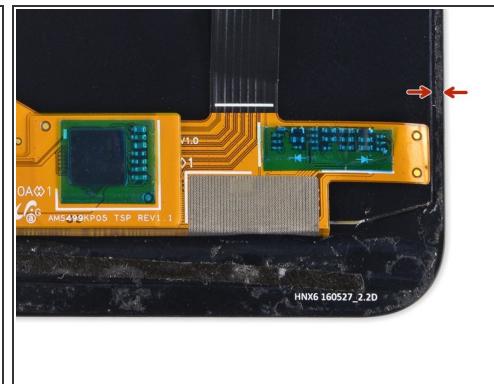

*(i)* In the following steps, you will separate the display panel by slicing through the adhesive bonding the display to the Pixel's chassis.

- For reference, the back of the display panel is shown at left. Note the narrow clearance between the side of the display unit and the OLED panel.

**⚠** Inserting an opening tool deeper than 1.5 mm into the sides of the device, or 9 mm into the top and bottom can permanently damage the display.

## Step 3



- Use a [suction handle](#) to pull up on the display and create a slight gap between the display and the phone's chassis.

**(i)** If your display is cracked, [cover it with packing tape](#) to help the suction cup adhere and prevent glass shards from popping loose.

## Step 4



- Insert an opening pick or a playing card into the gap between the chassis and the display assembly.
- Begin to slide the opening pick around the edge of the display, cutting through the adhesive that secures it.

**⚠** The display panel is fragile. If you plan to re-use your display, take care to insert your tool only as far as necessary to separate the adhesive. Inserting the tool any further can damage the OLED panel under the glass.


## Step 5



- Continue carefully separating the adhesive around the rest of the device.

**⚠** Take extra care with the side bezels, which are only 1.5 mm deep.

## Step 6

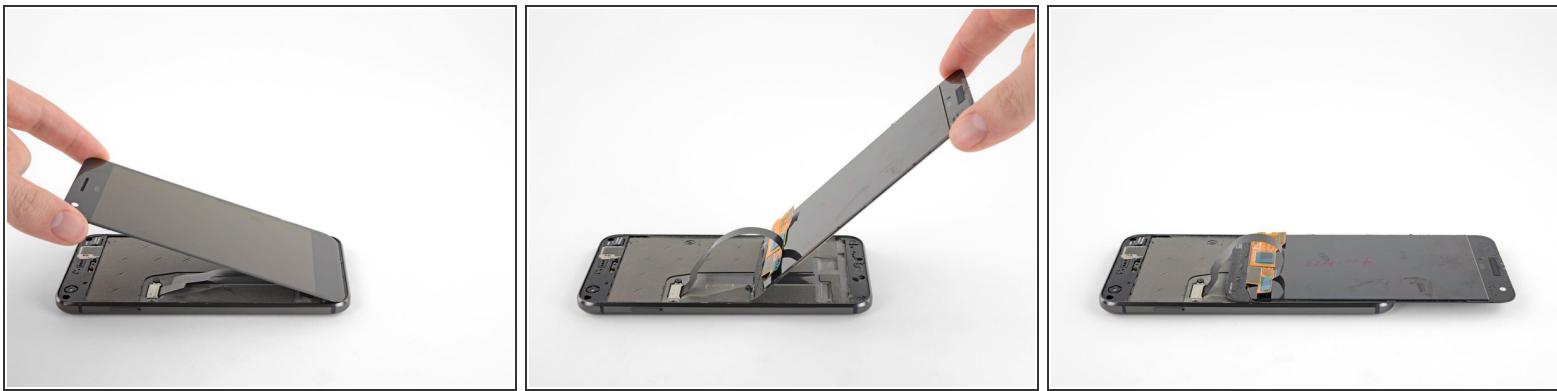

- With the adhesive cut, slowly lift the display up from the top (the side with the speaker-grille cutout), carefully flip it over vertically toward the bottom of the device, and rest it on its face, as shown.


**⚠** Do not attempt to completely remove the display yet, as it is still connected by a fragile ribbon cable. Be careful to not to strain the cable while positioning the display.

## Step 7



- Use a T5 Torx driver to remove the two black 3.5 mm T5 screws securing the display cable connector bracket.

## Step 8

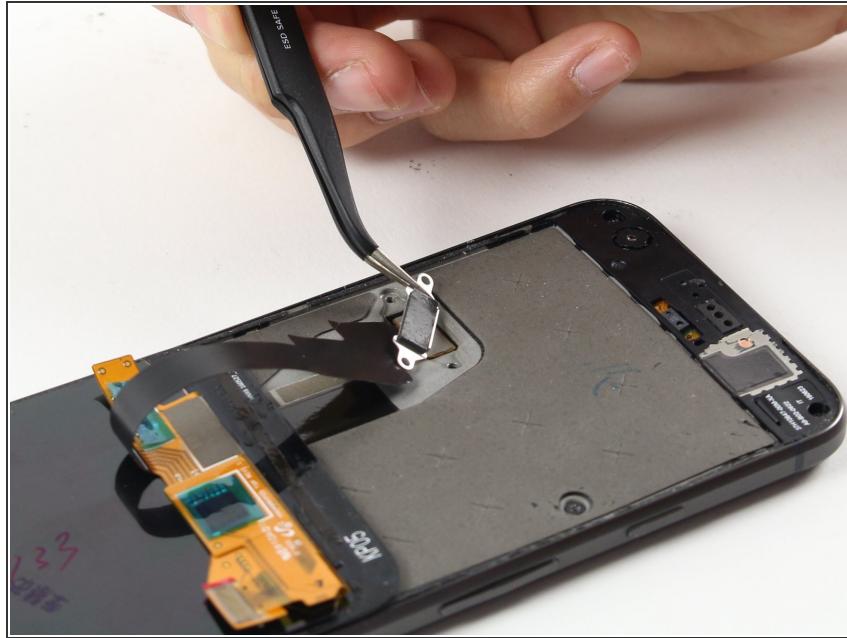

- Use tweezers to remove the bracket that holds the display connector in place.

## Step 9



- Use a spudger to pry up the [display cable connector](#), freeing the display.

## Step 10



- Remove the display.
- ➡ Some replacement displays do not come with an [earpiece speaker grille](#). If your replacement screen doesn't have one, be sure to transfer the grille from your old display to the new one.
- ➡ During reassembly, pause here to test the functionality of your new part and [replace the display adhesive](#).

## Step 11 — Midframe



- Use a T5 Torx driver to remove the nine 3.5 mm screws securing the midframe.

## Step 12



- The midframe is held tightly in place by five clips. To release these clips, apply inward pressure with an opening tool as shown in the steps below.

## Step 13



- Wedge an opening pick into the notch that is located at the bottom right corner of the phone.

## Step 14



- Slide the opening pick up both sides of the device in the small space between the midframe and the rear case to release the clips holding it in place.
  - ⓘ Note that the clips are not released by sliding *through* them, but rather the inward pressure the opening pick creates as it enters the gap *around* them.
  - ⓘ If the clasps fail to come undone, try pushing the edge you're working on inward with your hand, or using a thicker tool like a spudger.
- ⚠ Do not attempt to remove the midframe yet! There is still a fragile ribbon cable underneath connecting the earpiece speaker to the motherboard.

## Step 15



- Use a spudger to pry the earpiece speaker cable connector straight up, disconnecting it from the motherboard.
- Remove the mid-frame from the device.

 During reassembly, reattach the earpiece speaker cable and insert the top side of the midframe before you snap the clips back into place.

To reassemble your device, follow these instructions in reverse order.