




# LG V20 Loudspeaker Replacement

This is a replacement guide for the audio loudspeaker on the LG V20.

Written By: Elliot Mumma

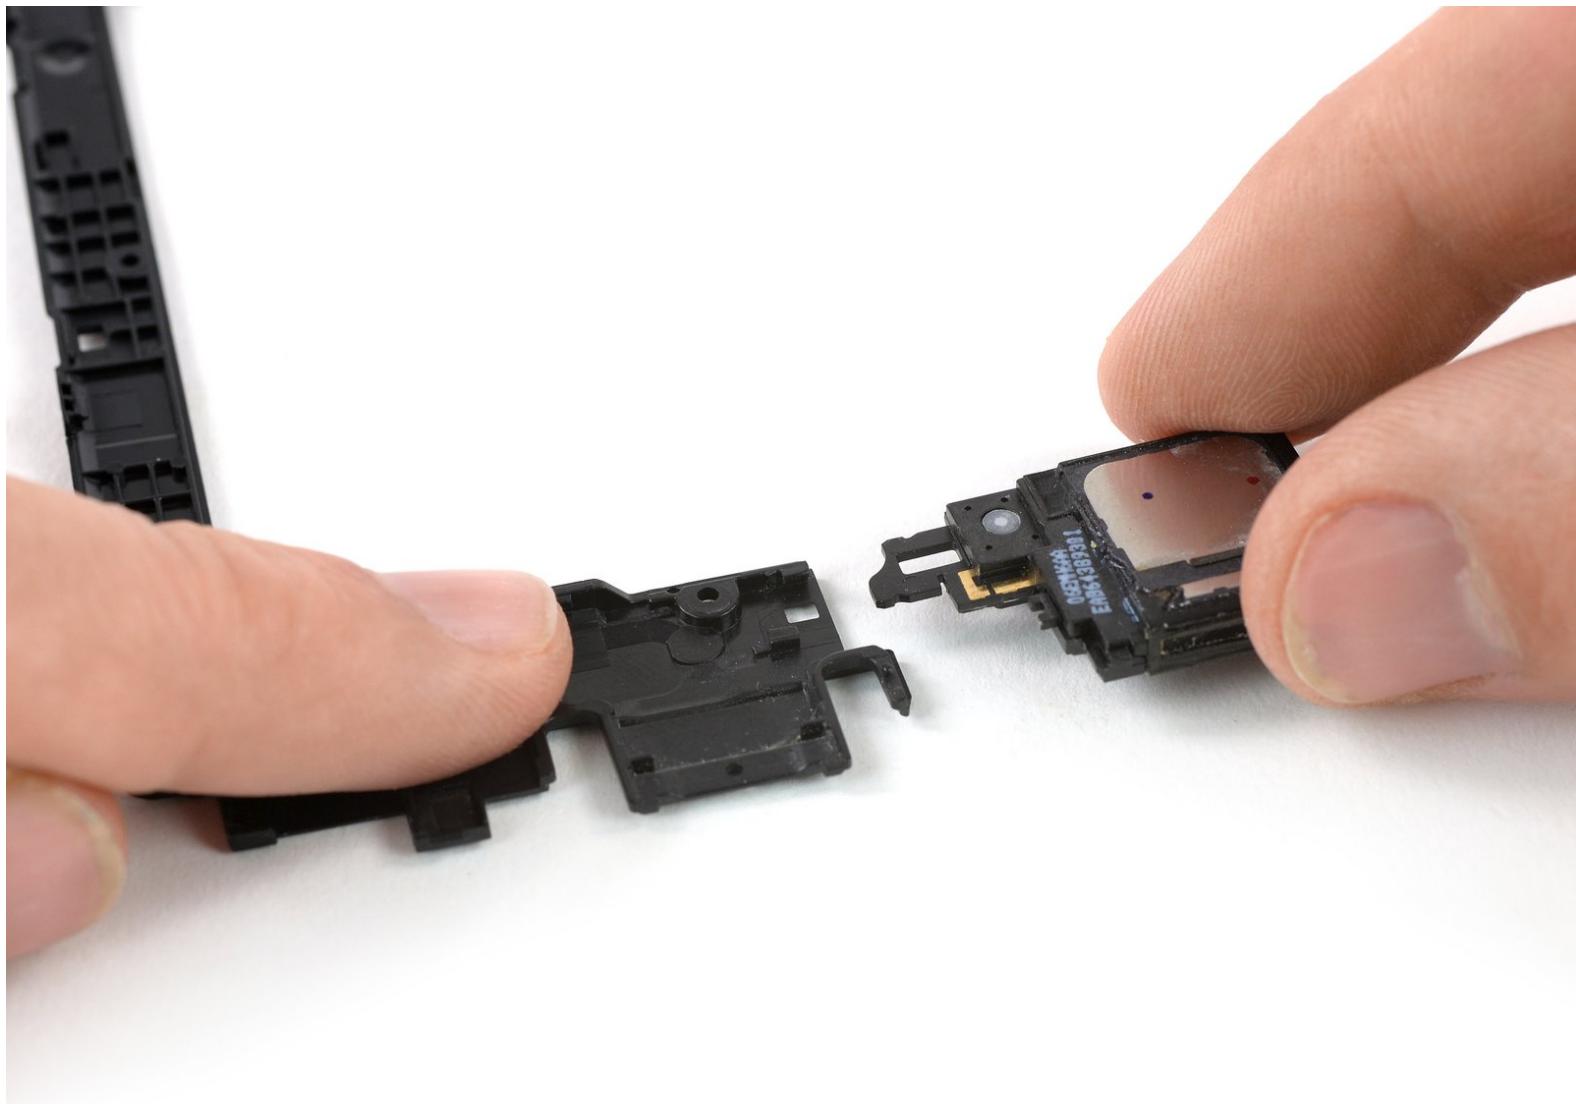

## INTRODUCTION

Are you tired of your LG V20 plying music that sounds distorted or is barely audible? The main speaker may be disconnected or damaged and require replacement. This guide will explain the steps needed to replace the speaker.

### TOOLS:

- [Tweezers](#) (1)
- [iFixit Opening Tools](#) (1)
- [Phillips #00 Screwdriver](#) (1)

## Step 1 — Battery



**⚠** Before disassembling your phone, discharge the battery below 25%. A charged lithium-ion battery can catch fire and/or explode if accidentally punctured.


- Use the flat end of a spudger and insert it in the small recess at the lower end of the battery.
- Use the spudger to lever out the battery and remove it.
- **i** You can do this with your fingers but take care not to puncture the battery with your fingernails.

## Step 2 — Midframe Assembly



- Remove the sixteen 4mm Phillips #00 screws attaching the back cover to the motherboard.

## Step 3

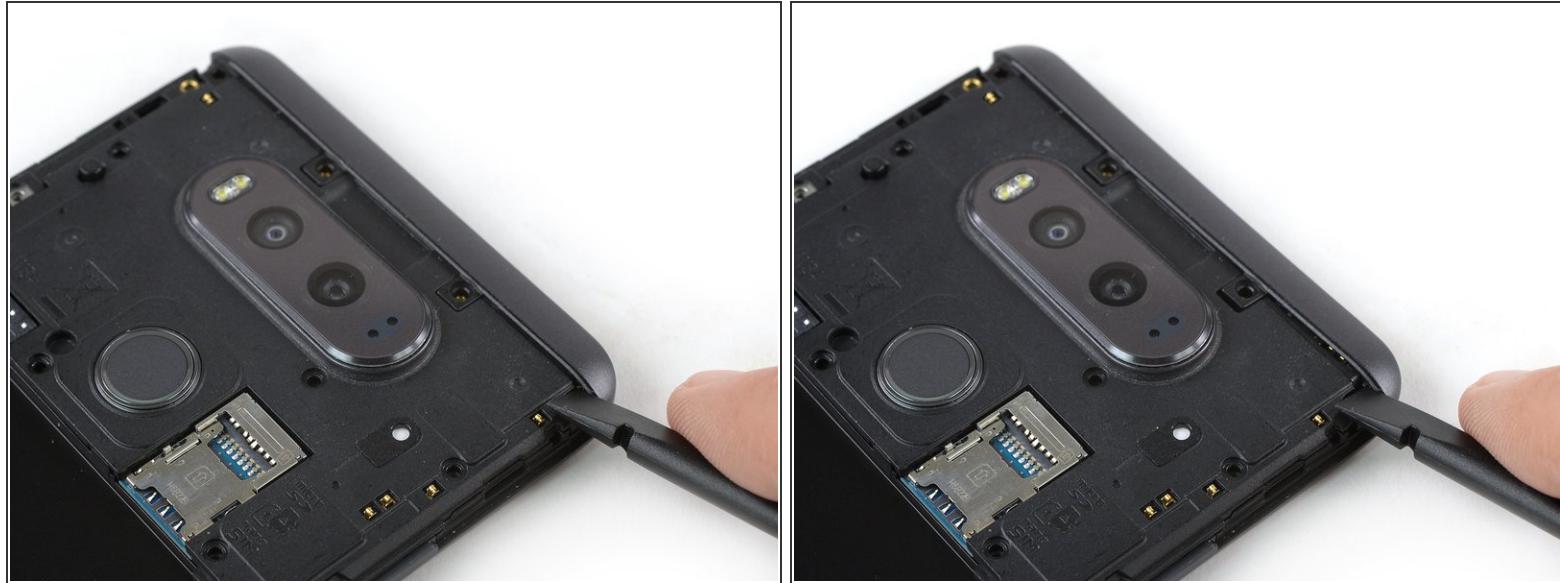

*(i)* The top and bottom frame section hold very tight to the mid frame. It is possible to pull them off with your hands. If you're not able to do so, use the following removal procedure:

- Use the flat end of a spudger and apply pressure to one of the corners of the frame section until you create a small gap.

## Step 4




- Flip the phone and insert an opening pick in the gap you created.
- Slide the opening pick along the gap until the frame section pops out of its plastic clamps.

## Step 5




- Remove the frame section.
- Repeat this procedure with the frame section on the other end of the phone.

## Step 6

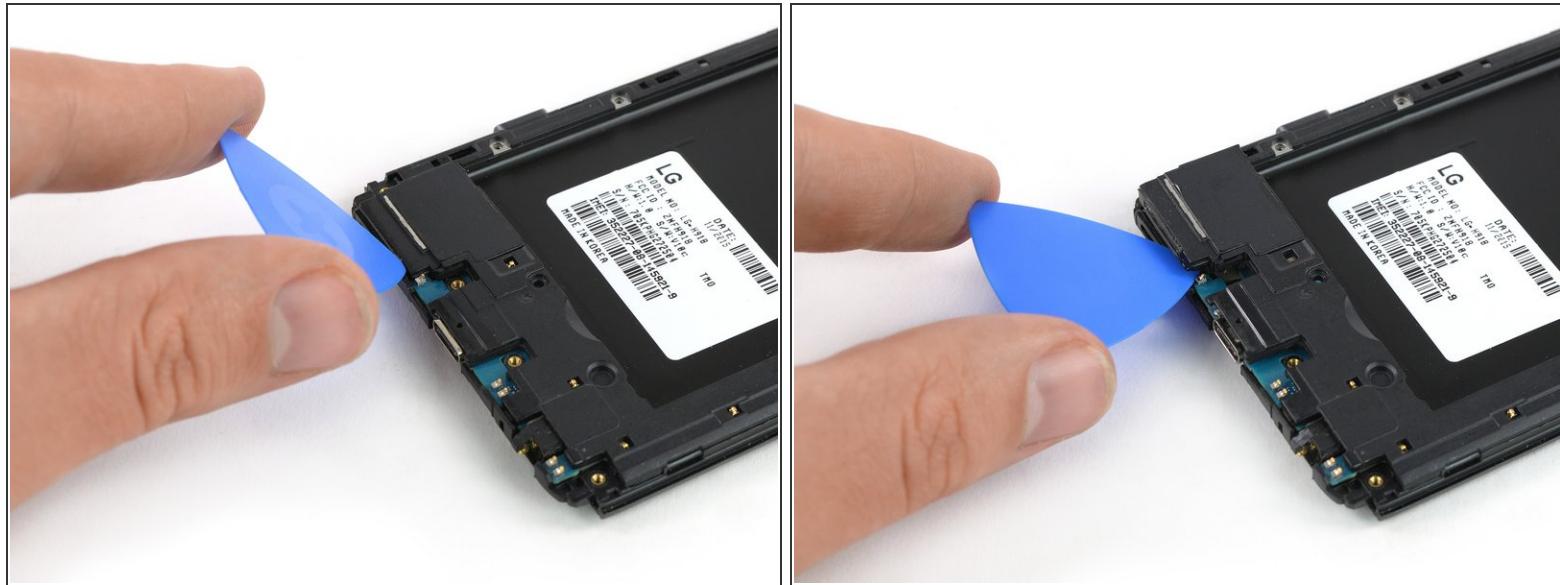

- The loudspeaker is attached to the cover of the motherboard. Use an opening pick to pry it up.


## Step 7

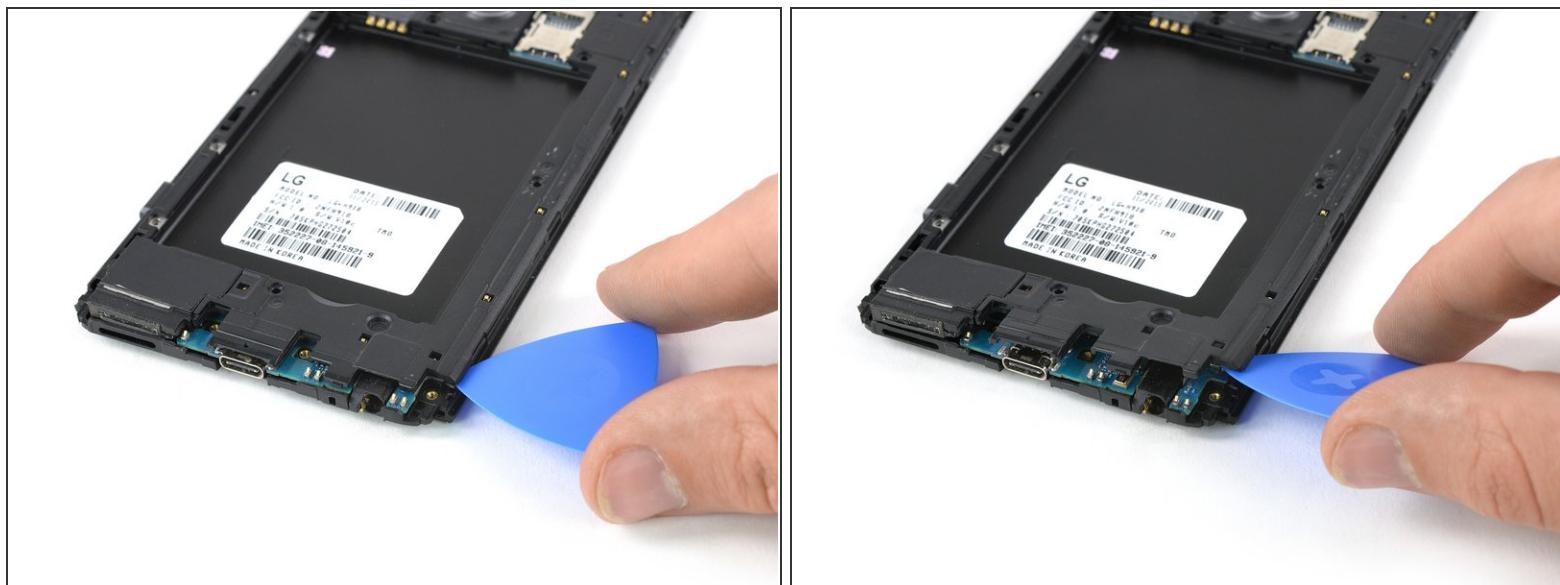

*(i)* The cover of the motherboard is held in its place by several plastic clamps.

- Use an opening pick to pry up the motherboard cover at the right corner at the bottom of your phone until it pops out of the plastic clamp.

## Step 8

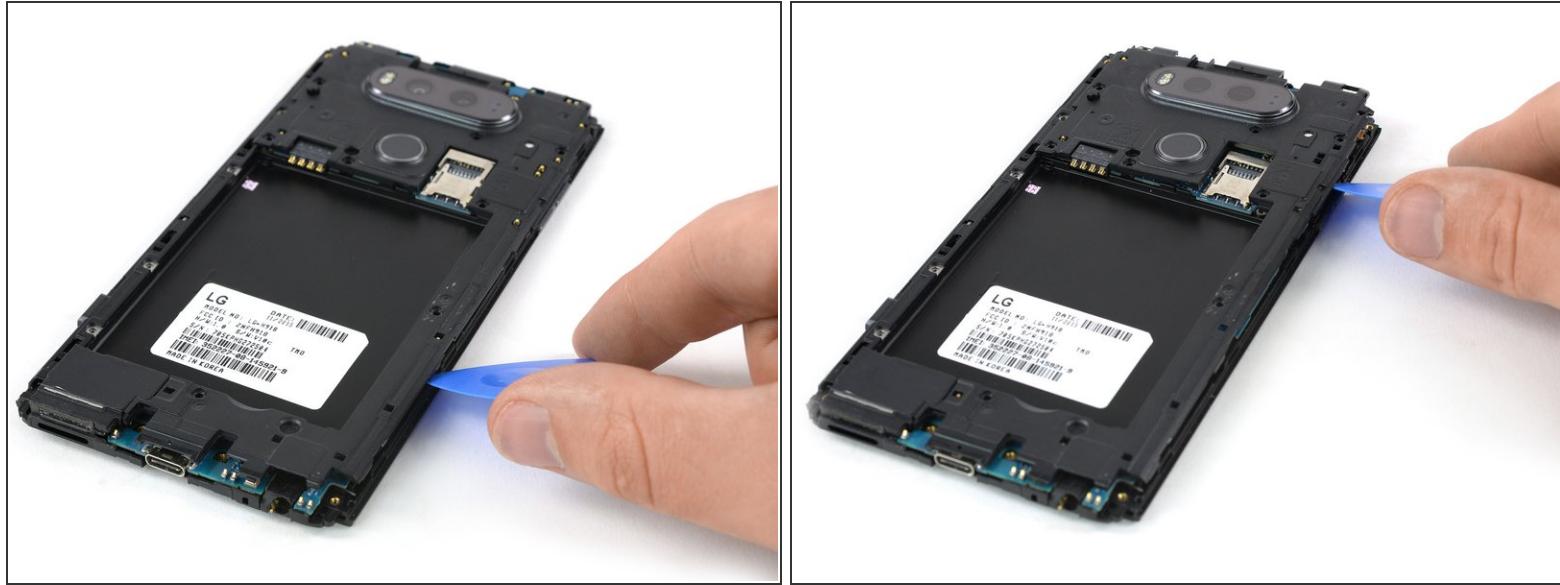


- Slide the opening pick along the mid frame and flip it sideways to open the plastic clamps holding the motherboard cover in its place.

## Step 9



- Remove the motherboard cover.

## Step 10 — Loudspeaker

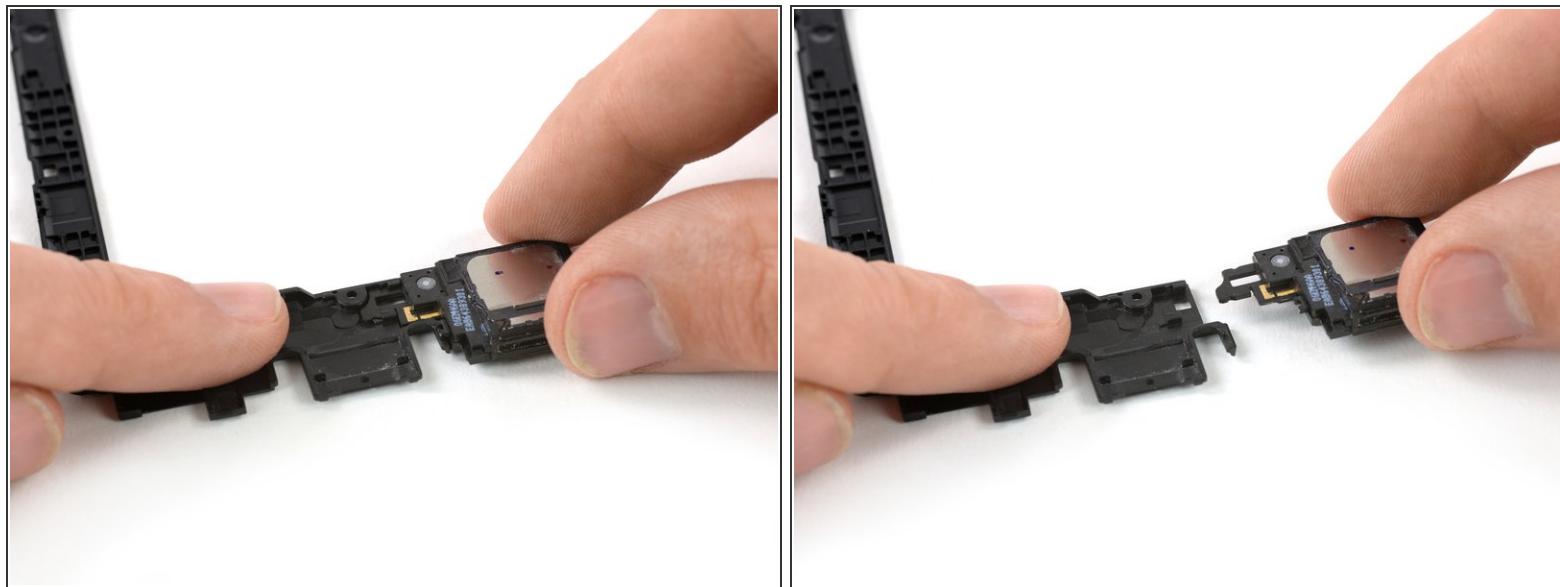

*(i)* The loudspeaker is attached to the cover of the motherboard by a tight plastic clamp.

- Flip the motherboard cover and pull the loudspeaker out of the plastic clamp at the lower end of it. Take care not to break the clamp.

To reassemble your device, follow these instructions in reverse order.