



# Nintendo Wii Remote Teardown

Simple guide explaining on how to take apart a wii remote.


Written By: Ashley



 **TOOLS:**

- [Tri-point Y0 Screwdriver](#) (1)
- [Flathead Screwdriver](#) (1)
- [Tweezers](#) (1)

## Step 1 — Starting off

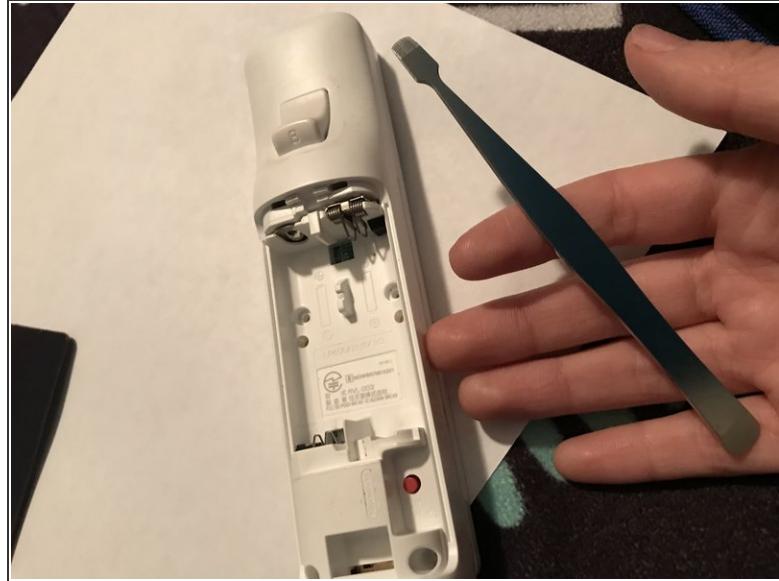



- First remove the back part of the wii remote and the batteries. Then use the tri wing screw to unscrew the four small screws.
- Next use a flathead screwdriver or maybe even your finger nails to pry apart the two piece.
- **BE CAREFUL TAKING THE TWO PIECES APART! IF NOT DONE CAREFULLY YOU MIGHT END UP WITH ALL THE INNER PIECES FLYING EVERYWHERE!**

## Step 2 — Remove the Sensor





- You're going to have two pieces and the sensor might be stuck on the motherboard side or the top side, but you still do the same thing no matter what side it's on.
- All you have to do to remove the sensor is just grab it and pull a small bit and it should come right out.

### Step 3 — Remove the “+” button covering.

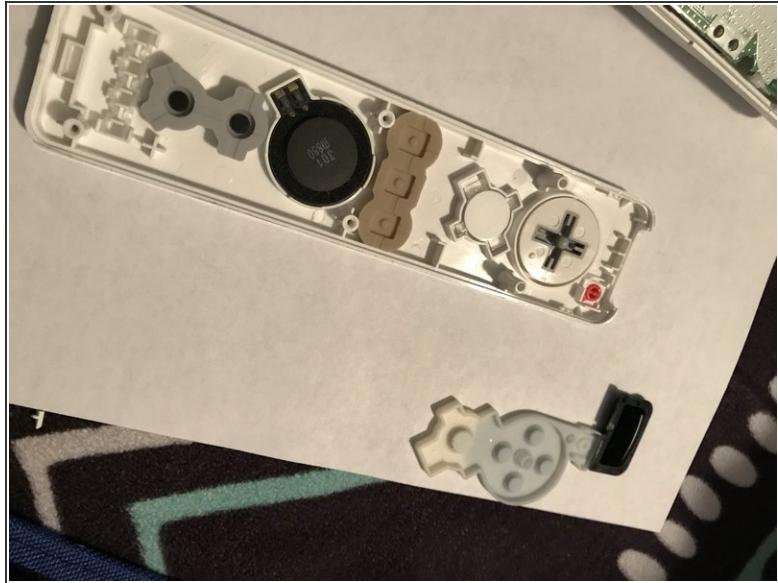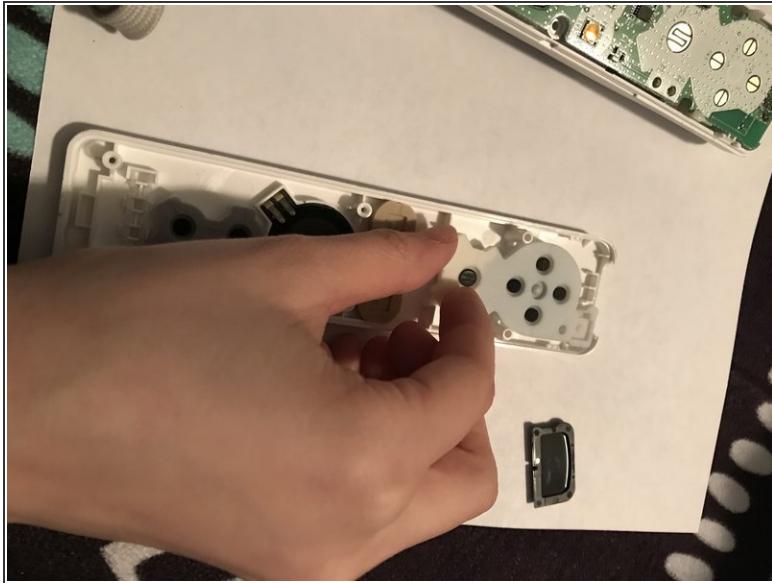

- Remove the “+” button covering. You also are going to want to do the same with all the other button coverings.
- *Not a step, just extra info* **The way the buttons would work is that you'd press down on the buttons which would then send a signal through the motherboard, and either the lights at the bottom would turn on or signals would be sent to the sensor which would then sync up with the sensor you would have up by your tv**

## Step 4 — Button Covering removal

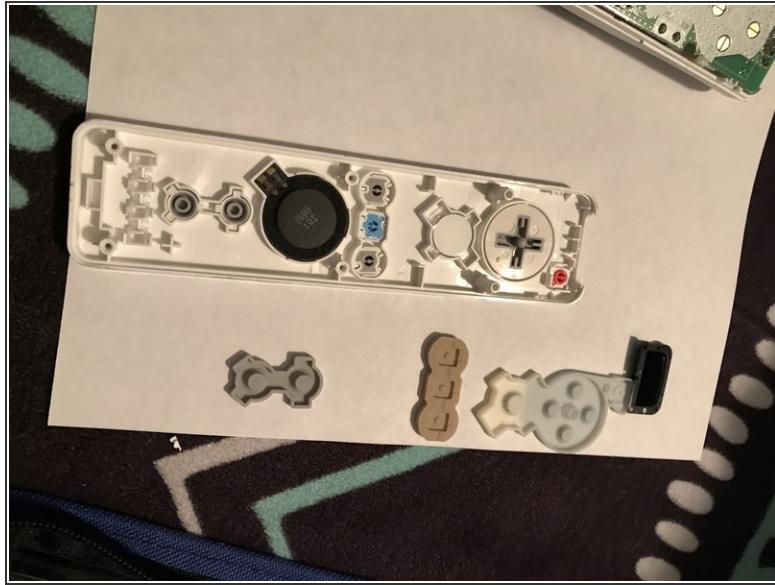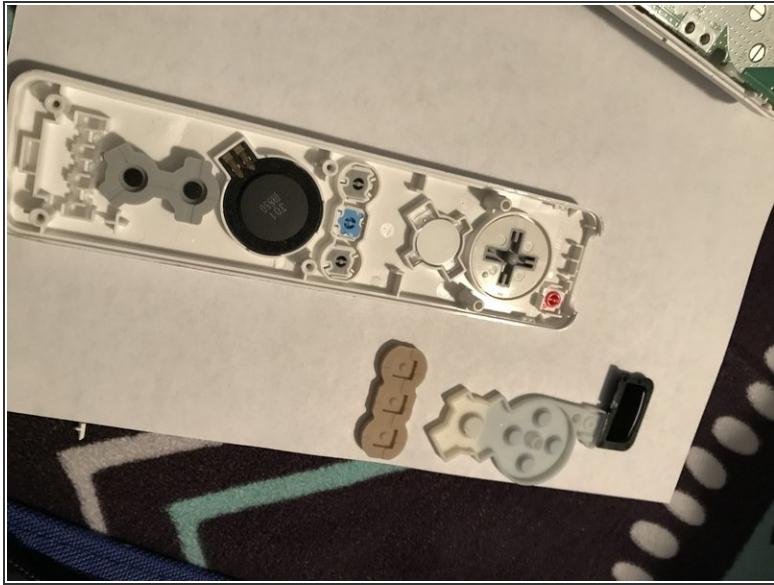


- Remove the coverings, all you have to do is just pick them up with your fingers or you can use tweezers as well to do this.

## Step 5 — Remove the speaker.




- Use tweezers to remove the speaker. To do this, grab the little tabs on the side and CAREFULLY start to pull it out of the slot so you don't damage the tabs. After a couple of seconds of pulling, the speaker should pop right out.

## Step 6 — Remove the buttons

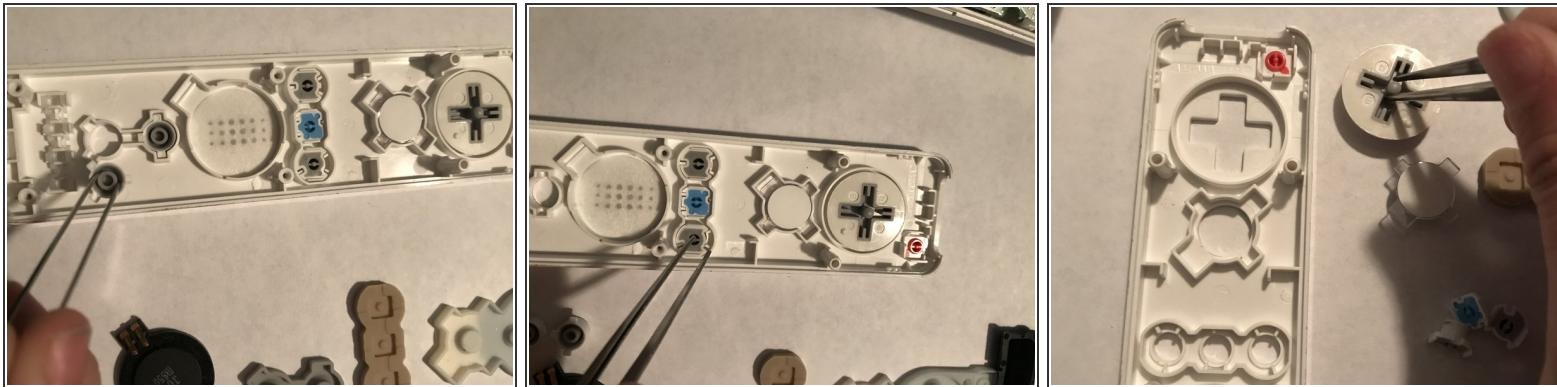


- To remove the buttons all you have to do is get some tweezers and use the little ridges that pop up as something to grab and pop them out. You'll want to take out the "1" "2" "-" "+" the home button, the "A" button and the d-pad button

## Step 7 — Check point

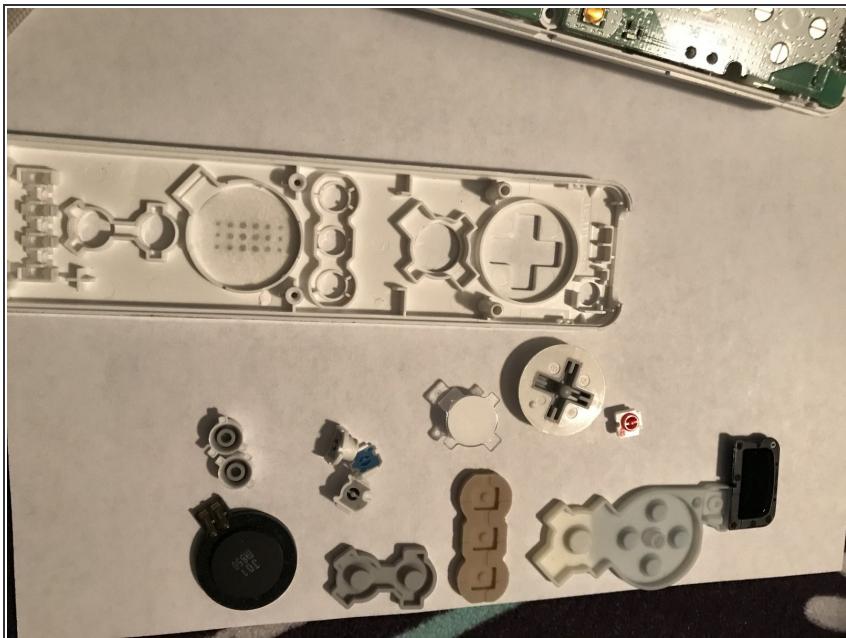


- Before moving on, make sure you have all your parts and that you haven't dropped anything.

## Step 8

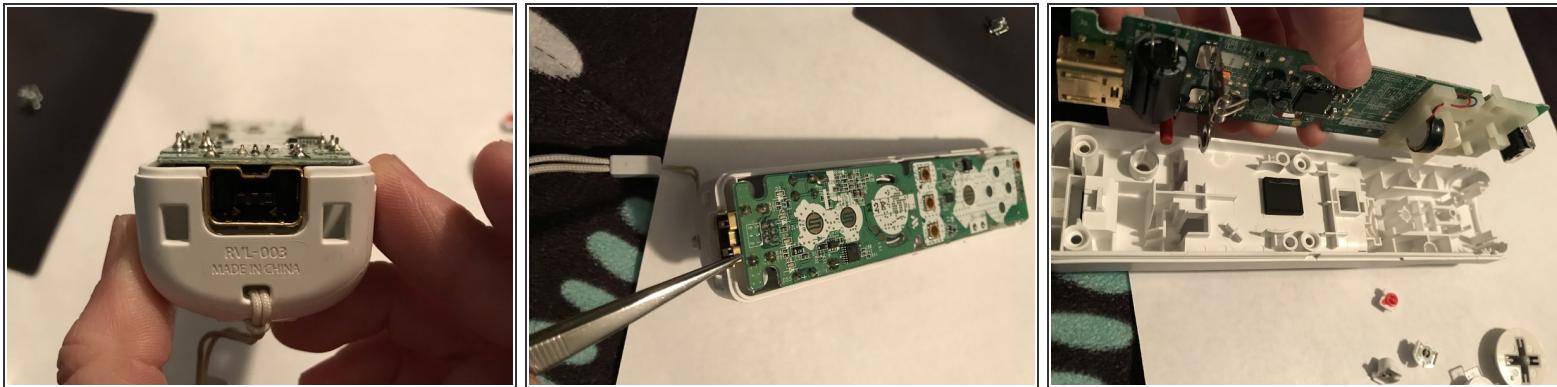


- To remove the motherboard, use some tweezers to grab one of the port walls and pull upward. Be careful to not damage the inside parts though!

## Step 9 — Removal of “B” button

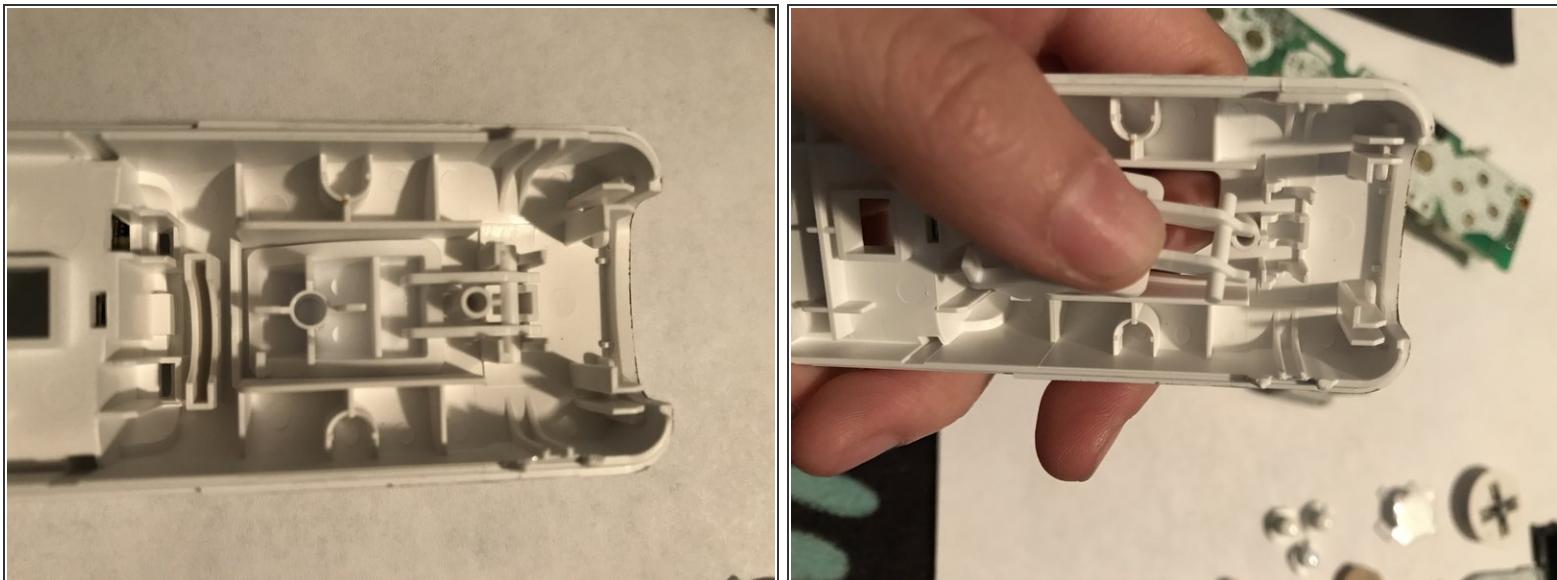


- To remove the “B” button, just push upward on it so the little pegs can pop out from the wall. You can also just get tweezers and use it to pop the pegs out.

## Step 10 — The last little thingy

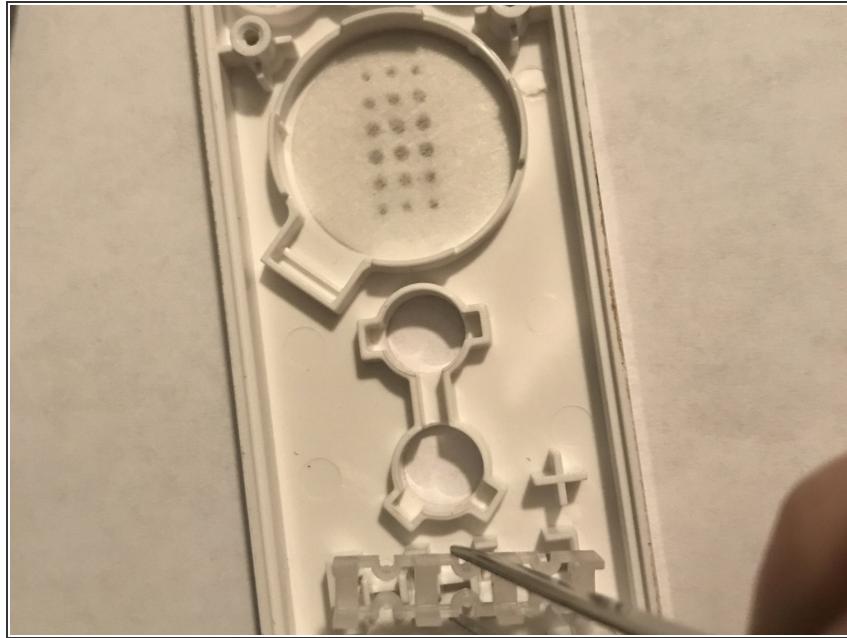

- To have this be a complete teardown, there's also this small piece at the bottom where the four lights would light up telling you if you're player 1,2,3 or 4. You don't really need to remove this piece but if you want to be thorough then go ahead.

## Step 11 — Done!

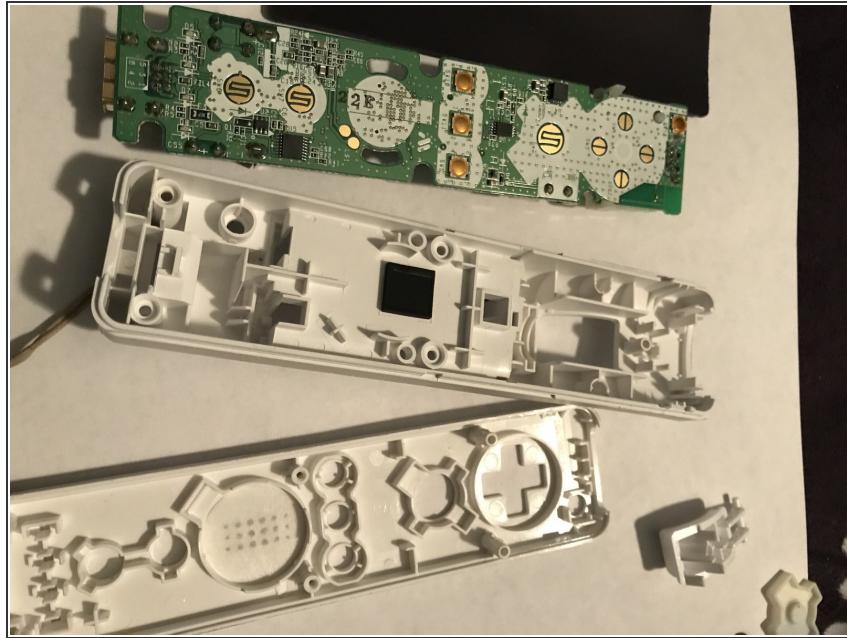

- All your pieces have been removed! If you would like to put the wii remote together just follow this guide in reverse.