




Sony Cyber-Shot DSC-S90 LCD Display Replacement

This guide details the disassembly of a Sony Cyber-Shot DSC-S90 and outlines specifically the removal and replacement of the LCD display.

Written By: Jonathan Arns

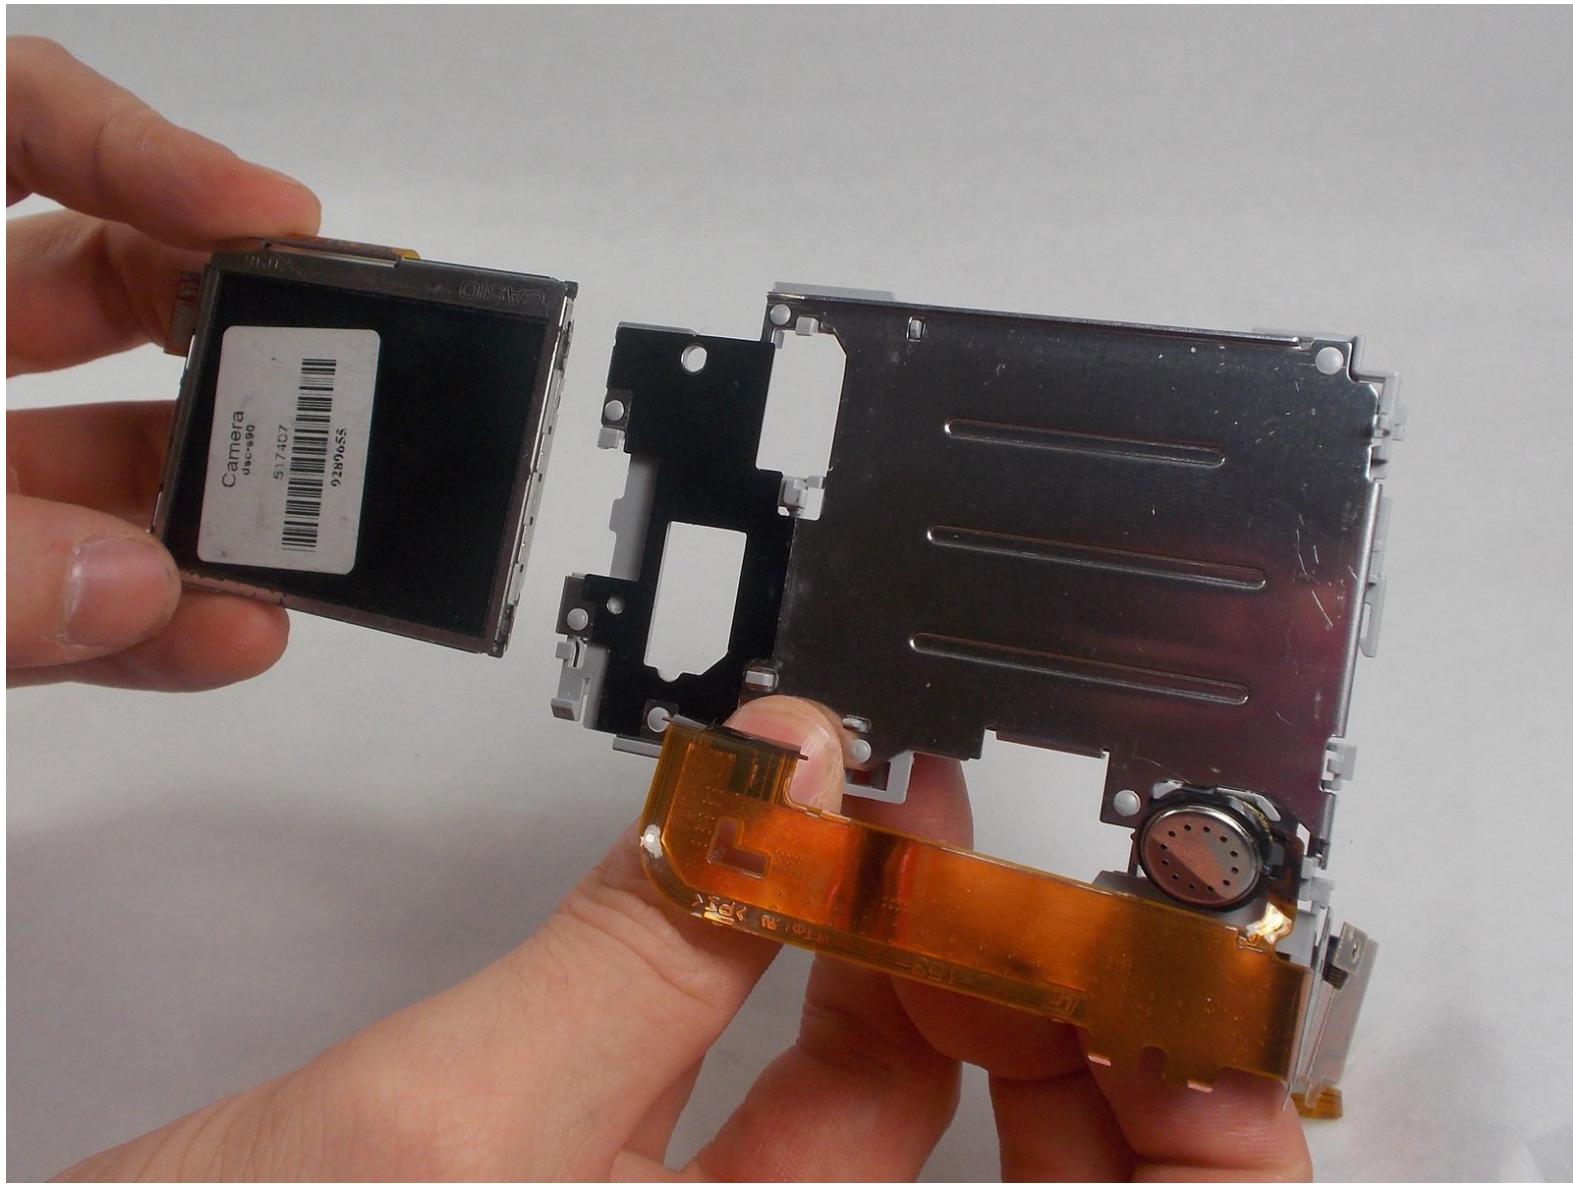

This document was generated on 2020-04-06 05:47:14 AM (MST).


INTRODUCTION

When removing the Sony Cyber-Shot DSC-S90 LCD display, it's important to know when replacing or dissembling the overall display, it is one of the few processes that required disassembly of the majority of the camera. You will need a total of two tools consisting of the plastic opening tool, and the J00 screwdriver. This is a moderately difficult step, but may take more time than anticipated.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Spudger](#) (1)

Step 1 — Batteries

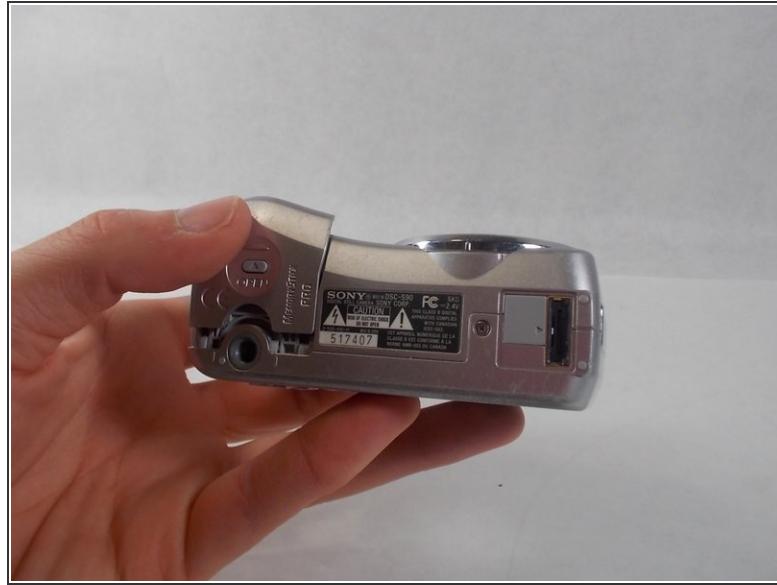


- Hold down the "open"button (gray oval with arrow pointing upwards) on the battery port door.
- While holding the button downwards, slide the door upwards to unlock and open the door.

Step 2




- Pull open the door and allow the batteries to fall out.

Step 3 — Back Case

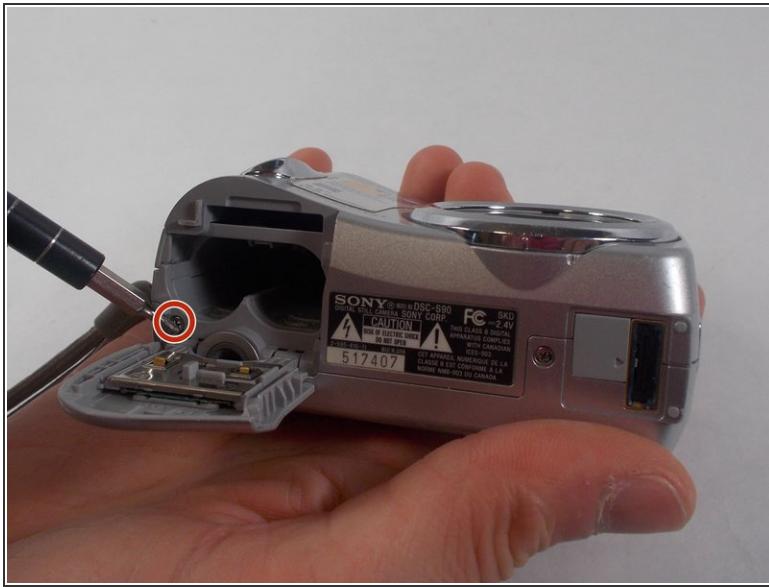


- Remove the 2mm Phillips #00 screw under the battery port door.
- Remove the 2mm Phillips #00 screw towards the right of the bottom-side of the camera.

Step 4

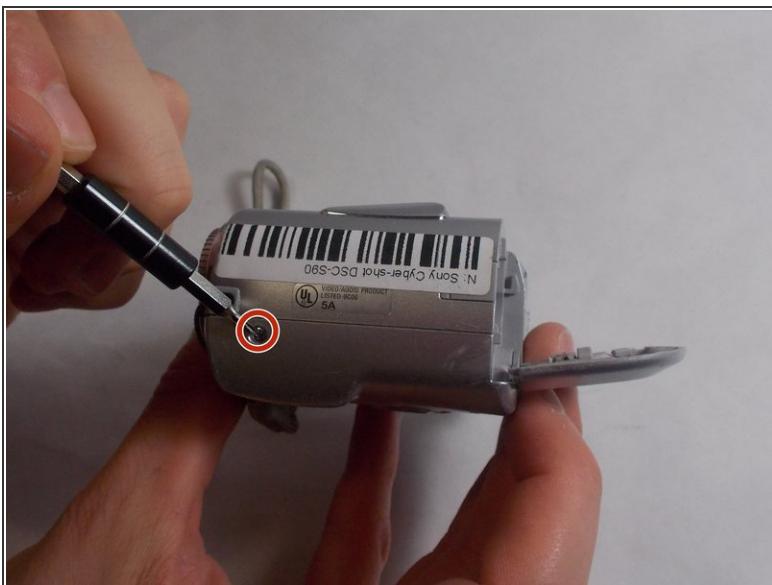


- Remove the two 2mm Phillips #00 screws (one on each side of the camera).

Step 5

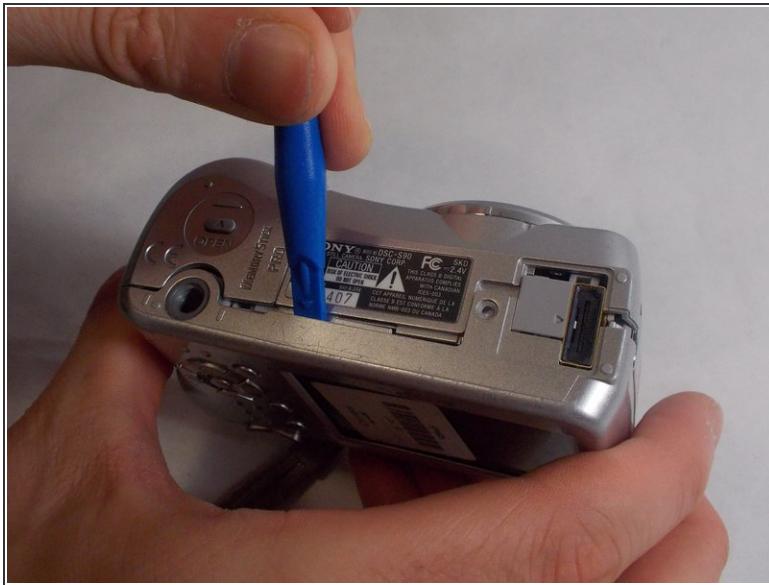


- Use an opening tool to unlock the front case from the main body of the camera. Use the tool on the right side and bottom of the camera with the LCD screen facing you.

Step 6

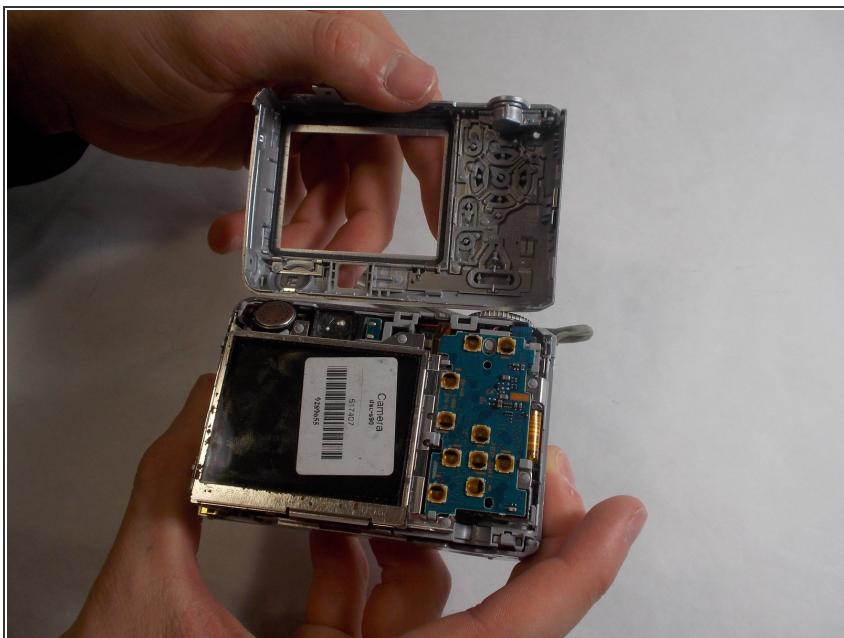


- Pull apart the back case from the main body of the camera.

Step 7 — Front Case

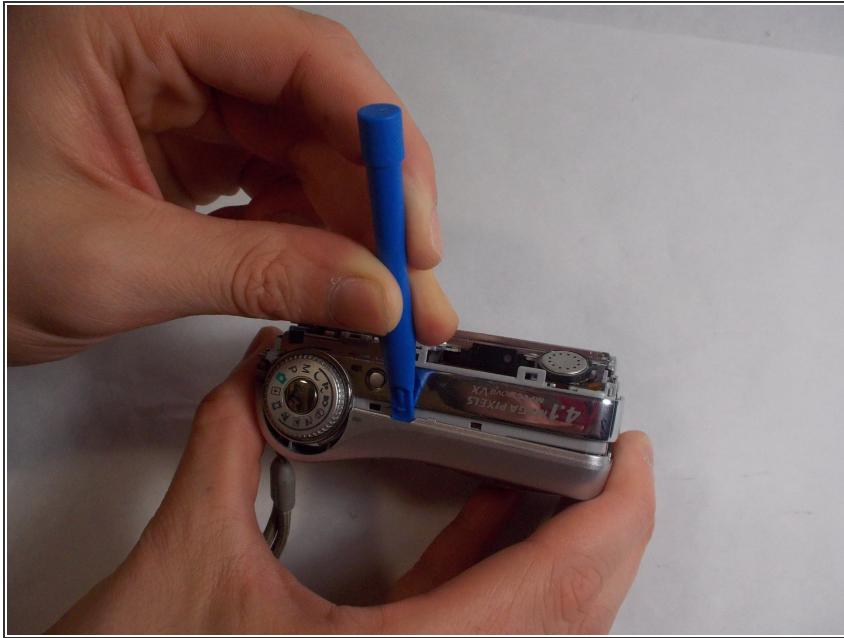

- Use an opening tool to unlock the front case from the main body of the camera. Use the tool on the top of the camera.

Step 8

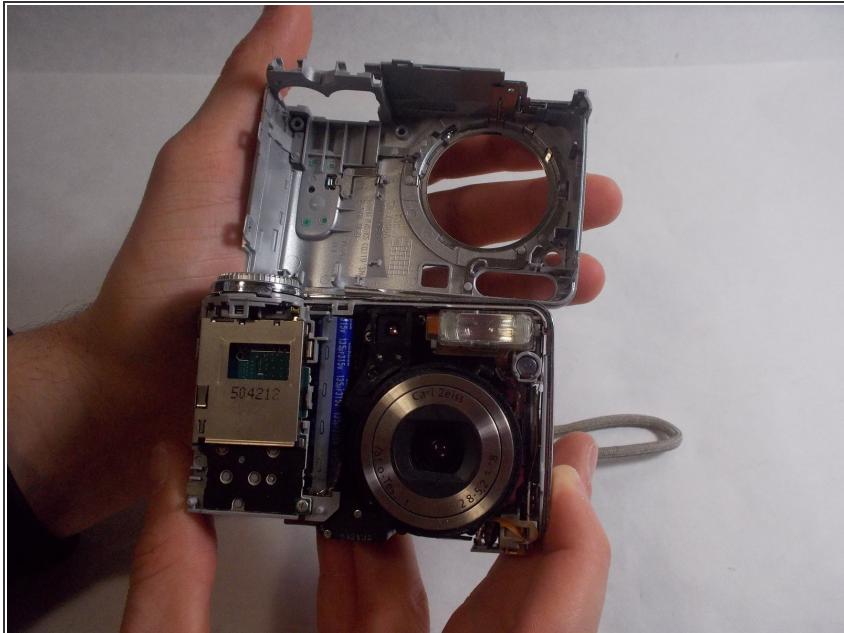

- Pull apart the front case from the main body of the camera.

Step 9 — Top/Side Case




- Release all clips and latches keeping the casing in place using a spudger, opening tool, or screwdriver.

Step 10




- Now the casing can be removed after all latches have been undone.

Step 11 — Battery Terminal

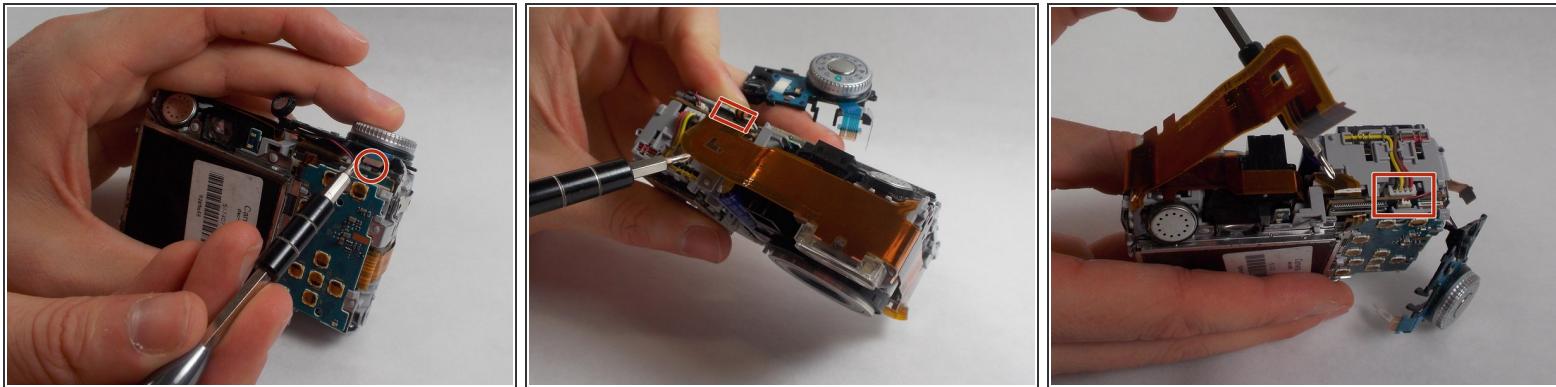


- Disconnect the ribbon cables on top of the battery terminal using a spudger or screwdriver.

Step 12

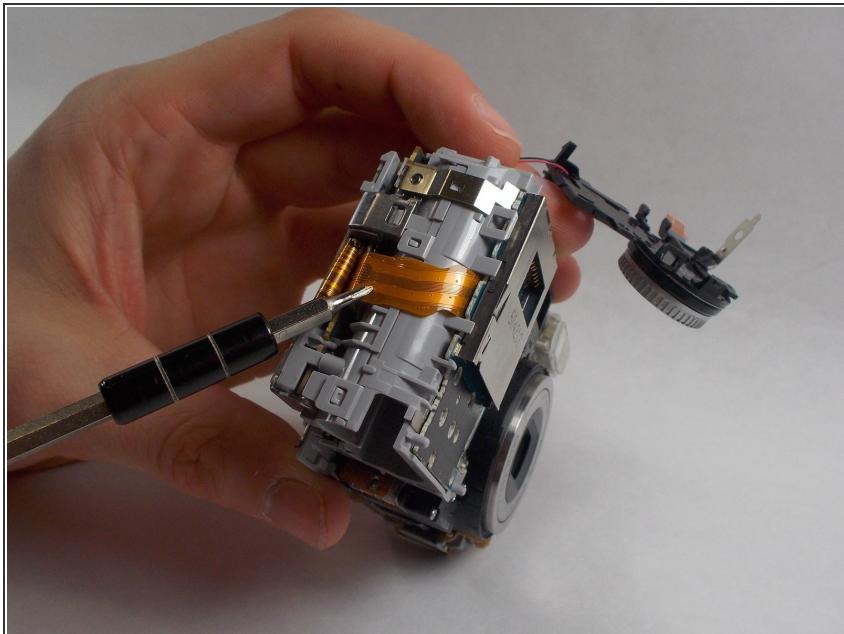


- Disconnect the remaining ribbon cable on the side of the camera using a spudger or screwdriver.

Step 13

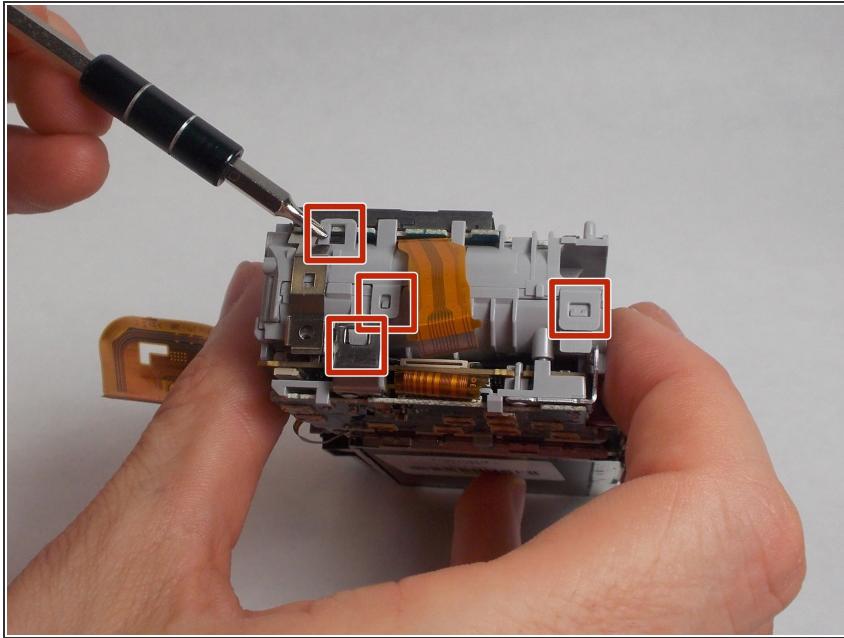


- Use a spudger or screwdriver to unclip the clips. This releases the battery terminal.

Step 14

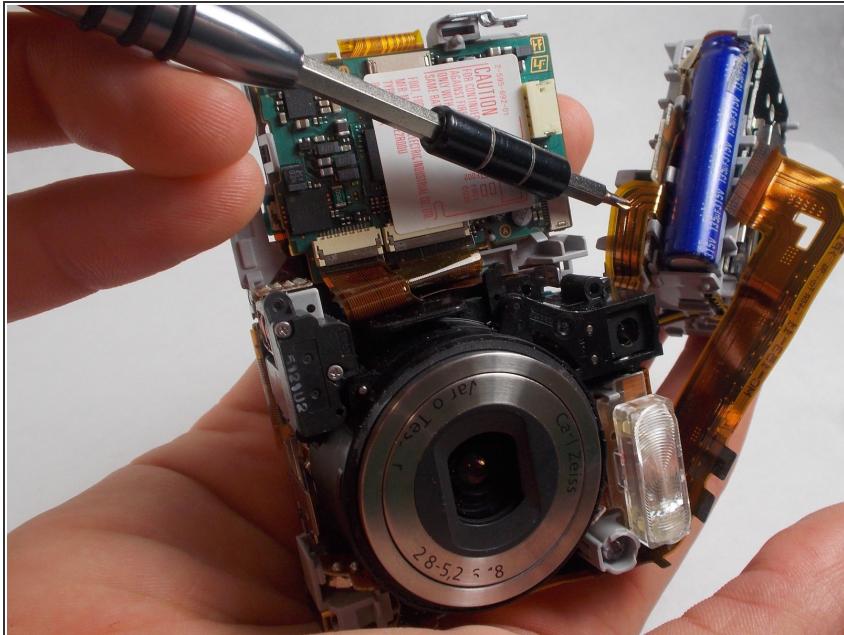


- Once the battery terminal is unclipped, pull this ribbon cable out with a spudger or screwdriver to finish freeing the battery terminal.

Step 15

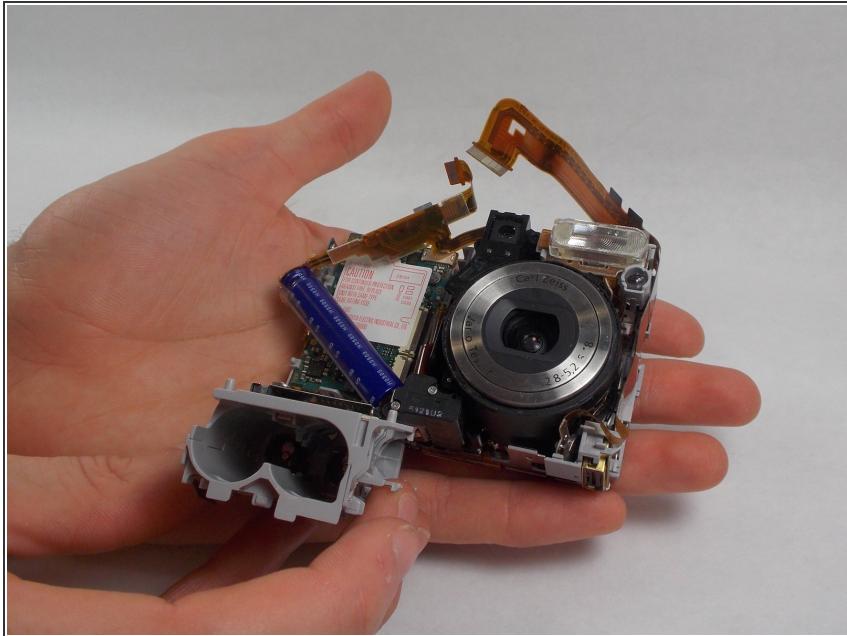


- Now the battery terminal can be separated from the main body of the camera.

Step 16 — Motherboard

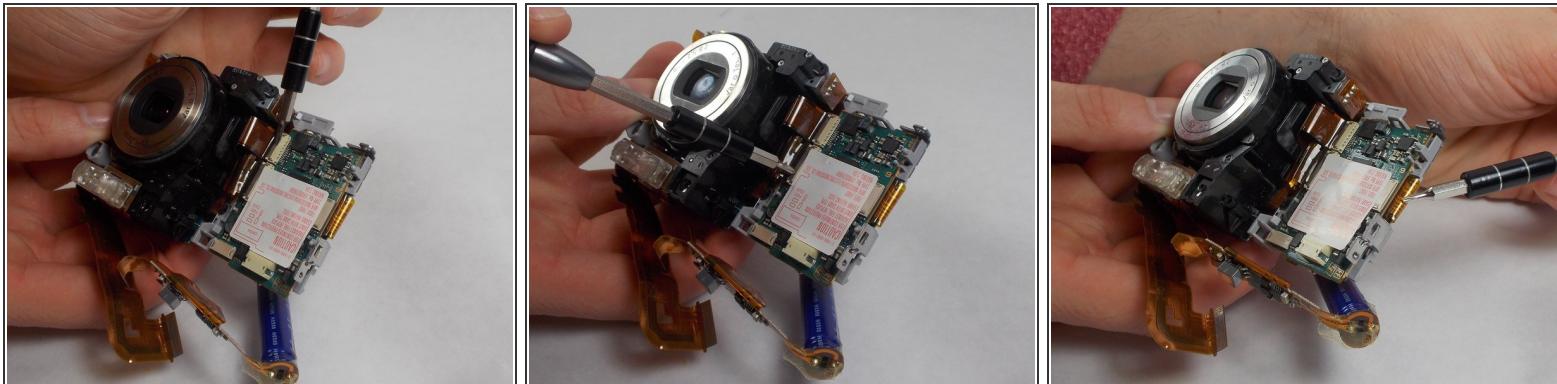



- Disconnect the three pictured ribbon cables using a spudger or screwdriver.

Step 17

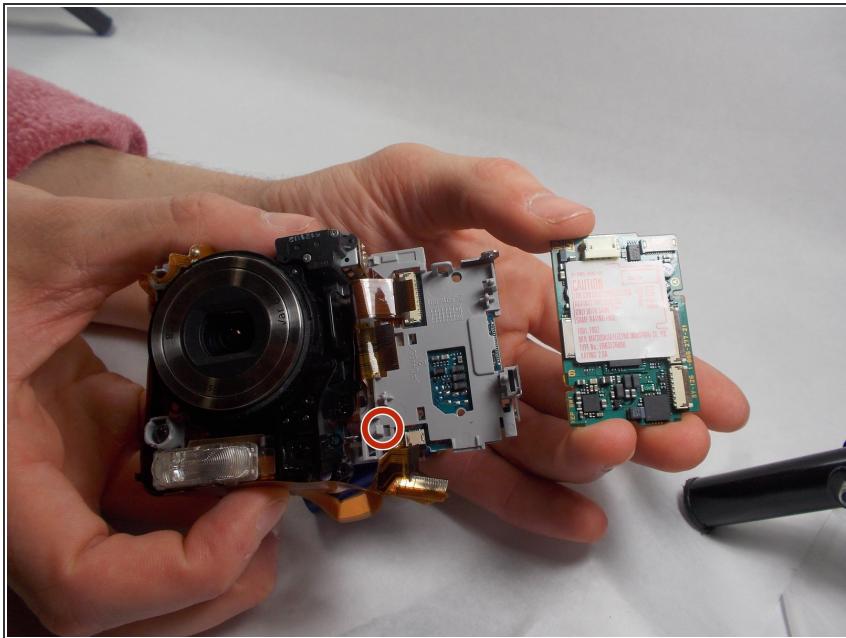


- Push the clip to the left and lift the motherboard upwards and away from the camera.

Step 18

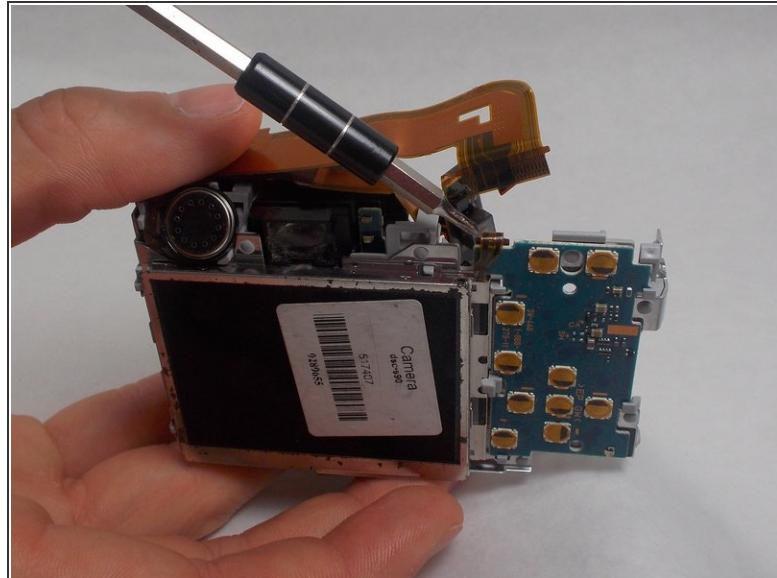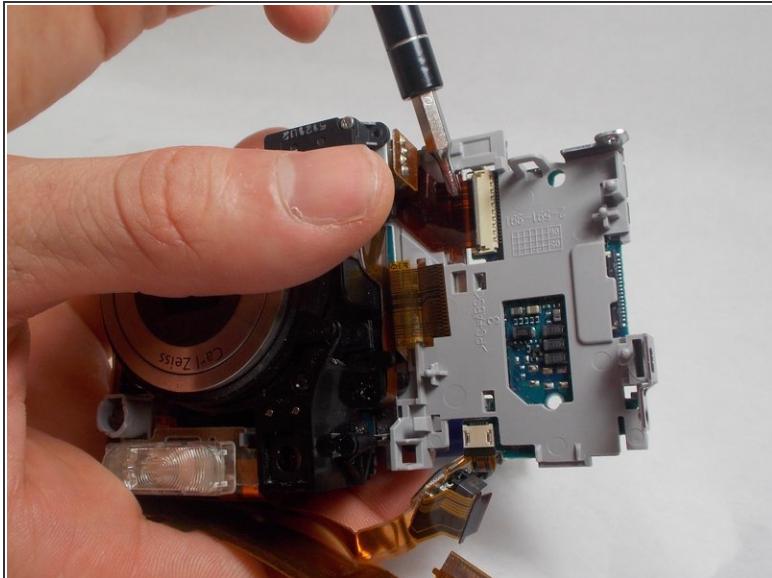



- Disconnect the two ribbon cables using a spudger or screwdriver.

Step 19

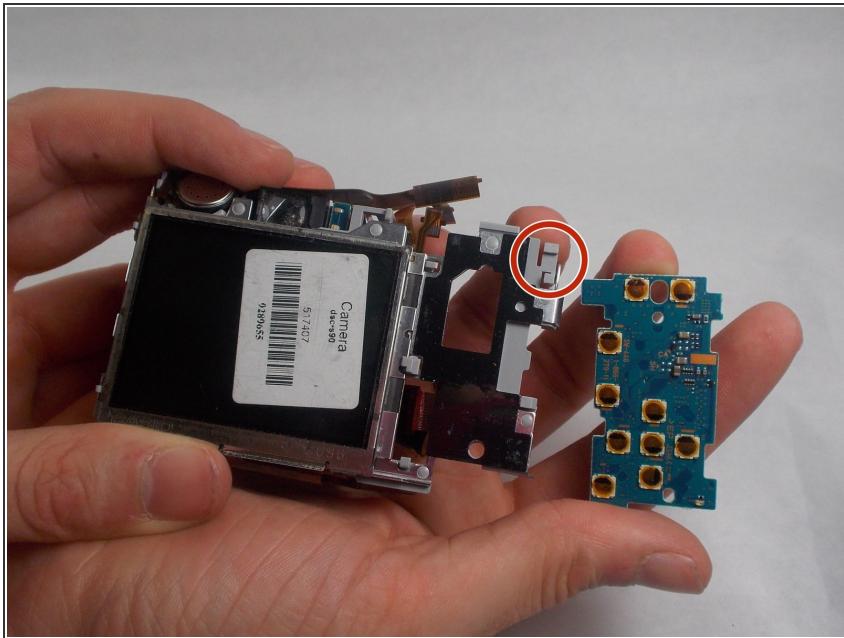


- Unlatch the clip and lift the motherboard upwards and away from the camera.

Step 20 — LCD Display

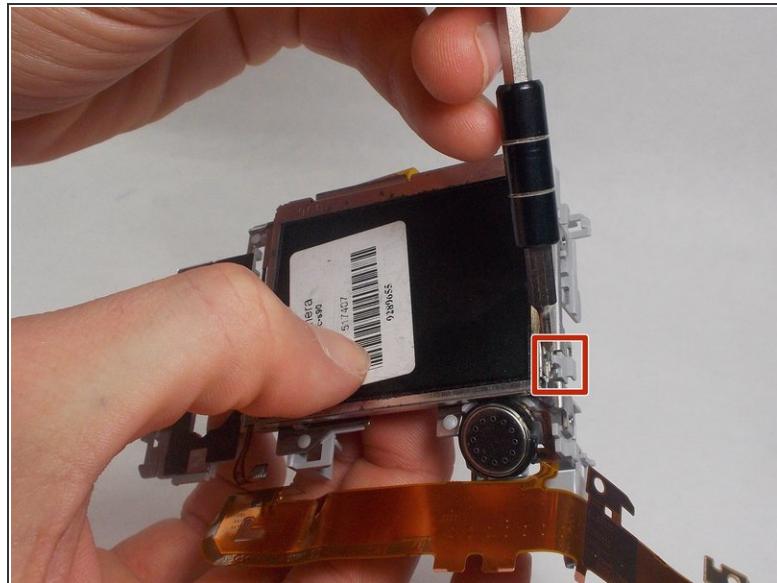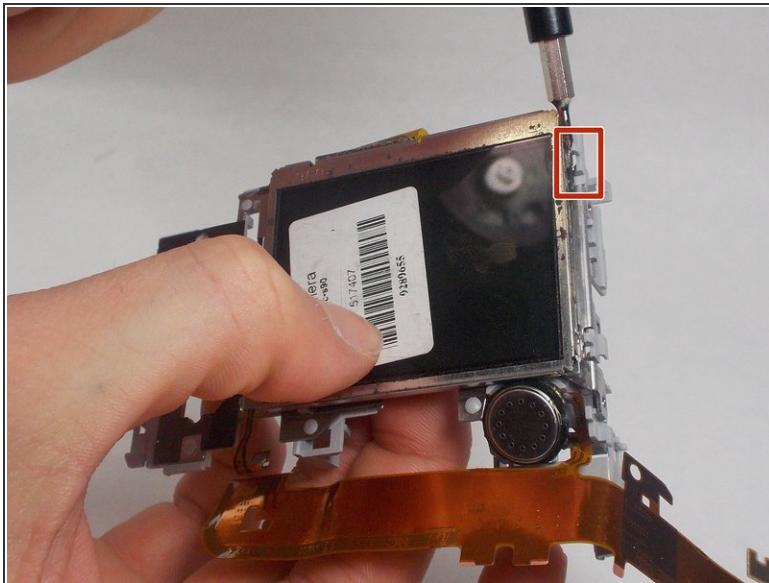

- Unlatch the two clips holding the LCD display onto the main camera housing using a spudger.

Step 21

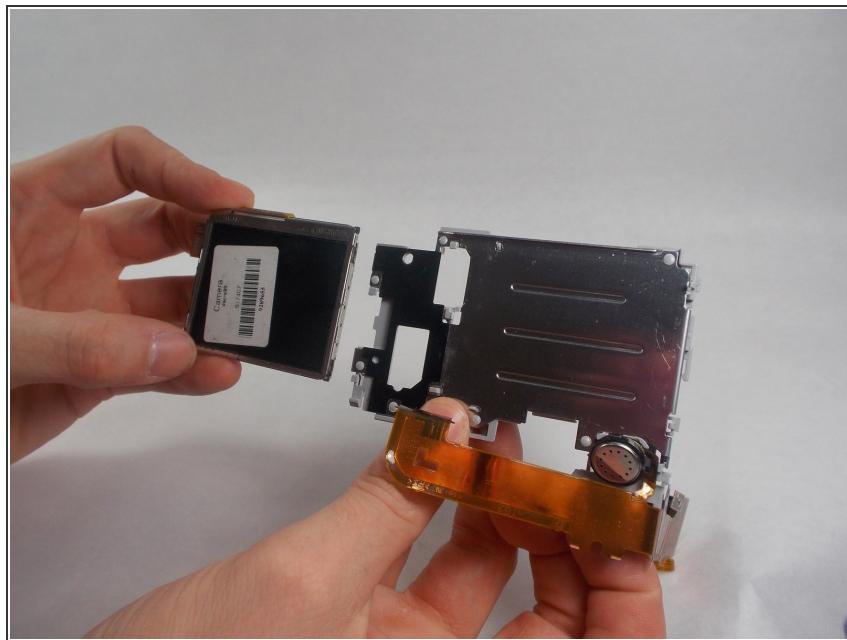

- Remove the LCD.

To reassemble your device, follow these instructions in reverse order.