




Sony Vaio PCG-6J2L Speaker Assembly Replacement

Written By: Ryan

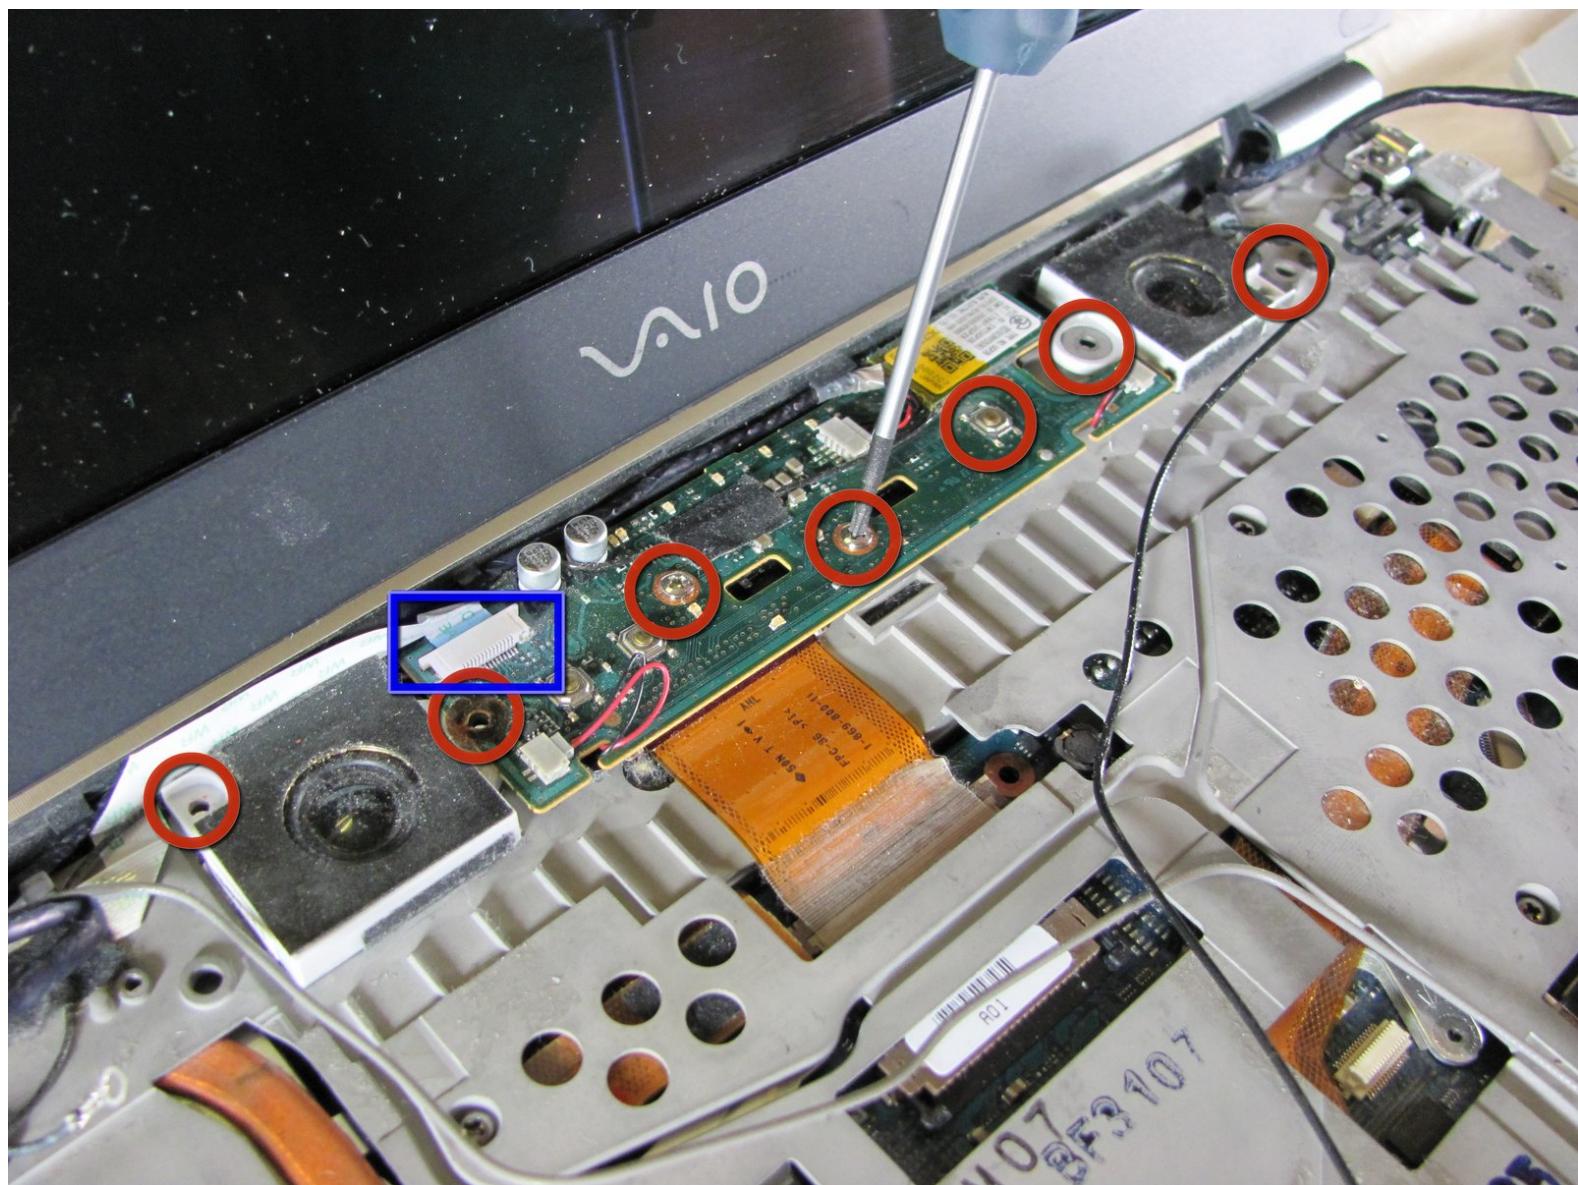

INTRODUCTION

This is a detailed repair manual to show how to properly remove and install speakers in the Sony Vaio PCG-6J2L.

Hazards

Keep out of reach of children and pets.

DO NOT attempt to teardown or repair your device under the influence of drugs or alcohol.

DO NOT ingest any parts of the system.

Use the correct tools as stated in the tools section.

DO NOT touch any gold connectors on interior or exterior of the system.

Make sure system is unplugged before performing any maintenance on the system.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Spudger](#) (1)

Step 1 — Battery




- Set the computer display-side down.
- Unlock the battery by sliding the port-side latch to the 'unlock' position.

Step 2



- On the opposite side of the battery, press the release latch and slide the battery away from the main body to remove.



Step 3 — Keyboard

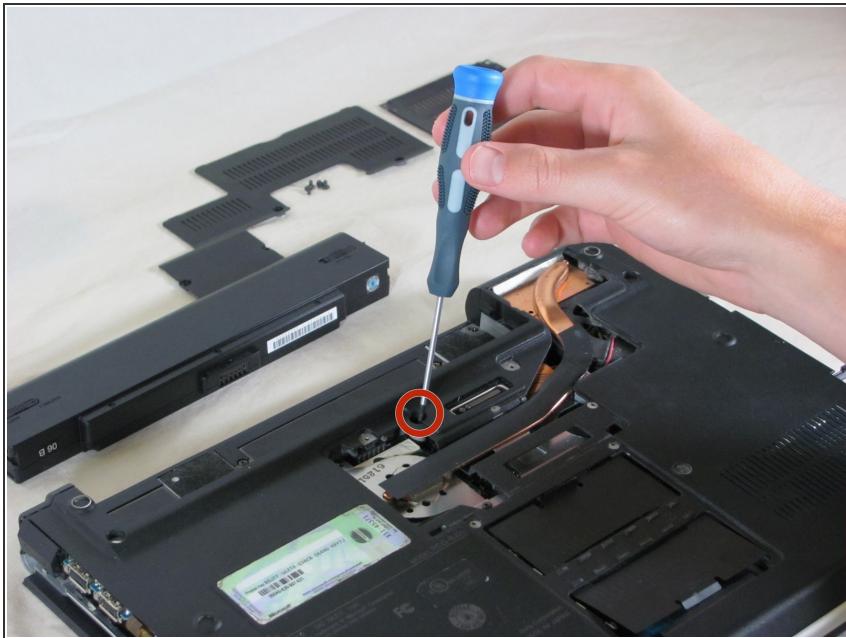

(i) Ignore the removal of the heat sink and memory panels as depicted. They do not need to be removed for the completion of this guide.


- Remove the Torx security screw near the center of the battery-side edge.

Step 4

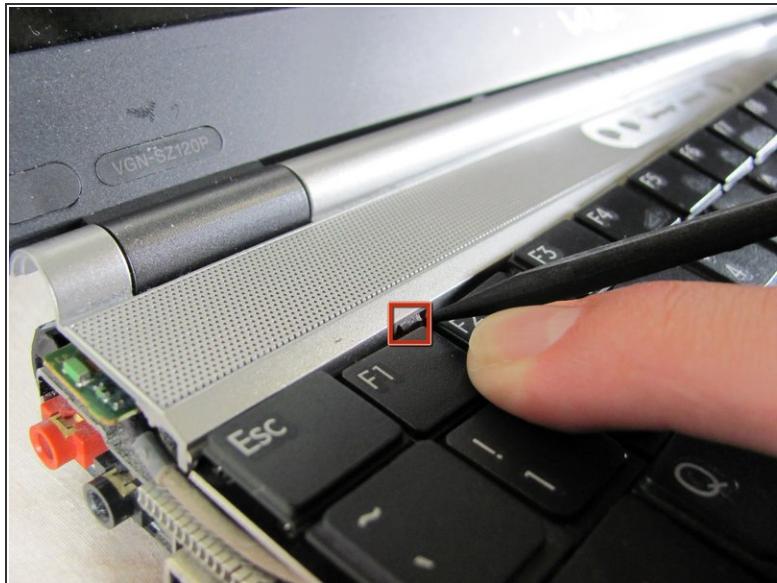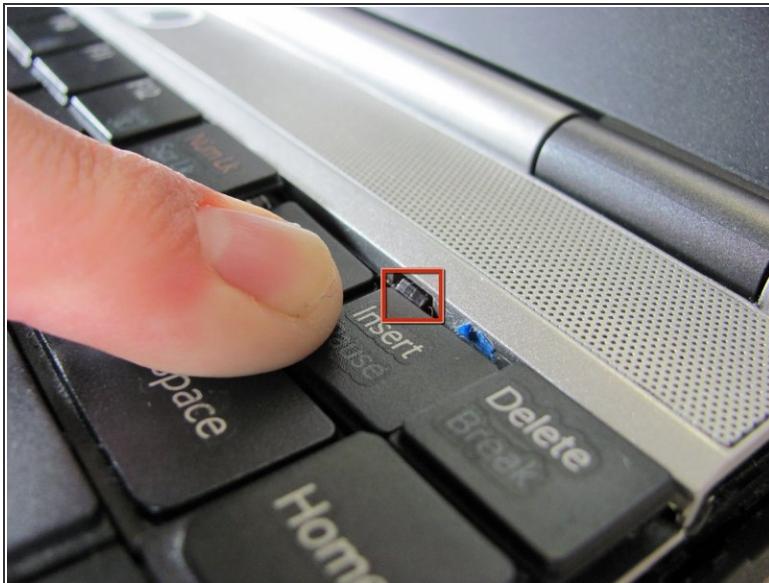

- Press the tabs on each side of the display-side of the keyboard with the flat edge of a spudger.
- Pull the keyboard toward the mouse pad and gently lift up.

Step 5

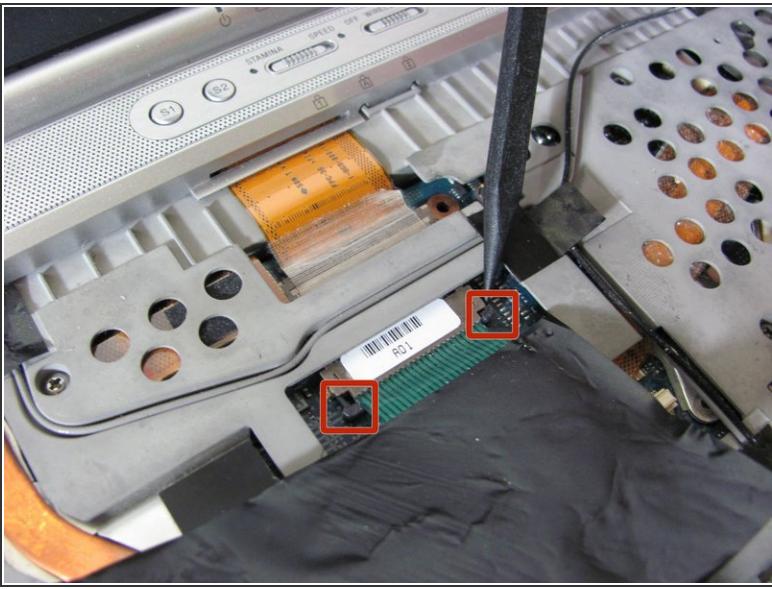

⚠ The keyboard is still attached by ribbon cable, don't try to remove the keyboard entirely yet.

- Disconnect the ribbon cable by pressing the tabs on either side of the connector. Pull the cable out parallel to the connector.
- Remove the keyboard.


Step 6 — Mouse Assembly



- Turn the laptop upside down.
- Remove the three screws from the front mouse panel located on the bottom of the laptop.


i Carefully flip the laptop back over. Remove three more screws from the top securing the panel. A ribbon cable will still be attached to the panel when you remove it.

Step 7

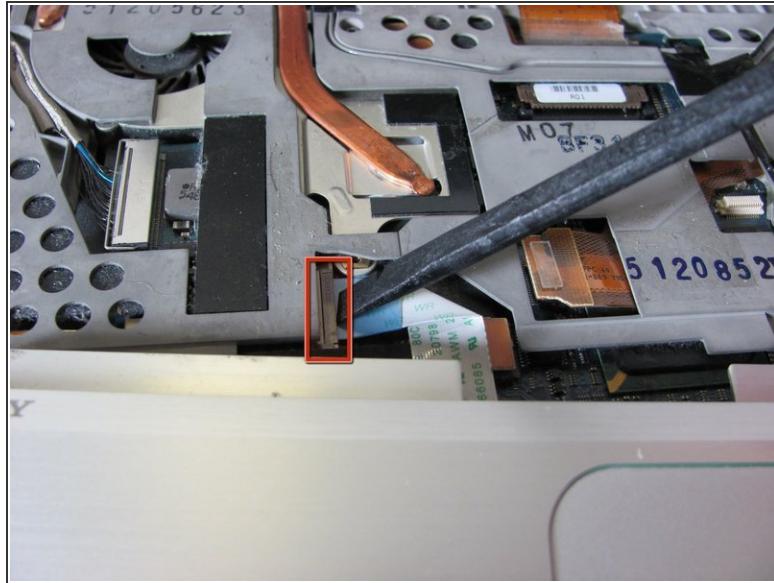


- Lift the mouse assembly just enough to access the connecting ribbon cable.
- Lift the ribbon cable lock to remove the cable.
- Carefully remove the mouse panel assembly and set aside.

Step 8 — Speaker Assembly

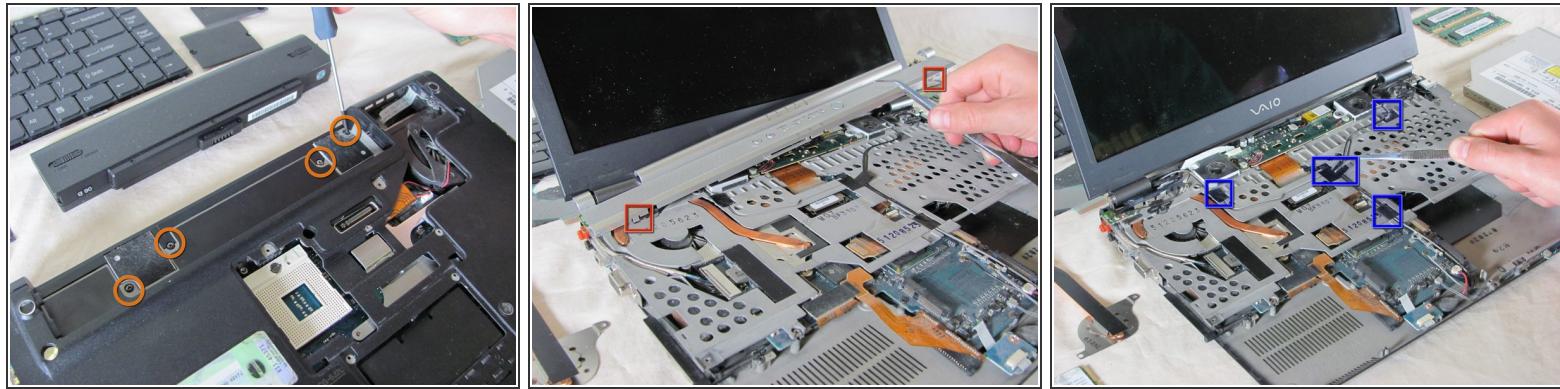


- Remove the four screws from the underside of the computer. These screws are located underneath where the battery sits and secure the top keyboard panel.
- To remove the panel below the screen, press up on the two tabs holding the panel in and lift up. The panel should pop off.
- Before proceeding, remove all black tape holding down wires and other cabling.

Step 9

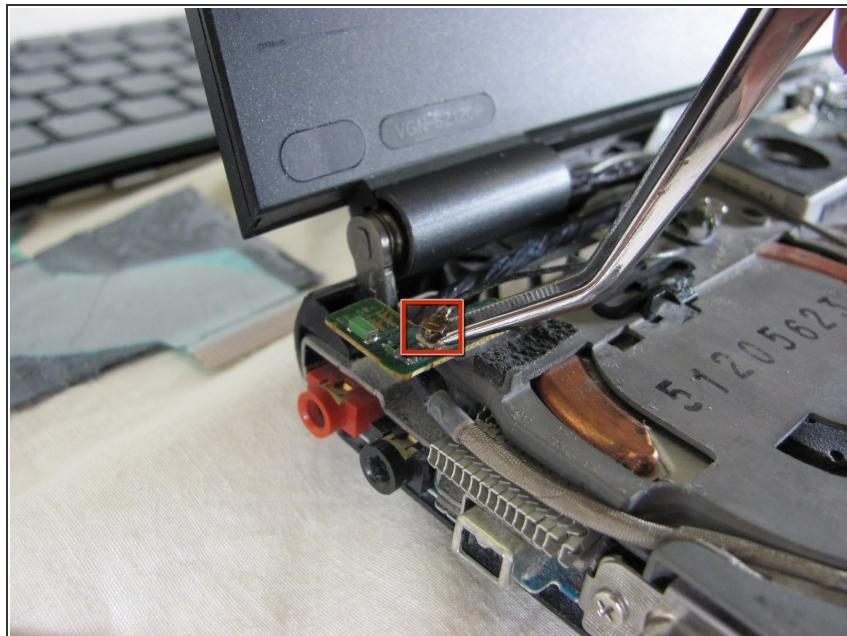

- Pop off the antenna using a pair of tweezers.

Step 10

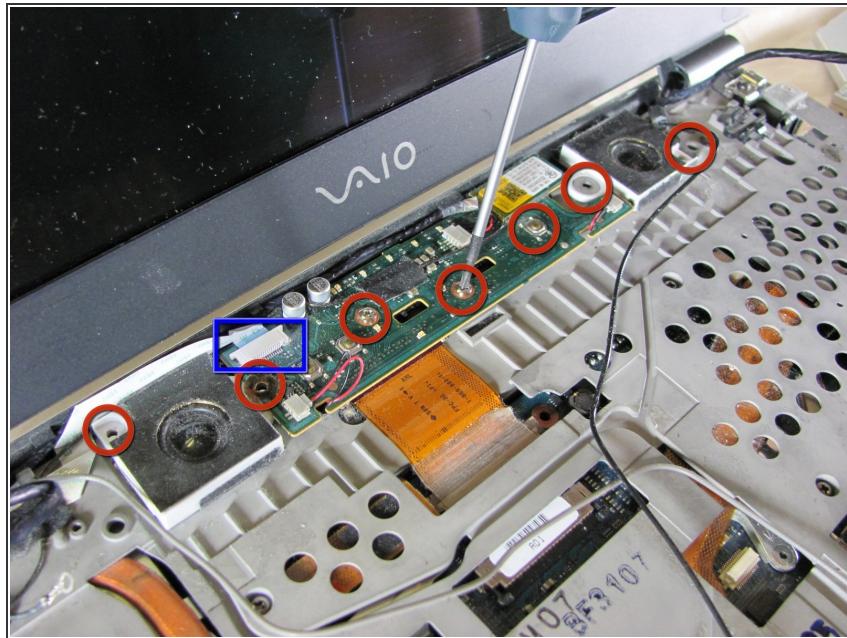

- Remove the seven philips screws holding the speaker assembly in place.
- Before removing the assembly, disconnect the ribbon cable located at the top left corner of the assembly.

i The speaker assembly will come off with the display assembly.

To reassemble your device, follow these instructions in reverse order.