




Belkin NetCam HD Lens Piece Replacement

This guide will show you the steps in replacing the lens piece in your Belkin NetCam HD+.

Written By: Destinie DiazVerdejo

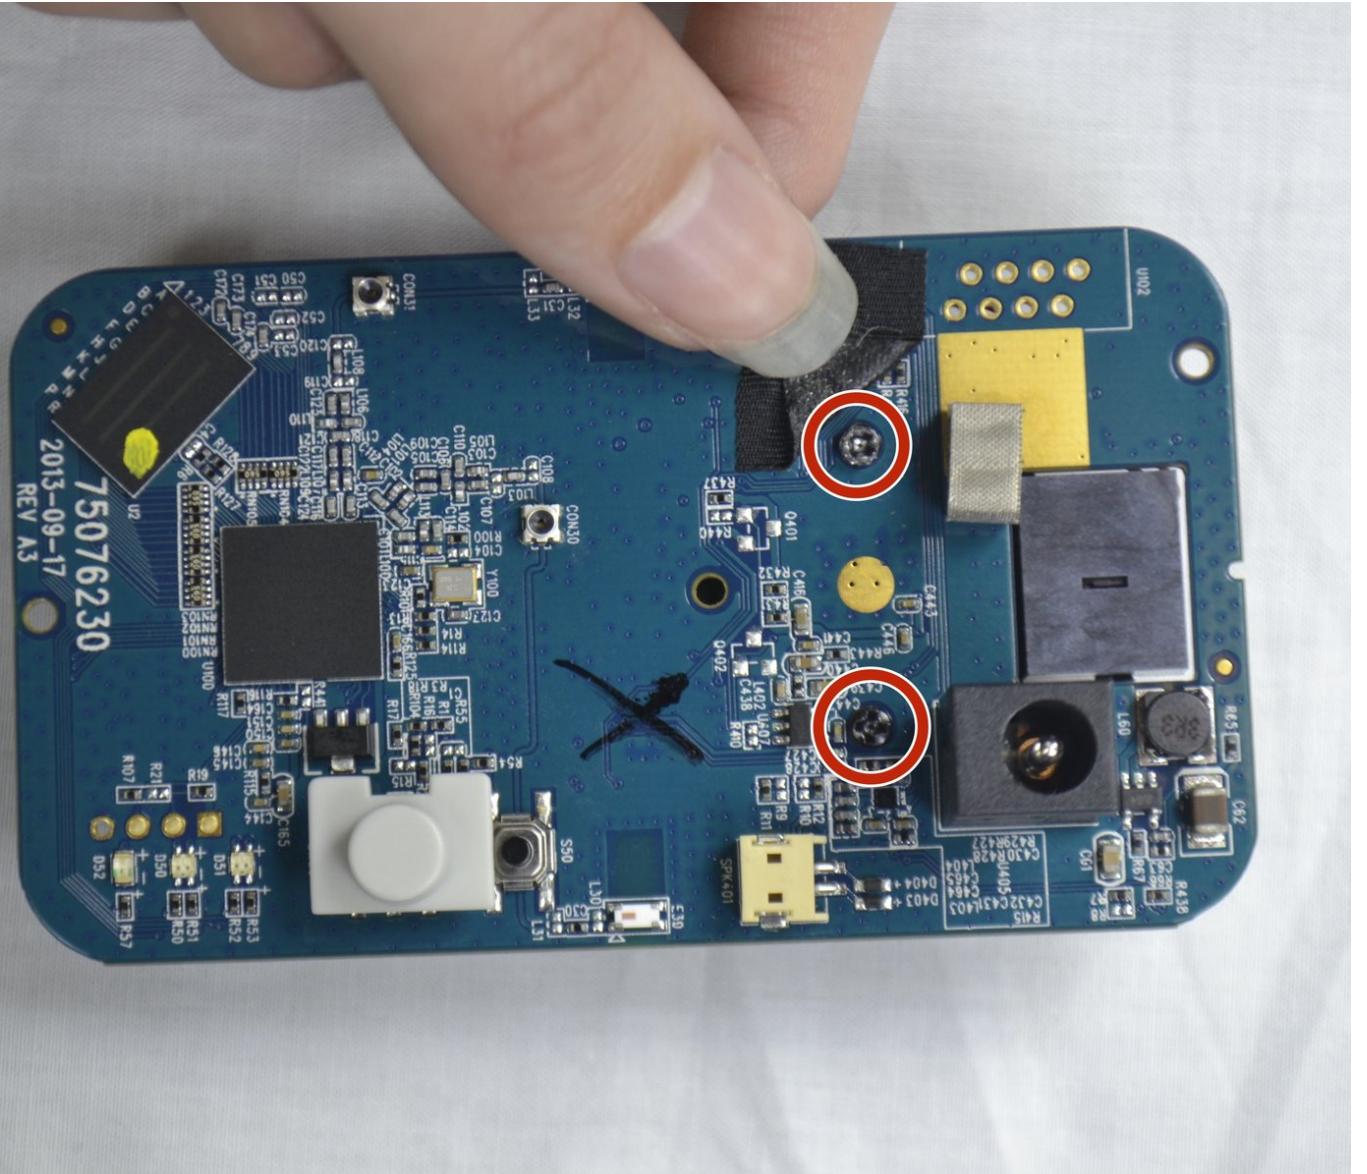

INTRODUCTION

This guide will walk you through how to replace the lens piece on the NetCam.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [Adjustable Wrench](#) (1)
- [Phillips #0 Screwdriver](#) (1)
- [Tweezers](#) (1)

Step 1 — Case




- Use a wrench to loosen up the stand from the back in order to hold the NetCam more comfortably.

Step 2



- Work a plastic opening tool into the seam and pry the face plate away from the back panel.


Step 3

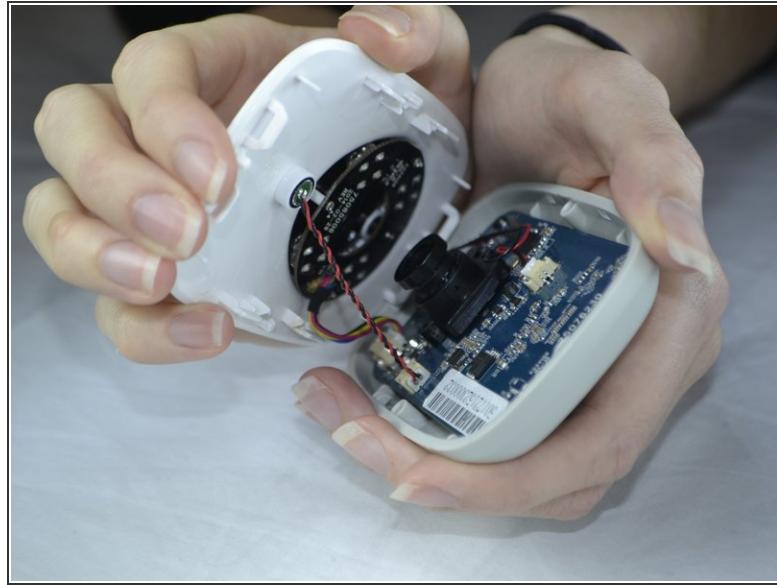

- Use pressure to separate the covers.



 When pulling the device apart, separate from the bottom up in order to avoid pulling the wiring at the top apart.

Step 4 — Front Casing

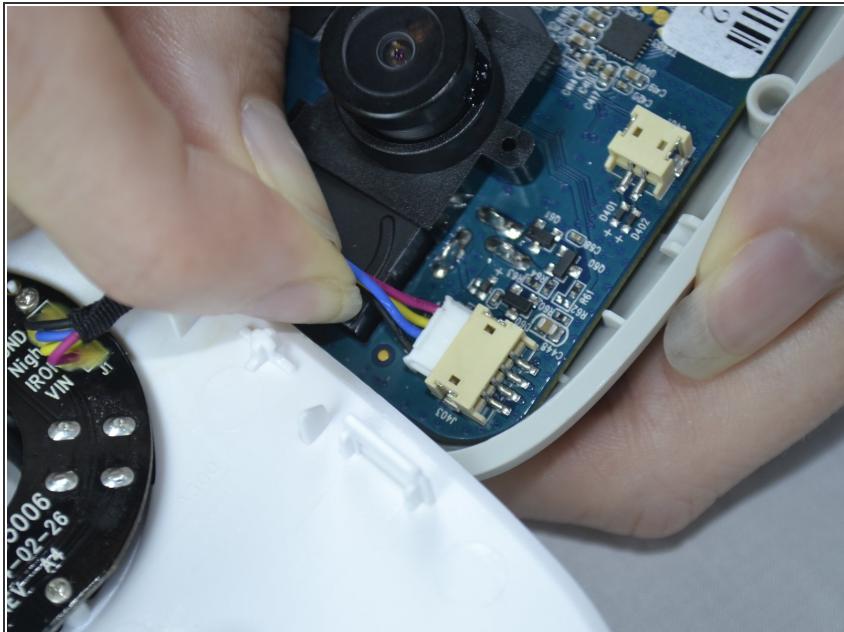


- Carefully use your fingers to gently pull out the white attachment from the tan colored part.

Step 5 — Speaker

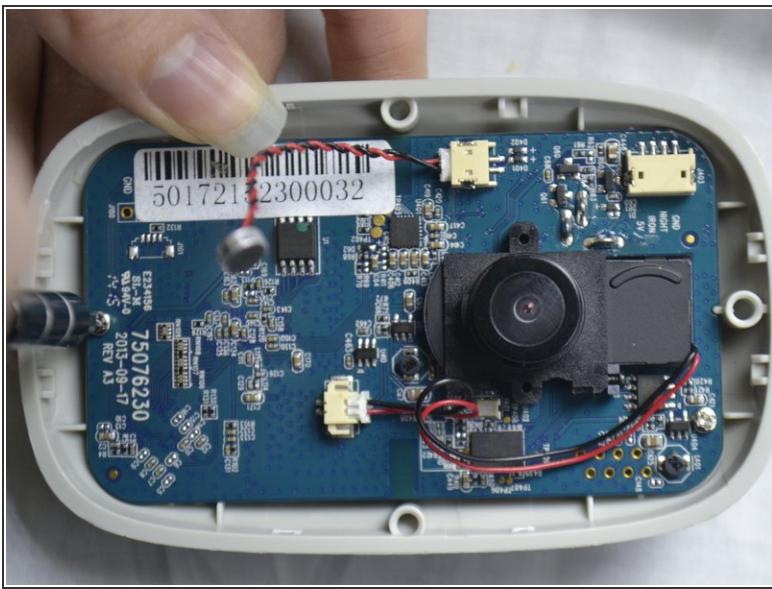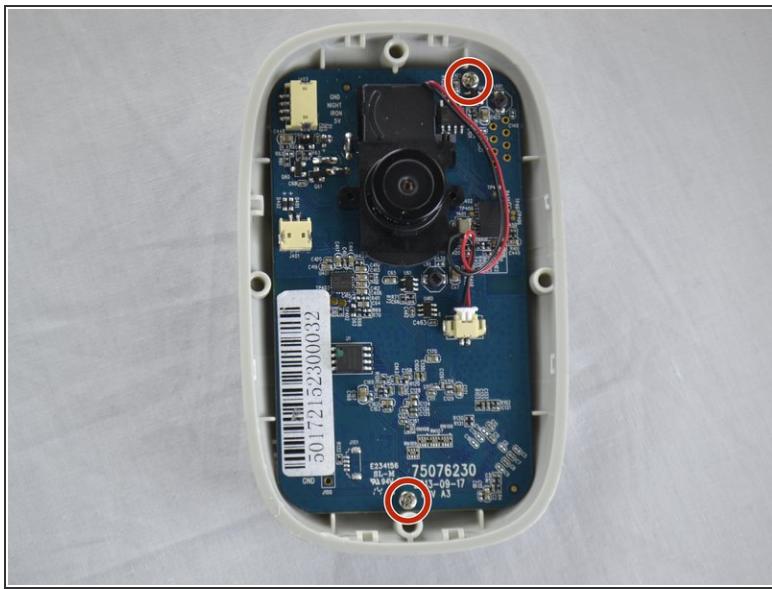

- Use a Phillips #0 screwdriver to take out the two 1.2 mm screws on the board.



Step 6

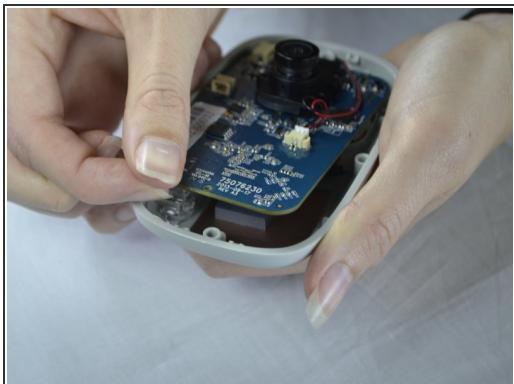

- With your fingers, pull the circuit board out of the back casing.


⚠ When pulling the board up be sure to do so carefully so you do not break the cord which is attached on the back side.

Step 7

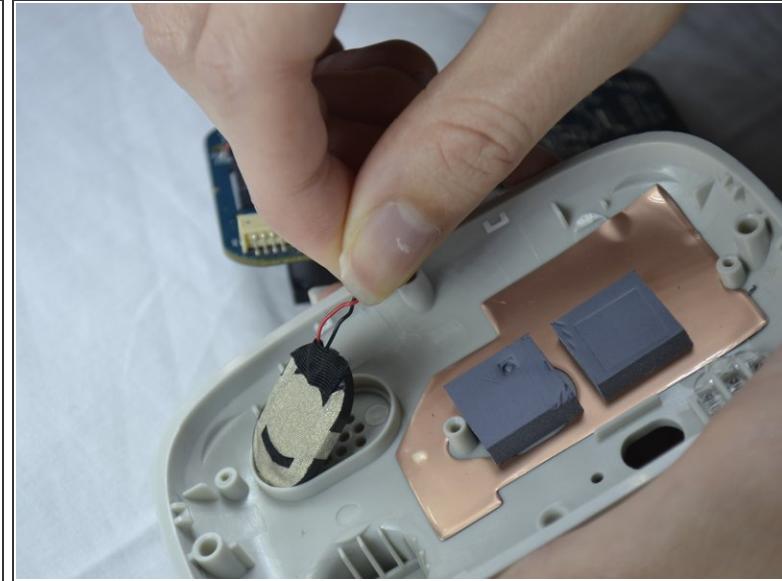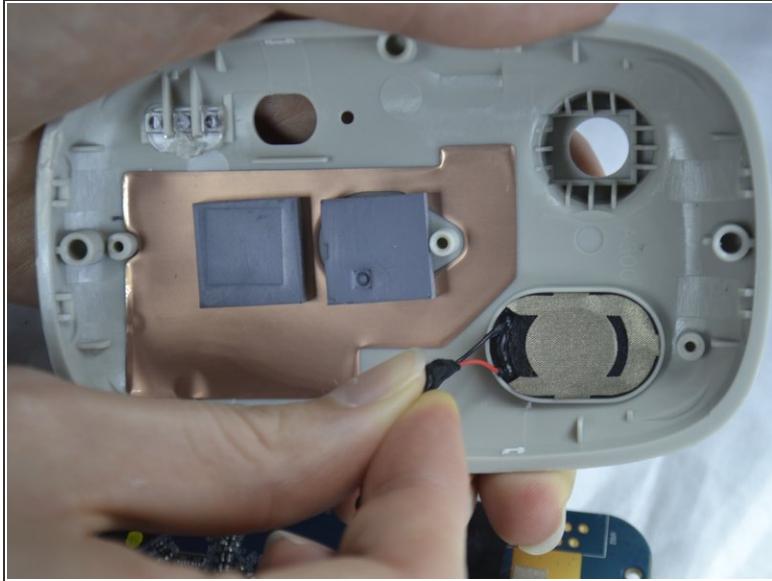


- Gently pull the speaker out of the holder from the back of the cover.

Step 8

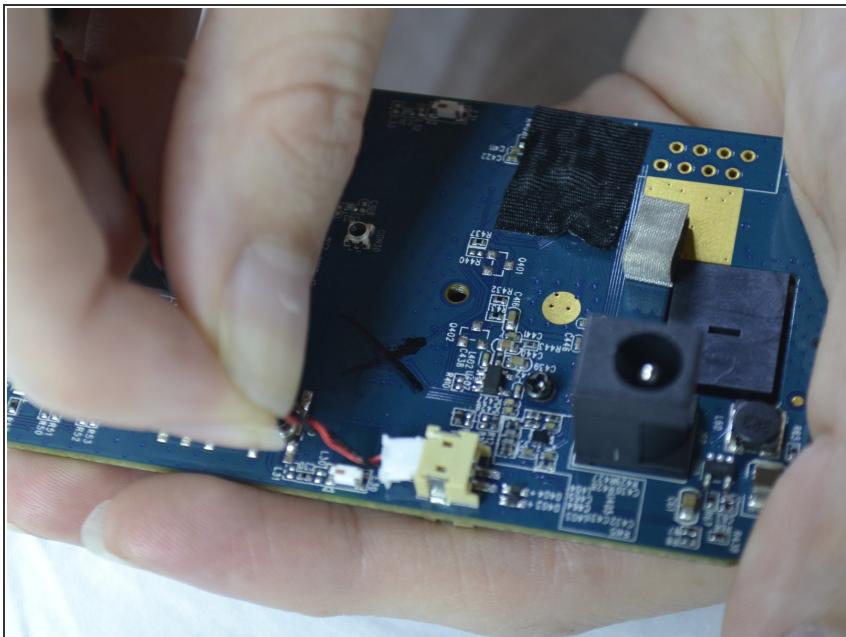


- The speaker wires are attached with the board. It can be unattached gently by pulling out the white attachment from the port.

Step 9 — Lens Piece

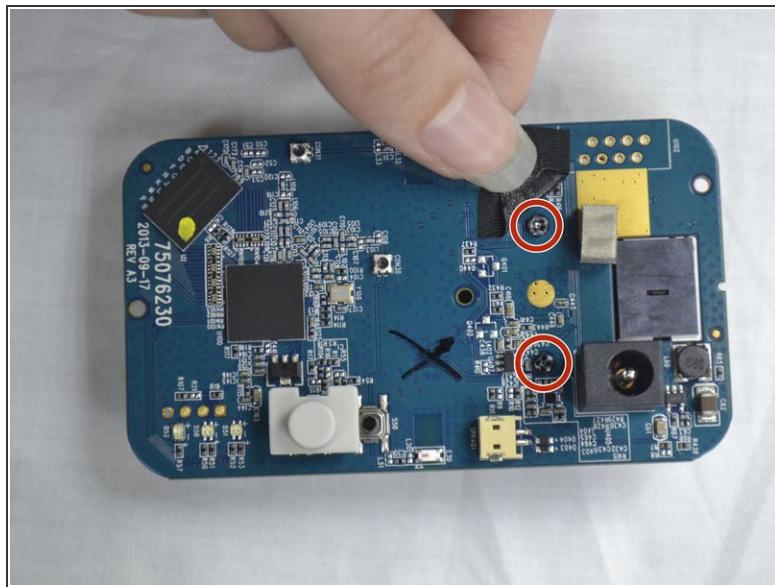


- Flip the circuit board to the back side.
- Fold down the tape with your finger.
- With the Phillips #0 screwdriver, unscrew the two 1.2 mm screws.

Step 10

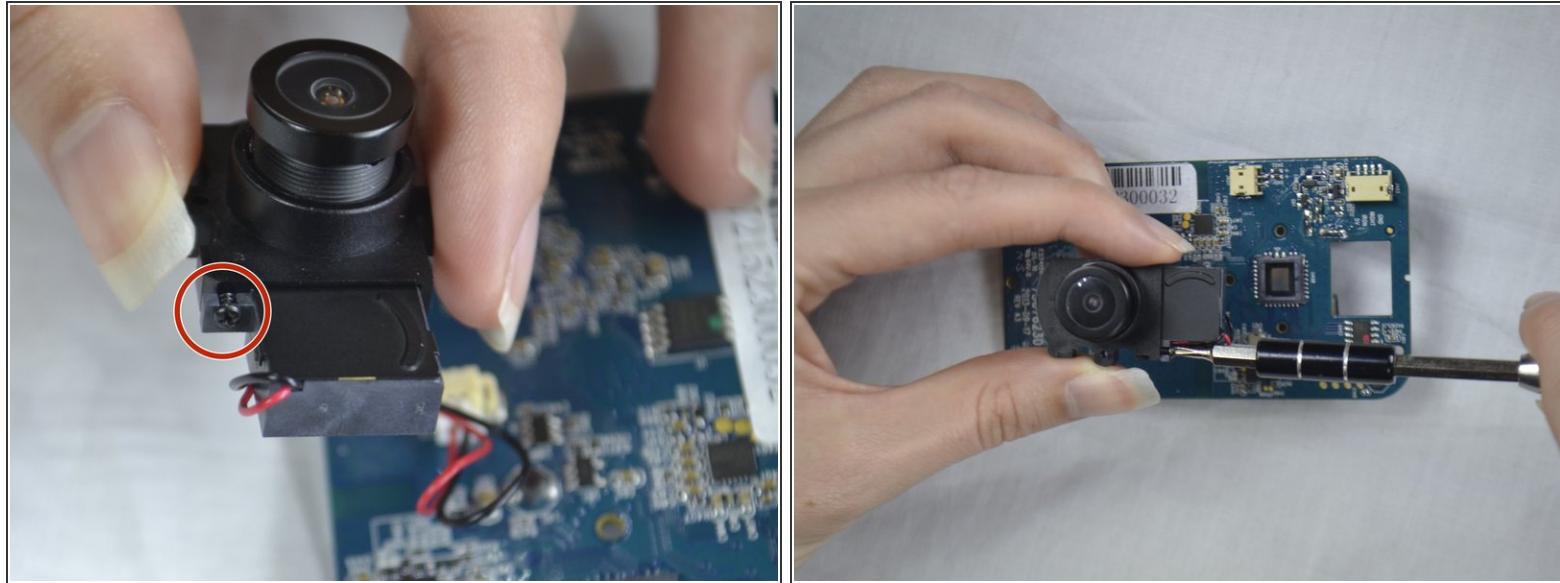


- Flip the circuit board back to the other side.
- Unscrew the screw with a Phillips #0 screw driver.

Step 11

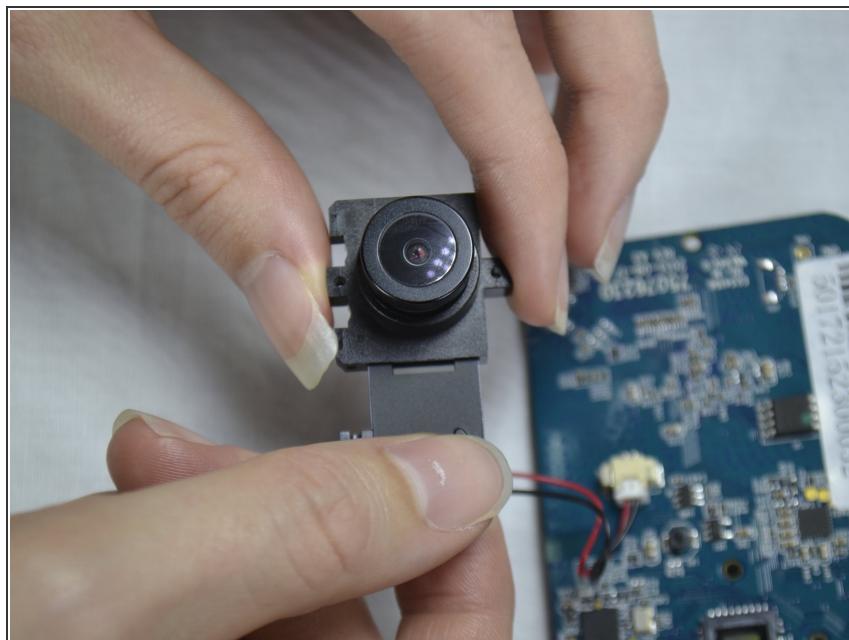

- Slide the attached piece from the lens holder device.

Step 12

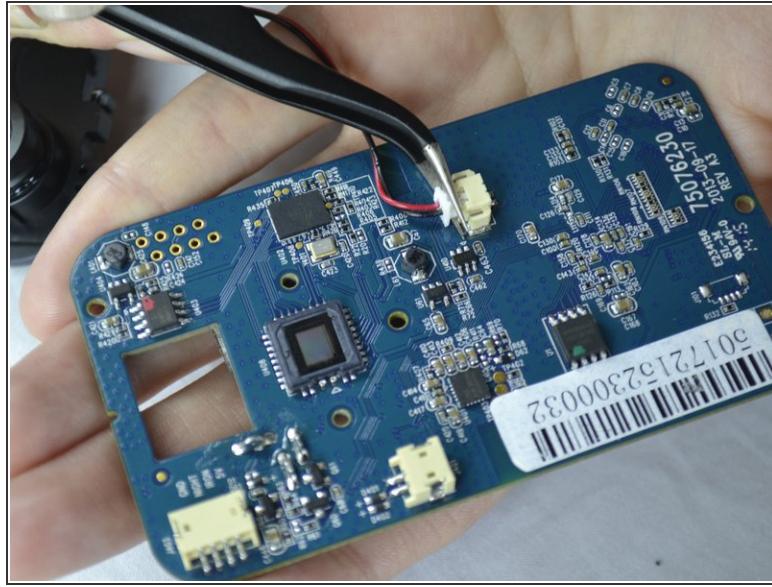

- Use the tweezers to pull the white attachment out from the port a little.
- Then, take your fingers and gently pull the white attachment out from the tan port.

To reassemble your device, follow these instructions in reverse order.