



Black and Decker LI2000 Handle Replacement

Replace the black handle casing.

Written By: Katherine Simmons



INTRODUCTION

Use this guide to remove or replace the handle casing of your Black and Decker LI2000.




TOOLS:

- [Phillips #000 Screwdriver](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Orange Casing



- Remove the following five screws
 - Three 20 mm Phillips #1 screws
 - One 10 mm #000 Phillips screw
 - One 13 mm Phillips 31 screw


 When you remove the 13 mm screw, the spring may pop out of the screwdriver. Point the backside of the screwdriver away from your face and others.

Step 2



- Remove the black sticker with recycling information.

Step 3

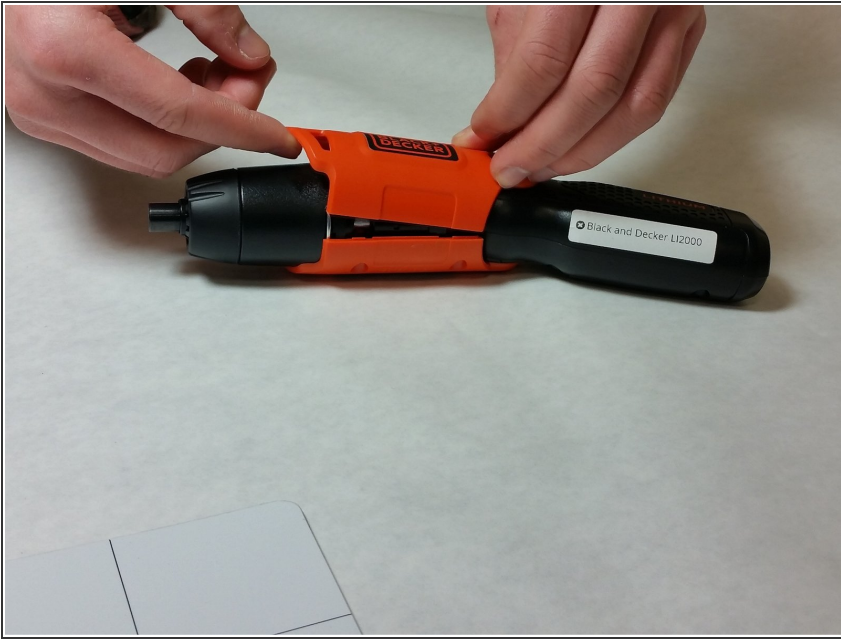


- Use your fingers or a plastic opening tool to pry the casing apart.

Step 4




- Remove the plastic slider by picking it up off the screwdriver.
- ⓘ You may consider leaving half of the casing on the screwdriver to make handling the screwdriver easier.

Step 5 — Handle

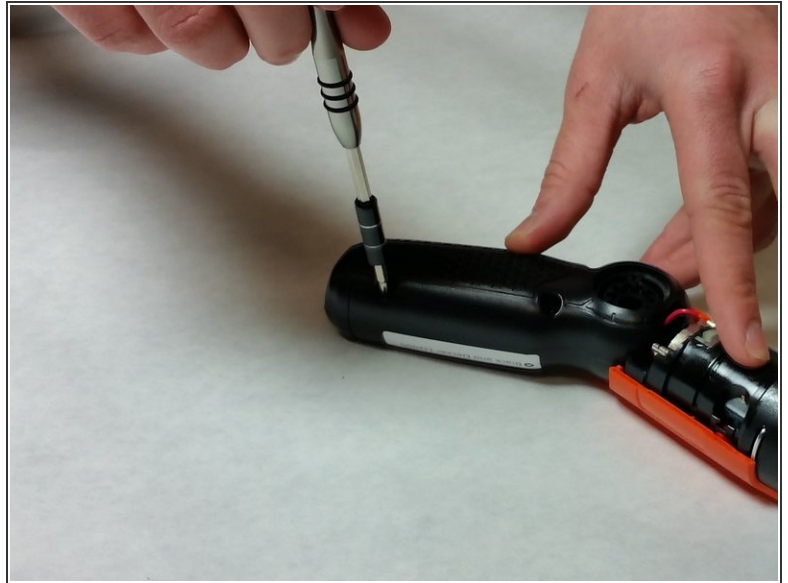

- Remove the four 15mm Phillips #1 screws.

Step 6

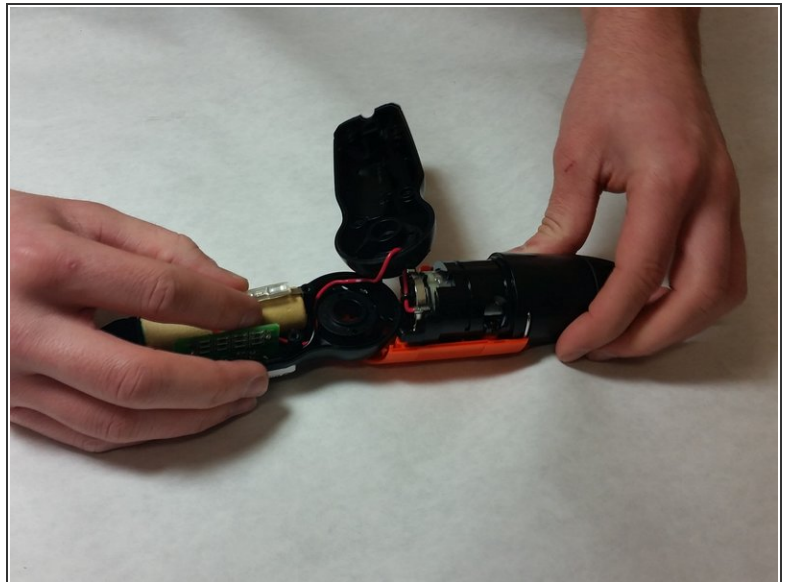

- Use a plastic opening tool to pry the casing apart.

To reassemble your device, follow these instructions in reverse order.