




Cen-Tech Seven Function Digital Multimeter Screen Replacement

This guide will show how to remove and replace dysfunctional screen.

Written By: Anna Kihm

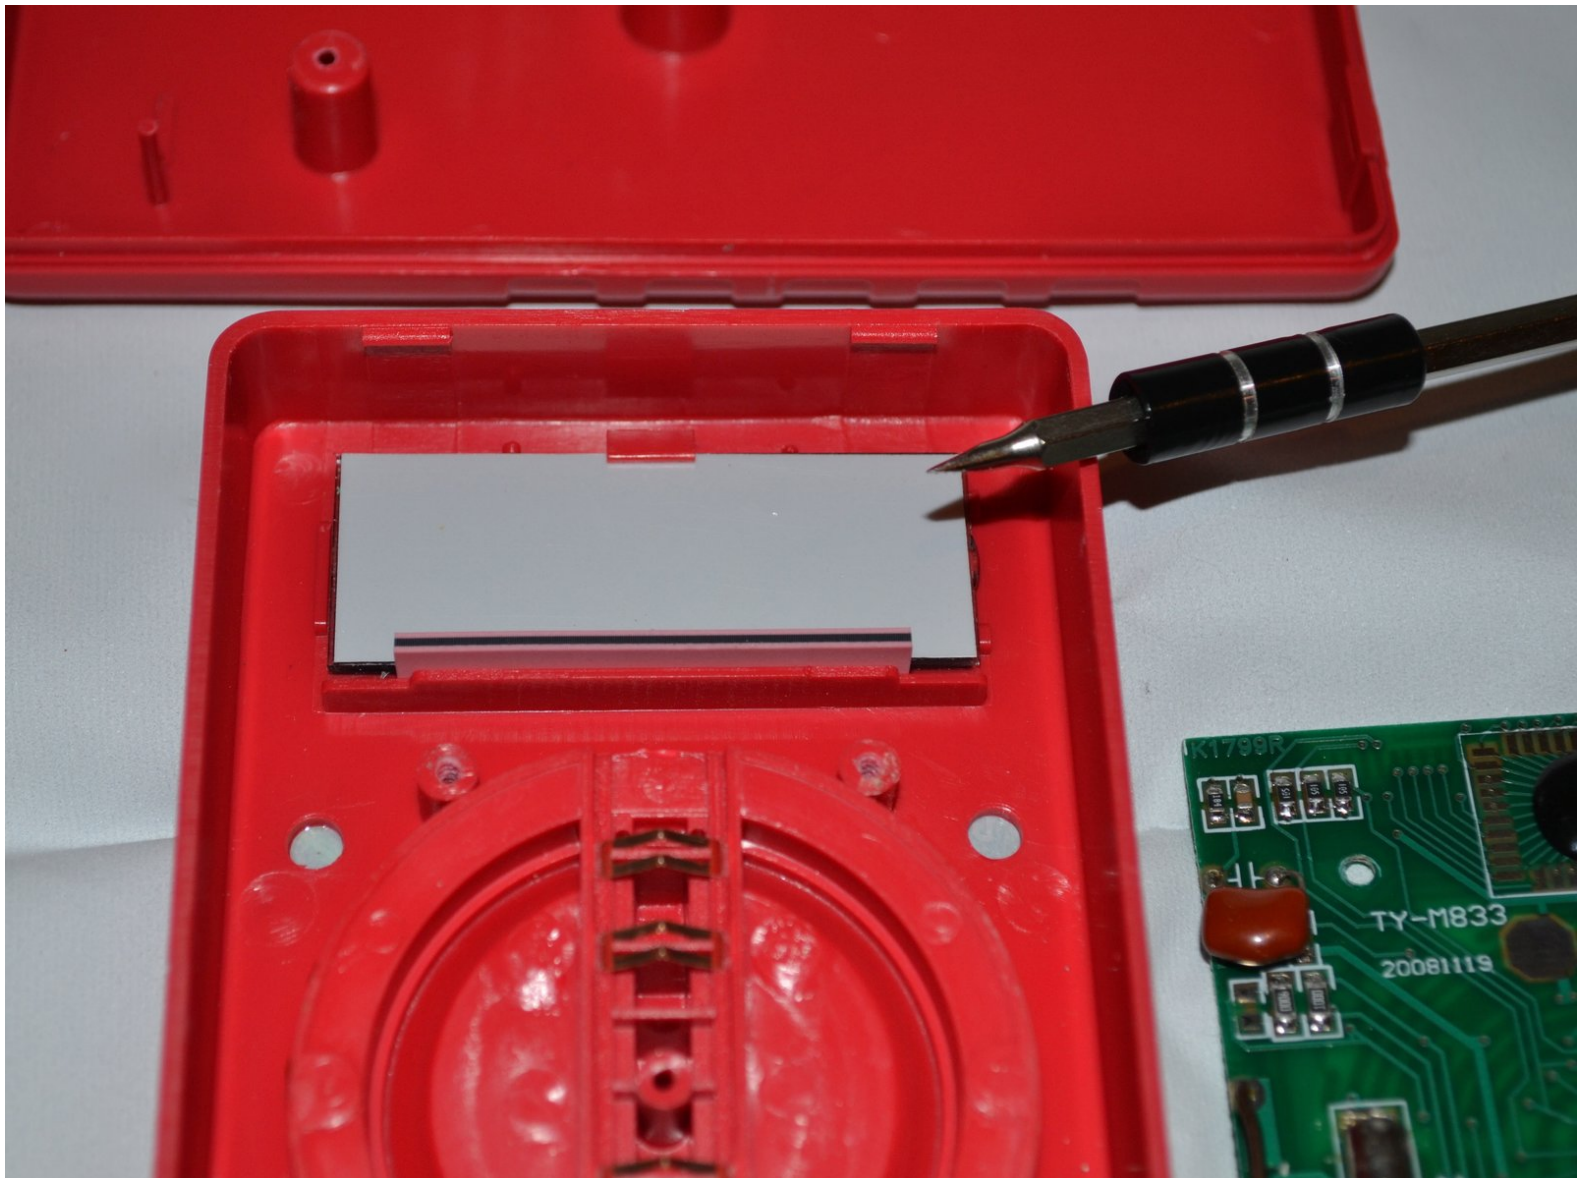

INTRODUCTION

If the screen is cracked or not working it may be necessary to replace it. This guide will show how to conduct a screen replacement.



TOOLS:

- [Flathead 2.5mm Screwdriver](#) (1)
- [Phillips #0 Screwdriver](#) (1)



PARTS:

- [Cen-Tech Seven Function Multimeter Screen](#) (1)

Step 1 — Position Device



- Place the meter face down, and the back panel and screws can be seen.

Step 2 — Remove Back Panel Screws



- Unscrew the two 9mm screws on the back panel using a #0 Phillips screwdriver.

Step 3 — Remove Back Panel



- Remove the back panel of the device by lifting upward.
- Remove the battery from the meter before continuing.

Step 4 — Unscrew Motherboard




- Remove the four 7mm Phillips screws holding the circuit board in place.

Step 5 — Remove Motherboard




- Gently lift the circuit board away from the device casing.
- ⓘ Remove the battery after removing the back cover to reduce the chances of short-circuiting the circuit board.

Step 6 — Locate Screen

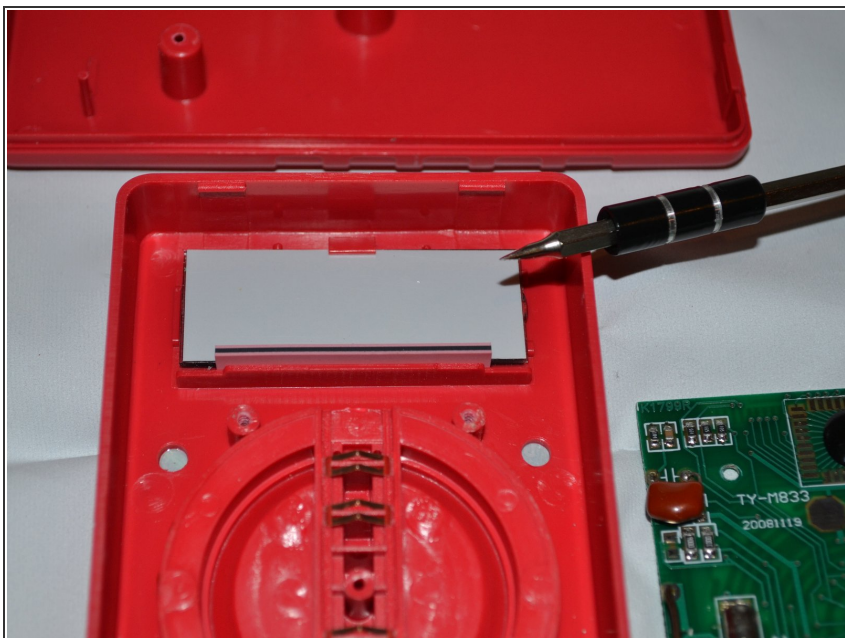

- The screen is located at the top of the device.

Step 7 — Remove Screen

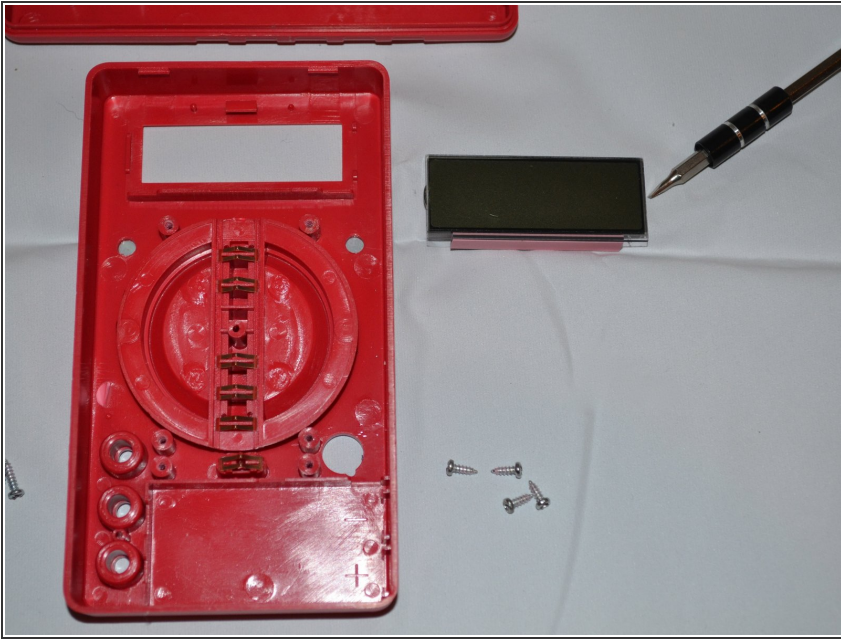

- Carefully remove screen from device by lifting upward.

To reassemble your device, follow these instructions in reverse order.