



# Disassembly Ultra Compact Plunger Mixer (Seb)

Opening of the mixer body to replace the damaged coupler (the small black plastic part between the motor and the foot)

Written By: Loïc



## INTRODUCTION

Opening of the mixer body to replace the damaged coupler (small black plastic part between the motor and the foot)



### TOOLS:

- [New Item](#) (1)



### PARTS:

- [New Item](#) (1)

## Step 1 — Disassemble the device




- Remove the screw with the star pattern on the mixer body.
- Insert a flat screwdriver at the bottom of the mixer (circled on the picture)

## Step 2 — Remove the coupler



- Remove the motor from the device.
- The coupler is simply fitted onto the motor shaft, it can be removed by prying it up with the screwdriver for example.

### Step 3 — Foot of the mixer

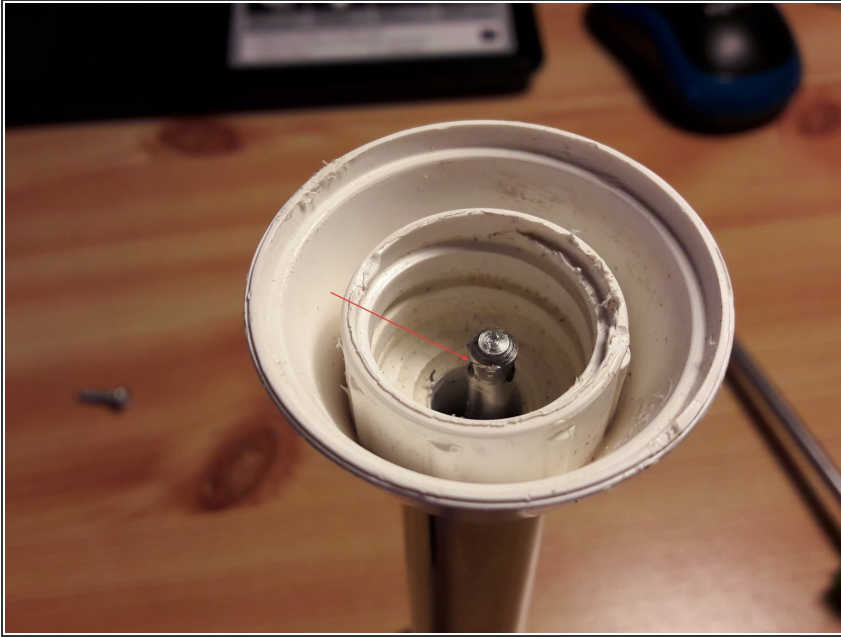

- ① The blades on the metal axis were also broken (see photo).
- The foot of the mixer needs to be replaced completely (spare part available on the SEB website for example)

To reassemble your device, follow the instructions in reverse order.