



How to recover/reupholster WESC Maraca Headphone Ear Cushions

Learn how to repair WESC Maraca Headphones ear cushions.

Written By: rss



INTRODUCTION

Do you have a pair of WESC Maraca Headphones with worn ear cushions? Use this guide to repair them and avoid ruining the bare cushions or completely replacing the headphones.



TOOLS:

- [Fabric Scissors](#) (1)

Scissors that provide a clean cut on the fabric will work best.

- [Marker](#) (1)
- [Tape](#) (1)
- [Sewing Kit](#) (1)

Optional

- [Glue or Epoxy](#) (1)

Optional

- [Plastic Cards](#) (1)

Any flat firm object will work



PARTS:

- [Fabric](#) (1)


Used for covering the cushions. Cotton fabric was used for this guide.

Step 1 — How to recover/reupholster WESC Maraca Headphone Ear Cushions




- Remove the cushion from the headphones by carefully pushing the edges out from the sides of the ear piece.

Step 2

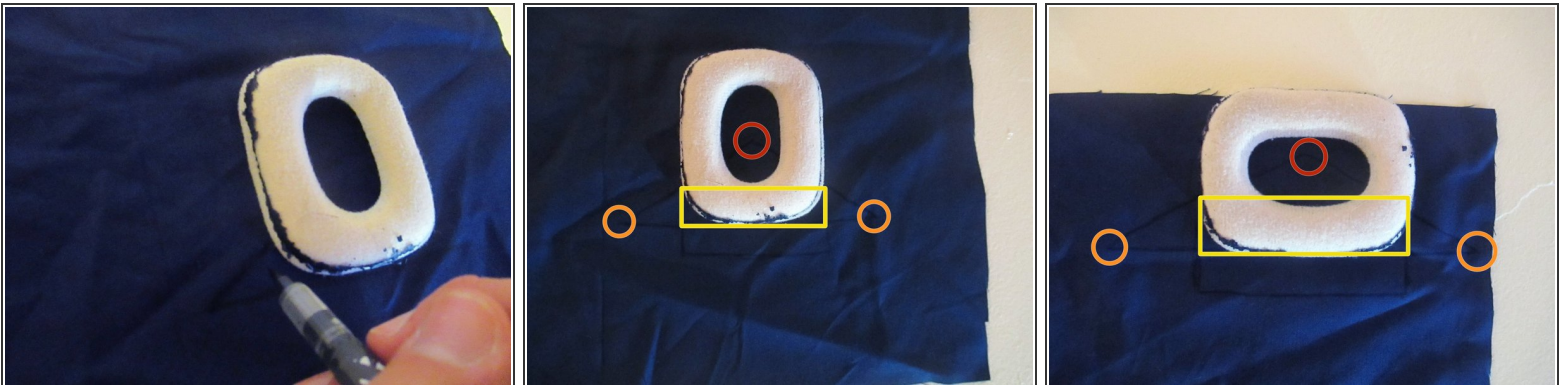




- Use a marker to draw an arrow shape around the bottom of the cushion.
 - The arrow's point should fall toward the center of the cushion.
 - The points on the sides of the arrow should extend well beyond the edge of the cushion. They should not be aligned with the corners of the cushion.
 - ⓘ This is done to ensure that there will be enough fabric to sufficiently cover the cushion.
 - The bottom of the arrow should line up with the sides and bottom of the cushion.
- Repeat this step to draw a wider arrow for the side of the cushion.

Step 3

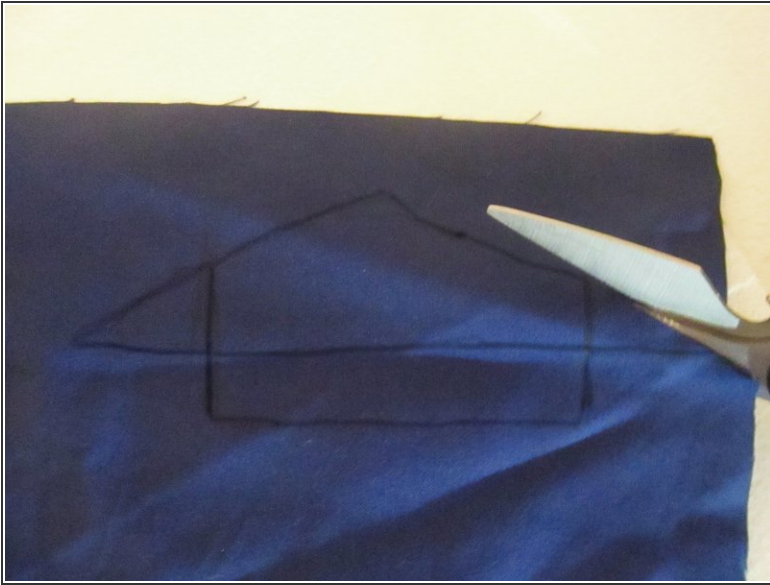


- Cut out the two arrows of fabric.
- Using the arrows as guides, cut out 3 additional arrows of each different size. In total you will have 4 top and bottom arrows and 4 side arrows.

Step 4

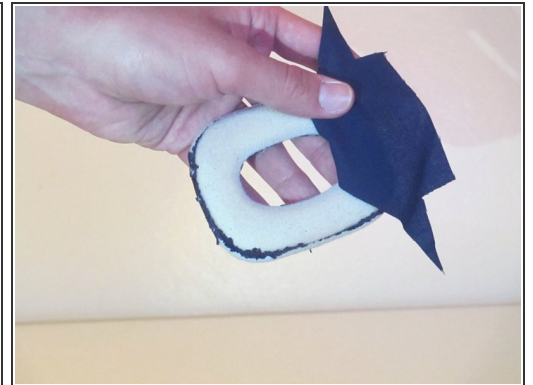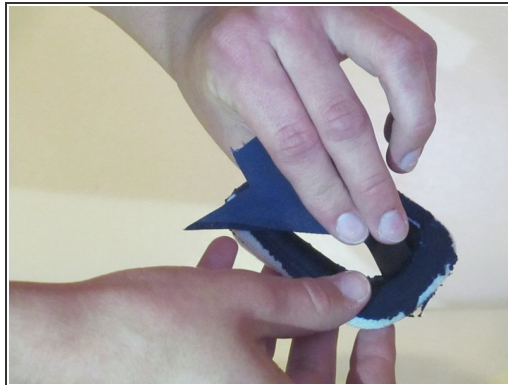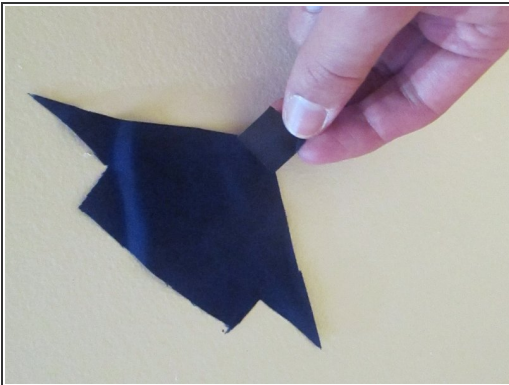



- Attach the tip of the arrow to the inside of the cushion and fold the rest of the arrow over the outside.
 - ⚠ Using glue or sewing the arrow to the pad will result in a permanent fix, but if you make a mistake you may not be able to undo it.
- Repeat this step to attach each arrow to the appropriate side of each cushion

Step 5

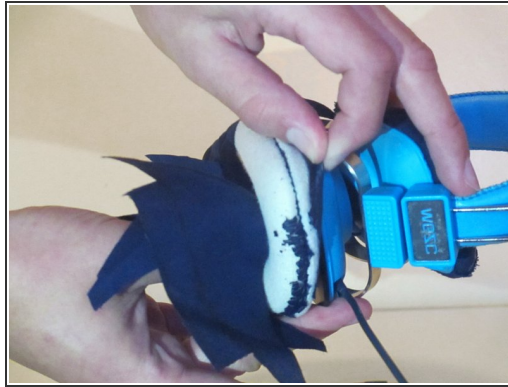

- Once you have all of the fabric attached, stretch the edges of the cushion back over the headphone's ear piece.
- Use a thin plastic card to carefully tuck the edges of the cushion back into the ear piece.

Step 6

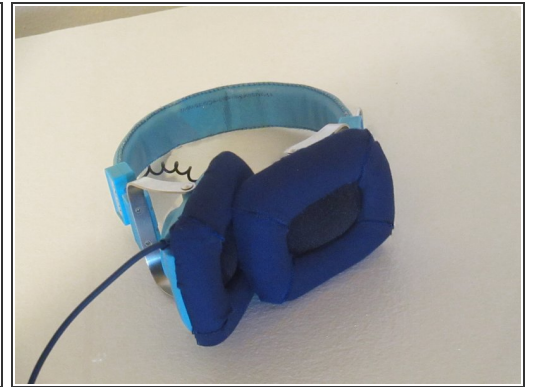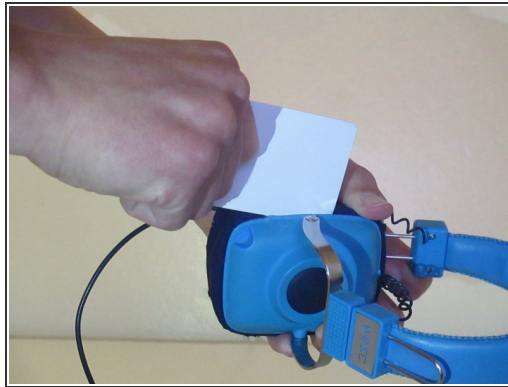

- Once the cushion has been reattached to the ear piece, use the plastic card to carefully tuck the bottoms of the fabric arrows into the sides of the ear piece.
- ⓘ If there is too much fabric to tuck in, use scissors to remove the excess.

Your headphones are now reupholstered and ready to use again.