




# Identifying Delphi MyFi XM2GO Device Number

This guide will show the user how to locate the serial number for the Delphi MyFi XM2GO.

Written By: Scott Byer

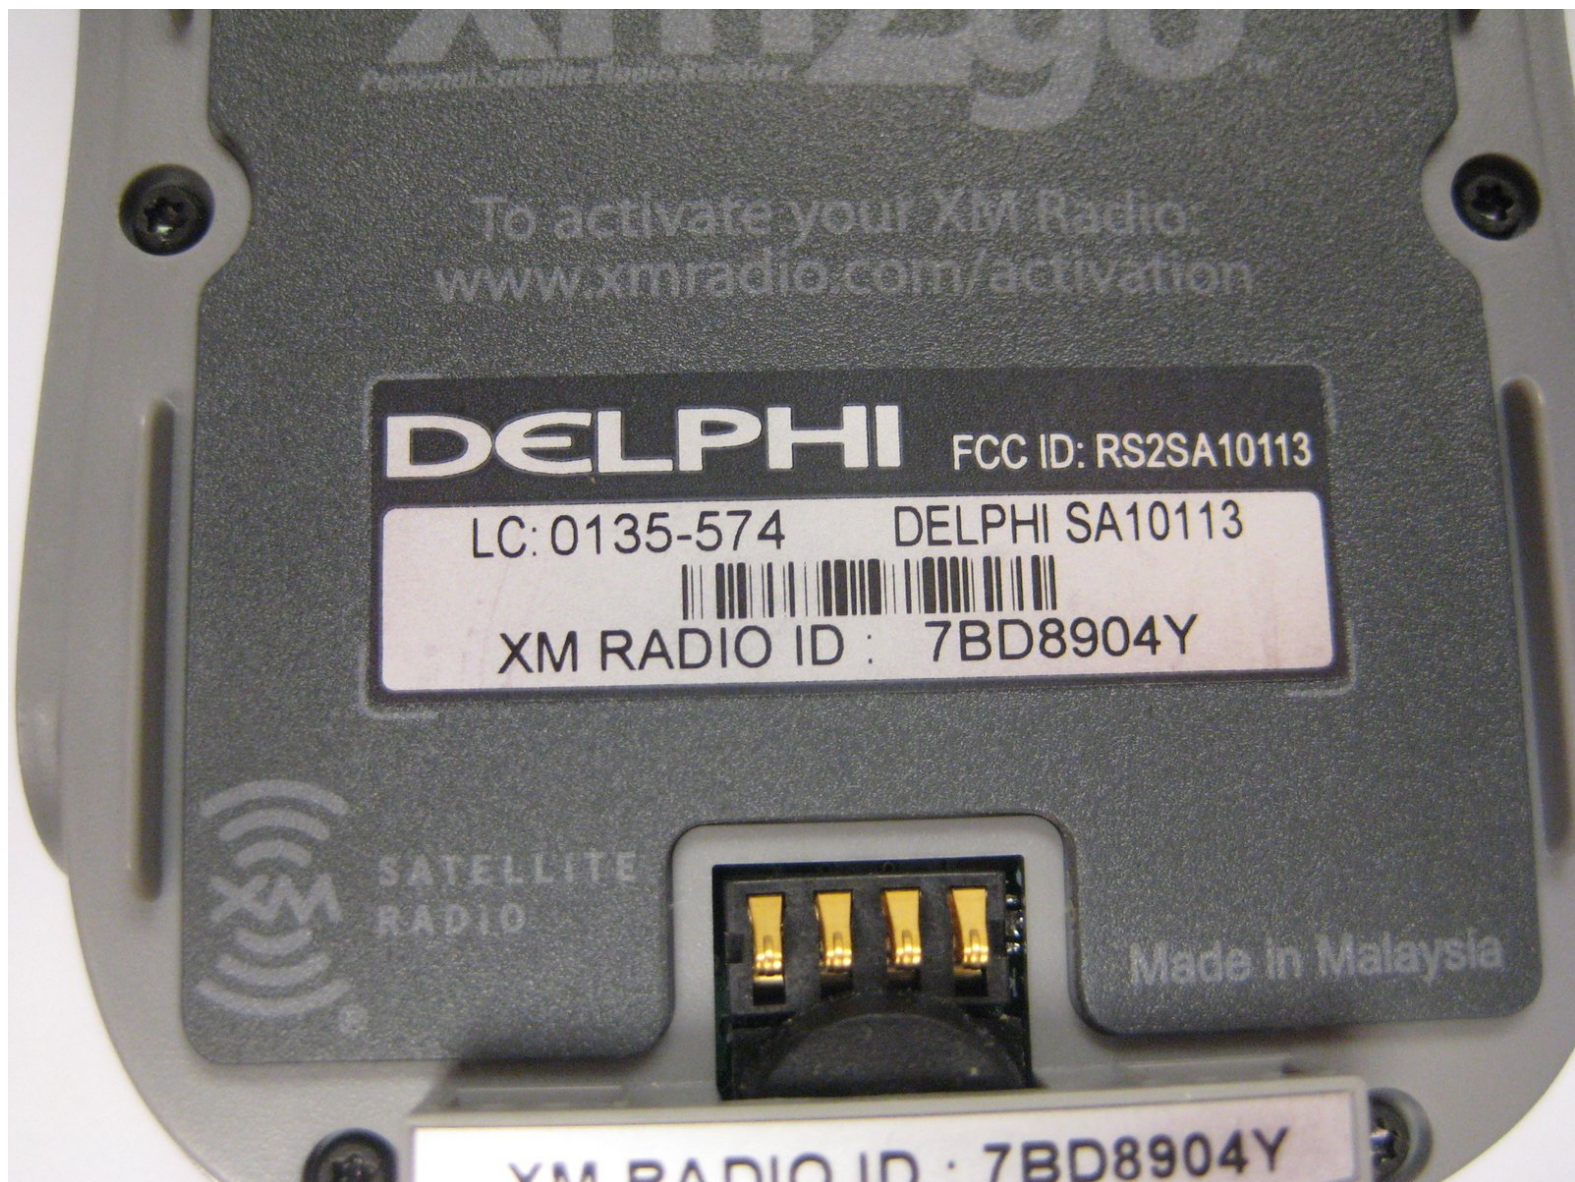



## Step 1 — Removing Delphi MyFi XM2GO Battery Cover



- Turn over the Delphi MyFi XM2GO Device on its back to start the cover-removal process.

## Step 2




- Locate the large button on the top back of the device.
- Press this button at the top while making a firm grip on the battery cover.
- As the button is pressed, move the cover towards the bottom of the device.
- The battery removal tab may pop up during the cover removal process.

### Step 3 — Removing Delphi MyFi XM2GO Battery



- Holding the device, grab the tab with thumb and index finger.
- Pull down on the tab to move the battery block a few millimeters towards the bottom of the device to unlock the latch at the top.
- After the latch at the top is disengaged, pivot the battery away from the back and the battery will be free.

### Step 4 — Identifying Delphi MyFi XM2GO Device Number

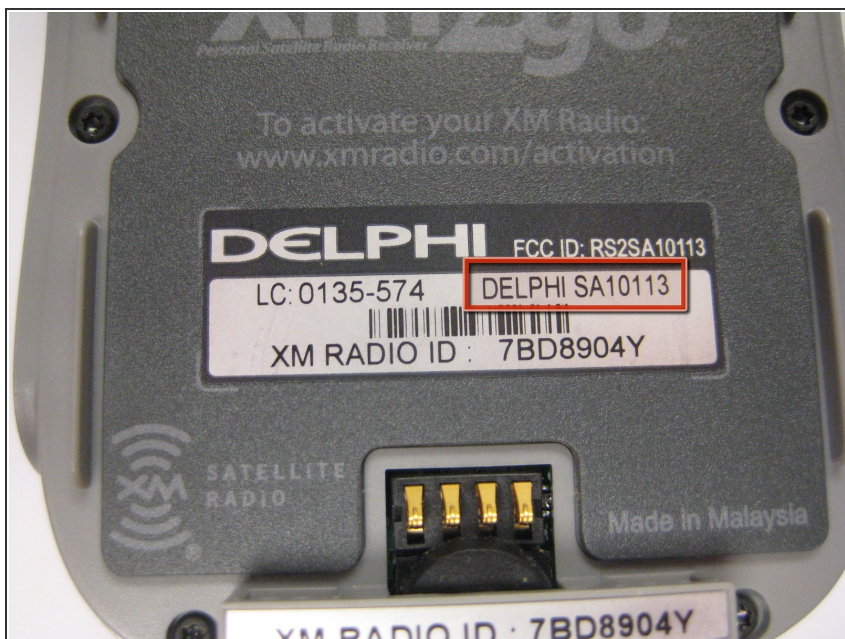

- After removing the battery cover and battery, the device information is located near the battery connections highlighted in red.

To reassemble your device, follow these instructions in reverse order.