



Quantum View 10.1 camera Replacement

How to replace the camera.

Written By: stephen Munchinsky





TOOLS:


- [iFixit Opening Tools](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Open Quantum View case




- Start by turning the tablet over with the screen down. Carefully use a plastic opening tool to pry the cover off. Start from the corner opposite the hibernate button.

Step 2 — Removing the electrical tape and magnets.

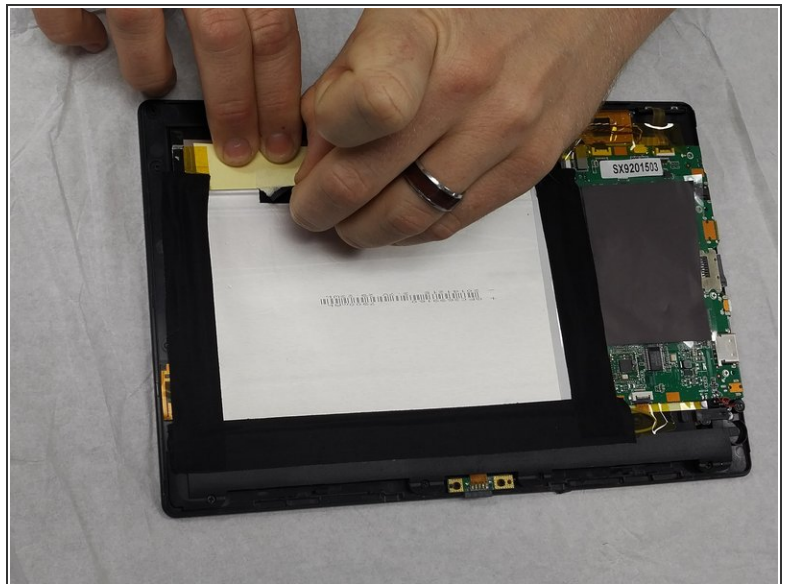

- Pick up the magnets from the bottom edge of the tablet next to the keyboard connection and put them in a place that they will not get lost. Then carefully remove all 4 strips of electrical tape.

Step 3 — Unhooking the battery

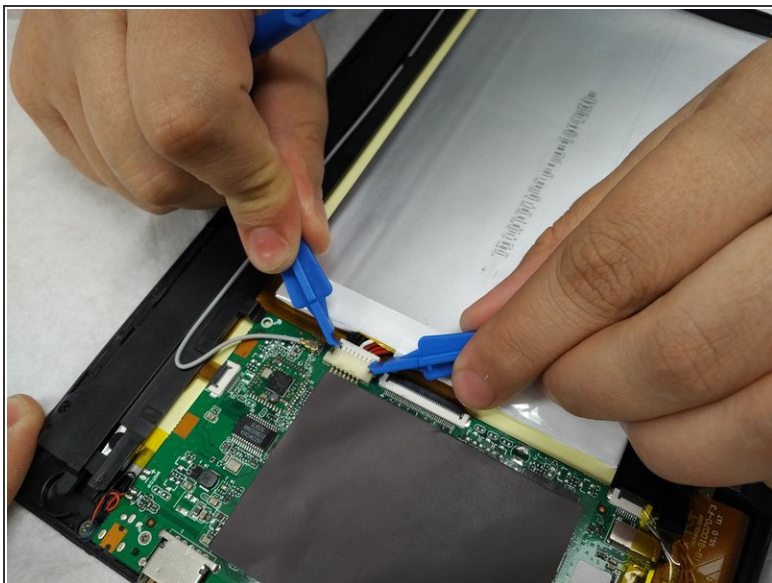



- Using a small plastic opening tool; gently pull the connection off of the motherboard.

Step 4 — Remove speaker clip





- Remove yellow plastic and carefully pull clip away from connection.

Step 5 — Remove camera clip

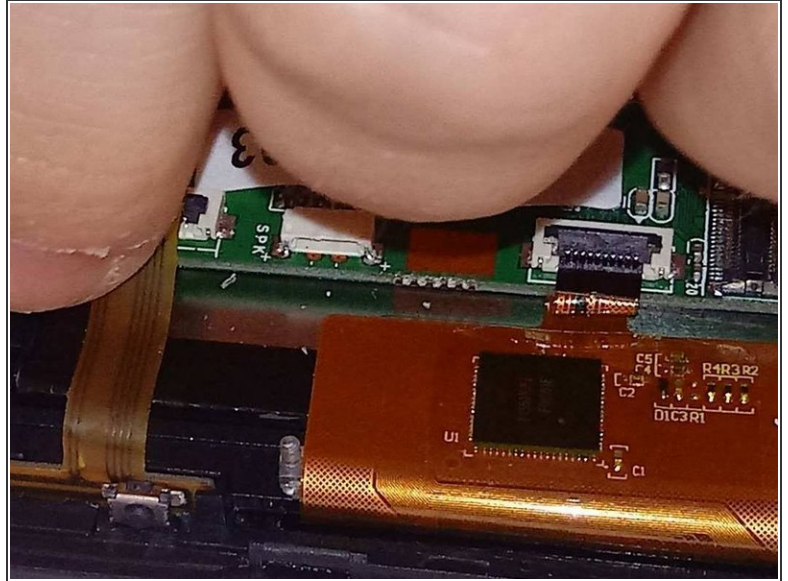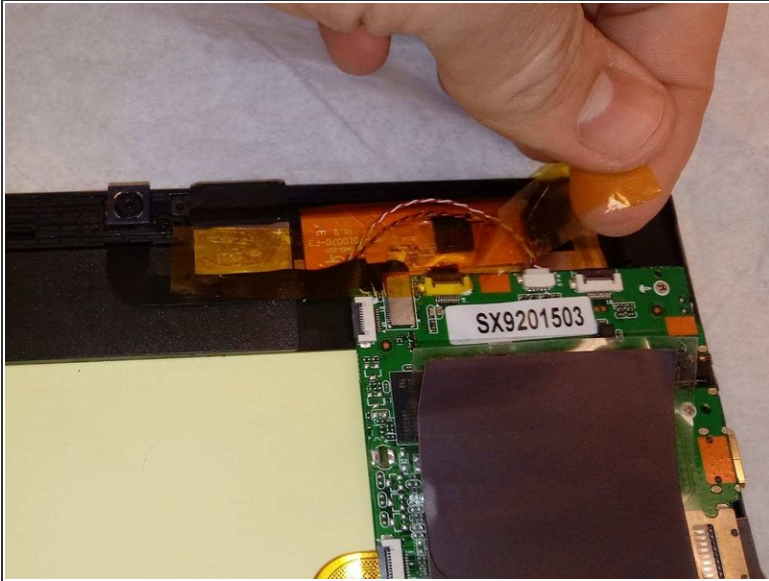

- Remove yellow tape.
- Unclip ribbon connector.

Step 6 — Remove camera

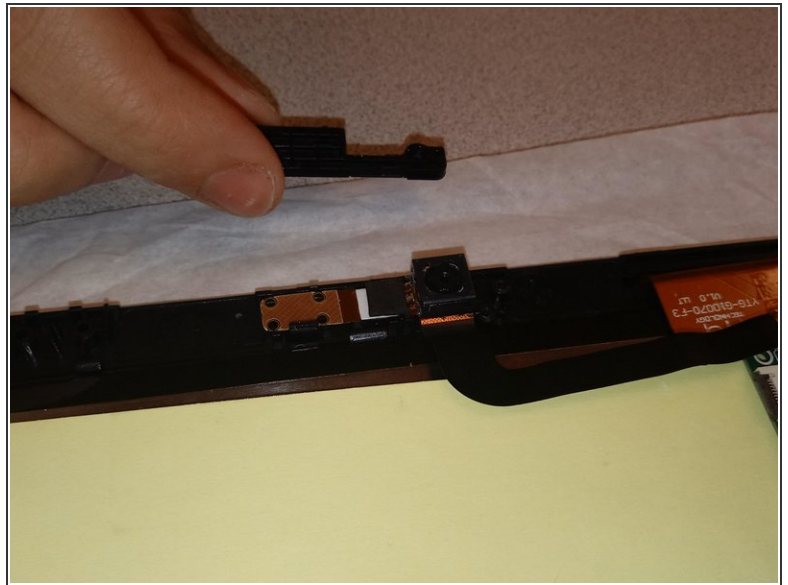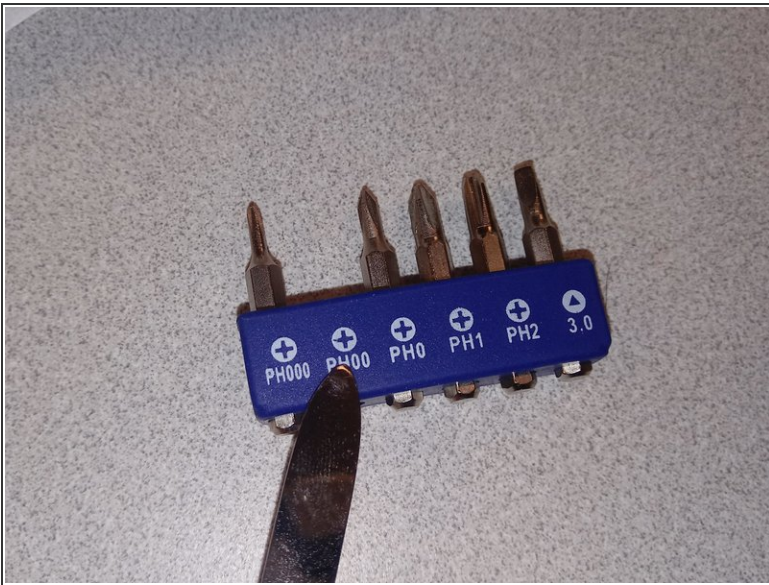

- Unscrew plastic camera holder using a PH00 screwdriver bit.
- Release the plastic holder tab and remove camera.

To reassemble your device, follow these instructions in reverse order.