



Ukujamisela Ipompo yehlathi ihloko nesibambo

Use this guide to install a replacement pump head and/or handle.

Written By: iRobot





INTRODUCTION

Landela umhlahlandlela lo ukususa ihloko yepompo yehlathi nesibambo ukuyilungisa nanyana ukuyijamisela.

Yenza mbala ukusebenzisa nanyana abantu ababili nawulandela umhlahlandlela lo wenzele ukuvikela ukulimala ngombana ihloko yepompo ibudisi.

Step 1 — Head and Handle (Ndembele)

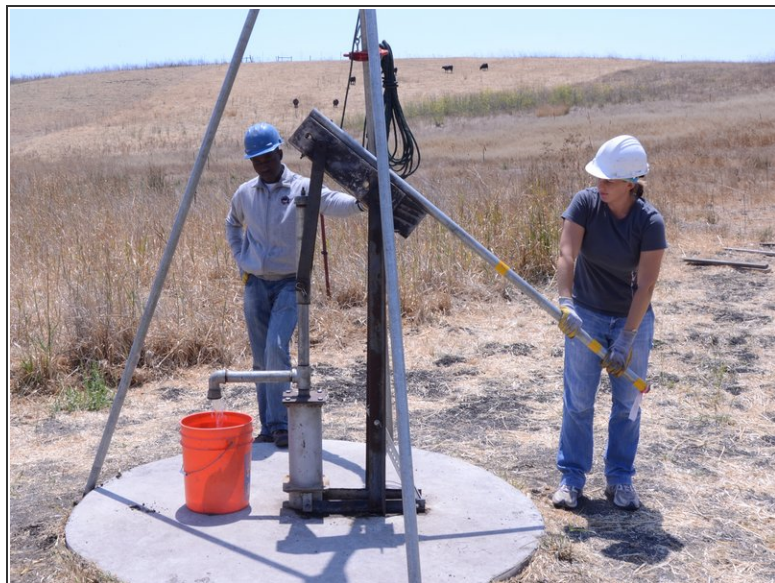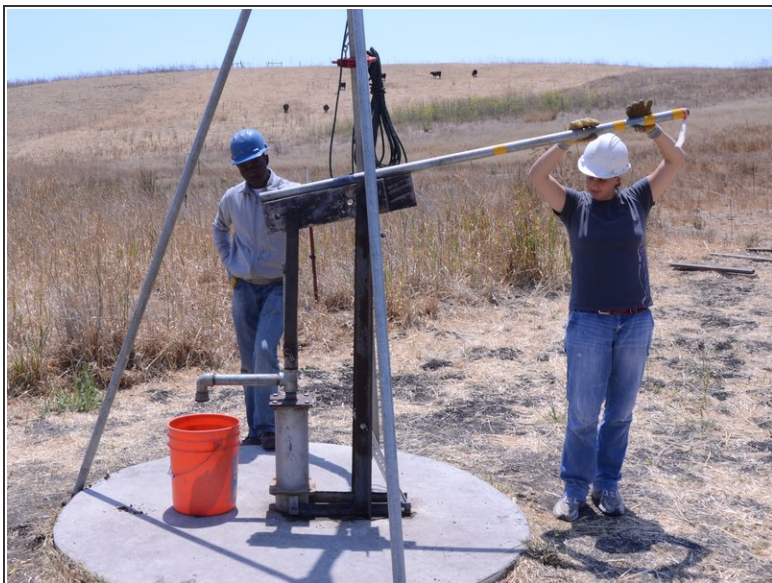

- Linga ukusebenza kwepompo ngokupompa amahlandla ama-40.

✦ Ipompo ekungiyi fanele ibuyise nanyana malitha ali-10.

Step 2




- Susa amaphini amabili ahlanganisa isibambo esitjhelelini.

Step 3



- Dosa iimbambo ezimbili zomgqala kude nesitjheleli.

Step 4

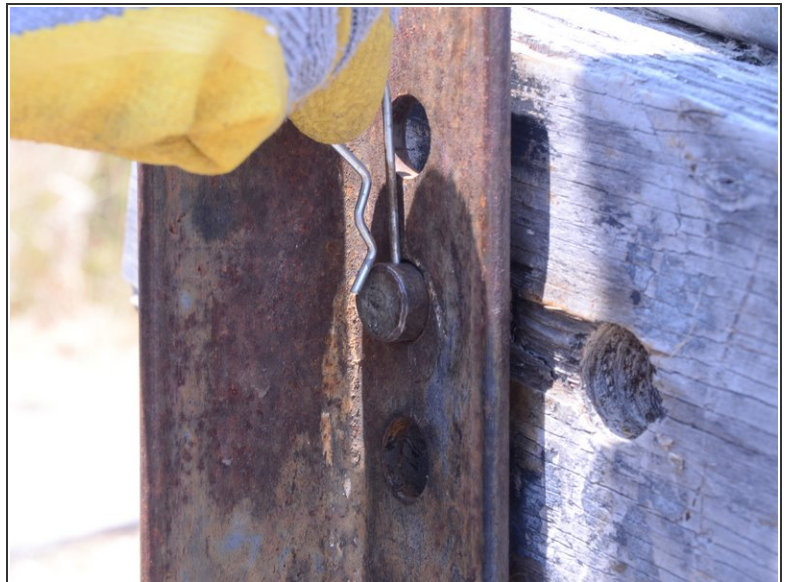

- Phakamisa amaphini amabili abambene nesakhelelo sepompo nesibambo siyephezulu, kusukela esakhelweleni sepompo.

Step 5



- i** Ngokuya ngegadangweli, yenza mbala bona ulekelela isibambo nehloko ngananyana ngezandla ezintathu.

 - Tjhelelisa ibheringhi yentonga ngaphandle kwehloko.
- i** Hlola ibheringhi yentonga nehloko ukobana ayikasinyeki nanyana ayikarathuki.

Step 6



- Susa ihloko nesibambo, uzibeke endaweni ehlwengekileko ukuvimbela ukusilaphazeka.

Ukuhlanganisa godu into oyenzela ihloso ethileko, landela ifundiso ngendlela ethoma samva.