

BayRS Version 14.20

Part No. 308659-14.20 Rev 00
August 2000

4401 Great America Parkway
Santa Clara, CA 95054

Using the Bay Command Console (BCC)

NORTEL
NETWORKS™

Copyright © 2000 Nortel Networks

All rights reserved. Printed in the USA. August 2000.

The information in this document is subject to change without notice. The statements, configurations, technical data, and recommendations in this document are believed to be accurate and reliable, but are presented without express or implied warranty. Users must take full responsibility for their applications of any products specified in this document. The information in this document is proprietary to Nortel Networks NA Inc.

The software described in this document is furnished under a license agreement and may only be used in accordance with the terms of that license. A summary of the Software License is included in this document.

Trademarks

NORTEL NETWORKS is a trademark of Nortel Networks.

Nortel Networks, AN, BCN, BLN, BN, and FRE are registered trademarks and ANH, ARN, ASN, BayRS, BayStack, BCC, Passport, and System 5000 are trademarks of Nortel Networks.

All other trademarks and registered trademarks are the property of their respective owners.

Restricted Rights Legend

Use, duplication, or disclosure by the United States Government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.227-7013.

Notwithstanding any other license agreement that may pertain to, or accompany the delivery of, this computer software, the rights of the United States Government regarding its use, reproduction, and disclosure are as set forth in the Commercial Computer Software-Restricted Rights clause at FAR 52.227-19.

Statement of Conditions

In the interest of improving internal design, operational function, and/or reliability, Nortel Networks NA Inc. reserves the right to make changes to the products described in this document without notice.

Nortel Networks NA Inc. does not assume any liability that may occur due to the use or application of the product(s) or circuit layout(s) described herein.

Portions of the code in this software product may be Copyright © 1988, Regents of the University of California. All rights reserved. Redistribution and use in source and binary forms of such portions are permitted, provided that the above copyright notice and this paragraph are duplicated in all such forms and that any documentation, advertising materials, and other materials related to such distribution and use acknowledge that such portions of the software were developed by the University of California, Berkeley. The name of the University may not be used to endorse or promote products derived from such portions of the software without specific prior written permission.

SUCH PORTIONS OF THE SOFTWARE ARE PROVIDED “AS IS” AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

In addition, the program and information contained herein are licensed only pursuant to a license agreement that contains restrictions on use and disclosure (that may incorporate by reference certain limitations and notices imposed by third parties).

Nortel Networks NA Inc. Software License Agreement

NOTICE: Please carefully read this license agreement before copying or using the accompanying software or installing the hardware unit with pre-enabled software (each of which is referred to as “Software” in this Agreement). BY COPYING OR USING THE SOFTWARE, YOU ACCEPT ALL OF THE TERMS AND CONDITIONS OF THIS LICENSE AGREEMENT. THE TERMS EXPRESSED IN THIS AGREEMENT ARE THE ONLY TERMS UNDER WHICH NORTEL NETWORKS WILL PERMIT YOU TO USE THE SOFTWARE. If you do not accept

these terms and conditions, return the product, unused and in the original shipping container, within 30 days of purchase to obtain a credit for the full purchase price.

1. License Grant. Nortel Networks NA Inc. (“Nortel Networks”) grants the end user of the Software (“Licensee”) a personal, nonexclusive, nontransferable license: a) to use the Software either on a single computer or, if applicable, on a single authorized device identified by host ID, for which it was originally acquired; b) to copy the Software solely for backup purposes in support of authorized use of the Software; and c) to use and copy the associated user manual solely in support of authorized use of the Software by Licensee. This license applies to the Software only and does not extend to Nortel Networks Agent software or other Nortel Networks software products. Nortel Networks Agent software or other Nortel Networks software products are licensed for use under the terms of the applicable Nortel Networks NA Inc. Software License Agreement that accompanies such software and upon payment by the end user of the applicable license fees for such software.

2. Restrictions on use; reservation of rights. The Software and user manuals are protected under copyright laws. Nortel Networks and/or its licensors retain all title and ownership in both the Software and user manuals, including any revisions made by Nortel Networks or its licensors. The copyright notice must be reproduced and included with any copy of any portion of the Software or user manuals. Licensee may not modify, translate, decompile, disassemble, use for any competitive analysis, reverse engineer, distribute, or create derivative works from the Software or user manuals or any copy, in whole or in part. Except as expressly provided in this Agreement, Licensee may not copy or transfer the Software or user manuals, in whole or in part. The Software and user manuals embody Nortel Networks’ and its licensors’ confidential and proprietary intellectual property. Licensee shall not sublicense, assign, or otherwise disclose to any third party the Software, or any information about the operation, design, performance, or implementation of the Software and user manuals that is confidential to Nortel Networks and its licensors; however, Licensee may grant permission to its consultants, subcontractors, and agents to use the Software at Licensee’s facility, provided they have agreed to use the Software only in accordance with the terms of this license.

3. Limited warranty. Nortel Networks warrants each item of Software, as delivered by Nortel Networks and properly installed and operated on Nortel Networks hardware or other equipment it is originally licensed for, to function substantially as described in its accompanying user manual during its warranty period, which begins on the date Software is first shipped to Licensee. If any item of Software fails to so function during its warranty period, as the sole remedy Nortel Networks will at its discretion provide a suitable fix, patch, or workaround for the problem that may be included in a future Software release. Nortel Networks further warrants to Licensee that the media on which the Software is provided will be free from defects in materials and workmanship under normal use for a period of 90 days from the date Software is first shipped to Licensee. Nortel Networks will replace defective media at no charge if it is returned to Nortel Networks during the warranty period along with proof of the date of shipment. This warranty does not apply if the media has been damaged as a result of accident, misuse, or abuse. The Licensee assumes all responsibility for selection of the Software to achieve Licensee’s intended results and for the installation, use, and results obtained from the Software. Nortel Networks does not warrant a) that the functions contained in the software will meet the Licensee’s requirements, b) that the Software will operate in the hardware or software combinations that the Licensee may select, c) that the operation of the Software will be uninterrupted or error free, or d) that all defects in the operation of the Software will be corrected. Nortel Networks is not obligated to remedy any Software defect that cannot be reproduced with the latest Software release. These warranties do not apply to the Software if it has been (i) altered, except by Nortel Networks or in accordance with its instructions; (ii) used in conjunction with another vendor’s product, resulting in the defect; or (iii) damaged by improper environment, abuse, misuse, accident, or negligence. THE FOREGOING WARRANTIES AND LIMITATIONS ARE EXCLUSIVE REMEDIES AND ARE IN LIEU OF ALL OTHER WARRANTIES EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Licensee is responsible for the security of its own data and information and for maintaining adequate procedures apart from the Software to reconstruct lost or altered files, data, or programs.

4. Limitation of liability. IN NO EVENT WILL NORTEL NETWORKS OR ITS LICENSORS BE LIABLE FOR ANY COST OF SUBSTITUTE PROCUREMENT; SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES; OR ANY DAMAGES RESULTING FROM INACCURATE OR LOST DATA OR LOSS OF USE OR PROFITS ARISING OUT OF OR IN CONNECTION WITH THE PERFORMANCE OF THE SOFTWARE, EVEN IF NORTEL NETWORKS HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN NO EVENT

SHALL THE LIABILITY OF NORTEL NETWORKS RELATING TO THE SOFTWARE OR THIS AGREEMENT EXCEED THE PRICE PAID TO NORTEL NETWORKS FOR THE SOFTWARE LICENSE.

5. Government Licensees. This provision applies to all Software and documentation acquired directly or indirectly by or on behalf of the United States Government. The Software and documentation are commercial products, licensed on the open market at market prices, and were developed entirely at private expense and without the use of any U.S. Government funds. The license to the U.S. Government is granted only with restricted rights, and use, duplication, or disclosure by the U.S. Government is subject to the restrictions set forth in subparagraph (c)(1) of the Commercial Computer Software—Restricted Rights clause of FAR 52.227-19 and the limitations set out in this license for civilian agencies, and subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause of DFARS 252.227-7013, for agencies of the Department of Defense or their successors, whichever is applicable.

6. Use of Software in the European Community. This provision applies to all Software acquired for use within the European Community. If Licensee uses the Software within a country in the European Community, the Software Directive enacted by the Council of European Communities Directive dated 14 May, 1991, will apply to the examination of the Software to facilitate interoperability. Licensee agrees to notify Nortel Networks of any such intended examination of the Software and may procure support and assistance from Nortel Networks.

7. Term and termination. This license is effective until terminated; however, all of the restrictions with respect to Nortel Networks' copyright in the Software and user manuals will cease being effective at the date of expiration of the Nortel Networks copyright; those restrictions relating to use and disclosure of Nortel Networks' confidential information shall continue in effect. Licensee may terminate this license at any time. The license will automatically terminate if Licensee fails to comply with any of the terms and conditions of the license. Upon termination for any reason, Licensee will immediately destroy or return to Nortel Networks the Software, user manuals, and all copies. Nortel Networks is not liable to Licensee for damages in any form solely by reason of the termination of this license.

8. Export and Re-export. Licensee agrees not to export, directly or indirectly, the Software or related technical data or information without first obtaining any required export licenses or other governmental approvals. Without limiting the foregoing, Licensee, on behalf of itself and its subsidiaries and affiliates, agrees that it will not, without first obtaining all export licenses and approvals required by the U.S. Government: (i) export, re-export, transfer, or divert any such Software or technical data, or any direct product thereof, to any country to which such exports or re-exports are restricted or embargoed under United States export control laws and regulations, or to any national or resident of such restricted or embargoed countries; or (ii) provide the Software or related technical data or information to any military end user or for any military end use, including the design, development, or production of any chemical, nuclear, or biological weapons.

9. General. If any provision of this Agreement is held to be invalid or unenforceable by a court of competent jurisdiction, the remainder of the provisions of this Agreement shall remain in full force and effect. This Agreement will be governed by the laws of the state of California.

Should you have any questions concerning this Agreement, contact Nortel Networks, 4401 Great America Parkway, P.O. Box 58185, Santa Clara, California 95054-8185.

LICENSEE ACKNOWLEDGES THAT LICENSEE HAS READ THIS AGREEMENT, UNDERSTANDS IT, AND AGREES TO BE BOUND BY ITS TERMS AND CONDITIONS. LICENSEE FURTHER AGREES THAT THIS AGREEMENT IS THE ENTIRE AND EXCLUSIVE AGREEMENT BETWEEN NORTEL NETWORKS AND LICENSEE, WHICH SUPERSEDES ALL PRIOR ORAL AND WRITTEN AGREEMENTS AND COMMUNICATIONS BETWEEN THE PARTIES PERTAINING TO THE SUBJECT MATTER OF THIS AGREEMENT. NO DIFFERENT OR ADDITIONAL TERMS WILL BE ENFORCEABLE AGAINST NORTEL NETWORKS UNLESS NORTEL NETWORKS GIVES ITS EXPRESS WRITTEN CONSENT, INCLUDING AN EXPRESS WAIVER OF THE TERMS OF THIS AGREEMENT.

Contents

Preface

Before You Begin	xiii
Text Conventions	xiv
Acronyms	xvi
Hard-Copy Technical Manuals	xvii
How to Get Help	xviii

Chapter 1

Overview of the BCC

Introduction	1-2
Platform Requirements	1-3
Number of BCC Sessions	1-3
Multilevel Access	1-3
Terminology and Concepts	1-4
Configuration Hierarchy	1-4
Configuration Context	1-6
Objects and Instances	1-8
BCC Instance Identifier	1-8
Global (Box-Wide) Objects	1-8
Physical Device Objects	1-9
Parameters	1-11
Required	1-11
Derived	1-11
Optional	1-11

Chapter 2

Getting Started with the BCC

Entering and Exiting the BCC Interface	2-2
Displaying Your Location in Configuration Mode	2-4

Navigating in Configuration Mode	2-4
Navigating with the back Command	2-4
Navigating with Configuration Commands	2-5
Moving Back One or More Levels	2-5
Moving Back to Root Level	2-6
Moving Forward One or More Levels	2-6
Moving to Any Context in the Device Configuration	2-7
Displaying Configuration Data	2-9
Displaying Current/Active Configuration Data	2-9
Displaying Configured Objects	2-12
Displaying Configured Parameter Values	2-18
Displaying Configuration Choices	2-22
Displaying the Total Device Configuration Tree (All Available Choices)	2-23
Displaying Choices Available from the Current Context	2-24
Displaying Choices Available at All Subcontext Levels	2-24
Displaying Parameter Definitions	2-25
Saving Displayed Configuration Data	2-28
Displaying Help on System Commands	2-28
Displaying Help on show Commands	2-29

Chapter 3

Entering Commands and Using Command Files

Entering Commands	3-2
Using Command Abbreviations	3-2
Recalling Commands	3-2
Using Command Completion	3-3
Editing Command Lines	3-3
Entering Multiple Commands on a Line	3-4
Continuing a Command Line	3-5
System Commands	3-6
Configuration Command Syntax	3-6
Command Syntax Requirements	3-6
Using Basic (Full) Syntax	3-7
Using Default Syntax	3-8
Using Abbreviated Syntax	3-9

Specifying Parameter Values	3-9
Required, Derived, and Other Parameters	3-10
Specifying Multiple Parameter-Value Pairs	3-10
Specifying Multiple Values for One Parameter	3-10
Parameter Range Validation	3-11
Specifying Name or String Values	3-11
Disabling, Reenabling, and Deleting a Configured Object	3-12
Creating and Using BCC Files	3-13
Saving Commands and Displays to a File on a Workstation	3-13
Saving Configuration Commands to a File on a Device	3-14
Adding Comments to a Command File	3-14
Importing Configuration Commands from a File	3-15
Saving the Active Configuration as a Bootable File	3-16

Chapter 4

Tutorial: Configuring a Nortel Networks Router

Creating and Modifying a Device Configuration	4-2
Sample Router Configuration	4-2
Disabling a Configured Object	4-15
Enabling a Configured Object	4-16
Deleting a Configured Object	4-17

Appendix A

Multilevel Access

Introduction	A-2
Multilevel Access Login	A-2
How Access Is Granted	A-2
Access Privileges	A-3
Access Security	A-4
Sharing Access Profiles	A-4
Configuring Multilevel Access	A-4
Configuring Access	A-5
Configuring User	A-6
Configuring Group	A-7
Configuring Audit	A-8

Disabling or Deleting Users and Groups	A-8
BCC Lock Messages	A-9

Appendix B
System Commands

Appendix C
TCL Support

Appendix D
System show Commands

show access	D-2
show console	D-4
show hardware	D-7
show interface	D-9
show process	D-10
show system	D-13

Appendix E
Syntax for Module Location

Appendix F
BN Console Slot Election

Introduction	F-2
Using the BCC to Customize Console Slot Election	F-2
Disabling and Reenabling Console Slot Election	F-3
Console Slot Election Error Message	F-4

Appendix G
BCC Board Types

Introduction	G-2
AN and ANH Board Types	G-2
ARN Board Types	G-5
ASN Board Types	G-6
BLN and BCN Board Types	G-7
Passport 2430 Board Types	G-9
Passport 5430 Board Types	G-9
System 5000 Board Types	G-10

Index

Figures

Figure 1-1.	Technician Interface and the BCC Interface	1-2
Figure 1-2.	Sample BCC Configuration	1-5
Figure 1-3.	Configuring IP and RIP on an Ethernet Interface	1-6
Figure 1-4.	Location or Context in Configuration Mode	1-7
Figure 2-1.	Moving Away from Root Level	2-7
Figure 2-2.	Navigating to an Object in the Configuration	2-8
Figure 2-3.	Navigating with the BCC Recursive Search Feature	2-9
Figure 2-4.	Objects You Can Configure at the Next (Subcontext) Level	2-24
Figure 4-1.	Sample BCC Configuration (BCN Router)	4-3
Figure 4-2.	Typical BCC Configuration Cycle	4-4
Figure A-1.	Configurable Multilevel Access Objects	A-5

Tables

Table 2-1.	Help for BCC System Commands	2-28
Table 3-1.	Keystrokes for Editing BCC Command Lines	3-3
Table 3-2.	BCC Commands for Disabling, Reenabling, and Deleting	3-12
Table A-1.	Access Parameter Options	A-5
Table A-2.	User Parameter Options	A-6
Table A-3.	Group Parameter Options	A-7
Table A-4.	Audit Parameter Options	A-8
Table B-1.	System Commands	B-2
Table E-1.	Syntax for Specifying Module Location per Device	E-1
Table G-1.	BCC Board Types: AN and ANH Modules	G-2
Table G-2.	BCC Board Types: ARN Modules	G-5
Table G-3.	BCC Board Types: ASN Modules	G-6
Table G-4.	BCC Board Types: BLN and BCN Modules	G-7
Table G-5.	BCC Board Types: Passport 2430 Modules	G-9
Table G-6.	BCC Board Types: Passport 5430 Modules	G-9
Table G-7.	BCC Board Types: System 5000 Modules	G-10

Preface

The Bay Command Console (BCC™) is a command-line interface for configuring Nortel Networks™ devices. If you are responsible for configuring and managing Nortel Networks AN®, ANH™, ARN™, ASN™, BN® (BCN® and BLN®), Passport™ 2430, Passport 5430, and System 5000™ routers, read this guide to learn how to use the BCC.

Before You Begin

Before using this guide, you must complete the following procedures. For a new router:

- Install the router (see the installation guide that came with your router).
- Connect the router to the network and create a pilot configuration file (see *Quick-Starting Routers*, *Configuring BayStack Remote Access*, or *Connecting ASN Routers to a Network*).

Make sure that you are running the latest version of Nortel Networks BayRS™ and Site Manager software. For information about upgrading BayRS and Site Manager, see the upgrading guide for your version of BayRS.

Text Conventions

This guide uses the following text conventions:

angle brackets (< >)	<p>Indicate that you choose the text to enter based on the description inside the brackets. Do not type the brackets when entering the command.</p> <p>Example: If the command syntax is: ping <ip_address>, you enter: ping 192.32.10.12</p>
bold text	<p>Indicates command names and options and text that you need to enter.</p> <p>Example: Enter show ip {alerts routes}.</p> <p>Example: Use the dinfo command.</p>
braces ({ })	<p>Indicate required elements in syntax descriptions where there is more than one option. You must choose only one of the options. Unless explicitly instructed to do so, do not type the braces when entering the command.</p> <p>Example: If the command syntax is: show ip {alerts routes}, you must enter either: show ip alerts or show ip routes, but not both.</p> <p>If the command sets a parameter value consisting of multiple elements, you must type the braces as part of the command if instructed to do so.</p> <p>Example: severity-mask {fault warning info}</p>
brackets ([])	<p>Indicate optional elements in syntax descriptions. Do not type the brackets when entering the command.</p> <p>Example: If the command syntax is: show ip interfaces [-alerts], you can enter either: show ip interfaces or show ip interfaces -alerts.</p>

ellipsis points (. . .)	<p>Indicate that you repeat the last element of the command as needed.</p> <p>Example: If the command syntax is: ethernet/2/1 [<i><parameter></i> <i><value></i>] . . . , you enter ethernet/2/1 and as many parameter-value pairs as needed.</p>
<i>italic text</i>	<p>Indicates new terms, book titles, and variables in command syntax descriptions. Where a variable is two or more words, the words are connected by an underscore.</p> <p>Example: If the command syntax is: show at <i><valid_route></i> <i>valid_route</i> is one variable and you substitute one value for it.</p>
screen text	<p>Indicates system output, for example, prompts and system messages.</p> <p>Example: Set Nortel Networks Trap Monitor Filters</p>
separator (>)	<p>Shows menu paths.</p> <p>Example: Protocols > IP identifies the IP option on the Protocols menu.</p>
vertical line ()	<p>Separates choices for command keywords and arguments. Enter only one of the choices. Do not type the vertical line when entering the command.</p> <p>Example: If the command syntax is: show ip {alerts routes}, you enter either: show ip alerts or show ip routes, but not both.</p>

Acronyms

This guide uses the following acronyms:

ARP	Address Resolution Protocol
ATM	asynchronous transfer mode
BofL	Breath of Life
DCM	data collection module
DRAM	dynamic random access memory
FDDI	Fiber Distributed Data Interface
GAME	Gate Access Management Entity
IP	Internet Protocol
IPX	Internetwork Packet Exchange
ISDN	Integrated Services Digital Network
LAN	local area network
MIB	Management Information Base
MAC	media access control
NVFS	nonvolatile file system
NVRAM	nonvolatile random access memory
OSPF	Open Shortest Path First
PCI	peripheral component interconnect
PMC	PCI mezzanine card
RADIUS	Remote Access Dial-In User Services
RIP	Routing Information Protocol
SNMP	Simple Network Management Protocol
SRM-L	system resource module-link
TCL	Tool Command Language
TCP/IP	Transmission Control Protocol/Internet Protocol
TFTP	Trivial File Transfer Protocol

VNR	Virtual Network Routing
WAN	wide area network

Hard-Copy Technical Manuals

For more information about using the BCC to configure or monitor (show) behavior of a specific BayRS service, refer to the latest edition of the *Task Map*.

You can print selected technical manuals and release notes free, directly from the Internet. Go to support.baynetworks.com/library/tpubs/. Find the product for which you need documentation. Then locate the specific category and model or version for your hardware or software product. Using Adobe Acrobat Reader, you can open the manuals and release notes, search for the sections you need, and print them on most standard printers. You can download Acrobat Reader free from the Adobe Systems Web site, www.adobe.com.

You can purchase selected documentation sets, CDs, and technical publications through the collateral catalog. The catalog is located on the World Wide Web at support.baynetworks.com/catalog.html and is divided into sections arranged alphabetically:

- The “CD ROMs” section lists available CDs.
- The “Guides/Books” section lists books on technical topics.
- The “Technical Manuals” section lists available printed documentation sets.

How to Get Help

If you purchased a service contract for your Nortel Networks product from a distributor or authorized reseller, contact the technical support staff for that distributor or reseller for assistance.

If you purchased a Nortel Networks service program, contact one of the following Nortel Networks Technical Solutions Centers:

Technical Solutions Center	Telephone Number
Billerica, MA	800-2LANWAN (800-252-6926)
Santa Clara, CA	800-2LANWAN (800-252-6926)
Valbonne, France	33-4-92-96-69-68
Sydney, Australia	61-2-9927-8800
Tokyo, Japan	81-3-5740-1700

Chapter 1

Overview of the BCC

This chapter provides information about the following topics:

Topic	Page
Introduction	1-2
Platform Requirements	1-3
Number of BCC Sessions	1-3
Multilevel Access	1-3
Terminology and Concepts	1-4

Introduction

The BCC is a command-line interface for configuring Nortel Networks devices. After logging on to a device, you access the BCC by entering the **bcc** command at the Technician Interface prompt ([Figure 1-1](#)).

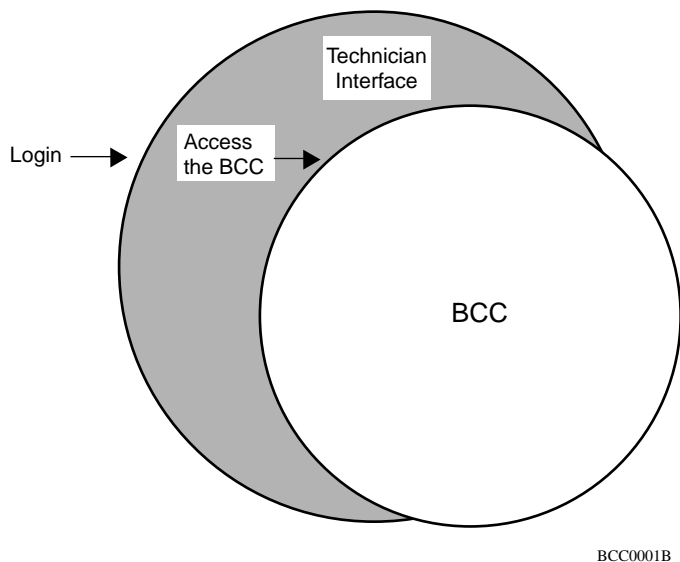


Figure 1-1. Technician Interface and the BCC Interface

From the BCC prompt, you can:

- Execute any system command not classified as “Technician Interface only” (see [Appendix B, “System Commands”](#)).
- Execute configuration commands to perform tasks such as creating or deleting IP interfaces on the router. Enter BCC configuration mode by entering the **config** command at the BCC prompt.



Note: For a list of services you can configure using the BCC, see the *Release Notes*. You can obtain a complete hierarchical listing of all objects configurable on a device by entering the **help tree -all** command at any BCC prompt.

Platform Requirements

The BCC runs on AN, ANH, ARN, ASN, System 5000, and BN platforms including ARE, FRE®, and FRE-2 processor modules. Each slot must have:

- 16 MB of dynamic RAM (DRAM)
- 2 MB of free memory space available when you start the BCC

If you try to start the BCC with insufficient DRAM or free memory on a slot, the BCC returns an error message. In that case, use Site Manager instead of the BCC.

Number of BCC Sessions

You can open one BCC session per slot in read-write (configuration) mode. Other users can open additional BCC sessions in read-only (nonconfiguration) mode on the same slot, depending on available memory. Each BCC session is mutually exclusive. If you make a change during a BCC session in read-write mode, this change does not appear in other BCC sessions.

Multilevel Access

Multilevel access adds a third login level, that of Operator, to the existing Manager and User login levels of the BCC. With multilevel access, multiple users (each with a distinct user name and password) can access the router simultaneously.

Multilevel access allows you to:

- Add multiple user names, passwords, and access privileges to the router
- Manage the distribution of user names, passwords, and access privileges from the BCC
- View event logs showing each BCC command issued and the user responsible for issuing the command

For more information on how to configure and use multilevel access features, refer to [Appendix A, “Multilevel Access.”](#) For a list of system commands and the privilege level required to execute them, refer to [Appendix B, “System Commands.”](#)

Terminology and Concepts

This section describes key terms and concepts of the BCC interface.


Configuration Hierarchy

The BCC configuration hierarchy begins at a root-level object, called *box* for AN/ANH, ARN, and BN platforms, and *stack* for ASN and System 5000 platforms. Under the root-level object are branch objects such as interfaces and protocols that fan out from root level in a tree hierarchy.

You use the **help tree -all** and **show config -all** commands to display the configuration hierarchy of a Nortel Networks router:

- The **help tree -all** command displays the hierarchy of every object you can configure. (These are the configuration choices you can make. These are not objects already configured.)
- The **show config -all** command displays the hierarchy of objects you have actually configured.

[Figure 1-2](#) illustrates a sample BCC configuration for an AN, BN, or ARN router.

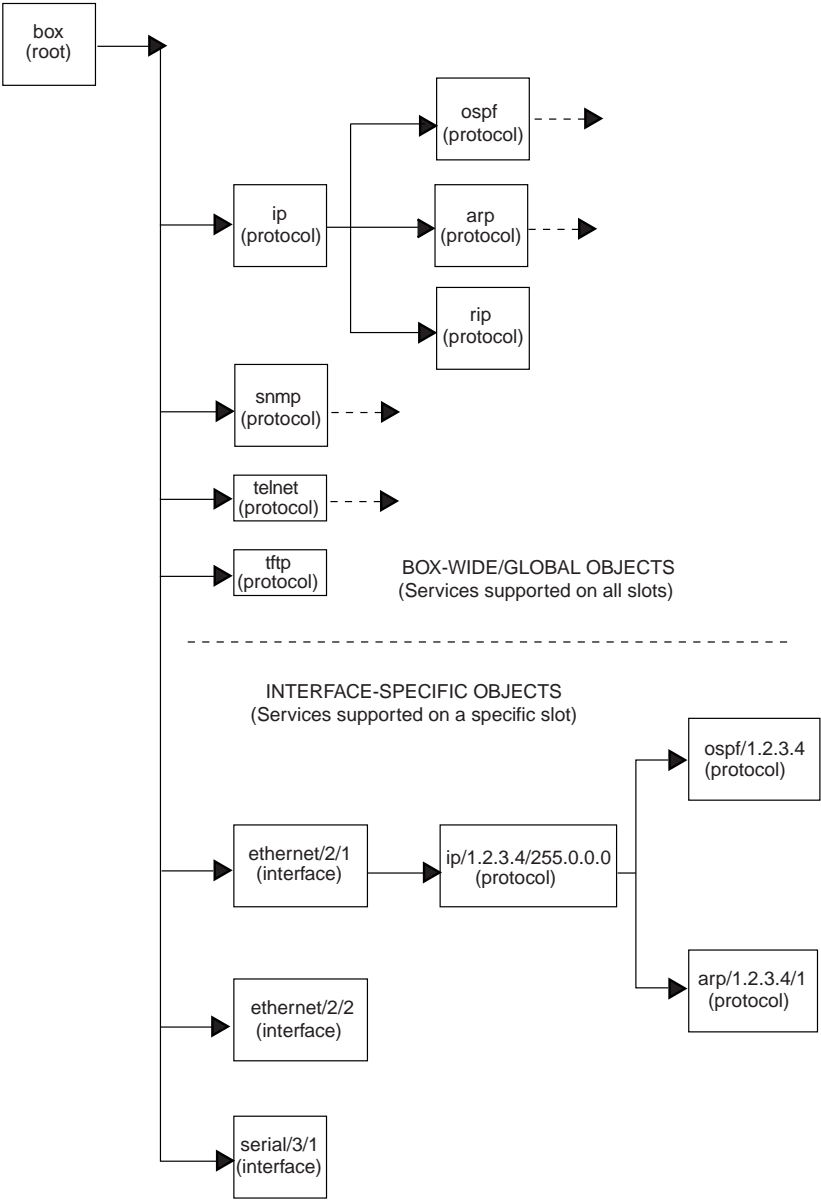


BCC0012C

Figure 1-2. Sample BCC Configuration

You use BCC commands to create new objects and to modify or delete objects in an existing configuration hierarchy. You begin at root level in BCC configuration mode and navigate to objects in the device configuration tree.

For example, on a BLN router, you can use BCC commands to add a new physical interface (such as Ethernet) on *box*, add IP to the Ethernet interface, and then add RIP to IP on that interface. [Figure 1-3](#) shows the sequence of commands necessary to build this configuration.

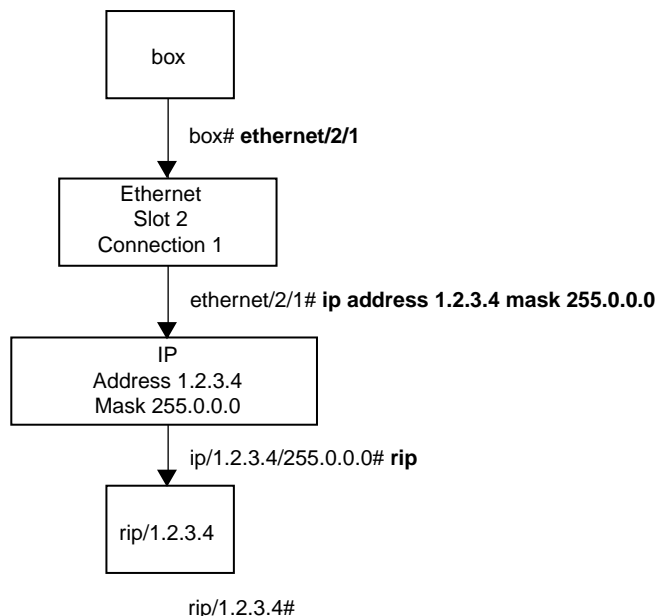

BCC0017A


Figure 1-3. Configuring IP and RIP on an Ethernet Interface

Configuration Context

Your working location within the BCC configuration tree is referred to as the *context*. Just as a UNIX file system has a current working directory within which you can add, modify, or delete files, the BCC configuration tree has a current working context, within which you can add, modify, disable, reenable, or delete objects.

The BCC displays the context of an object in terms of its location along a path that begins at the root level of the device configuration tree. Each semicolon in the path marks a transition from one level to the next branch level in the device configuration tree. Using a semicolon is also equivalent to pressing [Return] at the end of a command, effectively starting a new command line.

For example, if you configure an IP interface (address 1.2.3.4, mask 255.0.0.0) on ethernet/2/1 of a BLN router, the BCC displays its location as *box; ethernet/2/1; ip/1.2.3.4/255.0.0.0* ([Figure 1-4](#)).

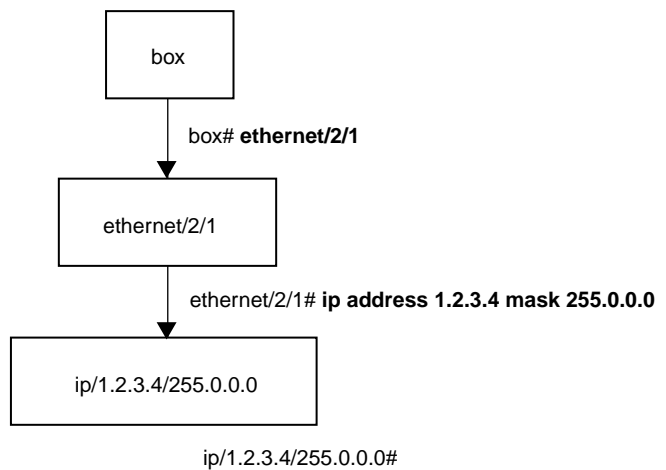

BCC0017B

Figure 1-4. Location or Context in Configuration Mode

Objects and Instances

In BCC terminology, configurable entities are referred to as *objects* of a particular *class*, each of which constitutes an *instance*:

- An *object* is a configurable physical or logical entity such as a physical interface or a protocol on an interface. Every configurable object belongs to a specific *class* that defines its characteristics.
- A *class* is a template for a configurable object (such as Ethernet or the protocol IP). When you add a new object to the configuration of a device, the BCC creates a copy (*instance*) of the appropriate template.
- An *instance* is an object uniquely identifiable within the total device configuration. Each instance is identified by its BCC instance identifier.

BCC Instance Identifier

A BCC instance identifier uniquely identifies a single instance of an object configured on a device. The BCC instance ID consists typically of the name of the object, combined with the values you specify for its required parameters. For example, the BCC instance ID for an Ethernet interface on a BN platform consists of **ethernet/**<slot>/<connector>, as in **ethernet/2/1**; the BCC instance ID for an Ethernet interface on an ASN platform consists of **ethernet/**<slot>/<module>/<connector>, as in **ethernet/1/2/2**.

A configurable object may also have required parameters that do not become part of its BCC instance ID. For example, the global OSPF object has a required *router-id* parameter that does not become part of the instance ID.

Each object has its own requirements for unique instance identification within the total device configuration.

Global (Box-Wide) Objects

Global (*box-wide*) objects provide services uniformly to all slots of a network device. Examples include global IP, BGP, TCP, SNMP, FTP, TFTP, and Telnet. Some protocols, such as IP, RIP, and OSPF, have global and interface-level objects.

Physical Device Objects

The following sections provide BCC terms for the physical device.

Box and Stack

The BCC uses the term *box* or *stack* to identify the root level of the BCC configuration tree for a Nortel Networks device. Every box or stack object has a *type* parameter. The value assigned to the *type* parameter identifies the type of Nortel Networks device chassis:

<i>type</i> Value	Router Model
an	AN/ANH
arn	ARN
asn	ASN
freln	BLN
frecn	BCN
lite	Passport 2430
fbr4slot	Passport 5430
sys5000	System 5000

Board

The BCC uses the term *board* to identify any logic or circuit board in a Nortel Networks device. Each board typically occupies a *slot* in a network device. On some Nortel Networks products, one board may contain another board such as an RMON data collection module (DCM). All board objects have a *type* parameter that identifies its hardware type. For example, “qenf” is the value of the type parameter for a Quad Ethernet with Hardware Filters board.



Note: For board descriptions based on the literal value of the *type* parameter for any board object, see the *Release Notes*.

Module

The BCC uses the term *module* to identify network media-specific I/O modules (such as, Ethernet and token ring). Each module has one or more connectors for attachment to a physical network transmission medium.

Slot

The BCC uses the term *slot* to identify the location, as well as a physical and electrical means, for attaching boards to logic and power connections available on the device chassis. Note the following:

- Multislot devices such as the BLN or BCN router accommodate a *system module* (SRM-L) in one slot, and one *link module* in each remaining slot.
- Single-slot devices such as the AN, ANH, ASN, and ARN routers accommodate one *base module* (slot 1), which may be augmented by one or two *adapter modules* and one *expansion module*.

Connector

The BCC uses the term *connector* to identify the physical and electrical means to interconnect a network device (slot or module) directly or indirectly to a physical network transmission medium.

Line

The BCC uses the term *line* to identify the physical (and in some cases, logical) circuit identified typically by means of a slot, connector, interface type (ethernet, sync, fddi, and so on), and, where applicable, a channel number (such as with T1/E1 interface types).

Port

The BCC uses the term *port* to identify an interface object defined by its type (for example, an Ethernet port) and location (slot and connector) within a network device. On a network device, a port is also a logical point of termination for data sent or received by a specific protocol or application.

Interface

The BCC uses the term *interface* to identify circuitry and digital logic associated with the interconnection between a physical network medium (such as Ethernet) and a higher-layer protocol entity (such as IP).



Note: A *logical interface* is an addressable entity for originating and terminating connections across an IP network.

Parameters

A *parameter* is an attribute (or property) of a configurable object. Parameters can be classified as one of the following:

- Required
- Derived
- Optional

Required

For any BCC object, required parameters are a minimum set of parameters for which the BCC requires you to supply values. For example, the required parameters of a physical port are **slot** and **connector**.

Derived

Derived parameters are parameters for which the BCC supplies a value. For example, a derived parameter of the global OSPF object is **router-id**. In this case, the BCC derives a value for **router-id** from the address of the first IP interface configured on the device.

Optional

Optional parameters are parameters for which you can specify customized values, replacing any default values set by the system. For example, an optional parameter of an Ethernet interface is **bofl-retries**. This parameter normally has a default value of **5** (5 retries), but you can change this to another numeric value.

Chapter 2

Getting Started with the BCC

This chapter provides information about the following topics:

Topic	Page
Entering and Exiting the BCC Interface	2-2
Displaying Your Location in Configuration Mode	2-4
Navigating in Configuration Mode	2-4
Displaying Configuration Data	2-9
Displaying Help on System Commands	2-28
Displaying Help on show Commands	2-29

Entering and Exiting the BCC Interface

To access the BCC interface on a Nortel Networks router:

1. **Open a Technician Interface session with the target router.**

For detailed information about opening a Technician Interface session, see *Using Technician Interface Software*.

2. **Enter the Manager, Operator, or User command at the login prompt that appears on your Telnet or console display.**

The Manager login allows you to enter any system command and allows read-write access to the device configuration. The Operator login allows you to enter only operator-level system commands and allows limited access to the device configuration. The User login allows you to enter only user-level system command and allows read-only access to the device configuration. For a list of system commands and the privilege level required to execute them, refer to [Appendix B, “System Commands.”](#)

3. **Enter `bcc` at the Technician Interface prompt.**

```
Router1> bcc

Welcome to Bay Command Console!

* To enter configuration mode, type config

* To list all system commands, type?

* To exit the BCC, type exit
bcc>
```

Note:

Attempting to start the BCC at the Technician Interface prompt before the router has completed booting up may cause a loading error to occur. Select one of the following two options to prevent or bypass this error:

- To prevent the error condition, wait until the router has completed booting up before starting the BCC.
- To bypass the error condition, re-enter the **bcc** command following the fault and press [Enter]. The BCC will then start while the router is booting up.

4. Enter config at the BCC prompt.

```
bcc> config  
box#
```

You enter configuration mode at the root (box) level of the BCC configuration tree. The prompt ends with a pound symbol (#) if you have read-write privileges (Manager only), or with a greater than symbol (>) if you have read-only privileges (Manager or User).

If you enter BCC configuration mode as Manager and want to change your privilege level for the current session from read-write to read-only, enter **config -read-only**. To change Manager privileges back to read-write, enter **config -read-write**. You cannot change your privilege level from read-only to read-write if you logged in as User.



Caution: When you enter BCC configuration commands with read-write privileges, you immediately modify the device configuration.

5. When you finish using BCC configuration mode, enter the exit command at any prompt.

```
box# exit  
bcc>
```

6. When you finish using the BCC, enter the exit command at the BCC prompt.

```
bcc> exit  
Router1>
```

Exiting the BCC returns you to the Technician Interface prompt.

For more detailed information about Technician Interface access, login, or logout procedures, see *Using Technician Interface Software*.

Displaying Your Location in Configuration Mode

In configuration mode, the BCC displays a context-sensitive prompt. The prompt identifies the configured object at your current working location within the configuration hierarchy. For example, after logging in to a BLN router as Manager, then configuring or navigating to the Ethernet interface on slot 2 connector 1, the BCC displays the following prompt:

```
ethernet/2/1#
```

To display the complete path from root level to your current level in the device configuration tree, enter the **pwc** (print working context) command.

Example:

```
rip/192.168.125.34# pwc  
box; ethernet/2/1; ip/192.168.125.34/255.255.255.224; rip/  
192.168.125.34;
```

The **pwc** command displays the BCC instance identifier of each configured object in the path.

Navigating in Configuration Mode

You can navigate from one object to another in BCC configuration mode by using:

- The **back** command
- Configuration commands

Navigating with the **back** Command

In BCC configuration mode, use the **back** command to move a specific number of levels back toward root level. This is the syntax for the **back** command:

```
back [<n> ]
```

n is the number of levels.

Entering the **back** command with no argument moves you back one level closer to root level.

Example:

```
rip/192.168.125.34# back  
ip/192.168.125.34/255.255.255.224# back  
ethernet/2/1#
```

Entering the **back** command with an integer moves you from your current working location, back toward root, the number of levels you specify.

Example:

```
rip/192.168.125.34# back 2  
ethernet/2/1#
```

In this example, the **back 2** command moves you from the current working location (rip/192.168.125.34), back two levels to ethernet/2/1 (with ip/192.168.125.34/255.255.255.224 as the intervening level).



Note: If you enter an integer value that exceeds the actual number of levels back to root (box or stack) level, the BCC returns to root level.

Navigating with Configuration Commands

Using BCC configuration commands, you can:

- Move back to a previous level
- Move back to root level
- Move forward to the next level
- Move from your current level to any other level in the device configuration tree

Moving Back One or More Levels

To move from your current working level back one or more levels closer to root level of the device configuration tree, enter the full BCC instance ID of the desired object.

Example (go back one level):

```
rip/192.168.125.34# ip/192.168.125.34/255.255.255.224  
ip/192.168.125.34/255.255.255.224#
```

Example (go back two levels):

```
rip/192.168.155.151# ethernet/2/1  
ethernet/2/1#
```

In the second example, the BCC searches back toward root until it finds a context or level where the object you specified (in this case, ethernet/2/1) exists in the router configuration tree. The BCC enters the context of this object, and the prompt displays your new location.

Moving Back to Root Level

You can move back to root level in configuration mode by entering the name of the object at that level.

For an AN, ANH, ARN, or BN router, enter:

```
ip/1.2.3.4# box  
box#
```

For an ASN or System 5000 router, enter:

```
ip/1.2.3.4# stack  
stack#
```

Moving Forward One or More Levels

To move from your current working level to the next configured level ([Figure 2-1](#)), enter the BCC instance ID of the desired object.

Example:

```
box# ethernet/2/1  
ethernet/2/1# ip/1.2.3.4/255.0.0.0  
ip/1.2.3.4/255.0.0.0# rip  
rip/1.2.3.4#
```

Notice that a slash (/) joins the name and any required parameter values to make a BCC instance ID for any configured object.

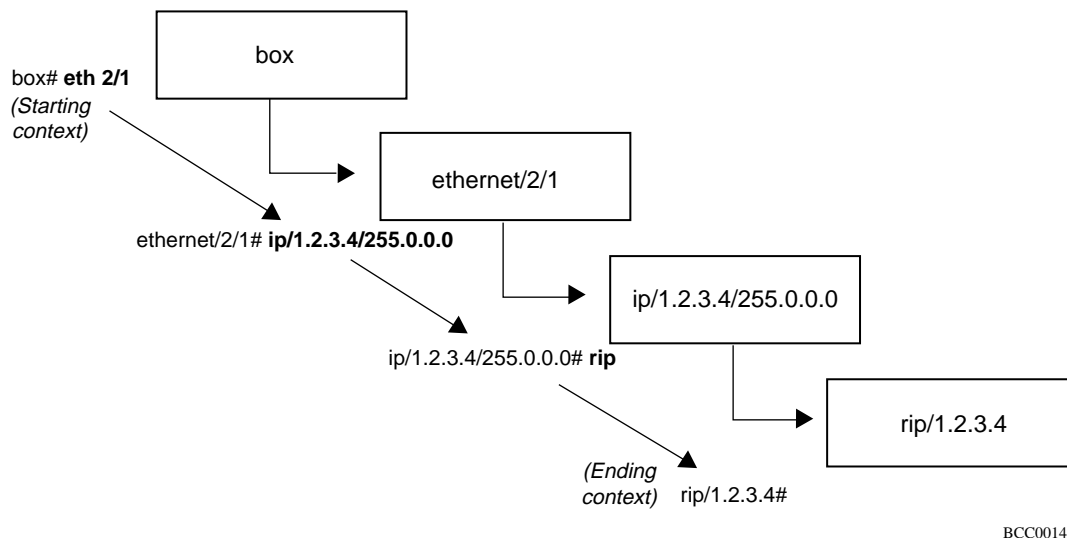


Figure 2-1. Moving Away from Root Level

Moving to Any Context in the Device Configuration

To navigate to any configured object, you can specify a full, or absolute, path from root (box or stack) level at any prompt. When you enter a path, specify the BCC instance identifier of each object.

Example:

To move from `ip/192.168.33.66/255.255.255.0` (on `ethernet/2/1`) to `rip/1.2.3.4` on `ethernet/2/2` ([Figure 2-2](#)), enter the following command:

```
ip/192.168.33.66/255.255.255.0# box;ethernet/2/2;ip/1.2.3.4/255.0.0.0;rip
rip/1.2.3.4#
```

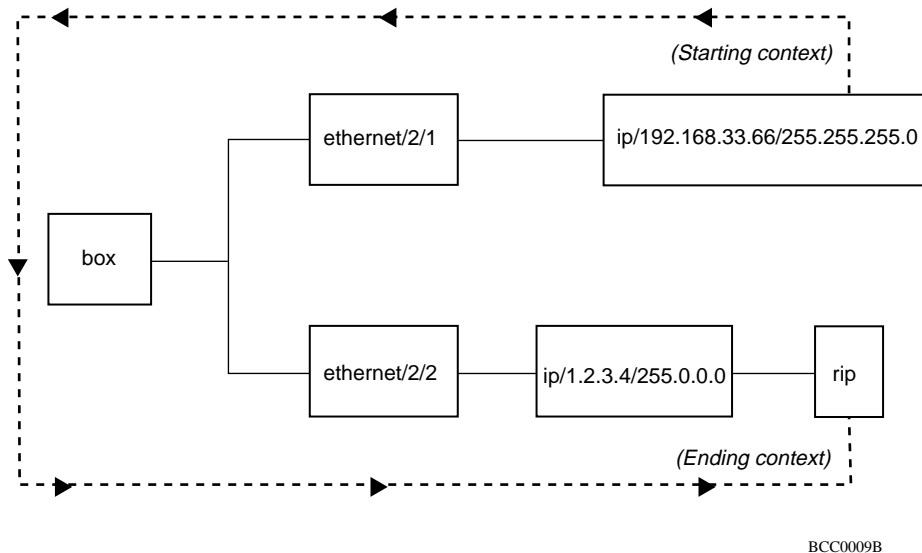


Figure 2-2. Navigating to an Object in the Configuration

The BCC can automatically search backward (recursively) toward root level until it finds a level where the object you specify first in the command line exists in the device configuration tree.

Example:

To move from ip/192.168.33.66/255.255.255.0 on ethernet/2/1 to rip/1.2.3.4 on ethernet/2/2, enter the following command:

```
ip/192.168.33.66/255.255.255.0# ethernet/2/2;ip/1.2.3.4/255.0.0.0;rip
rip/1.2.3.4#
```

In this example, the BCC searches backward to find ethernet/2/2 (specified first in the command line), and then moves sequentially to the other locations (ip/1.2.3.4/255.0.0.0 and rip) specified next in the command line.

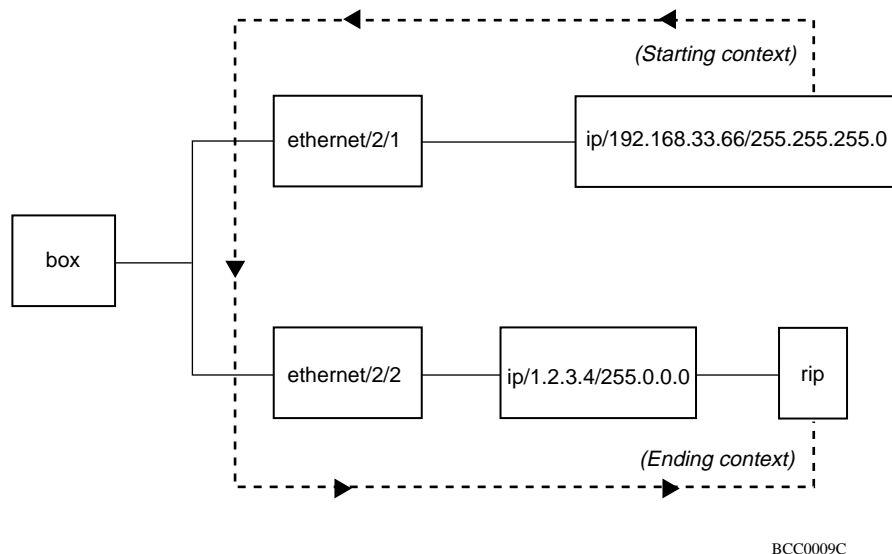


Figure 2-3. Navigating with the BCC Recursive Search Feature

Displaying Configuration Data

There are several BCC help commands that let you:

- Display information on objects in the active (actual) device configuration
- Display information on objects that you can *add* to the current configuration; these are **?** and **help tree [-all]**

Displaying Current/Active Configuration Data

With the **show config** and **lso** commands, you can display:

- The current device configuration
- The operating parameters of each configured object
- The values set for the parameters of each configured object

The optional arguments you add to these commands depend on what you want to see, as follows:

Command	Task
show config	Show the configuration of the current object only. (Entered without any command <i>-<option></i> , show config does not display objects configured on the current object.)
Note: Combine the following command options to customize show config output.	
<i><BCC_instance_ID></i>	Show the configuration of this object (specified by the BCC instance identifier).
-recursive	Show any dependent objects configured on this (current or specified) object. <i>Examples:</i> <ul style="list-style-type: none"> show config -recursive show config -compact -recursive show config ip/1.2.3.4/255.0.0.0 -recursive
-verbose	Show the configuration including the current (default or nondefault) value of every parameter of the objects shown. <i>Examples:</i> <ul style="list-style-type: none"> show config -verbose show config -recursive -verbose show config ip/1.2.3.4/255.0.0.0 -recursive -verbose
-all	Show the total device configuration. <i>Examples:</i> <ul style="list-style-type: none"> show config -all show config -all -verbose
-compact	Show the configuration without navigation (back) commands. Example: show config -compact Note: In configuration mode, do not import (using source) the contents of a file saved using the -compact option.
-file <filename>	Save the output of this command to a file. <i>Examples:</i> <ul style="list-style-type: none"> show config -file boston.config show config -recursive -verbose -file boston.config



Note: The **show config** command does not display the values of parameters currently set to their default values unless you use the **-verbose** argument.

Regardless of the command options you enter, output of the **show config** command typically includes:

- Objects added by a user into the active device configuration
- Objects added automatically by the BCC to support a user-configured object

The arguments you add to the **Iso** command also depend on what you want to see, as follows:

Command	Task
Iso	List only next-level objects configured on the current object. (Display output in tabular format.) Example: Iso
Iso -list	List only next-level objects configured on the current object. (Display output in nontabular format.) Example: Iso -l
Iso -recursive	List, by BCC instance identifier, objects configured at every level on the current object. (Display the path from root level to each configured object.) Example: Iso -r Note: You cannot combine the -l and -r arguments of the Iso command.
Iso [-r <pattern>]	Show objects configured at the next (branch) level. If issued with the -r flag, show objects configured at all descending branch levels. If issued at the <code>box#</code> prompt, show all objects in the configuration and the paths to those objects. If issued with a “glob-style” string pattern (using <code>*</code> and <code>?</code> wildcards, and no regular expressions), list only configured objects in the current context that match the specified pattern. For example: <div>Iso *o*Iso *a*Iso “ip/1.2.?.?/*”</div>

Displaying Configured Objects

You can display:

- The current object (the object shown in the BCC configuration prompt)
- An object you specify by BCC instance ID
- Objects configured at the next (subcontext) level
- All branches configured on the current object
- The total device configuration tree (active configuration only)
- The IDs of all configured objects
- The active configuration in compact format

Displaying the Current Object

To display the configuration of the current object, minus any dependent objects configured on the same branch, use the **show config** command.

Example:

```
ethernet/2/1# show config
ethernet slot 2 connector 1
    circuit-name E21-alpha
```

Displaying a Specified Object

To display the configuration of any object you specify by BCC instance ID from any configuration context, enter the following command:

show config <BCC_Instance_ID>

BCC_instance_ID is the identifier assigned by the BCC to uniquely identify a specific object in the active device configuration.

Example:

Show the configuration of an object with the ID

ip/192.168.125.34/255.255.255.224.

```
ethernet/2/1# show config ip/192.168.125.34/255.255.255.224
ip address 192.168.125.34 mask 255.255.255.224
    broadcast 192.168.125.32
```

To display the configuration of all other objects configured on the same branch, add the **-recursive** (or **-r**) option to the **show config <BCC_instance_ID>** command.

Example:

```
box# show config ip/192.168.125.34/255.255.255.224 -r
ip address 192.168.125.34 mask 255.255.255.224
    broadcast 192.168.125.32
    arp
    back
    rip
    back
back
```

Displaying Unsatisfied Dependent Objects in the Current Context

To display any unsatisfied dependent objects (requiring additional configuration) in the current context by default, enter:

check [-recursive | -all]

- Use the “**-recursive**” option to check for dependencies related to the current context and all of its subcontexts.
- Use the “**-all**” option to check for dependencies associated with all configured contexts.

The **check** command operates only in config mode.

Displaying Objects at the Next Subcontext Level

To display by BCC instance identifier any objects configured at the next subcontext level accessible from your current location in configuration mode, use the **lso** or **lso -list (lso -l)** commands.

Example:

Display in tabular format a list of objects configured on the current object. Show the BCC instance identifier of each configured object.

```
box# lso
board/1      board/4      dns           ip            telnet
board/2      board/5      ethernet/2/1  snmp          tftp
board/3      console/1    ftp           syslog
```

Example:

Display in nontabular format a list of objects configured on the current object. Show the BCC instance identifier of each configured object.

```
box# iso -l
board/1 board/2 board/3 board/4 board/5 ftp snmp tftp console/1
telnet ethernet/2/1 ip dns syslog
```

Displaying Objects at All Subcontext Levels

To display in hierarchical format the active configuration of the current object and any other dependent objects configured on the same branch, use the **show config -recursive** command.

Example:

```
box# eth 2/1
ethernet/2/1# show config -r
ethernet slot 2 connector 1
    circuit-name E21-alpha
    ip address 192.168.125.34 mask 255.255.255.224
        broadcast 192.168.125.32
    arp
    back
    rip
    back
    back
back
```

Output of the **show config -r** command includes any **back** commands necessary for navigation back from the current context to the prior context.



Note: If you enter **show config -r** at root level in configuration mode, the BCC displays the same output as **show config -all**.

Displaying the Total Device Configuration

To display the hierarchical listing of every object actively configured on this device, use the **show config -all** command.

Example:

```
box# show config -all
box
    type freqn
    build-version {BayRS ## BCC ##}
    board slot 5
        type sync
    back
    board slot 7
        type srml
    back
    board slot 9
        type dtok
            .      .      .
            .      .      .
            .      .      .
    console portnum 1
        prompt {"%slot%:"}
        auto-manager-script automgr.bat
        auto-user-script autouser.bat
    back
    ethernet slot 13 connector 1
        circuit-name E131
        ip address 192.168.133.114 mask 255.255.255.224
        arp
        back
        rip
        back
        back
    back
    back
        .      .      .
        .      .      .
        .      .      .
```



Note: The BCC displays the same output as **show config -all** when you enter **show config -recursive** at root level in configuration mode.

Displaying the Path to Every Configured Object

To display by BCC instance identifier the path to every object configured at the next subcontext levels, enter the **Iso -recursive (Iso -r)** command from your current context.

Note that **Iso -r** initially lists all objects configured at the next subcontext level, and then displays the detailed path to each of those objects in standard BCC configuration syntax.

Example (from root level, BLN router):

```
box# Iso -r
board/1          board/4          dns          ip          telnet
board/2          board/5          ethernet/2/1 snmp        tftp
board/3          console/1        ftp          syslog

box; board/1;
box; board/2;
    .      .      .
    .      .      .
    .      .      .

box; snmp;
community/public

box; snmp; community/public;
manager/public/0.0.0.0          manager/public/192.32.241.36

box; snmp; community/public; manager/public/0.0.0.0;
box; snmp; community/public; manager/public/192.32.241.36;
    .      .      .
    .      .      .
    .      .      .
```

Example (from an IP interface on ethernet/2/1):

```
ip/192.168.125.34/255.255.255.224# Iso -r
arp/192.168.125.34/1      rip/192.168.125.34

box; ethernet/2/1; ip/192.168.125.34/255.255.255.224; arp/
192.168.125.34/1;

box; ethernet/2/1; ip/192.168.125.34/255.255.255.224; rip/
192.168.125.34;
```

Displaying Configured Objects in Compact Format

To display in compact format the active configuration of the current object or any object you specify by BCC instance ID, use the **show config -compact** command. Command output excludes any **back** commands otherwise shown for navigation from the current context to the prior context.

Example:

Display the configuration of your current context, ethernet/2/1, in compact format.

```
ethernet/2/1# show config -compact
ethernet slot 2 connector 1
    circuit-name E21-alpha
```

Or from any context, supply the BCC instance ID.

```
box# show config -compact ethernet/2/1
ethernet slot 2 connector 1
    circuit-name E21-alpha
```

To display the entire device configuration in compact format, add the **-all** option.

```
box# show config -all -compact
box
    type freln
    build-version {BayRS 13.10 BCC 4.10}
    contact { }
    system-name { lab }
    location Billerica
    help-file-name bcc.help

board slot 1
    type srml
board slot 2
    type qenf
board slot 3
    type wffddi2m
board slot 5
    type dtok
ftp
    default-volume 2
snmp
    lock-address 255.255.255.255
    community label public
    .      .      .
    .      .      .
    .      .      .
```

Displaying Configured Parameter Values

You can display values configured for any specific parameter, or all parameters, of:

- The current object
- An object configured at the next subcontext level
- An object you specify by BCC instance identifier
- Objects configured at all subcontext levels beyond your current location or ID-specified location in the active device configuration.

Displaying the Value of One Parameter

To display the value assigned to a specific parameter of the current object or an object configured at the next (subcontext) level, just enter the parameter name:

```
ethernet/2/1# bofl-timeout  
bofl-timeout 5
```

The BCC returns the name and value assigned to the parameter you specified.

You can also use the **info** command to obtain essentially the same information in a more terse format.

```
ethernet/2/1# info bofl-timeout  
5
```

To display the most detailed information on values for the same parameter, use the **?** command.

```
ethernet/2/1# bofl-timeout ?  
Current Value: 5  
Legal Values: <unsigned integer>  
Default Value: 5
```

To display the value assigned to any parameter of an object configured at the next subcontext level, first obtain a list objects configured at the next subcontext level.

```
ethernet/2/1# Iso  
ip/192.168.125.34/255.255.255.224
```


Next, copy and paste into the current command line the BCC instance identifier of the desired object, followed by the name of the parameter you want to check for current value.

```
ethernet/2/1# ip/192.168.125.34/255.255.255.224 address-resolution
address-resolution arp
```

For the most detailed information on the same parameter, use the **?** command.

```
ethernet/2/1# ip/192.168.125.34/255.255.255.224 address-resolution ?
Current Value: arp
Legal Values:
arp,ddn,pdn,in-arp,arp-in-arp,none,bfe-ddn,probe,arp-probe,atm-arp
Default Value: arp
```

Displaying All Parameter Values of an Object

To display parameter settings for the current object, use the **info** or **show config -verbose** commands.

Example (using the info command):

```
ethernet/2/1# info
bofl enable
bofl-timeout 5
bofl-retries 5
bofl-tmo-divisor 1
circuit-name E21-alpha
connector 1
hardware-filter disable
receive-queue-length 0
slot 2
state enabled
transmit-queue-length 0
```

Example (using the show config -verbose command):

```
ethernet/2/1# show config -v
ethernet slot 2 connector 1
bofl enable
bofl-timeout 5
bofl-retries 5
bofl-tmo-divisor 1
circuit-name E21-alpha
hardware-filter disable
receive-queue-length 0
transmit-queue-length 0
state enabled
```

From any configuration context, use the following command to display all parameter values associated with an object anywhere in the active device configuration.

show config <BCC_instance_ID> **-verbose**

Example:

```
box# show config ip/192.168.125.34/255.255.255.224 -v
ip address 192.168.125.34 mask 255.255.255.224
    state enabled
    assocaddr 0.0.0.0
    cost 1
    broadcast 192.168.125.32
    configured-mac-address 0x
    mtu-discovery disabled
    mask-reply disabled
    all-subnet-broadcast disabled
    address-resolution arp
    proxy disabled
    host-cache-aging cache-off
    udp-checksum enabled
    end-station-support disabled
    redirects enabled
    cache-size 128
```

Displaying Parameter Values for All Objects on a Branch

To display the parameter values assigned to all objects accessible from your current context, or from a context you specify by BCC instance identifier, use the following command.

show config [<BCC_instance_ID>] **-recursive -verbose**

or:

show config [<BCC_instance_ID>] **-r -v**

Example:

Display parameters of an object configured at the next subcontext level, relative to your current location in the device configuration tree.

```
box# eth 2/1 (first navigate to the object)
ethernet/2/1# show config -r -v
ethernet slot 2 connector 1
    circuit-name E21-alpha
    state enabled
    bofl enable
    bofl-timeout 5
    hardware-filter disable
    transmit-queue-length 0
    receive-queue-length 0
    bofl-retries 5
    bofl-tmo-divisor 1
ip address 192.168.125.34 mask 255.255.255.224
    state enabled
    assocaddr 0.0.0.0
    cost 1
    broadcast 192.168.125.32
    .      .      .
    .      .      .
    .      .      .
back
rip
    state enabled
    supply enabled
    listen enabled
    .      .      .
    .      .      .
    .      .      .
back
back
back
```

Example:

Display parameters associated with all objects configured on ip/192.168.125.34/255.255.255.224.

```
box# show config ip/192.168.125.34/255.255.255.224 -r -v
ip address 192.168.125.34 mask 255.255.255.224
    state enabled
    assocaddr 0.0.0.0
    cost 1
        .      .      .
        .      .      .
        .      .      .
    arp
        state enabled
    back
    rip
        state enabled
        supply enabled
            .      .      .
            .      .      .
            .      .      .
    back
back
```

Displaying Configuration Choices

From your current location in BCC configuration mode, you can display the following information on objects, parameters, and parameter values available for you to configure on a Nortel Networks device.

Command	Task
?	Display objects (subcontexts) available for you to configure on the current object.
	Display the names of parameters of the current object.
<parameter_name> ? or: <adjacent_object_name> <parameter_name> ?	Display the current, legal, and default values for any parameter of the current object, or for any parameter of an object at the next (adjacent) subcontext level in the device configuration tree.

(continued)

Command	Task
help tree	Display the objects available at every level on the current branch, starting from your current location.
help tree -all	Display the entire tree of objects available for you to configure on this device.

Displaying the Total Device Configuration Tree (All Available Choices)

To display, from any BCC prompt, every object you can choose to add to the current device configuration, use the **help tree -all** command.

Example (BCN router):

```

box# help tree -all
The entire configuration tree is:
  board
  virtual
    ip
      ospf
      neighbor
  ftp
  http
  ntp
  peer
  snmp
    community
    manager
    trap-entity
    trap-event
  tftp
  console
  telnet
    client
    server
  atm
    atm-interface
    signaling
    timers
    signaling-vc
    ilmi
    ilmi-vc
    sscop
  . . .

```

Displaying Choices Available from the Current Context


To list the names of all objects and parameters you can access from the current context in configuration mode, enter the **?** command.

Example:

```
ip/192.168.125.34/255.255.255.224# ?
Sub-Contexts:
  arp      igmp      ospf      rdisc      rip

Parameters in Current Context:
  address          cost          on
  address-resolution  end-station-support  proxy
  all-subnet-broadcast  has          redirects
  assocaddr        host-cache-aging    state
  broadcast        mask          udp-checksum
  cache-size       mask-reply
  configured-mac-address  mtu-discovery
```

The subcontexts section lists the objects that you can add from your current location in the device configuration tree ([Figure 2-4](#)).

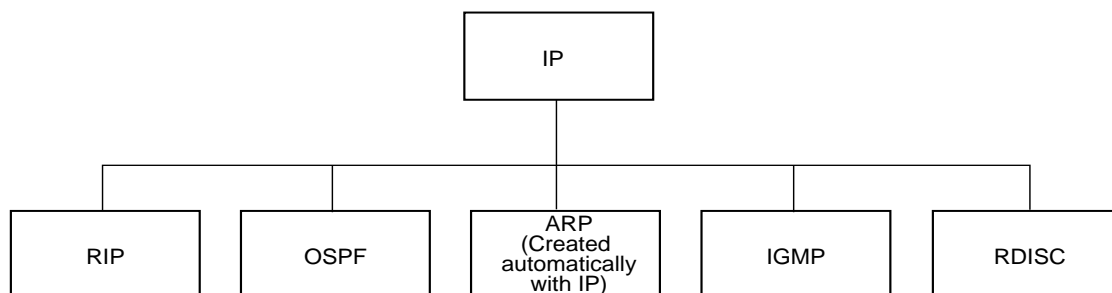

BCC0019A

Figure 2-4. Objects You Can Configure at the Next (Subcontext) Level

Displaying Choices Available at All Subcontext Levels

To list the objects you can access and add to the device configuration from your current location in BCC configuration mode, enter the **help tree** command. This is an easy way to see the navigational path you must follow to configure an object several levels away from your current location.

Example:

```
ethernet/2/1# help tree
```

The configuration tree below this context is:

```
ip
  arp
  rip
  ospf
    neighbor
  rdisc
  igmp
  relay
ipx
  rip
  sap
  static-route
  adjacent-host
  static-service
  route-filter
  server-network-filter
  server-name-filter
auto-neg
```

Entering the **help tree** command at root level (box or stack) is the same as entering the **help tree -all** command from any configuration context.

Displaying Parameter Definitions

To display configuration syntax (usage) help and parameter definitions for any object within the device configuration tree, enter the following command:

```
help <object_name>
```

object_name is the BCC designation for any object (interface, protocol, or other configurable item) that you can configure using the BCC interface.

Example:

```
ethernet/2/1# help ethernet
```

```
Usage: "ethernet slot <value> connector <value>"
```

```
Or:    "ethernet <slot>/<connector>"
```

ethernet Parameters:

```
state
    Indicates the administrative state of this object (enabled
    or disabled).

bofl
    Allows breath-of-life polls to be disabled.

bofl-retries
    Specifies the BOFL Retry Count.

. . .
```

If the *object_name* is unique among all object names in the BCC configuration tree, the BCC displays the parameter definitions you requested. If the *object_name* is not unique among all object names (the same name exists in multiple locations in the BCC configuration tree), the BCC returns a list of the all **help** commands that lead to an object that contains the *object_name* you specified.

For example, you may want to see the definitions for all parameters of “ip,” but IP has a global component and can exist in any interface context, as well. The name “ip” also exists in “ipx,” which causes the BCC to list the help commands for every ip and ipx object.

This happens when you enter **help ip**:

```
ethernet/13/1# help ip
"help ip" is ambiguous.  Copy and re-enter one of the following
commands:
help atm classical-ip-service ip
help atm lec-service ip
help atm lec-service ipx
help atm pvc-service ip
help atm pvc-service ipx
help box ip
help box ipx
help demand-pool demand-circuit frame-relay default-service ip
help demand-pool demand-circuit frame-relay default-service ipx
      .           .           .
      .           .           .
      .           .           .
help serial ppp ipx
help serial ppp ipxwan
help serial standard ip
help serial standard ipx
help token-ring ip
help token-ring ipx
help virtual ip
```

Notice that the response starts with “Copy and re-enter one of the following commands.” For example, if you copy and re-enter the explicit command **help ethernet ip**, the BCC immediately displays usage help and parameter definitions for that particular “ip.”

```
ethernet/13/1# help ethernet ip
Usage: "ip address <value> mask <value>"
Or:    "ip <address>/<mask>"
```

ip Parameters:

state

Indicates the administrative state of this object (enabled or disabled).

address

-REQUIRED- Specifies the IP address of this interface.

address-resolution

Specifies the address resolution type.

. . .

If you want to display the definition for a *specific parameter of the current object only*, enter **help** *<parameter_name>*. (By default, the BCC displays the entire list of parameter definitions for the current object.)

Saving Displayed Configuration Data

For more information on using the **show config -file** command to save configuration data to a file, see “[Saving Configuration Commands to a File on a Device](#)” on [page 3-14](#).

Displaying Help on System Commands

[Table 2-1](#) lists the commands that explain how to use BCC system commands.

Table 2-1. Help for BCC System Commands

Command	Help Feature
help	Get an overview of Help-oriented command features.
help <i><command></i>	Get full details on a specific command.
help commands	Display the syntax of all BCC commands in alphabetical order.
help commands -more	Display the syntax and brief command descriptions for all BCC commands in alphabetical order.
help editing	Get Help on how to edit BCC commands and command lines.
help learning-bcc	Get Help on performing common BCC operations. This command provides a short tutorial on how to use the BCC interface.
help syntax	Get Help on how to interpret symbols used to describe BCC command syntax.

Displaying Help on show Commands

BCC **show** commands use the following syntax:

```
show <object_name> <keyword> . . . [ <keyword> ] - [ <filter> [ <filter_argument> ] ] . . .
- [ <filter> [ <filter_argument> ] ]
```

object_name is the name of a configured object, such as **ip**, **ethernet**, or **dns**. The only exception to this rule is **show config**, described in [“Displaying Configuration Data”](#) on [page 2-9](#).

keyword is a subcommand that further specifies what aspect of *object_name* you want to see, such as **show ip routes**. Many **show** commands have multiple keyword levels, such as **show frame-relay stats lapf errors**.

-filter is a command option that limits **show** command output to a specific subset or filtered view of the total information available. You must enter the dash character (-) and the *filter* explicitly, with no space between the two, for example, **show frame-relay stats lapf errors -interface**. You can often combine filters in a single command, such as **show atm interfaces -disabled -slot 9**.

filter_argument refers to the *filter* preceding it in the command line. The *filter_argument* further restricts the filtered output from a **show** command, such as **show frame-relay stats lapf errors -interface <interface_address>**.

To display any available **show** command *object_name*, *keyword*, *filter*, or *filter_argument*, use the **?** command, as follows:

- To display a list of every *object_name* available for the BCC **show** command, enter **show ?**

Example:

```
bcc> show ?
```

access	dsucsu	hifn	mctle1	sonet
atm	dsx3	hssi	modem	syslog
bgp	dvmrp	http	mtm	system
bri	ethernet	hwcomp	ntp	tcp
classical-ip	fddi	igmp	ospf	telnet
config	frame-relay	ip	ppp	tftp
console	ftle1	ipx	process	token-ring
dial	ftp	isdn-switch	serial	wcp
dns	hardware	lane	snmp	

- To display every *keyword* available for a specific *object_name*, enter **show <object_name> ?**

Example:

```
bcc> show frame-relay ?
      congestion      services      stats      svcs
      multiline      shaping      summary      vcs
```

For show commands that have additional keyword levels:

```
bcc> show ip stats ?
      cache      fragments      security
      datagrams      interface      summary
```

- To display every *-filter* and *filter_argument* available for a specific **show** command, insert the **?** where filters and their arguments would appear after any keywords in the command line.

Example:

```
bcc> show frame-relay congestion ?
show frame-relay congestion [-state <arg>][-interface <arg>]
[-service <arg>] [-dlci <arg>]
```

Usage Notes:

- Use the **show** command to display routing, configuration, interface, and statistical data from the Management Information Base (MIB). The type and amount of data displayed depends on the specific protocol, network service, and/or filtered view you want to see.
- Use lowercase for all show commands.
- *pattern* means that you can use wildcard searching with the ***** and **?** characters. Use ***** to find a string of any characters of any length. Use **?** to designate any character in a specific position of the search string. For example, to locate all networks whose addresses begin with 29, enter the following command:

string 29*

This pattern will locate the addresses 2901456 and 2967. Or if you have a set of names that begin and end with the same characters but have different characters in the middle, such as xxx1.yy, xxx2.yy, and so on, you can enter the search pattern xxx?.yy to locate them.

Chapter 3

Entering Commands and Using Command Files

This chapter provides information about the following topics:

Topic	Page
Entering Commands	3-2
System Commands	3-6
Configuration Command Syntax	3-6
Creating and Using BCC Files	3-13

Entering Commands

This section contains information about:

- [Using Command Abbreviations](#)
- [Recalling Commands](#)
- [Using Command Completion](#)
- [Editing Command Lines](#)
- [Entering Multiple Commands on a Line](#)
- [Continuing a Command Line](#)

Using Command Abbreviations

When you enter BCC commands in configuration mode, you can shorten object and parameter names (for example, *eth* = *ethernet*). You must enter a sufficient number of characters for the BCC to recognize that name uniquely.

Example:

```
box#  eth 5/1
ethernet/5/1#  back
box#  tf
tftp#
```

You can abbreviate system commands; for example, the BCC recognizes **sh** as **show** in contexts where there are no other commands, configurable objects, or parameter names that also start with **sh**.

Recalling Commands

The BCC supports a configurable command history buffer, from which you can recall commands recently entered. The command history buffer contains up to 20 commands by default. You can increase the number of commands in the history buffer to a maximum of 40 by setting new values for the history parameter of the console and telnet objects.

Example:

```
box# telnet
telnet# server
server# history 30
server# history
      history 30
server# box
box# console portnum 1
console/1# history 30
console/1#
```

Recall commands from the history buffer as follows:

- To recall the previous command, press the up arrow key, or press [Control]+p.
- To recall the next command, press the down arrow key, or press [Control]+n.

Using Command Completion

You can enter the first few letters of any command and press [Tab] to complete your partial entry. The BCC automatically completes the string for any command for which it finds a unique match in the current context. If you want to complete the string *and* execute it, press [Enter] instead of [Tab]. If the BCC cannot complete the string based on your partial entry, your available choices or an error message displays. You can also use this feature to simplify entering object names/IDs and parameter names/values.

Editing Command Lines

[Table 3-1](#) describes the keystrokes you can use to edit BCC command lines.

Table 3-1. Keystrokes for Editing BCC Command Lines

Editing Function	Keystrokes
Move the cursor left	[Control] + b or left arrow key
Move the cursor right	[Control] + f or right arrow key
Delete the current line	[Control] + u
Delete the word at the cursor location	[Control] + w

(continued)

Table 3-1. Keystrokes for Editing BCC Command Lines *(continued)*

Editing Function	Keystrokes
Delete the character at the cursor location	[Control] + d
Move the cursor to the beginning of the line	[Control] + a
Move the cursor to the end of the line	[Control] + e
Toggle insert mode	[Control] + o
Delete previous character	[BKSP] or [DEL], or [Control] + h
Interrupt	[Control] + c
Start echo to the screen	[Control] + q
Stop echo to the screen	[Control] + s
Recall previous command	[Control] + p or up arrow key
Recall next command	[Control] + n or down arrow key

For example, use the up arrow key (or [Control] + p) to retrieve your last input, then use other control-key combinations to edit the command line as needed.

Entering Multiple Commands on a Line

To enter multiple commands on the same line, type a semicolon (;) wherever you would press [Return] to terminate a command.

Example:

Configure ethernet/2/1 from root, then configure ip/1.2.3.4/255.0.0.0 on ethernet/2/1 and RIP on ip/1.2.3.4/255.0.0.0.

```
box# ethernet/2/1;ip 1.2.3.4/255.0.0.0;rip  
rip/1.2.3.4#
```


Continuing a Command Line

You can continue a command line by entering a backslash (\) at the end of the current text line. The BCC treats characters on the next physical line as part of the same BCC logical command line.

You must immediately follow the backslash (\) with a newline (Return) character. The BCC treats these two characters and any trailing spaces as if they were exactly one space. Until you press [Return] without a preceding backslash (\), the BCC replaces the pound symbol (#) in the context-sensitive prompt with an underscore (_).

Example:

```
ip/1.2.3.4/255.0.0.0# cost 2 \
ip/1.2.3.4/255.0.0.0_ mask-reply on \
ip/1.2.3.4/255.0.0.0_ proxy on \
ip/1.2.3.4/255.0.0.0_ aging cache-on
ip/1.2.3.4/255.0.0.0#
```

Some command symbols normally used in pairs to denote the beginning and the end of a set of data also produce the continuation (underscore) prompt, including braces ({ }), brackets ([]), and quotation marks (“ ”).

Example:

```
box# { ...
box_ ...}
box#
```



Note: If you inadvertently type one of the opening symbols and see an underscore (_) prompt, just type the corresponding closing symbol to restore the normal (#) prompt in BCC configuration mode.

System Commands

The BCC supports all system commands described in [Appendix B](#). For help on a specific command, enter the following command:

help <command>

Example:

help pwc

Configuration Command Syntax

This section describes BCC configuration commands and the syntax requirements for those commands. This section also describes how to enter BCC configuration commands using the following formats:

- Basic (full) syntax
- Default syntax
- Abbreviated syntax



Caution: Configuration commands make real-time changes to the device configuration.

Command Syntax Requirements

BCC syntax consists of object names, parameter names and values, and various types of punctuation:

- All object and parameter names appear as one word (hyphenated where necessary) in the BCC command line.
- Parameters have either a single value or multiple values enclosed in braces {x y z} in the command line. You can accept the default value or supply a value for each parameter associated with a configurable object.
- Parameters and their values must appear as a pair in the same command line.

- Syntax for specifying the object you want to configure may vary according to the Nortel Networks device to which you are connected. [Appendix E, “Syntax for Module Location,”](#) lists the BCC syntax for specifying the physical location of a module in each Nortel Networks device.
- If you enter the name of an object without values for its required parameters, or with values inappropriate for its required parameters, the BCC returns usage help, as shown in the following example:

```
box# ethernet
Required parameter "slot" was not specified for ethernet.
Usage: "ethernet slot <value> connector <value>"
Or:    "ethernet <slot>/<connector>
```

Using Basic (Full) Syntax

The basic, or full, syntax for BCC commands consists of the following required and optional elements:

```
{ <object_name>} {<required_parameter> <value> ...} ...
<parameter> <value> ... <parameter> <value>
```

The BCC requires input for any elements enclosed by braces ({ }).

object_name is the name of an object you want to configure (for example, **ip**).

The BCC assumes that an object you specify is new (and will create it) if it is not in the current configuration. If an object you specify already exists in the current configuration, the BCC assumes that you want to modify that object.

required_parameter and *value* are required to add a new object, or to navigate to an existing object, in the device configuration. Any object may have one or more required parameters.

For example, to add an Ethernet interface to an AN/ANH, ARN, or BN router, enter at root (box#) level this command sequence:

```
ethernet slot <slot_no.> connector <connector_no.>
```

To add an Ethernet interface to an ASN or System 5000 router, enter:

```
ethernet slot <slot_no.> module <module_no.> connector <connector_no.>
```



Note: You cannot change the value of a parameter used by the BCC to create an instance identifier. For example, you cannot modify the address value assigned to an IP interface. To change the value of any required parameter, you must delete the associated object, and then add it back into the device configuration with new required values.

To navigate to an existing (previously configured) Ethernet interface, enter the appropriate command.

ethernet/*<slot>/<connector>* (*AN/ANH, ARN, BN*)

ethernet/*<slot>/<module>/<connector>* (*ASN, System 5000*)

parameter and *value* is the format for customizing the value of any parameter of the current object, or of an object you are adding to the device configuration. For more information on how to specify parameter values, see [“Specifying Parameter Values”](#) on [page 3-9](#).

Using Default Syntax

Using default syntax, you do not need to enter the name of a required parameter; you enter only its value at the proper location in the command line.

For example, this is the default syntax for configuring an Ethernet interface on an AN/ANH, ARN, BN, or Passport 2430 router.

ethernet *<slot>/<connector>*

The following commands are equivalent.

Using full syntax:

```
box# ethernet slot 2 connector 1  
ethernet/2/1#
```

Using default syntax:

```
box# ethernet 2/1  
ethernet/2/1#
```

Using Abbreviated Syntax

You can abbreviate BCC configuration commands as follows:

Example:

```
box# eth 2/1
```

This command is the same as the following commands:

```
box# ethernet slot 2 connector 1
```

```
box# ethernet 2/1
```

If you press [Return] before entering enough characters for the BCC to recognize the name of the object or parameter you want to configure, the BCC returns an error message.

Example:

```
box# e
```

```
ambiguous command name "e": enable eof error ethernet eval exit  
expr
```

The BCC returns a list of all the commands available in the current context that start with the letter *e*. Choose one command from the list, and enter enough characters for the BCC to recognize that command when you press [Return].

You cannot abbreviate BCC instance identifiers.

Specifying Parameter Values

You must specify each parameter value in the form of a parameter-value pair. Each pair is a command argument pertaining to the object named first in the command line.

For example, the following command changes the Breath of Life (BofL) timeout interval to 4 seconds on ethernet/1/1:

```
box# ethernet/1/1 bofl-timeout 4
```

bofl-timeout 4 is the parameter-value pair.

Required, Derived, and Other Parameters

The BCC indicates when parameter values are required (you must supply a value) or derived (the BCC supplies a value). For all other parameters, the BCC supplies a default value that you can change.

Specifying Multiple Parameter-Value Pairs

You can specify parameter values as follows:

- Enter an object name and one parameter-value pair per command line.
- Enter an object name and multiple parameter-value pairs (each pair separated by a space) on the same command line.

Example:

In the following example, you specify one parameter-value pair on each command line.

```
box# ethernet 2/1
ethernet 2/1# bofl-retries 6
ethernet 2/1# bofl-timeout 7
ethernet 2/1# hardware-filter enabled
ethernet 2/1#
```

Example:

In the following example, you specify multiple parameter-value pairs on each command line.

```
ethernet 2/1# ip address 1.2.3.4 mask 255.255.255.0 redirects off
ip.1.2.3.4/255.255.255.0# ospf area 2.3.4.54 hello-interval 5
ospf/1.2.3.4#
```

Specifying Multiple Values for One Parameter

Some BCC configuration parameters accept multiple values simultaneously. For example, the Syslog service has a *severity-mask* parameter that accepts any of the values -- **fault**, **warning**, **info**, **trace**, and **debug** -- as follows:

severity-mask {fault warning info trace debug}

or

severity-mask "fault warning info trace debug"

Notice that you must enter these values within braces or quotes, and with a space character after each value except the last. The BCC uses the space character as a delimiter separating each of the values.

Parameters of this data type also typically accept the values **none** or **all**, but you can enter these without braces. For example:

```
severity-mask all
severity-mask none
```

Parameter Range Validation

For any parameter that takes a numeric value (integer) within a range of values, the BCC automatically checks to see whether the value you entered exists within the legal range.

For example, if you look at the legal range for the **mtu** parameter of a classical-ip-service configured on an ATM interface, you see:

```
classical-ip-service/dallas# mtu ?
Current value: 4608
Legal values: Range(0-9188)
Default value: 4608
```

If you try to enter a value outside of the legal value range for the **mtu** parameter, the BCC displays an error message to notify you of the problem:

```
classical-ip-service/dallas# mtu 12000
For data type 'int':
Bad input value: value '12000' out of range
Legal values: RANGE(0-9188)
```

Specifying Name or String Values

Many BCC configuration parameters accept an alphanumeric string value. Typically, these are name parameters with values that do not include space characters.

Examples:

```
polname abc123
polname abc-123
polname ABC-123
```

To enter an alphanumeric string that includes spaces, enclose the entire value within braces or quotes. For example:

polname {Abc 123}

or

polname "Abc 123"

For parameters of this data type, the BCC treats any space characters between the braces as part of the alphanumeric string.

Disabling, Reenabling, and Deleting a Configured Object

Use the commands in [Table 3-2](#) to disable, reenable, and delete any object in the current configuration context, or the immediate/adjacent subcontext.

Table 3-2. BCC Commands for Disabling, Reenabling, and Deleting

Enter	To Perform the Following Function
disable	Change the state of a configured object to disabled: ip/1.2.3.4/255.0.0.0# disable You can alternatively assign the value "disabled" to the state parameter: ip/1.2.3.4/255.0.0.0# state disabled
enable	Change the state of a configured object to enabled: ip/1.2.3.4/255.0.0.0# enable You can alternatively assign the value "enabled" to the state parameter: ip/1.2.3.4/255.0.0.0# state enabled
delete	Delete the object identified in the BCC context-sensitive prompt. Example: ip/1.2.3.4/255.0.0.0# delete Caution: Deleting an object at one level of the configuration tree deletes all of its dependent objects (branches stemming from that location).

To disable, reenable, or delete an object in the immediate subcontext, relative to your current location in the device configuration, enter one of the following commands:

disable <BCC_instance_id>

enable <BCC_instance_id>

delete <BCC_instance_id>

Examples:

```
ethernet/2/1# disable ip/1.2.3.4/255.0.0.0
```

```
ethernet/2/1# enable ip/1.2.3.4/255.0.0.0
```

```
ip/1.2.3.4/255.0.0.0# delete rip/1.2.3.4
```

Creating and Using BCC Files

You can save BCC configuration commands to an ASCII file, edit the file, add comments, and then use the **source** command in configuration mode to read the file (merge the new configuration data) into the device's active configuration.

You can also save TCL scripting commands to a file, use the **source** command to read the file into device memory, and then run the script by entering an associated command name. For information on TCL scripting commands supported by the BCC interface, see [Appendix C, "TCL Support."](#)

Saving Commands and Displays to a File on a Workstation

If you log in to a Nortel Networks router from a PC or workstation using Telnet or terminal emulation, you can use the native capabilities of the PC or workstation to:

- Save the output of any **show config** command to an ASCII file.
- Save the output of any **help tree** command for later reference or printing.
- Save a sequence of manually entered BCC commands to an ASCII file.
- Save log displays to an ASCII file for later analysis.

You can also use an ASCII text editor on a PC or workstation to create a file containing BCC commands, offline. You can later download the same file to a Nortel Networks device, and then use the BCC **source** command to import the contents of that file into the active device configuration.



Note: You can also save the output of the **show config** command to an ASCII text file on the router by entering:

```
show config -all -file <volume>:<filename>
```

Saving Configuration Commands to a File on a Device

You can save the output of any **show config** command to a file on a Nortel Networks device. Output you save to a file using the **show config -file** command does not also appear on the console device.

You can later use the BCC **source** command to import (merge) configuration data from a file into the active device configuration.

You cannot import commands saved to a file from output of any **show config** command containing the **-compact** option. (The **-compact** option eliminates **back** commands necessary for navigation in BCC configuration mode.)

Examples:

show config -file

show config -all -file

show config -verbose -file

show config -recursive -file

show config -compact -file

show config -all -verbose -file

show config -all -verbose -compact -file

Adding Comments to a Command File

You can use a text editor (such as *vi* on a UNIX workstation) to add descriptive comments to a BCC command file. Enter comments in the following format:

<command> ;# <comment>

or

#<comment>

<command>

Example:

box# **board slot 1 type ansed;# 192.168.47.129 192.168.47.21**

When you finish editing the file, save it on your workstation or PC. The comments are for reference only. Comments do not appear in the output of any **show config** command.

Importing Configuration Commands from a File

When you are logged in to the BCC as Manager, you can use the **source** command in configuration mode to read BCC configuration and navigation commands from a designated ASCII source file into the active device configuration.



Caution: The **source** command makes immediate changes to the active device configuration.

The **source** command *merges* new configuration data from a file with existing data in device memory. If the file you specify contains configuration commands pertaining to objects already defined on the device, those commands overwrite the current configuration.



Note: If the BCC detects an error in the source file, it stops reading commands into the device configuration. The BCC imports commands from the file -- up to, but not including -- the command line where the error occurred.

This is the syntax for the **source** command.

source <volume>:<filename>

Example:

source 2:bn.cfg

Saving the Active Configuration as a Bootable File

When you finish using BCC commands to modify an existing configuration, save the new configuration to a file on an NVFS (flash) volume. (At boot time, the router loses any configuration changes not previously saved to an NVFS volume.) To save *config* as a bootable binary file on a volume you specify, enter the following command:

save config *<volume>:<filename>*

Chapter 4

Tutorial: Configuring a Nortel Networks Router

This chapter provides a tutorial that guides you through the initial configuration of a Nortel Networks router using the BCC. It includes the following sections:

Topic	Page
Creating and Modifying a Device Configuration	4-2
Sample Router Configuration	4-2
Disabling a Configured Object	4-15
Enabling a Configured Object	4-16
Deleting a Configured Object	4-17

Creating and Modifying a Device Configuration

You configure a Nortel Networks device by defining a set of objects, starting at the root level of the device's configuration hierarchy. Each object has a set of parameters with values set either by you or by the device software.

This is a typical BCC configuration sequence:

1. Open a Technician Interface session and start the BCC interface.
2. Start BCC configuration mode.
3. Use BCC configuration commands to create new objects in the device configuration and modify default values for parameters of each object to meet the requirements of your network.
4. Enable any global protocols not enabled automatically by the BCC, for example, TFTP and Telnet Server.
5. Use the **save** command to save your configuration as a bootable (binary) file on the device.
6. Exit BCC configuration mode, exit the BCC to the Technician Interface, and log out of the device.

You may find it helpful to first diagram what you want to configure in terms of the BCC configuration tree or hierarchy for the device. Refer to the following sample router configuration.

Sample Router Configuration

The following example shows a sequence of commands you can use to configure a BCN router on a network. You first complete the physical installation of the router, then boot the router using the image (*bn.exe*) and the minimum configuration file (*ti.cfg*).

This example creates the following objects in the total router configuration ([Figure 4-1](#)):

- IP (global)
 - ARP (global) on IP
 - RIP (global) on IP

- SNMP (global)
 - Community “public” on SNMP
 - Manager (address 0.0.0.0) on community “public”
- FTP (global)
- TFTP (global)
- Telnet (global)
 - Server (global) on Telnet
- Quad Ethernet interface in slot 13
 - IP interface (address 192.168.133.114) on Ethernet connector 1
 - ARP on IP interface 192.168.133.114
 - RIP on IP interface 192.168.133.114
- Serial interface in slot 5
- Dual token ring interface in slot 9
- FDDI interface in slot 11


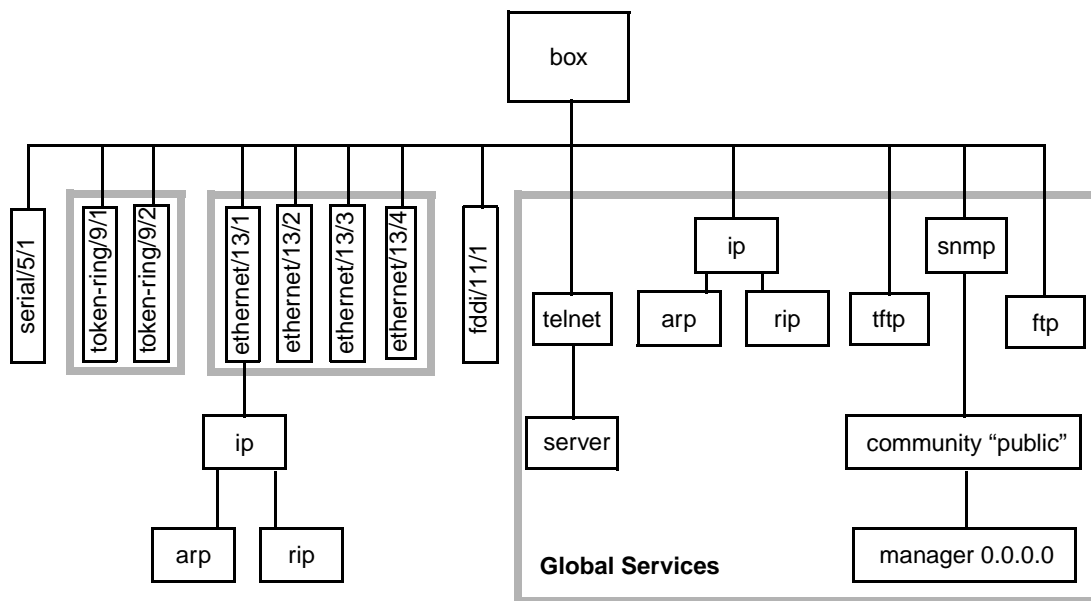


Figure 4-1. Sample BCC Configuration (BCN Router)

After you create a diagram of the device configuration tree, configure the device using a cycle of BCC configuration commands similar to those shown in [Figure 4-2](#).

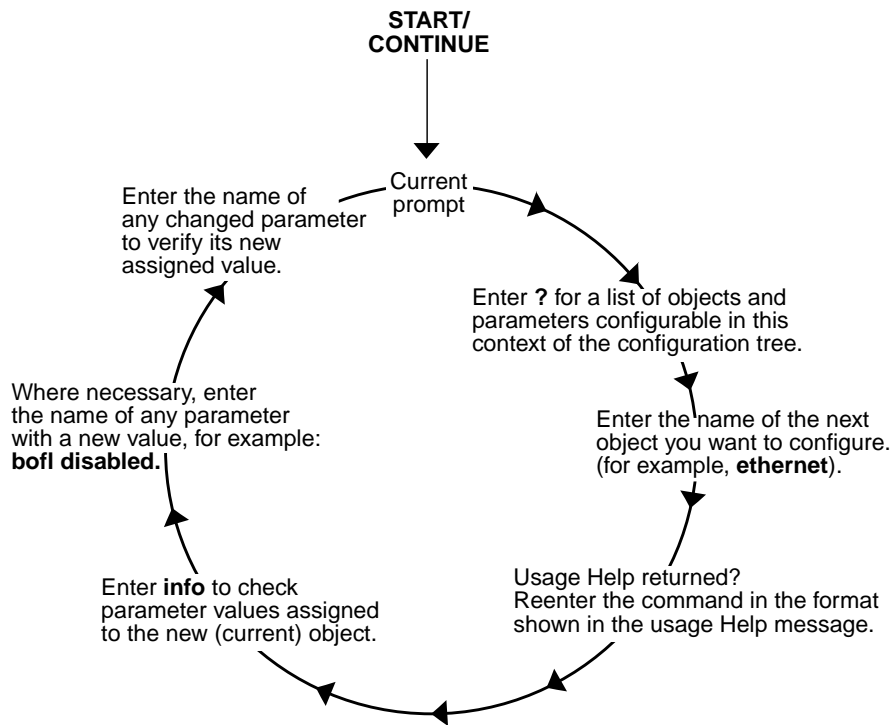

BCC0013B

Figure 4-2. Typical BCC Configuration Cycle

To create the sample configuration shown in [Figure 4-1](#) using BCC commands:

1. Log on to the router as Manager, so that you can modify the device configuration.

Nortel Networks, Inc. and its Licensors.
Copyright 1992, 1993, 1994, 1995, 1996, 1997, 1998. All rights reserved.

```
Login: Manager
Mounting new volume...
Device label:
Directory: 2:
New Present Working Directory: 2:

Welcome to the Backbone Technician Interface

Router1>
```

2. Start the BCC by entering bcc at the Technician Interface prompt.

```
Router1> bcc

Welcome to Bay Command Console!

* To enter configuration mode, type config
* To list all system commands, type ?
* To exit the BCC, type exit

bcc>
```

3. Enter BCC configuration mode by entering config.

```
bcc> config
box#
```

4. Check the hardware configuration of the router.

box# **show config -all**

```
box type frecn (BCN router with a FRE-2 controller)
  board slot 5
    type sync (Serial link module in slot 5)
  back
  board slot 7
    type srml (System resource module in slot 7)
  back
  board slot 9
    type dtok (Dual token ring link module in slot 9)
  back
  board slot 11
    type wffddi2m (Multimode FDDI link module in slot 11)
  back
  board slot 13
    type qenf (Quad Ethernet with filters in slot 13)
  back
  console portnum 1 (console device on port 1)
    prompt {"%slot%:"}
    auto-manager-script automgr.bat
    auto-user-script autouser.bat
  back
back
box#
```

Notice how the output of the **show config** command automatically includes navigation (**back**) commands. If you save this output to a file, you can reenter the commands automatically using the BCC **source** command. (See [“Importing Configuration Commands from a File”](#) on [page 3-15](#).)

For descriptions of the values of the board type parameter, see the *Release Notes*.

5. Choose a port (interface type, slot, and connector) for the initial IP interface to the router.

```
box# ethernet slot 13 connector 1
ethernet/13/1#
```

6. Check to see what you can configure (subcontexts and parameters) at this level.

```
ethernet/13/1# ?
```

```
Sub-Contexts:
```

```
    auto-neg          ip          ipx
```

```
Parameters in Current Context:
```

```
    bofl              circuit-name      receive-queue-length
    bofl-retries      connector         slot
    bofl-timeout      hardware-filter   state
    bofl-tmo-divisor  on
transmit-queue-length
```

```
System Commands:
```

```
To list all system commands, type "help commands".
```

```
For detailed help on a specific command, type "help <command>".
```

```
ethernet/13/1#
```

Based on the subcontexts list, you can add **autoneg** (Ethernet speed autonegotiation), **ip** (interface IP), or **ipx** (interface IPX) to this Ethernet port. The list of configurable objects depends on the *board* type described in the current prompt. For example, 100BASE-T modules additionally allow you to configure an “autoneg” (autonegotiation) object at this level.

You can also modify the values currently assigned to the parameters in current context list (parameters of ethernet/13/1).



Note: For the BCC to display the list of system commands in response to **help commands**, you must have:

- Installed a copy of *bcc.help* on a memory card in the device.
- Configured the location of the help file (usually **2:bcc.help**) by assigning that value to the *help-file-name* parameter of the root-level (box or stack) object.

7. Add IP (address 192.168.133.114) to ethernet/13/1.

```
ethernet/13/1# ip 192.168.133.114
Usage: "ip address <value> mask <value>"
Or:    "ip <address>/<mask>"
Required parameter "mask" was not specified for ip.
```

The error message appears because the BCC requires you to enter a mask value whenever you create an IP interface. Because the first octet of the address is 192 (0xC0), this is a Class C address, requiring the first 3 octets to be the network portion of the interface address. You can express the corresponding mask value as either 255.255.255.0 (using dotted-decimal notation) or 24 (the number of bits making up the network portion of the IP interface address), as follows:

```
ethernet/13/1# ip 192.168.133.114/24
ip/192.168.133.114/255.255.255.0#
```

The BCC converts the integer representing the number of mask bits into a dotted-decimal mask value, as shown in the last prompt.

8. Check the values currently assigned to parameters of IP on this interface.

```
ip/192.168.133.114/255.255.255.0# info
address 192.168.133.114
address-resolution arp
all-subnet-broadcast off
assocaddr 0.0.0.0
broadcast 0.0.0.0
cache-size 128
configured-mac-address 0x
cost 1
end-station-support off
host-cache-aging cache-off
mask 255.255.255.0
mask-reply off
mtu-discovery off
proxy off
redirects on
state enabled
udp-checksum on
```

9. Change the subnet mask to 255.255.255.224.

```
ip/192.168.133.114/255.255.255.0# mask 255.255.255.224
"mask" parameter may not be modified
ip/192.168.133.114/255.255.255.0#
```

You cannot modify any parameter values included in the BCC instance ID of a configured object, in this case, ip/192.168.133.114/255.255.255.0. To change the value of any parameter that is part of a BCC instance ID, you must first delete the object, then re-create it with the desired parameter values. In this case, you must delete the IP interface and then re-create it on ethernet/13/1, using the mask value of 255.255.255.224, as follows:

```
ip/192.168.133.114/255.255.255.0# delete
ethernet/13/1# ip 192.168.133.114/255.255.255.224
ip/192.168.133.114/255.255.255.224#
```

10. Check to see what you can configure at this level.

```
ip/192.168.133.114/255.255.255.224# ?
Sub-Contexts:
  arp      dvmrp    igmp      ospf      rdisc     rip
```

Parameters in Current Context:

address	configured-mac-address	mtu-discovery
address-resolution	cost	on
all-subnet-broadcast	end-station-support	proxy
assocaddr	host-cache-aging	redirects
broadcast	mask	state
cache-size	mask-reply	udp-checksum

System Commands:

To list all system commands, type "help commands".
For detailed help on a specific command, type "help <command>".

You can modify values currently assigned to parameters of ip/192.168.133.114/255.255.255.224, or you can add ARP, DVMRP, IGMP, OSPF, Router Discovery, or RIP to this interface.

11. Add RIP as the routing protocol (by default, RIP1) on this interface.

```
ip/192.168.133.114/255.255.255.224# rip
rip/192.168.133.114#
```

12. Return to root (box) level to configure global system services.

```
rip/192.168.133.114# box
box#
```

13. Check which global services and interfaces you can configure at this level.

```
box# ?
Sub-Contexts:
  access      dns      ip      serial      tunnels
  atm         ethernet  ipx     snmp        virtual
  backup-pool fddi     isdn-switch syslog      wcp
  board       ftp      mcel    telnet
  console     hssi    mctl    tftp
  demand-pool http     ntp     token-ring

Parameters in Current Context:
  build-date  description  mib-counters  type
  build-version  help-file-name  on  uptime
  contact      location      system-name
```

System Commands:

```
To list all system commands, type "help commands".
For detailed help on a specific command, type "help <command>".
```

You can add any of the following global services (affecting all slots) listed under Sub-Contexts: access, backup-pool, demand-pool, dns, ftp, http, ip, ipx, ntp, snmp, syslog, telnet, tftp, and wcp.

You can add any of the following interfaces: atm, ethernet, fddi, hssi, serial, token-ring, or virtual.

You can view but not modify the parameters of any board object.

14. List the objects already configured at box level.

```
box# lso
board/11      board/5      board/9      ethernet/13/1
board/13      board/7      console/1    ip
box#
```

When you added the first instance of IP to the box (ip/192.168.133.114/255.255.255.224), the BCC automatically created the global IP object at box level.

15. Add SNMP to the device.

```
box# snmp
snmp#
```

16. Check what you can configure next at this level.

```
box# snmp
snmp# ?
Sub-Contexts:
  community          trap-entity      trap-event

Parameters in Current Context:
  authentication-traps  lock-timeout          state
  lock                 on                type-of-service
  lock-address         scope-delimiter

System Commands:
  To list all system commands, type "help commands".
  For detailed help on a specific command, type "help <command>".
```

You can modify values currently assigned to parameters of SNMP, and you can add a community, define a trap entity, or define a trap event.

17. View the parameter definitions using the BCC help command.

```
snmp# help snmp

snmp Parameters:
-----
state
  Indicates the administrative state of this object (enabled or disabled).

authentication-traps
  Sends trap for sets from false Mgr or Community.

lock
  Allows the locking mechanism to be disabled.

lock-address
  Allows the lock address to be cleared.

lock-timeout

. . .
```

18. Define the SNMP community “public.”

```
snmp# community public  
community/public#
```

19. Check the values currently assigned to parameters of this SNMP community.

```
community/public# info  
access read-only  
label public  
on snmp  
scope-type {}
```

20. To allow network management applications (such as Site Manager) to modify the device configuration, change the value of the access parameter to read-write.

```
community/public# access read-write  
community/public#
```

21. Define an SNMP manager for the router.

```
community/public# manager  
Usage: "manager address <value>"  
Or: "manager <address>"  
Required parameter "address" was not specified for manager.
```

The BCC error message indicates what you left out and automatically provides usage help on how to configure an SNMP manager.

22. Try again to add the manager, this time supplying a value for its required parameter, address. (You must enter a value for a required parameter, but you can omit the name of the parameter.)

```
community/public# manager 0.0.0.0  
manager/public/0.0.0.0#
```

23. Enable the Telnet server entity on the router.

```
manager/public/0.0.0.0# telnet  
telnet# server  
server#
```

24. Add TFTP services globally to the router.

```
server# tftp  
tftp#
```

The BCC automatically searches back (toward root) to find the parent context suitable for Telnet and TFTP (in this case, box). The BCC then adds Telnet and TFTP to the device configuration. Notice the new (tftp#) prompt.

25. Check the values currently assigned to parameters of TFTP.

```
tftp# info
  close-timeout 25
  default-volume 2
  on box
  retry-timeout 5
  retry-count 5
  state enabled
```

26. Change the default volume number for TFTP to 5.

```
tftp# def 5
tftp#
```

27. Verify the change to the default volume number.

```
tftp# def
  default-volume 5
```

28. Add FTP globally to the router.

```
tftp# ftp
ftp#
```

The BCC automatically searches back (toward root) to find the parent context suitable for FTP (in this case, box). The BCC then adds FTP to the device configuration. Notice the new prompt (`ftp#`).

29. Check the definitions for parameters of FTP.

```
ftp# help ftp
ftp Parameters:
```

```
on
    Identifies the parent(s) of this object.

state
    Indicates the administrative state of this object (enabled or
    disabled).

default-volume
    Specifies the default volume where transferred files are
    written/retrieved.

.      .      .
.      .      .
.      .      .
```

30. Check values currently assigned to parameters of FTP.

```
ftp# info
  default-volume 2
  idle-timeout 900
  login-retries 3
  max-sessions 3
  on box
  state enabled
  tcp-window-size 60000
```

31. Change the default volume number to 5.

```
ftp# def 5
ftp#
```

32. Verify the change to the default volume number.

```
ftp# def
  default-volume 5
```

33. Recheck the total device configuration.

```
ftp# show config -all
box type frecn
  board slot 5
    type sync
  back
  board slot 7
    type srml
  back
  board slot 9
    type dtok
  back
  board slot 11
    type wffddi2m
  back
  board slot 13
    type qenf
  back
  console portnum 1
    prompt {"%slot%:"}
    auto-manager-script automgr.bat
    auto-user-script autouser.bat
  back
  ethernet slot 13 connector 1
    circuit-name E131
    ip address 192.168.133.114 mask 255.255.255.224

. . . (remaining configuration not shown here)
```

34. Return to root level.

```
ftp# box  
box#
```

35. Save the file using a name other than *config* until you can test the configuration.

```
box# save config startup.cfg
```

36. Test the initial IP interface.

```
box# ping 192.168.133.114  
IP ping: 192.168.133.114 is alive (size = 16 bytes)
```

37. Ensure that the initial IP interface connects to another device on the network.

```
box# ping 192.168.133.97  
IP ping: 192.168.133.97 is alive (size = 16 bytes)
```

38. When you finish configuring the router, exit configuration mode.

```
box# exit  
bcc>
```

39. Exit the BCC, which returns you to the Technician Interface prompt.

```
bcc> exit  
Router1>
```

40. Enter the logout command to close your console or Telnet session with the router.

```
Router1> logout
```

Disabling a Configured Object

In most cases, the BCC automatically enables objects that you add to the device configuration. However, you can disable an object to manage or troubleshoot the device. Here is a BN router example of how to disable an object (rip) on ip/1.2.3.4/255.0.0.0:

1. Specify the configuration context for the object you want to disable.

```
box# ethernet/2/1;ip/1.2.3.4/255.0.0.0;rip  
rip/1.2.3.4#
```

2. Disable RIP.

```
rip/1.2.3.4# disable  
rip/1.2.3.4#
```

3. Verify that you disabled RIP.

```
rip/1.2.3.4# state
state disabled
rip/1.2.3.4#
```

You can also disable an object from its parent context, using the following syntax:

disable <BCC_instance_identifier>

Example:

```
ip/1.2.3.4/255.0.0.0# disable rip/1.2.3.4
ip/1.2.3.4/255.0.0.0#
```

Using this method, you remain in the current context after disabling the branch object.

Enabling a Configured Object

If you disable a configured object, you can use the BCC **enable** command to reenabel that object. Here is a BN router example of how to enable an object (rip) previously disabled on ip/1.2.3.4/255.0.0.0:

1. Specify the configuration context for RIP.

```
box# ethernet/2/1;ip/1.2.3.4/255.0.0.0;rip
rip/1.2.3.4#
```

2. Reenable RIP.

```
rip/1.2.3.4# enable
rip/1.2.3.4#
```

3. Verify that you reenabled RIP.

```
rip/1.2.3.4# state
state enabled
rip/1.2.3.4#
```

You can also enable an object from its parent context, using the following syntax:

enable <BCC_instance_identifier>

Example:

```
ip/1.2.3.4/255.0.0.0# enable rip/1.2.3.4  
ip/1.2.3.4/255.0.0.0#
```

Using this method, you remain in the current context after enabling the branch object.

Deleting a Configured Object

Because of the tree hierarchy, objects on higher branches of the tree depend on the state (and existence) of objects closer to the root of the tree. Deleting an object also deletes anything configured on that object.



Caution: Before using the BCC to delete an interface, make sure that you did not use Site Manager to configure it with a protocol that the BCC does not recognize. If you did, use Site Manager to delete the interface.

Here is a BN router example of how to delete an IP interface from the active device configuration:

1. Navigate to the object you want to delete.

```
box# ethernet/13/1  
ethernet/13/1# ip/192.168.133.114/255.255.255.224  
ip/192.168.133.114/255.255.255.224#
```

2. List all objects configured on the current object.

```
ip/192.168.133.114/255.255.255.224# lso  
arp/192.168.133.114/1    rip/192.168.133.114
```

3. Delete the object.

```
ip/192.168.133.114/255.255.255.224# delete  
ethernet/13/1#
```

4. Verify that you deleted the object.

```
ethernet/13/1# lso  
(no objects listed)
```

Notice that ip/192.168.133.114/255.255.255.224 no longer appears in the list of objects configured on ethernet/13/1. With a single **delete** command, the BCC automatically deleted the branch objects (arp/192.168.133.114/1 and rip/192.168.133.114) configured on ip/192.168.133.114/255.255.255.224.

You can also delete an object by entering the following command from its parent context:

delete <*BCC_instance_identifier*>

Example:

```
ip/1.2.3.4/255.0.0.0# delete rip/1.2.3.4  
ip/1.2.3.4/255.0.0.0#
```

Using this method, you remain in the current context after deleting the branch object.

Appendix A

Multilevel Access

This appendix provides information about the following topics:

Topic	Page
Introduction	A-2
Multilevel Access Login	A-2
How Access Is Granted	A-2
Access Privileges	A-3
Access Security	A-4
Sharing Access Profiles	A-4
Configuring Multilevel Access	A-4
Disabling or Deleting Users and Groups	A-8
BCC Lock Messages	A-9

Introduction

The Technician Interface provides, by default, two user logins: *Manager* and *User*, stored in nonvolatile RAM (NVRAM). The Manager login allows you to enter any system command and allows read-write access to the device configuration. The User login allows you to enter only user-level system commands and allows read-only access to the device configuration.

The multilevel access feature allows you to:

- Define multiple user groups, names, passwords, and privileges for access to the Technician Interface.
- Manage the distribution of user names, passwords, and access privileges.
- Authenticate users by either local (MIB) or remote (RADIUS) mechanisms.
- View event logs showing each BCC command executed and the user name that executed the command.

Multilevel Access Login

To access a Nortel Networks router using this feature, enter your login ID at the **Login** prompt, and enter your password at the **Password** prompt on your Telnet or console display.

Login: *<login_id>*

Password: *<password>*

The Technician Interface prompt appears, enabling you to subsequently enter the **bcc** command to start the BCC interface.

How Access Is Granted

Multilevel access grants access to a device by checking for a recognized name/password pair. The login process proceeds as follows:

- If the user name is Manager or User (the default logins), the name/password pair is checked in NVRAM. If a match is found, access is granted with Manager or User privileges.

- If the user name is not Manager or User, and RADIUS is enabled, the name/password pair is checked on the configured RADIUS server. If a match is found, access is granted at the assigned privilege level. For more detailed information about enabling RADIUS, see *Configuring RADIUS*.
- If the user name is not Manager or User, and RADIUS is not enabled (or no match is found), the name/password pair is checked in the MIB of the device. If a match is found, access is granted at the assigned privilege level.
- If none of these scenarios produces a match to the name/password pair, or if both the Access object and RADIUS are disabled, access is denied and the user is prompted for a new name/password pair.

Access Privileges

A user's privilege level determines the system commands a user can execute. In addition to the existing Manager and User logins, a third level, that of Operator, has been added. A manager privilege level account allows you to enter any system command and allows read-write access to the device configuration. An operator privilege level account allows you to execute most system commands, and allows limited access to the device configuration. A user privilege level account allows user-level system commands and allows read-only access to the device configuration.

If you attempt to execute a command that requires a higher privilege level, an error message results. For example, if a user privilege level account attempts to execute a manager privilege level command, the following error is displayed:

```
[1:1]$ bcc
bcc# config
Insufficient privilege
access#
```

To assign access privileges, assign the user to a group (or create and assign the user to a new group) that has the desired privilege level. For a list of system commands and the privilege level required to execute them, see [Appendix B, “System Commands.”](#)

Access Security

You can view the information for multilevel access configured users (logins, groups, audit-level, and so on) in the device configuration file, except passwords which are encrypted.

There is no way to view passwords in an unencrypted form. A manager privilege level account can change the password of any user, but only if the existing password is known. If you want to change a user's password and do not know the original password, you will have to reconfigure the user's account information and assign a new password.

Sharing Access Profiles

To share user access profiles configured on one router across multiple routers:

1. **Navigate in BCC configuration mode to a multilevel access context that you want to replicate on another router.**
2. **From the desired context, enter the following command:**
show config -recursive -file <filename>
3. **Transfer the file from the local router to a target router.**
4. **Log on to the target router and enter BCC configuration mode.**
5. **Use the BCC source command to import access profiles from the transferred file into the device active configuration.**
6. **Exit, then reenter the BCC on the target router.**
7. **Enter show config -all to see your changes.**

For more information about using the **show config** and **source** commands, see [Chapter 3, “Entering Commands and Using Command Files.”](#)

Configuring Multilevel Access

Multilevel access is configured by default at the root level. Information about the default Manager and User logins is stored in NVRAM. Information about other configured users is stored in the device configuration file or RADIUS server (passwords encrypted). Only one user can make changes to the configuration at a time.

[Figure A-1](#) shows the multilevel access configuration branch.

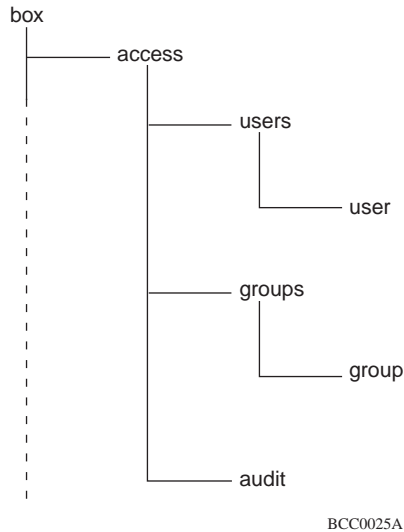


Figure A-1. Configurable Multilevel Access Objects

Configuring Access

The access object lets you set the minimum and maximum character string lengths for user and group names and passwords. You can also enable or disable the configuration of accounts from the access prompt.

To configure access, navigate to the `access` prompt (for example: **box; access**) and enter values (or accept the default values) for the parameters listed in [Table A-1](#).

Table A-1. Access Parameter Options

Parameter	Description	Default	Options
maximum-login-length	Maximum number of characters allowed for a login name	16	1-16
minimum-login-length	Minimum number of characters allowed for a login name	4	1-16

(continued)

Table A-1. Access Parameter Options *(continued)*

Parameter	Description	Default	Options
maximum-group-length	Maximum number of characters allowed for a group name	16	1-16
minimum-group-length	Minimum number of characters allowed for a group name	4	1-16
maximum-password-length	Maximum number of characters allowed for a password	16	1-16
minimum-password-length	Minimum number of characters allowed for a password	0	0-16
configuration-accounts	Enable or disable the configuration of accounts	enabled	enabled, disabled
radius-server-accounts	Enable or disable the configuration of RADIUS server accounts	disabled	enabled, disabled

For example, to set the minimum password length to 6 characters, enter the following command sequence.

```
box# access
access# minimum-password-length 6
access#
```

Configuring User

Configuring the user object lets you set the profile for an individual user.

To configure the user object, navigate to the `users` prompt (for example: **box;** **access;** **users**) and enter values (or accept the default values) for the parameters listed in [Table A-2](#).

Table A-2. User Parameter Options

Parameter	Description	Default	Options
state	Administrative state of this object	enabled	enabled, disabled
login-id	Login name of this user	none	<string>
true-name	True name of this user	none	<string>
encrypted-password	Encrypted password of this user	none	<string>

(continued)

Table A-2. User Parameter Options *(continued)*

Parameter	Description	Default	Options
group-ids	Group ID numbers with which this user name is associated	1	all-groups, 1-31
audit-level	Privilege level activity to include in the audit log	manager, user, operator	all, manager, user, operator

For example, to create the login ID for a user, enter the following command sequence.

```
box# access
access# users
users# user login-id david
user/david#
```

Configuring Group

Configuring the group object lets you set the profile for a group of users.

To configure group, navigate to the groups prompt (for example: **stack; access; groups**) and enter values (or accept the default values) for the parameters listed in [Table A-3](#).

Table A-3. Group Parameter Options

Parameter	Description	Default	Options
state	Administrative state of this object	enabled	enabled, disabled
name	Name of this group	none	<string>
group-id	ID number of this group	none	1-31
privilege-level	Privilege level of this group	user	all, manager, user, operator
audit-level	Privilege level activity to include in the audit log	manager, user, operator	all, manager, user, operator

For example, to create the group name and group ID, enter the following command sequence:

```
stack# access
access# groups
groups# group name admin group-id 1
group/admin#
```

Configuring Audit

The audit log includes the name of the command, the name of the user that issued the command, and a timestamp for all commands of the privilege level you specify. You can disable this feature by setting the parameter state to disabled.

To configure audit, navigate to the `audit` prompt (for example: **stack# access; audit**) and enter values (or accept the default values) for the parameters listed in [Table A-4](#).

Table A-4. Audit Parameter Options

Parameter	Description	Default	Options
state	Administrative state of this object	enabled	enabled, disabled
audit-level	Privilege level activity to include in the audit log	manager, user, operator	all, manager, user, operator

For example, to disable the audit log, enter the following command sequence:

```
stack# access
access# audit
audit# state disabled
audit#
```

Disabling or Deleting Users and Groups

When a user entry in the device configuration file is disabled or deleted, the current active session of the user terminates. When a group entry in the device configuration file is disabled or deleted, affected users assume the highest privilege level of any remaining assigned groups. If all the groups a user belongs to are disabled or deleted, the current active session of the user terminates.

BCC Lock Messages

Multilevel access includes messages that identify which user has exclusive read-write access to the device configuration.

The additional lock messages take the generic form:

```
read-write mode in use by <login_id> from {console | <ip_address>},  
use -force to override.
```

Example:

```
read-write mode in use by testuser1 from 192.168.133.99, use -force  
to override
```

This message appears when a user in BCC config mode is logged in using a Telnet session. The message contains the user's login name and the IP address of the workstation from which the user initiated the session.

Example:

```
read-write mode in use by Manager from console, use -force to  
override
```

This message appears when the user in BCC config mode is logged in at the console connected to the router.

Example:

```
SNMP user from 192.168.133.99 has the configuration locked, use  
-force to override.
```

This message appears when an SNMP station has locked, exclusive read-write access to the device configuration. The message identifies "SNMP" and the IP address of the workstation from which that user initiated the session.

For information on SNMP locking, see *Configuring SNMP, BootP, DHCP, and RARP Services*.

Example:

```
SNMP General Set Error. Machine is currently locked by manager  
255.255.255.255
```

This message appears when a Site Manager user attempts to open a dynamic configuration session on the same box with a BCC user currently in configuration mode.

The user login and the string 255.255.255.255 indicate to the Site Manager user that this is a BCC session.

Example:

```
Snmp Error: Setting File System Action.
```

This message appears when a Site Manager user attempts to use File Manager to transfer a file to or from a router that has a BCC user in configuration mode.

Appendix B

System Commands

The BCC supports the system commands listed in [Table B-1](#).

For detailed information about any command that works from the Technician Interface as well as the BCC prompt:

- Enter **help** *<command>* at any BCC prompt (for example, **help save**)
- See *Using Technician Interface Software*

Table B-1. System Commands

Command	Purpose	Login/Access Privileges		
		Manager	Operator	User
?	List the names of objects, parameters, and system commands you can enter next.	✓	✓	✓
<command> ?	Display syntax usage Help for <i><command></i> .			
<object> ?	List parameters of an object you can access or configure from your current level in the device configuration tree.			
<parameter> ?	List the current, default, and legal values for the specified parameter of the current object.			
<object> <parameter> ?	List the current, default, and legal values for the specified parameter of this object.			
! [<n>] (Technician Interface only)	Repeat the last command, or repeat the last command <i><n></i> times.	✓	✓	✓
back [<n>] (BCC configuration mode only)	Move your current working location back <i><n></i> levels closer to the root level of the BCC configuration tree.	✓	✓	✓
bcc	Start the BCC from the Technician Interface prompt.	✓	✓	✓
boot [{<vol>:<image_name> -} {<vol>:<config_name> -}]	Reboot the system.	✓		
cd [<vol>:][<directory>]	Set or display the current working volume and directory.	✓	✓	✓
clear <subcommands> <flags>	Clear specific device information such as IP and RIP data.	✓		
clearlog [<slot_ID>]	Clear all previous events from the system event log.	✓		
commit	Commit (make effective) new values that you assign to MIB attributes.	✓		

(continued)

Table B-1. System Commands *(continued)*

Command	Purpose	Login/Access Privileges		
		Manager	Operator	User
compact <volume>:	Compact existing files into a contiguous address space on a volume, and compact all unused space into a single contiguous block of free space for new files on the same volume.	✓		
config [-read-write -read-only] (BCC only)	Enter BCC configuration mode. If you logged on as Manager or Operator, you have read-write access to the device configuration; if you logged on as User, you have read-only access, which allows you to display the existing configuration, but prevents you from changing the configuration. If you enter BCC configuration mode as Manager and want to change your privilege level for the current session from read-write to read-only, enter config -read-only . To change Manager privileges back to read-write, enter config -read-write .	✓	✓	✓
copy <vol>:<filename1> <vol>:<filename2> (Technician Interface only)	Copy the contents of the first file to the second file.	✓		
cp <vol>:<filename1> <vol>:<filename2> (BCC only)	Copy the contents of the first file to the second file.	✓		
cwc [..]	Change working context (config mode only). Issued with the .. argument, cwc changes from the current configuration context to root level. Issued without any argument, cwc changes from the current working context to the previous (parent) configuration context.	✓	✓	✓

(continued)

Table B-1. System Commands *(continued)*

Command	Purpose	Login/Access Privileges		
		Manager	Operator	User
date [<mm/dd/yy>] [<hh:mm:ss>] [+ -]<hh:mm>]	Display or update the system time and time zone.	✓	✓	✓
delete [<BCC_instance_ID>] (BCC configuration read-write mode only)	Delete the object described in the current prompt, or delete the object known by the specified <ID> and configured previously from the current level.	✓		
delete <filename> <volume> (Technician Interface only; see rm for BCC equivalent)	Delete the file from the specified volume.	✓		
diags [<slot_ID>]	Perform CPU/memory, backbone, and link diagnostics before downloading the GAME image and rebooting on the specified slot.	✓		
dinfo	Display the status of each file system volume on this device.	✓	✓	✓
dir [<vol>:]	Display the contents of the file system volume specified.	✓	✓	✓
disable (BCC configuration read-write mode only)	Disable the object at your current location in the BCC configuration tree.	✓	✓	
enable (BCC configuration read-write mode only)	Enable the object at your current location in the BCC configuration tree.	✓	✓	
format <volume>:	Erase the entire contents of the file system volume specified and reinitialize it to a usable state.	✓		
get {<obj_name> <obj_id>} .{<attr_name> <attr_id>[*]} [.{<inst_id>[*]}] (Technician Interface only)	Retrieve the values of data objects in the MIB.	✓	✓	✓

(continued)

Table B-1. System Commands *(continued)*

Command	Purpose	Login/Access Privileges		
		Manager	Operator	User
getcfg (Technician Interface, AN routers only)	Display network boot parameters. (Display the current parameter settings used to determine the source of image and configuration files.)	✓	✓	✓
help	Display an overview of BCC Help-oriented features.	✓	✓	✓
help <command>	Display detailed Help on a specific command.	✓	✓	✓
help [<command> -all] (Technician Interface only)	<p>The help command, entered without arguments at the Technician Interface prompt, displays an alphabetical list of all commands with syntax only. The list excludes commands available only in BCC mode.</p> <p>The combination help <command> displays detailed Help on a specific command, excluding any commands available only in BCC mode.</p> <p>The combination help -all displays detailed Help on all system commands, excluding those available only in BCC mode.</p>	✓	✓	✓
help commands	Display an alphabetical list of all commands, with syntax and terse descriptions.	✓	✓	✓
help commands -more	Display syntax and more detailed command descriptions for all BCC commands in alphabetical order.	✓	✓	✓
help <object_name>	Display definitions for parameters of the current object. For example, help ip ospf defines parameters of the global ospf object, and help ethernet defines parameters of an Ethernet port object.	✓	✓	✓

(continued)

Table B-1. System Commands *(continued)*

Command	Purpose	Login/Access Privileges		
		Manager	Operator	User
help <parameter_name>	Display definitions of all parameters of the current object. For example, help bofl displays the definitions of all parameters of ethernet .	✓	✓	✓
help syntax	Display Help on how to interpret BCC syntax symbols.	✓	✓	✓
help [<task>]	Display Help on how to perform a specific task. The help commands are help learning-bcc and help editing .	✓	✓	✓
help tree [-all]	Display a hierarchical list of all objects you can configure on this platform (use -all) or on the current object (omit -all).	✓	✓	✓
history [<n>] (<n> option Technician Interface only)	Display the command history list or, for the Technician Interface only, recall command number <n> from the history list.	✓	✓	✓
info (BCC configuration mode only)	List values (sorted alphabetically) currently assigned to all configurable parameters of this object.	✓	✓	✓
ip <subcommand> <flags> (Technician Interface only)	Display data from IP; show a different view for each subcommand or flag you enter.	✓	✓	✓
ip6 <subcommand> <flags> (Technician Interface only)	Display data from IPv6; show a different view for each subcommand or flag you enter.	✓	✓	✓
list [<instances> [<obj_name>]] (Technician Interface only)	List objects in the MIB.	✓	✓	✓
loadmap [<slot_list> all] [<filepath>]	Display the load address and size of each dynamically loadable application (for example, a protocol).	✓	✓	

(continued)

Table B-1. System Commands *(continued)*

Command	Purpose	Login/Access Privileges		
		Manager	Operator	User
log [<vol> : <logfile>] [-d <date>] [-t <time>] [-e "<entity>"] [-f <severity>] [-s <slot_ID>] [-p <rate>] [-c <code #>]	<p>Display the current system event log.</p> <p>Follow the optional -e flag immediately with the entity name in uppercase characters and enclosed in quotation marks (no intervening spaces).</p> <p>Specify <severity> using letters with no intervening spaces: f = fault w = warning i = info t = trace d = debug Examples: -fwid -ffitd -fwi -fwitd</p> <p>Use the optional -p flag to set an interval for polling the log and displaying the result.</p>	✓	✓	✓
log [-x - i] [-e "<entity>"] [-f <severity>] [-s <slot_ID>]	Exclude (-x) or include (-i) event logging indicated by the command options.	✓	✓	✓
log -z [-s <slot_ID>]	Display current filter setting.	✓	✓	✓
logout	Exit the current login session.	✓	✓	✓
iso [-l] (BCC configuration mode only)	List objects configured on the current object. The optional -l flag causes the BCC to list object IDs in wraparound screen format.	✓	✓	✓
mget { <obj_name> <obj_id> } . { <attr_name> <attr_id> *} [. { <inst_id> *}] (BCC only)	Retrieve the values of data objects in the MIB.	✓	✓	✓
mlist [instances [<obj_name>]] (BCC only)	List objects in the MIB.	✓	✓	✓
more [on off] [<#_lines_per_screen>]	Set or display the status of the more utility.	✓	✓	✓

(continued)

Table B-1. System Commands *(continued)*

Command	Purpose	Login/Access Privileges		
		Manager	Operator	User
mset {<obj_name> <obj_id> .<{<attr_name> <attr_id> <{<inst_id> }<value>} (BCC only)	Modify (set) the values of data objects in the device MIB.	✓	✓	
partition {create delete} [<vol>:]	Create or delete a partition on existing file system media.	✓	✓	✓
password Manager	Change the password of the Manager account.	✓	✓	✓
password Operator	Change the password of the Operator account.		✓	✓
password User	Change the password of the User account.			✓
ping -<protocol> <address> [-t<timeout>]	Initiate an ECHO request/reply handshake.	✓	✓	✓
pktDump <line_number> [-s<start>] [-c<count>]	Display packets that have been captured by an interface configured for Packet Capture.	✓		
prom [-v -w] <vol>:<ROM_Update_File> <slot_ID> [<slot_ID>...]	Update or verify the software located on a flash PROM device.	✓		
pwc (BCC configuration mode only)	Display the path to your current working location in the tree, starting from root.	✓	✓	✓
readexe <vol>:<filename>	Validate the checksums of an executable image and print out all the file header information.	✓	✓	✓
record {open close} [-fileonly] [-pause] <vol>:<filename> (Technician Interface only)	Record to a file all messages written to the terminal. You can open, pause, and close a recording session.	✓		
reset [<slot_ID>]	Reboot the GAME image on the specified slot. If the slot ID argument is absent, reboot the entire device.	✓		

(continued)

Table B-1. System Commands *(continued)*

Command	Purpose	Login/Access Privileges		
		Manager	Operator	User
restart [<i><slot_ID></i>]	Restart the GAME image on the specified slot. If the slot ID argument is absent, the GAME image restarts on all slots.	✓		
rm <i><vol>:<filename></i> (BCC only)	Remove (delete) the file from the specified volume.	✓		
save { config aliases log } <i><vol>:<filename></i>	Store the current configuration, alias list, or system event.	✓	✓	
securelogin	Turn SecurID access to the device on and off via Telnet.	✓		
set { <i><obj_name></i> <i><obj_id></i> } . <i>{<attr_name> <attr_id></i> } . <i>{<inst_id>}{<value>}</i> ... (Technician Interface only)	Modifies data objects in the MIB.	✓		
show config [-all] [-recursive] [-verbose] [-compact] [-file <i><filename></i>] [-compact] (BCC only)	Display the active configuration of the current object, plus any other configuration data implied by the command filters -a, -r, -v, -c, and -f. See "Displaying Current/Active Configuration Data" on page 2-9 .	✓	✓	✓
source <i><vol>:<filename></i>	Read BCC configuration or TCL scripting commands from a text file.	✓		
source { aliases env perm } <i><vol>:<filename></i> (Technician Interface only)	Read a list of aliases, environment variables, or dynamic permissions from a file.	✓	✓	
stamp	Display the device image version name and timestamp.	✓	✓	✓
system (Technician Interface only)	Start a new Technician Interface session that allows you to run system manager privileged commands.	✓	✓	✓

(continued)

Table B-1. System Commands *(continued)*

Command	Purpose	Login/Access Privileges		
		Manager	Operator	User
telnet [-d] [-e <escape_char>] [<host_ip> [<port>]] (Technician Interface and BCC top level only; not available in BCC configuration mode)	Communicate with other hosts supporting the Telnet protocol.	✓	✓	✓
tftp {get put} <address> <vol>:<filename> [<vol>:<filename>] (Technician Interface and BCC top level only)	Send files to, or retrieve files from, other hosts supporting TFTP.	✓		
type [-x] <vol>:<filename>	Display the contents of the designated file in ASCII or HEX (-x) format.	✓	✓	✓
xmodem {rb sb} [y w p n] <filename> ...	Transfer files to or from this device over a dial (out-of-band) connection.	✓		

Appendix C

TCL Support

The BCC supports the following subset of Tool Command Language (TCL) scripting commands on the router platform:

- | | | | |
|-------------------|------------------|-------------------|------------------|
| • append | • for | • lrange | • switch |
| • break | • foreach | • lreplace | • unset |
| • case | • gets | • lsearch | • uplevel |
| • catch | • global | • lsort | • upvar |
| • close | • if | • open | • while |
| • concat | • incr | • proc | |
| • continue | • interp | • puts | |
| • eof | • join | • rename | |
| • error | • lappend | • return | |
| • eval | • lindex | • set | |
| • exit | • linsert | • source | |
| • expr | • list | • split | |
| • flush | • llength | • subst | |

For more information about definitions, syntax, and applications for these TCL commands, refer to the following book:

Ousterhout, J. *Tcl and the Tk Toolkit*. ISBN 0-201-63337-X. Reading, Mass.: Addison-Wesley, 1994.

Appendix D

System show Commands

This appendix describes the following BCC system **show** commands.

Topic	Page
show access	D-2
show console	D-4
show hardware	D-7
show interface	D-9
show process	D-10
show system	D-13



Note: For information about the **show config** command, see “[Displaying Configuration Data](#)” on [page 2-9](#).

show access

The **show access** *<option>* command displays information about multiuser access.

The **show access** command supports the following subcommand options:

active	groups	lock	users
------------------------	------------------------	----------------------	-----------------------

active

Displays information about each active user.

Login-id	Login name of this user.
Login Time	Time this user logged in.
Idle Time	Time elapsed since the last command was issued.
State	State of this user (config or active).
From	Originating IP address or console.
Port	Port from which this user is accessing the device.
Last Command	Last command issued by this user.

groups

Displays information about each active group.

Group	Group number.
Name	Group name.
State	State of this group (enabled/disabled).
Privileges	Privilege level for this group.
Audit	Privilege level activity to include in the audit log.

lock

Displays information about the lock status of the user currently in configuration mode.

Slot	Device number of the slot being accessed.
Lock User	User currently in configuration mode.
From	Originating IP address or console.
Port	Port from which this user is accessing the device.
Idle Time	Time elapsed time since the last command was issued.

users

Displays information about each active user's profile.

Login Name	Login name of this user.
State	State of this user (enabled/disabled).
True Name	True name of this user.
Groups	Group ID numbers of this user.
Audit	Audit level for this user.

show console

The **show console** <option> commands display console port configuration and statistics information.

The **show console** command supports the following options:

config	stats
------------------------	-----------------------

config

Displays configuration and Technician Interface environment information for the serial ports configured on your system or for a specific port.

Port Number	Port number for the information displayed. Valid ports are 1, 2, 3, and 4. Not all systems have four physical ports. A configured port that does not exist is in the Absent state.
State	Port's current state, as follows: <ul style="list-style-type: none">• <i>Absent</i> -- Not physically present• <i>Disabled</i> -- Unavailable• <i>Down</i> -- Unavailable• <i>Init</i> -- Initializing• <i>Up</i> -- Available
Port Name	<p>Name that the system assigns to the port. You cannot specify a name. You can use the name to correlate a port number to a physical port. The name of the port should be printed next to the physical port connection, for example, Port 1 - CONSOLE.</p> <p>The names do not specify the port's use. All ports are serial ports used for Technician Interface sessions only. For example, port MODEM1 may be a modem connection or a dummy terminal connection depending on its configuration. Although port 4 is called PRINTER, it is exactly like ports 1, 2, and 3. Port 4 does not support a printer. Port 4 is called PRINTER only because that label is printed near the port connector on the link module.</p>
Slot Number	Slot on which the login session for the serial port is running.
Baud Rate	Current baud rate setting for the serial port.
Data Bits	Number of data bits in the serial port's configuration.
Parity	Serial port's current parity setting.

Stop Bits	Number of stop bits in the serial port's configuration.
Modem Enable	<p>Configuration of modem control, as follows:</p> <ul style="list-style-type: none">• <i>Disabled</i> -- Port is directly connected to a device, such as a dummy terminal or a terminal server.• <i>Enabled</i> -- Port is attached to a modem and modem leads are enabled.
Lines/Screen	Number of lines that the serial port displays before displaying the more prompt.
More Enable	Setting of the Technician Interface more feature: Enabled or Disabled (according to the MIB record). The Technician Interface more command affects only the current login session; it does not change the MIB, and so does not affect the setting of this field.
Port Prompt	Technician Interface prompt.
Login Retries	Maximum number of login retries; relevant only if modem control is enabled. This value determines the maximum number of failed login attempts that a system allows on the serial port. If the maximum occurs, the system hangs up on the line, causing a modem connection to lose carrier detect.
Login Timeout (min.)	Number of minutes allowed between when the system displays the login banner and a user enters a login ID; relevant only if modem control is enabled. If this timeout occurs, the system hangs up on the line.
Password Time Out	Number of minutes allowed to enter a password. If this timeout period expires, the system hangs up on the line.
Command Time Out	Command line timeout value; relevant only if modem control is enabled. If you do not enter a command in this number of minutes, the system hangs up on the serial port.
User Abort Logout	Switch to execute control (^C) to break out of the user autoscript. When a user autoscript is in effect and this parameter is enabled, you can break out of the script when logged in as User, but not as Manager. Also, if this parameter is enabled and the script terminates due to an error, the system automatically logs you out.
Initial Search Path	List of file system volumes to be searched when you run a script without a volume specifier or if an autoscript does not contain a volume specifier. The environment variable PATH is set to this string. The string format is as follows: <vol>[:<vol>: ...] Example: 2::3::4::5:
Manager's AutoScript	Name of the script to run when the Manager account logs in to the router. If the script name does not contain a volume specifier, the system searches the volumes listed in "Initial Search Path."

User's AutoScript	Name of the script to run when the User account logs in to the router. If the script name does not contain a volume specifier, the system searches the volumes listed in "Initial Search Path."
History Depth	Maximum number of Technician Interface commands stored in the local command history table. The table stores each command you enter at the prompt on a first in first out (FIFO) basis.
# files to autosave	Number of times that the system saves the events log to a new file automatically when the log is full.
Volume for autosave	The target volume where the system stores new log files saved through the log autosave feature.

stats

Displays login information and console port error statistics.

Port Number	Port number for the information displayed.
Port Name	Corresponding port name.
Port State	Port's current state: Absent, Disabled, Down, Init, or Up.
Total Logins	Number of logins (failed and successful) on the console port.
User Login Errors	Number of failed login attempts that the User login account has made on the console port.
Manager Login Errors	Number of failed login attempts that the Manager login account has made on the console port.
Other Login Errors	Number of failed login attempts made by login accounts other than User and Manager on the console port.
TTY Frame Errors	Number of frame errors on the console port.
TTY Overrun Errors	Number of overrun errors on the console port.
TTY Parity Errors	Number of parity errors on the console port.
TTY FIFO Errors	Number of FIFO errors on the console port.

A high number of errors over a short period of time may indicate a problem with the line.

show hardware

The **show hardware** *<option>* commands display information about router hardware.

The **show hardware** command supports the following subcommand options:

backplane	memory [<slot>]
config_file	proms
image	slots

backplane

Displays information about the state of the backplane hardware. The table includes the backplane type, revision, and serial number. The revision and serial numbers are in decimal format.

config_file

Displays the configuration file used to boot the router or reset a slot. The table shows the volume and file name used as the source of the configuration. The table also shows the date and load time.

image

Displays the router's software image for each slot, including the integration that is the source of the image, the date and time of the image's creation, and the file name that contains the image.

memory [<slot>]

Displays memory configuration and capacity information about all slots or a specific slot.

Slot	Slot number.
Local Memory	Total memory capacity in megabytes of the processor on the slot.
Global Memory	Current memory configuration in megabytes of the processor on the slot.
Total Memory	Total local and global memory in megabytes.

proms

Displays PROM information for all slots. The table includes the revision and build date of the bootstrap PROM and the diagnostics PROM.

slots

Displays hardware information about all slots in the system. The table includes information about the processor module and link module for each slot, as well as the module type, revision, and serial number. The revision and serial numbers are in decimal format.

For the AN, the table indicates that the AN has an 802.3 repeater (HUB) by indicating that the link module is an ANSEDSH.

For the ASN, the table displays the revision and serial number of the chassis, processor module, and the network module type, revision, and serial number.

show interface

The **show interface** command displays information about all media-specific interfaces configured on the device. This command has only one option, **summary**.

summary

Displays high-level information about each media-specific interface. To see greater detail, use a **show <media_type>** command, such as **show ethernet <option>**.

The table for **show interface summary** includes the following information:

Interface Name	Name of the interface.
Admin State	State requested by the user (per RFC 1213).
Oper State	Actual state determined by the system (per RFC 1213).
Media Type	Type of LAN/WAN media supporting the interface.
Protocols	Protocols configured on the interface.

show process

The **show process** *<option>* commands display information about the use of resources (buffers, CPU, memory, lists, and so on) on the router.

The **show process** command supports the following subcommand options:

buffers [detail total]	list [detail total]
cpu [detail total]	memory [detail total]

buffers [detail | total]

Displays the number and percentage of buffers used by all processes on the router.

Name	Name of the process (if you specify the detail option).
Slot	Slot number.
Used	Number of buffers used.
%Used	Percentage of buffers used.
Max	Maximum buffers (if you specify the total option).
Free	Free buffers (if you specify the total option).

cpu [detail | total]

Displays the CPU usage in hundredths of seconds and the percentage of total CPU time used by all processes on the router.

detail	Displays details about CPU usage for all processes.
total	Displays only CPU statistics totals.



Note: For information about how to obtain a list of available processes, see the **show process list** command.

Name	Name of the process.
Slot	Slot number.
Used	Hundredths of seconds used by each process.
%Used	Percentage of CPU time used by each process.
Idle	CPU idle time in hundredths of seconds.
Max	Total CPU time in hundredths of seconds.

list [detail | total]

Displays a list of all the processes running on each slot.

Name	The name of the process.
Slot	Slot number.

memory [detail | total]

Displays the number of bytes and the percentage of memory used by all processes on the router.

detail Displays details about the amount of memory used by each process running on the router.

total Displays only memory usage totals.

The table includes the following information:

Name Name of the process (if you specify the detail option).

Slot Slot number.

Used Number of memory bytes used by each process.

%Used Percentage of memory used by each process.

Free Number of free buffers on this slot (if you specify the total option).

show system

The **show system** *<option>* commands display information about the overall system state.

The **show system** command supports the following subcommand options:

buffers	memory
drivers	protocols
information	tasks

buffers

Displays the current buffer usage for all active slots on the router. Because buffers circulate rapidly through the system, a low free percentage does not necessarily indicate a buffer shortage; it may be a transient condition.

Slot	Slot number.
Used	Number of buffers used by each process.
%Free	Percentage of free buffers on each slot.
Total	Total number of buffers available.
Free	Total number of free buffers.

drivers

Displays link modules and drivers installed on all slots. If the configuration displayed differs from that expected, your configuration file may be incorrect (wrong module type specified, for example) or there may be a problem loading the software.

information

Displays general system information (system name, contact, node location, image data, MIB version, and total uptime since last cold boot).

memory

Displays the global memory usage for all active slots in the system. Memory usage is not as volatile as buffer usage, so a low free percentage may indicate that you need more memory.

Slot	Slot number.
Total	Total number of memory (DRAM) bytes available on each slot.
Used	Number of memory bytes used on each slot.
Free	Amount of free memory on each slot.
%Free	Percentage of free memory on each slot.

protocols

Displays the protocols installed on all slots in the system. If the configuration displayed differs from that expected, your configuration file may be incorrect (wrong protocol specified, for example) or there may be a problem loading the software.

tasks

Displays the number of tasks scheduled to run on all slots. This number is highly volatile and a large In Queue value does not necessarily indicate a problem.

Slot	Slot number.
Total	Total number of tasks running on each slot.
In_Queue	Number of tasks scheduled to run.
% in Queue	Percentage of tasks scheduled to run.

Appendix E

Syntax for Module Location

[Table E-1](#) lists the syntax for specifying the physical location of a module for each Nortel Networks device that the BCC supports.

Table E-1. Syntax for Specifying Module Location per Device

Platform	Syntax
AN/ANH	<p><code><interface> <slot> <connector></code></p> <ul style="list-style-type: none">• <code><interface></code> = interface type: such as ethernet, token-ring, or serial• <code><slot></code> = 1 (AN/ANH is a one-slot device.)• <code><connector></code> numbering starts with connector 1. <p>Example: ethernet slot 1 connector 3 This is an Ethernet interface configured on AN/ANH connector 3, which exists on an Ethernet adapter module. (Connectors 1 and 2 are on the base module.)</p>
ASN	<p><code><interface> <slot> <module> <connector></code></p> <ul style="list-style-type: none">• <code><interface></code> = interface type: such as ethernet, token-ring, or serial• <code><slot_number></code> = 1, 2, 3, or 4, depending on the setting of the module ID switch on each ASN.• <code><module></code> numbering corresponds to net module numbering (1 through 4) on each ASN.• <code><connector></code> numbering starts at 1 on each net module (per media type). <p>Example: ethernet slot 2 module 3 connector 2 This is an Ethernet interface on connector 2 of net module 3, in ASN 2 of a stacked ASN configuration.</p>

(continued)

Table E-1. Syntax for Specifying Module Location per Device *(continued)*


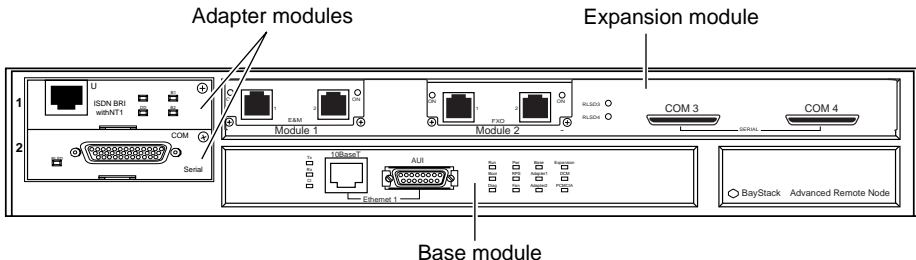
Platform	Syntax
ARN	<p><code><interface> <slot> <connector></code></p> <ul style="list-style-type: none"> <code><interface></code> = interface type: such as ethernet, token-ring, or serial <code><slot></code> = 1 (The ARN is a 1-slot device.) <code><connector></code> numbering depends on the port type (LAN or WAN). LAN connector numbering starts at 1 on the base module, which contains only LAN ports. LAN connector numbering continues in ascending order, starting with the first LAN port on an ARN expansion module. (The ARN expansion module plugs into the ARN base module.) WAN connector numbering starts with connector 1 on WAN adapter module 1, continues with connector 2 on WAN adapter module 2, and ascends sequentially with WAN connectors 3 through <i>n</i> on the ARN expansion module.  <p style="text-align: right;">ARN0113A</p> <p>Examples:</p> <p>ethernet slot 1 connector 1 This interface is configured on LAN connector 1, which exists physically on the base module.</p> <p>voice slot 1 connector 1 This is a voice over IP interface configured on connector 1, which exists physically on the ARN expansion module.</p> <p>serial slot 1 connector 3 This is a serial (WAN) interface configured on WAN connector 3, which exists physically on the ARN expansion module.</p>
BN	<p><code><interface> <slot> <connector></code></p> <ul style="list-style-type: none"> <code><interface></code> = interface type: such as ethernet, token-ring, or serial <code><slot></code> = 2 through 5 (BLN) or 1 through 14 (BCN). <code><connector></code> numbering starts with connector 1 on each slot (per media type). <p>Example:</p> <p>ethernet slot 8 connector 3 This is an Ethernet interface configured on connector 3 of slot 8 of a BCN router.</p>

Table E-1. Syntax for Specifying Module Location per Device *(continued)*

Platform	Syntax
System 5000	<p><interface> <slot> <module> <connector></p> <ul style="list-style-type: none"> <interface> = interface type: such as ethernet, token-ring, serial, or atm <slot_number> = 2 through 13 in a System 5000 chassis <module> numbering corresponds to net module 1 or 2, which plugs into a System 5000 base module. A System 5000 base module is always module 3. <connector> numbering starts at 1 on each net module. The base module always contains a connector 1, which plugs into a System 5000 backplane (for example, Ethernet, token ring, or ATM backplane). <p>Examples:</p> <p>ethernet slot 2 module 2 connector 1 This is an Ethernet interface on connector 1 of the Ethernet net module (module 2) in slot 2.</p> <p>atm slot 2 module 3 connector 1 This is an ATM interface on connector 1 of slot 2, a Model 5782 Virtual Network Router (VNR) base module (module 3). Note that the VNR does not accommodate any net modules.</p>
Passport 2430	<p><interface> <slot> <connector></p> <ul style="list-style-type: none"> <interface> = interface type: such as ethernet, fe1, ft1, or serial <slot> = 1 (The Passport 2430 is a 1-slot device.) <connector> numbering depends on whether you are configuring an interface on the LAN base module or one of the two WAN adapter modules. If you are configuring a 10/100BASE-TX Ethernet on the base module, connector is always 1. If you are configuring on adapter module 1, connector number is always 1. If you are configuring an interface on adapter module 2, connector number is always 2.

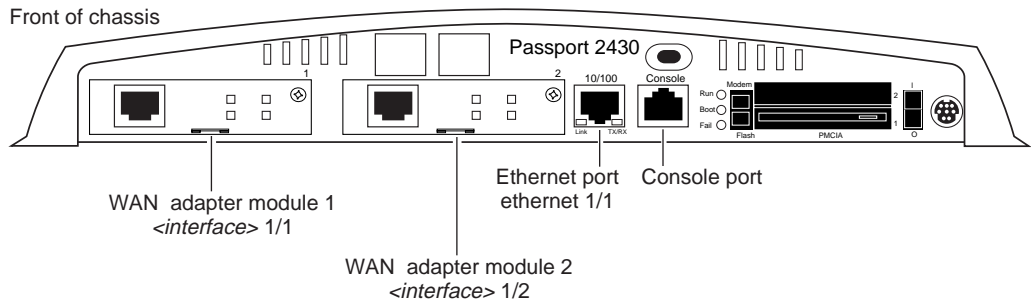

BCC0039A

(continued)


Table E-1. Syntax for Specifying Module Location per Device *(continued)*

Platform	Syntax															
	<p>Examples:</p> <p>box# ethernet slot 1 connector 1 This is a 10/100BASE-TX Ethernet (LAN) interface configured on slot 1 and connector 1, which exists physically on the base module.</p> <p>box# serial slot 1 connector 1 This is a serial (WAN) interface configured on slot 1 and connector 1, which exists physically on adapter module 1.</p> <p>box# ft1 slot 1 connector 2 This is a fractional T1 (WAN) interface configured on slot 1 and connector 2, which exists physically on adapter module 2.</p> <p>Module Locations for Passport 2430 Base module: 10/100BASE-TX Ethernet. WAN adapter modules: FT1, FE1, 56k/64k DSU/CSU, ISDN S/T, ISDN U, Serial, and V.34 Modem.</p> <table><tr><th>Slot</th><th>Connector</th><th>Location of Router Chassis</th><th>Board Type</th></tr><tr><td>1</td><td>1</td><td>Base Module</td><td>10/100Base-TX Ethernet</td></tr><tr><td>1</td><td>1</td><td>Adapter Module 1</td><td rowspan="2">WAN Adapter Module</td></tr><tr><td>1</td><td>2</td><td>Adapter Module 2</td></tr></table>	Slot	Connector	Location of Router Chassis	Board Type	1	1	Base Module	10/100Base-TX Ethernet	1	1	Adapter Module 1	WAN Adapter Module	1	2	Adapter Module 2
Slot	Connector	Location of Router Chassis	Board Type													
1	1	Base Module	10/100Base-TX Ethernet													
1	1	Adapter Module 1	WAN Adapter Module													
1	2	Adapter Module 2														

(continued)

Table E-1. Syntax for Specifying Module Location per Device *(continued)*

Platform	Syntax
Passport 5430	<p><i><interface> <slot> <pci-slot> <module> <connector></i></p> <ul style="list-style-type: none"> <i><interface></i> = interface type: such as ethernet, atm, or serial <i><slot></i> = 1, which is the slot on which the GAME operating system is configured. (The Passport 5430 is a 1-slot device.) <i><pci-slot></i> = numbering corresponds to pci-slots 1, 2, 3, or 4 on the Passport 5430 chassis. <i><module></i> numbering corresponds to net modules 1 and 2 on the base module; modules 1 or 2 on the three expansion cards; and modules 3, 4, and 5 on the three WAN interface cards. <i><connector></i> numbering starts at 1 on each net module. Connector 2 is used to configure dual Ethernet on pci-slot 1/module 1. Connector 1 is used to configure T1 voice over IP interface drivers on module 1 of pci-slots 2, 3, or 4. Connector 2 is also used to configure dual sync interface drivers on modules 1 or 2 of pci-slots 2, 3, or 4.

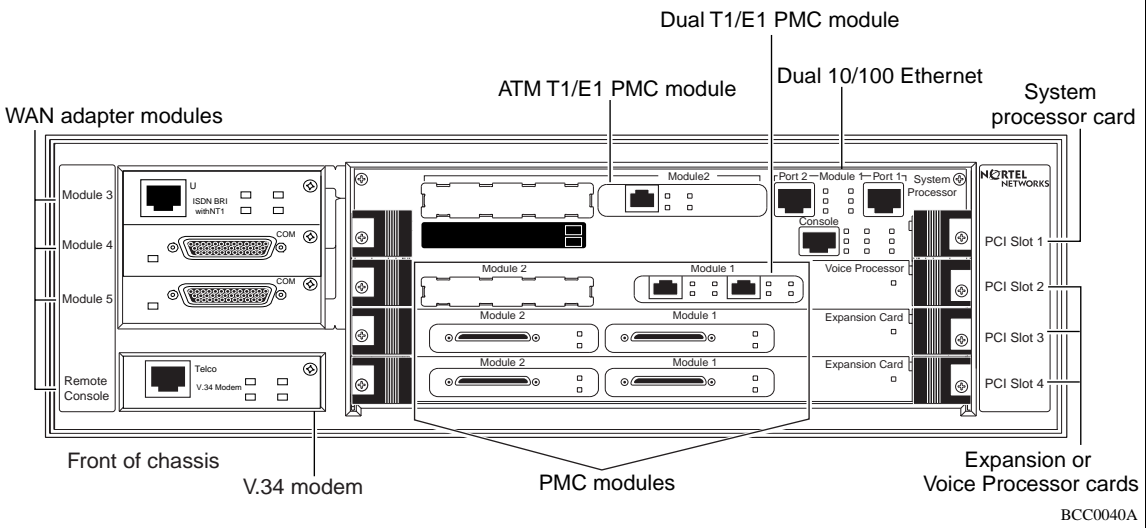

(continued)

Table E-1. Syntax for Specifying Module Location per Device *(continued)*

Platform	Syntax																																																					
	<p>Examples:</p> <p>ethernet slot 1 pci-slot 1 module 1 connector 1 This is an Ethernet interface configured on connector 1, which exists physically on module 1 of PCI slot 1. To configure a dual Ethernet interface, you enter the following command: ethernet slot 1 pci-slot 1 module 1 connector 2</p> <p>atm slot 1 pci-slot 1 module 2 connector 1 mode t1 This is an ATM T1 interface configured on connector 1, which exists physically on module 2 of PCI slot 1.</p> <p>voice slot 1 pci-slot 2 module 1 connector 1 This is a voice over IP T1 interface configured on connector 1, which exists physically on module 1 of PCI slot 2.</p> <p>serial slot 1 pci-slot 1 module 3 connector 1 This is a serial (WAN) interface configured on connector 1, which exists physically on module 3 on the WAN interface card.</p> <p>Module Locations for Passport 5430</p> <p>Note: WAN adapter modules accommodate the following interface drivers: FT1, FE1, 56k/64k DSU/CSU, ISDN S/T, ISDN U, Serial, and V.34 Modem. The dual sync PMC modules accommodate voice expansion cards with dual T1/E1 modules installed at module 1 of pci-slots 2, 3, or 4.</p> <table><tr><th>GAME Slot</th><th>PCI Slot</th><th>Module</th><th>Connectors</th><th>Board Type</th></tr><tr><td>1</td><td>1</td><td>1</td><td>1 and 2</td><td>Dual 10/100 Ethernet</td></tr><tr><td>1</td><td>1</td><td>2</td><td>1</td><td>ATM T1/E1</td></tr><tr><td>1</td><td>1</td><td>3</td><td>1</td><td rowspan="3">WAN Adapter Modules</td></tr><tr><td>1</td><td>1</td><td>4</td><td>1</td></tr><tr><td>1</td><td>1</td><td>5</td><td>1</td></tr><tr><td>1</td><td>2</td><td>1</td><td>1 and 2</td><td rowspan="6">Dual Sync PMC Modules</td></tr><tr><td>1</td><td>2</td><td>2</td><td>1 and 2</td></tr><tr><td>1</td><td>3</td><td>1</td><td>1 and 2</td></tr><tr><td>1</td><td>3</td><td>2</td><td>1 and 2</td></tr><tr><td>1</td><td>4</td><td>1</td><td>1 and 2</td></tr><tr><td>1</td><td>4</td><td>2</td><td>1 and 2</td></tr></table>	GAME Slot	PCI Slot	Module	Connectors	Board Type	1	1	1	1 and 2	Dual 10/100 Ethernet	1	1	2	1	ATM T1/E1	1	1	3	1	WAN Adapter Modules	1	1	4	1	1	1	5	1	1	2	1	1 and 2	Dual Sync PMC Modules	1	2	2	1 and 2	1	3	1	1 and 2	1	3	2	1 and 2	1	4	1	1 and 2	1	4	2	1 and 2
GAME Slot	PCI Slot	Module	Connectors	Board Type																																																		
1	1	1	1 and 2	Dual 10/100 Ethernet																																																		
1	1	2	1	ATM T1/E1																																																		
1	1	3	1	WAN Adapter Modules																																																		
1	1	4	1																																																			
1	1	5	1																																																			
1	2	1	1 and 2	Dual Sync PMC Modules																																																		
1	2	2	1 and 2																																																			
1	3	1	1 and 2																																																			
1	3	2	1 and 2																																																			
1	4	1	1 and 2																																																			
1	4	2	1 and 2																																																			

Appendix F

BN Console Slot Election

This appendix provides information about the following topics:

Topic	Page
Introduction	F-2
Using the BCC to Customize Console Slot Election	F-2
Disabling and Reenabling Console Slot Election	F-3
Console Slot Election Error Message	F-4

Introduction

The BCC console slot election feature allows you to specify slots eligible to run the router console interface. From a list of slots that you specify, the software elects the slot with the greatest amount of available free memory. This feature helps ensure that the BCC has enough startup and run-time memory to operate.

This feature currently applies only to multislot router platforms (BCN and BLN). BN routers have only one physical port supporting a directly attached console device or a modem, the latter for remote access to the console port.

By default, the console slot election routine runs transparently when all eligible slots are up and running and any of the following events occurs:

- You press the console [Return] key at the initial router `Login:` prompt.
- The router displays the login Welcome message.
- You log out, and then log in to the router from the console device.
- You reboot the router from its console device.

If you log in to a BN router using a Telnet connection, the Technician Interface and the BCC run only on the slot associated with that inbound Telnet session. The console slot election feature is inactive.

By default, the console slot election feature is enabled and considers all slots eligible to run the console interface. However, you can:

- Customize the selection of slots used by the console slot election routine (see the next section, “[Using the BCC to Customize Console Slot Election](#)”).
- Disable or reen able the console slot election routine (see “[Disabling and Reenabling Console Slot Election](#)” on page F-3).

Using the BCC to Customize Console Slot Election

To limit the choice of slots considered by the console slot election routine:

1. **Log on to the router.**
2. **Start the BCC.**
3. **Enter BCC configuration mode.**

4. **Check the current value of the console-slot-mask parameter used to configure the console slot election feature.**

```
box# console-slot-mask  
console-slot-mask {1 2 3 4 5 6 7 8 9 10 11 12 13 14}
```

Each number represents a router slot.

5. **Enter a new value (list of slots) for the console-slot-mask parameter. For example:**

```
box# console-slot-mask {2 3 4 5 11}
```

6. **Save the new configuration to a file. For example:**

```
box# save config new.cfg
```

To restore the default settings for the console slot election feature at any time, go to the box# prompt and enter the following command.

```
console-slot-mask all
```

This is equivalent to:

```
console-slot-mask {1 2 3 4 5 6 7 8 9 10 11 12 13 14}
```

If you want to save the restored default value for console-slot-mask, repeat step 6.

Disabling and Reenabling Console Slot Election

If you know that a BN router has sufficient memory (DRAM) to run the console interface and the BCC simultaneously on any slot, you can disable the console slot election feature.

1. **Log on to the router.**
2. **Start the BCC.**
3. **Enter BCC configuration mode.**
4. **Enter the following command:**

```
console-slot-mask none
```

If you want to permanently disable the console slot election feature, save this new configuration to a file.

To reenable the console slot election routine at any time, start the BCC, enter configuration mode, and enter any BN slot numbers or **all** as the console-slot-mask parameter value.

Examples:

console-slot-mask {2 3 4}

console-slot-mask 5

console-slot-mask all

Console Slot Election Error Message

If the slot chosen by the console slot election routine does not have sufficient free memory to run the BCC, the router displays an error message:

```
$ bcc
** Error ** Unable to load bcc command from file system.
Loadable Module: bcc.exe
```

If this condition occurs, you cannot start the BCC on the currently elected slot. In this case, try the following corrective actions:

- Log out of the router, and then log in again (rerunning the console slot election process).
- Enter the Technician Interface **show system memory** command to examine the amounts of available free memory on each slot.
- Enter the Technician Interface **set** command to specify a different set of slots eligible to run the console interface. (Set a new value for the `wfIpInterfaceSlotMask` attribute of the Wellfleet-SYS-MIB.) For more information about using the Technician Interface, see *Using Technician Interface Software*.
- If the amount of available free memory is low, you can upgrade the amount of DRAM installed on one or more router slots to at least 16 MB.

Appendix G

BCC Board Types

This appendix provides BCC board types for each of the seven router platforms:

Topic	Page
AN and ANH Board Types	G-2
ARN Board Types	G-5
ASN Board Types	G-6
BLN and BCN Board Types	G-7
Passport 2430 Board Types	G-9
Passport 5430 Board Types	G-9
System 5000 Board Types	G-10

Introduction

[Table 1](#) through [Table 7](#) identify the board type parameter values displayed by the BCC.



Note: You cannot use BCC commands to configure an X.25 PAD or V.34 console modem daughterboard for the ARN router. Use Site Manager to configure these daughterboards.

Also, Inserting a daughterboard into an AN base module redefines its module ID and board type.

AN and ANH Board Types

[Table 1](#) lists the AN and ANH board types.

Table G-1. BCC Board Types: AN and ANH Modules

BCC Board Type	Technician Interface or MIB Module ID	Description
andeds	1033	AN-ENET (2 Ethernet ports, 2 serial ports)
andedsg	1050	ANH-8 (2 Ethernet ports, 2 serial ports) and an 8-port Ethernet hub active for the first Ethernet port
andedsh	1035	ANH-12 (2 Ethernet ports, 2 serial ports) and a 12-port Ethernet hub
andedst	1034	AN-ENET (2 Ethernet ports, 2 serial ports, 1 token ring port)
andst	1037	AN-TOKEN (2 serial ports, 1 token ring port)
andstc	1091	AN-TOKEN with CSU/DSU (2 serial ports, 1 token ring port)
andsti	1038	AN-TOKEN with ISDN (2 serial ports, 1 token ring port)
ansdsedst	1041	AN-ENET/TOKEN (1 Ethernet port, 2 serial ports, 1 token ring port)
anseds	1024	AN-ENET (1 Ethernet port, 2 serial ports) with 16 MB DRAM
ansedsc	1090	AN-ENET with CSU/DSU (2 Ethernet ports, 2 serial ports)
ansedsf	1100	AN-ENET with T1/FT1 (2 Ethernet ports, 2 serial ports)

(continued)

Table G-1. BCC Board Types: AN and ANH Modules *(continued)*

BCC Board Type	Technician Interface or MIB Module ID	Description
ansedsg	1047	ANH-8 (1 Ethernet port, 2 serial ports) and an 8-port Ethernet hub
ansedsgc	1094	ANH-8 with CSU/DSU (1 Ethernet port, 2 serial ports) and an 8-port Ethernet hub
ansedsgf	1108	ANH-8 with T1/FT1 (1 Ethernet port, 2 serial ports) and an 8-port Ethernet hub
ansedsgi	1051	ANH-8 with ISDN (1 Ethernet port, 2 serial ports) and an 8-port Ethernet hub
ansedsgj	1127	AN-ENET (1 Ethernet port, 2 serial ports, 1 fractional E1 port) and an 8-port Ethernet hub
ansedsgjx	1137	AN-ENET (1 Ethernet port, 2 serial ports, 1 fractional E1 port) and an 8-port Ethernet hub and DCM
ansedsgx	1048	ANH-8 with DCM (1 Ethernet port, 2 serial ports) and an 8-port Ethernet hub
ansedsh	1026	ANH-12 (1 Ethernet port, 2 serial ports) and a 12-port Ethernet hub
ansedshc	1093	ANH-12 with CSU/DSU (1 Ethernet port, 2 serial ports) and a 12-port Ethernet hub
ansedshf	1106	ANH-12 with T1/FT1 (1 Ethernet port, 2 serial ports) and a 12-port Ethernet hub
ansedshi	1029	ANH-12 with ISDN (1 Ethernet port, 2 serial ports) and a 12-port Ethernet hub
ansedshj	1125	AN-ENET (1 Ethernet port, 2 serial ports, 1 fractional E1 port) and a 12-port Ethernet hub
ansedshjx	1136	AN-ENET (1 Ethernet port, 2 serial ports, 1 fractional E1 port) and a 12-port Ethernet hub and DCM
ansedsi	1027	AN-ENET with ISDN (2 Ethernet ports, 2 serial ports) with 16 MB DRAM
ansedsj	1119	AN-ENET (1 Ethernet port, 2 serial ports, 1 fractional E1 port) with 16 MB DRAM
ansedsjx	1133	AN-ENET (1 Ethernet port, 2 serial ports, 1 fractional E1 port) with 16 MB DRAM and DCM

(continued)

Table G-1. BCC Board Types: AN and ANH Modules *(continued)*

BCC Board Type	Technician Interface or MIB Module ID	Description
ansedst	1025	AN-ENET/TOKEN (1 Ethernet port, 2 serial ports, 1 token ring port) with 16 MB DRAM
ansedstc	1092	AN-ENET/TOKEN with CSU/DSU (1 Ethernet port, 2 serial ports, 1 token ring port)
ansedsti	1028	AN-ENET/TOKEN with ISDN (1 Ethernet port, 2 serial ports, 1 token ring port)
ansedstj	1123	AN-ENET (1 Ethernet port, 2 serial ports, 3 fractional E1 ports) with 16 MB DRAM
ansedstjx	1135	AN-ENET (1 Ethernet port, 2 serial ports, 3 fractional E1 ports) with 16 MB DRAM and DCM
ansedstx	1058	AN-ENET/TOKEN with DCM (1 Ethernet port, 2 serial ports, 1 token ring port) with 16 MB DRAM
ansedsx	1055	AN-ENET with DCM (2 Ethernet ports, 2 serial ports)
ansets	1030	AN-ENET (1 Ethernet port, 3 serial ports) with 16 MB DRAM
ansetsg	1049	ANH-8 (1 Ethernet port, 3 serial ports) and an 8-port Ethernet hub
ansetsh	1032	ANH-12 (1 Ethernet port, 3 serial ports) and a 12-port Ethernet hub
ansetst	1031	AN-ETS (1 Ethernet port, 3 serial ports, 1 token ring port)
antst	1039	AN-TOKEN (3 serial ports, 1 token ring port)

ARN Board Types

[Table 2](#) lists the ARN board types.

Table G-2. BCC Board Types: ARN Modules

BCC Board Type	Technician Interface or MIB Module ID	Description
arn7sync	8873	ARN Seven-Port Serial Expansion Module
arndcsu	8768	ARN 56/64K DSU/CSU Adapter Module
arne7sync	8872	ARN Seven-Port Serial Expansion Module, with 1 Ethernet Port
arnentsync	8864	ARN Ethernet and Tri-Serial Expansion Module
arnfe1	8780	E1/FE1 DSU/CSU Adapter Module
arnft1	8776	T1/FT1 DSU/CSU Adapter Module
arnis	8784	ARN ISDN BRI S/T Adapter Module
arnisdnu	8800	ARN ISDN BRI U Adapter Module
arnmbenx10	8896	ARN Ethernet Base Module xxMB DRAM with DCM
arnmbsen	8720	ARN Ethernet Base Module with 0, 4, 8, 16, or 32 DRAM
arbnbsfetx	8728	ARN 10/100BASE-TX Ethernet Module
arnmbsfefx	8729	ARN 100BASE-FX Ethernet Module
arnmbstr	8704	ARN Token Ring Base Module with 0, 8, 16, or 32 MB DRAM
arnpbenx10	8928	ARN Ethernet Expansion Module with DCM
arnpbtenx10	8960	ARN Ethernet and Tri-Serial Expansion Module with DCM
arnsenet	8832	ARN Ethernet Port Expansion Module
arnssync	8736	ARN Serial Adapter Module
arnstkrq	8816	ARN Token Ring Expansion Module
arntrtsync	8880	ARN Token Ring and Tri-Serial Expansion Module
arntsync	8848	ARN Tri-Serial Port Expansion Module
arnvoice	8890	ARN Voice Expansion Module
arnvoicedsync	8891	ARN Voice/Dual Sync Expansion Module

ASN Board Types

[Table 3](#) lists the ASN board types.

Table G-3. BCC Board Types: ASN Modules

BCC Board Type	Technician Interface or MIB Module ID	Description
asnbri	2560	Quad BRI Net Module
denm	1280	Dual Port Ethernet Net Module
dmct1nm	2944	Dual Port MCT1 Net Module
dsnm1n	1540	Dual Port Synchronous Net Module
dsnm1nisdn	1588	ISDN BRI/Dual Sync Net Module
dtnm	2048	Dual Port Token Ring Net Module
mce1nm	2816	MCE1 Net Module
mmasmbdas	1833	Hybrid PHY B FDDI Net Module
mmfsddas	1793	Multimode FDDI Net Module
qsyncm	1664	Quad Port Synchronous Net Module
se100nm	2304	100BASE-T Ethernet Net Module
shssinm	3584	HSSI Net Module
smammbdas	1825	Hybrid PHY A FDDI Net Module
smfsddas	1801	Single Mode FDDI Net Module
spex	512	SPEX Net Module
spexhsd	769	SPEX Hot Swap Net Module

BLN and BCN Board Types

[Table 4](#) lists the BLN and BCN board types.

Table G-4. BCC Board Types: BLN and BCN Modules

BCC Board Type	Technician Interface or MIB Module ID	Site Manager Model Number	Description
atmcds3	5120	AG13110115	ATM DS-3
atmce3	5121	AG13110114	ATM E3
atmcoc3mm	4608	AG13110112	ATM STS-3/STM-1 MMF
atmcoc3sm	4609	AG13110113	ATM STS-3/STM-1 SMF
comp	4353	AG2104037	Octal Sync with 32-context compression daughterboard
comp128	4354	AG2104038	Octal Sync with 128-context compression daughterboard
de100	4864	50038	100BASE-T Ethernet
dst416	40	5740	Dual Sync with token ring
dtok	176	5710	Dual token ring
enet3	132	5505	Dual Ethernet
esaf	236	5531	Dual Sync Dual Ethernet with 2-CAM filters
		5532	Dual Sync Dual Ethernet with 6-CAM filters
esafnf	232	5431	Dual Sync Dual Ethernet without hardware filters
gigenet	6400		Gigabit Ethernet-SX link module
gigenetlx	6401		Gigabit Ethernet-LX link module
mce1ii120	190	AG2111002	120-ohm Dual Port Multichannel E1 (MCE1-II) for ISDN PRI and Leased Line
mce1ii75	188	AG2111004	75-ohm Dual Port Multichannel E1 (MCE1-II) for 75-ohm Leased Line
mct1	168	5945	Dual Port MCT1
osync	4352	5008	Octal Sync
qef	164	5950	Quad Ethernet with hardware filters
qenf	162	5450	Quad Ethernet without hardware filters

(continued)

Table G-4. BCC Board Types: BLN and BCN Modules *(continued)*

BCC Board Type	Technician Interface or MIB Module ID	Site Manager Model Number	Description
qmct1db15	5377	AG2111007	Quad Port MCT1 DB15
qmct1ds0a	5378	AG2104052	Quad Port MCT1 DB15 with DS0A
qtok	256	50021	Quad token ring
shssi	225	5295	HSSI
smce1ii120	191	AG2111001	120-ohm Single Port Multichannel E1 (MCE1-II) for ISDN PRI and Leased Line
smce1ii75	189	AG2111003	75-ohm Single Port Multichannel E1 (MCE1-II) for 75-ohm Leased Line
smct1	169	5944	Single Port MCT1
sqe100	6144		Quad 100BASE-TX link module
sqe100fx	6145		Quad 100BASE-FX link module
sse	118	5410	Single Sync with Ethernet
sync	80	5280	Quad Sync
wffddi1m	193	5943	Hybrid FDDI with single mode on connector B
wffddi1mf	197	5949	Hybrid FDDI with single mode on connector B and with hardware filters
wffddi1s	195	5942	Hybrid FDDI with single mode on connector A
wffddi1sf	199	5948	Hybrid FDDI with single mode on connector A and with hardware filters
wffddi2m	192	5930	Multimode FDDI
wffddi2mf	196	5946	Multimode FDDI with hardware filters
wffddi2s	194	5940	Single Mode FDDI
wffddi2sf	198	5947	Single Mode FDDI with hardware filters

Passport 2430 Board Types

[Table 5](#) lists the Passport 2430 board types.

Table G-5. BCC Board Types: Passport 2430 Modules

BCC Board Type	Technician Interface or MIB Module ID	Description
arndcsu	8768	56/64K DSU/CSU Module
arnfe1	8780	E1/FE1 DSU/CSU Adapter Module
arnft1	8776	T1/FT1 DSU/CSU Adapter Module
arnisdns	8784	ARN ISDN BRI S/T Adapter Module
arnisdnu	8800	ARN ISDN BRI U Adapter Module
arnmbsfetx	8728	ARN 10/100BASE-TX Ethernet Module
arnssync	8736	ARN Serial Adapter Module
arnv34	8752	ARN V34 Modem Module

Passport 5430 Board Types

[Table 6](#) lists the Passport 5430 board types.

Table G-6. BCC Board Types: Passport 5430 Modules

BCC Board Type	Technician Interface or MIB Module ID	Description
arndcsu	8768	56/64K DSU/CSU Module <i>(not supported)</i>
arnfe1	8780	E1/FE1 DSU/CSU Adapter Module
arnft1	8776	T1/FT1 DSU/CSU Adapter Module
arnisdns	8784	ARN ISDN BRI S/T Adapter Module
arnisdnu	8800	ARN ISDN BRI U Adapter Module
arnssync	8736	ARN Serial Adapter Module
arnv34	8752	ARN V34 Modem Module
fbrmbfen	8000	FBR Ethernet Module
fvoipt1e1pmc	8501	FBR Voice/Dual T1/E1 Module

System 5000 Board Types

[Table 7](#) lists the System 5000 board types.

Table G-7. BCC Board Types: System 5000 Modules

BCC Board Type	Technician Interface or MIB Module ID	Description
asnbri	2560	Router Quad Port ISDN BRI Net Module
atm5000bh	524544	Centillion Multiprotocol Engine
denm	1280	Router Dual Ethernet Net Module
dmct1nm	2944	Router Dual Port MCT1 Net Module
dsnm1n	1540	Router Dual Synchronous Net Module
dtnm	2048	Router Dual Token Ring Net Module
iqe	1408	5380 Ethernet Router Module
iqtok	2176	5580 Token Ring Router Module
mce1nm	2816	Router MCE1 Net Module
mmasmbdas	1833	Router Hybrid PHY B FDDI Net Module
mmfsddas	1793	Router Multimode FDDI Net Module
qsyncnm	1664	Router Quad Port Synchronous Net Module
se100nm	2304	Router 100BASE-T Ethernet Net Module
shssinm	3584	Router HSSI Net Module
smammbdas	1825	Router Hybrid PHY A FDDI Net Module
smfsddas	1801	Router Single Mode FDDI Net Module

A

acronyms, xvi

B

backplane hardware, D-7

BCC (Bay Command Console)

- accessing, 2-2

- command files, 3-13

- commands

 - entering, 3-2

 - show, D-1

 - system, B-1

- configuration cycle, 4-4

- defined, 1-2

- Help, 2-28, B-5

- platform requirements, 1-3

- terminology and concepts, 1-8

BCC console slot election

- customizing, F-2

- disabling, F-3

- error message, F-4

- reenabling, F-3

board, defined, 1-9

bootstrap PROM, revision date, D-8

box-wide objects, 1-8

buffers, system, D-13

C

class, defined, 1-8

command completion, 3-3

command line, continuing, 3-5

commands

- ?, 2-28

- back, 2-4

- config, 1-2

- configuration, 3-6

- continuing, 3-5

- editing, 3-3

- entering, 3-1

- help, 2-28

- pwc, 2-4

- show console, D-4

- show hardware, D-7

- show process, D-10

- show system, D-13

- source, 3-15

- system, B-1

connector, defined, 1-10

console subcommands, D-4

context

- changing, 2-4

- defined, 1-6

- displaying, 2-4

conventions, text, xiv

customer support, xviii

D

delete command, 3-12, 4-17

derived parameters, defined, 1-11

diagnostics PROM, revision date, D-8

disable command, 3-12, 4-15

E

editing commands, 3-3

enable command, 3-12, 4-16

entering the BCC, 2-2

exiting the BCC, 2-2

G

global objects, defined, 1-8

H

hardware information, D-7

Help commands, 2-28, B-5

history buffer, 3-2

I

image, software, D-7

instance identifier, 1-8, 2-7

interface, defined, 1-11

L

line, defined, 1-10

location in configuration hierarchy, 2-4

login privileges and procedures, 2-2

M

manager/user privilege levels, 2-3

memory

- hardware, D-8

- system, D-14

multilevel access

- access object, A-5

- audit object, A-8

- configuring, A-4

- disabling or deleting, A-8

- group object, A-7

- lock messages, A-9

- login, A-2

- privileges, A-3

- profiles, A-4

- security, A-4

- user object, A-6

N

navigating

- using configuration commands, 2-5

- using the back command, 2-4

new configuration, creating, 4-2

O

objects

- defined, 1-8

- deleting, 4-17

- disabling, 4-15

- enabling, 4-16

online Help, BCC, 2-28

optional parameters, defined, 1-11

P

parameters

- defined, 1-11

- specifying values for, 3-9

path, specifying, 2-7, 2-8

port, defined, 1-10

privilege levels, manager/user, 2-3

product support, xviii

PROM information, hardware, D-8

protocols, show system command, D-14

publications, hard copy, xvii

pwc command, 2-4

R

reading commands from a file, 3-15

recalling commands, 3-2

required, 3-7

required parameters, defined, 1-11

S

- saving configuration commands, 3-13
- serial port
 - configuration, D-4
 - error statistics, D-6
- show commands
 - access, D-2
 - console, D-4
 - hardware, D-7
 - process, D-10
 - system, D-13
 - tcp, D-2
- slot, defined, 1-10
- slots, hardware, D-8
- source command, 3-15
- specifying a path, 2-7, 2-8
- statistics, console, D-6
- support, Nortel Networks, xviii
- syntax, configuration commands, 3-6, E-1
- system information, D-14

T

- TCL support, C-1
- technical publications, xvii
- technical support, xviii
- Technician Interface, 2-2
- text conventions, xiv

U

- user privileges, 2-3