

BTS3900 GSM V300R008

Site Maintenance Terminal User Guide

Issue 03

Date 2008-07-15

Part Number

Huawei Technologies Co., Ltd. provides customers with comprehensive technical support and service. For any assistance, please contact our local office or company headquarters.

Huawei Technologies Co., Ltd.

Address: Huawei Industrial Base

Bantian, Longgang Shenzhen 518129

People's Republic of China

Website: http://www.huawei.com
Email: support@huawei.com

Copyright © Huawei Technologies Co., Ltd. 2008. All rights reserved.

No part of this document may be reproduced or transmitted in any form or by any means without prior written consent of Huawei Technologies Co., Ltd.

Trademarks and Permissions

HUAWEI and other Huawei trademarks are the property of Huawei Technologies Co., Ltd.

All other trademarks and trade names mentioned in this document are the property of their respective holders.

Notice

The information in this document is subject to change without notice. Every effort has been made in the preparation of this document to ensure accuracy of the contents, but the statements, information, and recommendations in this document do not constitute a warranty of any kind, express or implied.

Contents

About This Document	1
1 Introduction to the Site Maintenance Terminal	1-1
1.1 Definitions Related to the Site Maintenance Terminal	1-2
1.2 Logical Objects of the BTS	1-2
1.3 Software Window of the Site Maintenance Terminal System	1-3
2 Getting Started with the Site Maintenance Terminal	2-1
2.1 Configuration Requirements for the Site Maintenance Terminal PC	2-2
2.2 Starting the Site Maintenance Terminal System	2-3
2.2.1 Setting the IP Address of the Site Maintenance Terminal PC	2-3
2.2.2 Connecting the Site Maintenance Terminal PC to the BTS	2-4
2.2.3 Locally Logging In to the BTS	2-4
2.3 Exiting the Site Maintenance Terminal.	2-6
3 Using the Site Management Rights	3-1
3.1 Site Management Rights	3-2
3.2 Obtaining the Site Management Rights	3-2
3.3 Releasing the Site Management Rights	3-3
4 Managing Sites	4-1
4.1 Viewing Site Resources.	4-3
4.2 Forcibly Loading Software	4-4
4.3 Activating Software	4-5
4.4 Resetting a Site Hierarchically.	4-8
4.5 Monitoring Environment.	4-9
4.6 Testing Transport Performance.	4-11
4.7 Querying Alarm Delay Time	4-13
4.8 Testing the RF Specifications.	4-14
4.9 Querying the Ring Topology Parameters	4-16
4.10 Viewing the Bar Codes.	4-17
4.11 Managing the Site Board Parameters	4-19
4.12 Testing the E1 BER.	4-20
4.13 Managing the RET Antenna.	4-21
5 Managing Cells	5-1

5.1 Managing Cell Attributes	5-2
5.2 Managing Cell Extended Attributes	
5.3 Changing the Cell Management State	
5.4 Performing the Cell Performance Test.	5-8
6 Managing BTs	6-1
6.1 Changing the BT Management State	
6.2 Re-Initializing a BT	6-3
6.3 Performing BT Tests	6-4
6.4 Viewing the Channel Status	6-4
6.5 Setting the TRX Full Power Emission.	6-5
7 Managing RCs	7-1
7.1 Managing RC Attributes	7-2
7.2 Managing RC Extended Attributes	7-3
7.3 Changing the RC Management State	7-5
7.4 Re-Initializing an RC	7-6
7.5 Obtaining the RC Power Mode	7-7
7.6 Obtaining the Auto Power Adjustment Type	7-8
8 Managing Channels	8-1
8.1 Managing Channel Attributes	
8.2 Changing the Channel Management State	8-3
8.3 Performing the Loopback Test	8-4
9 BBU Operations	9-1
9.1 Configuring a Board	
9.2 Querying Board Information.	
9.3 Querying Board Extended Information.	
9.4 Resetting a board	9-7
9.5 Resetting a Board in Power-Off Mode	9-8
9.6 Testing a Board	9-10
9.7 Setting the BTS Clock	9-11
9.8 Performing Loopback Test of Board Communication Links	9-13
9.9 Querying Board Alarms	9-15
9.10 Querying Board Parameters.	9-17
9.11 Querying Port Attributes	9-18
10 DRFU Operations	10-1
10.1 Viewing Board Information	10-3
10.2 Viewing Board Extended Information	
10.3 Resetting a Board in Power-Off Mode	10-7
10.4 Resetting a Board	10-9
10.5 Starting a Board	10-12
10.6 Testing a Board.	10-14

10.7 Changing the Board Management State	10-16
10.8 Performing Loopback Test on Board Communication Links	10-19
10.9 Viewing Board Alarms	10-22
10.10 Viewing Board Parameters.	10-24
10.11 Setting the Antenna Mode	10-28
11 DRFU Configuration	11-1
11.1 Adding a DRFU	11-2
11.2 Deleting a DRFU	11-4
11.3 Adding a Ring	11-6
11.4 Dividing a Ring	11-8
11.5 Displaying In-Position Boards	11-10
11.6 Detecting In-Position Boards	11-11
11.7 Setting a Breakpoint	11-13
11.8 Canceling a Breakpoint.	11-15

Figures

Figure 1-1 Logical structure of a B1S	1-2
Figure 1-2 Site Maintenance Terminal System Software Window	1-3
Figure 2-1 Communication failed dialog box	2-5
Figure 2-2 Site Maintenance Terminal System window	2-5
Figure 2-3 Set Communication Port Parameter dialog box	2-6
Figure 3-1 Site Management Right dialog box	3-3
Figure 3-2 Site Management Right dialog box	3-4
Figure 4-1 View Resource dialog box	4-3
Figure 4-2 Software Download dialog box	4-5
Figure 4-3 Software Activation dialog box	4-7
Figure 4-4 Software Activation dialog box.	4-7
Figure 4-5 Site Reset Hierarchically dialog box.	4-9
Figure 4-6 Environment Monitor dialog box	4-11
Figure 4-7 Transport Performance Test dialog box	4-13
Figure 4-8 Query Warn Delay Time dialog box	4-14
Figure 4-9 RF Specification Test window.	4-16
Figure 4-10 Ring Topology Parameter Query dialog box	4-17
Figure 4-11 Bar Code Query dialog box	4-18
Figure 4-12 Site Board Parameter Management dialog box	4-19
Figure 4-13 Site Board Parameter Management dialog box	4-20
Figure 4-14 E1 BER Test dialog box	4-21
Figure 4-15 RET Antenna Manage dialog box	4-22
Figure 5-1 Cell Attributes Management dialog box	5-4
Figure 5-2 Cell Extended Attributes Management dialog box	5-6
Figure 5-3 Change Cell Management State dialog box	5-7
Figure 5-4 Cell Test dialog box	5-8
Figure 6-1 Change BT Management State dialog box	6-2
Figure 6-2 BT Reinitialization dialog box	6-3
Figure 6-3 BT Loop Test dialog box	6-4
Figure 6-4 View Channel State dialog box	6-5
Figure 6-5 TRX Full Power Emission dialog box	6-6
Figure 7-1 RC Attributes Management dialog box.	7-3
Figure 7-2 RC Extended Attributes Management dialog box	7-4

Figure 7-3 Change RC Management State dialog box	7-6
Figure 7-4 RC Reinitialization dialog box	7-7
Figure 7-5 Get RC Power Mode dialog box	7-7
Figure 7-6 Get Auto Power Adjustment Type dialog box	7-8
Figure 8-1 Channel Attributes Management dialog box	8-3
Figure 8-2 Change Channel Management State dialog box	8-4
Figure 8-3 Channel Loop Test dialog box	8-6
Figure 9-1 Board Configuration window.	9-4
Figure 9-2 Board Management window.	9-5
Figure 9-3 Board Information dialog box	9-5
Figure 9-4 Board Management window.	9-6
Figure 9-5 Board Extended Information dialog box	9-7
Figure 9-6 Board Management window.	9-8
Figure 9-7 Board Reset window.	9-8
Figure 9-8 Board Management window.	9-9
Figure 9-9 Board Reset window.	9-10
Figure 9-10 Board Management window.	9-10
Figure 9-11 Board Test dialog box	9-11
Figure 9-12 Board Management window.	9-12
Figure 9-13 Clock Setup dialog box	9-13
Figure 9-14 Board Management window.	9-14
Figure 9-15 Loop Test dialog box	9-15
Figure 9-16 Board Management window.	9-16
Figure 9-17 Board Alarm Information dialog box	9-16
Figure 9-18 Board Management window.	9-17
Figure 9-19 Parameter Management dialog box	9-18
Figure 9-20 Board Management window.	9-19
Figure 9-21 GTMU port property window	9-19
Figure 10-1 Board Management window.	10-3
Figure 10-2 Topology Management window	10-4
Figure 10-3 Board information.	10-4
Figure 10-4 Board Management window.	10-5
Figure 10-5 Topology Management window	10-6
Figure 10-6 Board Extended Information dialog box	10-6
Figure 10-7 Board Management window.	10-7
Figure 10-8 Topology Management window	10-8
Figure 10-9 Choosing Power Off Reset.	10-8
Figure 10-10 Board Reset window	10-9
Figure 10-11 Board Management window	10-10
Figure 10-12 Topology Management window	10-10
Figure 10-13 Choosing Reset	10-11
Figure 10-14 Board Reset window.	10-11

Figure 10-15 Reset dialog box	10-11
Figure 10-16 Board Management window.	10-12
Figure 10-17 Topology Management window.	10-13
Figure 10-18 Choosing Opstart.	10-13
Figure 10-19 Opstart dialog box.	10-14
Figure 10-20 Board Management window.	10-14
Figure 10-21 Topology Management window	10-15
Figure 10-22 Choosing the path to be tested.	10-15
Figure 10-23 Board Test dialog box	10-16
Figure 10-24 Board Management window.	10-16
Figure 10-25 Topology Management window	10-17
Figure 10-26 Choosing Management state	10-17
Figure 10-27 LOCKED dialog box	10-18
Figure 10-28 UNLOCKED dialog box	10-18
Figure 10-29 Choosing Management state.	10-19
Figure 10-30 Channel0LOCKED dialog box	10-19
Figure 10-31 Board Management window.	10-20
Figure 10-32 Topology Management window	10-21
Figure 10-33 Choosing Loop Test.	10-21
Figure 10-34 Loop Test dialog box	10-22
Figure 10-35 Board Management window.	10-23
Figure 10-36 Topology Management window	10-23
Figure 10-37 Board Alarm Information dialog box	10-24
Figure 10-38 Board Management window.	10-25
Figure 10-39 Topology Management window.	10-25
Figure 10-40 Choosing Parameter Management	10-26
Figure 10-41 Viewing the operational parameters	10-26
Figure 10-42 Viewing the configuration parameters	10-27
Figure 10-43 Setting the parameters.	10-27
Figure 10-44 Viewing the operational parameters of a path	10-28
Figure 10-45 Board Management window.	10-29
Figure 10-46 Topology Management window	10-29
Figure 10-47 Choosing Set Antenna Mode	10-30
Figure 10-48 Set Antenna Mode window.	10-30
Figure 11-1 Board Configuration window	11-2
Figure 11-2 Topology Configuration window	11-3
Figure 11-3 Deploy DRRU window	11-3
Figure 11-4 Deploy DRRU window	11-4
Figure 11-5 Topology Configuration window	11-4
Figure 11-6 Board Configuration window	11-5
Figure 11-7 Topology Configuration window	11-5
Figure 11-8 Delete DRRII window	11-6

Figure 11-9 Board Configuration window	11-7
Figure 11-10 Topology Configuration window.	11-7
Figure 11-11 Add Ring window.	11-8
Figure 11-12 Board Configuration window.	11-9
Figure 11-13 Topology Configuration window	11-9
Figure 11-14 Divide Ring window.	11-10
Figure 11-15 Board Management window	11-11
Figure 11-16 Board Management window	11-12
Figure 11-17 Topology Management window.	11-12
Figure 11-18 On-Site Topology Management window	11-13
Figure 11-19 Board Management window	11-14
Figure 11-20 Topology Management window.	11-14
Figure 11-21 Choosing Set Breakpoint	11-15
Figure 11-22 Board Management window	11-16
Figure 11-23 Topology Management window.	11-16
Figure 11-24 Choosing Cancel Breakpoint	11-17

Tables

Table 2-1 Hardware requirements.	2-2
Table 2-2 Software requirements.	2-2
Table 4-1 Parameters available in the Software Download dialog box.	4-4
Table 4-2 Parameters in the Software Activation dialog box.	4-6
Table 4-3 Parameters in the Site Reset Hierarchically dialog box.	4-8
Table 4-4 Parameters in the Environment Monitor dialog box.	4-10
Table 4-5 Parameters in the Transport Performance Test dialog box.	4-12
Table 5-1 Parameters in the Cell Attributes Management dialog box.	5-2
Table 5-2 Parameters in the Cell Extended Attributes Management dialog box	5-5
Table 7-1 Parameters in the RC Attributes Management dialog box	7-2
Table 7-2 Parameters in the RC Extended Attribute Management dialog box.	7-4
Table 8-1 Parameters in the Channel Attributes Management dialog box	8-2
Table 8-2 Parameters in the Cell Extended Attributes Management dialog box	8-5
Table 9-1 Parameters in the Clock Setup dialog box	9-11
Table 9-2 Parameters in the Loopback Test dialog box	9-14
Table 10-1 Parameters in the Loop Test dialog box	10-20

About This Document

Purpose

This document describes the procedures for installing the BTS3900 GSM Site Maintenance Terminal. It also describes the functions and interfaces of the different parts of the BTS3900 GSM Site Maintenance Terminal. In addition, it provides instructions for common BTS3900 GSM operations.

Product Version

The following table lists the product version related to this document.

Product Name	Version
BTS3900 GSM (referred to as BTS3900 in this manual)	V300R008

Intended Audience

This guide is intended for the engineers who maintain the BTS through the site maintenance terminal. The engineers should have a basic knowledge of radio communication and IP technologies, and be familiar with Windows operations and the BTS. This document is intended for:

- System engineers
- Field engineers
- Shift operators
- Network operators

Change History

For changes in the document, refer to Changes in BTS3900 GSM Site Maintenance Terminal User Guide.

Organization

1 Introduction to the Site Maintenance Terminal

This describes the definitions, functions, logical objects, and software window of the Site Maintenance Terminal. The Site Maintenance Terminal is used to commission, maintain, and troubleshoot a BTS.

2 Getting Started with the Site Maintenance Terminal

This describes how to connect the Site Maintenance Terminal PC to the BTS, log in to the Site Maintenance Terminal System, and exit the Site Maintenance Terminal, after the Site Maintenance Terminal application is installed.

3 Using the Site Management Rights

The operations of the site management rights involve obtaining the site management rights and releasing the site management rights.

4 Managing Sites

The site management involves viewing site resources, querying the delay in reporting board alarms, resetting the BTS, testing whether the boards in a site operate normally and whether the connection of transmit links is normal, monitoring and managing the environment parameters in a site, viewing the board parameters of the BTS, testing the RF specifications, and viewing the settings of parameters in a ring network and the bar codes of a site.

5 Managing Cells

The cell management involves managing cell attributes and cell extended attributes, testing all the BTs and RCs of a cell so that they can be locked or unlocked, and checking whether the BTs and RCs are functional.

6 Managing BTs

The BT management involves locking or unlocking a BT, resetting a BT, performing the RC self-test, view the status of the channels on a specified BT, and enabling a specified RC to transmit signals at a predefined power level.

7 Managing RCs

The RC management involves setting the attributes and extended attributes of an RC, locking or unlocking an RC, resetting an RC, and adjusting power of an RC automatically.

8 Managing Channels

The channel management involves viewing and setting channel attributes, locking or unlocking a channel, and checking the quality of a channel by testing the parameters such as the bit error ratio (BER) and transmit power.

9 BBU Operations

The BBU operations involve the query, configuration, and test operations associated with the BBU. You can query the board settings, board information, board extended information, board alarms, and port attributes. You can also perform operations such as board reset, power-off reset, self-test, clock configuration, loopback test, and parameter management.

10 DRFU Operations

DRFU operations include the viewing, setting and testing of the DRFU parameters. You can view the board information, board extended information, and board alarms. You can also perform operations such as the board reset, power-off reset, operation start, self-test, loopback test, parameter management, and antenna mode configuration.

11 DRFU Configuration

This describes how to perform various operations on the DRFU based on the actual requirement, such as adding or deleting an DRFU, adding or removing a ring, displaying in-position boards, detecting in-position boards, setting and canceling a breakpoint.

Conventions

1. Symbol Conventions

The following symbols may be found in this document. They are defined as follows

Symbol	Description
DANGER	Indicates a hazard with a high level of risk that, if not avoided, will result in death or serious injury.
WARNING	Indicates a hazard with a medium or low level of risk which, if not avoided, could result in minor or moderate injury.
A CAUTION	Indicates a potentially hazardous situation that, if not avoided, could cause equipment damage, data loss, and performance degradation, or unexpected results.
©=" TIP	Indicates a tip that may help you solve a problem or save your time.
□ NOTE	Provides additional information to emphasize or supplement important points of the main text.

2. General Conventions

Convention	Description	
Times New Roman	Normal paragraphs are in Times New Roman.	
Boldface	Names of files, directories, folders, and users are in boldface . For example, log in as user root .	
Italic	Book titles are in <i>italics</i> .	
Courier New	Terminal display is in Courier New.	

3. Command Conventions

Convention	Description	
Boldface	The keywords of a command line are in boldface .	
Italic	Command arguments are in <i>italic</i> .	
[]	Items (keywords or arguments) in square brackets [] are optional.	
{x y }	Alternative items are grouped in braces and separated by vertical bars. One is selected.	
[x y]	Optional alternative items are grouped in square brackets and separated by vertical bars. One or none is selected.	

Convention	Description	
{ x y } *	Alternative items are grouped in braces and separated by vertical bars. A minimum of one or a maximum of all can be selected.	
[x y]*	Alternative items are grouped in braces and separated by vertical bars. A minimum of zero or a maximum of all can be selected.	

4. GUI Conventions

Convention	Description	
Boldface	Buttons,menus,parameters,tabs,window,and dialog titles are in boldface . For example,click OK .	
>	Multi-level menus are in boldface and separated by the ">" signs. For example, choose File > Create > Folder .	

5. Keyboard Operation

Convention	Description	
Key	Press the key. For example, press Enter and press Tab .	
Key1+Key2	Press the keys concurrently.For example,pressing Ctrl+Alt+A means the three keys should be pressed concurrently.	
Key1,Key2	Press the keys in turn.For example,pressing Alt,A means the two keys should be pressed in turn.	

6. Mouse Operation

Action	Description	
Click	Select and release the primary mouse button without moving the pointer.	
Double-click	Press the primary mouse button twice continuously and quick without moving the pointer.	
Drag	Press and hold the primary mouse button and move the pointer to a certain position.	

Introduction to the Site Maintenance Terminal

About This Chapter

This describes the definitions, functions, logical objects, and software window of the Site Maintenance Terminal. The Site Maintenance Terminal is used to commission, maintain, and troubleshoot a BTS.

The Site Maintenance Terminal provides a graphical user interface (GUI) for operation and maintenance.

1.1 Definitions Related to the Site Maintenance Terminal

This describes the difference between the Site Maintenance Terminal, Site Maintenance Terminal PC, and Site Maintenance Terminal application.

1.2 Logical Objects of the BTS

This describes the logical objects of the BTS. Different logical objects are maintained in different ways.

1.3 Software Window of the Site Maintenance Terminal System

The Site Maintenance Terminal System software window consists of the navigation pane, browse pane, and status pane.

1.1 Definitions Related to the Site Maintenance Terminal

This describes the difference between the Site Maintenance Terminal, Site Maintenance Terminal PC, and Site Maintenance Terminal application.

Site Maintenance Terminal

The Site Maintenance Terminal is a logical concept. It refers to a maintenance terminal installed with the Site Maintenance Terminal software package and connected to the OM network of the BTSs. Through the Site Maintenance Terminal, you can operate and maintain the BTSs.

Site Maintenance Terminal PC

The Site Maintenance Terminal PC is a hardware concept. It refers to the computer on which the Site Maintenance Terminal software package is installed.

Site Maintenance Terminal Application


The Site Maintenance Terminal application is installed on a Site Maintenance Terminal PC. It refers to the Huawei Site Maintenance Terminal software package.

1.2 Logical Objects of the BTS

This describes the logical objects of the BTS. Different logical objects are maintained in different ways.

The logical objects consist of the sites, cells, baseband (BTs), channels (CHs), and TRXs (RCs), as shown in **Figure 1-1**.

Figure 1-1 Logical structure of a BTS

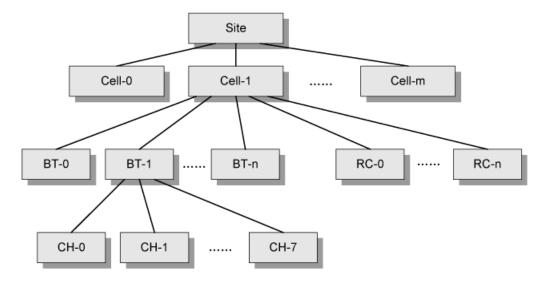

1.3 Software Window of the Site Maintenance Terminal System

The Site Maintenance Terminal System software window consists of the navigation pane, browse pane, and status pane.

The Site Maintenance Terminal System software window consists of the navigation pane, browse pane, and status pane, as shown in **Figure 1-2**.

BSite ■aintenance Terminal System Maintenance <u>U</u>ser <u>H</u>elp Function 🖰 Site Manage 🍋 вто 🖔 Site Opstart ⊆⊏ ChannelΩ 🎙 View Resource □ Channel1 🖰 Forced Software Load -=⊏ Channel2 🐣 Software Activation -=¤ Channel3 🐴 Site Reset Hierarchically ---□⊏ Channel4 🐴 Site Test Navigation View --□⊏ Channel5 🐴 Environment Monitor -=∞ Channel6 Pane 👋 Transmission Performance Test -⊃⊏ Channel7 将 Site Alarm Delay Time Query RC0 🐴 RF Specification Test Board = 🖔 Ring Topology Parameter Query 🐴 Bar Code Query 🔖 Site Board Parameter Management 👭 E1 BER Test 👋 RET Antenna Manage [18:14:08] Object type:GTMU Object No.:O Alarm level: Disappearance Alarm [18:14:08] Object type:DRRU Object No.:O Alarm level: Major Alarm ID:OXZE [18:14:08] Object type:GTMU Object No.:O Alarm level: Major Alarm ID:OXCE Communication is OK.

Status Pane

Figure 1-2 Site Maintenance Terminal System Software Window

2 Getting Started with the Site Maintenance Terminal

About This Chapter

This describes how to connect the Site Maintenance Terminal PC to the BTS, log in to the Site Maintenance Terminal System, and exit the Site Maintenance Terminal, after the Site Maintenance Terminal application is installed.

2.1 Configuration Requirements for the Site Maintenance Terminal PC

The Site Maintenance Terminal PC should meet the requirements for the configuration of hardware and software and for the communication capability.

2.2 Starting the Site Maintenance Terminal System

Before starting the Site Maintenance Terminal, firstly, set the IP address of the Site Maintenance Terminal PC; secondly, connect the Site Maintenance Terminal PC to the BTS; finally, log in to the Site Maintenance Terminal.

2.3 Exiting the Site Maintenance Terminal

If you exit the Site Maintenance Terminal, the connection between the Site Maintenance Terminal and the BTS is disrupted, and the Site Maintenance Terminal System window is closed.

2.1 Configuration Requirements for the Site Maintenance Terminal PC

The Site Maintenance Terminal PC should meet the requirements for the configuration of hardware and software and for the communication capability.

Hardware Requirements

Table 2-1 lists the hardware requirements for the installation of the Site Maintenance Terminal PC.

Table 2-1 Hardware requirements

Item	Quantity	Minimum Configuration
СРИ	1	PIII 866
RAM	1	256 MB
Hard disk	1	20 GB
Display adapter resolution	1	800×600
Ethernet adapter	1	10&100Mbps
CD drive	-	-
Other devices	3×1	Keyboard, mouse, modem

Software Requirements

Table 2-2 lists the software requirements for the installation of the Site Maintenance Terminal PC.

Table 2-2 Software requirements

Item	Recommended Configuration
Operating system	Microsoft Windows 98/2000/XP
Default language of the operating system	English (United States)
Web browser	Microsoft Internet Explorer 5.5 or later versions

Communications Capability Requirements

The Site Maintenance Terminal PC should support the TCP/IP protocol.

2.2 Starting the Site Maintenance Terminal System

Before starting the Site Maintenance Terminal, firstly, set the IP address of the Site Maintenance Terminal PC; secondly, connect the Site Maintenance Terminal PC to the BTS; finally, log in to the Site Maintenance Terminal.

- 1. 2.2.1 Setting the IP Address of the Site Maintenance Terminal PC This describes how to set the IP address of the Site Maintenance Terminal PC to the same network segment as the IP address (192.168.0.72/255.255.255.0) of the BTS.
- 2.2.2 Connecting the Site Maintenance Terminal PC to the BTS
 To operate and maintain the BTS on the Site Maintenance Terminal, the Site Maintenance
 Terminal PC should be connected to the ETH port on the main control module of the BTS
 using the crossover cable.
- 3. 2.2.3 Locally Logging In to the BTS
 You can run the Site Maintenance Terminal to directly log in to the BTS.

2.2.1 Setting the IP Address of the Site Maintenance Terminal PC

This describes how to set the IP address of the Site Maintenance Terminal PC to the same network segment as the IP address (192.168.0.72/255.255.255.0) of the BTS.

Prerequisite

The Site Maintenance Terminal PC is configured with the TCP/IP protocol.

Procedure

- **Step 1** Take the Windows XP operating system as an example. On the Windows XP operating system, choose **Start** > **Control Panel**.
- **Step 2** Select **Network Connections**. A dialog box is displayed. Right-click the **Local Area Connection** icon.
- **Step 3** Choose **Properties** on the shortcut menu,. The **Local Area Connection Properties** dialog box is displayed.
- Step 4 Select Internet Protocol (TCP/IP).
- **Step 5** Click **Properties**. The **Internet Protocol (TCP/IP) Properties** dialog box is displayed.
- Step 6 Select Use the following IP address.
- **Step 7** Enter the correct IP address, subnet mask, and default gateway. Ensure that the IP address of the Site Maintenance Terminal PC and the IP address (192.168.0.72/255.255.255.0) of the BTS are located in the same network segment, so that a local maintenance path can be set up.
- Step 8 Click OK to complete the setting.

----End

2.2.2 Connecting the Site Maintenance Terminal PC to the BTS

To operate and maintain the BTS on the Site Maintenance Terminal, the Site Maintenance Terminal PC should be connected to the ETH port on the main control module of the BTS using the crossover cable.

Prerequisite

The IP address and the subnet mask of the Site Maintenance Terminal PC are set. The IP address of the Site Maintenance Terminal PC and the IP address (192.168.0.72/255.255.255.0) of the BTS are on the same network segment.

Procedure

- **Step 1** Use the crossover cable to connect the Site Maintenance Terminal PC to the BTS. Connect one end of the cable to the ETH port on the main control module of the main cabinet, and connect the other end of the cable to the Ethernet cable port on the Site Maintenance Terminal PC.
- **Step 2** Open the command window.
 - If the operating system of the Site Maintenance Terminal PC is Windows 98, choose **Start** > **Program** > **MS-DOS Prompt**. The command window is displayed.
 - If the operating system of the Site Maintenance Terminal PC is Windows 2000/XP, choose Start > Run. In the Run dialog box, run the cmd command. The command window is displayed.
- Step 3 Run the ping target_name command to verify the network connection between the PC and the BTS

■ NOTE

target_name indicates the IP address of the BTS.

If the information similar to that in the following example is returned, the LMT PC and the GBAM can communicate normally. In this example, the IP address of the external network is 192.168.0.72.

Pinging 192.168.0.72 with 32 bytes of data: Pinging 192.168.0.72 with 32 bytes of data: Reply from 192.168.0.72: bytes=32 time=1ms TTL=253 Ping statistics for 192.168.0.72: Packets: Sent = 4, Received = 4, Lost = 0 (0% loss), Approximate round trip times in milli-seconds: Minimum = 1ms, Maximum = 1ms, Average = 1ms

----End

2.2.3 Locally Logging In to the BTS

You can run the Site Maintenance Terminal to directly log in to the BTS.

Prerequisite

- The Site Maintenance Terminal PC is connected properly to the BTS.
- The Site Maintenance Terminal PC is installed with the latest site maintenance terminal software.

Procedure

- **Step 1** Double-click **btsm.exe** to start the Site Maintenance Terminal System.
 - If the communication between the Site Maintenance Terminal PC and the BTS is not set up, the **Communication failed** dialog box is displayed, as shown in **Figure 2-1**. Go to **Step 2**.
 - If the communication between the Site Maintenance Terminal PC and the BTS is set up, a window is displayed, as shown in **Figure 2-2**. The Local Maintenance Terminal is successfully started.

Figure 2-1 Communication failed dialog box


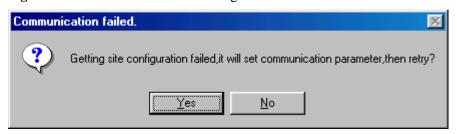


Figure 2-2 Site Maintenance Terminal System window

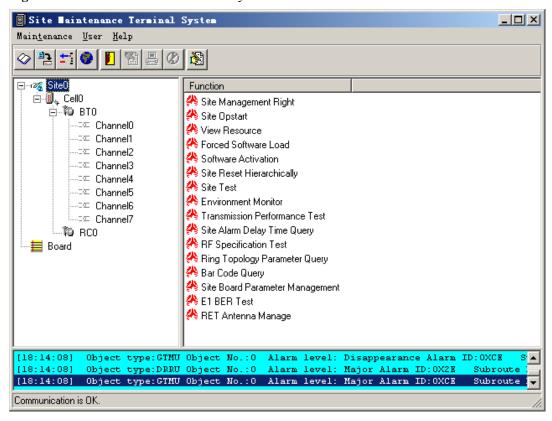

Step 2 Click Yes.

The **Set Communication Port Parameter** dialog box is displayed, as shown in **Figure 2-3**.

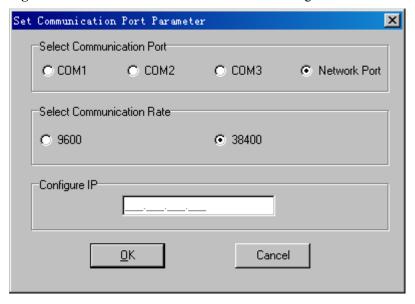


Figure 2-3 Set Communication Port Parameter dialog box

- **Step 3** In the **Select Communication Port** area, click **Network Port**. In the **Configure IP** area, set the IP address to **192.168.0.72**.
- Step 4 Click OK.

The Site Maintenance Terminal System window is displayed, as shown in Figure 2-2.

----End

2.3 Exiting the Site Maintenance Terminal

If you exit the Site Maintenance Terminal, the connection between the Site Maintenance Terminal and the BTS is disrupted, and the Site Maintenance Terminal System window is closed.

Procedure

Exit the site maintenance terminal by choosing **Daily Maintenance** > **Exit** or clicking **Close** in the **Site Maintenance Terminal System** window.

----End

3 Using the Site Management Rights

About This Chapter

The operations of the site management rights involve obtaining the site management rights and releasing the site management rights.

3.1 Site Management Rights

The site management rights refer to the rights to set the parameters of a BTS. After a BTS is powered on, the remote Site Maintenance System obtains the site management rights by default. Before operating the BTS through the Site Maintenance Terminal System, you must obtain the site management rights first.

3.2 Obtaining the Site Management Rights

This function is performed to obtain the rights for setting parameters of the BTS.

3.3 Releasing the Site Management Rights

This function is performed to release the rights for setting parameters of the BTS. After completing the local maintenance, you must release the site management rights.

3.1 Site Management Rights

The site management rights refer to the rights to set the parameters of a BTS. After a BTS is powered on, the remote Site Maintenance System obtains the site management rights by default. Before operating the BTS through the Site Maintenance Terminal System, you must obtain the site management rights first.

When operating a BTS through the Site Maintenance Terminal System, pay attention to the following:

- Obtain the site management rights before writing data; otherwise, you may not be able to
 write data, for example, load a software or activate a software. You can read data from the
 BTS without the site management rights.
- After a BTS is powered on, the remote Site Maintenance System obtains the site
 management rights by default and performs all operations directly. Before operating the
 BTS through the Site Maintenance Terminal System, you must obtain the site management
 rights first. You cannot operate the BTS through the Site Maintenance Terminal System
 and the remote Site Maintenance System at the same time.
- After completing the local maintenance, you must release the site management rights.

NOTE

- Remote Site Maintenance: maintaining the BTS through the LMT on the BSC side
- Site Maintenance Terminal: maintaining the BTS by directly connecting the Site Maintenance Terminal
 PC to the BBU of the base station through the Ethernet ports

3.2 Obtaining the Site Management Rights

This function is performed to obtain the rights for setting parameters of the BTS.

Prerequisite

You have logged in to the BTS through the Site Maintenance Terminal.

Procedure

Step 1 In the left pane of the Site Maintenance Terminal System window, click Site. In the right pane of the window, double-click Site Management Right.

The **Site Management Right** dialog box is displayed.

Step 2 Click **Get**. The result is displayed in the dialog box, as shown in **Figure 3-1**.

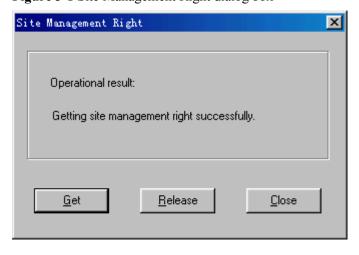


Figure 3-1 Site Management Right dialog box

----End

3.3 Releasing the Site Management Rights

This function is performed to release the rights for setting parameters of the BTS. After completing the local maintenance, you must release the site management rights.

Prerequisite

You have logged in to the BTS through the Site Maintenance Terminal.

Context

After completing the local maintenance, you should release the site management rights to facilitate remote maintenance. If you do not release the site management rights at the local end, the writing operation can be performed at the remote end.

Procedure

- **Step 1** In the left pane of the **Site Maintenance Terminal System** window, click **Site**. In the right pane of the window, double-click **Site Management Right**.
 - The **Site Management Right** dialog box is displayed.
- **Step 2** Click **Release**. The result is displayed in the dialog box, as shown in **Figure 3-2**.

Operational result:

Releasing site management right successfully.

<u>R</u>elease

Close

Figure 3-2 Site Management Right dialog box

----End

<u>G</u>et

4 Managing Sites

About This Chapter

The site management involves viewing site resources, querying the delay in reporting board alarms, resetting the BTS, testing whether the boards in a site operate normally and whether the connection of transmit links is normal, monitoring and managing the environment parameters in a site, viewing the board parameters of the BTS, testing the RF specifications, and viewing the settings of parameters in a ring network and the bar codes of a site.

4.1 Viewing Site Resources

This function is performed to view the following site resources: CPU usage, RAM usage, DC voltage, temperature in a cabinet, humidity in a cabinet, current of battery, temperature of battery, load current, AC voltage, and quantity of state. This function can also be performed to obtain the board temperature.

4.2 Forcibly Loading Software

This function is performed to load software to the main control board.

4.3 Activating Software

This describes how to validate the board software loaded onto the main control board. The board software consists of the main control board software and other board software.

4.4 Resetting a Site Hierarchically

Resetting a site involves third level reset and fourth level reset. The third level reset and the fourth level reset are used to reinitialize the base station, that is, to reset all the boards in the base station and load the configuration data of the base station from the BSC.

4.5 Monitoring Environment

This function is performed to monitor and manage the environment parameters in a site. By performing this function, you can view the current temperature and humidity and set the temperature and humidity thresholds. The BTS can run normally in a safe and suitable site environment. You can also clear a burglar alarm or a smoke alarm and disable an EAC alarm.

4.6 Testing Transport Performance

This function is performed to check whether the transmission link is normal through an E1 loopback test and a timeslot loopback test.

4.7 Querying Alarm Delay Time

This function is performed to query the alarm delay time of boards.

4.8 Testing the RF Specifications

This describes how to test the RF specifications. The specifications of the receiver involve the receiver sensitivity, GSM static L1 (first level) function, and the block test. The specifications of the transmitter involve modulation spectrum, handover spectrum, modulation accuracy, and spurious emission.

4.9 Querying the Ring Topology Parameters

This function is performed to query the ring topology parameters, including the working direction of a site in the ring topology (Port 0 is forward link and port 1 is reverse link) and the indication of auto rotate in the ring topology. If automatic rotation is permitted, the result also involves the waiting time before rotation and the scheduled time for attempts before rotation.

4.10 Viewing the Bar Codes

This describes how to view the bar codes of the boards configured in the currently connected BTS

4.11 Managing the Site Board Parameters

This function is performed to view the parameters associated with the boards configured in a site.

4.12 Testing the E1 BER

You can get the information about the link transmission quality of the E1 port in real time by monitoring the E1 BER.

4.13 Managing the RET Antenna

This function is performed to query and set parameters of the RET antenna connected to the BTS.

4.1 Viewing Site Resources

This function is performed to view the following site resources: CPU usage, RAM usage, DC voltage, temperature in a cabinet, humidity in a cabinet, current of battery, temperature of battery, load current, AC voltage, and quantity of state. This function can also be performed to obtain the board temperature.

Prerequisite

You have logged in to the BTS through the Site Maintenance Terminal.

Procedure

- **Step 1** In the left pane of the **Site Maintenance Terminal System** window, click **Site**. In the right pane of the window, double-click **View Resource**.
 - The View Resource dialog box is displayed.
- Step 2 In the Select Resource Type list box, click the type of the source to be viewed, as shown in Figure 4-1. The result is displayed at the bottom of the View Resource dialog box.

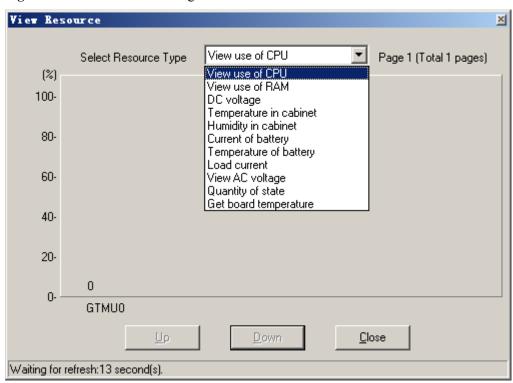


Figure 4-1 View Resource dialog box

M NOTE

One page may be insufficient to display the result (such as, in combined cabinets or cabinet group situations). Click **Next Page** to view more results. The resources to be viewed are the real-time messages.

----End

4.2 Forcibly Loading Software

This function is performed to load software to the main control board.

Prerequisite

You have logged in to the BTS through the Site Maintenance Terminal.

Context

- The main control board of the base station is the GTMU.
- You need to load the software of the main control board prior to loading the software of other boards. There are no strict requirements for the sequence of loading the software of other boards.

Table 4-1 describes the parameters.

Table 4-1 Parameters available in the Software Download dialog box

Parameter	Meaning	Value Range	
File Name	File name of the software to be downloaded, that is, the path in which the software is saved	Use the actual file name. Note that the file name is case sensitive.	
Send Window Size	Size of the data packet when the software is loaded	1–49 (49 is recommended)	
Version	Version of the software to be downloaded. It should be the same as the version of the downloaded file.	-	
File ID	Type of a board whose software is to be loaded. It should be consistent with the type of the downloaded file.	-	

Procedure

- **Step 1** In the left pane of the **Site Maintenance Terminal System** window, click **Site**. In the right pane of the window, double-click **Forced Software Load**.
 - The Software Download dialog box is displayed.
- Step 2 Set File Name. In the Send Window Size spin box, specify a size. In the Version area, enter a version number. In the File ID drop-down list box, select *DTMU_MAIN*, as shown in Figure 4-2.

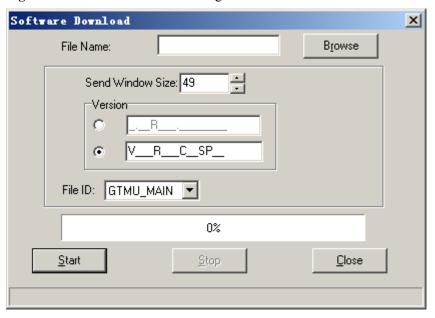


Figure 4-2 Software Download dialog box

Step 3 Click Start.

You can view the loading progress in the Site Maintenance Terminal System. If the software is loaded successfully, the **Loading software successfully** message is displayed on the status bar.

Step 4 Repeat **steps 2 through 3** to load the software of other boards.

----End

4.3 Activating Software

This describes how to validate the board software loaded onto the main control board. The board software consists of the main control board software and other board software.

Prerequisite

- You have logged in to the BTS through the Site Maintenance Terminal.
- The board software to be activated is loaded.

Context

- The main control board of the BTS is the GTMU.
- You need to activate the main control board software before activating the software of the other boards. There are no specified sequence for activating the software of the other boards.
- The loading of software does not affect the services. The activation of software validates the new version software on boards and affects the services. Therefore, Huawei recommends you load the software in the day and activate it at night.

Table 4-2 lists the descriptions of the parameters.

Table 4-2 Parameters in the Software Activation dialog box

Parameter Name	Meaning	Value Range
Version	Version of the downloaded software	Set this parameter based on the actual requirement.
Board No.	Number of the board to be activated	Enter an integer that indicates a board number. You can also use – between two integers to activate more than one board. For example, you enter 0-5 to activate boards 0-5.
		If you do not enter a board number, all the boards of this type in the BTS will be activated.
File ID	Type of the board whose software is to be upgraded	Set this parameter based on the actual situation.

Procedure

- Step 1 In the left pane of the Site Maintenance Terminal System window, choose Site. In the right pane of the window, double-click Software Activation.
 The Software Activation dialog box is displayed.
- Step 2 In the Version area, enter the version number of the main control board software. In the File ID drop-down list, select the file ID, as shown in Figure 4-3.

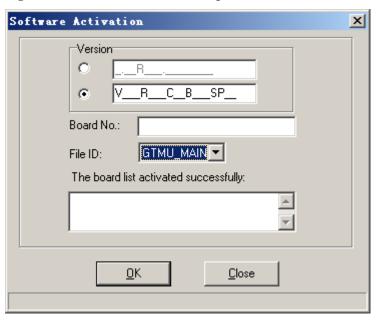


Figure 4-3 Software Activation dialog box

Step 3 Click OK.

The number of the board that is successfully activated is displayed in the **The board list activated successfully:** area. The **Software activation successfully** message is displayed on the status bar at the bottom of the dialog box.

Step 4 After that, activate the software of the other boards. In the **Version** area, enter the version number of the software to be activated. In the **Board No.** area, enter the number of the board to be activated. In the **File ID** drop-down list, select the board software to be activated, as shown in **Figure 4-4**.

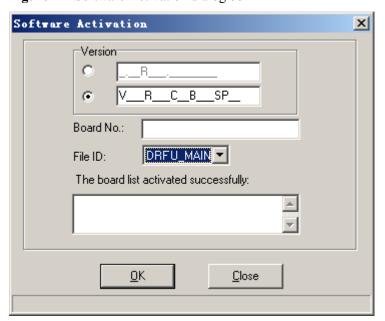


Figure 4-4 Software Activation dialog box

Step 5 Click OK.

The number of the board that is successfully activated is displayed in the **The board list** activated successfully: area. The **Software activation successfully** message is displayed on the status bar at the bottom of the dialog box.

 \square NOTE

During the activation of the DRFU board software, if the Site Maintenance Terminal prompts that the software activation failed, check the communication between the BBU and the DRFU. If there is a communication problem between the BBU and the DRFU, rectify the fault by referring to Checking the Transmission Between the BBU and the DRFU.

----End

4.4 Resetting a Site Hierarchically

Resetting a site involves third level reset and fourth level reset. The third level reset and the fourth level reset are used to reinitialize the base station, that is, to reset all the boards in the base station and load the configuration data of the base station from the BSC.

Prerequisite

You have logged in to the BTS through the Site Maintenance Terminal.

Context



CAUTION

Be careful when resetting a site as resetting a site disrupts all the services carried by all the cells under the site.


Table 4-3 describes the parameters.

Table 4-3 Parameters in the Site Reset Hierarchically dialog box

Parameter	Meaning	Value Range
Third level reset	Based on the configuration data of the BTS stored in the memory, the BSC configures the BTS again to reset it. In the ring topology, you can change the link direction. This requires you to choose a port.	-
Fourth level reset	Based on the data configuration stored in the database (DB), the BSC updates the data stored in the memory, and then configures the base station again to reset it. In the ring topology, you cannot choose a port.	-
Not Select	Non-ring topology	-
Port 0	Ring topology, forward link	-
Port 1	Ring topology, reverse link	-

- **Step 1** In the left pane of the **Site Maintenance Terminal System** window, click **Site**. In the right pane of the window, double-click **Site Reset Hierarchically**.
 - The **Site Reset Hierarchically** dialog box is displayed.
- Step 2 In the Reset Level area, select a reset level. In the Reset Port area, select a port, as shown in Figure 4-5.

Figure 4-5 Site Reset Hierarchically dialog box

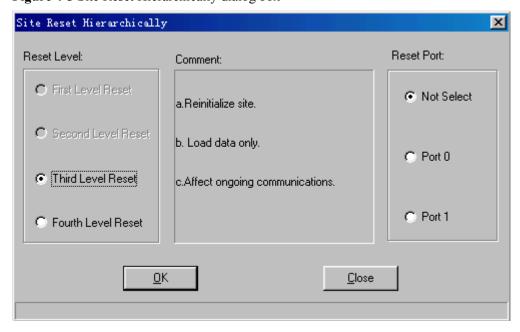

Step 3 Click OK.

----End

4.5 Monitoring Environment

This function is performed to monitor and manage the environment parameters in a site. By performing this function, you can view the current temperature and humidity and set the temperature and humidity thresholds. The BTS can run normally in a safe and suitable site environment. You can also clear a burglar alarm or a smoke alarm and disable an EAC alarm.

Prerequisite

You have logged in to the BTS through the Site Maintenance Terminal.

Context

Table 4-4 describes the parameters.

Table 4-4 Parameters in the Environment Monitor dialog box

Parameter	Meaning	Value Range
Clear Robbery Alarm	Clearing the infrared alarm and the door status alarm	-
Set Temperature and Humidity Threshold	Set the upper and lower thresholds of temperature and humidity. Based on the thresholds, the alarm box reports a temperature alarm and a humidity alarm.	-
Relay Operation	Control the relay status. The relay is used to start or close the refrigeration device, heating device, dehumidifier, humidifier, fire extinguisher, and anti-burglar device. The default state is Close.	-
Disable the EAC Alarm	Disable the reporting of alarms in a short time. In the maintenance of equipment, the related personnel can select the option to disable the reporting of alarms for ten minutes. After ten minutes, the alarms can be reported. If the equipment is maintained for more than 10 minutes, restart the alarm shield.	-
Get Current Temperature and Humidity	View the temperature and humidity associated with the base station in operation. This parameter can be used for querying the status of the environment alarm.	-
Clear Smoke Alarm	Clearing the smoke alarm	-

Step 1 In the left pane of the **Site Maintenance Terminal System** window, click **Site**. In the right pane of the window, double-click **Environment Monitor**.

The **Environment Monitor** dialog box is displayed, as shown in **Figure 4-6**.

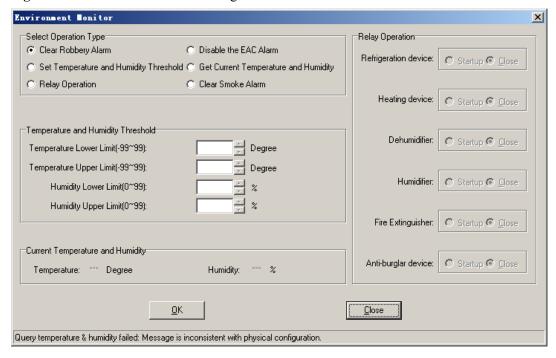


Figure 4-6 Environment Monitor dialog box

Step 2 Perform the following operations in the **Select Operation Type** area:

Select	Then
Clear Robbery Alarm	Go to Step 3.
Set Temperature and Humidity Threshold	In the Temperature and Humidity Threshold area, set the thresholds. Then, go to Step 3 .
Relay Operation	In the Relay Operation area, set the related options to start or stop the equipment. Then, go to Step 3 .
Disable the EAC Alarm	Go to Step 3.
Get Current Temperature and Humidity	Go to Step 3.
Clear Smoke Alarm	Go to Step 3.

Step 3 Click OK.

----End

4.6 Testing Transport Performance

This function is performed to check whether the transmission link is normal through an E1 loopback test and a timeslot loopback test.

Prerequisite

You have logged in to the BTS through the Site Maintenance Terminal.

Context

Table 4-5 describes the parameters.

Table 4-5 Parameters in the Transport Performance Test dialog box

Parameter	Meaning	Value Range
Select TMU	You can select a TMU based on a test object.	Active TMU, Master/Backup TMU, Slave TMU1, and Slave TMU2
Port No.	This specifies the port to which the E1 cable is connected.	Port 0-port 7
Test duration	This specify the duration of a specific loopback mode.	Recommended value: multiples of 10 minutes (default value: one minute)
E1 Loopback	During an E1 loopback test, the OML is broken. You can stop the loopback test ahead of time by resetting the BTS. After the test is complete, the system automatically releases the loop and resets the BTS.	All the 32 timeslots (0-31) are tested by default.
Timeslot Loopback	Only one timeslot can be tested once. The timeslot carrying the OML cannot be tested. In addition, only port 0 and port 1 on each DTMU can be tested. During a timeslot loopback test, the tested timeslot is unusable. After the test is complete, the BTS will not be reset. You can stop the loopback test ahead of time by clicking Stop . After the test is complete, the system	-
	automatically releases the loop and the tested timeslot becomes usable. You can click Stop to stop the test or wait for the completion of the test duration. The timeslot in the self-loop test is normal again.	

Procedure

Step 1 In the left pane of the **Site Maintenance Terminal System** window, click **Site**. In the right pane of the window, double-click **Transport Performance Test**.


The **Transport Performance Test** dialog box is displayed.

- **Step 2** In the **Select TMU** area, select a TMU. In the **Port No.** area, select a port number. In the **Loopback Mode** area, select a loopback mode. In the **Test Duration** area, enter the test duration.
- Step 3 Click Start.

The **Warning** dialog box is displayed.

Step 4 Click **OK**. The result is displayed on the status bar, as shown in **Figure 4-7**.

Figure 4-7 Transport Performance Test dialog box

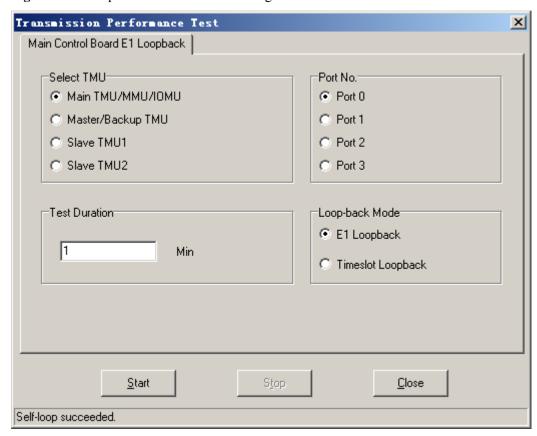

----End

4.7 Querying Alarm Delay Time

This function is performed to query the alarm delay time of boards.

Prerequisite


You have logged in to the BTS through the Site Maintenance Terminal.

Context

Some alarms that do not affect services are reported frequently in a short time, and then disappear quickly. Therefore, many alarms are generated while the fault alarms are not detected in time. By setting an appropriate alarm delay time, some alarms that are generated and cleared frequently in a short time can be prevented from being reported in a large quantity.

- **Step 1** In the left pane of the **Site Maintenance Terminal System** window, click **Site**. In the right pane of the window, double-click **Site Alarm Delay Time Query**.
 - The Query Warn Delay Time dialog box is displayed.
- Step 2 Click Query. The result is displayed in the Query Warn Delay Time dialog box, as shown in Figure 4-8.

Figure 4-8 Query Warn Delay Time dialog box

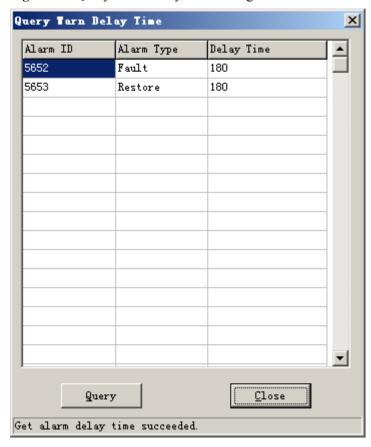

■ NOTE

You can set a specific alarm delay time through the LMT on the BSC side.

----End

4.8 Testing the RF Specifications

This describes how to test the RF specifications. The specifications of the receiver involve the receiver sensitivity, GSM static L1 (first level) function, and the block test. The specifications of the transmitter involve modulation spectrum, handover spectrum, modulation accuracy, and spurious emission.

Prerequisite

• You have logged in to the BTS through the Site Maintenance Terminal.

 The test device (for example, a base station integrated tester) is connected to the ANT port on the DRFII

Context

A base station integrated tester is required to test the RF specifications. Pay attention to the following points before the test:

- Before the test, you need to reset the configured RC by clicking **User-defined Message**.
 - If the E1 cables are connected, after the configured RC is reset, you can observe the RUN LED on the DRFU to check whether the RC is running normally. If the RC is running normally, you can perform the test.
 - If the E1 cables are not connected, and if the LAPD alarm is displayed on the status bar after the configured RC is reset, you can infer that the RC is running normally. Then, you can perform the test.
- In the **Frequency Hopping Mode** drop-down list, choose **Baseband hopping** or **RF hopping**. Click **Frequency hopping setup** to specify the frequency hopping parameters.
- When testing the specifications of the transmitter, you can choose the modulation mode of the channel by clicking **Channel Modulation**.
- Based on the configuration mode between the DRFUs on the BTS, you can choose
 Mode, Transmitter Channel, or Receiver Channel in the DTRU Channel Setup dialog box.

Procedure

- Step 1 In the left pane of the Site Maintenance Terminal System window, select Site. In the right pane of the window, double-click RF Specification Test.The Warning dialog box is displayed.
- Step 2 Click OK.

The RF Specification Test window is displayed, as shown in Figure 4-9.

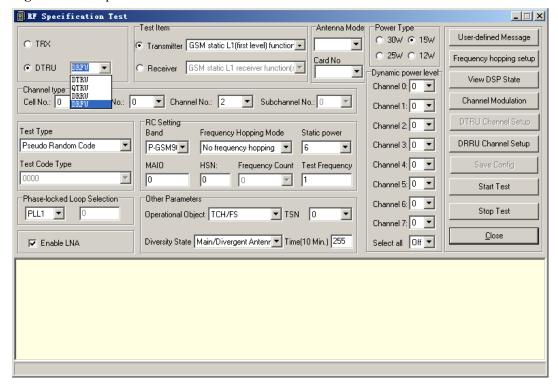


Figure 4-9 RF Specification Test window

- Step 3 Choose DRFU. In the Channel type area, specify the Cell No. and RC No., and then click User-defined Message.
 - If the E1 cables are connected, you can observe the RUN LED on the DRFU to check whether the RC runs normally. If the RC runs normally, you can perform the test.
 - If the E1 cables are not connected and if the LAPD alarm is displayed on the status bar, you can infer that the DTRU runs normally.
- **Step 4** In the **Test Item** area, click **Transmitter** or **Receiver**, and choose the test item for the transmitter or receiver.
 - If the **Transmitter** option is selected, you can specify the modulation mode of the channel by clicking **Channel Modulation**.
 - If the **Receiver** option is selected, you need not set **Channel Modulation**.
- **Step 5** Choose another item to be tested.
 - If you choose **No frequency hopping** from the **Frequency Hopping Mode** drop-down list, you need not set the **Frequency hopping setup**.
 - In the Frequency Hopping Mode drop-down list, choose Baseband hopping or RF hopping. Click Frequency hopping setup to specify the frequency hopping parameters.
- Step 6 Click Start Test.

The result is displayed on the test device.

----End

4.9 Querying the Ring Topology Parameters

This function is performed to query the ring topology parameters, including the working direction of a site in the ring topology (Port 0 is forward link and port 1 is reverse link) and the

indication of auto rotate in the ring topology. If automatic rotation is permitted, the result also involves the waiting time before rotation and the scheduled time for attempts before rotation.

Prerequisite

You have logged in to the BTS through the Site Maintenance Terminal.

Context

If the result is **Auto Rotate Permission**, the working direction of the site in ring topology can be automatically rotated. The system displays the **Waiting Time Before Rotate** area and the **Try Rotating Duration Time** area. The data is configured through the Data Configuration System on the BSC side.


If the result is **Auto Rotate Not Permitted**, the working direction of the site in ring topology is unchanged. At this moment, the **Waiting Time Before Rotate** and the **Try Rotating Duration Time** are insignificant. The displayed time is 65535 seconds.

Procedure

In the left pane of the **Site Maintenance Terminal System** window, click **Site**. In the right pane of the window, double-click **Ring Topology Parameter Query**.

The Ring Topology Parameter Query dialog box is displayed, as shown in Figure 4-10.

Figure 4-10 Ring Topology Parameter Query dialog box

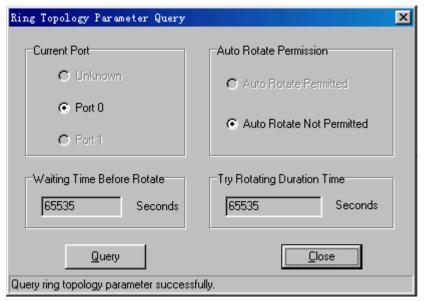

□ NOTE

If the dialog box is open for some time, click **Query** to refresh the querying result.

----End

4.10 Viewing the Bar Codes

This describes how to view the bar codes of the boards configured in the currently connected BTS.

Prerequisite

You have logged in to the BTS through the Site Maintenance Terminal.

Context

The bar code is the basic information of the board and is used to identify the manufacturing information of the board. When several faulty boards are found with the same bar code, trace other boards produced in the same batch through the bar codes to see whether they are faulty. Through the Local Maintenance Terminal, you can view the bar codes of the boards in all the BTSs under the BSC. Through the Site Maintenance Terminal System, you can view the bar codes of the boards in the connected BTS.


- The bar code is represented in ASCII code.
- You can view only the bar code of the board that is already configured.
- The boards that support bar code reporting are the GTMU, the DRFU, the BFU, the PEU, and the DEMU.

Procedure

In the left pane of the **Site Maintenance Terminal System** window, select **Site**. In the right pane of the window, double-click **Bar Code Query**.

The **Bar Code Query** dialog box is displayed, as shown in **Figure 4-11**.

Figure 4-11 Bar Code Query dialog box

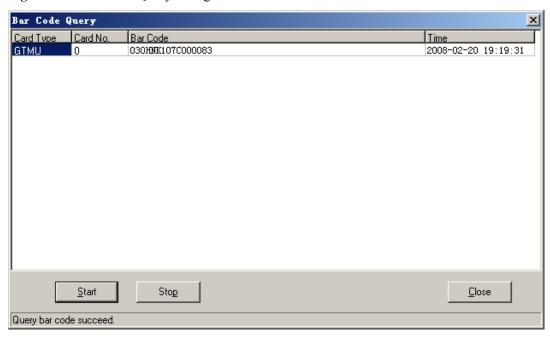

NOTE

If the dialog box has been open for a while, click **Start** to refresh the dialog box.

4.11 Managing the Site Board Parameters

This function is performed to view the parameters associated with the boards configured in a site.

Prerequisite


You have logged in to the BTS through the Site Maintenance Terminal.

Procedure

Step 1 In the left pane of the Site Maintenance Terminal System window, click Site. In the right pane of the window, double-click Site Board Parameter Management.

The **Site Board Parameter Management** dialog box is displayed, as shown in **Figure 4-12**.

Figure 4-12 Site Board Parameter Management dialog box

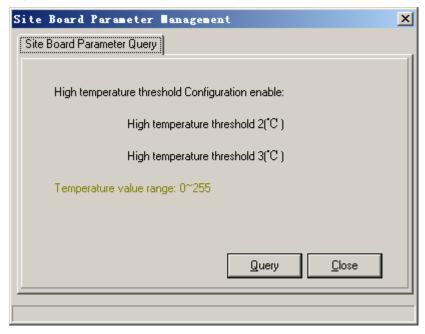

Step 2 Click **Query** to query the board parameters of the BTS.

The result is displayed in the parameter area, as shown in Figure 4-13.



Figure 4-13 Site Board Parameter Management dialog box

----End

4.12 Testing the E1 BER

You can get the information about the link transmission quality of the E1 port in real time by monitoring the E1 BER.

Prerequisite

- You have logged in to the BTS through the Site Maintenance Terminal.
- On the Local Maintenance Terminal, the BTS attribute is set to Support CRC4 Check.

Context

The bit error rate is defined as follows:

- Bit Error Rate (BER): number of error bits per unit time
- Unit Time: interval that the interface board samples the error bits
- Remain Time: remaining time of the bit error rate test. When the remaining time is 0, the test ends.
- Total Error: total number of error bits
- Unit Error: number of error bits detected in a unit time
- Total Error Overflow: The number of error bits exceeds a predefined threshold.


Procedure

Step 1 In the left pane of the **Site Maintenance Terminal System** window, click **Site**. In the right pane of the window, double-click **E1 BET Test**.

The **E1 BER Test** dialog box is displayed.

Step 2 In the Parameters area, set TMU Port No. and Test Duration, and then click Start Test. The test result is displayed in the Test Result area, as shown in Figure 4-14.

Figure 4-14 E1 BER Test dialog box

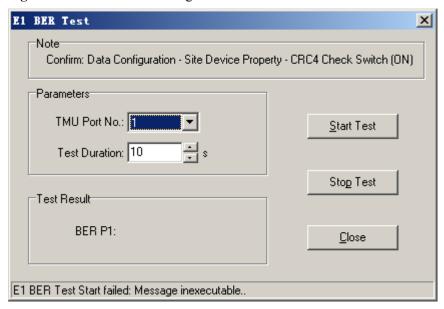

Step 3 Click **Stop Test** to end the E1 BER test.

----End

4.13 Managing the RET Antenna

This function is performed to query and set parameters of the RET antenna connected to the BTS.

Prerequisite

- You have logged in to the BTS through the Site Maintenance Terminal.
- The RF unit is connected to the RET antenna.

Procedure

- Step 1 In the left pane of the Site Maintenance Terminal System window, click Site. In the right pane of the window, double-click RET Antenna Manage.
 - The **RET Antenna Manage** dialog box is displayed, as shown in **Figure 4-15**.
- Step 2 Click Query. The query result is displayed in the RET Antenna Information area.

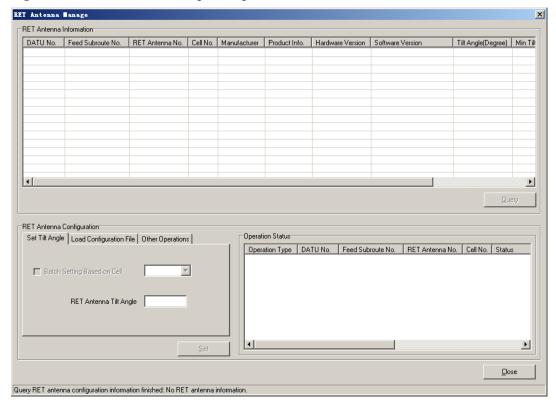


Figure 4-15 RET Antenna Manage dialog box

- Step 3 In the RET Antenna Configuration area, click the Set Tilt Angle tab, set RET Antenna Tilt Angle, and then click Set. The result is displayed in the Operation Status area.
 - Щ NOTE

The tilt angle must be in the range displayed in the **RET Antenna Information** area. Otherwise, the setting does not take effect.

- Step 4 In the RET Antenna Setting area, click the Load Configuration File tab. In the Select File area, click Browse and select the configuration file to be loaded. Then, click Set. The result is displayed in the Operation Status area.
- Step 5 In the RET Antenna Setting area, click the Other Operations tab. Select the antenna to be operated in the Select Antenna Operation area, and then click Set. The result is displayed in the Operation Status area.

5 Managing Cells

About This Chapter

The cell management involves managing cell attributes and cell extended attributes, testing all the BTs and RCs of a cell so that they can be locked or unlocked, and checking whether the BTs and RCs are functional.

5.1 Managing Cell Attributes

This function is performed to view or set the interference level boundary, interference average parameter, connection failure threshold, T200, overload period, starting frame No., CCCH load threshold, CCCH load indicating period, RACH busy determination threshold, RACH load averaging slots, BTS air timer, NY1, BSIC, BCCH ARFCN, and Max. time advance.

5.2 Managing Cell Extended Attributes

This function is performed to view or set the RF resource indication period, paging times, and access error threshold.

5.3 Changing the Cell Management State

This function is performed to lock or unlock the BTs and RCs of a cell.

5.4 Performing the Cell Performance Test

This function is performed to test all the RCs of a cell and to check whether they are functional.

5.1 Managing Cell Attributes

This function is performed to view or set the interference level boundary, interference average parameter, connection failure threshold, T200, overload period, starting frame No., CCCH load threshold, CCCH load indicating period, RACH busy determination threshold, RACH load averaging slots, BTS air timer, NY1, BSIC, BCCH ARFCN, and Max. time advance.

Prerequisite

You have logged in to the BTS through the Site Maintenance Terminal.

Context

Table 5-1 describes the parameters.

Table 5-1 Parameters in the Cell Attributes Management dialog box

Parameter	Meaning	Value Range
Interference level boundary	There are six interference levels. The BTS calculates the interference value of a channel based on the measurement report (MR) sent from an MS, and then determines its level by comparing the calculated value with the six levels.	The six parameters must be listed in an ascending order. The six parameters must be within this range (115-85).
Interference average parameter	Determines the number of measurement reports that the BTS receives before an interference value is calculated.	1-31 (14 is recommende d.)
Connection failure threshold	Compares the measurement report and the value of the bit error rate that are reported by an MS with the receive power level to judge whether the connection fails.	0–127 (15 is recommende d.)

Parameter	Meaning	Value Range
T200	Determines the timer duration for responses after messages are sent in the related channels.	0-1275 (SDCCH, full rate FACCH, half rate FACCH, SDCCH/ SAPI3) and 0-2550 (for SACCH/ TCH/SPAI0, SACCH/ SDCCH, SACCH/ TCH/SAPI3)
Max. time advance	Time advance for the farthest point of the area that the cell covers	0–127 (63 is recommende d.)
Overload period	The BTS calculates the channel usage at a fixed interval to check whether the channel is overloaded. The interval is determined by the overloading period.	-
CCCH load threshold	Ratio of times of successful random access to total collision times within the time.	0-100% (80% is recommende d.)
CCCH load indicating period	Determines the duration within which the BTS must report the load on the CCCH to the MSC.	0-255 (15 is recommende d.)
RACH busy determination threshold	Determines the level threshold of random access.	-255 dBm through 0 dBm
RACH load averaging slots	Measuring the average loading timeslot number for random access channel.	-
Cell air-interface timer	Determines the timing length.	0-2550
NY1	The maximum number of times physical information can be resent. It is related to handover.	0-255 (6 or 4 is recommende d.)

Parameter	Meaning	Value Range
BCCH ARFCN	Determines the number of the BCCH frequency. There are 124, 193, 374, and 299 frequencies on the 850 MHz, 900 MHz, 1800 MHz, and 1900 MHz bands respectively.	128-251 (850 MHz); 1– 124, 966– 1023 (900 MHz); 512– 885 (1800 MHz); 512– 810 (1900 MHz)
BSIC	The base station identity code (Base station identity code = network color code + base station color code)	0-63
Starting frame No.	This parameter determines the frame from which the setting takes effect.	0-42431
Frame offset	The variance in the number of configured frames for different cells under one BTS.	0-7

Step 1 In the left pane of the **Site Maintenance Terminal System** window, click **Cell**. In the right pane of the window, double-click **Cell Attributes Management**.

The Cell Attributes Management dialog box is displayed, as shown in Figure 5-1.

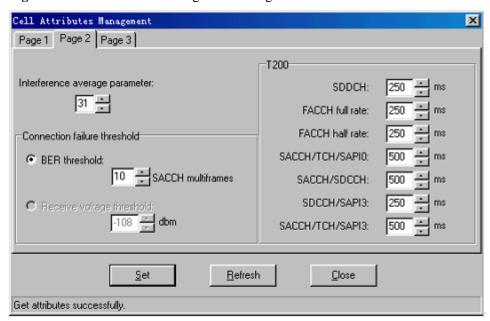


Figure 5-1 Cell Attributes Management dialog box

Step 2 Enter different values for each attribute.

NOTE

The parameters displayed on the terminal are the activated parameters on the BTS. You can adjust their values.

Step 3 Click Set.

The attributes are set successfully. The result is displayed on the status bar at the bottom of the **Cell Attributes Management** dialog box.

Step 4 Click Refresh.

The attributes are obtained successfully. The result is displayed on the status bar at the bottom of the **Cell Attributes Management** dialog box, as shown in **Figure 5-1**.

■ NOTE

The configure operation enables the site maintenance terminal to activate the parameters on the BTS. The refresh operation enables the site maintenance terminal to obtain the latest data from the BTS. You can perform the refresh operation to confirm the accuracy of data.

----End

5.2 Managing Cell Extended Attributes

This function is performed to view or set the RF resource indication period, paging times, and access error threshold.

Prerequisite

You have logged in to the BTS through the Site Maintenance Terminal.

Context

Table 5-2 describes the parameters.

Table 5-2 Parameters in the Cell Extended Attributes Management dialog box


Parameter	Meaning	Value Range
RF resource indication period	Interval at which the BTS reports the RF resources to the MSC	1-31
Paging times	This parameter is used for the BTS to determine whether a paging message is resent. The paging times configured in the BTS and that configured in the MSC together control the retransmission times of the paging message. The total paging times is approximately equivalent to the multiplication of the configuration in the BTS with the configuration in the MSC.	0-4

Parameter	Meaning	Value Range
Access error threshold	Defines the dependency of the training sequences. If the parameter is set to an oversmall value, the allowable error for the random access signal is high and the random access of the MS is easy. But the error report rate is high. If the parameter is set to an overgreat value, the error report rate of the MS is low but the normal access is difficult to be reported.	0-255

Step 1 In the left pane of the **Site Maintenance Terminal System** window, click **Cell**. In the right pane of the window, double-click **Cell Extended Attributes Management**.

The Cell Extended Attributes Management dialog box is displayed, as shown in Figure 5-2.

Figure 5-2 Cell Extended Attributes Management dialog box

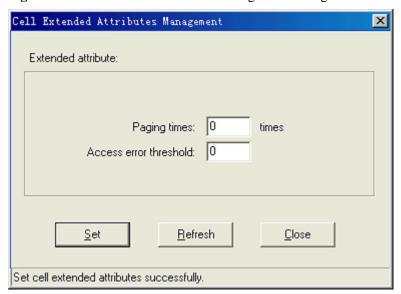

- **Step 2** Change the parameters of the cell extended attributes based on the actual situation.
 - NOTE

The parameters displayed on the terminal are the activated parameters on the BTS. You can adjust their values.

Step 3 Click Set.

The extended attributes are set successfully. The result is displayed on the status bar in the **Cell Extended Attributes Management** dialog box, as shown in **Figure 5-2**.

◯ NOTE

The Site Maintenance Terminal System sends the configured data to the BTS and the data takes effect. The configured cell extended attributes cannot be refreshed.

5.3 Changing the Cell Management State

This function is performed to lock or unlock the BTs and RCs of a cell.

Prerequisite

You have logged in to the BTS through the Site Maintenance Terminal.

Context




When the cell management state is changed to Locked, all the channels in the cell are in the Out of Service state. That is, the cell cannot provide any service when it is locked. Therefore, you should perform this function with care.

Procedure

Step 1 In the left pane of the Site Maintenance Terminal System window, click Cell. In the right pane of the window, double-click Change Cell Management State.

The Change Cell Management State dialog box is displayed, as shown in Figure 5-3.

Figure 5-3 Change Cell Management State dialog box

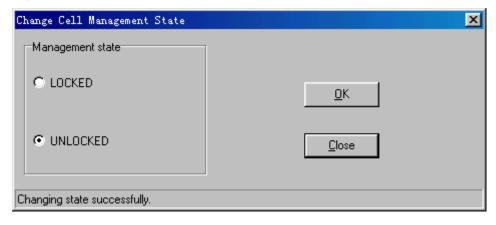

Step 2 Select the management state you need.

NOTE

The parameters displayed on the terminal are the activated parameters on the BTS. You can adjust their values.

Step 3 Click OK.

The cell management state is changed successfully. The result is displayed on the status bar at the bottom of the **Change Cell Management State** dialog box, as shown in **Figure 5-3**.

5.4 Performing the Cell Performance Test

This function is performed to test all the RCs of a cell and to check whether they are functional.

Prerequisite


You have logged in to the BTS through the Site Maintenance Terminal.

Procedure

Step 1 In the left pane of the **Site Maintenance Terminal System** window, click **Cell**. In the right pane of the window, double-click **Cell Performance Test**.

The Site Test dialog box is displayed, as shown in Figure 5-4.

Figure 5-4 Cell Test dialog box

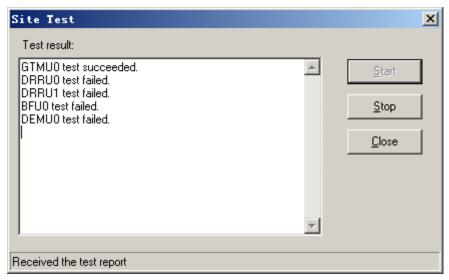

Step 2 Click Start.

The test report is obtained. The result is displayed in the **Cell Test** dialog box. If the test is successful, you can infer that the BTs and the RCs are functional, as shown in **Figure 5-4**.

NOTE

During the test, you can click **Stop** to end the test. The result is displayed in the **Cell Test** dialog box.

6 Managing BTs

About This Chapter

The BT management involves locking or unlocking a BT, resetting a BT, performing the RC self-test, view the status of the channels on a specified BT, and enabling a specified RC to transmit signals at a predefined power level.

6.1 Changing the BT Management State

This function is performed to lock or unlock a BT.

6.2 Re-Initializing a BT

This function is performed to reset a BT and to reload the configuration data of the BT.

6.3 Performing BT Tests

The BT tests involve the BIU loopback test and the TRX self-test. The BIU loopback test is performed to check the connection between the BT of the specified TRX and the physical links of the Abis signaling channel. The TRX self-test is performed to check RCs and report the test result

6.4 Viewing the Channel Status

This function is performed to query the status of all the channels on a BT.

6.5 Setting the TRX Full Power Emission

This function is performed to enable a specified TRX to perform the full power emission and to test the transmit power level of signals. Based on this level, the software and hardware parameters can be adjusted accordingly during network planning. Therefore, the coverage of the BTS can be optimized.

6.1 Changing the BT Management State

This function is performed to lock or unlock a BT.

Prerequisite

You have logged in to the BTS through the Site Maintenance Terminal.

Context



CAUTION


When you set the BT management state to Locked, all the channels of the baseband are in the Out of Service state. That is, the baseband cannot provide any service. Therefore, you should perform this function with care.

Procedure

Step 1 In the left pane of the **Site Maintenance Terminal System** window, click **BT**. In the right pane of the window, double-click **Change BT Management State**.

The Change BT Management State dialog box is displayed, as shown in Figure 6-1.

Figure 6-1 Change BT Management State dialog box

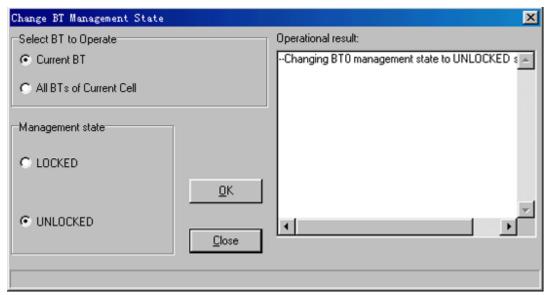

Step 2 Choose a BT and a management state.

 \square NOTE

The parameters displayed on the terminal are the activated parameters on the BTS. You can adjust their values

Step 3 Click OK.

The BT management state is changed successfully. The result is displayed in the **Operational result** pane, as shown in **Figure 6-1**.

M NOTE

You can click the **Operational result** pane to have it enlarged. The detailed information can be displayed in the pane. You can click in the enlarged pane to have the pane return to the original state.

----End


6.2 Re-Initializing a BT

This function is performed to reset a BT and to reload the configuration data of the BT.

Prerequisite

You have logged in to the BTS through the Site Maintenance Terminal.

Context

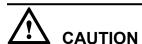


Re-initializing BT is actually the hard reset of the BT. All the services of the BT are interrupted during the hard reset. Therefore, you should perform this function carefully.

Procedure

Step 1 In the left pane of the **Site Maintenance Terminal System** window, click **BT**. In the right pane of the window, double-click **BT Reinitialization**.

The BT Reinitialization dialog box is displayed, as shown in Figure 6-2.

Figure 6-2 BT Reinitialization dialog box

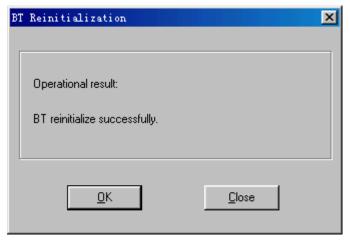

Step 2 Click OK.

The result is displayed in the **BT Reinitialization** dialog box, as shown in **Figure 6-2**.

6.3 Performing BT Tests

The BT tests involve the BIU loopback test and the TRX self-test. The BIU loopback test is performed to check the connection between the BT of the specified TRX and the physical links of the Abis signaling channel. The TRX self-test is performed to check RCs and report the test result.

Prerequisite


You have logged in to the BTS through the Site Maintenance Terminal.

Procedure

Step 1 In the left pane of the **Site Maintenance Terminal System** window, click **BT**. In the right pane of the window, double-click **BT Loop Test**.

The **BT Loop Test** dialog box is displayed, as shown in **Figure 6-3**.

Figure 6-3 BT Loop Test dialog box

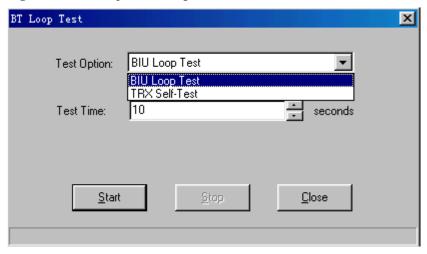

Step 2 Set the test option and the test time, as shown in Figure 6-3.

 \square NOTE

The test time is dependent on the test option. Generally, a long-duration test produces a stable test result.

Step 3 Click Start.

After the test is complete, a bit error ratio report is received. The result is displayed on the status bar in the **BT Loop Test** dialog box.

 \square note

During the test, you can click **Stop** to end the test. In this case, the **Stopping test successfully.** message is displayed on the status bar at the bottom of the **BT Loop Test** dialog box.

----End

6.4 Viewing the Channel Status

This function is performed to query the status of all the channels on a BT.

Prerequisite

You have logged in to the BTS through the Site Maintenance Terminal.

Context

A channel can be in any of the following states: A (Active), I (Idle), O (Out of Service), B (Blocked), and U (Unavailable). A channel in the O, B, or U state cannot be seized by a call.

Procedure

In the left pane of the **Site Maintenance Terminal System** window, click **BT**. In the right pane of the window, double-click **View Channel State**.

The View Channel State dialog box is displayed, as shown in Figure 6-4.

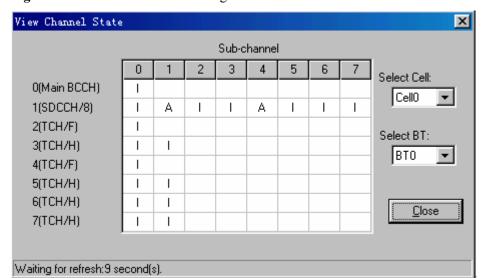


Figure 6-4 View Channel State dialog box

----End

6.5 Setting the TRX Full Power Emission

This function is performed to enable a specified TRX to perform the full power emission and to test the transmit power level of signals. Based on this level, the software and hardware parameters can be adjusted accordingly during network planning. Therefore, the coverage of the BTS can be optimized.

Prerequisite

- You have logged in to the BTS through the Site Maintenance Terminal.
- The power test devices are prepared.


Context

The static power level ranges from 0-10 dBm in steps of 2 dBm.

Step 1 In the left pane of the **Site Maintenance Terminal System** window, click **Site**. In the right pane of the window, double-click **TRX Full Power Emission**.

The TRX Full Power Emission dialog box is displayed, as shown in Figure 6-5.

Figure 6-5 TRX Full Power Emission dialog box

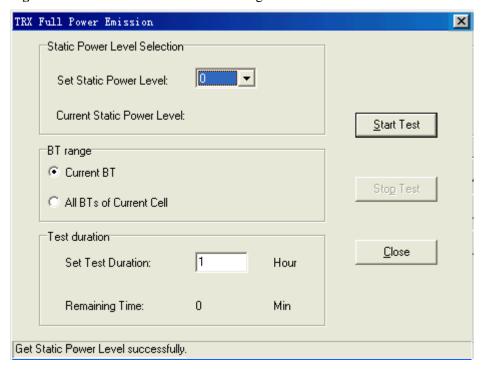

Step 2 Select a static power level and a BT, and set the test duration, as shown in Figure 6-5.

M NOTE

The parameter **Set Static Power Level** specifies the power level of the TRX during the test. **Current Static Power Level** is the current power level of the TRX before a test.

Generally, the longer the duration of the test, the more stable the test result.

Step 3 Click Start Test.

After the test is complete, the result is displayed on the status bar of the **TRX Full Power Emission** dialog box.

NOTE

You can click **Stop** to end the test in progress. In addition, on the status bar of the **TRX Full Power Emission** dialog box, the **Get Static Power Level Successfully.** message is displayed.

----End

6-6

7 Managing RCs

About This Chapter

The RC management involves setting the attributes and extended attributes of an RC, locking or unlocking an RC, resetting an RC, and adjusting power of an RC automatically.

7.1 Managing RC Attributes

This function is performed to view and set the Absolute Radio Frequency Channel Number (ARFCN), that is, the frequency number of the current RC.

7.2 Managing RC Extended Attributes

This function is performed to view or set the extended RC attributes, including the static power level, saturation threshold, saturation voltage threshold, and power mode.

7.3 Changing the RC Management State

This function is performed to lock or unlock an RC.

7.4 Re-Initializing an RC

This function is performed to reset an RC. After the RC is reset, the GTMU sends the stored configuration data to the RC again, and the configuration data takes effect on the RC.

7.5 Obtaining the RC Power Mode

This function is performed to view the power type and the current work mode of an RC.

7.6 Obtaining the Auto Power Adjustment Type

This function is performed to obtain the information about the frequency band of an RC and whether the RC supports the automatic power control function.

7.1 Managing RC Attributes

This function is performed to view and set the Absolute Radio Frequency Channel Number (ARFCN), that is, the frequency number of the current RC.

Prerequisite

You have logged in to the BTS through the Site Maintenance Terminal

Context

Table 7-1 describes the parameters.

Table 7-1 Parameters in the RC Attributes Management dialog box

Parameter	Meaning	Value Range
ARFCN	This parameter specifies the frequency number of an RC.	850 MHz: 124 frequencies numbered from 128 to 251
		• 900 MHz: 193 frequencies numbered from 1 to 124 and 955 to 1023
		• 1800 MHz: 374 frequencies numbered from 512 to 885
		• 1900 MHz: 299 frequencies numbered from 512 to 810

Procedure

Step 1 In the left pane of the **Site Maintenance Terminal System** window, click **RC**. In the right pane of the window, double-click **RC** Attributes Management.

The RC Attributes Management dialog box is displayed, as shown in Figure 7-1.

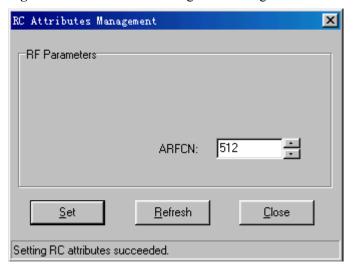


Figure 7-1 RC Attributes Management dialog box

Step 2 Set ARFCN.

 \square NOTE

The parameters displayed on the terminal are the activated parameters on the BTS. You can adjust their values.

Step 3 Click Set.

The RC attributes are set successfully. The result is displayed on the status bar in the RC Attributes Management dialog box.

Step 4 Click Refresh.

The RC attributes are obtained successfully. The result is displayed on the status bar in the RC Attributes Management dialog box, as shown in Figure 7-1.

M NOTE

The configure operation enables the site maintenance terminal to activate the parameters on the BTS. The refresh operation enables the site maintenance terminal to obtain the latest data from the BTS. You can perform the refresh operation to confirm the accuracy of data.

----End

7.2 Managing RC Extended Attributes

This function is performed to view or set the extended RC attributes, including the static power level, saturation threshold, saturation voltage threshold, and power mode.

Prerequisite

You have logged in to the BTS through the Site Maintenance Terminal.

Context

Table 7-2 describes the parameters.

Parameter	Meaning	Value Range
Static power level	Based on the coverage of the local network, you can change the power and coverage by changing the static power level.	0-10
RACH Min Access Level	This parameter determines the minimum access level of the MS on the RACH. If the received level of a timeslot bearing a random access burst is higher than RACH Min Access Level, the BTS thinks that the timeslot has an access request. This parameter and Random Access Error Threshold determine whether the RACH access is valid. This parameter should be set on the basis of the actual receiver sensitivity of the BTS and the minimum access level of the MS to avoid the situation where a call cannot be made even through there are signals detected.	0–5 (default value: 1)
Saturation Voltage Threshold	This parameter determines the maximum access level. If the access level exceeds this threshold, the access is invalid.	0-255
Power Mode	Current work mode, that is, power type of an RC.	30W, 25W, 15W, 12W

Table 7-2 Parameters in the RC Extended Attribute Management dialog box

Step 1 In the left pane of the **Site Maintenance Terminal System** window, click **RC**. In the right pane of the window, double-click **RC Extended Attributes Management**.

The RC Extended Attributes Management dialog box is displayed, as shown in Figure 7-2.

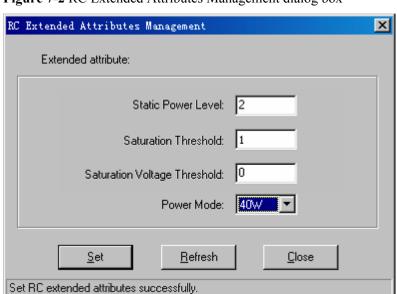


Figure 7-2 RC Extended Attributes Management dialog box

Step 2 Set the RC extended attributes.

◯ NOTE

The parameters displayed on the terminal are the activated parameters on the BTS. You can adjust their values.

Step 3 Click Set.

The extended attributes are set successfully. The result is displayed on the status bar in the RC Extended Attributes Management dialog box, as shown in Figure 7-2.

M NOTE

The configure operation enables the site maintenance terminal to activate the parameters on the BTS. The refresh operation enables the site maintenance terminal to obtain the latest data from the BTS. You can perform the refresh operation to confirm the accuracy of data.

----End

7.3 Changing the RC Management State

This function is performed to lock or unlock an RC.

Prerequisite

You have logged in to the BTS through the Site Maintenance Terminal.

Context



CAUTION

When the RC management state is set to Locked, all the channels on the RC are in the out of service state, which means that the RC cannot provide any service. Therefore, you should perform this function with care.

Procedure

Step 1 In the left pane of the Site Maintenance Terminal System window, click RC. In the right pane of the window, double-click Change RC Management State.

The Change RC Management State dialog box is displayed, as shown in Figure 7-3.

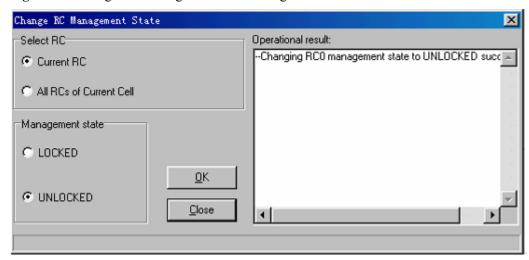


Figure 7-3 Change RC Management State dialog box

Step 2 Select the current RC or all the RCs, and select a management state.

NOTE

The parameters displayed on the terminal are the activated parameters on the BTS. You can adjust their values.

Step 3 Click OK.

The RC management state is changed successfully. In the **Change RC Management State** dialog box, the result is displayed in the **Operational result** list box, as shown in **Figure 7-3**.

----End

7.4 Re-Initializing an RC

This function is performed to reset an RC. After the RC is reset, the GTMU sends the stored configuration data to the RC again, and the configuration data takes effect on the RC.

Prerequisite

You have logged in to the BTS through the Site Maintenance Terminal.

Context



Re-initializing RC is actually the hardware reset of the RC. All the services of the RC are interrupted during the hardware reset. Therefore, you should perform this function with care.

Procedure


Step 1 In the left pane of the **Site Maintenance Terminal System** window, click **RC**. In the right pane of the window, double-click **RC** Reinitialization.

The **RC** Reinitialization dialog box is displayed.

Step 2 Click OK.

The RC is reinitialized successfully. The result is displayed in the RC Reinitialization dialog box, as shown in Figure 7-4.

Figure 7-4 RC Reinitialization dialog box

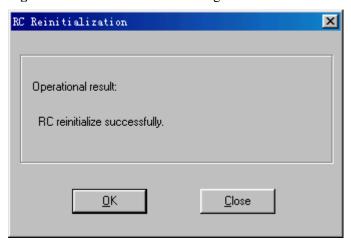

----End

7.5 Obtaining the RC Power Mode

This function is performed to view the power type and the current work mode of an RC.

Prerequisite

You have logged in to the BTS through the Site Maintenance Terminal.

Procedure

In the left pane of the **Site Maintenance Terminal System** window, click **RC**. In the right pane of the window, double-click **Get RC Power Mode**.

The **Get RC Power Mode** dialog box is displayed, as shown in **Figure 7-5**.

Figure 7-5 Get RC Power Mode dialog box



----End

7.6 Obtaining the Auto Power Adjustment Type

This function is performed to obtain the information about the frequency band of an RC and whether the RC supports the automatic power control function.

Prerequisite

You have logged in to the BTS through the Site Maintenance Terminal.

Context


The automatic power control function can keep the frequency of the RC within a fixed range.

Procedure

In the left pane of the **Site Maintenance Terminal System** window, click **RC**. In the right pane of the window, double-click **Get Auto Power Adjustment Type**.

The auto power adjustment type is obtained successfully. The result is displayed on the status bar in the **Get Auto Power Adjustment Type** dialog box, as shown in **Figure 7-6**.

Figure 7-6 Get Auto Power Adjustment Type dialog box

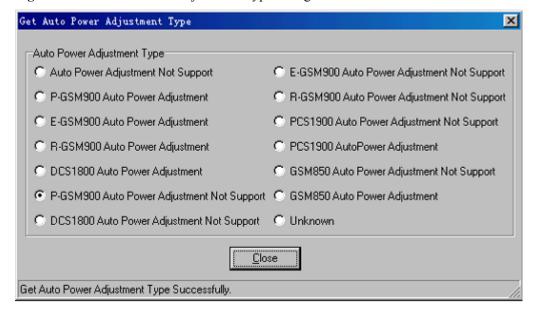

NOTE

This function is for query purpose only.

----End

8 Managing Channels

About This Chapter

The channel management involves viewing and setting channel attributes, locking or unlocking a channel, and checking the quality of a channel by testing the parameters such as the bit error ratio (BER) and transmit power.

8.1 Managing Channel Attributes

This function is performed to view or set the channel parameters, including channel combination, TSC selection, and starting frame number.

8.2 Changing the Channel Management State

This function is performed to lock or unlock a channel.

8.3 Performing the Loopback Test

This function is performed to check the quality of a channel by testing the parameters such as the bit error ratio (BER) and transmit power of the channel.

8.1 Managing Channel Attributes

This function is performed to view or set the channel parameters, including channel combination, TSC selection, and starting frame number.

Prerequisite

You have logged in to the BTS through the Site Maintenance Terminal.

Context

The channel configuration in the BTS must be consistent with that in the BSC. **Table 8-1** describes the parameters.

Table 8-1 Parameters in the Channel Attributes Management dialog box


Parameter	Meaning	Value Range
Channel combination	Combination type of logical channels that are carried on the physical channel	 TCHFULL TCHHALF TCHHALF2 SDCCH MAINBCCH BCCHCOMBINED BCH BCCHWITHCBCH SDCCHWITHCBCH PBCCH+PCCCH +PDTCH+PACCH +PTCCH PDTCH+PACCH +PTCCH
Training Sequence Code (TSC)	The TSC helps the demodulation module of the BT evaluate the channel characteristics so that the valid information can be decoded correctly. In cell frequency hopping, the TSC should be consistent with the BCC of the cell. Otherwise, the TCHs of the cell cannot be occupied normally.	0-7
Starting frame No.	This parameter determines the frame from which the setting takes effect.	0-42431

Procedure

Step 1 In the left pane of the **Site Maintenance Terminal System** window, click **Channel**. In the right pane of the window, double-click **Channel Attributes Management**.

The Channel Attributes Management dialog box is displayed, as shown in Figure 8-1.

Figure 8-1 Channel Attributes Management dialog box

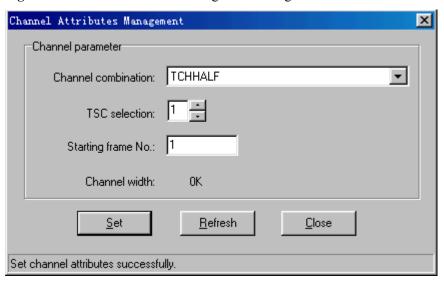

Step 2 Set the parameters.

 \square NOTE

The parameters displayed on the terminal are the activated parameters on the BTS. You can adjust their values.

Step 3 Click Set.

The attributes are set successfully. The result is displayed on the status bar in the **Channel Attributes Management** dialog box.

Step 4 Click Refresh.

The attributes are obtained successfully. The result is displayed on the status bar in the **Channel Attributes Management** dialog box, as shown in **Figure 8-1**.

M NOTE

The configure operation enables the site maintenance terminal to activate the parameters on the BTS. The refresh operation enables the site maintenance terminal to obtain the latest data from the BTS. You can perform the refresh operation to confirm the accuracy of data.

----End

8.2 Changing the Channel Management State

This function is performed to lock or unlock a channel.

Prerequisite

You have logged in to the BTS through the Site Maintenance Terminal.

Context




When the channel management state is set to Locked, the channel is in the out of service state, which means that the channel cannot provide any service. Therefore, you should perform this function with care.

Procedure

Step 1 In the left pane of the Site Maintenance Terminal System window, click Channel. In the right pane of the window, double-click Change Channel Management State.

The Change Channel Management State dialog box is displayed, as shown in Figure 8-2.

Figure 8-2 Change Channel Management State dialog box

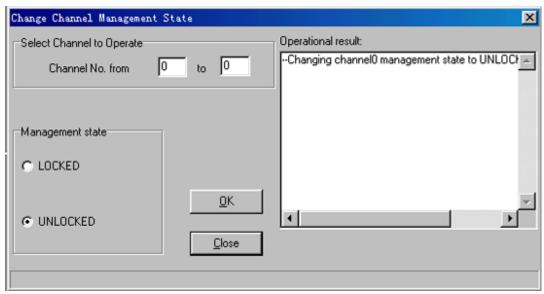

- **Step 2** In the **Select Channel to Operate** area, enter the target channel. In the **Management state** area, select a management state.
- Step 3 Click OK.

The management state of the channel is successfully changed, as shown in **Figure 8-2**. The result is displayed in the **Operational result** pane.

----End

8.3 Performing the Loopback Test

This function is performed to check the quality of a channel by testing the parameters such as the bit error ratio (BER) and transmit power of the channel.

Prerequisite

You have logged in to the BTS through the Site Maintenance Terminal.

Context

Table 8-2 describes the parameters.

Table 8-2 Parameters in the Cell Extended Attributes Management dialog box

Parameter	Meaning	Value Range
TRX RF self-loop test	This test is used to check the performance of the TX and RX channels on the Um interface.	-
BIU loop test	The GTMU provides a loop path for the TRX to perform the loopback test. This test is used to check the performance of the DBUS.	-
BTS sound loop test	This test is used to check whether the connection of the TCH between the Um interface and the DBUS is normal.	-
TRX sound loop test	This test is used to check whether the connection of the TCH between the Um interface and the Digital Signal Processor (DSP) is normal.	-
Test time		 TRX RF self-loop test: 5-65535 seconds BIU loop test: 10-65535 seconds BTS sound loop test: 10-600 seconds TRX sound loop test: 10-600 seconds
Power Level	The selection of a power level is unavailable when you perform a BIU loopback test.	0-31
Sub Channel	The selection of a sub-channel is unavailable when you perform a TRX RF loopback test or a BIU loopback test.	 This parameter determines the sub-channel to be tested in half-rate configuration. In full-rate configuration, this parameter is set to 0xff.

Procedure

Step 1 In the left pane of the **Site Maintenance Terminal System** window, click **Channel**. In the right pane of the window, double-click **Channel Loop Test**.

The Channel Loop Test dialog box is displayed, as shown in Figure 8-3.

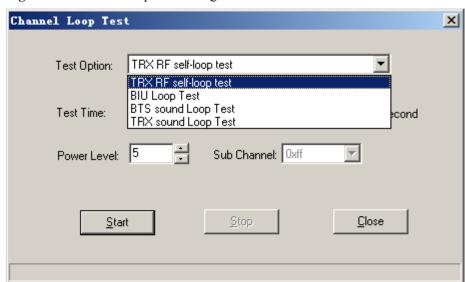


Figure 8-3 Channel Loop Test dialog box

Step 2 Specify the test option, test time, power level, and sub-channel, as shown in Figure 8-3.

□ NOTE

The test time is dependent on the test option. Generally, a long-duration test produces a stable test result.

Step 3 Click Start.

After the test is complete, you can obtain a BER report. The result is displayed on the status bar in the **Channel Loop Test** dialog box.

 \square NOTE

During the test, if you click **Stop**, the test is stopped. In addition, the **Stopping test successfully.** message is displayed on the status bar of the **Channel Loop Test** dialog box.

----End

9 BBU Operations

About This Chapter

The BBU operations involve the query, configuration, and test operations associated with the BBU. You can query the board settings, board information, board extended information, board alarms, and port attributes. You can also perform operations such as board reset, power-off reset, self-test, clock configuration, loopback test, and parameter management.

9.1 Configuring a Board

This describes how to configure a BTS board. After a board is configured, the configuration information of the board is sent to the BTS through the Site Maintenance Terminal System.

9.2 Querying Board Information

This describes how to query the board running state, software version, board alarm count, current clock state, board in-position information, and clock master/backup state.

9.3 Querying Board Extended Information

This describes how to query the E1 port capacity of a board.

9.4 Resetting a board

This function is performed to initialize the parameters associated with a board.

9.5 Resetting a Board in Power-Off Mode

This function is performed to restore the software and hardware parameters of a board to the initial values.

9.6 Testing a Board

This function is performed to check whether the hardware of the board is damaged.

9.7 Setting the BTS Clock

This describes how to set the working mode of the BTS clock.

9.8 Performing Loopback Test of Board Communication Links

This function is performed to check whether the GTMU communicates with the Site Maintenance Terminal normally.

9.9 Querying Board Alarms

This function is performed to query board alarm information. The information involves the object type, object number, alarm level, alarm name, detailed explanation, and recover suggestion.

9.10 Querying Board Parameters

This function is performed to query the operating parameters of the boards. The parameters are the board temperature, E1/T1 capacity, fan speed, inlet temperature.

9.11 Querying Port Attributes

This function is performed to query the availability status, management status, active/standby status, and physical property of ports.

9.1 Configuring a Board

This describes how to configure a BTS board. After a board is configured, the configuration information of the board is sent to the BTS through the Site Maintenance Terminal System.

Prerequisite

You have logged in to the BTS through the Site Maintenance Terminal.

Procedure

Step 1 In the left pane of the **Site Maintenance Terminal System** window, click **Board**. In the right pane of the window, double-click **Board Configuration**.

The **Board Configuration** window is displayed.

Step 2 Right-click a slot, and select a board from the shortcut menu.

The configured board is shown in green on the device panel at first. Then, the system compares the board configured on the device panel with the board actually installed in the BTS, and refreshes the displayed result on the device panel.

M NOTE

If the board still shows green after the displayed result on the device panel is refreshed, you can infer that the configured board runs normally.

If the board shows red after the displayed result on the device panel is refreshed, the causes are as follows:

- The board is configured on the device panel while the board is not actually installed in the BTS.
- The board is configured on the device panel and installed in the BTS. However, the communication between the board and the GTMU cannot be established.

Step 3 Click Refresh.

The system refreshes the result displayed on the device panel. The **Configuring board successfully.** message is displayed on the status bar at the bottom of the interface, as shown in **Figure 9-1**.

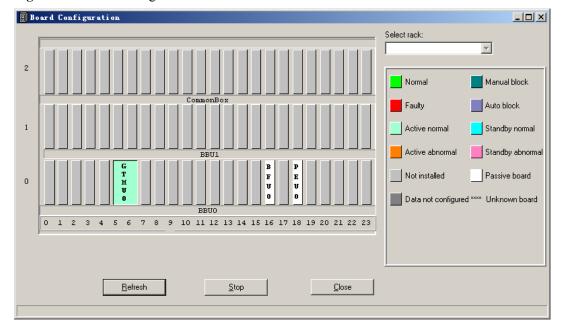


Figure 9-1 Board Configuration window

----End

9.2 Querying Board Information

This describes how to query the board running state, software version, board alarm count, current clock state, board in-position information, and clock master/backup state.

Prerequisite

You have logged in to the BTS through the Site Maintenance Terminal.

Context

The querying of the clock master/backup is applicable only to the GTMU.

Procedure

Step 1 Click Board in the left pane of the Site Maintenance Terminal System window, and then double-click Board Management in the right pane of the window.

The **Board Management** window is displayed, as shown in **Figure 9-2**.


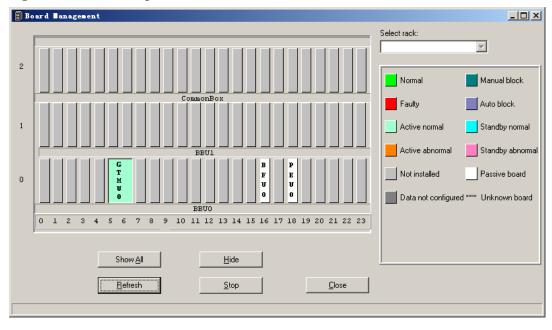


Figure 9-2 Board Management window

- **Step 2** Right-click the board to be queried. A shortcut menu is displayed.
- **Step 3** Select **Board Information** from the shortcut menu.

 The result is displayed in the **Board Information** dialog box, as shown in **Figure 9-3**.

Figure 9-3 Board Information dialog box

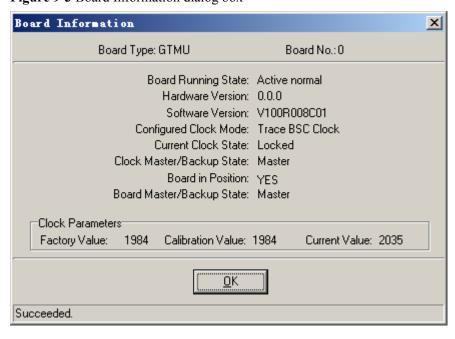

----End

9.3 Querying Board Extended Information

This describes how to query the E1 port capacity of a board.

Prerequisite


You have logged in to the BTS through the Site Maintenance Terminal.

Procedure

Step 1 Click **Board** in the left pane of the **Site Maintenance Terminal System** window, and then double-click **Board Management** in the right pane of the window.

The Board Management window is displayed, as shown in Figure 9-4.

Figure 9-4 Board Management window

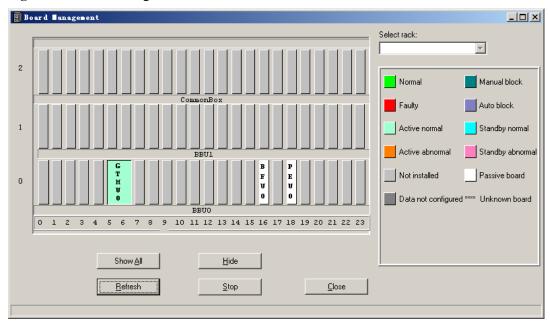

- **Step 2** Right-click the board to be queried. A shortcut menu is displayed.
- Step 3 Select Board Extended Information from the shortcut menu.
 The result is displayed in the Board Extended Information dialog box, as shown in Figure 9-5.

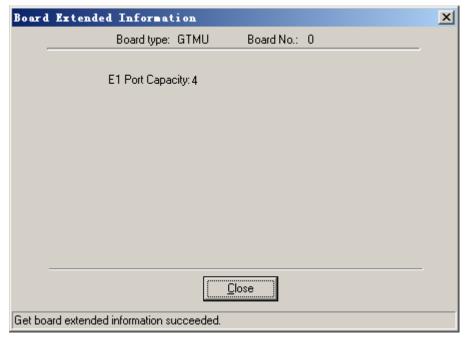


Figure 9-5 Board Extended Information dialog box

----End

9.4 Resetting a board

This function is performed to initialize the parameters associated with a board.

Prerequisite

You have logged in to the BTS through the Site Maintenance Terminal.

Context



The board reset interrupts the BTS services. Therefore, perform this function with care.

Procedure

Step 1 In the left pane of the **Site Maintenance Terminal System** window, click **Board**. In the right pane of the window, double-click **Board Management**.

The **Board Management** window is displayed, as shown in **Figure 9-6**.

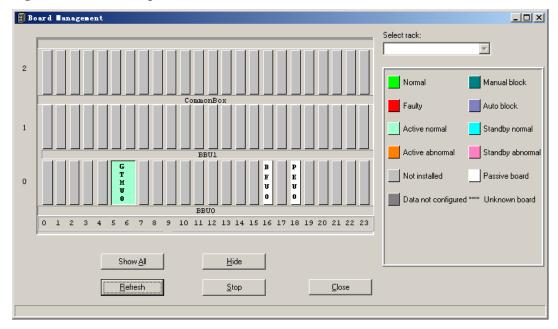


Figure 9-6 Board Management window

- **Step 2** Right-click the target board or module, such as **GTMU**.
 - A shortcut menu is displayed.
- **Step 3** Select **Reset** from the shortcut menu.

The result is displayed in the **Board Reset** window, as shown in **Figure 9-7**.

Figure 9-7 Board Reset window



----End

9.5 Resetting a Board in Power-Off Mode

This function is performed to restore the software and hardware parameters of a board to the initial values.

Prerequisite

You have logged in to the BTS through the Site Maintenance Terminal.

Context




The power-off reset of a board interrupts the BTS services. Therefore, perform this function with care.

Procedure

Step 1 In the left pane of the **Site Maintenance Terminal System** window, click **Board**. In the right pane of the window, double-click **Board Management**.

The **Board Management** window is displayed, as shown in Figure 9-8.

Figure 9-8 Board Management window

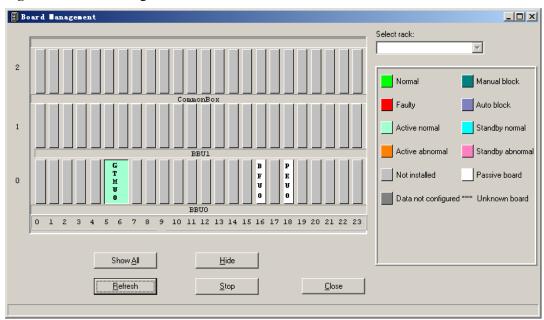

- **Step 2** Right-click the board to be reset, such as the **GTMU**. A shortcut menu is displayed.
- Step 3 Select Power Off Reset from the shortcut menu.

 The result is displayed in the Board Reset window, as shown in Figure 9-9.

Figure 9-9 Board Reset window



----End

9.6 Testing a Board

This function is performed to check whether the hardware of the board is damaged.

Prerequisite


You have logged in to the BTS through the Site Maintenance Terminal.

Procedure

Step 1 Click **Board** in the left pane of the **Site Maintenance Terminal System** window, and then double-click **Board Management** in the right pane of the window.

The **Board Management** window is displayed, as shown in **Figure 9-10**.

Figure 9-10 Board Management window

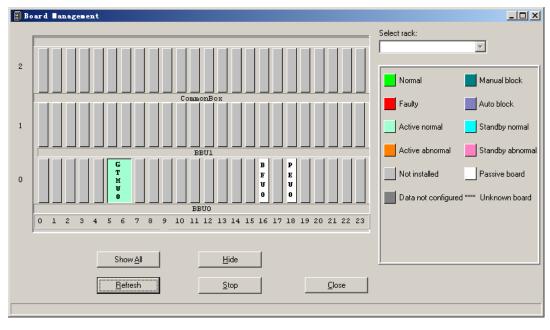

Step 2 Right-click the board to be tested, such as the **GTMU**.

A shortcut menu is displayed.

Step 3 Select **Test** from the shortcut menu.

The **Board Test** dialog box is displayed, as shown in **Figure 9-11**.

Figure 9-11 Board Test dialog box



NOTE

If the test succeeds, you can infer that that no hardware of the board is damaged.

----End

9.7 Setting the BTS Clock

This describes how to set the working mode of the BTS clock.

Prerequisite

You have logged in to the BTS through the Site Maintenance Terminal.

Context

This operation applies only to the GTMU. **Table 9-1** describes the parameters.

Table 9-1 Parameters in the Clock Setup dialog box

Parameter	Meaning	Value Range
Internal clock	The clock unit of the BTS works in free oscillation mode. It is not always synchronous with the network clock.	-
Trace BSC clock	The clock unit works in phase-locked mode. It is synchronous with the 2 Mbit/s clock abstracted from the Abis interface.	-
External Sync. clock	The clock unit of the BTS works in phase-locked mode. It is synchronous with the external 2 MHz reference clock.	-
Clock Calibration	It is used to adjust the frequency of the crystal oscillator.	0-4095


Parameter	Meaning	Value Range
Enable Trace Range Limit	When the BSC clock is offset from the specified range of frequency, the BTS is not synchronous with the BSC clock.	-
Disable Trace Range Limit	The BTS clock is synchronous with the BSC, irrespective of the BSC clock frequency.	-

Procedure

Step 1 Click **Board** in the left pane of the **Site Maintenance Terminal System** window, and then double-click **Board Management** in the right pane of the window.

The **Board Management** window is displayed, as shown in Figure 9-12.

Figure 9-12 Board Management window

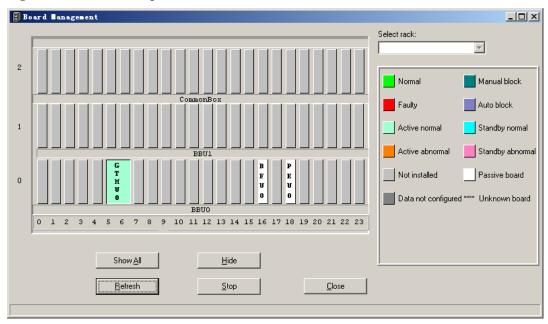

- Step 2 Right-click GTMU.
 - A shortcut menu is displayed.
- **Step 3** Select **Clock Setup** from the shortcut menu. The **Clock Setup** dialog box is displayed.
- Step 4 In the Clock Mode area, select a clock mode.
- Step 5 Click OK.

The result is displayed on the status bar at the bottom of the dialog box, as shown in **Figure 9-13**.

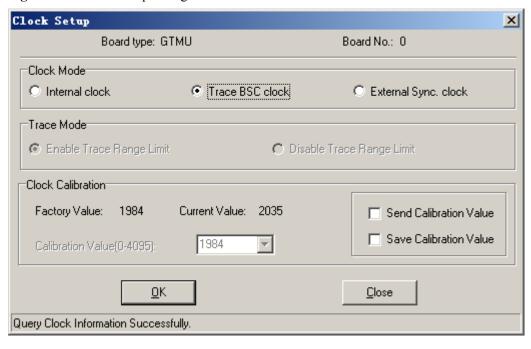


Figure 9-13 Clock Setup dialog box

Step 6 If you need to change the current clock frequency, specify a value in the Calibration Value(0–4095) drop-down list box in the Clock Calibration area, and then select Send Calibration Value. Click OK.

Calibrate the current clock frequency.

Step 7 Select Save Calibration Value. Click OK. The specified clock frequency is saved in the system.

NOTE

In the Clock Mode area, only when you select Trace BSC clock, the Trace Mode can be selected.

----End

9.8 Performing Loopback Test of Board Communication Links

This function is performed to check whether the GTMU communicates with the Site Maintenance Terminal normally.

Prerequisite

- You have logged in to the BTS through the Site Maintenance Terminal.
- The GTMU to be operated is configured properly and is functional.

Context

This operation applies only to the GTMU. **Table 9-2** describes the parameters.

Parameter	Meaning	Value Range	
Data length	The valid data length of a single frame in the loop test command issued by the GTMU.	1-220	
Initial data	The initial value of the valid data of the loop test command issued by the GTMU.	0-255	
Data step length	The incremental step length of the valid data of the loop test command issued by the GTMU.	0-255	


Table 9-2 Parameters in the Loopback Test dialog box

Procedure

Step 1 Click Board in the left pane of the Site Maintenance Terminal System window, and then double-click Board Management in the right pane of the window.

The **Board Management** window is displayed, as shown in **Figure 9-14**.

Figure 9-14 Board Management window

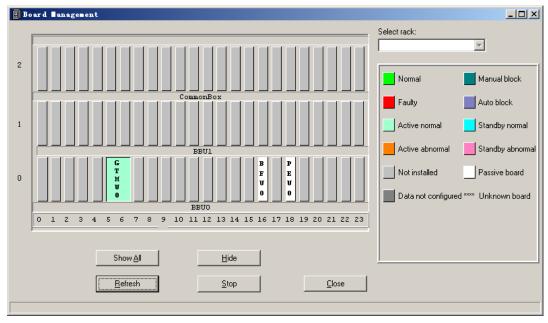

- **Step 2** Right-click the GTMU.
 - A shortcut menu is displayed.
- **Step 3** Select **Loop Test** from the shortcut menu.

The Loop Test dialog box is displayed, as shown in Figure 9-15.

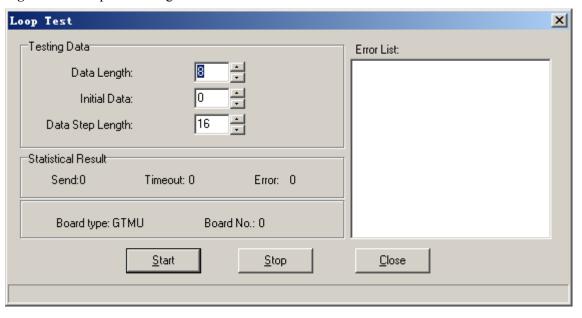


Figure 9-15 Loop Test dialog box

Step 4 Click Start.

After the test is complete, the result is displayed on the status bar at the bottom of the dialog box.

----End

9.9 Querying Board Alarms

This function is performed to query board alarm information. The information involves the object type, object number, alarm level, alarm name, detailed explanation, and recover suggestion.

Prerequisite

You have logged in to the BTS through the Site Maintenance Terminal.

Procedure

Step 1 Click **Board** in the left pane of the **Site Maintenance Terminal System** window, and then double-click **Board Management** in the right pane of the window.

The **Board Management** window is displayed, as shown in Figure 9-16.

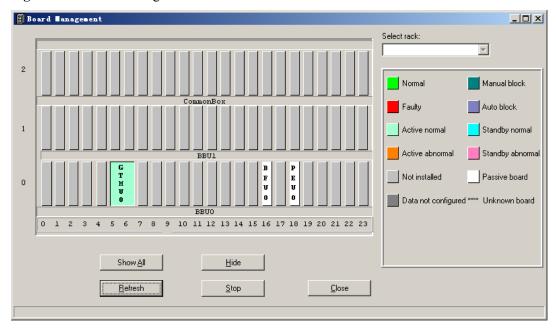


Figure 9-16 Board Management window

- **Step 2** Right-click the board to be queried.
 - A shortcut menu is displayed.
- **Step 3** Select **Board Alarm** from the shortcut menu.

 The **Board Alarm Information** dialog box is displayed.
- Step 4 Click a red grid.

The description of a specific alarm is displayed in the right pane, as shown in Figure 9-17.

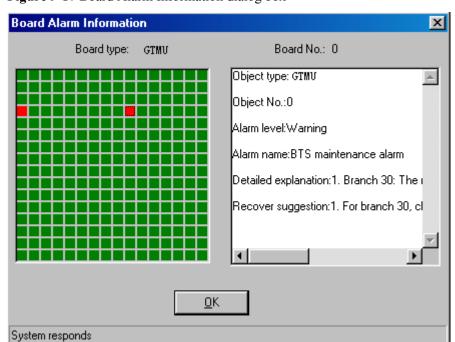


Figure 9-17 Board Alarm Information dialog box

NOTE

Each red grid represents an alarm.

----End

9.10 Querying Board Parameters

This function is performed to query the operating parameters of the boards. The parameters are the board temperature, E1/T1 capacity, fan speed, inlet temperature.

Prerequisite


You have logged in to the BTS through the Site Maintenance Terminal.

Procedure

Step 1 Click Board in the left pane of the Site Maintenance Terminal System window, and then double-click Board Management in the right pane of the window.

The **Board Management** window is displayed, as shown in Figure 9-18.

Figure 9-18 Board Management window

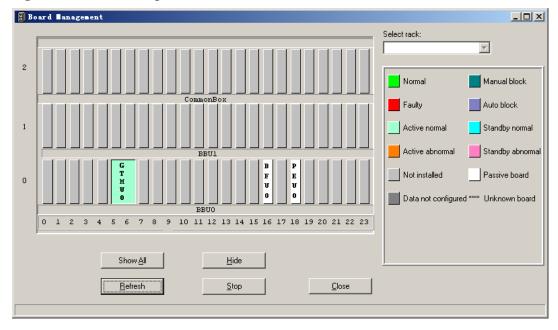

- **Step 2** Right-click the board to be viewed.
 - A shortcut menu is displayed. Select **Parameter Management** from the shortcut menu.
- **Step 3** In the **Parameter Management** window, click the **Running Parameter** tab, and query the running parameters of boards.

The result is displayed on the **Parameter Management** dialog box, as shown in Figure 9-19.

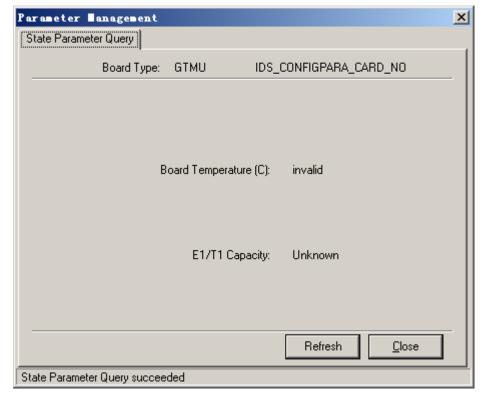


Figure 9-19 Parameter Management dialog box

----End

9.11 Querying Port Attributes

This function is performed to query the availability status, management status, active/standby status, and physical property of ports.

Prerequisite

You have logged in to the BTS through the Site Maintenance Terminal.

Procedure

Step 1 Click **Board** in the left pane of the **Site Maintenance Terminal System** window, and then double-click **Board Management** in the right pane of the window.

The **Board Management** window is displayed, as shown in **Figure 9-20**.

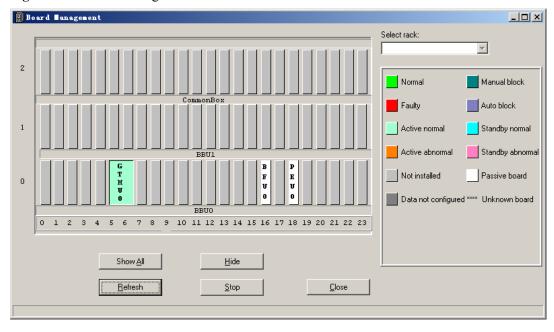


Figure 9-20 Board Management window

- **Step 2** Right-click the target board or module, such as **GTMU**. A shortcut menu is displayed.
- **Step 3** Select **Query CRPI Property**.

The result is displayed in the GTMU port property window, as shown in Figure 9-21.

B GI∎V port property Port Availability Administrative Master/Slave PhysicalProp 0 Enabled UNBLOCK Master Optical Enabled UNBLOCK Optical Master 2 UNBLOCK Enabled Master Optical 3 Enabled UNBLOCK Master Optical 4 Enabled UNBLOCK Optical Master 5 UNBLOCK Enabled Master Optical <u>R</u>efresh <u>C</u>lose Quering port property success.

Figure 9-21 GTMU port property window

----End

$10_{ m DRFU}$ Operations

About This Chapter

DRFU operations include the viewing, setting and testing of the DRFU parameters. You can view the board information, board extended information, and board alarms. You can also perform operations such as the board reset, power-off reset, operation start, self-test, loopback test, parameter management, and antenna mode configuration.

10.1 Viewing Board Information

This describes how to view the board information. The board information includes the board running status, alarms, hardware version, software version, services supported, and in-position boards.

10.2 Viewing Board Extended Information

This describes how to view the board extended information, such as the board type, the operating frequency band, and services supported by the board.

10.3 Resetting a Board in Power-Off Mode

This describes how to initialize the hardware and software parameters of a board.

10.4 Resetting a Board

This describes how to reset the parameters of a board or channel.

10.5 Starting a Board

This describes how to start the RC on a DRFU.

10.6 Testing a Board

This describes how to test the path of a DRFU.

10.7 Changing the Board Management State

This describes how to lock and unlock a DRFU, and to block and unblock channels on the DRFU.

10.8 Performing Loopback Test on Board Communication Links

This describes how to perform the loopback test on the link between the DRFU and the Site Maintenance Terminal.

10.9 Viewing Board Alarms

This describes how to query board alarm information. The information include the object type, object number, alarm level, alarm name, detailed explanation, and recovery suggestion.

10.10 Viewing Board Parameters

This describes how to view the operational parameters and configuration parameters of the DRFU, and the operational parameters of path A and path B.

10.11 Setting the Antenna Mode

This describes how to set the transmit/receive mode of the antenna in accordance with the configuration of the DRFU.

10.1 Viewing Board Information

This describes how to view the board information. The board information includes the board running status, alarms, hardware version, software version, services supported, and in-position boards.

Prerequisite


You have logged in to the BTS through the Site Maintenance Terminal.

Procedure

Step 1 In the left pane of the **Site Maintenance Terminal System** window, select **Board**. In the right pane of the window, double-click **Board Management**.

The **Board Management** window is displayed, as shown in Figure 10-1.

Figure 10-1 Board Management window

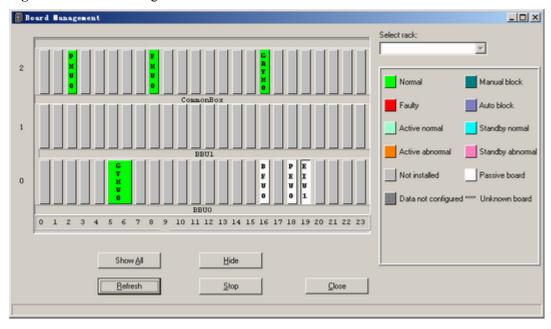

Step 2 In the Board Management window, double-click GTMU.

The **Topology Management** window is displayed, as shown in **Figure 10-2**.


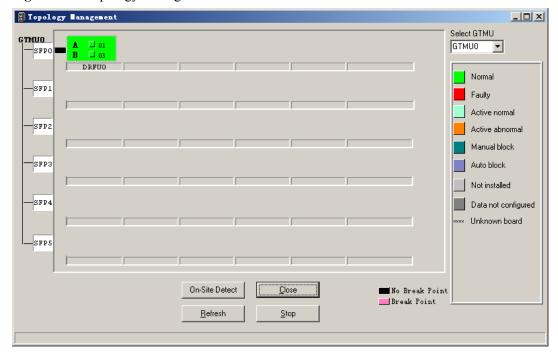


Figure 10-2 Topology Management window

Step 3 Right-click the DFRU to be queried, and choose **Board Information**.

The result is displayed in the **Board Information** dialog box, as shown in **Figure 10-3**.

Figure 10-3 Board information

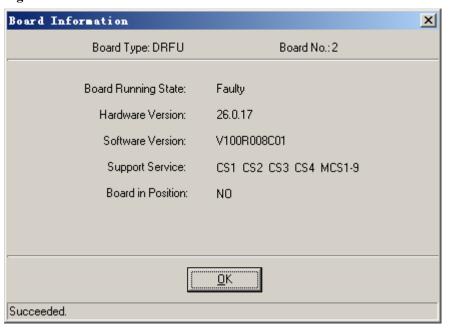

----End

10.2 Viewing Board Extended Information

This describes how to view the board extended information, such as the board type, the operating frequency band, and services supported by the board.

Prerequisite


You have logged in to the BTS through the Site Maintenance Terminal.

Procedure

Step 1 In the left pane of the **Site Maintenance Terminal System** window, select **Board**. In the right pane of the window, double-click **Board Management**.

The Board Management window is displayed, as shown in Figure 10-4.

Figure 10-4 Board Management window

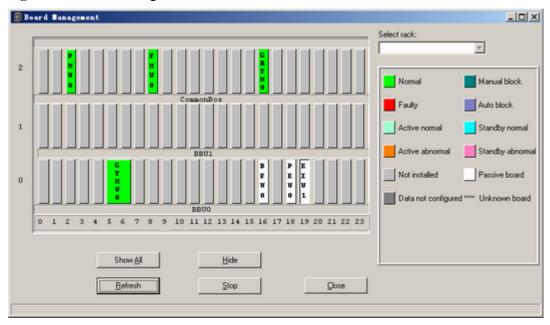

Step 2 In the Board Management window, double-click GTMU.

The **Topology Management** window is displayed, as shown in **Figure 10-5**.



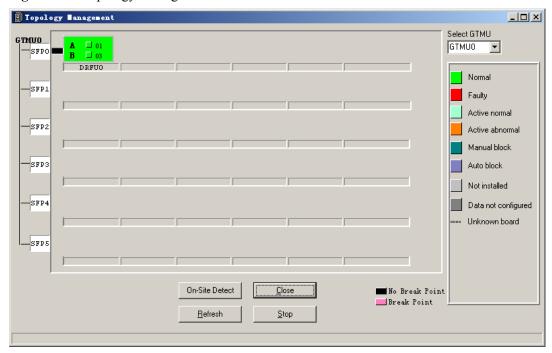


Figure 10-5 Topology Management window

Step 3 Right-click the DRFU whose information you want to view. Choose **Board Extended Information** from the shortcut menu.

The result is displayed in the **Board Extended Information** dialog box, as shown in **Figure 10-6**.

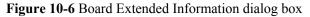

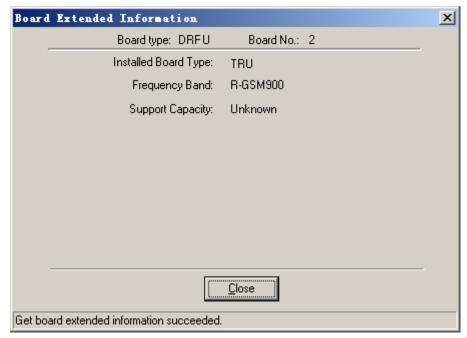

----End

10.3 Resetting a Board in Power-Off Mode

This describes how to initialize the hardware and software parameters of a board.

Prerequisite

You have logged in to the BTS through the Site Maintenance Terminal.

Context



WARNING


The power-off reset of a board interrupts the BTS services. Therefore, perform this function carefully.

Procedure

Step 1 In the left pane of the **Site Maintenance Terminal System** window, select **Board**. In the right pane of the window, double-click **Board Management**.

The **Board Management** window is displayed, as shown in **Figure 10-7**.

Figure 10-7 Board Management window

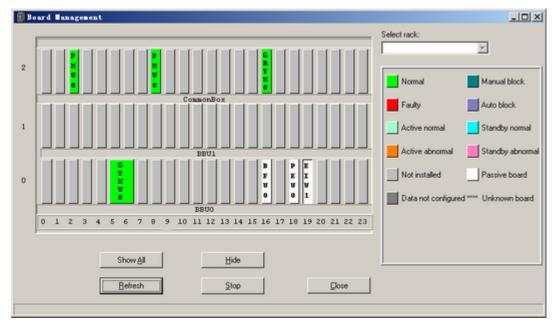

Step 2 In the Board Management window, double-click GTMU.

The **Topology Management** window is displayed, as shown in **Figure 10-8**.


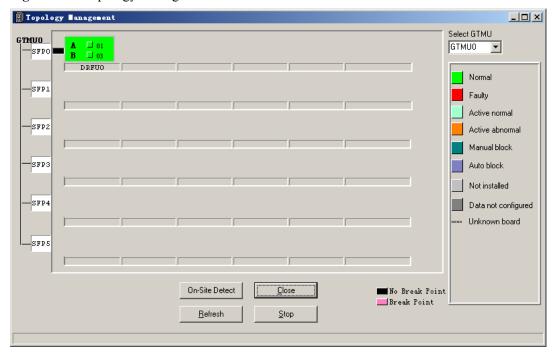


Figure 10-8 Topology Management window

Step 3 In the **Topology Management** window, right-click the target DRFU module. A shortcut menu is displayed, as shown in **Figure 10-9**.

Figure 10-9 Choosing Power Off Reset

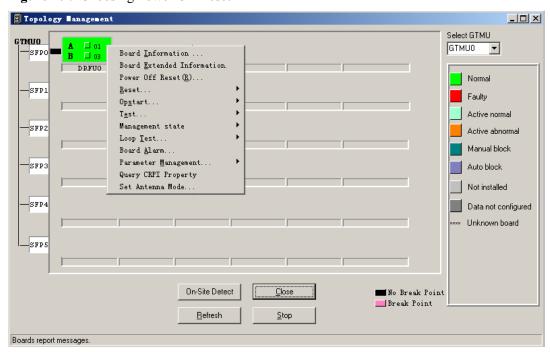

Step 4 Choose Power Off Reset on the shortcut menu.

The result is displayed in the **Board Reset** window, as shown in **Figure 10-10**.

10-8

Figure 10-10 Board Reset window



----End

10.4 Resetting a Board

This describes how to reset the parameters of a board or channel.

Prerequisite

You have logged in to the BTS through the Site Maintenance Terminal.

Context



WARNING

The power-off reset of a board interrupts the BTS services. Therefore, perform this function carefully.

Procedure

Step 1 In the left pane of the **Site Maintenance Terminal System** window, select **Board**. In the right pane of the window, double-click **Board Management**.

The **Board Management** window is displayed, as shown in **Figure 10-11**.

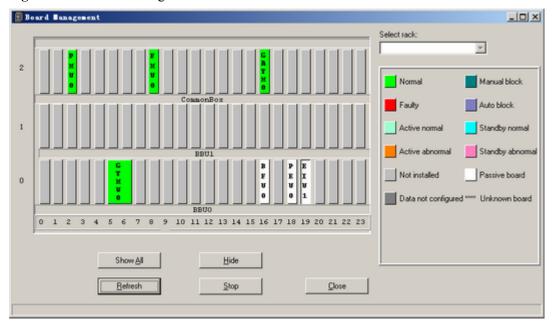


Figure 10-11 Board Management window

Step 2 In the Board Management window, double-click GTMU.

The **Topology Management** window is displayed, as shown in **Figure 10-12**.

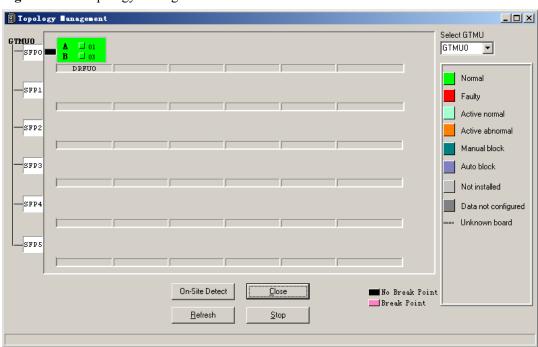


Figure 10-12 Topology Management window

Step 3 In the **Topology Management** window, right-click the target DRFU module.

A shortcut menu is displayed, as shown in **Figure 10-13**.

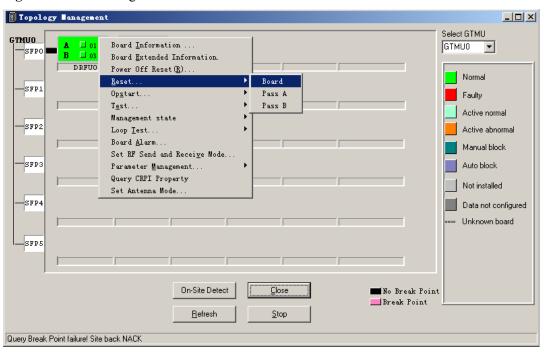


Figure 10-13 Choosing Reset

Step 4 If you want to reset the board, choose **Board** from the shortcut menu.


The result is displayed in the **Board Reset** window, as shown in **Figure 10-14**.

Figure 10-14 Board Reset window



Step 5 If you want to reset the path, choose Pass A or Pass B.The Reset dialog box is displayed, as shown in Figure 10-15.

Figure 10-15 Reset dialog box

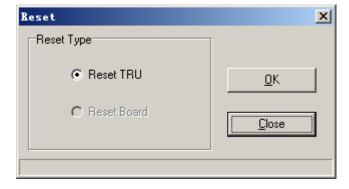

Click **OK** to perform path resetting.

----End

10.5 Starting a Board

This describes how to start the RC on a DRFU.

Prerequisite


You have logged in to the BTS through the Site Maintenance Terminal.

Procedure

Step 1 In the left pane of the **Site Maintenance Terminal System** window, select **Board**. In the right pane of the window, double-click **Board Management**.

The **Board Management** window is displayed, as shown in Figure 10-16.

Figure 10-16 Board Management window

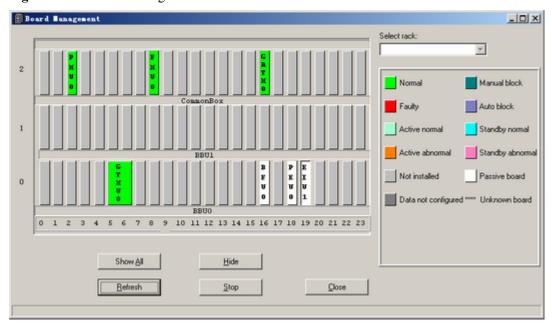

Step 2 In the Board Management window, double-click GTMU.

The **Topology Management** window is displayed, as shown in **Figure 10-17**.


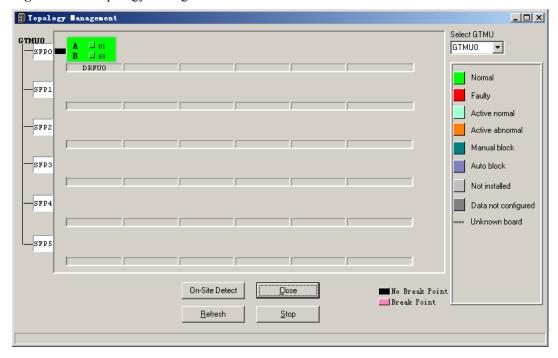


Figure 10-17 Topology Management window

Step 3 In the **Topology Management** window, right-click the target DRFU module, as shown in **Figure 10-18**.

Figure 10-18 Choosing Opstart

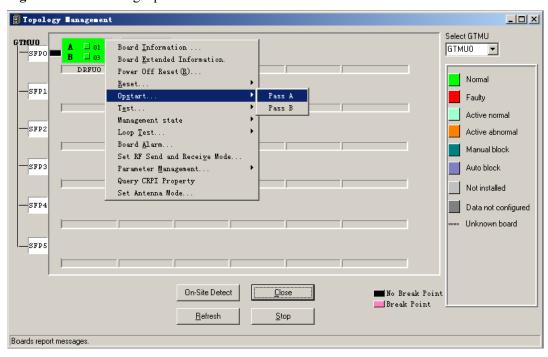


Step 4 Choose the path to be tested, for example, Pass A.

The **Opstart** dialog box is displayed, as shown in **Figure 10-19**.

NOTE

Pass A and Pass B refer to two RCs on the DRFU.

Figure 10-19 Opstart dialog box

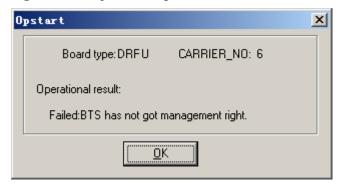

----End

10.6 Testing a Board

This describes how to test the path of a DRFU.

Prerequisite


You have logged in to the BTS through the Site Maintenance Terminal.

Procedure

Step 1 In the left pane of the Site Maintenance Terminal System window, select Board. In the right pane of the window, double-click Board Management.

The Board Management window is displayed, as shown in Figure 10-20.

Figure 10-20 Board Management window

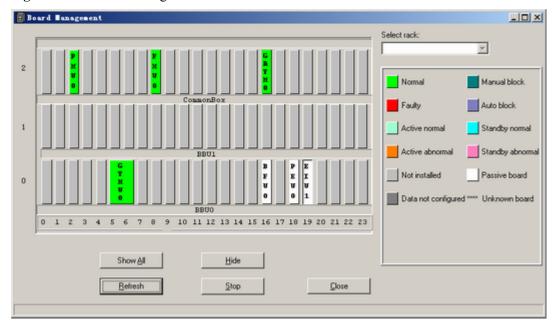

Step 2 In the Board Management window, double-click GTMU.

The **Topology Management** window is displayed, as shown in **Figure 10-21**.


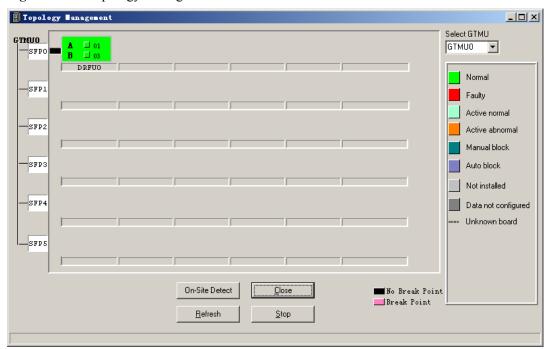


Figure 10-21 Topology Management window

Step 3 In the **Topology Management** window, right-click the target DRFU module. A shortcut menu is displayed, as shown in **Figure 10-22**.


Figure 10-22 Choosing the path to be tested

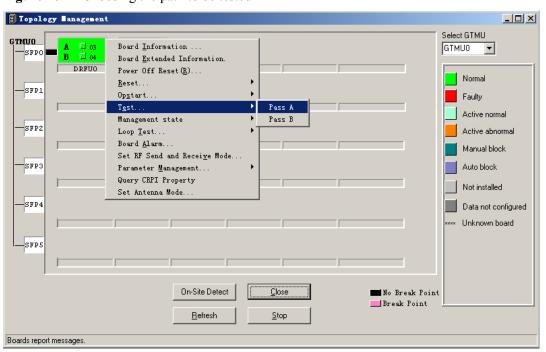

Step 4 Choose the path to be tested, for example, Pass A.

The result is displayed in the **Board Test** dialog box, as shown in **Figure 10-23**.

Figure 10-23 Board Test dialog box

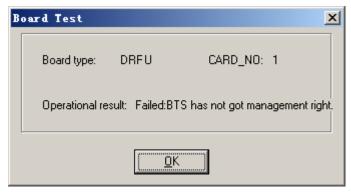

□ NOTE

A successful test indicates that the path works normally.

----End

10.7 Changing the Board Management State

This describes how to lock and unlock a DRFU, and to block and unblock channels on the DRFU.

Prerequisite


You have logged in to the BTS through the Site Maintenance Terminal.

Procedure

Step 1 In the left pane of the **Site Maintenance Terminal System** window, select **Board**. In the right pane of the window, double-click **Board Management**.

The Board Management window is displayed, as shown in Figure 10-24.


Figure 10-24 Board Management window

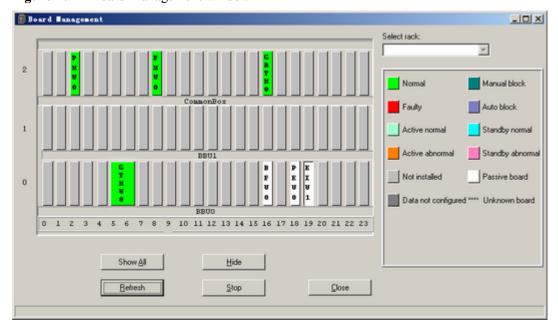

Step 2 In the Board Management window, double-click GTMU.


The Topology Management window is displayed, as shown in Figure 10-25.

Figure 10-25 Topology Management window

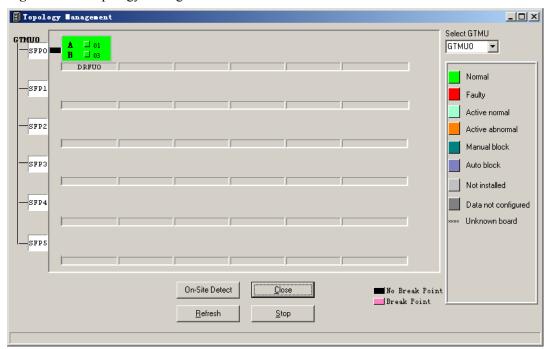

Step 3 In the Topology Management window, right-click the target DRFU. Choose Management state > Locked, as shown in Figure 10-26.

Figure 10-26 Choosing Management state

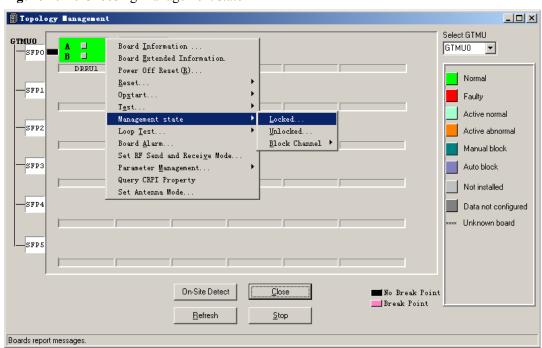

Step 4 Choose Locked.

The LOCKED dialog box is displayed, as shown in Figure 10-27.


Figure 10-27 LOCKED dialog box



Step 5 Choose Unlocked.

The UNLOCKED dialog box is displayed, as shown in Figure 10-28.

Figure 10-28 UNLOCKED dialog box

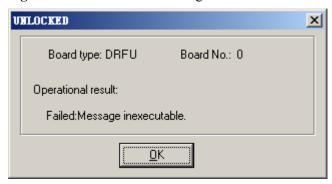

Step 6 To block or unblock a channel on the TRX, choose **Management stateBlock Channel**. A cascaded shortcut menu is displayed, as shown in **Figure 10-29**.

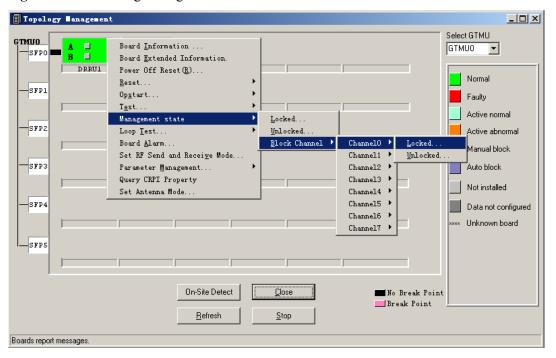


Figure 10-29 Choosing Management state

Step 7 Choose Locked or Unlocked.

The Channel0LOCKED dialog box is displayed, as shown in Figure 10-30.

Figure 10-30 Channel0LOCKED dialog box



----End

10.8 Performing Loopback Test on Board Communication Links

This describes how to perform the loopback test on the link between the DRFU and the Site Maintenance Terminal.

Prerequisite

- You have logged in to the BTS through the Site Maintenance Terminal.
- The target DRFU has been configured correctly and is running properly.

Context

Table 10-1 lists the descriptions of the parameters.

Table 10-1 Parameters in the Loop Test dialog box

Parameter Name	Meaning	Value Range
Data Length	Refers to the length of the valid data of the single frame of the loopback test command.	1-220
Initial Data	Refers to the initial value of the valid data in the loopback test command.	0-255
Data Step Length	Refers to the incremental step length of the valid data in the loopback test command.	0-255

Procedure

Step 1 In the left pane of the **Site Maintenance Terminal System** window, select **Board**. In the right pane of the window, double-click **Board Management**.

The **Board Management** window is displayed, as shown in Figure 10-31.

Figure 10-31 Board Management window

Step 2 In the **Board Management** window, double-click **GTMU**.

The **Topology Management** window is displayed, as shown in **Figure 10-32**.



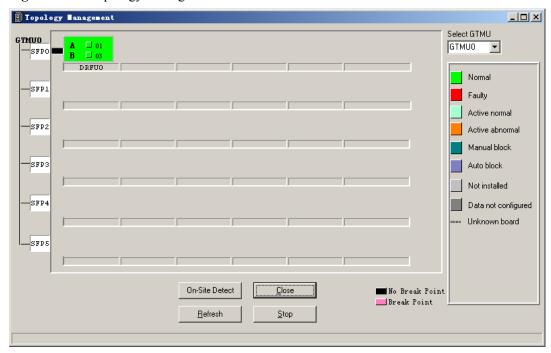


Figure 10-32 Topology Management window

Step 3 In the **Topology Management** window, right-click the target DRFU module, as shown in **Figure 10-33**.

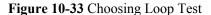

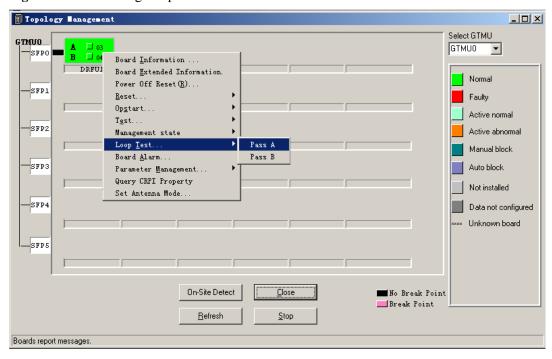

Step 4 Choose Pass A or Pass B to be tested.

The Loop Test dialog box is displayed, as shown in Figure 10-34.

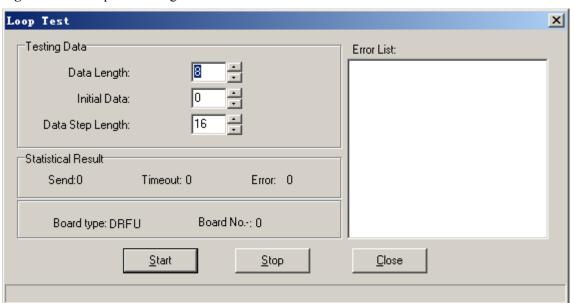


Figure 10-34 Loop Test dialog box

Step 5 Click Start.

After the test is complete, the result is displayed on the status bar.

----End

10.9 Viewing Board Alarms

This describes how to query board alarm information. The information include the object type, object number, alarm level, alarm name, detailed explanation, and recovery suggestion.

Prerequisite

You have logged in to the BTS through the Site Maintenance Terminal.

Procedure

Step 1 In the left pane of the **Site Maintenance Terminal System** window, select **Board**. In the right pane of the window, double-click **Board Management**.

The **Board Management** window is displayed, as shown in **Figure 10-35**.

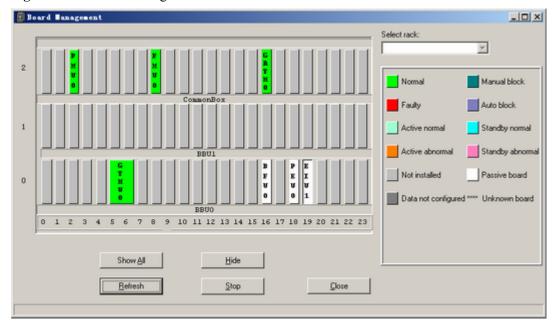


Figure 10-35 Board Management window

Step 2 In the Board Management window, double-click GTMU.

The **Topology Management** window is displayed, as shown in **Figure 10-36**.

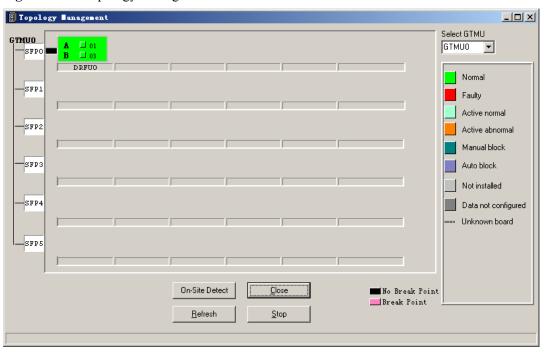


Figure 10-36 Topology Management window

Step 3 Right-click the DRFU whose information you want to view. Choose **Board Alarm** on the shortcut menu.

The result is displayed in the **Board Alarm Information** dialog box, as shown in **Figure 10-37**.

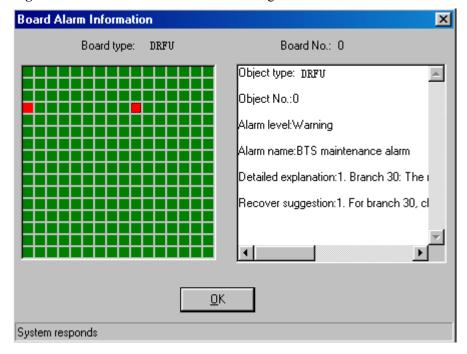


Figure 10-37 Board Alarm Information dialog box

■ NOTE

A red grid represents an alarm.

----End

10.10 Viewing Board Parameters

This describes how to view the operational parameters and configuration parameters of the DRFU, and the operational parameters of path A and path B.

Prerequisite

You have logged in to the BTS through the Site Maintenance Terminal.

Procedure

Step 1 In the left pane of the **Site Maintenance Terminal System** window, select **Board**. In the right pane of the window, double-click **Board Management**.

The **Board Management** window is displayed, as shown in Figure 10-38.

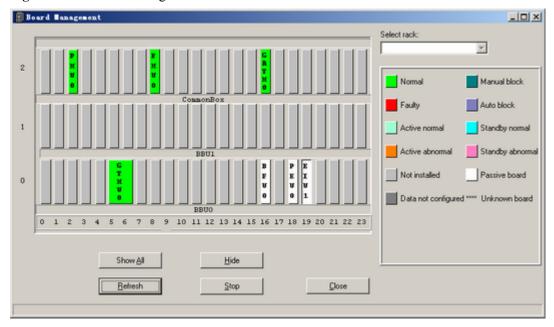


Figure 10-38 Board Management window

Step 2 In the Board Management window, double-click GTMU.

The **Topology Management** window is displayed, as shown in **Figure 10-39**.

Topology ■anagement _ | N Select GTMU GTMUO GTMU0 SFPO DREIIO Normal SFP1 Active normal SFP2 Active abnormal Manual block SFPS Auto block Not installed SFP4 Data not configured Unknown board SFPS On-Site Detect Close No Break Point Break Point <u>R</u>efresh Stop

Figure 10-39 Topology Management window

Step 3 Right-click the DRFU whose information you want to view. Choose Parameter Management on the shortcut menu,

as shown in Figure 10-40.

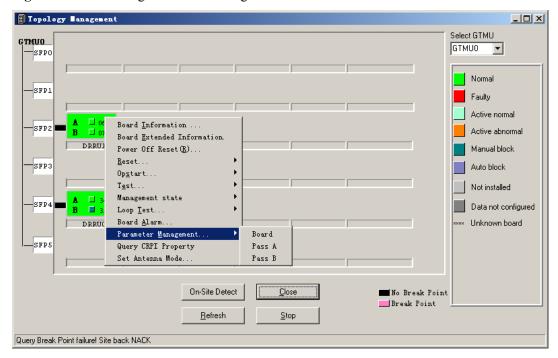


Figure 10-40 Choosing Parameter Management

Step 4 To view and set the operational and configuration parameters associated with a board, choose **Board**.

The **Parameter Management** window is displayed, as shown in **Figure 10-41**, **Figure 10-42** and **Figure 10-43**.

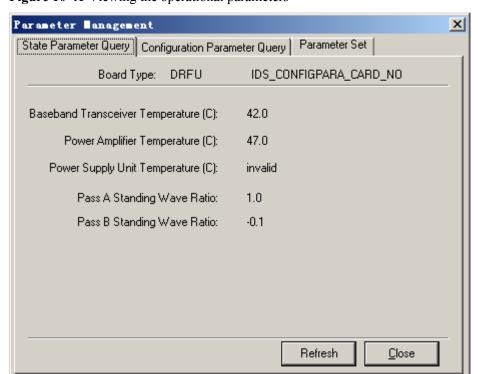


Figure 10-41 Viewing the operational parameters

Configuration Parameter Query succeeded


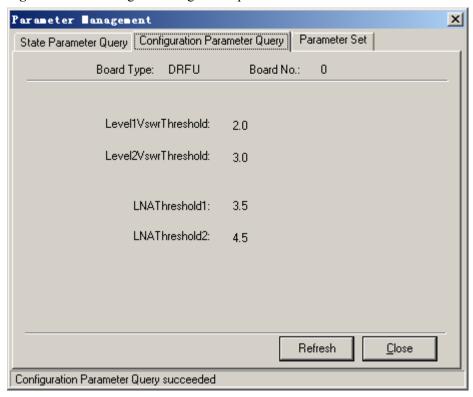


Figure 10-42 Viewing the configuration parameters

Figure 10-43 Setting the parameters

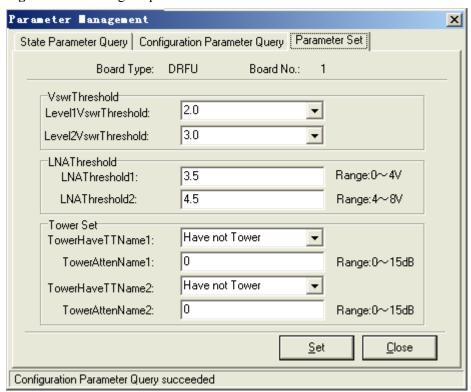

Step 5 To view the operational parameters of a channel, choose Pass A or Pass B.
The Parameter Management dialog box associated with the path A or B is displayed, as shown in Figure 10-44.

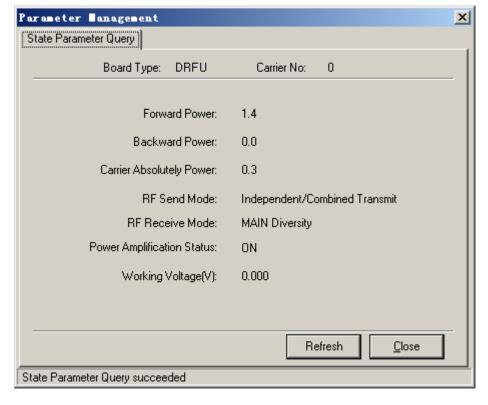


Figure 10-44 Viewing the operational parameters of a path

----End

10.11 Setting the Antenna Mode

This describes how to set the transmit/receive mode of the antenna in accordance with the configuration of the DRFU.

Prerequisite

You have logged in to the BTS through the Site Maintenance Terminal.

Procedure

Step 1 In the left pane of the **Site Maintenance Terminal System** window, select **Board**. In the right pane of the window, double-click **Board Management**.

The **Board Management** window is displayed, as shown in **Figure 10-45**.

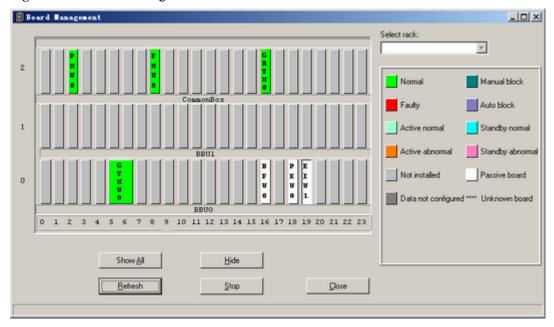


Figure 10-45 Board Management window

Step 2 In the Board Management window, double-click GTMU.

The **Topology Management** window is displayed, as shown in **Figure 10-46**.

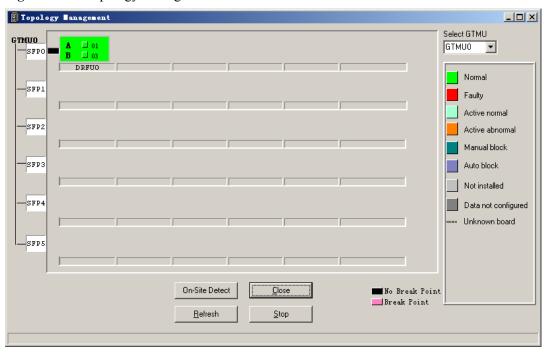


Figure 10-46 Topology Management window

Step 3 In the **Topology Management** window, right-click the target DRFU, as shown in **Figure 10-47**.


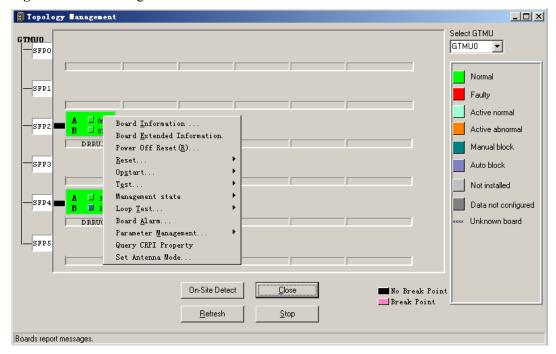


Figure 10-47 Choosing Set Antenna Mode

Step 4 Choose Set Antenna Mode from the shortcut menu.

The **Set Antenna Mode** window is displayed, as shown in **Figure 10-48**.

Figure 10-48 Set Antenna Mode window

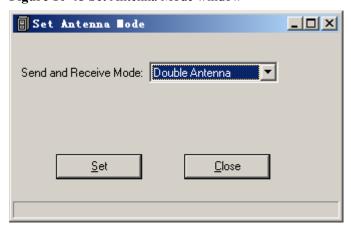

You can select Single Antenna Double Receiver, Double Antenna, or Double Antenna Quad Receiver.

----End

11 DRFU Configuration

About This Chapter

This describes how to perform various operations on the DRFU based on the actual requirement, such as adding or deleting an DRFU, adding or removing a ring, displaying in-position boards, detecting in-position boards, setting and canceling a breakpoint.

11.1 Adding a DRFU

This describes how to deploy a DRFU into a required position by specifying the board number, SFP number, and hop number.

11.2 Deleting a DRFU

This describes how to delete a DRFU by specifying the SFP number and the hop number.

11.3 Adding a Ring

This describes how to form a DRFU ring using two independent DRFU chains.

11.4 Dividing a Ring

This describes how to divide a DRFU ring into two independent DRFU chains.

11.5 Displaying In-Position Boards

This describes how to check whether there are in-position boards in the BTS. An in-position board is a board that is installed in the BTS cabinet and whose data is not configured.

11.6 Detecting In-Position Boards

This describes how to detect the information about the in-position boards.

11.7 Setting a Breakpoint

This describes how to set a breakpoint on a DRFU chain or ring. A DRFU chain can be configured with only one breakpoint. After a breakpoint is configured, the DRFU chain is divided into two parts. A DRFU ring can be configured with two breakpoints. After two breakpoints are configured, the DRFU ring is divided into three parts.

11.8 Canceling a Breakpoint

This describes how to cancel a breakpoint set on a DRFU chain or ring.

11.1 Adding a DRFU

This describes how to deploy a DRFU into a required position by specifying the board number, SFP number, and hop number.

Prerequisite


You have logged in to the BTS through the Site Maintenance Terminal.

Procedure

Step 1 In the left pane of the **Site Maintenance Terminal System** window, select **Board**. In the right pane of the window, double-click **Board Configuration**.

The **Board Configuration** window is displayed, as shown in **Figure 11-1**.

Figure 11-1 Board Configuration window

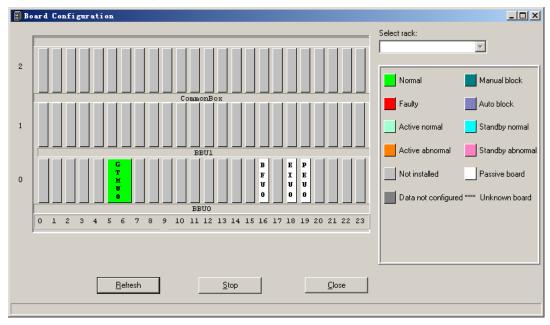

Step 2 In the **Board Configuration** window, double-click **GTMU**.

The **Topology Configuration** window is displayed, as shown in **Figure 11-2**.


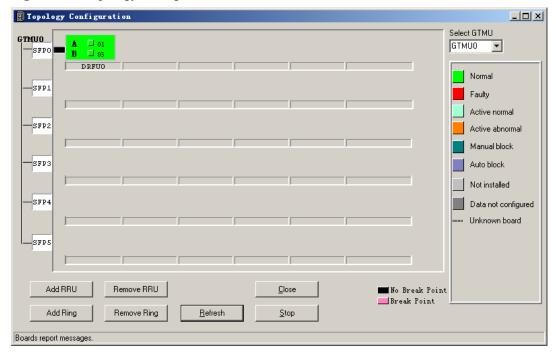


Figure 11-2 Topology Configuration window

Step 3 In the Topology Configuration window, click Add RRU.

The **Deploy DRRU** window is displayed. Select **DRFU** under the **Card Type**, as shown in **Figure 11-3**.

Figure 11-3 Deploy DRRU window

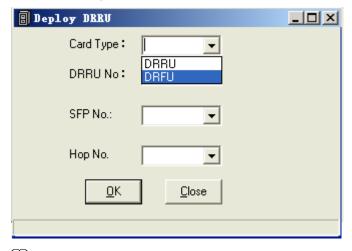


M NOTE

The SFP number ranges from 0 to 5. The hop number ranges from 1 to 6.

Step 4 In the **Deploy DRRU** window, select the board number, SFP number, and hop number of the DRFU to be added,


as shown in Figure 11-4.

Figure 11-4 Deploy DRRU window

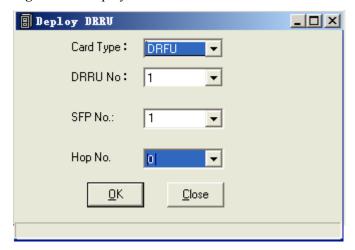

Step 5 In the Deploy DRRU window, click OK. Adding the DRFU is complete.The Topology Configuration window is displayed, as shown in Figure 11-5.

Figure 11-5 Topology Configuration window

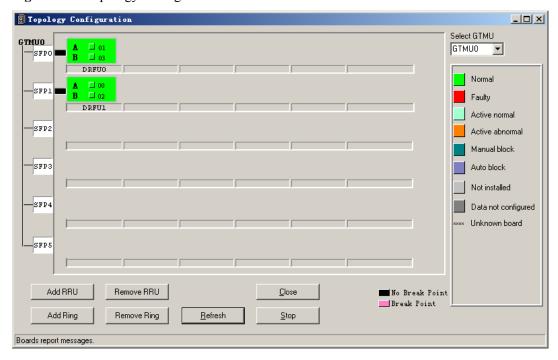

----End

11.2 Deleting a DRFU

This describes how to delete a DRFU by specifying the SFP number and the hop number.

Prerequisite


You have logged in to the BTS through the Site Maintenance Terminal.

Procedure

Step 1 In the left pane of the **Site Maintenance Terminal System** window, select **Board**. In the right pane of the window, double-click **Board Configuration**.

The **Board Configuration** window is displayed, as shown in **Figure 11-6**.

Figure 11-6 Board Configuration window

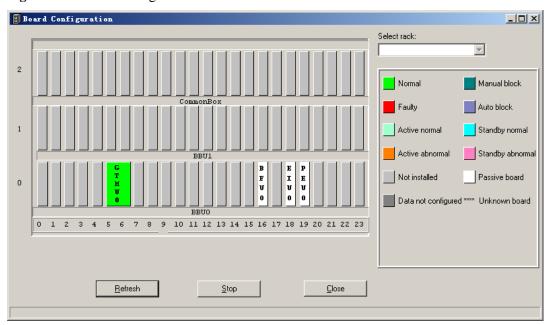

Step 2 In the **Board Configuration** window, double-click **GTMU**.

The **Topology Configuration** window is displayed, as shown in **Figure 11-7**.

Topology Configuration __X Select GTMU GTMUO GTMU0 Normal Faulty DRFU1 Active normal SFP2 Active abnormal Manual block SFPS Auto block Not installed SFP4 Data not configured Unknown board SFPS Add RRU Remove RRU <u>C</u>lose ■ No Break Point Break Point Add Ring Remove Ring <u>R</u>efresh

Figure 11-7 Topology Configuration window

Boards report messages

Step 3 In the Topology Configuration window, click Remove RRU.

The **Delete DRRU** window is displayed, as shown in **Figure 11-8**.

Figure 11-8 Delete DRRU window



M NOTE

The SFP number ranges from 0 to 5. The hop number ranges from 1 to 6.

Step 4 In the **Delete DRRU** window, select the SFP number and the hop number of the DRFU to be deleted, and then click **OK**. Deleting the DRFU is complete.

----End

11.3 Adding a Ring

This describes how to form a DRFU ring using two independent DRFU chains.

Prerequisite

You have logged in to the BTS through the Site Maintenance Terminal.

Procedure

Step 1 In the left pane of the **Site Maintenance Terminal System** window, select **Board**. In the right pane of the window, double-click **Board Configuration**.

The **Board Configuration** window is displayed, as shown in **Figure 11-9**.


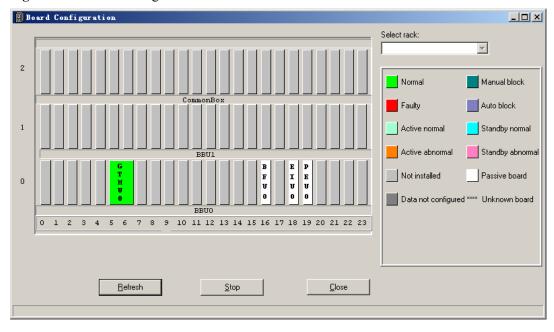


Figure 11-9 Board Configuration window

Step 2 In the Board Configuration window, double-click GTMU.

The **Topology Configuration** window is displayed, as shown in **Figure 11-10**.



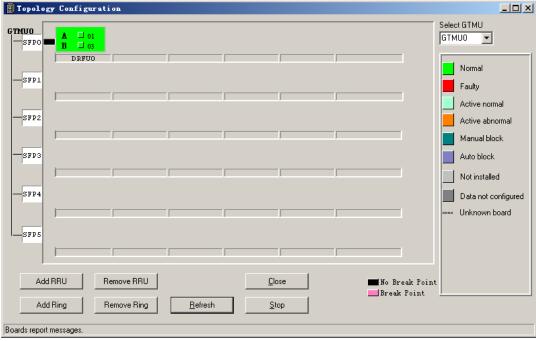

Step 3 In the Topology Configuration window, click Add Ring.

The Add Ring window is displayed, as shown in Figure 11-11.

Figure 11-11 Add Ring window



Step 4 In the Add Ring window, select a loop begin port and a loop end port, and then click OK.

----End

11.4 Dividing a Ring

This describes how to divide a DRFU ring into two independent DRFU chains.

Prerequisite

You have logged in to the BTS through the Site Maintenance Terminal.

Procedure

Step 1 In the left pane of the **Site Maintenance Terminal System** window, select **Board**. In the right pane of the window, double-click **Board Configuration**.

The Board Configuration window is displayed, as shown in Figure 11-12.


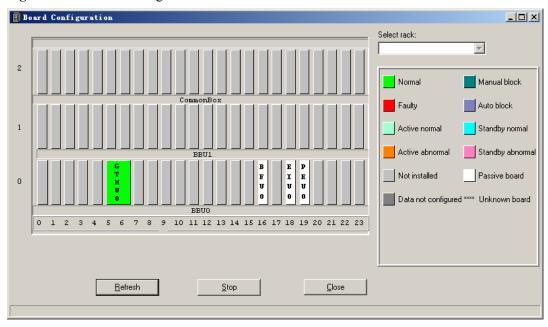


Figure 11-12 Board Configuration window

Step 2 In the Board Configuration window, double-click GTMU.

The **Topology Configuration** window is displayed, as shown in **Figure 11-13**.




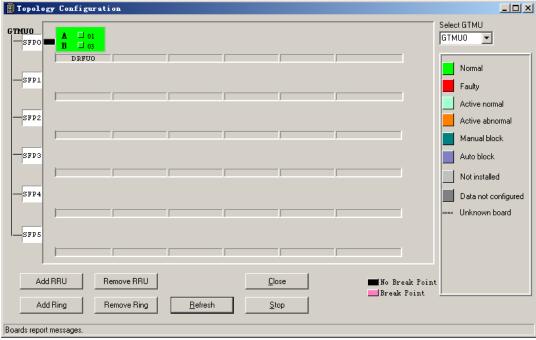

Step 3 In the Topology Configuration window, click Remove Ring.

The Divide Ring window is displayed, as shown in Figure 11-14.

Figure 11-14 Divide Ring window

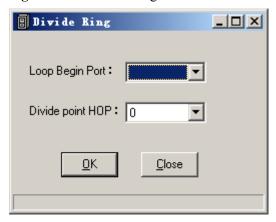

Step 4 In the **Divide Ring** window, select a loop begin port and a divide point hop, and then click **OK**.

----End

11.5 Displaying In-Position Boards

This describes how to check whether there are in-position boards in the BTS. An in-position board is a board that is installed in the BTS cabinet and whose data is not configured.

Prerequisite

You have logged in to the BTS through the Site Maintenance Terminal.

Procedure

Step 1 In the left pane of the **Site Maintenance Terminal System** window, select **Board**. In the right pane of the window, double-click **Board Management**.

The **Board Management** window is displayed, as shown in Figure 11-15.

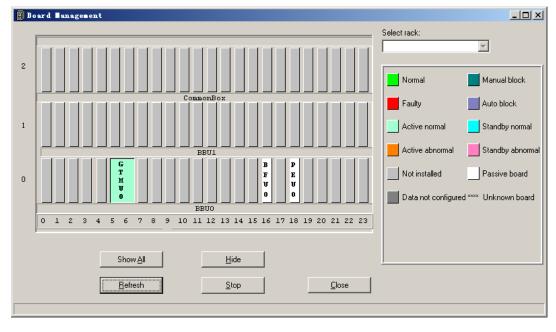


Figure 11-15 Board Management window

Step 2 In the Board Management window, click Show All.

All the in-position boards are displayed.

NOTE

By default, the boards whose data is not configured are shown in dark gray.

----End

11.6 Detecting In-Position Boards

This describes how to detect the information about the in-position boards.

Prerequisite

You have logged in to the BTS through the Site Maintenance Terminal.

Procedure

Step 1 In the left pane of the **Site Maintenance Terminal System** window, select **Board**. In the right pane of the window, double-click **Board Management**.

The **Board Management** window is displayed, as shown in **Figure 11-16**.

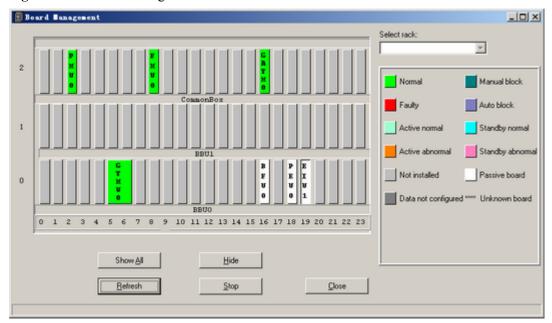


Figure 11-16 Board Management window

Step 2 In the Board Management window, double-click GTMU.

The **Topology Management** window is displayed, as shown in **Figure 11-17**.

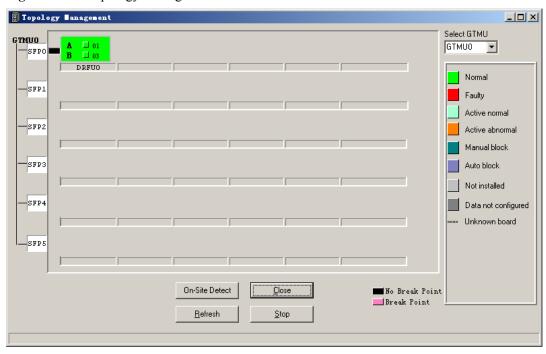


Figure 11-17 Topology Management window

Step 3 In the Topology Management window, click On-Site Detect.

The **On-Site Topology Management** window is displayed, as shown in **Figure 11-18**.

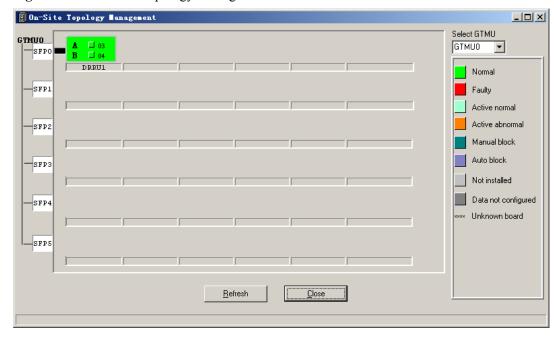


Figure 11-18 On-Site Topology Management window

----End

11.7 Setting a Breakpoint

This describes how to set a breakpoint on a DRFU chain or ring. A DRFU chain can be configured with only one breakpoint. After a breakpoint is configured, the DRFU chain is divided into two parts. A DRFU ring can be configured with two breakpoints. After two breakpoints are configured, the DRFU ring is divided into three parts.

Prerequisite

You have logged in to the BTS through the Site Maintenance Terminal.

Procedure

Step 1 In the left pane of the **Site Maintenance Terminal System** window, select **Board**. In the right pane of the window, double-click **Board Management**.

The **Board Management** window is displayed, as shown in **Figure 11-19**.

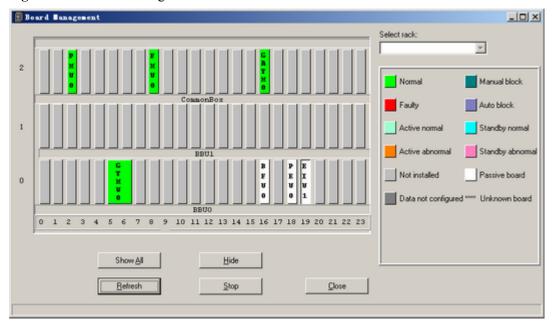


Figure 11-19 Board Management window

Step 2 In the Board Management window, double-click GTMU.

The **Topology Management** window is displayed, as shown in **Figure 11-20**.

Topology ■anagement _ | N Select GTMU GTMUO GTMU0 SFPO DREIIO Normal SFP1 SFP2 Active abnormal Manual block SFPS Auto block Not installed SFP4 Data not configured Unknown board SFPS On-Site Detect <u>C</u>lose No Break Point Break Point <u>R</u>efresh Stop

Figure 11-20 Topology Management window

Step 3 Right-click the target chain or ring.

The Topology Management window is displayed, as shown in Figure 11-21.

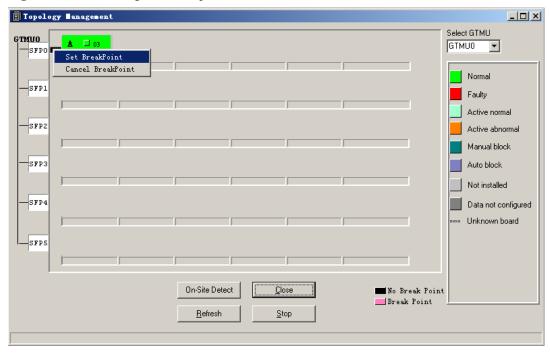


Figure 11-21 Choosing Set Breakpoint

NOTE

No Break Point (shown in black by default) refers to the connection where a breakpoint cannot be set. Break Point (shown in pink by default) refers to the connection where a breakpoint can be set.

Step 4 Click Set Breakpoint

to set the breakpoint.

----End

11.8 Canceling a Breakpoint

This describes how to cancel a breakpoint set on a DRFU chain or ring.

Prerequisite

You have logged in to the BTS through the Site Maintenance Terminal.

Procedure

Step 1 In the left pane of the Site Maintenance Terminal System window, select Board. In the right pane of the window, double-click Board Management.

The **Board Management** window is displayed, as shown in **Figure 11-22**.

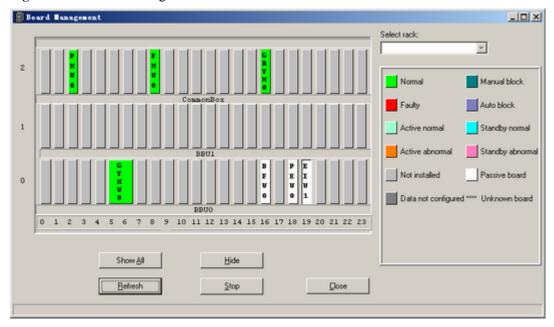


Figure 11-22 Board Management window

Step 2 In the Board Management window, double-click GTMU.

The **Topology Management** window is displayed, as shown in **Figure 11-23**.

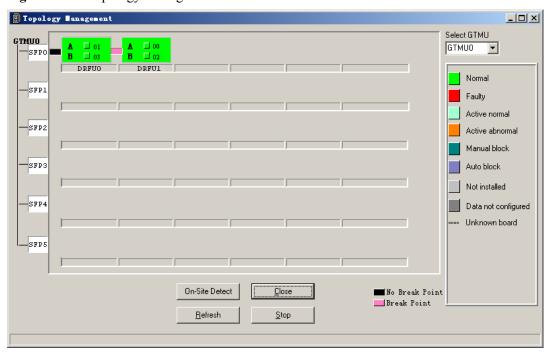


Figure 11-23 Topology Management window

Step 3 Right-click the target chain or ring.

The Topology Management window is displayed, as shown in Figure 11-24.

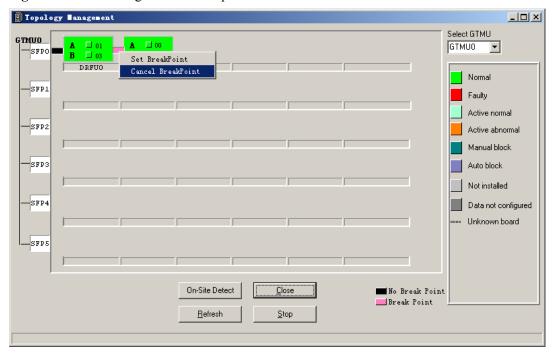


Figure 11-24 Choosing Cancel Breakpoint

Step 4 Click Cancel Breakpoint

to cancel a breakpoint.

----End