




Garmin GPS V Button Pad Replacement

This guide explains how to replace the button pad if damaged or worn.


Written By: Connor

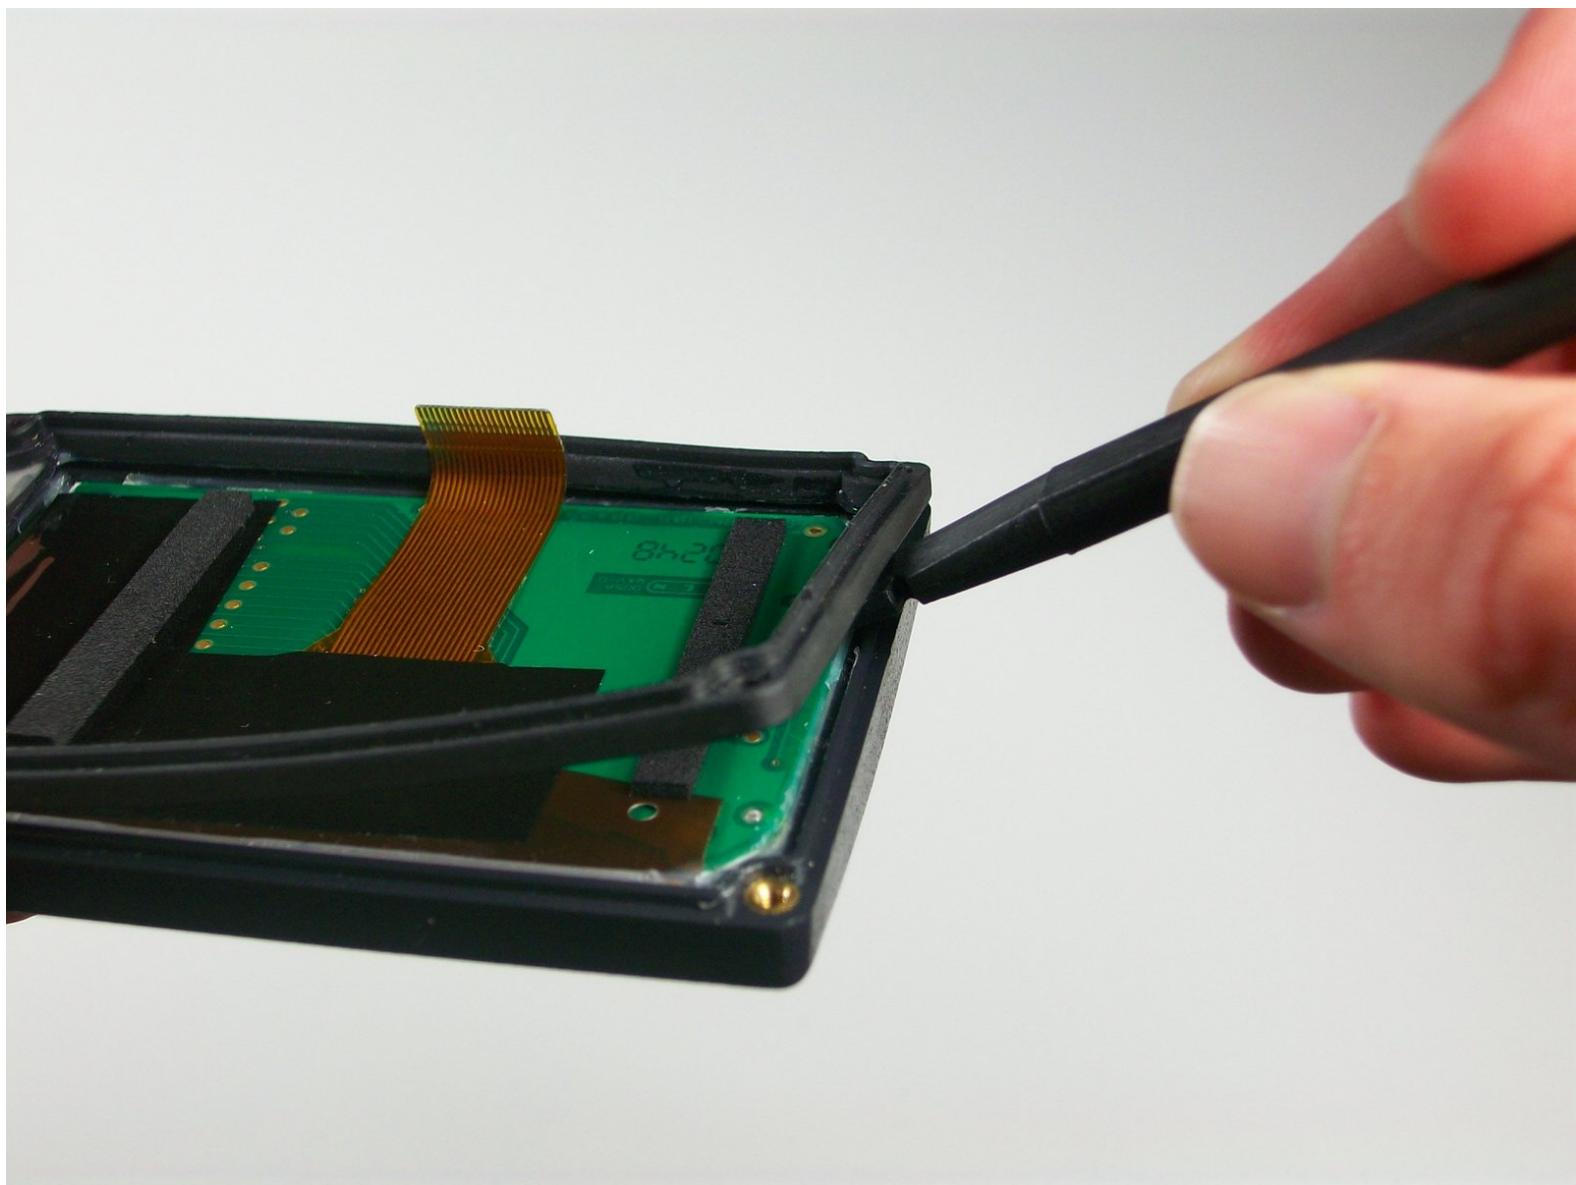

 **TOOLS:**


- **Phillips #0 Screwdriver** (1)
- **Phillips #1 Screwdriver** (1)
- **Soldering Workstation** (1)
- **Spudger** (1)

Step 1 — Logic Board

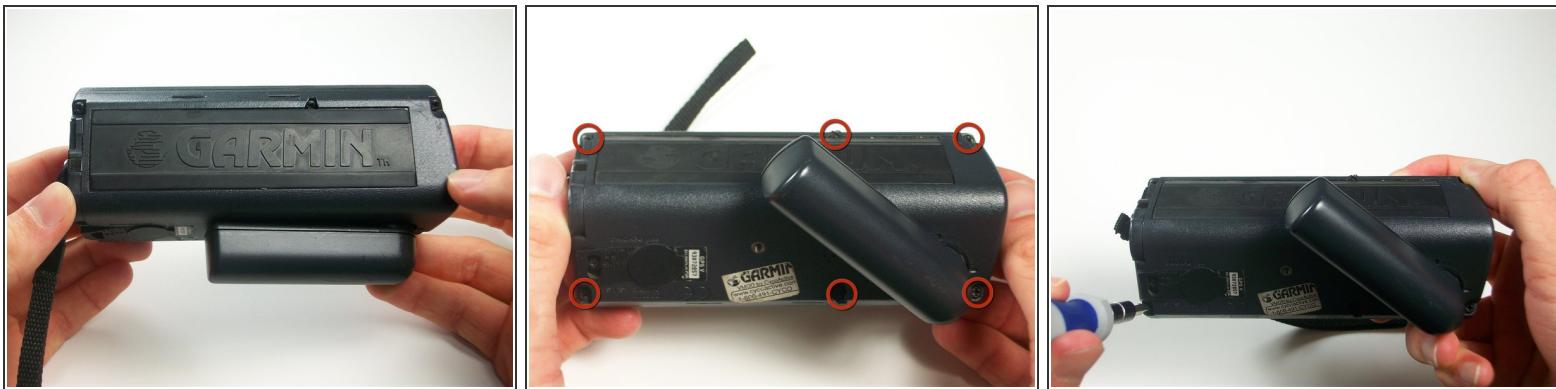

- Orient the GPS V backside up.
- With a #0 Philips screwdriver, remove six M2x0.4 black screws on the back of the unit.


Step 2

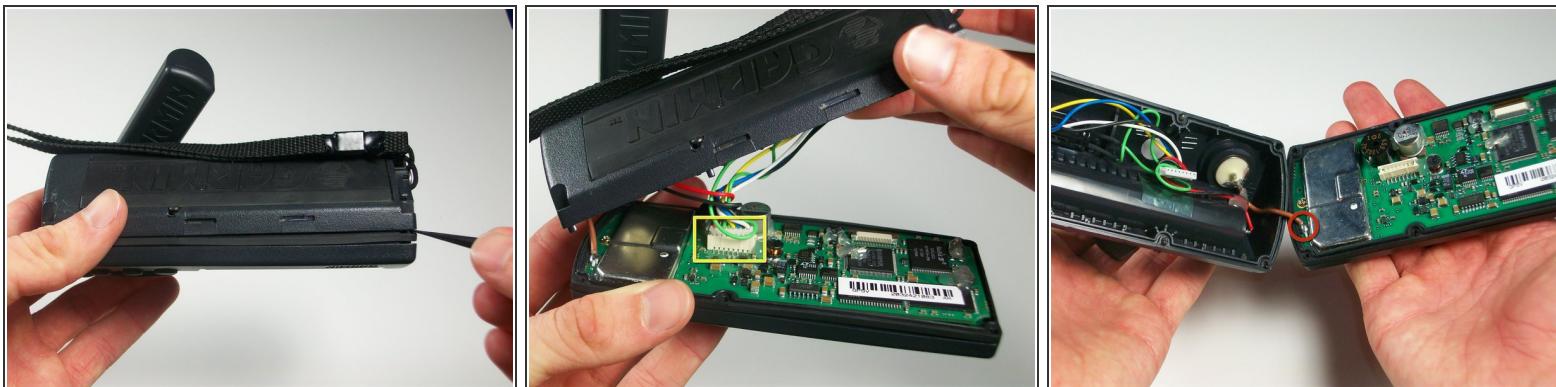

 **CAUTION:** With the spudger, gently pry the back plate off the unit starting at the corners.


- As you open the unit, locate the 8-pin white connector on the logic board and disconnect it. The antenna side of the device should act like a hinge as you open it.
- Open the device all the way, making sure to not disconnect the brown antenna wire.

Step 3

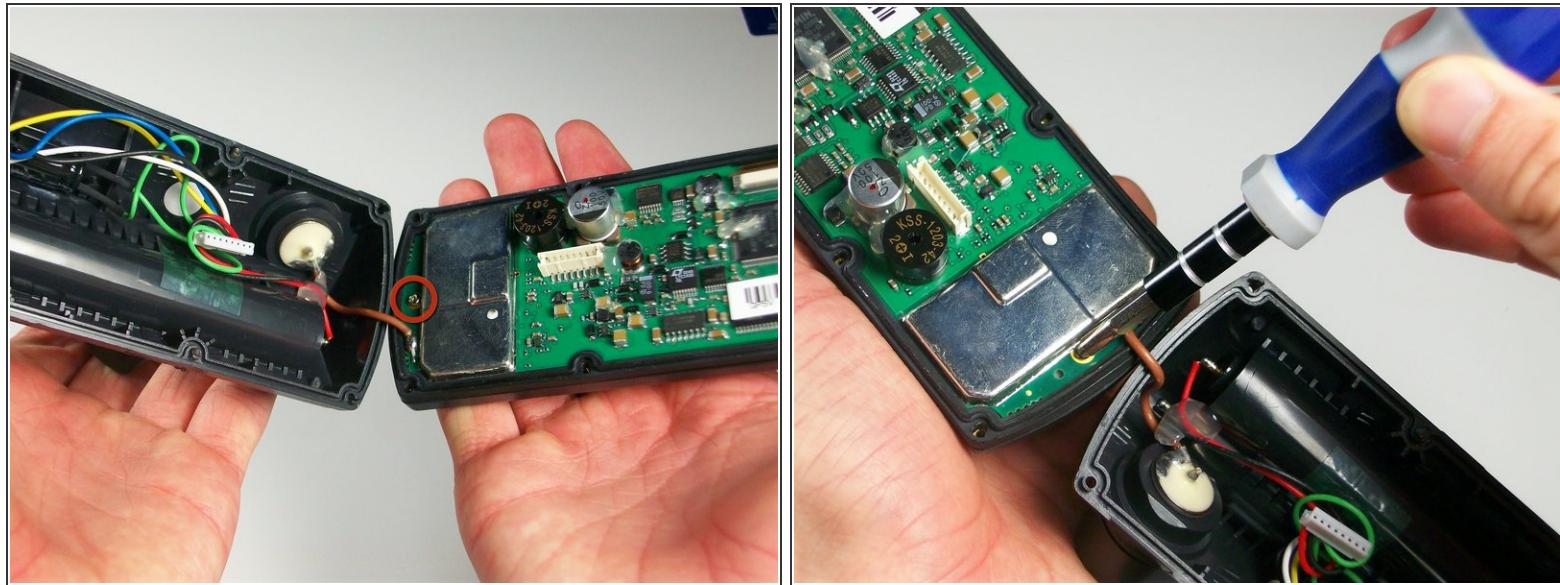


- With a #1 Philips screwdriver, remove the silver M2x0.4 screw on the logic board near the brown wire.
- (i)* NOTE: You may need to rotate the device to get better access to the screw.

Step 4

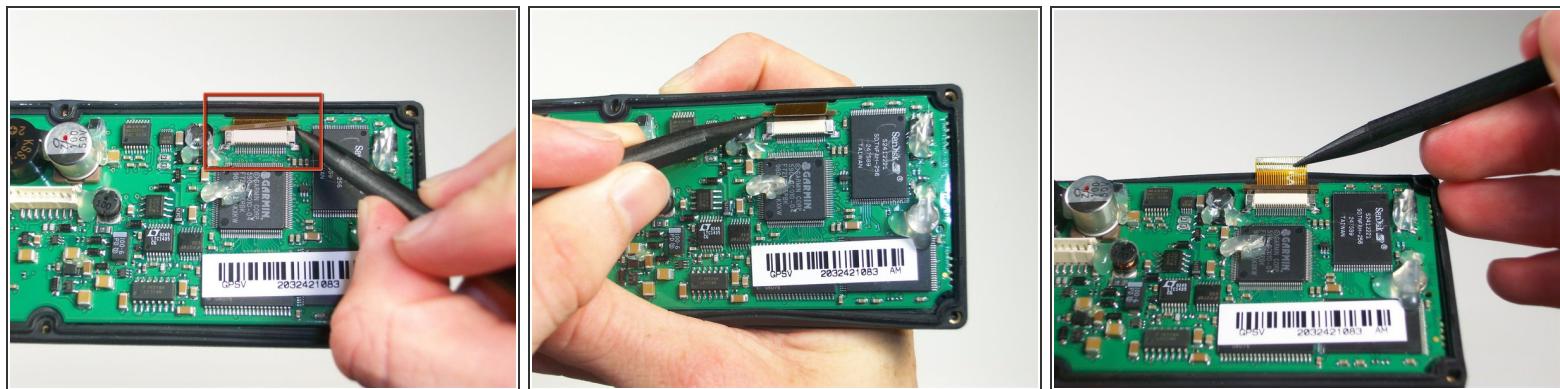

- Locate the ribbon connector on the logic board.
- With the spudger, gently apply pressure to both sides of the brown connector lock until it pushes out.
- With the spudger, gently work the ribbon cable out of the connector until it is free.


Step 5

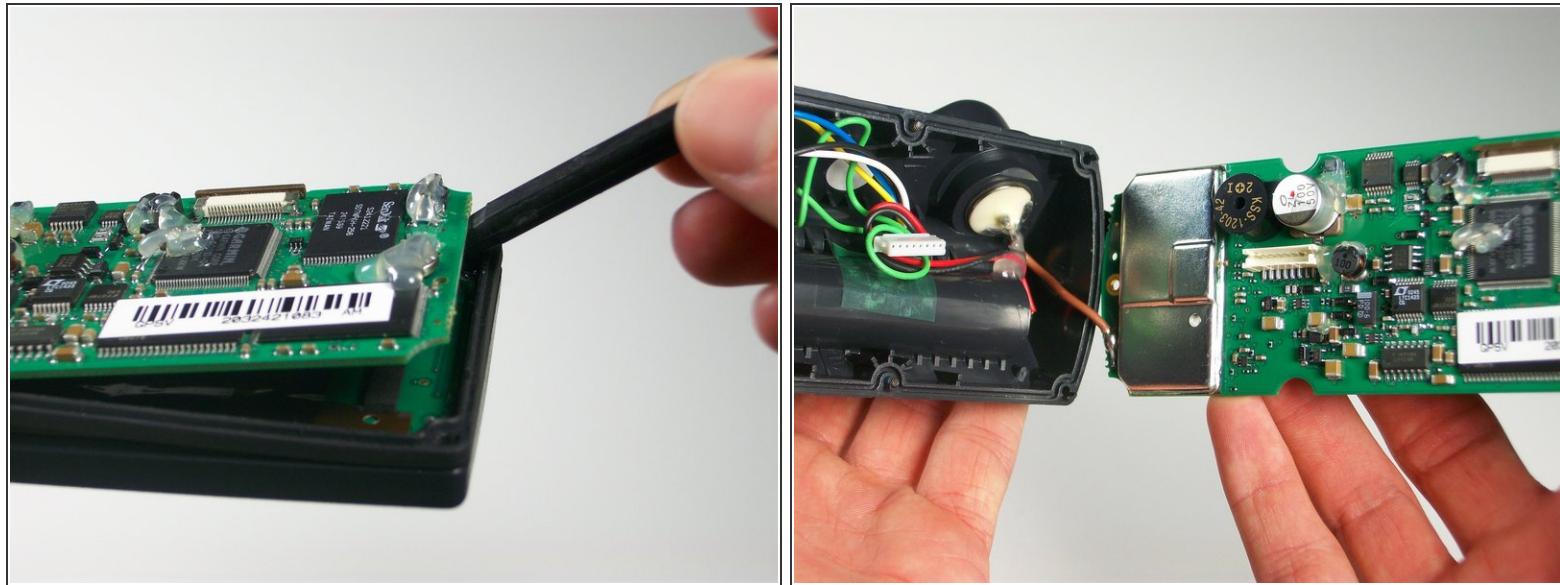

⚠ CAUTION: With the spudger, gently pry out the logic board.

ⓘ NOTE: Be careful to not disconnect the brown antenna wire as you remove the logic board.

Step 6

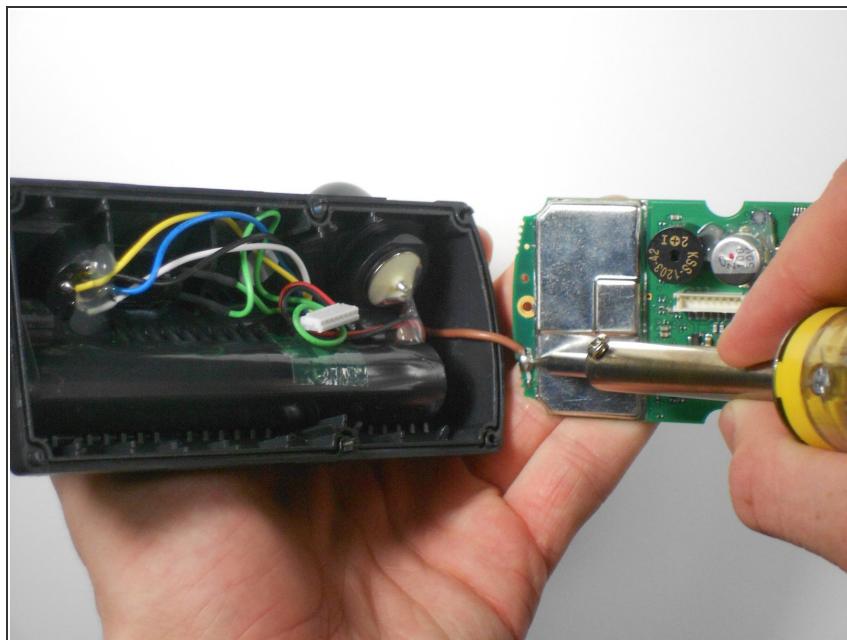


- Locate the brown wire connection on the logic board.

⚠ CAUTION: Carefully apply heat with the soldering iron while gently pulling on the brown wire.

ⓘ NOTE: It may take some time to heat the flux up before the wire can be pulled out.

- Pull brown wire free of the logic board.

Step 7 — Button Pad

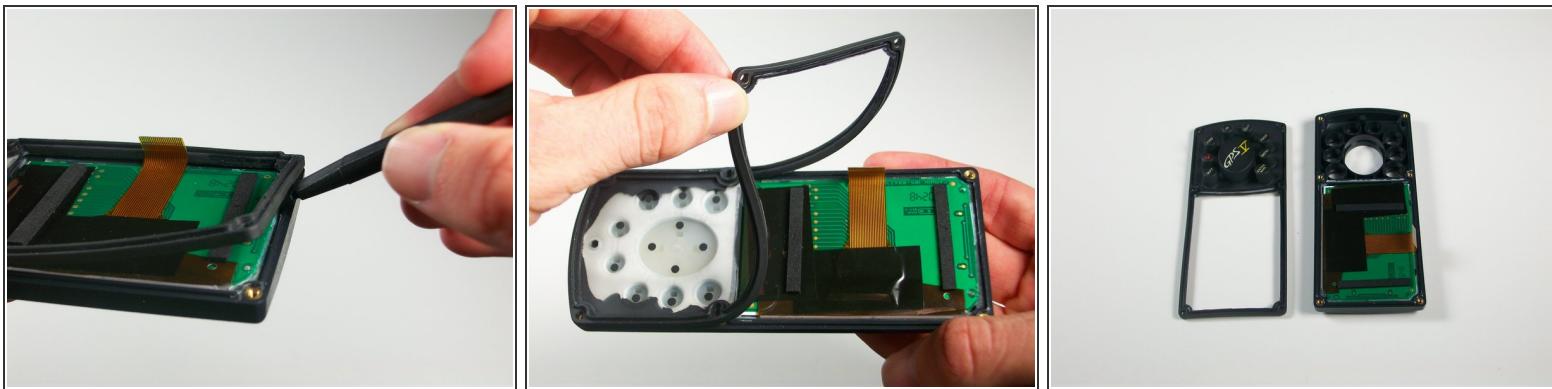

- Gently pry the button pad off of the front plate.

To reassemble your device, follow these instructions in reverse order.