




Lenovo Ideapad Flex 4-1570 Touchpad Replacement

Replacing your touchpad if it is unresponsive and/or overly sensitive.

Written By: Isaiah Vang

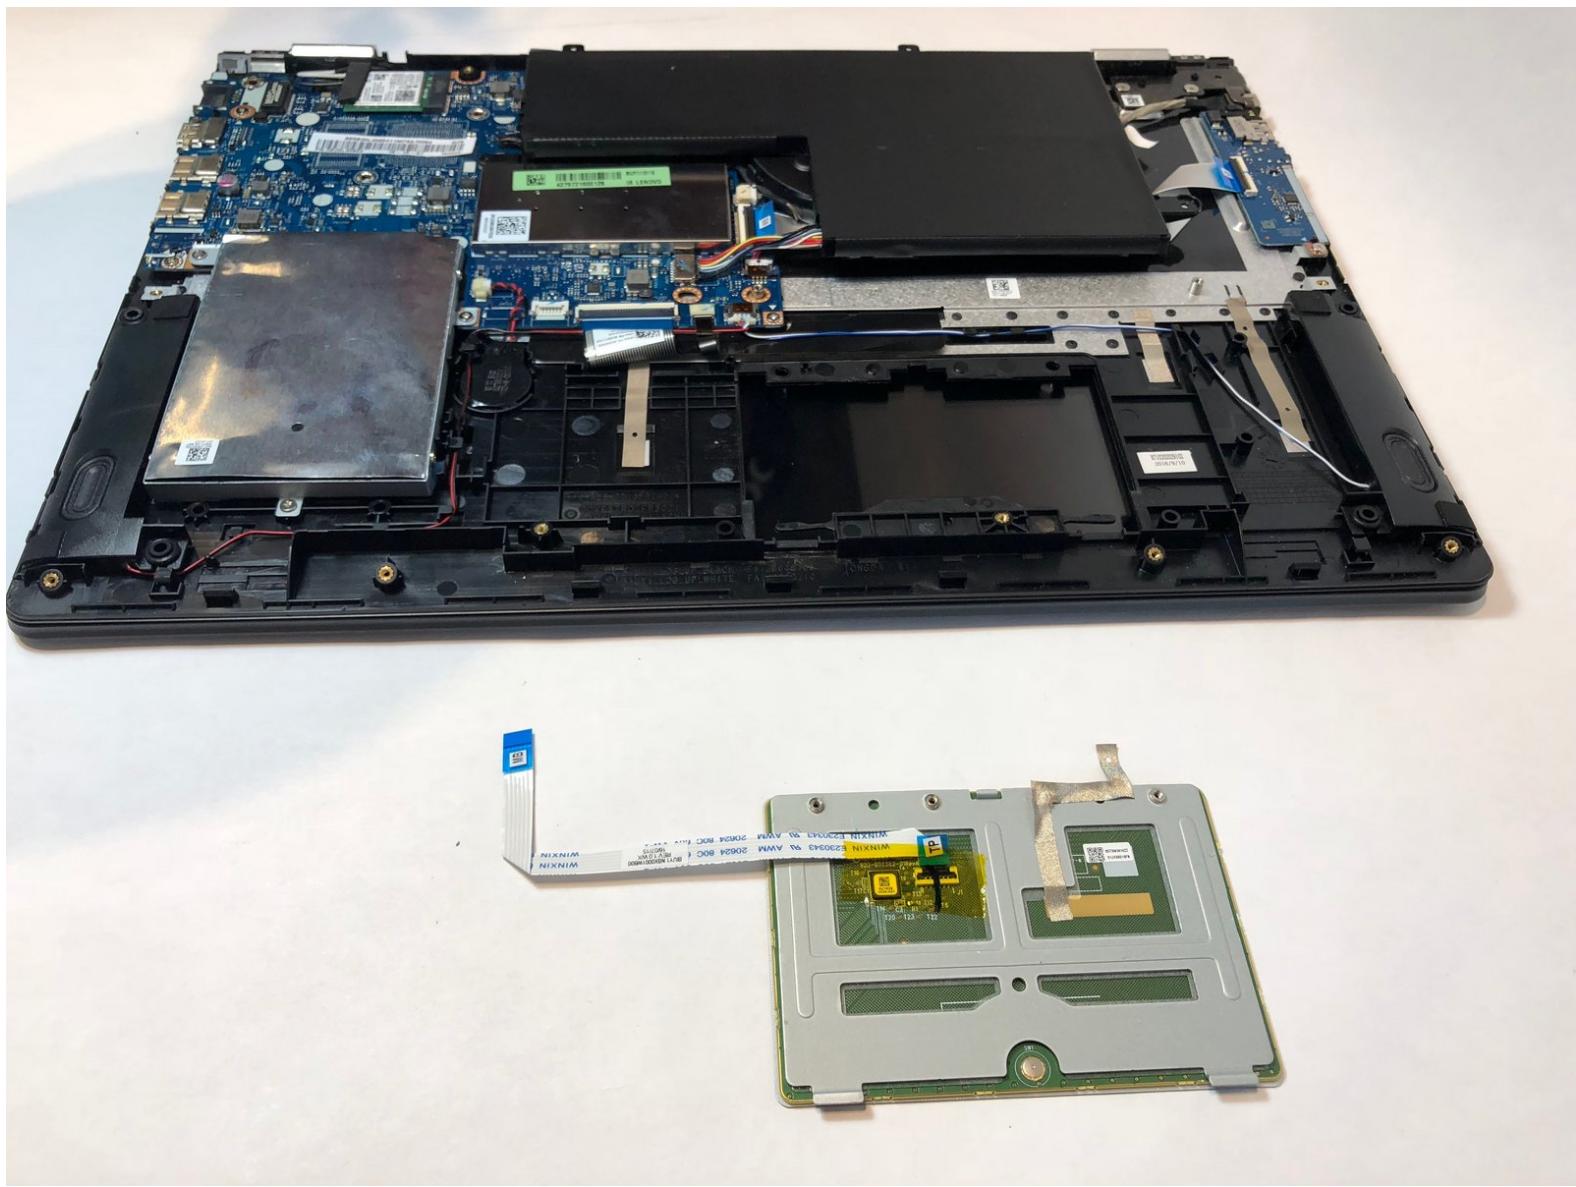

INTRODUCTION

If you are unable to move the mouse and it is overly sensitive, use this guide to replace your touchpad.

TOOLS:


- [T5 Torx Screwdriver](#) (1)
- [Magnetic Project Mat](#) (1)
- [iFixit Opening Tools](#) (1)

Step 1 — Back Panel



 Turn off your laptop before you begin.

Step 2

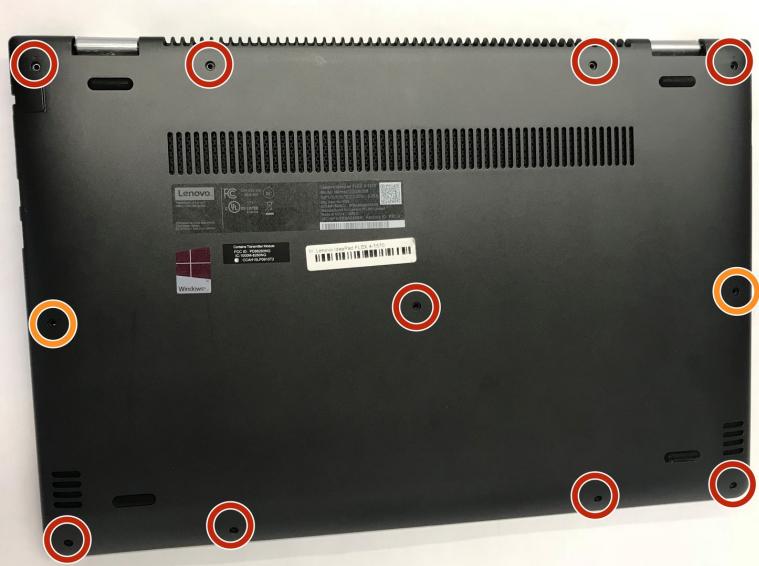


- Remove the nine 6 mm screws using a T5 Torx Screwdriver.
- Remove the two 10 mm screws using a T5 Torx Screwdriver.

Step 3



- After all of the screws are removed, use a plastic opening tool to carefully pry the black cover off.
- Remove the back cover.

Step 4 — Battery

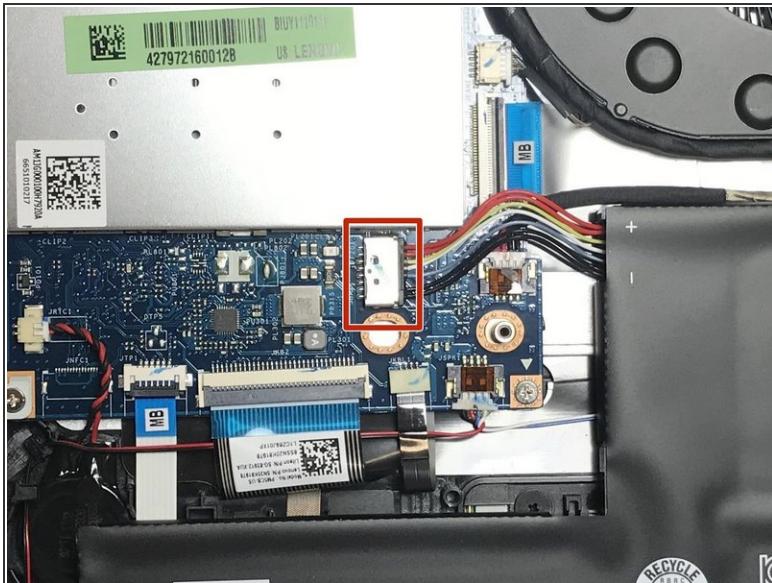

- Disconnect the battery by using a plastic opening tool or your fingers to push the connector towards the battery.


⚠ Do not pry or pull on the socket itself or you risk damaging the motherboard.

Step 5




- Remove the three 4 mm screws using a T5 Torx Screwdriver.

Step 6

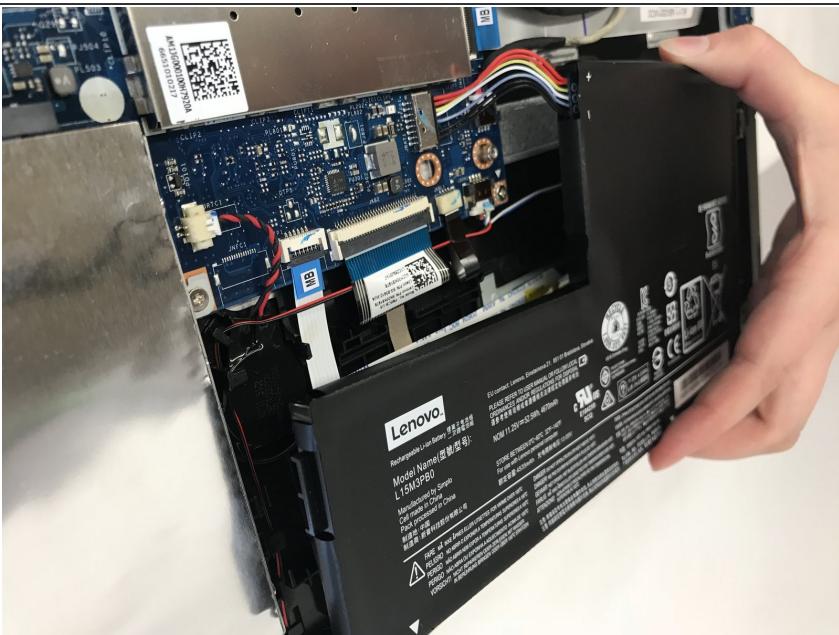


- Remove the battery.

Step 7 — Touchpad

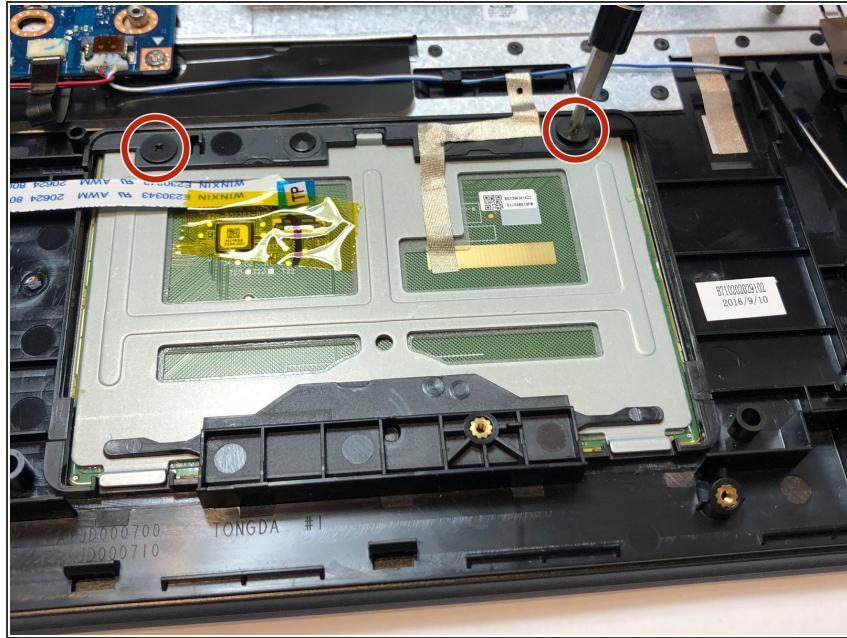


- Locate the touch pad and remove the two 3 mm screws using a T5 Torx Screwdriver.

Step 8

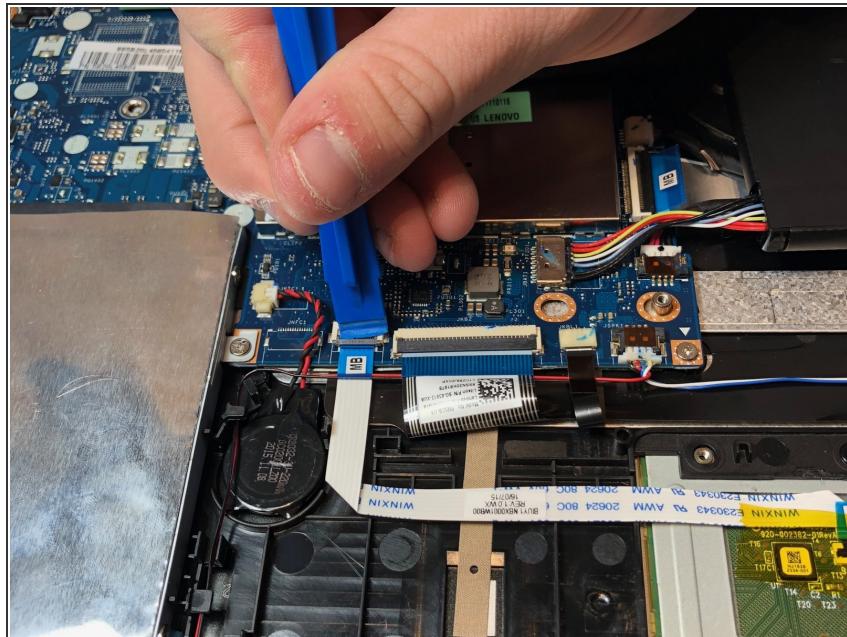

- Disconnect the touch pad chip from the motherboard.

Step 9

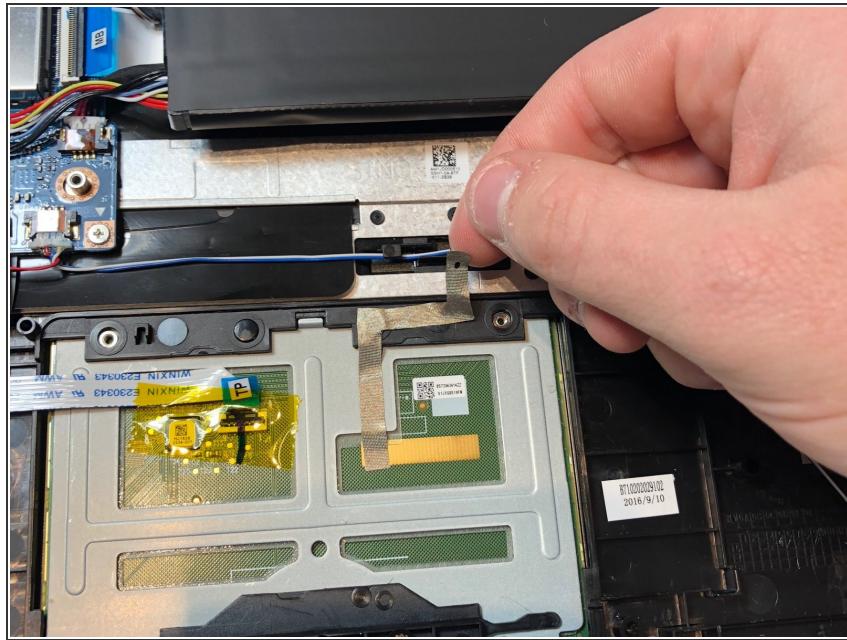

- Disconnect the bronze piece of tape from touch pad and set it off to the side.

Step 10



- Open the laptop and, with the assistance of the iFixit blue plastic tool, guide the touch pad through, it should come out on its own.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-04-04 05:01:33 AM (MST).

