HITACHI
Inspire the Next

Hitachi Universal V2 Rack

Reference Guide

Hitachi Virtual Storage Platform G200, G400, G600, G800

Hitachi Virtual Storage Platform F400, F600, F800

Hitachi Virtual Storage Platform G1000

Hitachi Data Systems

MK-94HM8035-02
November 2015

© 2015 Hitachi, Ltd. All rights reserved.

No part of this publication may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, or stored in a database or retrieval system for any purpose without the express written permission of Hitachi, Ltd.

Hitachi, Ltd., reserves the right to make changes to this document at any time without notice and assumes no responsibility for its use. This document contains the most current information available at the time of publication. When new or revised information becomes available, this entire document will be updated and distributed to all registered users.

Some of the features described in this document might not be currently available. Refer to the most recent product announcement for information about feature and product availability, or contact Hitachi Data Systems Corporation at https://support.hds.com/en_us/contact-us.html.

Notice: Hitachi, Ltd., products and services can be ordered only under the terms and conditions of the applicable Hitachi Data Systems Corporation agreements. The use of Hitachi, Ltd., products is governed by the terms of your agreements with Hitachi Data Systems Corporation.

By using this software, you agree that you are responsible for:

1. Acquiring the relevant consents as may be required under local privacy laws or otherwise from employees and other individuals to access relevant data; and
2. Verifying that data continues to be held, retrieved, deleted, or otherwise processed in accordance with relevant laws.

Hitachi is a registered trademark of Hitachi, Ltd., in the United States and other countries. Hitachi Data Systems is a registered trademark and service mark of Hitachi, Ltd., in the United States and other countries.

Archivas, Essential NAS Platform, HiCommand, Hi-Track, ShadowImage, Tagmaserve, Tagmasoft, Tagmasolve, Tagmastore, TrueCopy, Universal Star Network, and Universal Storage Platform are registered trademarks of Hitachi Data Systems.

AIX, AS/400, DB2, Domino, DS6000, DS8000, Enterprise Storage Server, ESCON, FICON, FlashCopy, IBM, Lotus, MVS, OS/390, RS/6000, S/390, System z9, System z10, Tivoli, VM/ESA, z/OS, z9, z10, zSeries, z/VM, and z/VSE are registered trademarks or trademarks of International Business Machines Corporation.

All other trademarks, service marks, and company names in this document or web site are properties of their respective owners.

Microsoft product screen shots are reprinted with permission from Microsoft Corporation.

Notice on Export Controls. The technical data and technology inherent in this Document may be subject to U.S. export control laws, including the U.S. Export Administration Act and its associated regulations, and may be subject to export or import regulations in other countries. Reader agrees to comply strictly with all such regulations and acknowledges that Reader has the responsibility to obtain licenses to export, re-export, or import the Document and any Compliant Products.

Contents

Preface....5
Intended audience....6
Safety guidelines....6
Release notes....7
Related documents....7
Accessing product documentation....7
Getting help....7
Comments....8

1 Universal V2 Rack....9
About the Hitachi Universal V2 Rack....10
Rack specifications....10
Power distribution units (PDUs)....13
PDU specifications....14
PDU plugs....15
Rail kits....16
Rack accessories....16
Third-party racks....17
Third-party racks for VSP G200, G400, G600, G800 and VSP F400, F600, F800....17
Third-party racks for VSP G1000....17

Index....19

Preface

This document provides descriptions and specifications for the Universal V2 Rack for the following Hitachi storage systems:

- Hitachi Virtual Storage Platform G200, G400, G600, G800
- Hitachi Virtual Storage Platform F400, F600, F800
- Hitachi Virtual Storage Platform G1000

Information for supported power distribution units, rail kits, and accessories is included.

- ☐ Intended audience
- ☐ Safety guidelines
- ☐ Release notes
- ☐ Related documents
- ☐ Accessing product documentation
- ☐ Getting help
- ☐ Comments

Intended audience

This document is provided for owners, administrators, and operators of the following storage systems:

- Hitachi Virtual Storage Platform G200, G400, G600, G800
- Hitachi Virtual Storage Platform F400, F600, F800
- Hitachi Virtual Storage Platform G1000

Safety guidelines

Read and follow all safety guidelines and procedures.

- All activities must be performed by trained and qualified engineers only. Adhere to the following general guidelines.
  - Hazard warnings on the rack and storage systems are provided to aid you in preventing or reducing the risk of death, personal injury, or product damage. Understand and follow these hazard warnings fully.
  - When lifting a heavy object, hold it close to yourself and keep your back erect to prevent back injury.
  - If an unusual noise, smell, or smoke occurs on the storage system while it is running, power off or remove the power cables immediately.
  - Do not use materials that are outside the specifications for the rack or storage systems.
  - Keep the maintenance area neat.
  - Always put away parts, materials, and tools when not in use.
- Prevent electric shock by adhereing to the following:
  - Before starting work, be sure that, unless otherwise specifically instructed, there is no potential electric hazard in the area such as insufficient grounding or a wet floor.
  - Before starting work, know where the emergency power-off switches are located and be sure you know how to operate them.
  - Unless otherwise specifically instructed, remove all power sources to the power distribution unit (PDU) before starting maintenance. Switching off the storage system power supplies is usually not sufficient.
  - Do not touch any uninsulated conductor or surface that remains charged for a limited time after the external power supply to the storage system is disconnected.
  - Do not replace parts during a thunderstorm.
- In case of electric shock:
  - Unless otherwise instructed, remove all power sources to the storage system. Switching off the storage system power supplies is not sufficient. When power is fed from a wall or floor outlet, unplug the power supply cord, or turn off the switch on the PDU or board.

    - If the power supply has a lockout device, lock the device after powering off the storage system and retain the key. Attach a notice on the panel or board prohibiting the use of the switch.
- In case of fire:
    - Shut off all the power to storage systems.
    - Turn off the emergency power switch or stop the power supply to storage systems.
    - If the fire continues to burn after the power is shut off, take suitable actions, including the use of a fire extinguisher, or call the fire department.

Release notes

Read the release notes before installing and using this product. They may contain requirements or restrictions that are not fully described in this document or updates or corrections to this document.

Related documents

- *Hitachi Virtual Storage Platform G200 Hardware Reference Guide*, MK-94HM8020
- *Hitachi Virtual Storage Platform G400, G600 Hardware Reference Guide*, MK-94HM8022
- *Hitachi Virtual Storage Platform G800 Hardware Reference Guide*, MK-94HM8026
- Hitachi Virtual Storage Platform F400, F600 Hardware Reference Guide, MK-94HM8045
- Hitachi Virtual Storage Platform F800 Hardware Reference Guide, MK-94HM8046
- *Hitachi Virtual Storage Platform G1000 Hardware Guide*, MK-92RD8007

Accessing product documentation

Product user documentation is available on Hitachi Data Systems Support Connect: https://support.hds.com/en_us/documents.html. Check this site for the most current documentation, including important updates that may have been made after the release of the product.

Getting help

Hitachi Data Systems Support Connect is the destination for technical support of products and solutions sold by Hitachi Data Systems. To contact technical

support, log on to Hitachi Data Systems Support Connect for contact information: https://support.hds.com/en_us/contact-us.html.

Hitachi Data Systems Community is a global online community for HDS customers, partners, independent software vendors, employees, and prospects. It is the destination to get answers, discover insights, and make connections. **Join the conversation today!** Go to community.hds.com, register, and complete your profile.

Comments

Please send us your comments on this document to doc.comments@hds.com. Include the document title and number, including the revision level (for example, -07), and refer to specific sections and paragraphs whenever possible. All comments become the property of Hitachi Data Systems Corporation.

Thank you!

1

Universal V2 Rack

This chapter provides descriptions and specifications for the A3BF-600-1200-v2 rack. Information for supported power distribution units (PDUs), rail kits, and accessories is provided.

- ☐ About the Hitachi Universal V2 Rack
- ☐ Rack specifications
- ☐ Power distribution units (PDUs)
- ☐ Rail kits
- ☐ Rack accessories
- ☐ Third-party racks

About the Hitachi Universal V2 Rack

The Hitachi Universal V2 Rack can be used to mount VSP G200, G400, G600, G800; VSP F400, F600, F800; and VSP G1000 controller trays and one or more drive trays The following figure shows views of the Hitachi rack.

Figure 1 Hitachi Universal V2 Rack

Rack specifications

Rack specifications for VSP G200, G400, G600, G800; VSP F400, F600, F800; and VSP G1000 storage systems are provided in the following tables.

Note: Customer-supplied racks that have the same specifications as the Hitachi 600-1200-V2 rack can also be used to mount VSP G200, G400, G600,

G800; VSP F400, F600, F800; and VSP G1000 storage systems. Contact your Hitachi Data Systems representative for details.

Table 1 Basic A3BF-600-1200-V2 specifications

Product code	Description
A3BF-600-1200-V2	• Black locking back door • External Dimensions (with panels) ○ Width: 600 mm (23 62 in) - see note 3 below ○ Depth: 1200 mm (47.24 in) ○ Height: 2008 mm (79.05 in) ○ Mounting height for storage equipment: 42U (2008 mm) Rail kits, PDUs, and power cords must be ordered separately.

Table 2 Detailed A3BF-600-1200-V2 specifications

Item	Specification
P-code	A3BF-600-1200-V2
Dimensions (width x depth x height)	• 600 x 1200 x 2008 mm - see note 3 below • (23.62 in x 47.24 in x 79.05 in)
Weight	• 139 kg/306 lb 7.0811 oz (includes side panels) • 1050 kg/2314 lb 13.663 oz static weight capacity[1] • 500 kg/1102 lb 4.9824 oz dynamic weight capacity[2]
Frame	• Height: 42U (2008 mm) • Finished black (RAL 9011) with Hitachi logo and label • 1 set grounding cables (earthing cable) • 36 1U filler panels • 1 cover set, front (left, right, and bottom)
Base	• 4 adjustable base legs (leveling feet) • 2 wheels, front • 2 casters, back
Roof	2 brush cut-outs, left and right
Rear	• 1 door, 65% ventilated - 600 mm x 42U (width x height) • 3 hinges, right side • 1 swivel handle • 1 lock for swivel handle, EK-1333 (keys in zip bag) • 1 laptop shelf • 1 door stopper
Accessories (separate box)	• 1 anti-tilt cabinet stabilizer - 600 mm (width) • 1 universal wrench for leveling feet • 40 velcro straps • 100 T-wraps - 360 x 4.8 mm (black) • 100 cage nuts M5 • 100 screws M5 (black) • 8 screws M5 x 8 (spare parts) • 8 screws M6 x 12 (spare parts) • 1 nylon strap • 8 mounting brackets for PDUs (includes mounting material) • 2 plinths, front and rear - 600 mm (width)

Item	Specification
	• 1 baying kit (4 pieces, includes mounting material)

Notes:

1. Static weight capacity is the maximum weight the rack can support after it has been properly leveled and installed (fitted with stabilizers or secured to other equipment).
2. Dynamic weight capacity is the maximum weight the rack can support while being shipped or moved with equipment installed.
3. Installing the optional cover set extends the rack width to 603 mm (23.74 in).

The following shows the rack dimension with the optional cover set not installed.

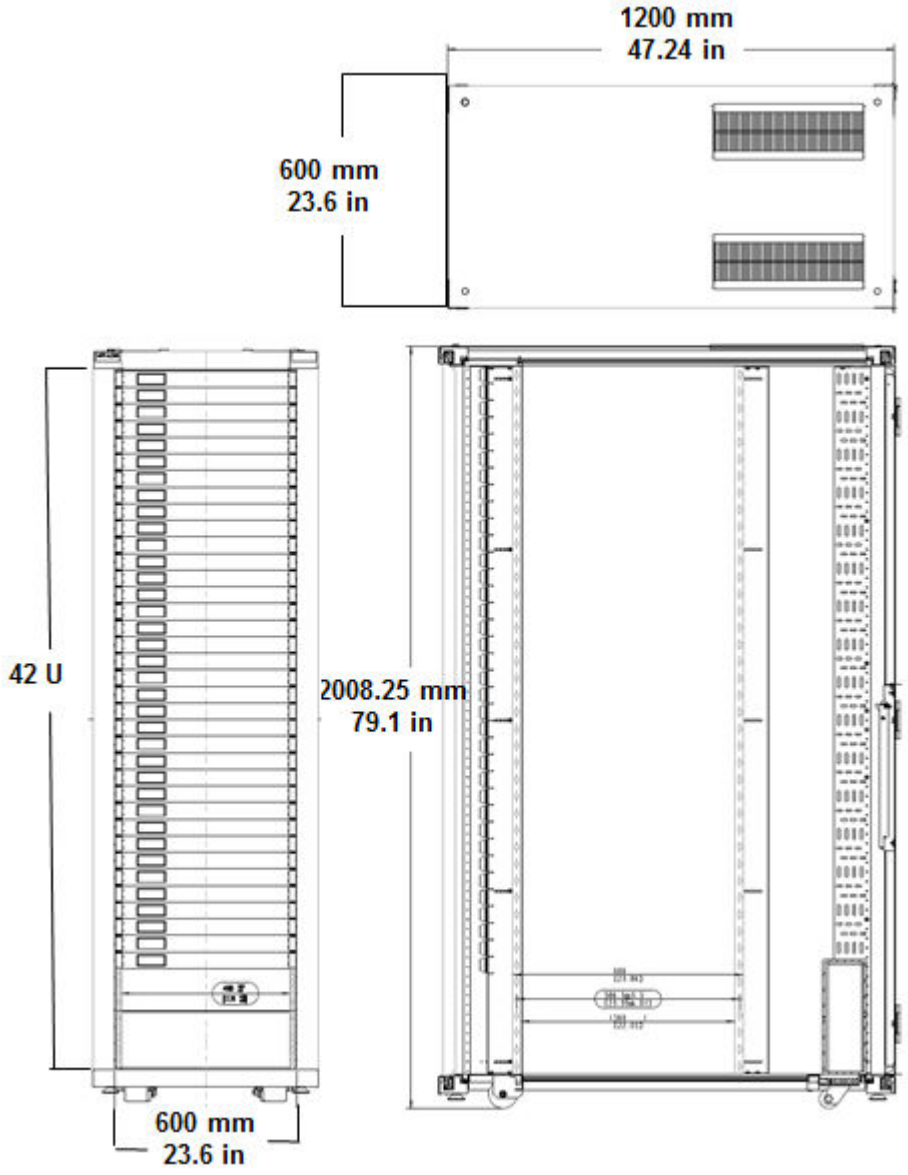

Power distribution units (PDUs)

The Hitachi Universal V2 Rack is configured with power distribution units (PDUs), which power the components placed in the rack. Input power to the PDUs, which varies with location, is either single phase or three phase.

The following figures show Hitachi PDUs used in the Universal V2 Rack in the Americas and in APAC / EMEA. The types of plugs used in the PDUs are discussed in Plug types on page 15.

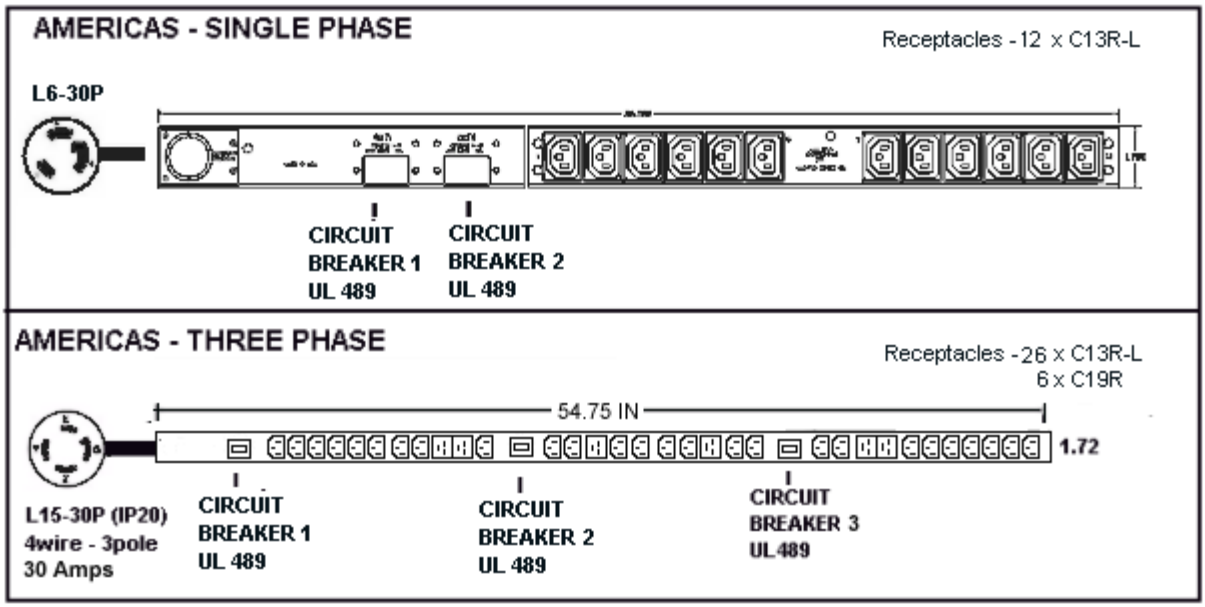

Figure 2 Americas PDUs for the Universal V2 Rack

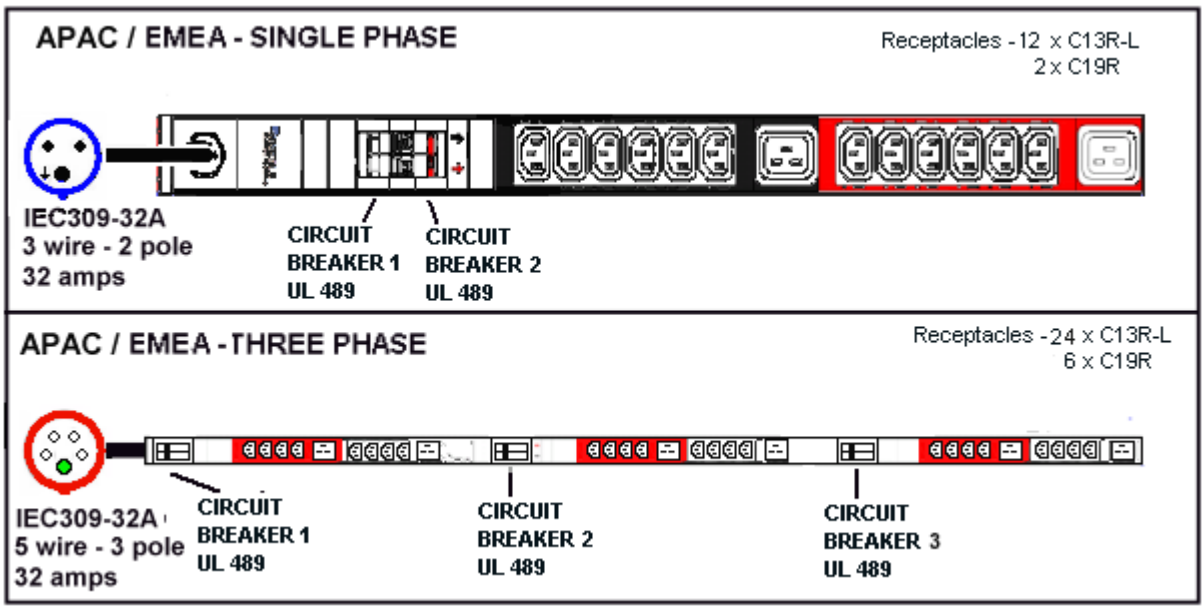

Figure 3 APAC / EMEA PDUs for the Universal V2 Rack

Note: Physical compatibility between the Universal V2 Rack and third party PDUs is best effort only.

Make sure to review electrical specifications in your storage system installation guide. Do not exceed the maximum usable amperage per PDU to reduce risk of injury, fire, or damage to equipment. Consult the electrical authority for your facility's wiring and installation requirements. The following basic requirements also apply:

- Before installing third-party components in the rack, determine the current draw of each component and compare that with the allowable current load on each PDU to determine whether the component can be plugged into a PDU.
- Balance the current load between available PDUs.

PDU specifications

The following table shows PDU specifications for the Universal V2 Rack. All specifications apply for the VSP G200, G400, G600, G800; VSP F400, F600, F800; and VSP G1000 storage systems.

Table 3 Basic PDU specifications

Item	Specification
Americas	
Single phase PDU-121112F10	• 30A, 208V • 12 IEC 320-C13 outlets

Item	Specification
	• NEMA L6-30P connector • 10-foot power cable
Three phase PDU-32C13800F10	• 30A, 208V • 26 IEC 320-C13 outlets • 6 IEC 320-C19 outlets • NEMA L15-30P connector • 10-foot power cable
APAC and EMEA	
Single phase A3CR-123294-51	• 32A, 230V • 12 IEC 320-C13 outlets • 2 IEC 320-C19 outlets • IEC-309 blue 2P+E connector • 15-foot (4.5 m) power cable
Three phase A3CK-243694-50	• 32A, 400V • 24 IEC 320-C13 outlets • 6 IEC 320-C19 outlets • IEC-309 red 4P+E connector • 15-foot (4.5 m) power cable

PDU plugs

The following figure shows the PDU plug types that are used with the Universal V2 Rack.

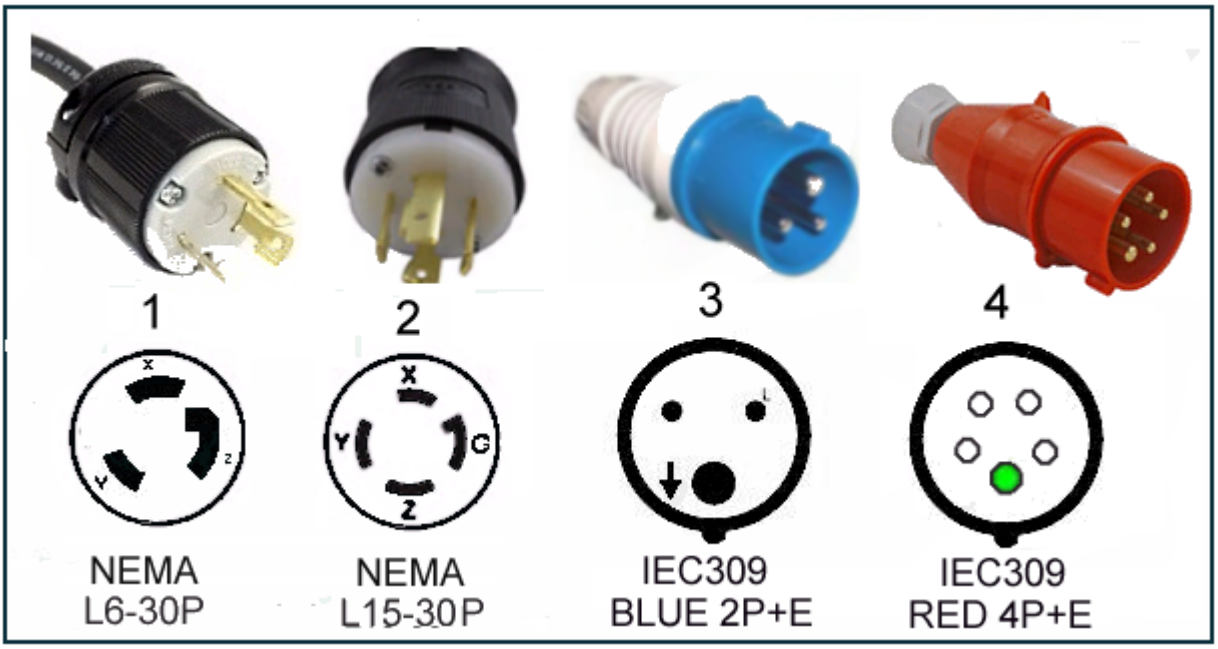

Figure 4 PDU plugs

- Plug #1 is for single phase use in the Americas, including the United States and Canada.

- Plug #2 is for three phase use in the Americas, including the United States and Canada.
- Plug #3 is for single phase use in Asia-Pacific and Europe-Middle East-Africa.
- Plug #4 is for three phase use in Asia-Pacific and Europe-Middle East-Africa.

Rail kits

The following tables show rail kit information, which differs for VSP G200, G400, G600, G800; VSP F400, F600, F800; and VSP G1000.

Table 4 Rail kits required for VSP G200, G400, G600, G800 and VSP F400, F600, F800

Rail kit	Hitachi Universal V2 Rack	Third-party rack
Controller	UNI[1]	UNI[1]
Drive trays - DBS/DBL/DBF	CGR[2]	UNI[1]
Dense tray - DB60	Rail kits are included with dense tray.	
SVP Server	Rail kits are included with SVP Server.	

Notes:
1. UNI: Universal rail kit A34V-600-850-UNI.
2. CGR: Corner guide rail kit A3BF-HK-GL-740-1.

Table 5 Rail kits required for VSP G1000

Rail kit	Hitachi Universal V2 Rack	Third-party rack
Controller	CBX[1]	CBX[1]
Drive trays--SBX/UBX/FBX	CGR[2]	UNI

Notes:
1. CBX: VSP G1000 controller rail kit A34V-700-800-CBX.
2. CGR: Corner guide rail kit A3BF-HK-GL-740-1.

Rack accessories

The following table provides rack accessory information for VSP G200, G400, G600, G800; VSP F400, F600, F800; and VSP G1000 storage systems.

Table 6 Rack accessories for Universal V2 Rack

Storage system	Front door	Rear door	Side panels
VSP G200, G400, G600, G800 and VSP F400, F600, F800	Optional, must be ordered separately (A3BF-DR).	Included with rack.	Not included with rack, must be ordered separately. A quantity of two must be

Storage system	Front door	Rear door	Side panels
			ordered per rack (A3BF-Z-PAN-1200).
VSP G1000	Optional, must be ordered separately (A3BF-DR-R800).	Included with rack.	Not included with rack, must be ordered separately (left door - A3BF-Z-PAN-BR-L, right door - A3BF-Z-PAN-BR-R).

Third-party racks

Third-party racks can be used for VSP G200, G400, G600, G800; VSP F400, F600, F800; and VSP G1000 storage systems. However, each platform has different requirements.

Third-party racks for VSP G200, G400, G600, G800 and VSP F400, F600, F800

VSP G200, G400, G600, G800 and VSP F400, F600, F800 storage systems support third-party racks that meet Hitachi Data Systems specifications.

- VSP G200, G400, G600, G800 and VSP F400, F600, F800 storage systems support any 4-post, EIA310-D compliant rack, which must have adequate airflow and weight capacity.
- PDUs must be mounted with no serviceability issues. The PDU receptacles must face rearward (not toward each other). The area behind the storage system and between the vertical 19-inch mounting posts must be free of PDUs and cable loops.

Third-party racks for VSP G1000

Installation of VSP G1000 into a third party rack is by exception only and is only allowed with prior approval. Contact your Hitachi Data Systems account team or CS&S representative for more information.

Index

B
balancing allowable current load 13

E
emergency guidelines 6

F
front door 16
front view 10

O
overview 9, 10

P
PDU specifications 14
PDUs
  for Americas 13
  for APAC / EMEA 13
plug types 15

R
rack accessories 16
rail kits 16
rear door 16
rear view 10

S
safety and emergency guidelines 6
side panels 16
single phase PDUs 14
specifications 10

T
third-party racks 17
  VSP G1000 17
three phase PDUs 14

Hitachi Data Systems

Corporate Headquarters
2845 Lafayette Street
Santa Clara, California 95050-2639
U.S.A.
www.hds.com

Regional Contact Information

Americas
+1 408 970 1000
info@hds.com

Europe, Middle East, and Africa
+44 (0) 1753 618000
info.emea@hds.com

Asia Pacific
+852 3189 7900
hds.marketing.apac@hds.com

Hitachi Data Systems

MK-94HM8035-02
November 2015