![iFixit](iFixit logo)

HP Envy x360 m6-aq103dx Battery Replacement

How to replace a HP Envy x360 m6-aq103dx battery.

Written By: Sarah Samora

INTRODUCTION

Is your HP Envy x360 m6-aq103dx not holding a charge like it used to? If so, here is the guide to fix this problem by simply changing the battery. All you need is a #1 Phillips Screwdriver, a T5 Torx screwdriver heads, the nylon black spudger, and the plastic opening tool in order to remove the five types of screws involved with this replacement.

🔧 TOOLS:

- Spudger (1)
- Phillips #1 Screwdriver (1)
- iFixit Opening Tools (1)
- T5 Torx Screwdriver (1)

This document was generated on 2019-09-18 01:56:13 AM (MST).

Step 1 — Bottom Cover

- Flip the laptop over to expose the underside.

- Remove the two grip pads with blue plastic opening tool by inserting the tool between the laptop and the pads and slowly lifting up.

- (i) The grip pads are tacky, remove slowly to avoid separating the adhesive.

Step 2

- Remove the two 8 mm Phillips Head screws that were under the grip pads using a Phillip's Head 1 Screwdriver.

Step 3
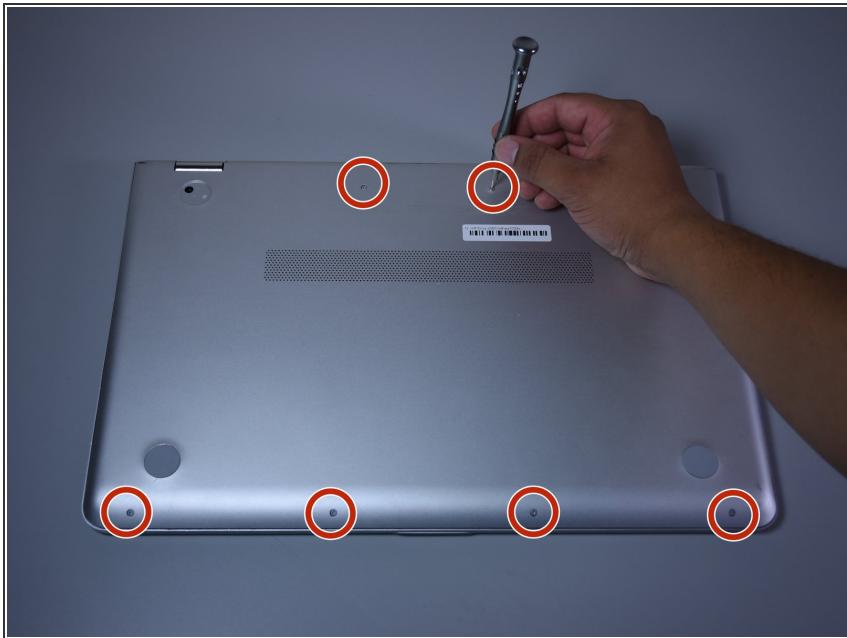
- Remove the six 5 mm Torx screws using a T5 Torx Screwdriver.

Step 4
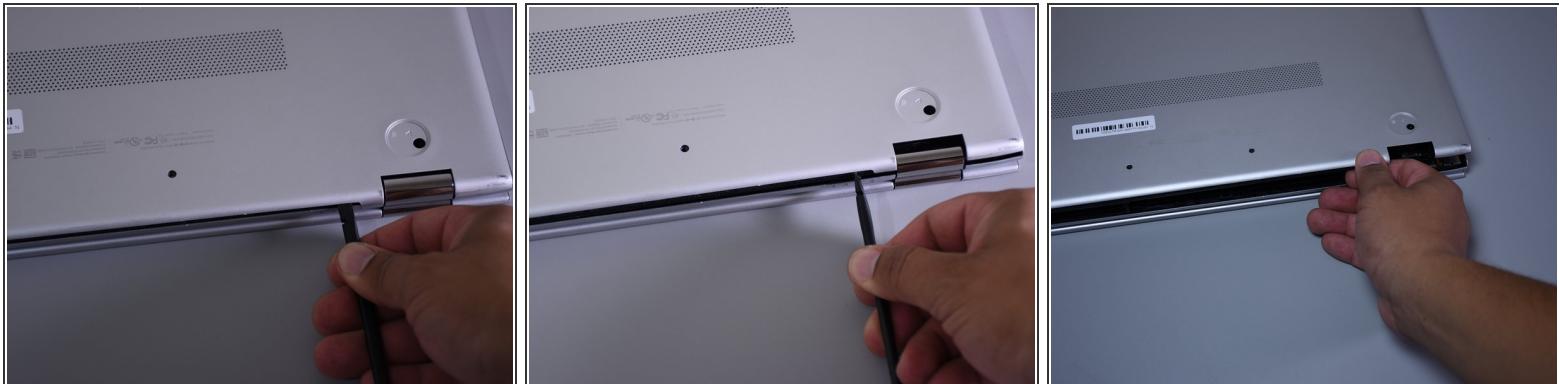
- Use the nylon spudger to pop off the bottom cover by inserting it into the heat vent and twisting to the left or right.

- ⓘ You may hear a slight clicking or popping, but that is normal.

Step 5 — Battery
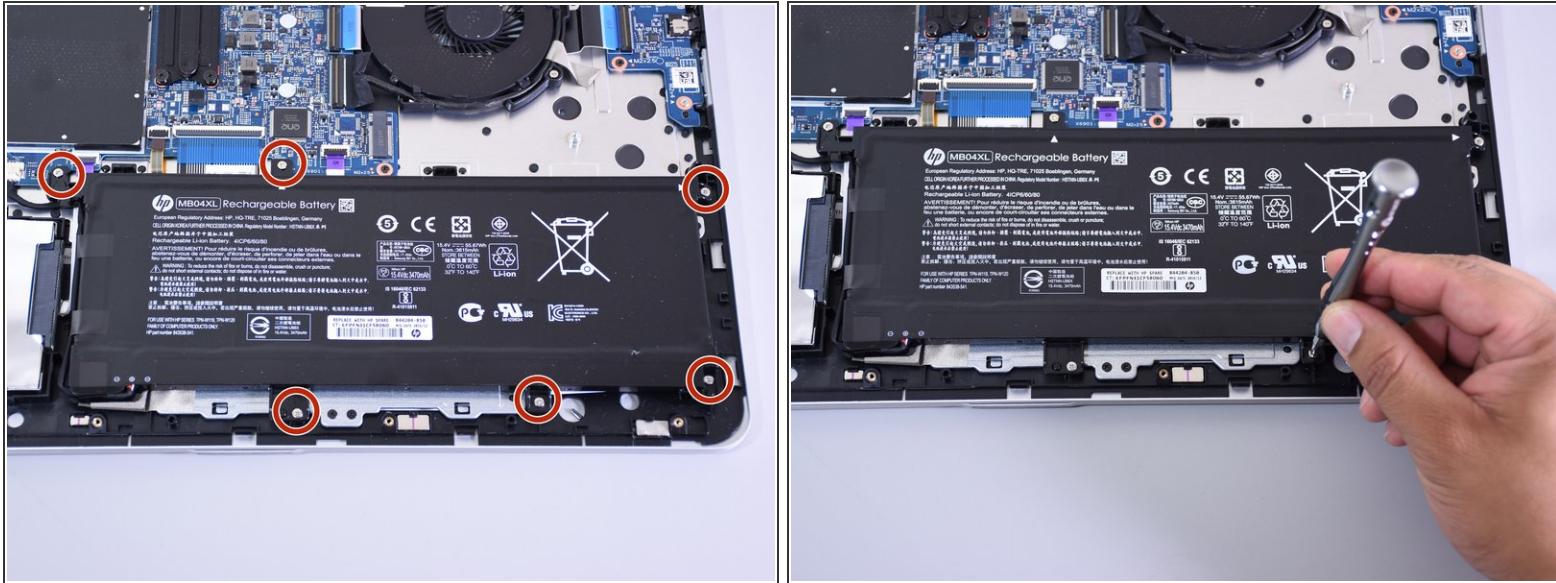
- Use the Phillips Head 1 Screwdriver to remove the six 4 mm screws.

Step 6
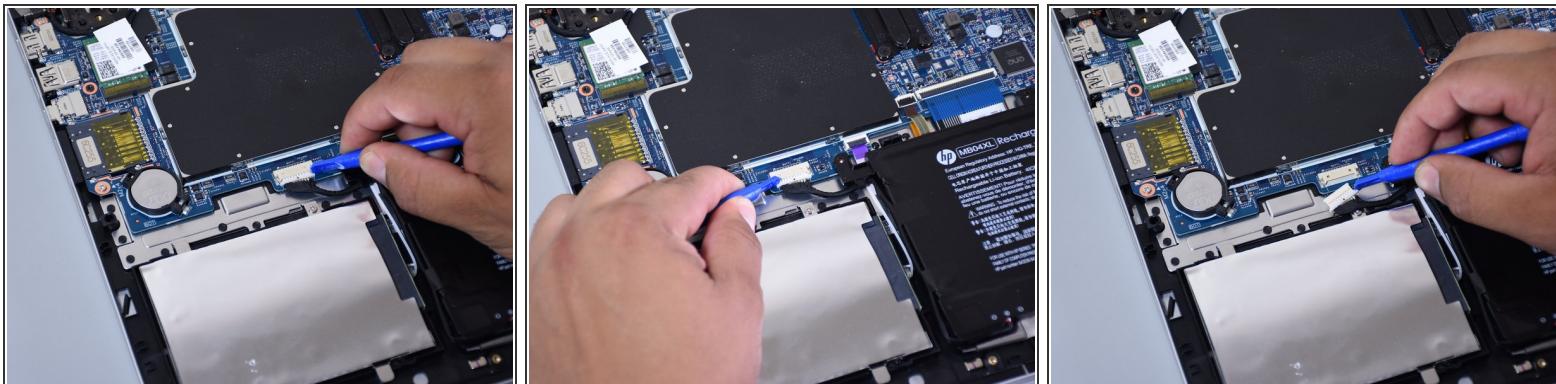
- Disconnect the battery port from the motherboard by gently lifting it on both sides with the plastic opening tool.

- Lift up the port with the tool.

Step 7
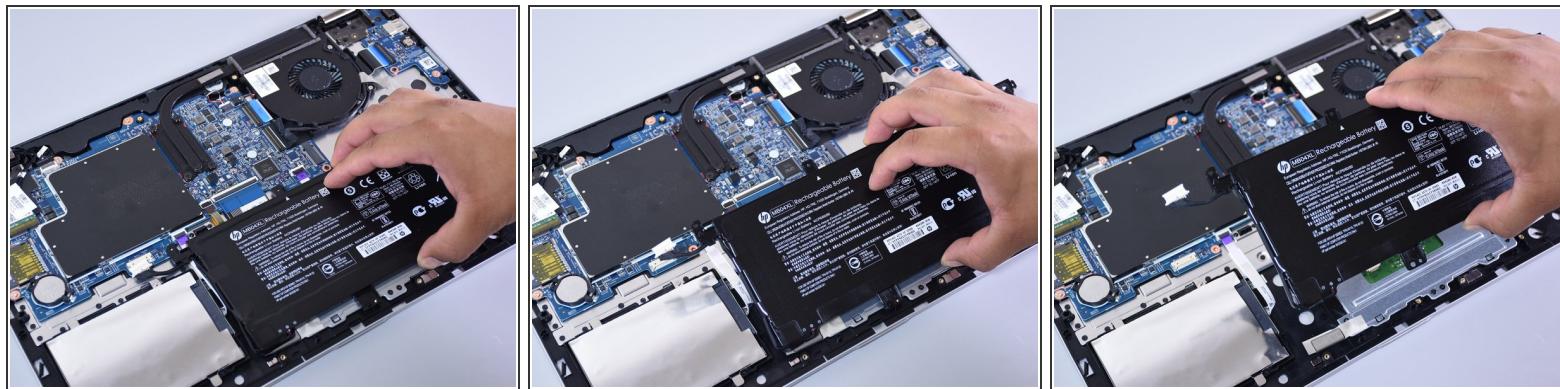
- Lift the battery out of the laptop with your hands.

To reassemble your device, follow these instructions in reverse order.