



NT1 ACE³

USER MANUAL

1200236L1: NT1 ACE³
336012VUR01: Power Supply 12 VDC/800 mA

61200236L1-1A
June 1998

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING *Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.*

Canadian Standards Association

This device must be powered by a CSA approved power supply or a power supply meeting the requirements of CS03, Part I Section 1.4.2.

Warranties

ADTRAN will repair or replace this product within five years from the date of shipment if it does not meet its published specifications or fails while in service. For detailed warranty, repair, and return information, refer to the ADTRAN Equipment Warranty and Repair and Return Policy Procedure. Return Material Authorization (RMA) is required prior to returning equipment to ADTRAN.

901 Explorer Boulevard
P.O. Box 140000
Huntsville, AL 35814-4000
Phone: (256) 963-8000

© 1998 ADTRAN, Inc.
All rights reserved.
Printed in USA.

FCC regulations require that the following information be provided in this manual:

1. This equipment complies with Part 68 of the FCC rules. On the bottom of the equipment housing is a label that shows the FCC registration number and Ringer Equivalence Number (REN) for this equipment. If requested, provide this information to the telephone company.
2. If this equipment causes harm to the telephone network, the telephone company may temporarily discontinue service. If possible, advance notification is given, otherwise, notification is given as soon as possible. The telephone company will advise the customer of the right to file a complaint with the FCC.
3. The telephone company may make changes in its facilities, equipment, operations, or procedures that could affect the proper operation of this equipment; advance notification and the opportunity to maintain uninterrupted service is given.
4. If experiencing difficulty with this equipment, please contact ADTRAN for repair and warranty information. The telephone company may require this equipment to be disconnected from the network until the problem is corrected, or it is certain the equipment is not malfunctioning.

5. This unit contains no user serviceable parts.

6. An FCC compliant telephone cord with a modular plug is provided with this equipment. In addition, an FCC compliant cable appropriate for the dial backup option ordered is provided with this equipment. This equipment is designed to be connected to the telephone network or premises wiring using an FCC compatible modular jack, which is Part 68 compliant.

7. The following information may be required when applying to the local telephone company for leased line facilities.

Service Type	Digital Facility Interface Code	Service Order Code	Network Jacks
ISDN	02IS5	6.0F	RJ-49C

CANADIAN EMISSIONS REQUIREMENTS

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the interference-causing equipment standard entitled "Digital Apparatus," ICES-003 of the Department of Communications.

Cet appareil numérique respecte les limites de bruits radioélectriques applicables aux appareils numériques de Class B prescrites dans la norme sur le matériel brouilleur: "Appareils Numériques," NMB-003 édictée par le ministre des Communications.

CANADIAN EQUIPMENT LIMITATIONS

Notice: The Canadian Industry and Science Canada label identifies certified equipment. This certification means that the equipment meets certain telecommunications network protective, operational, and safety requirements. The Department does not guarantee the equipment will operate to the user's satisfaction.

Before installing this equipment, ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. In some cases, the company's inside wiring associated with a single-line individual service may be extended by means of a certified connector assembly (telephone extension cord). Compliance with the above conditions may not prevent degradation of service in some situations.

Repairs to certified equipment should be made by an authorized Canadian maintenance facility designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.

Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines, and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas.



Users should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority, or an electrician, as appropriate.

The Load Number (LN) assigned to each terminal device denotes the percentage of the total load to be connected to a telephone loop which is used by the device, to prevent overloading. The termination on a loop may consist of any combination of devices subject only to the requirement that the total of the Load Numbers of all devices does not exceed 100.

Table of Contents

Unit Overview	1
LED Indicators	2
Inspection	3
Maintenance	4
Remote Testing	4
Repair and Return	4
Connections	5
Powering with the NT1 ACE ³ Power Supply	7
Connecting the Terminal Equipment	8
Typical Configuration	9
Troubleshooting	10
Specifications	12
Network Interface (U)	12
Customer Interface (S/T)	12
Faceplate Indicators	12
Network Compatibility	13
Mechanical	13
Power	13
Environmental	13
Power Supply Specifications	13

FIGURES

Figure 1-1. ADTRAN NT1 ACE³1
Figure 1-2. 1Interface Connectors1
Figure 1-3. Network Connector (RJ-45) 5
Figure 1-4 . Local Bus Connector (RJ-45)6
Figure 1-5. Power Supply Connection7
Figure 1-6. Typical Configuration.....9

TABLES

Table 1-A. Status Indicators..... 2
Table 1-B. Network Connector Pin Assignments..... 5
Table 1-C. Local Bus Connector Pin Assignments 6

Unit Overview

The ADTRAN NT1 ACE³ provides up to three basic rate interfaces between customer ISDN terminal equipment (S/T) and the ISDN network (U). Figure 1-1 is an illustration of the NT1 ACE³.

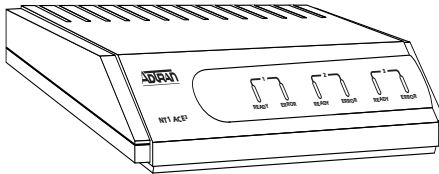


Figure 1-1
ADTRAN NT1 ACE³

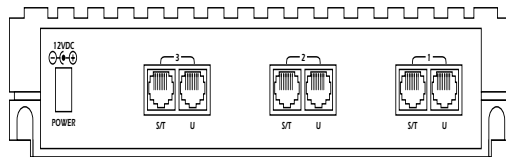


Figure 1-2
Interface Connectors

The three RJ-45 connectors labeled **U** connect to the ISDN network. The RJ-45 connectors labeled **S/T** connect to the terminal equipment.



NOTE *The U-interface complies with ANSI T1.601 and ITU-TL430 recommendation Standard. The S/T-interface complies with ANSI T1.605 and ETSI ETS 300012 Standard.*

The ADTRAN NT1 ACE³ is a stand-alone unit. An external power source is provided for the NT1 ACE³. External power is supplied by the ADTRAN Power Supply, part number 336012VUR01.

LED Indicators

Table 1-A describes the status of the LEDs located on the front panel of the NT1 ACE³. There is a Ready and Error indicator for each port of the NT1 ACE³.

Table 1-A
Status Indicators

LED	Color	Description
READY	Green	S/T and U- interfaces ready to place call
ERROR	Red	S/T or U-interface not ready

If an ERROR indicator is illuminated, check the flash rate of the READY indicator to determine the source of the error. A faster 8 Hz flash rate (8 flashes per second) indicates a

network problem. A slower 1 Hz rate (1 flash per second) indicates an S/T interface problem.

If an ERROR indicator is not illuminated and the READY indicator is flashing, then a network test is in progress. Network command tests cause a faster 8 Hz flash rate.

Inspection

After unpacking the unit, immediately inspect it for possible shipping damage. If damage is discovered, file a claim immediately with the carrier; then contact ADTRAN Customer Service. If possible, keep the original shipping container for use in shipping the NT1 ACE³ for repair or for verification of damage during shipment.



- Never install telephone wiring during a lightning storm.
- Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
- Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
- Use caution when installing or modifying telephone lines.

Maintenance

The ADTRAN NT1 ACE³ requires no routine maintenance to operate. In case of equipment malfunction, refer to the sections *Remote Testing* on page 4 and *Repair and Return* on page 4 or remove the unit and replace it with another unit optioned in an identical manner.

Remote Testing

Network test features include a loopback test initiated at the central office. This test confirms network integrity to the NT1 ACE³.

Repair and Return

Repairs should not be performed in the field. Repair services can be obtained by returning the unit to the ADTRAN Customer and Product Service (CAPS) Department at the address listed on the inside back cover of this manual.

Connections

The NT1 ACE³ is optioned for standard 100 Ω termination. Tables 1-B and 1-C give the connector pin assignments, and Figures 1-3 and 1-4 show the connectors.

Table 1-B
Network Connector Pin Assignments

Pin	Description
1	No connection
2	No connection
3	No connection
4	U-interface network connection
5	U-interface network connection
6	No connection
7	No connection
8	No connection





Figure 1-3
Network Connector (RJ-45)

Table 1-C*Local Bus Connector Pin Assignments*

Pin	Description
1	No connection
2	No connection
3	S/T interface Receive Power Source 1 (Negative)
4	S/T interface Transmit Power Source 1 (Positive)
5	S/T interface Transmit Power Source 1 (Positive)
6	S/T interface Receive Power Source 1 (Negative)
7	No connection
8	No connection

**Figure 1-4***Local Bus Connector (RJ-45)*

Powering with the NT1 ACE³ Power Supply

The ADTRAN NT1 ACE³ Power Supply, part number 336012VUR01, provides power to the NT1 ACE³. To connect the NT1 ACE³ to the external power supply, perform the following steps as illustrated in Figure 1-5.

1. Connect the Power Supply to the NT1 ACE³ at the **POWER** jack located on the NT1 ACE³ rear panel.
2. Plug the Power Supply into the nearest wall outlet supplying 120 VAC, 60 HZ.
3. On the NT1 ACE³, verify that the ERROR indicators are illuminated. After approximately 15 seconds, the READY indicators should flash at a 1 Hz rate. Should any of the indicators fail to operate as stated, see the section *Troubleshooting* on page 10.

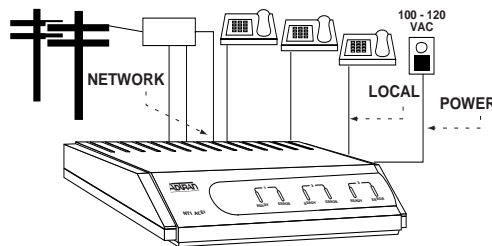


Figure 1-5
Power Supply Connection

Connecting the Terminal Equipment

After successfully powering up the NT1 ACE³, the ERROR indicators should be on and the READY indicators should be flashing. Make sure that terminal equipment (TE) is properly terminated. Plug each TE into one of the S/T connectors at the rear of the unit.

The ERROR indicators should extinguish a few seconds after power is applied to the TE. If the ERROR indicators fail to go out, see the section *Troubleshooting* on page 10.

As ERROR indicators extinguish, READY indicators should illuminate. A few seconds after the READY indicators illuminate, a call can be placed or received. If the READY indicators fail to illuminate or if you are unable to place or receive calls, see the section *Troubleshooting* on page 10.

Typical Configuration

This configuration allows you to connect up to three TEs at ranges up to 3000 feet from the NT1 ACE³, as shown in Figure 1-6. A termination resistor should be centrally located to the TEs. The NT1 ACE³ **TERMINATION** is set to 100 Ω . The TEs should be set to 100 Ω .

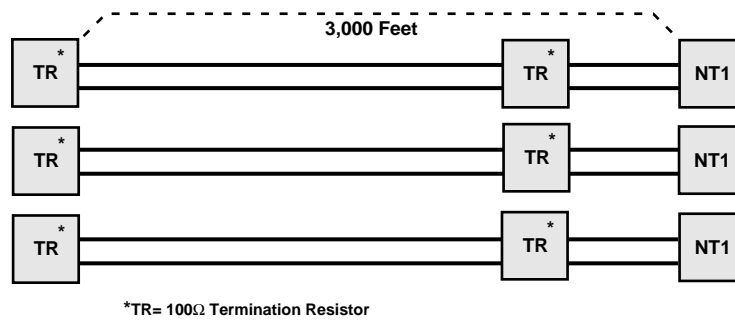


Figure 1-6
Typical Configuration

Troubleshooting

If your NT1 ACE³ does not operate properly, please check the list of symptoms and solutions below. For further assistance, please contact ADTRAN Technical Support at 888 4ADTRAN.

ERROR and READY indicators not illuminated.

- Check the power source to the NT1 ACE³ for sufficient power.
- The NT1 ACE³ power supply may be defective: Call ADTRAN Technical Support.
- The NT1 ACE³ may be defective: Call ADTRAN Technical Support.

ERROR indicators illuminated, READY indicators flash at a faster 8 Hz rate.

Network activation failure:

- Wall jack wiring is incorrect: Check wall jack.
- Problem with ISDN line: Contact telephone company.

ERROR indicators illuminated, READY indicators flash at a slower 1Hz rate.

Local bus failure:

- TE not connected: Connect TE.
- TE not receiving power from NT1: Consult TE documentation.
- TE not terminated properly: Correct termination.
- TE ISDN parameters not configured properly: Re-configure TE (SPIDs, LDNs, switch type, etc.).

READY indicators do not illuminate.

- Problem with ISDN network: Contact telephone company.
- ISDN line not plugged into **U** jack: Plug ISDN line into **U** jack.

Unable to make or receive a call.

- TE is not compatible with ISDN network: Contact telephone company.
- TE ISDN parameters not configured properly: Re-configure TE (SPIDs, LDNs, switch type, etc.).

Specifications

Network Interface (U)

Line..... 2-Wire (Tip and Ring)
Operating Mode Full-Duplex
Data Rate 160 kbps total, 144 kbps to customer
Signal Format..... 2B1Q
Output Amplitude 2.5 volts, zero-to-peak
Tx Source Impedance.... As per ANSI T1.601
Rx Source Impedance.... As per ANSI T1.601
Receiver Sensitivity..... As per ANSI T1.601

Customer Interface (S/T)

Line..... 4-Wire (Tx and Rx Pair)
Operating Mode Full-Duplex
Data Rate 192 kbps total, 144 kbps to customer
Signal Format..... Alternate Mark Inversion, 100% duty cycle
Output Amplitude 0.75 volt, zero-to-peak
Tx Source Impedance.... As per ANSI T1.605
Rx Source Impedance.... As per ANSI T1.605
Receiver Sensitivity..... As per ANSI T1.605

Faceplate Indicators

ERROR U-interface or S/T interface not ready
READY Steady light - Network ready to place a call
 8 Hz (faster) flashing - U-interface not ready
 1 Hz (slower) flashing - S/T interface not ready

Network Compatibility

U Interface..... ISDN U
S/T Interface..... ISDN S/T

Mechanical

Size 9.0" wide, 6.375" deep,
1.625" high
Weight 1.5 lbs
Mounting..... Wall or desktop

Power

12 VDC 3.3 W dissipation

Environmental

Temperature 0 to 40 °C (32 to 104 °F) operating
-20 to 70 °C (-4 to 158 °F) storage
Relative Humidity.... Up to 95%, non-condensing

Power Supply Specifications

Size 3.0" long, 2.5" wide, 1.9" high
Weight 1.5 lb
Power Input 110 VAC, 60 Hz
Voltage 12 VDC/800 mA

Technical Support and Warranty Information

Presales Inquiries and Applications Support

Please contact your local distributor, ADTRAN Applications Engineering, or ADTRAN Sales:

Applications Engineering	800) 615-1176
Sales	(800) 827-0807

Post-Sale Support

Please contact your local distributor first. If your local distributor cannot help, please contact ADTRAN Technical Support and have the unit serial number available.

Technical Support	(888) 4ADTRAN
-------------------	---------------

Repair and Return

If ADTRAN Technical Support determines that a repair is needed, Technical Support will coordinate with the Customer and Product Service (CAPS) department to issue an RMA number. For information regarding equipment currently in house or possible fees associated with repair, contact CAPS directly at the following number:

CAPS Department	(256) 963-8722
-----------------	----------------

Identify the RMA number clearly on the package (below address), and return to the following address:

ADTRAN Customer and Product Service

6767 Old Madison Pike

Progress Center / Building #6 Suite 690

Huntsville, Alabama 35807

RMA # _____