



Cisco Unified Attendant Admin User Guide

Version 1.1.2

Corporate Headquarters
Cisco Systems, Inc.
170 West Tasman Drive
San Jose, CA 95134-1706
USA
<http://www.cisco.com>
Tel: 408 526-4000
800 553-NETS (6387)
Fax: 408 526-4100



THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY THIS REFERENCE. IF YOU ARE UNABLE TO LOCATE THE SOFTWARE LICENSE OR LIMITED WARRANTY, CONTACT YOUR CISCO REPRESENTATIVE FOR A COPY.

The Cisco implementation of TCP header compression is an adaptation of a program developed by the University of California, Berkeley (UCB) as part of UCB's public domain version of the UNIX operating system. All rights reserved. Copyright © 1981, Regents of the University of California.

NOTWITHSTANDING ANY OTHER WARRANTY HEREIN, ALL DOCUMENT FILES AND SOFTWARE OF THESE SUPPLIERS ARE PROVIDED "AS IS" WITH ALL FAULTS. CISCO AND THE ABOVE-NAMED SUPPLIERS DISCLAIM ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

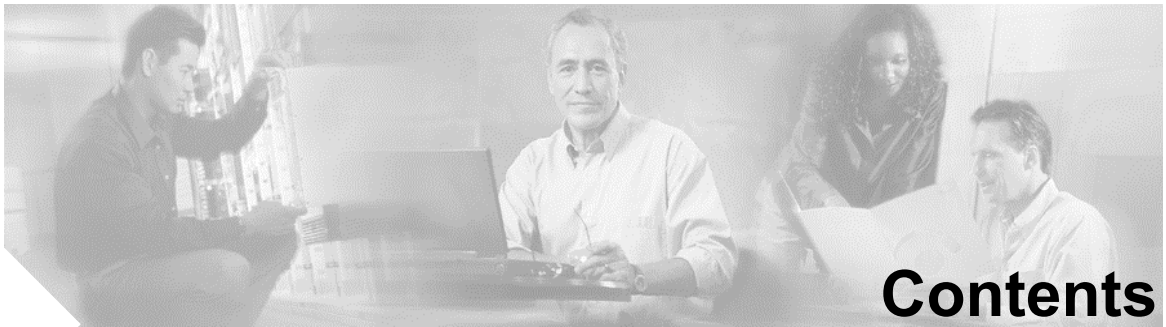
IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

CCVP, the Cisco Logo, and the Cisco Square Bridge logo are trademarks of Cisco Systems, Inc.; Changing the Way We Work, Live, Play, and Learn is a service mark of Cisco Systems, Inc.; and Access Registrar, Aironet, BPX, Catalyst, CCDA, CCDP, CCIE, CCIP, CCNA, CCNP, CCSP, Cisco, the Cisco Certified Internetwork Expert logo, Cisco IOS, Cisco Press, Cisco Systems, Cisco Systems Capital, the Cisco Systems logo, Cisco Unity, Enterprise/Solver, EtherChannel, EtherFast, EtherSwitch, Fast Step, Follow Me Browsing, FormShare, GigaDrive, GigaStack, HomeLink, Internet Quotient, IOS, iPhone, IP/TV, iQ Expertise, the iQ logo, iQ Net Readiness Scorecard, iQuick Study, LightStream, Linksys, MeetingPlace, MGX, Networking Academy, Network Registrar, Packet, PIX, ProConnect, RateMUX, ScriptShare, SlideCast, SMARTnet, StackWise, The Fastest Way to Increase Your Internet Quotient, and TransPath are registered trademarks of Cisco Systems, Inc. and/or its affiliates in the United States and certain other countries.

All other trademarks mentioned in this document or Website are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (0612R)

Any Internet Protocol (IP) addresses used in this document are not intended to be actual addresses. Any examples, command display output, and figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses in illustrative content is unintentional and coincidental.

Cisco Unified Attendant Admin User Guide
Copyright © 2007 Cisco Systems, Inc. All rights reserved.



Preface 7

Purpose 7

Who Should Read this Guide 7

How this Guide is Organized 7

Conventions 8

Obtaining Documentation 10

Cisco.com 10

Product Documentation DVD 10

Ordering Documentation 10

Documentation Feedback 10

Cisco Product Security Overview 11

Reporting Security Problems in Cisco Products 11

Obtaining Technical Assistance 12

Reporting Security Problems in Cisco Products 12

Submitting a Service Request 13

Definitions of Service Request Severity 13

Obtaining Additional Publications and Information 14

Introduction 17

Points to Remember 17

Accessibility for Users with Disabilities 18

Important Information 19

Compatibility between Cisco Unified Attendant Console and Cisco Unified Communications Manager (CUCM) 19

TAPI Resilience 19

Busy Lamp Field 20

Call Park 20

Other items to remember 20

Product Overview 21

Cisco Unified Attendant Console 21

- Queue DDI 21
- CT Gateway Devices 21
- Service Queues 21
- Park Devices 22

Call Flow 22

Numbering Plan for Test Install 24

Performance Information 24

Hardware / Software Requirements 25

Installation of Cisco Unified Attendant Applications 29

Installation Checklist 29

Installing Cisco Unified Attendant Server 31

Installing Cisco Unified Attendant Console 37

Cisco Unified Attendant Admin 43

Administrator Login 44

Home Page 45

Engineering 46

- Administrator Management 46
- Database Management 47
- Service Management 49
- CUCM Connectivity 49
- LDAP Directory Connectivity (for CUCM 4.3 only) 52
- Logging Management 54

System Configuration 57

- System Device Management 57
- Attendant Console Device Management 59
- Synchronizing with CUCM 60
- Directory Filtering (for Cisco Unified Department Attendant Console only) 65
- Directory Synchronization 66

User Configuration 68

- General Properties 68
- Queue Management 70
- Operator Management 73

Uninstalling the Application and its Components 75

Uninstalling Cisco Unified Attendant Server 75

Uninstalling MS SQL Server 77

Uninstalling BDE Utility 80

Uninstalling .NET Framework 82

Configuring CallManager 4.3 for Cisco Unified Attendant

Applications 85

Assigning Access Rights 85

Setting Up an End User 87

Assigning End User to SuperUserGroup 87

Configuring CallManager 5.x/6.x for Cisco Unified

Attendant Applications 89

Setting Up an End User 89

Creating a User Group 91

Assigning Roles and User to the User Group 91


Adding End User to Standard CCM Super Users group 93

TAPI Configuration 95

Installing the TAPI TSP 95

Configuring the TAPI TSP 96

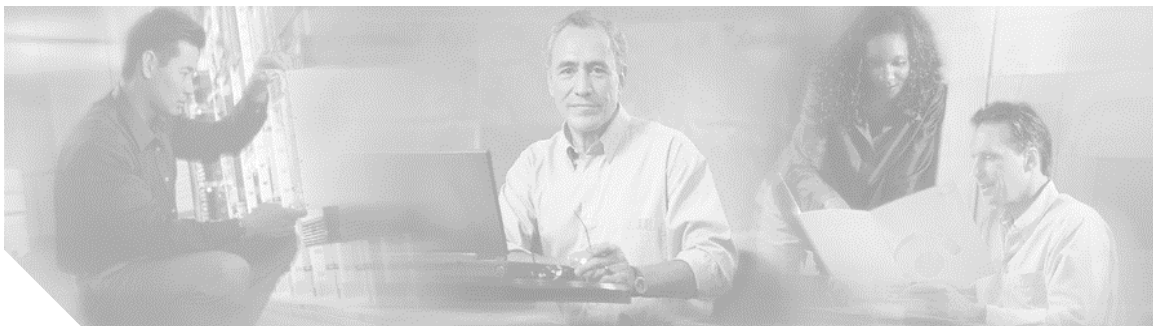Glossary 99



Preface

Cisco Unified Attendant Admin provides administrator access to the configuration for Cisco Unified Attendant Console.

Cisco Unified Attendant Admin is an efficient application specially designed for configuring databases, connections to Cisco Unified Communications Manager, system and user settings. The user-friendly design of the application gives speed and flexibility to the users.

Purpose

The purpose of this user guide is to, provide information on Cisco Unified Attendant Console configuration.

Who Should Read this Guide

The document is intended for,

1. Those involved in the training of Cisco Unified Attendant Admin
2. Users of Cisco Unified Attendant Admin

How this Guide is Organized

The user guide is split into six main sections. These sections explain the functionality in a way that the users can easily get familiar with Cisco Unified Attendant Admin, perform different actions and customize it. The following table provides the organization of this guide,

Table 1: describes the sections of the user guide

<i>Part</i>	<i>Description</i>
<i>Important Information</i>	This section provides details for the compatibility of Cisco Unified Attendant applications with Cisco Unified Communications Manager.

Table 1: describes the sections of the user guide

Part	Description
<i>Product Overview</i>	This section provides a numbering test plan and gives a brief description of the Cisco Unified Attendant applications.
<i>Installation Checklist</i>	In order to start installing applications you must go through the checklist for successful installation.
<i>Installation of Cisco Unified Attendant Applications</i>	This section provides a walkthrough for installation of Cisco Unified Attendant Admin and Cisco Unified Attendant Console.
<i>Cisco Unified Attendant Admin</i>	This section explains in detail all the configurations that can be done through Cisco Unified Attendant Admin.

Conventions

This document uses the following conventions.

Table 2: explains the writing convention used in the user guide

Convention	Description
boldface font	Commands and keywords are in boldface.
<i>italic font</i>	Arguments for which you supply values are in italics.
[]	Elements in square brackets are optional.
{ x y z }	Alternative keywords are grouped in braces and separated by vertical bars.
[x y z]	Optional alternative keywords are grouped in braces and separated by vertical bars.
String	A nonquoted set of characters. Do not use quotation marks around the string or the string will include the quotation marks.
screen font	Terminal sessions and information the system displays are in screen font.
Boldface screen font	Information you must enter is in boldface screen font.
<i>italic screen font</i>	Arguments for which you must supply values are in italic screen font.
→	This pointer highlights an important line of text in an example.
^	The symbol ^ represents the key labeled Control—for example, the key combination ^D in a screen display means you hold down the Control key while you press the D key.

Table 2: explains the writing convention used in the user guide

Convention	Description
< >	Nonprinting characters, such as passwords, are in angle brackets.

Notes use the following conventions:

**Note**

Means *reader take note*. Notes contain helpful suggestions or references to material not covered in the publication.

Timesavers use the following conventions:

**Timesaver**

Means *the described action saves time*. You can save time by performing the action described in the paragraph.

Tips use the following conventions:

**Tip**

Means the information contains useful tips.

Cautions use the following conventions:

**Caution**

Means *reader be careful*. In this situation, you might do something that could result in equipment damage or loss of data.

Warnings use the following conventions:

**Warning**

This warning signal means danger. You are in a situation that could cause bodily injury. Before you work on any equipment, you must be aware of the hazards involved with electrical circuitry and familiar with standard practices for preventing accidents.

Obtaining Documentation

Cisco documentation and additional literature are available on Cisco.com. Cisco also provides several ways to obtain technical assistance and other technical resources. These sections explain how to obtain technical information from Cisco Systems.

Cisco.com

You can access the most current Cisco documentation at this URL:
<http://www.cisco.com/techsupport>

You can access the Cisco website at this URL:
<http://www.cisco.com>

You can access international Cisco websites at this URL:
http://www.cisco.com/public/countries_languages.shtml

Product Documentation DVD

The Product Documentation DVD is a comprehensive library of technical product documentation on a portable medium. The DVD enables you to access multiple versions of installation, configuration, and command guides for Cisco hardware and software products. With the DVD, you have access to the same HTML documentation that is found on the Cisco website without being connected to the Internet. Certain products also have .PDF versions of the documentation available.

The Product Documentation DVD is available as a single unit or as a subscription. Registered Cisco.com users (Cisco direct customers) can order a Product Documentation DVD (product number DOC-DOCDVD= or DOC-DOCDVD=SUB) from Cisco Marketplace at this URL:
<http://www.cisco.com/go/marketplace/>

Ordering Documentation

Registered Cisco.com users may order Cisco documentation at the Product Documentation Store in the Cisco Marketplace at this URL:
<http://www.cisco.com/go/marketplace/>

Nonregistered Cisco.com users can order technical documentation from 8:00 a.m. to 5:00 p.m. (0800 to 1700) PDT by calling 1 866 463-3487 in the United States and Canada, or elsewhere by calling 011 408 519-5055. You can also order documentation by e-mail at tech-doc-store-mkpl@external.cisco.com or by fax at 1 408 519-5001 in the United States and Canada, or elsewhere at 011 408 519-5001.

Documentation Feedback

You can rate and provide feedback about Cisco technical documents by completing the online feedback form that appears with the technical documents on Cisco.com.
You can submit comments about Cisco documentation by using the response card (if present) behind the front cover of your document or by writing to the following address:

Cisco Systems
Attn: Customer Document Ordering

170 West Tasman Drive
San Jose, CA 95134-9883
We appreciate your comments.

Cisco Product Security Overview

This product contains cryptographic features and is subject to United States and local country laws governing import, export, transfer and use. Delivery of Cisco cryptographic products does not imply third-party authority to import, export, distribute or use encryption. Importers, exporters, distributors and users are responsible for compliance with U.S. and local country laws. By using this product you agree to comply with applicable laws and regulations. If you are unable to comply with U.S. and local laws, return this product immediately.

A summary of U.S. laws governing Cisco cryptographic products may be found at: <http://www.cisco.com/wwl/export/crypto/tool/stqrg.html>. If you require further assistance please contact us by sending email to export@cisco.com.

Cisco provides a free online Security Vulnerability Policy portal at this URL:
http://www.cisco.com/en/US/products/products_security_vulnerability_policy.html

From this site, you will find information about how to:

1. Report security vulnerabilities in Cisco products.
2. Obtain assistance with security incidents that involve Cisco products.
3. Register to receive security information from Cisco.

A current list of security advisories, security notices, and security responses for Cisco products is available at this URL:

<http://www.cisco.com/go/psirt>

To see security advisories, security notices, and security responses as they are updated in real time, you can subscribe to the Product Security Incident Response Team Really Simple Syndication (PSIRT RSS) feed. Information about how to subscribe to the PSIRT RSS feed is found at this URL:

http://www.cisco.com/en/US/products/products_psirt_rss_feed.html

Reporting Security Problems in Cisco Products

Cisco is committed to delivering secure products. We test our products internally before we release them, and we strive to correct all vulnerabilities quickly. If you think that you have identified a vulnerability in a Cisco product, contact PSIRT:

For Emergencies only-security-alert@cisco.com

An emergency is either a condition in which a system is under active attack or a condition for which a severe and urgent security vulnerability should be reported. All other conditions are considered nonemergencies.

For Nonemergencies-psirt@cisco.com

In an emergency, you can also reach PSIRT by telephone:

1 877 228-7302

1 408 525-6532

**Tip**

We encourage you to use Pretty Good Privacy (PGP) or a compatible product (for example, GnuPG) to encrypt any sensitive information that you send to Cisco. PSIRT can work with information that has been encrypted with PGP versions 2.x through 9.x.

Never use a revoked or an expired encryption key. The correct public key to use in your correspondence with PSIRT is the one linked in the Contact Summary section of the Security Vulnerability Policy page at this URL:

http://www.cisco.com/en/US/products/products_security_vulnerability_policy.html

The link on this page has the current PGP key ID in use. If you do not have or use PGP, contact PSIRT at the aforementioned e-mail addresses or phone numbers before sending any sensitive material to find other means of encrypting the data.

Obtaining Technical Assistance

Cisco Technical Support provides 24-hour-a-day award-winning technical assistance. The Cisco Technical Support & Documentation website on Cisco.com features extensive online support resources. In addition, if you have a valid Cisco service contract, Cisco Technical Assistance Centre (TAC) engineers provide telephone support. If you do not have a valid Cisco service contract, contact your reseller.

Reporting Security Problems in Cisco Products

The Cisco Technical Support & Documentation website provides online documents and tools for troubleshooting and resolving technical issues with Cisco products and technologies. The website is available 24 hours a day, at this URL:

<http://www.cisco.com/techsupport>

Access to all tools on the Cisco Technical Support & Documentation website requires a Cisco.com user ID and password. If you have a valid service contract but do not have a user ID or password, you can register at this URL:

<http://tools.cisco.com/RPF/register/register.do>

**Note**

Use the Cisco Product Identification (CPI) tool to locate your product serial number before submitting a web or phone request for service. You can access the CPI tool from the Cisco Technical Support & Documentation website by clicking the **Tools & Resources** link under Documentation & Tools Choose **Cisco Product Identification Tool** from the Alphabetical Index drop-down list, or click the **Cisco Product Identification Tool** link under Alerts & RMAs. The CPI tool offers three search options: by product ID or model name; by tree view; or for certain products, by copying and pasting **show** command output. Search results show an illustration of your product with the serial number label location highlighted. Locate the serial number label on your product and record the information before placing a service call.

Submitting a Service Request

Using the online TAC Service Request Tool is the fastest way to open S3 and S4 service requests. (S3 and S4 service requests are those in which your network is minimally impaired or for which you require product information.) After you describe your situation, the TAC Service Request Tool provides recommended solutions. If your issue is not resolved using the recommended resources, your service request is assigned to a Cisco engineer. The TAC Service Request Tool is located at this URL:

<http://www.cisco.com/techsupport/servicerequest>

For S1 or S2 service requests, or if you do not have Internet access, contact the Cisco TAC by telephone. (S1 or S2 service requests are those in which your production network is down or severely degraded.) Cisco engineers are assigned immediately to S1 and S2 service requests to help keep your business operations running smoothly.

To open a service request by telephone, use one of the following numbers:

Asia-Pacific: +61 2 8446 7411 (Australia: 1 800 805 227)

EMEA: +32 2 704 55 55

USA: 1 800 553-2447

For a complete list of Cisco TAC contacts, go to this URL:

<http://www.cisco.com/techsupport/contacts>

Definitions of Service Request Severity

To ensure that all service requests are reported in a standard format, Cisco has established severity definitions.

Severity 1 (S1)-An existing network is down, or there is a critical impact to your business operations. You and Cisco will commit all necessary resources around the clock to resolve the situation.

Severity 2 (S2)-Operation of an existing network is severely degraded, or significant aspects of your business operations are negatively affected by inadequate performance of Cisco products. You and Cisco will commit full-time resources during normal business hours to resolve the situation.

Severity 3 (S3)-Operational performance of the network is impaired, while most business operations remain functional. You and Cisco will commit resources during normal business hours to restore service to satisfactory levels.

Severity 4 (S4)-You require information or assistance with Cisco product capabilities, installation, or configuration. There is little or no effect on your business operations.

Obtaining Additional Publications and Information

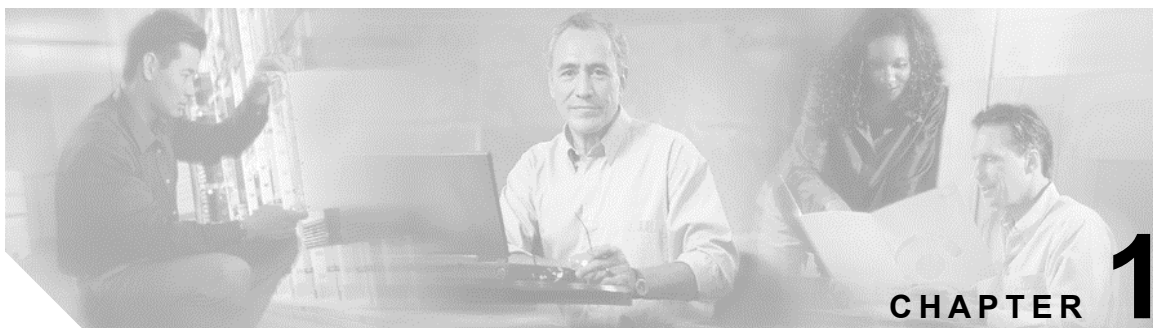
Information about Cisco products, technologies, and network solutions is available from various online and printed sources.

- *The Cisco Product Quick Reference Guide* is a handy, compact reference tool that includes brief product overviews, key features, sample part numbers, and abbreviated technical specifications for many Cisco products that are sold through channel partners. It is updated twice a year and includes the latest Cisco offerings. To order and find out more about the Cisco Product Quick Reference Guide, go to this URL:
<http://www.cisco.com/go/guide>
- Cisco Marketplace provides a variety of Cisco books, reference guides, documentation, and logo merchandise. Visit Cisco Marketplace, the company store, at this URL:
<http://www.cisco.com/go/marketplace/>
- *Cisco Press* publishes a wide range of general networking, training and certification titles. Both new and experienced users will benefit from these publications. For current Cisco Press titles and other information, go to Cisco Press at this URL:
<http://www.ciscopress.com>
- *Packet* magazine is the Cisco Systems technical user magazine for maximizing Internet and networking investments. Each quarter, Packet delivers coverage of the latest industry trends, technology breakthroughs, and Cisco products and solutions, as well as network deployment and troubleshooting tips, configuration examples, customer case studies, certification and training information, and links to scores of in-depth online resources. You can access Packet magazine at this URL:
<http://www.cisco.com/packet>
- *iQ Magazine* is the quarterly publication from Cisco Systems designed to help growing companies learn how they can use technology to increase revenue, streamline their business, and expand services. The publication identifies the challenges facing these companies and the technologies to help solve them, using real-world case studies and business strategies to help readers make sound technology investment decisions. You can access iQ Magazine at this URL:
<http://www.cisco.com/go/iqmagazine>

or view the digital edition at this URL:
<http://ciscoiq.texterity.com/ciscoiq/sample/>
- *Internet Protocol Journal* is a quarterly journal published by Cisco Systems for engineering professionals involved in designing, developing, and operating public and private internets and intranets. You can access the Internet Protocol Journal at this URL:

<http://www.cisco.com/ipj>

- Networking products offered by Cisco Systems, as well as customer support services, can be obtained at this URL:
<http://www.cisco.com/en/US/products/index.html>
- Networking Professionals Connection is an interactive website for networking professionals to share questions, suggestions, and information about networking products and technologies with Cisco experts and other networking professionals. Join a discussion at this URL:
<http://www.cisco.com/discuss/networking>
- World-class networking training is available from Cisco. You can view current offerings at this URL:
<http://www.cisco.com/en/US/learning/index.html>



Introduction

Welcome to the Cisco Unified Attendant Admin User Guide. This document describes the installation and configuration procedures of the applications.

Cisco Unified Attendant Admin is the Web application that allows you to configure and manage your system and user configurations.

System configuration provides the facility to manage synchronization of devices and directory contacts with Cisco Unified Communications Manager. Cisco Unified Attendant Admin and Cisco Unified Communications Manager communicate via AXL API, using SSL, to synchronize the system devices used for queuing, servicing and parking calls. These devices are created as CTI Port and CTI Route Point devices within the Cisco Unified Communications Manager database.

User configuration allows you to manage the configuration for the Cisco Unified Attendant Console. These settings include call queue parameters, operator login credentials and global parameters for internal/external calls access, Force Authorization and Client Matter Codes and Recall timers. These settings are made in order to manage the call flow.

This document assumes that the reader has knowledge of,

- Cisco Unified Communications Manager
- Windows 2000/XP
- TCP/IP
- Microsoft TAPI 2.1
- Cisco Unified Communications Manager TSP

Points to Remember

Cisco Unified Attendant Admin is a set of rules that govern the way the system will operate. Each configuration is stored in a database on Microsoft SQL Server and must be maintained to obtain optimal performance. You must note the following points,

1. Changes made through this application are not saved until you click on the **Submit** button on the page.

2. The valid range or types of characters for each field have been specified on the right-hand side of the fields in red (e.g.

Forced authorization code (FAC): (*, #, 0-9)

3. Invalid input in any field will be denoted by a red colored asterisk (*).
4. Most changes to the system will be made in real-time; however, some changes will require a start and stop of Cisco Unified Attendant Server.

Accessibility for Users with Disabilities

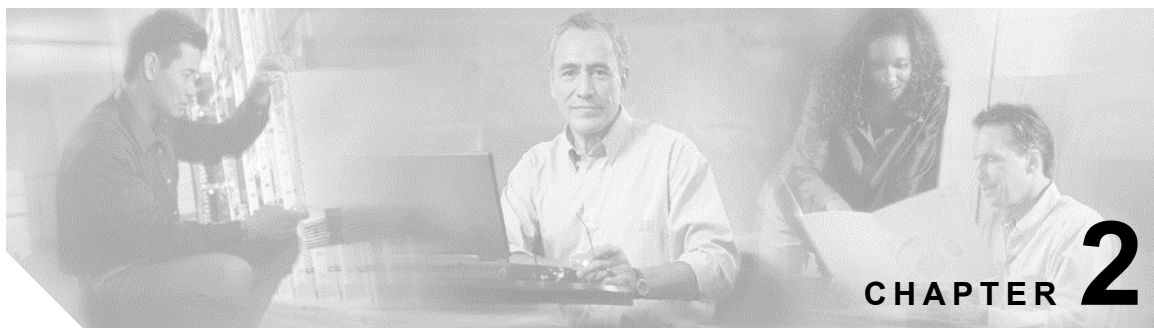
Cisco Unified Attendant Admin provides accessibility features that make it easier for blind and visually impaired users to use the application.

The application runs in a web browser, therefore, the configurations can be made using a mouse as well as the standard keyboard navigations supported by the web browser.

All buttons are labelled by the functionality they provide. Each icon displays a tool tip when the mouse is hovered on it, clearly defining the function of the graphic button. A list of icons along with their descriptions has also been provided in *Chapter 5 Cisco Unified Attendant Admin*.

Cisco Unified Attendant Admin also comes with context-sensitive help. For every page, users can access help specific to the page they need assistance for.

For more information on Cisco Accessibility Program please contact through the following link, <http://www.cisco.com/web/about/responsibility/accessibility/contact.html>



Important Information

Compatibility between Cisco Unified Attendant Console and Cisco Unified Communications Manager (CUCM)

Table 1: displays teh compatibility matrix for Cisco Unified Attendant Console with CUCM

Communications Manager	5.0	5.1	6.0
Cisco TAPI TSP	4.1(1.403)	5.1(0.1801))	6.0.0.6
Cisco Unified Attendant Console	1.1.0	1.1.0	1.1.0

Music on Hold

Cisco Unified Attendant Console supports Music on Hold (MoH) from Cisco Unified Communications Manager in the following areas,

1. When on Operator holds a call
2. During a blind transfer
3. During a re-established transfer

A music source must be selected on the relevant Service Queue devices to enable this functionality. The use of music in both the transferring and hold scenarios is controlled via settings on Cisco Unified Attendant Admin.

TAPI Resilience

Cisco Unified Communications Manager allows a TSP client to communicate with a primary and backup CTI Manager to receive CTI information. This allows Cisco Unified Attendant Server and clients to carry on functioning if a CUCM failover occurs. The backup CTI Manager should be the Cisco Unified Communications Manager to which the phones fail over.

Busy Lamp Field

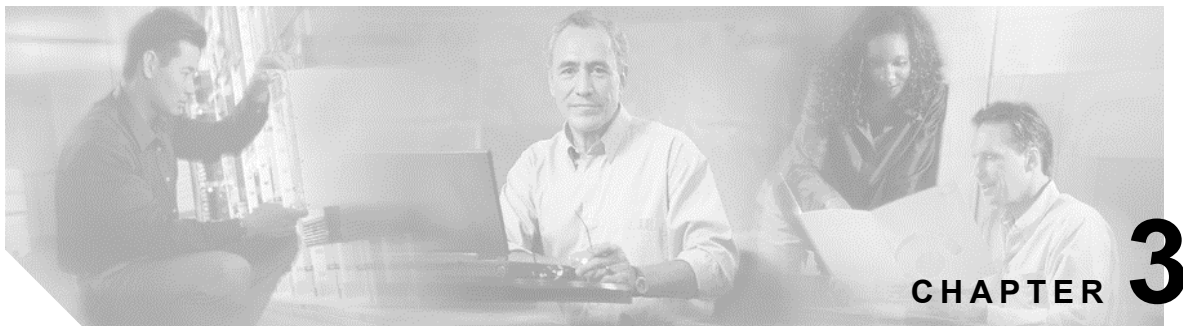
The number of devices that are monitored by Cisco Unified Attendant Console's Busy Lamp Field may have an effect on the performance of the Attendant Console.

Call Park

The Attendant Console Call Park functionality is additional to the standard Cisco Unified Communications Manager call park and directed call park functions. Operators are able to see their available Park devices and choose whether to use a specific device or allow the system to select a device for them to park a call on.

Other items to remember

1. Cisco Unified Attendant Server and Cisco Unified Attendant Console should not be installed on a machine that will act as Cisco Unified Communications Manager.
2. Headset operation is supported.



Product Overview

Cisco Unified Attendant Admin is the configuration tool for the Cisco Unified Attendant Console applications. It allows communication with the Cisco Unified Communications Manager to create the required system devices, and communicates with the Attendant Server to configure the system parameters. The Cisco Unified Communications Manager integration uses the AXL protocol, and requires some initial configuration on Cisco Unified Communications Manager itself to create a User Profile that allows communication via AXL protocol.

The following application is configured through Cisco Unified Attendant Server,

Cisco Unified Attendant Console

This is a screen-based operator console that has been developed to work exclusively on Cisco Unified Communications Manager. The traditional functions of a telephone switchboard have been re-created as a Windows application. It is visually more appealing, easier to operate and more user friendly.

The following devices are used to manage call routing and functionality,

Queue DDI

A Queue DDI is the DN that is dialed to route calls into a call queue. Each configured DDI will be created on CCM as a CTI Route Point, and any call that is intended for this queue must be directed to this port, either directly or through translation.

CT Gateway Devices

The primary purpose of the CT gateway is to queue calls awaiting distribution to Cisco Unified Attendant Console. CT Gateway devices are CTI Ports that are created by the Admin application when synchronized with Cisco Unified Communications Manager.

Service Queues


The Service Queue is a range of devices (CTI Ports) that are used manage calls after they leave the operator's handset, for example when transferring or holding calls.

Park Devices

Another range of CTI Ports that are used exclusively for when the attendant's wish to park a call. They can either select the preferred Park port or allow the system to select the port for them. A parked call can then be picked up by anyone on the system by dialling the Park port number.

Call Flow

The following diagram shows how calls flow through Cisco Unified Attendant Console and how they are controlled by Cisco Unified Attendant Server and Cisco Unified Communications Manager.

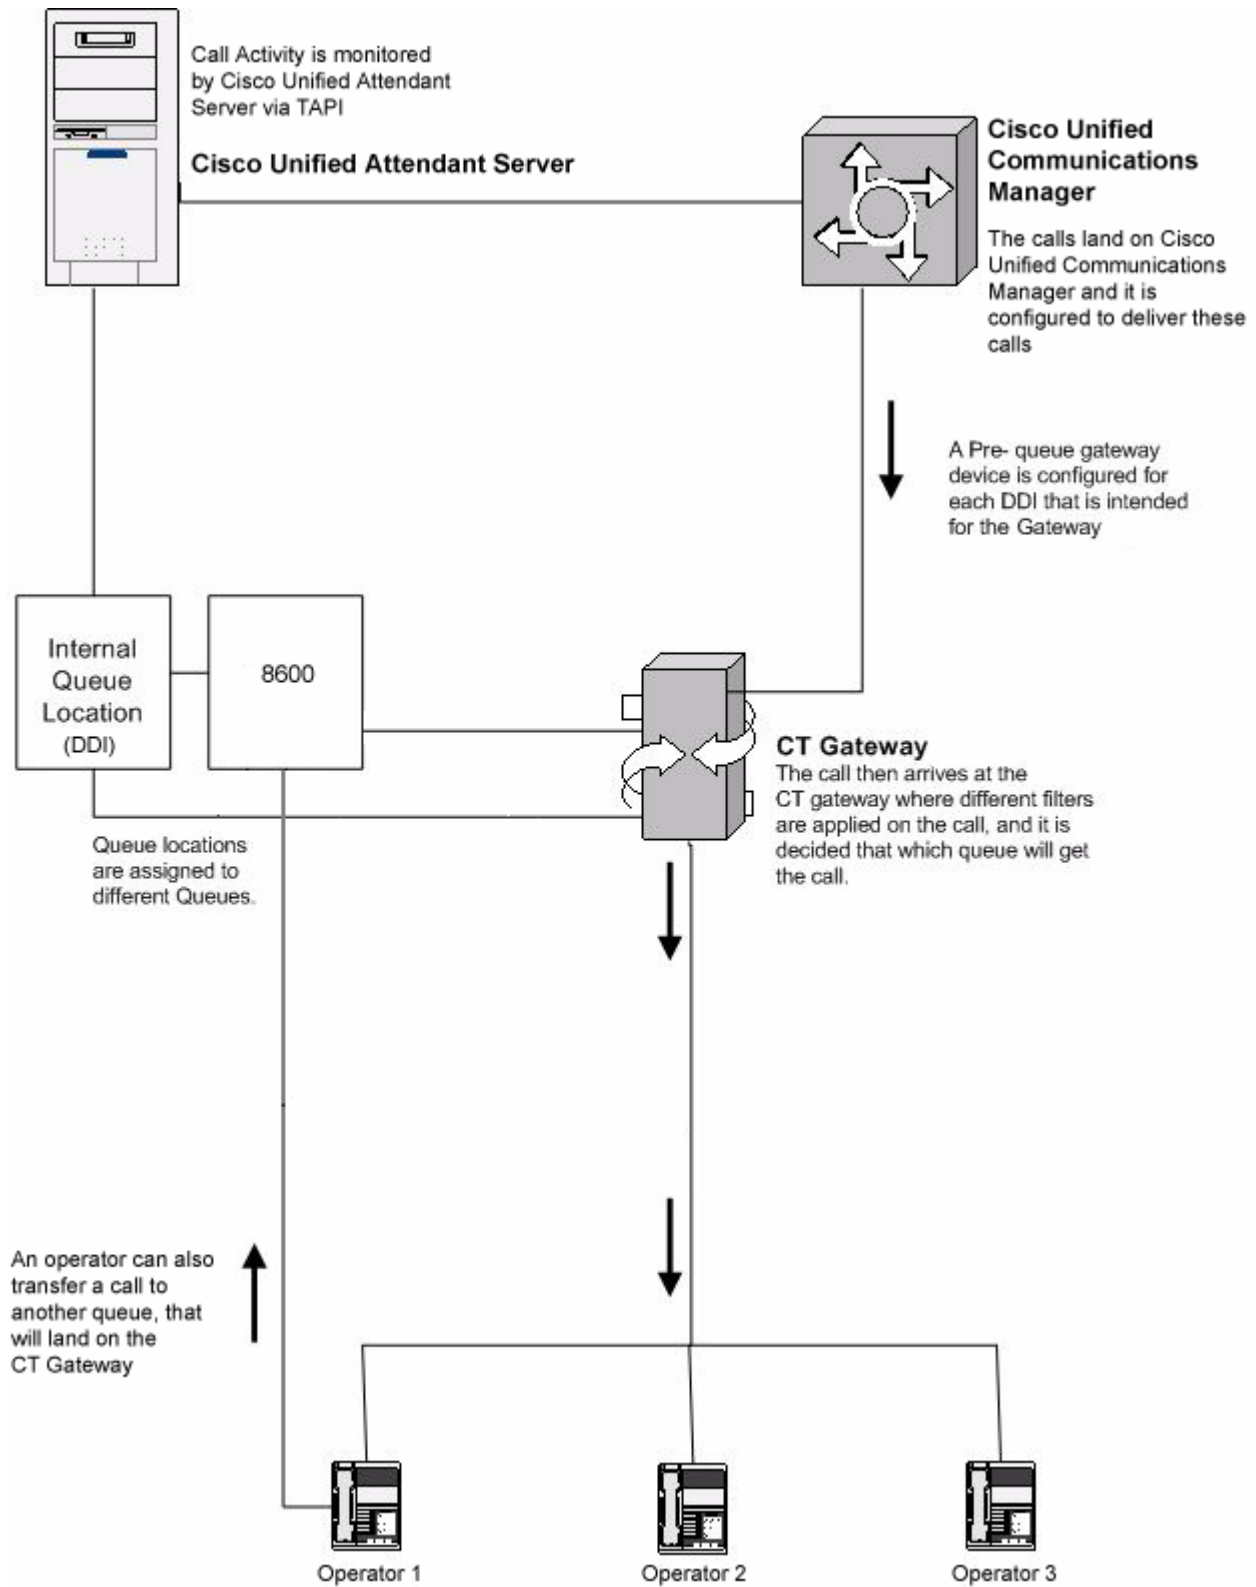

Numbering Plan for Test Install

In order to use the system devices, that are, Service Queues, CT Gateway and Park Devices for call handling you can use the following numbering for a test install. Take a printout for the following table and fill in your own number plan in the *Directory Number* field.

Table 1: shows a numbering plan for a test installt

Device Type	Directory Number (Example)	Directory Number
Queue DDI	8100	
Queue DDI	8101	
CT Gateway	8000	
CT Gateway	8001	
CT Gateway	8002	
CT Gateway	8003	
CT Gateway	8004	
Service Queue	8400	
Service Queue	8401	
Service Queue	8402	
Service Queue	8403	
Service Queue	8404	
Park	8600	
Park	8601	
Park	8602	
Park	8603	
Park	8604	

Performance Information

Performance of Cisco Unified Attendant applications can be measured in several ways,

1. Number of Operators
2. Number of Contacts Supported
3. Number of Console Queues
4. BHCC - Busy Hours Call Completions

Table 2: shows the performance of CUBAC and CUDAC

Performance Item	Maximum (per Cisco Unified Attendant Server)	
	Department Attendant	Business Attendant
Number of Attendant Consoles	10	2
Number of Contacts Supported	750	500
Number of Console Queues	5	3
BHCC	1000	500

Hardware / Software Requirements

The information provided below gives details of the minimum hardware/software required to run Cisco Unified Attendant applications.

Applies To	PC Specification
Cisco Unified Attendant Server	Pentium 4 2.2 GHz 1 GB RAM 40 GB Hard Drive CD-ROM/DVD-Rom Network Card SVGA (1024x768) display card with correct drivers Windows 2000 Server SP4 running Windows English Regional Settings. Internet Information Service (IIS) .Net Framework 2.0* MS SQL Server 2005 (Express) * * Note: The Attendant Console Server installation will install these applications automatically. If MS SQL Express 2005 is installed manually, it must be installed as the Default instance for the Attendant Console to function. Cisco Unified Attendant applications will not work with a Named instance of SQLEXPRESS.

The Server should be connected to the network via the TCP/IP protocol.

You will require appropriate Operating System Licenses.

2. The minimum specification required by Cisco Unified Attendant Console is as follows,

Applies To	PC Specification
Cisco Unified Attendant Console	Pentium 4 Entry Level Specification 512 MB RAM 1GB available Hard Drive space CD-ROM/DVD-ROM Network Card Connected to Network via TCP/IP SVGA (1024x768) display card Windows Small Fonts <i>17 Monitor highly recommended</i> Windows 2000 Professional / Windows XP Professional SoundBlaster compatible sound card and speakers are recommended for the Console Operator.

3. Backups – As with all systems, we advise that backup facilities are provided to ensure application and data integrity, should an unforeseen circumstance arise.

Examples:

CD Writer

Tape streamer. DLT, DAT, Travan etc

Zip / Jaz drive or other type of Magneto Optical drive

If possible, choose a solution that gives a one step disaster recovery. This is a solution that has the ability to restore the complete contents of a hard drive from a bootable floppy disk and the restore media.

4. Server Redundancy – It is strongly recommended that the PC Server should be a redundant system with the following redundancy methods. This is at the discretion of the customer

Multiple hot-swap power supplies

Hot-swap Hard Drive arrays

UPS / power conditioners

RAID


5. Security Considerations

All servers in a Windows environment have a requirement for Anti Virus software, any of the following anti virus software may be used.

McAfee NetShield, Norton Antivirus, Trend OfficeScan

6. The following table outlines the network requirements for running Cisco Unified Attendant applications.

Applies To	Network Specification
All Network Types	The network will need to support/run TCP/IP.
	Cisco Unified Attendant Admin application will need to run under an Administrator profile. (Local Administrator is acceptable)
Microsoft Windows Network	If the network uses DHCP then the PC Server will need a static IP address allocated to it.

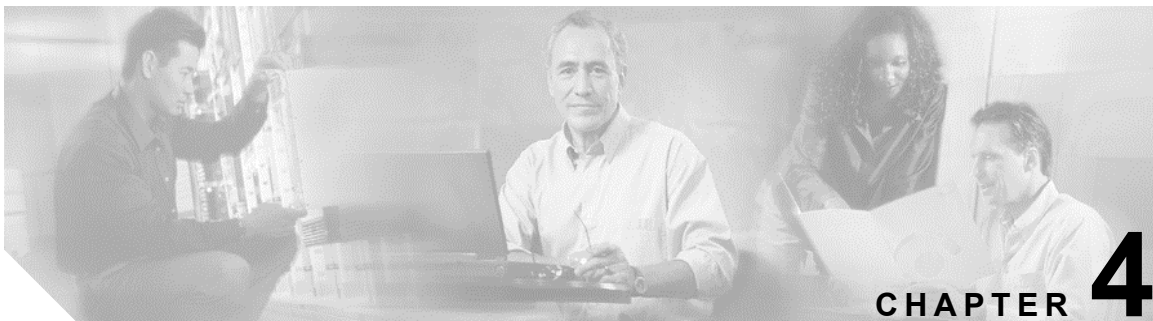

Installation of Cisco Unified Attendant Applications

This section describes in detail the installation procedures for the following applications,

1. Cisco Unified Attendant Server
2. Cisco Unified Attendant Console

In order to install Cisco Unified Attendant Applications, you must configure an End User profile on the Cisco Unified Communications Manager. All other configuration on the Cisco Unified Communications Manager will be handled by the Attendant Admin. Please refer to the following installation checklist for step-by-step installation sequence.

Please note that installation via Terminal Services/Remote Desktop is NOT supported. Only a local installation or VNC connection is supported.

Installation Checklist

This checklist is designed to guide you through the installation process for Cisco Unified Attendant Console in an easy to follow step-by-step sequence. A certain amount of preparation is required to ensure that a quick setup is achieved.

Installation and Configuration Checklist

Step 1 Preparation

Formulate numbering plan for test install

Prepare a Windows 2000 Service Pack 4 server with Internet Information Services (IIS) installed,

Step 2 Cisco Unified Communications Manager Configuration

Create partition and Calling Search Space or add to existing ones as required. (Note: All CTI devices created for the Attendant Console, as well as operators extensions need to be able to receive and make calls to a full range of destinations.)

Create an End User

Create a User Group

Assign roles to User Group

Assign End User to User Group

Assign End User to CCM Super User Group

Step 3 Install and Configure Cisco Unified Attendant Admin

Install Cisco Unified Attendant Admin

Check Cisco Unified Communications Manager connectivity

Configure CT Gateway, Service and Park devices

Synchronize with CCM. Adds all required CTI devices to CCM, and adds them to the End User profile for CTI control.

Configure Directory Synchronization if required

Configure Cisco Unified Attendant Console User Settings

General Settings,

Access Numbers

FAC and CMC Settings

Recall Timers

Night Service

Emergency

Overflow

Queue Management

Queue Name

DDI, Overflow destinations

Operator management

Operator login names and passwords

Step 4 Install Cisco TSP on Cisco Unified Attendant Server

Browse to Communications Manager configuration and select
Application > Plugins

Select Cisco Telephony Service Provider and run the install following the onscreen instructions.

After rebooting the Server configure the TSP.

Install Cisco TAPI Wave Driver (instructions are in the TSP readme file).

Reboot the server.

Step 5 Test TAPI

Use Phone1.exe from Julmar.com to test that,

a) all Associated devices appear in the line list, and b) that a CTI Ports can be monitored and a call made to a nearby handset.

Step 6 Install Cisco Unified Attendant Console


Installing Cisco Unified Attendant Server

1. Insert the Cisco Unified Attendant Applications CD into the CDROM, or browse the directory to which the downloaded installation files are saved.
2. Select the installing location from **My Computer** or **Windows Explorer** to view the directories on the CD. The directories are named according to the applications they contain.

The following steps are followed in order to install the application,


1. The first stage of installation will be to install any required 3rd party applications, including MS SQL Server 2005 Express IE 6.0 and MS Dotnet if they are not already installed. The default user name for the SQL connection will be **sa** and the default password will be **cisco**. The first window appears displaying a progress bar while the setup prepares the system for installation.

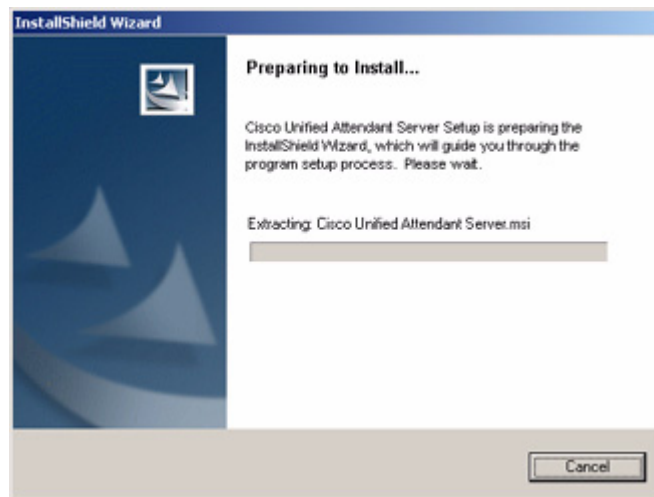Figure 1: displays the screen that is shown while the setup prepares for installation




2. The next screen displays a welcome note and instructions on installing. Click **Next**.

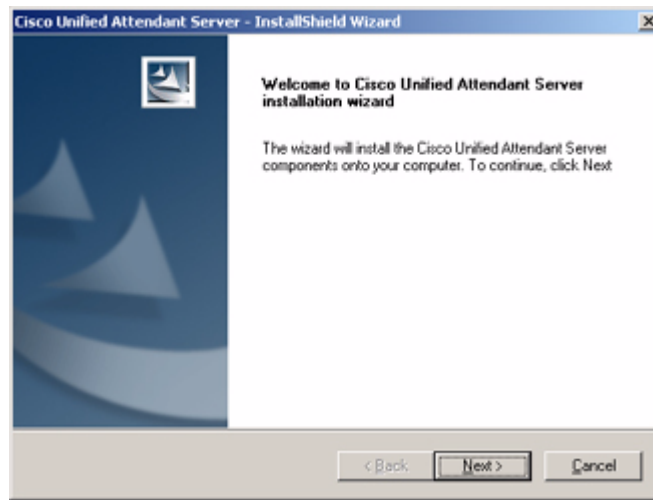Figure 2: displays the welcome screen for the



3. The next window contains registration information. In the *Name* text box, type the name of the license holder, and type the company name into the *Company* text box. Click the Next button to proceed.

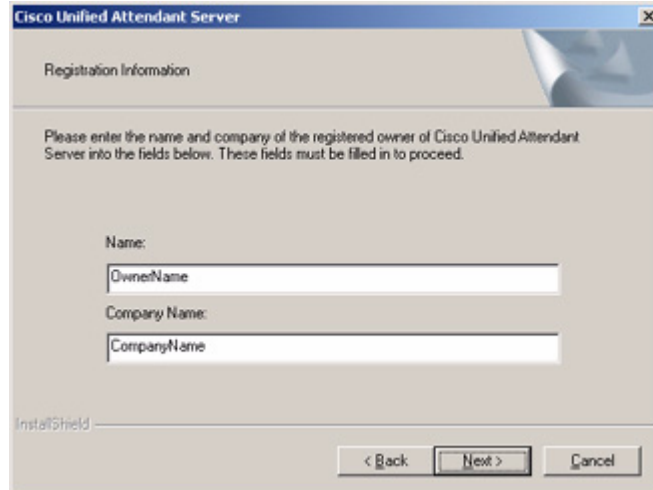
Figure 3: displays the Registration Information screen of the install



4. In this window, it is necessary to type the IP Address of the machine onto which the Server application is being installed. Click **Next**.

Note: If you are unsure of the machine name, it is possible to find out through *Control Panel > Network*. This must be done on the machine that runs Cisco Unified Attendant Server.

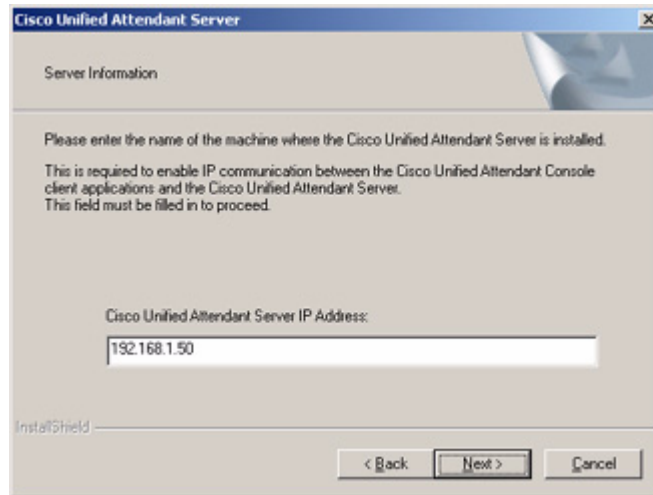
Figure 4: displays the Server Information screen for the installation



5. If you already have MS SQL Server 2005 Express Edition, the screen below will be displayed. Enter the *Server Name*, *Username* and *Password* to connect to MS SQL Server Express 2005 Edition. Click **Next**.


Note: If MS SQL Server is not installed on your machine, it will be installed automatically by Cisco Unified Attendant Server Installation. Please refer to Step 1.

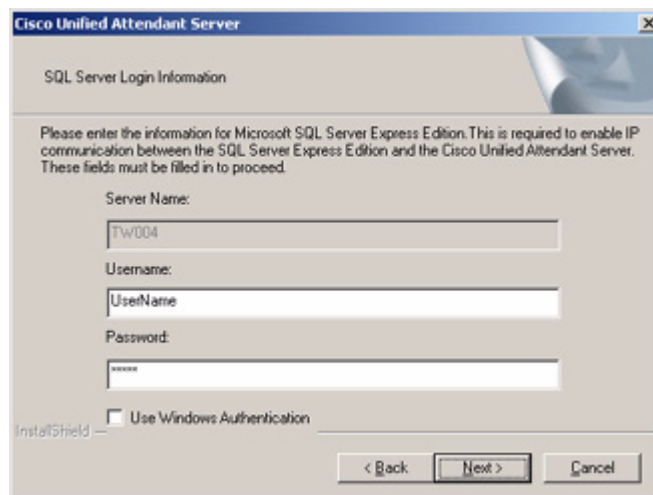Figure 5: displays the Server Login Information screen for installation



6. In order to connect to Cisco Unified Communications Manager, you must enter the IP address and port. You must also specify the *Cisco Unified Communications Manager End User ID* and its password. Make sure the end user that you specify in this screen exists in the system. This can be done through Cisco Unified Communications Manager administration. The creation of an end user has been explained in the appendices at the end of the document. Click **Next**.

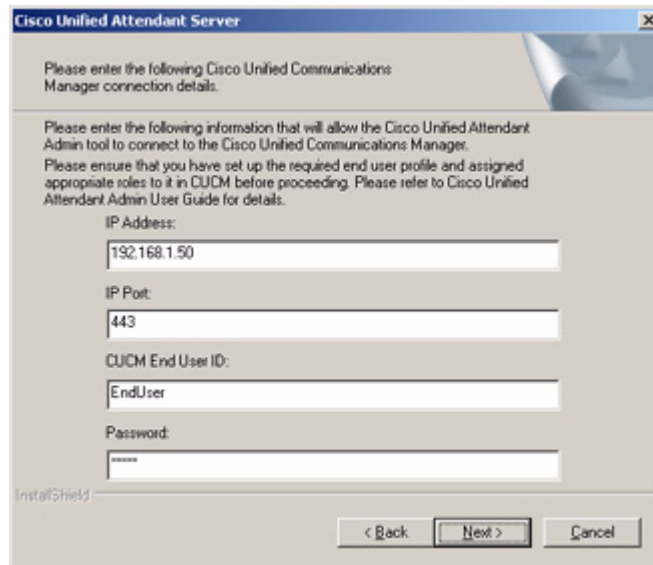Figure 6: displays the CUCM information screen




The screenshot shows a window titled "Cisco Unified Attendant Server". It contains instructions to enter connection details for Cisco Unified Communications Manager. The fields are as follows:

Field	Value
IP Address:	192.168.1.50
IP Port:	443
CUCM End User ID:	EndUser
Password:	*****

At the bottom, there are buttons for "< Back", "Next >", and "Cancel". The "InstallShield" logo is visible in the bottom left corner.

7. When you enter the username and password to connect to Cisco Unified Communications Manager in the previous window, two security alerts will be displayed. Click **Yes** on both the alerts to proceed.

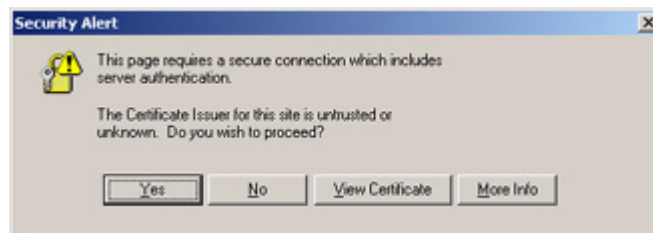Figure 7: displays the confirmation to access CUCM



The screenshot shows a "Security Alert" dialog box with a yellow warning icon. The text inside reads:


This page requires a secure connection which includes server authentication.

The Certificate Issuer for this site is untrusted or unknown. Do you wish to proceed?

At the bottom, there are four buttons: "Yes", "No", "View Certificate", and "More Info".


8. The next window is for selecting the directory into which you wish to install the application. The default location is C:\Program Files\Cisco. By using the Browse button, you can select a different path and directory. Click the **Next** button.

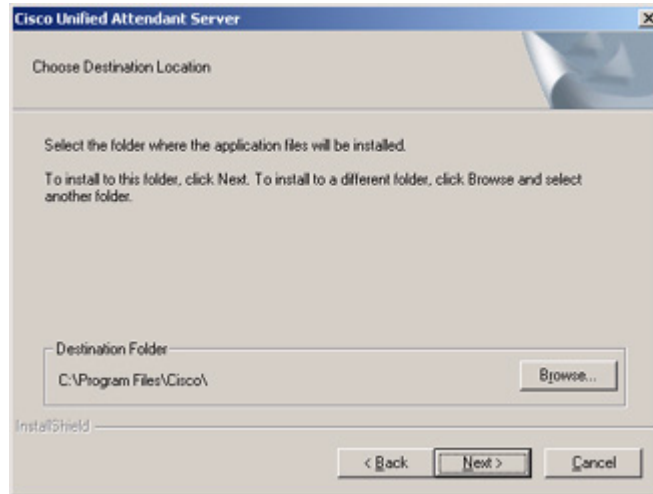Figure 8: displays the screen to specify location for the files to be installed to




9. In the next window, the summary for the current settings specified will be displayed. Click **Next** to proceed with installation or click Back to edit the settings made on the previous screens.

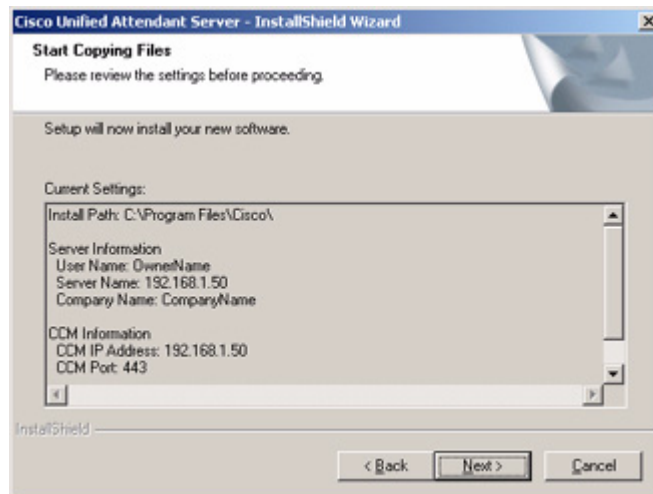Figure 9: displays the summary for the configuration made



10. The next screen will display the progress bar for the installation.

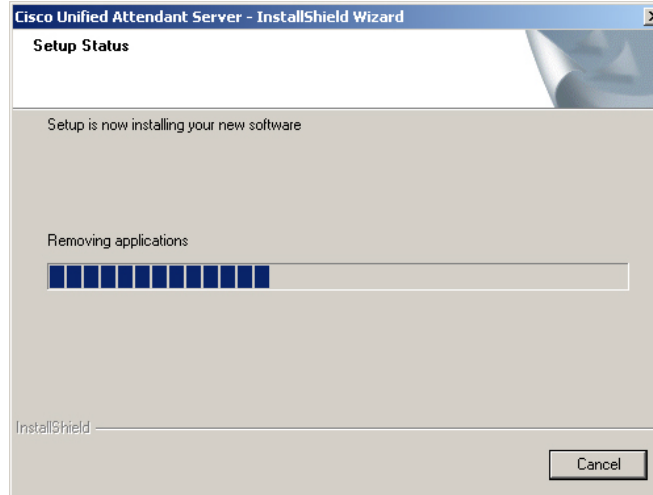Figure 10: displays the progress for i




11. Once the application has been installed, the *Database Wizard* will create and configure the databases for the application. Click **Next**.

Figure 11: displays the Database Wizard welcome screen




12. In the next window, the status of database installation will be displayed. Once the installation is complete, click **Finish**.

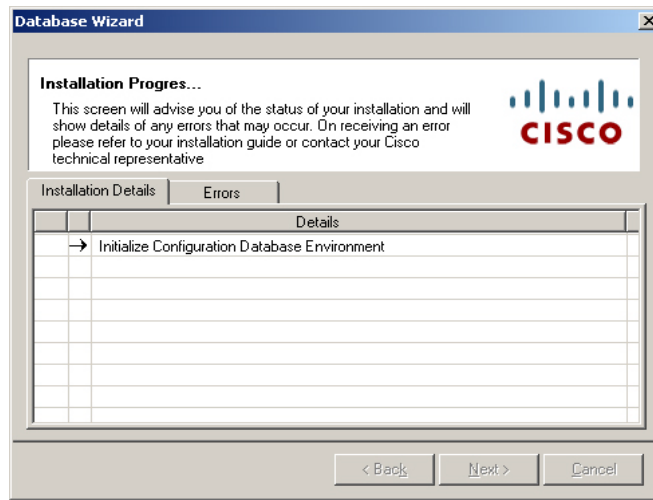Figure 12: displays the installation progress of the databases



13. The application has now been installed successfully. It is recommended that you restart your computer.

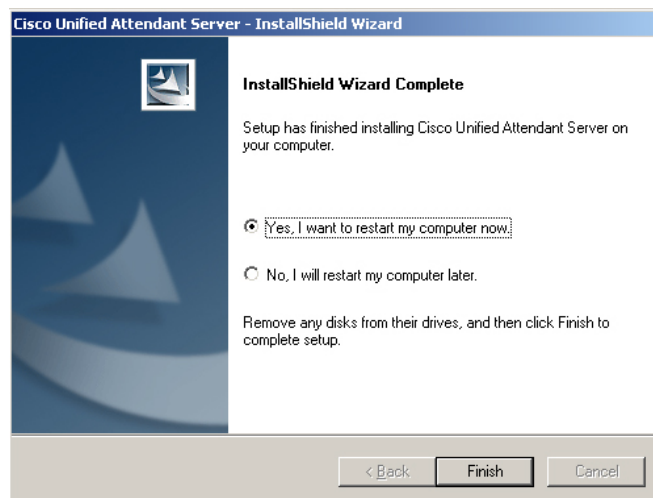Figure 13: displays the screen once the installation is complete




Installing Cisco Unified Attendant Console

1. Insert the Cisco Unified Attendant Console CD into the CDROM, or browse the directory to which the downloaded installation files are saved.
2. Select the installing location from **My Computer** or **Windows Explorer** to view the directories on the CD. The directories are named according to the applications they contain.

The installation instructions provide below describe the procedure to install Cisco Unified Department Attendant Console. Please note that installation for Cisco Unified Business Attendant Console follows the same procedure.


1. The first window appears displaying a message that Cisco Unified Attendant Console Installation Wizard is preparing to install. The progress bar on the screen shows the status of the setup and also shows the names of the files being extracted. Once the installation wizard is ready to install the application, a new screen will be displayed that will guide you through the setup process for Cisco Unified Attendant Console.

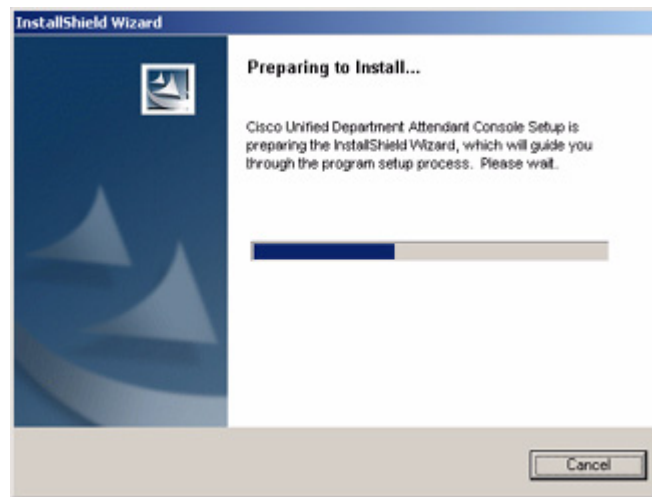Figure 14: displays the first install screen




2. The new window that is displayed after the *Preparing to Install* window, shows a welcome note. This screen specifies that Cisco Unified Attendant Console and its components will be installed on your computer. To continue, click **Next**. If you wish to exit from the setup at this point, click **Cancel**.

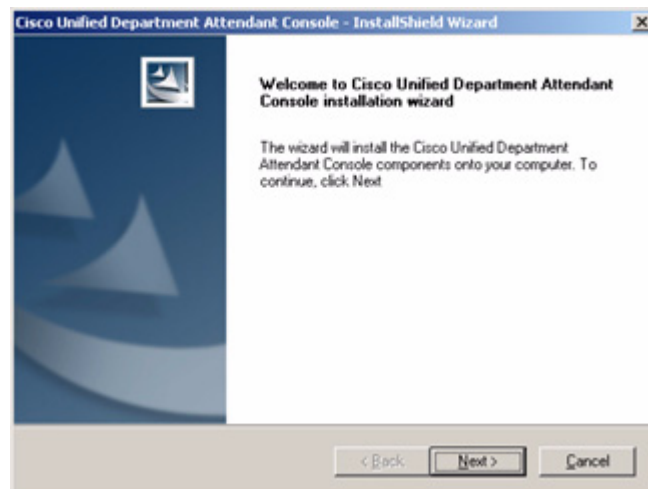Figure 15: displays the welcome screen to installation



- The next window contains the registration information. In the *Name* text box, type the name of the registered owner of Cisco Unified Attendant Console, and type the owner's company name into the *Company* text box. Click the **Next** button to proceed.

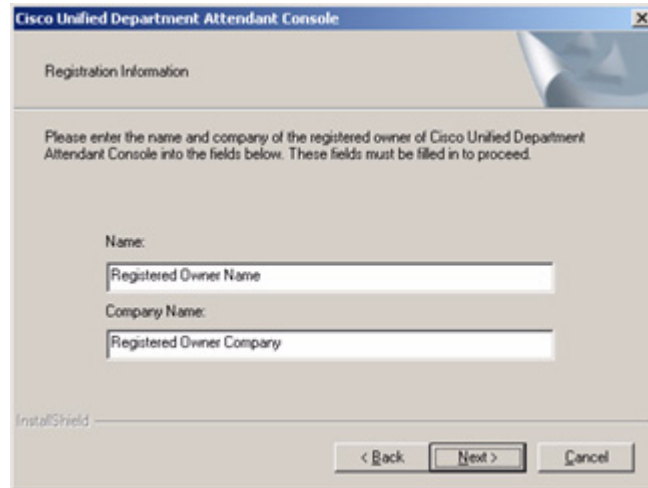Figure 16: displays the screen for Registration Information




- In the next window, select the folder where you wish to install the application. It is recommended to use the default destination folder specified on the screen. The default destination folder is created on the following path:

C:\Program Files\Cisco

If you wish to install the application to a different location, use the Browse button to select a different location. Click **Next** to proceed.

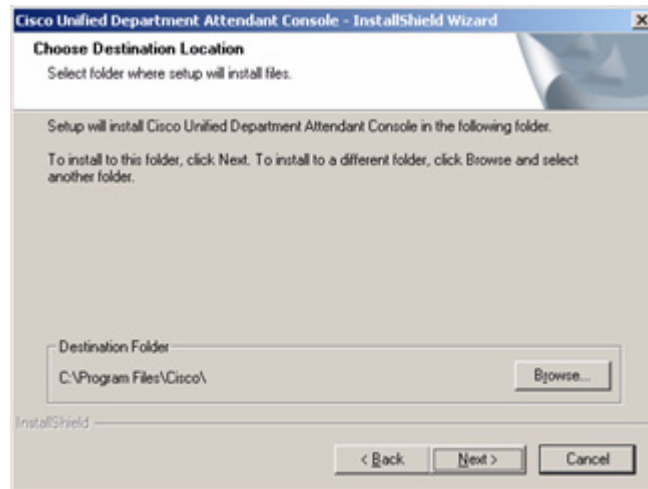
Figure 17: displays the screen used to select a location where the application must be installed



- In the next window, enter the *IP Address* of the machine running Cisco Unified Attendant Server. This is required in order to enable communication between Cisco Unified Attendant Console and Cisco Unified Attendant Server.


Note: If the IP address for Cisco Unified Attendant Server is entered incorrectly, Attendant Console will not be able to connect to the server and will therefore not function.

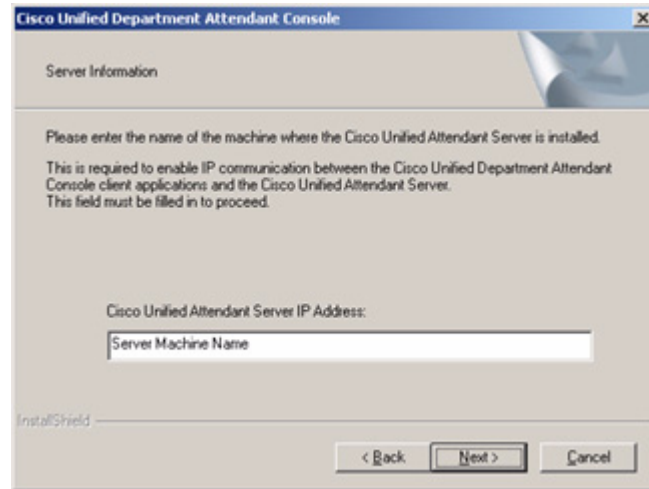Figure 18: displays the screen for Server Information




6. In the next window, you must select the language in which you want to install the application. Click **Next** to continue.

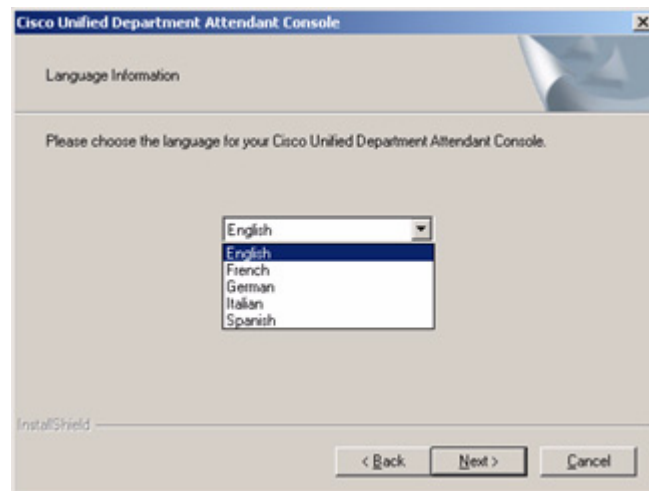Figure 19: displays the screen used to select the language for the application




7. In the next window, select the check box to add an icon for Cisco Unified Attendant Console on the desktop. Click **Next** to proceed.

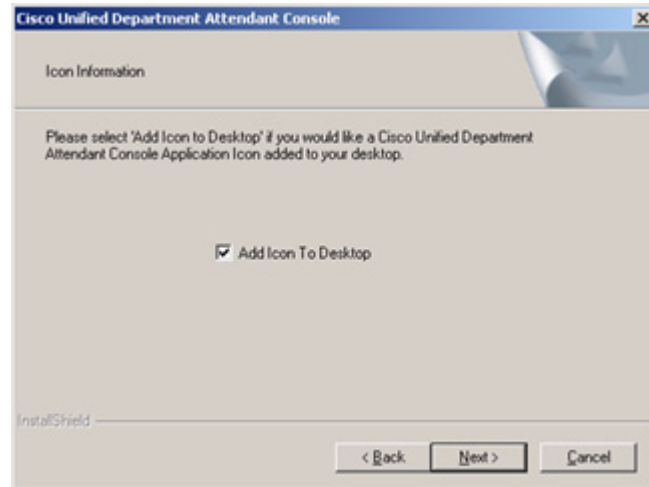Figure 20: displays the screen that asks to add an icon to desktop




8. In the next window, the installation wizard displays the summary of the information you have entered so far. You can review these settings on this screen and click **Back** if you wish to edit some information. If you are satisfied with the settings, click **Next** to allow the setup to start copying the files.

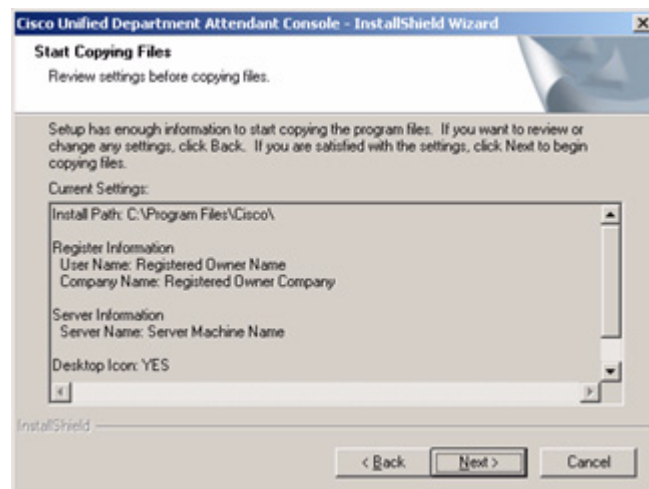Figure 21: displays the screen that shows the summary for the setup




9. In the next window, a progress bar is displayed that shows the status of the installation configurations and the files being copied. If you wish to exit the setup at this point, click **Cancel**.

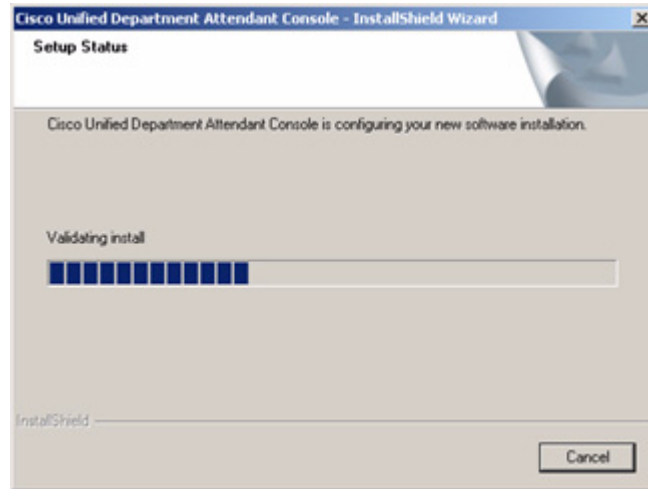
Figure 22: displays the progress bar for the software configuration



10. The final window displays the confirmation that Cisco Unified Attendant Console has been installed successfully. Click the **Finish** button.

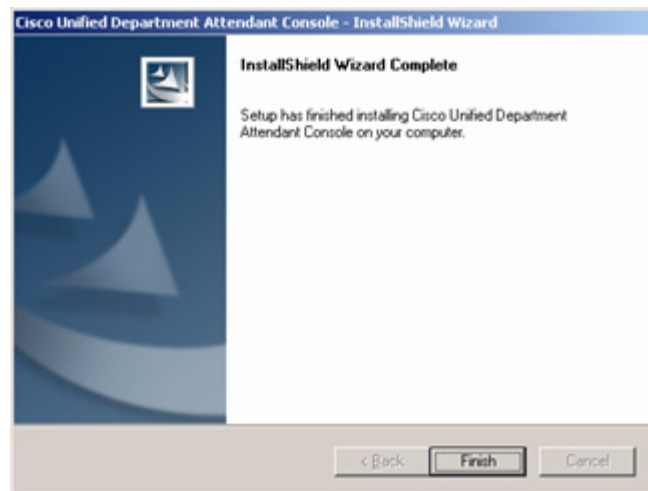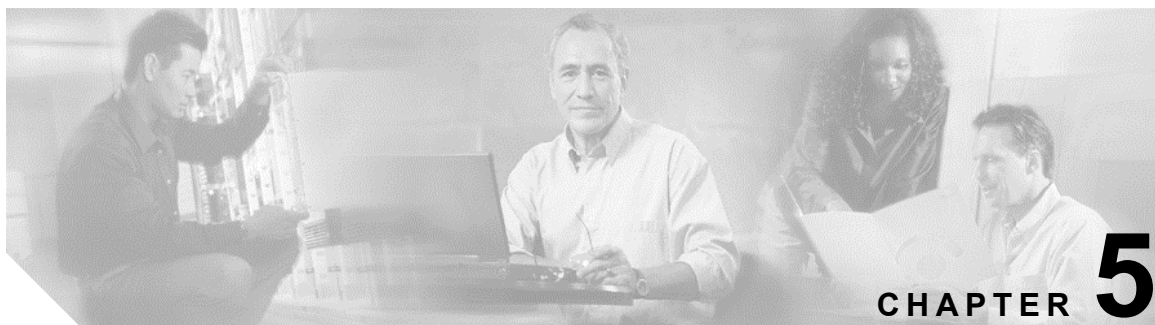Figure 23: displays the screen notifying that the installation is complete





Cisco Unified Attendant Admin

This section will guide you through configuration for Cisco Unified Attendant Console. Cisco Unified Attendant Admin allows you to create and manage the Attendant Console system.

System configuration provides the facility to manage synchronization of devices and queues with Cisco Unified Communications Manager. Cisco Unified Attendant Console and Cisco Unified Communications Manager communicate via AXL API, using SSL, to synchronize the system devices used for queuing, servicing and parking calls. These devices are created as CTI Port and CTI Route Point devices within the Cisco Unified Communications Manager database.


User configuration allows you to make configurations for the Cisco Unified Attendant Console. These settings are configured in order to make global configurations for internal/external calls access, Force Authorization and Client Matter Codes and Recall timers. These settings are made in order to manage the call flow.

In order to get started, an initial URL will be used to access Cisco Unified Attendant Admin web session. This URL will be in the following format:

`http://<ip address of Unified Attendant Server>/webadmin/login.aspx`

The URL, as provided by the network administrator will be entered in the address bar of the web browser, as shown in the following image:



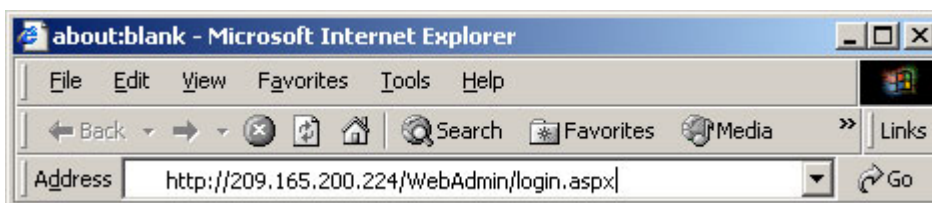






Figure 1: displays URL entered in the Internet Explorer address bar



You must login to Cisco Unified Attendant Admin in order to configure settings for Cisco Unified Attendant Console.

The following icons may be used while configuring the Cisco Unified Attendant Console,

Table 1: provides the description for the icons used in the user guide

Icon	Description
	Submit
	Reset Password
	Test Connection
	Repair Database
	Start Server
	Stop Server
	Information Icon: Used to view runtime information for a service.
	Refresh
	Synchronize with CUCM

Administrator Login

Cisco Unified Attendant Admin has an authentication mode for users. It is accessible only to the Administrator for making new configurations for Cisco Unified Attendant Console or updating them. Most of the settings configured using Cisco Unified Attendant Admin will be made in real-time, however, some changes may require Cisco Unified Attendant Server to be restarted. The default user name is **ADMIN** and the default password is **CISCO**.

To log on to Cisco Unified Attendant Admin,

1. Enter the URL specified by your network administrator to access Cisco Unified Attendant Admin.
2. The **Logon** page will open.
3. Enter *User name*.
4. Enter *Password*.
5. Click **Submit**.

Figure 2: displays the login page for the application

The following table gives a brief description for the fields mentioned in the form displayed above,

Table 2: provides the description for the fields of the login page

Field	Example	Description
User name	ADMIN	This field specifies the user name to log in with. The user name is ADMIN by default.
Password	*****	The number used by the operator to log in.

To set the password back to its default value, click **Reset**.

Home Page

Following a successful log in, you will be shown the home page that displays the main menus for configuring the application. The following areas can be accessed and configured,

Table 3: provides the details for different types of configurations available

Configuration Menu	Description
Engineering	This section provides connectivity and support management facilities.
System Configuration	This section provides the administrator with facilities to manage synchronization of devices and queues with Cisco Unified Communications Manager.
User Configuration	This section provides the administrator with facilities to manage Cisco Unified Attendant Console configuration.
Help	Provides help information and also includes a section for licensing the applications.

These configurations are explained in detail in the following sections.

Engineering

The Engineering section provides connectivity and support management facilities. It allows administrators to:

- Manage administrator access
- Manage the database environment
- Manage connections to the Cisco Unified Communications Manager
- Manage Cisco Unified Attendant services
- Manage LDAP Directory Connectivity
- Enable/disable logging


Administrator Management

This section allows you to change or reset the password used for logging into the application.

To change password,

1. Go to *Engineering > Administrator Management*.

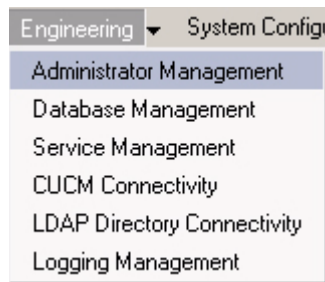Figure 3: displays the menu option for Administrator Management




2. Enter *Old Password*.
3. Enter *New Password*.
4. Re-enter new password in the *Confirm New Password* field.
5. Click  **Submit** to save changes.


Figure 4: displays the Administrator Management page

 A screenshot of the 'Administrator Management' page. At the top, there is a navigation bar with 'Engineering', 'System Configuration', 'User Configuration', and 'Help'. Below this is a header section titled 'Administrator Management' with a save icon. The main content area is titled 'General' and contains three password input fields: 'Old password:*' (with 6 asterisks), 'New password:*' (with 6 asterisks), and 'Confirm new password:*' (with 6 asterisks). At the bottom of the form are two buttons: 'Submit' and 'Reset Password'.

The following table gives a brief description for the fields mentioned in the form displayed above,

Table 4: provides the description for the fields mentioned on the Administrator Management page

Field	Example	Description
Old password	*****	The existing password for the ADMIN user name.
New Password	*****	The new password you wish to switch to.
Confirm new password	*****	The new password has to be re-entered in this field in order to confirm you did not mistype in the <i>New Password</i> field.

To set the password back to its default value, that is, **CISCO**, click  **Reset Password**.

Database Management


This web page allows configuration for database connectivity details. You can test and repair the databases as well.



Configuration and logging databases will be created at the time of installation. Only the connectivity details can be modified through this page.


To manage database,

1. Go to *Engineering > Database Management*.

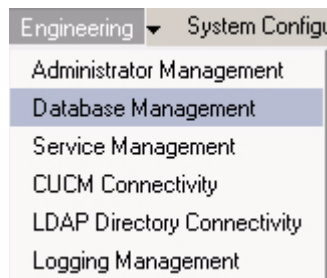Figure 5: displays the Database Management menu option




2. In the Server field, specify the name of the machine where the SQL Server is installed.
3. Check the *SQL authentication* checkbox in case *User name* and *Password* are required to access the database.
4. Enter *User Name*.
5. Enter *Password*.
6. To save changes, click  **Submit**. You will be prompted that Cisco Unified Attendant Server must be restarted for the changes to take affect. If you select the option, Cisco Unified Attendant Admin can restart server automatically.
7. To test the database, click  **Test Connection**.

8. To repair database, click  **Repair Database**. You will be prompted that Cisco Unified Attendant Server must be stopped before repairing the database. If you select the option, Cisco Unified Attendant Admin can stop the server and repair the database. The server service will need to be manually restarted.

The following image shows the configurations you can set using the above-mentioned procedure.

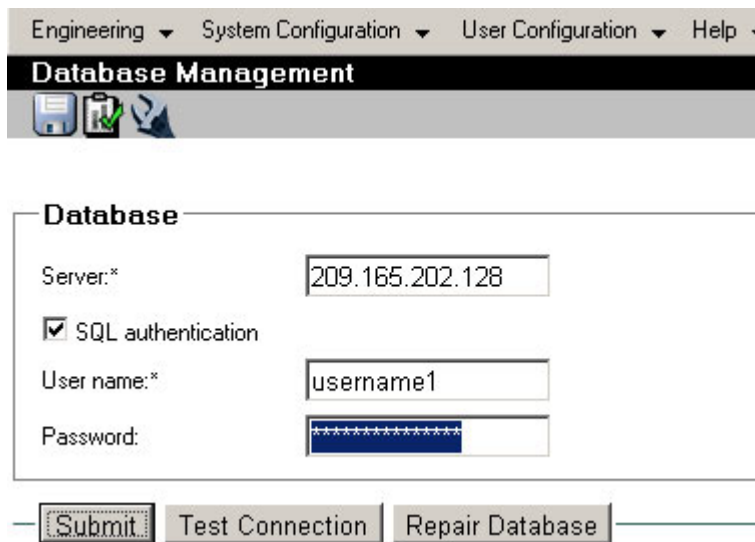Figure 6: displays the Database Management page



The following table gives a brief description for the fields mentioned in the form displayed above,

Table 5: provides description for the fields mentioned in the Database Management page

Field	Example	Description
Server	209.165.202.128	In this field you specify the IP Address of the machine where MS SQL Server 2005 is installed.
SQL Authentication	<input checked="" type="checkbox"/>	This checkbox must be selected if you require SQL Authentication to connect to the SQL Server.
User name	username1	You must enter the user name used to connect to SQL Server. If MS SQL Server was installed through <i>Cisco Unified Attendant Server Installation Wizard</i> , the user name would be sa .
Password	*****	You must enter the password used to connect to SQL Server. If MS SQL Server was installed through <i>Cisco Unified Attendant Server Installation Wizard</i> , the user name would be sa .

**Note**

Changes to the database configuration will require a stop and restart of Cisco Unified Attendant Server.





Service Management

The *Service Management* web page allows you to start or stop the following servers,

1. Cisco Unified Attendant Server
2. Cisco Unified Attendant LDAP Plug-in

The following controls are available,

Table 6: provides the description for server controls

Control	Icon	Description
Start Server		This button allows you to start the server.
Stop Server		This button allows you to stop the server.
Information		This button allows you to view runtime information for the service. The information is displayed in a separate pop-up window.
Refresh		The Refresh button and the icon shown on the left allow you to see the current status of the server.


CUCM Connectivity



CUCM Connectivity is essential to allow system devices to be configured automatically on the Cisco Unified Communications Manager. This section allows the connection details to be managed and tested, initially using the details entered during the installation process.

To manage connectivity details,

1. Go to *Engineering > CUCM Connectivity*.

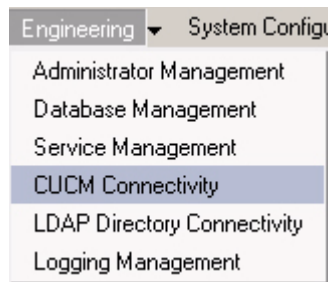Figure 7: displays the menu option for CUCM Connectivity



2. Enter *CUCM name*. This is the IP Address of the Cisco Unified Communications Manager Publisher.
3. Enter *CUCM Port* number. This should be left as 443 by default.
4. Enter *User name* and *Password* of the End User profile that is used to connect to Cisco Unified Communications Manager.
5. To save, click  **Submit**.
6. To test, click  **Test Connection**.

The following image shows the configurations you can set using the above-mentioned procedure.

Figure 8: displays the CUCM Connectivity page

Table 7: provides description for the fields on the CUCM Connectivity page

Field	Example	Description
CUCM name	209.165.201.0	In this field you specify the IP Address of the machine where CUCM is installed.
CUCM port	443	In this field you specify the CUCM port you wish to connect to. This is set to 443 by default.

Table 7: provides description for the fields on the CUCM Connectivity page

User name	username1	You must enter the end user id used to connect to CUCM. The end user is created through CUCM administration. This is has been explained in the appendices at the end of the guide.
Password	*****	You must enter the password used to connect to CUCM.

**Warning**

1. The Username and Password provided here are case-sensitive. Please make sure you enter the information in these fields in proper case.
2. The information provided in the Username and Password fields must not belong to an application user, for example CCMAAdministrator.

LDAP Directory Connectivity (for CUCM 4.3 only)

The *LDAP Directory Connectivity* allows you to specify the directory platform you wish to use for downloading contacts. The application supports the following directory platforms:

- iPlanet/Netscape directory
- Microsoft Active Directory
- DC Directory

The *LDAP Directory Connectivity* page is divided into the following sections:

- Connection
- Authentication
- Container

Figure 9: displays the LDAP Directory Connectivity page

LDAP Directory Connectivity

—LDAP Directory Connectivity—

Connection

Directory Platform: DC Directory

Host Name:* 192.168.1.55

Host Port:* 8404 (1-2147483647)

Protocol Version: Version 3.0

☐ Use SSL

Authentication

User Name:* cn=Directory Manager, o=cisco

Password:* *****

Container

Base DN:* ou=Users, o=cisco.com

Object Class:* InetOrgPerson

Submit Test Connection

The following table gives brief description for the fields you can configure:

Table 8: provides description of the fields displayed on LDAP Directory Connectivity page

Field	Example	Description
Connection: This section is used to select the Directory Platform to be used.		

Table 8: provides description of the fields displayed on LDAP Directory Connectivity page

Directory Platform	DC Directory	This list is used to choose the directory platform LDAP must connect to.
Host Name	192.168.1.55	This field is used to specify the Directory Host. Once the Directory platform is selected, the directory host is specified by default. However, you may edit the host if required.
Host Port	8404	This field is used to specify the Directory Port. Once the Directory platform is selected, the directory port is specified by default. However, you may edit the host if required.
Protocol Version	Version 3.0	This list is used to specify the Protocol Version. The latest protocol version is selected by default. However, you may select a different protocol version if required.s
Use SSL		This checkbox is used in order to specify whether you wish to use SSL for connectivity or not.

Authentication: This section is used to specify authentication information to access the selected directory.

User Name	cn=Directory Manager, o=cisco.com	This field is used to specify the user name to access the directory.
Password	*****	This field is used to enter the password for authentication.


Container: This section is used to specify the location of the data and the object type required for LDAP directory synchronization.

Base DN	ou=Users, o=cisco.com	In this field you must enter the Base Distinguished Name for the container that holds the desired records. This is so as the records that we want to retrieve are within a specific container that is on a particular domain.
Object Class	inetOrgPerson	In this field you must enter the type of record that you want to import from the LDAP Directory. Once the directory platform is selected, the object class is specified by default. However, you may edit the object class if required.

To manage LDAP directory connectivity,

1. Go to *Engineering > LDAP Directory Connectivity*.

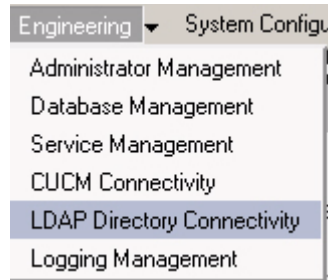Figure 10: displays the LDAP Directory Connectivity menu



2. Enter *Connection* details.
3. Enter *Authentication* details.
4. Enter *Container* details.
5. Click **Test Connection** to verify the information entered is accurate.
6. Click **Submit** to save.

The following protocol versions are recommended for the following Directory Platforms:

Table 9: displays the list of recommended protocol versions for each directory platform

Directory Platform	Protocol Version
DC Directory	Version 3.0
Microsoft Active Directory	Version 3.0
iPlanet/Netscape Directory	Version 2.0 or Version 3.0


Logging Management


The *Logging Management* page allows real-time logging to be enabled or disabled for Cisco Unified Attendant Server and Cisco Unified Attendant LDAP Plug-in.

To manage logging,

1. Go to *Engineering > Logging Management*.

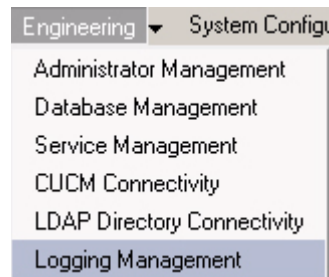Figure 11: displays the menu option for Logging Management



2. Enter Cisco Unified Attendant Server Logging Management details.
3. Enter Cisco Unified Attendant LDAP Plug-in Logging Management details.
4. Click  **Submit** to save changes.

The following image shows the configurations you can set using the above-mentioned procedure.

Figure 12: displays the Logging Management page

Logging Management

Cisco Unified Attendant Server

☐ Main process
 ☐ Router process
☐ CTI process
 ☐ Database process
☐ Communication process

Logging path & file name: C:\Program Files\Cisco\Attendant Server\Log\CD.TXT

Number of files: 200 (1-255)

Lines per file: 100000 (1-1000000)

Service logging path & file name: C:\Program Files\Cisco\Attendant Server\Log\CD1.TXT

Cisco Unified Attendant LDAP Plug-in

Logging level: Detailed (Default)

Logging path & file name: C:\Program Files\Cisco\Attendant LDAP Plug-in\Log\log.txt

Number of files: 11 (1-255)

Lines per file: 50000 (1-1000000)

Submit

The following table gives a brief description for the fields mentioned in the form displayed above,

Table 10: provides the description for the fields on the Logging Management page

Field	Example	Description
Logging Management		
Cisco Unified Attendant Server		
Main process		This checkbox is checked to log the main process.
CTI process		This checkbox is checked to log the CTI process.
Communication process		This checkbox is checked to log the communication process.
Router process		This checkbox is checked to log the router process.
Database process		This checkbox is checked to log the database process.

Table 10: provides the description for the fields on the Logging Management page

Logging path & file name	C:\Program Files\Cisco\Attendant LDAP Plug-in\Log\log.txt	In this field you specify the location where the log file must be saved. Include the name of the log file in the path so that the file is created by the name specified.
Number of files	200	In this field you specify the number of log files that can be created in the logging folder.
Lines per file	10000	In this field you specify the number of lines each log file can contain.
Service logging path & file name	C:\Program Files\Cisco\Attendant Server\Log\ICD1.TXT	In this field you specify the location and name for the file that stores the logs for the service.

Cisco Unified Attendant LDAP Plug-in

Logging path & file name	C:\Program Files\Cisco\Attendant Server\Log\ICD.TXT	In this field you specify the location where the log file must be saved. Include the name of the log file in the path so that the file is created by the name specified.
Number of files	200	In this field you specify the number of log files that can be created in the logging folder.
Lines per file	10000	In this field you specify the number of lines each log file can contain.

Cisco Unified Attendant Server Logging

Runtime logging for Cisco Unified Attendant Server maintains logs for each event that is fired by Cisco Unified Attendant Server. The logs can be maintained for the following areas,

1. Main Process
2. Router Process
3. CTI Process
4. Database Process
5. Communication Process

By default Main and Router processes will be activated at installation. You should only need to amend these settings if requested as part of a Support Case investigation.

To manage logging for Cisco Unified Attendant Server,

1. You must select the areas for which the log is to be maintained. In order to keep the log file up to a manageable size, it is recommended that you should keep only the required areas selected.
2. You must specify the *Logging path* and *file name* where the log must be created.
3. Specify the number of log files that must be created in the *Number of files* field.

4. Specify the number of lines each log file can contain in the *Lines per file* field.
5. Enter *Service logging path* and *file name* to maintain log of the services for Cisco Unified Attendant Server.

Cisco Unified Attendant LDAP Plug-in Logging

Cisco Unified Attendant Admin has the ability to keep records of all the events and processes through the process of logging. It is structured to enable and support you to check LDAP Plug-in's performance and activity, determine functionality loss and the configuration issues.

To manage logging for Cisco Unified Attendant LDAP Plug-in,

1. Select the *Logging Level* for LDAP Plug-in. Cisco Unified Attendant Admin provides the following options:
 - a. Detailed
 - b. Advanced
 - c. Minimum
 - d. Full
2. Specify the *Logging path* and *file name* where the log must be created.
3. Specify the number of log files that must be created in the *Number of files* field.
4. Specify the number of lines each log file can contain in the *Lines per file* field.

System Configuration



This section provides facilities to manage synchronization of devices and queues with Cisco Unified Communications Manager. The following configurations are available under this menu,

1. System Device Management
1. Attendant Console Device Management
2. CUCM Synchronization
3. Directory Filtering
4. Directory Synchronization

System Device Management

This web page allows device ranges to be configured and synchronized with Cisco Unified Communications Server.

To add devices,

1. Go to *Engineering > System Device Management*.
2. Select a *Template Device*. All device properties of the selected device will be mapped onto new devices being created.
3. Enter a device range for each of the following:
 - a. CT Gateway Devices
 - b. Service Devices
 - c. Park Devices
4. Click  **Submit** to save changes.
5. Clicking  **Synchronize with CUCM** will redirect to *Synchronizing with CUCM* page within Cisco Unified Attendant Admin application.

The following image shows the configurations you can set using the above-mentioned procedure.

Figure 13: displays the Device Management page

System Device Management

Template Device
Copy all device properties from this device:

CT Gateway Devices
From: (0-9)
To: (0-9)

Service Devices
From: (0-9)
To: (0-9)

Park Devices
From: (0-9)
To: (0-9)

The following table gives a brief description for the fields mentioned in the form displayed above,

Table 11: provides description for the fields on the System Device Management page

Field	Example	Description
Template Device		
Copy all device properties from this device		From this dropdown list you can select the device you want to copy the properties from, including Partition, Calling Search Space amongst others.
CT Gateway Devices		
From	6301	Specify the starting number for the range of devices to be configured.

Table 11: provides description for the fields on the System Device Management page

To	6302	Specify the last number in the range of devices to be configured.
Service Devices		
From	6401	Specify the starting number for the range of devices to be configured.
To	6402	Specify the last number in the range of devices to be configured.
Park Devices		
From	6501	Specify the starting number for the range of devices to be configured.
To	6502	Specify the last number in the range of devices to be configured.

Attendant Console Device Management

When operators log into Cisco Unified Attendant Console application, the Extension number that is entered during login is the Primary Number for a device. It is possible that the same extension number might be configured as a primary number for another device on a different partition. In order to differentiate between the two devices configured on the same extension number, the MAC address can be used to identify each device. A MAC address is a unique identifier for each physical device.

Using Attendant Console Device Management page, you can select a device to be associated to a particular directory number.

To select a device against a directory number,

1. Go to *System Configuration > Attendant Console Device Management*. A table will be displayed showing the Attendant Console Devices.

Figure 14: displays the Attendant Console Devices

Attendant Console Device Management				
Attendant Console Devices				
		Device DN	Name	MAC
<input type="checkbox"/>	Select	1000	SEP222334435435	SEP222334435435
<input type="checkbox"/>	Select	1001	Auto 1001	SEP000D290BE970
<input type="checkbox"/>	Select	1003	Auto 1003	SEP00044DE1336F
<div> <input type="button" value="Add New"/> <input type="button" value="Select All"/> <input type="button" value="Clear All"/> <input type="button" value="Delete Selected"/> </div>				

2. Click **Add New** to add a new device against a directory number.

Figure 15: displays the list of devices configured on the specified directory number

- Attendant Console Device Management

Device Information

Device DN: (*)#.0-9

Select device

	Line Number	Name	MAC
<input checked="" type="radio"/>	1	nad	SEP111111111111
<input type="radio"/>	2	nad	SEP333333333333
<input type="radio"/>	2	nad	SEP222222222222

- Submit

3. Enter the *Device DN*. A list of devices will be displayed in the **Select device** area.
4. Using the radio button, select the device that must be used to log into Cisco Unified Attendant Console application with the specified Device Directory Number.
5. Click **Submit**.

Please note that a new device can only be added if the chosen device is not in use at that time. Similarly a selected device cannot be deleted if the device is in use.

Synchronizing with CUCM

This web page is used to synchronize device configurations with Cisco Unified Communications Manager via AXL API. It will create the devices that have been configured if they don't already exist and assign them to the End User profile. The following devices will be displayed on this page,

1. Queue Locations
2. CT Gateway Devices
3. Service Devices
4. Park Devices

To synchronize the above-mentioned devices with Cisco Unified Communication Manager, click



Synchronize with CUCM. Cisco Unified Attendant Admin will automatically synchronize the devices with CUCM for you. You will not have to login to the CUCM administration.

Figure 16: displays the devices that will be synchronized with CUCM

Synchronize with CUCM

Queue Locations

Device DN	Device Type
6101	CTI Route Point

CT Gateway Devices

Device DN	Device Type
6201	CTI Port
6202	CTI Port
6203	CTI Port

Service Devices

Device DN	Device Type
6301	CTI Port
6302	CTI Port
6303	CTI Port

Park Devices

Device DN	Device Type
6401	CTI Port
6402	CTI Port
6403	CTI Port

Synchronize with CUCM

CUCM Sync Report

The following table gives a brief description for the fields mentioned in the form displayed above,

Table 12: provides description for the fields shown on the Synchronize with CUCM page

Field	Example	Description
Device DN	2000	This field specifies the directory number of each configured device.
Device Type	CTI Route Point	This field specifies the type of device.

Once the devices have been synchronized, you can click on **CUCM Sync Report** to view the status of synchronization. This will confirm that all devices have been created and assigned to the End User Profile. When you click on the button the following window appears,

Figure 17: displays the CUCM Sync Report generated after the CUCM synchronization

CUCM Sync Report

CUCM Sync Report

Sync Status

Status:CompletedStarted at:2007-04-12 16:08:52Ended at:2007-04-12 16:10:22

CUCM Connection Validation

User Name	Status	Error Code	Error Description
AXL	Completed		

Device Sync

Device DN	Device Type	Status	Error Code	Error Description
6101	Queue Location	Completed		
6201	CT Gateway Device	Completed		
6202	CT Gateway Device	Completed		
6203	CT Gateway Device	Completed		

The following table explains the fields shown in the image above,

Table 13: provides description for the fields mentioned on the CUCM Sync Report

Field	Example	Description
Sync Status		
Status	Completed	<p>This field specifies whether the synchronization was successful or not. The following statuses can be viewed,</p> <p>In Progress - This is displayed when the synchronization is taking place.</p> <p>Completed - This is displayed when synchronization is completed without any error.</p> <p>Error - This is displayed when synchronization process encounters an error.</p>
Started At	2007-04-12 16:08:52	This field specifies the date and time when CUCM synchronization started.

Table 13: provides description for the fields mentioned on the CUCM Sync Report

Ended At	2007-04-12 16:08:52	This field specifies the date and time when CUCM synchronization ended.
CUCM Connection Validation		
User Name	username1	This specifies the CUCM end user profile ID.
Status	Completed	This specifies whether the CUCM Connection established or not.
Error Code	9400	This field specifies the code of the error that has been encountered. The error codes have been explained in detail in the next table.
Error Description	HTTP/1.1 503 Service Unavailable	This field gives a brief description of the error that has been encountered.
Device Sync		
Device DN	6101	This field specifies the number of the device being synchronized.
Device Type	Queue Location	This field specifies the type of device being synchronized.
Status	Completed	This field specifies the status of the device synchronization.
Error Code	9550	This field specifies the error code in case an error encountered synchronizing a device.
Error Description	HTTP/1.1 403 Access to the requested resource has been denied	This field specifies the description of the error.

The table below gives a list of error codes and description that may be encountered during CUCM synchronization.

Table 14: provides error codes that may be displayed in the CUCM Sync Report

Error Code	Error Description
AXL Errors	
Less than 5000	These are errors that directly correspond to DBL Exception error codes.
5000	Unknown Error—An unknown error occurred while processing the request. This can be due to a problem on the server, but can also be caused by errors in the request.

Table 14: provides error codes that may be displayed in the CUCM Sync Report

5002	Unknown Request Error—This error occurs if the user agent submits a request that is unknown to the API.
5003	Invalid Value Exception—This error occurs if an invalid value is detected in the XML request.
5004	AXL Unavailable Exception—This error occurs if the AXL service is too busy to handle the request at that time. The request should be sent again at a later time.
5005	Unexpected Node Exception—This error occurs if the server encounters an unexpected element. For example, if the server expects the next node to be <i><name></i> , but encounters <i><protocol></i> , then this error is returned. These errors are always caused by malformed requests that do not adhere to the latest AXL Schema.
-239	Duplicate value in a UNIQUE INDEX column - This error occurs if the device being synchronized already exists in CUCM.
9000	Exception in AXL component - This error occurs if the device being synchronized already exists in CUCM.
9200	Device already created - This error occurs if the device being synchronized already exists in CUCM.
9300	Template device not found - This error occurs if the template device that you have selected to copy all device properties from does not exist.
9400	HTTP/1.1 503 Service Unavailable - This error is encountered when the CUCM limit for input through AXL exceeds.
9500	HTTP/1.1 401 Unauthorized - This error occurs due to problems in user authentication.
9550	HTTP/1.1 403 Access to the requested resource has been denied - This error occurs when access to a device is denied.
9600	CallManager OS not recognized - This error occurs when access to CUCM is denied.
9650	CallManager Version not detected - This error occurs when access to CUCM is denied.
9700	Socket error - This error occurs due to network problems.
9750	Connection refused - This error occurs due to network problems.
9755	Read Timeout - This error occurs due to network problems.
10000	Connection timeout - This error occurs due to network problems.

Table 14: provides error codes that may be displayed in the CUCM Sync Report

9900	An unknown error occurred - This is an unknown error.
------	---

Directory Filtering (for Cisco Unified Department Attendant Console only)

This section provides a list of teams and the departments they belong to. The Directory Filtering web page allows you to filter the teams in order to facilitate synchronization of contact details from Cisco Unified Attendant Console database with Cisco Unified Communications Manager via AXL API. You can select a team and view or edit the following information,

1. **Team:** This field displays the name of the team. This information cannot be changed.
2. **Department:** This field specifies the name of the department. You can update the department name through this page.
3. **Maximum Imported Records:** This field is used to specify the maximum number of contacts that can be imported for a particular team through LDAP.

Please note that this feature is only available for Cisco Unified Department Attendant Console.

1. Choose *System Configuration > Directory Filtering*.
2. In the *Team Filtering* section, select a team that you wish to modify.

Figure 18: displays a grid displaying the teams and their departments

Team Filtering		
	Team	Department
Select	Team 1	Department 1
Select	Team 2	Department 2

3. Edit the information for the selected team.

Figure 19: displays the information that can be edited

General	
Team:	<input type="text" value="Team 1"/>
Department:*	<input type="text" value="New Department"/>
Maximum Imported Records:*	<input type="text" value="150"/>


The department name that you enter in the *Department* field shown above, can be searched on exact match as well as pattern match basis. If you enter an exact name (for example, **New Department**) in the field, the contacts will be synchronized for the particular department name entered.

The pattern match is based on wildcard. The following symbols are used to support wildcard,

Table 15: provides the list of symbols that may be use for wildcard

Symbol	Description
?	Used to match any single character.
—	
*	Used to match zero or more characters.
%	

If you enter a pattern in the *Department* field (for example, ***Department?**), the contacts will be synchronized for all the departments that have names following the pattern entered in the field (in this case, **New Department1**, **Sales Department 3**).


4. Once you have configured directory synchronization, click  **Submit** would save the changes.

Directory Synchronization

The *Directory Synchronization* web page provides the ability to synchronize the contact details for the Cisco Unified Attendant Console database with Cisco Unified Communications Manager via AXL API. The page has been divided into following sections,


1. **Directory Import:** In order to enable directory import, you must check the *Enable contact synchronization* checkbox. *Auto Synchronization* and *Schedule Settings* fields will remain disabled if you do not select the *Enable contact synchronization* option.
2. **LDAP System Configuration:** This section allows you to *Enable External LDAP Integration*. This checkbox is checked when you wish to synchronize with CUCM using an external LDAP instead of CUCM's LDAP.
3. **Auto Synchronization:** You can set preferences for automatic synchronization. The following options are available to do so,
 - a. **On start-up:** If this checkbox is checked then the synchronization is started when Cisco Unified Attendant Server starts.
 - b. **On reconnect:** If this checkbox is selected then the synchronization will start when Cisco Unified Attendant Server reconnects with the LDAP plug-in following a loss of connection.
4. **Schedule Settings:** This section requires information on the scheduling of synchronization. You must enter the following information,
 - a. **Type:** This is an option list. The synchronization will take place on the basis of the type selected. It has the following options,
 - i. None
 - ii. Hourly
 - iii. Daily
 - iv. Weekly
 - v. Monthly
 - b. **Every [(Number)(Type)]:** The caption for this option changes with the selection of the *Type*. For example, Every 2 **Week(s)** or Every 1 **Day(s)**.
 - c. **Start date:** This field is used to specify a date to start the synchronization.
 - d. **Start time:** This field is used to specify the time to start the synchronization.

To configure directory synchronization for Cisco Unified Business Attendant Console,


1. Go to *System Configuration > Directory Synchronization*.
2. Enter specifications for the above-mentioned sections.
3. Once you have configured directory synchronization, click  **Submit** would save the changes.

The following image shows the configurations you can set using the above-mentioned procedure.

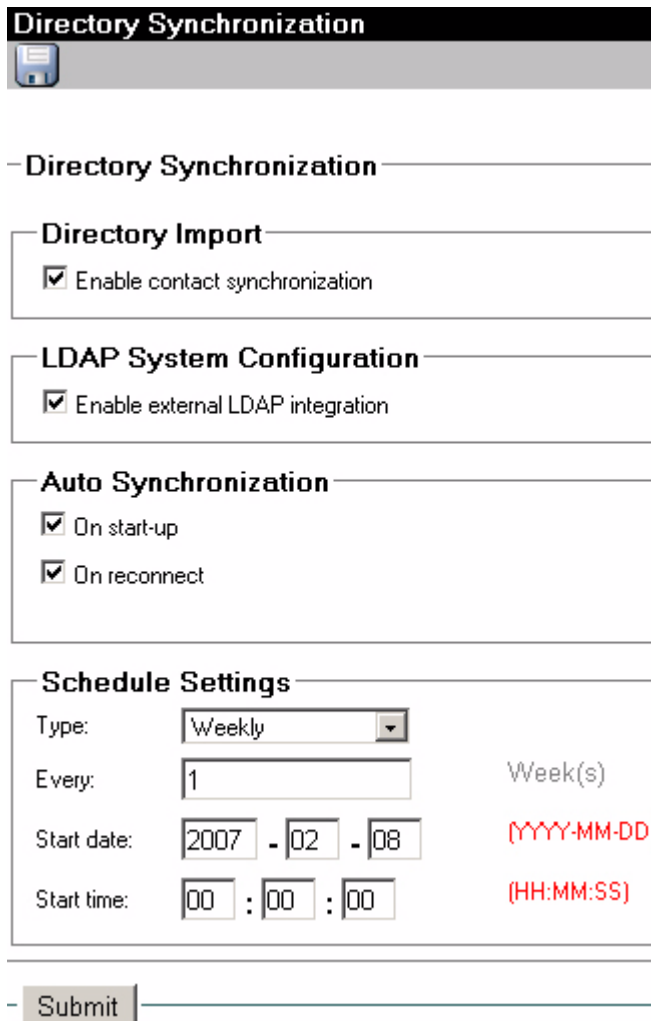Figure 20: displays the settings for Directory Synchronization



Directory Synchronization



Directory Synchronization

Directory Import

☒ Enable contact synchronization

LDAP System Configuration

☒ Enable external LDAP integration

Auto Synchronization

☒ On start-up

☒ On reconnect

Schedule Settings

Type:


Every: Week(s)

Start date: - - (YYYY-MM-DD)

Start time: : : (HH:MM:SS)

Submit

To configure directory synchronization for Cisco Unified Department Attendant Console,

1. Go to *System Configuration > Directory Synchronization*.
2. Enter specifications for the following,
 - a. Directory Import
 - b. LDAP System Configuration
 - c. Auto Synchronization
 - d. Schedule Settings
5. Once you have configured directory synchronization, click  **Submit** would save the changes.

The following image shows the configurations you can set using the above-mentioned procedure.

Figure 21: displays the Directory Synchronization page for Cisco Unified Department Attendant Console

Directory Synchronization

Directory Import

☒ Enable contact synchronization

Auto Synchronization

☒ On start-up

☐ On reconnect

Schedule Settings

Type: Weekly

Every: 1 Week(s)

Start date: 2007 - 02 - 08 (YYYY-MM-DD)

Start time: 00 : 00 : 00 (HH:MM:SS)

User Configuration

The *User Configuration* section provides administrators with facilities to manage Cisco Unified Attendant Console configuration. These include,

- General settings for Cisco Unified Attendant Console
- Queue Management
- Operator Management

General Properties

This web page manages the global configuration for Cisco Unified Attendant Console. It has been divided into four sections,

1. **Internal/External Access:** These settings allow Cisco Unified Attendant Console to distinguish between internal and external calls. They also ensure that the correct digit is used that allows you to access an external line. The fields required here are,
 - a. **Minimum internal device digit length:** This text box requires you to enter the minimum number of digits being used for an internal device.
 - b. **Maximum internal device digit length:** This text box requires you to enter the maximum number of digits being used for an internal device.


- c. **External access number:** This field specifies the access number when making a call to an external number.
 - d. **External international access number:** This is the number that is to be dialled when making a call to an international external number.
 - e. **External area code:** This field represents the Country Code for where the CUCM is located. When a call is dialled out by the system and the number string is determined to be in a standard international format i.e +44 (0) 208 8241000, the Area code set here will determine if the call is dialled as an international call or a domestic call. In this example an Area Code of 44 would result in a domestic call being dialled.
2. **Default FAC and CMC Settings:** If Forced Authorization (FAC) and/or Client Matter Codes (CMC) are configured in CUCM then these may be needed for any Attendant calls or transfers to be made. The codes entered here are generic and will be used in certain situations that require the system to place these calls or transfers. An example would be a blind transfer where the final outbound call is made from a Service Queue CTI port. If a call or transfer is made which results in the call being made from the operator's handset externally, then the operator will be presented with a CFAC or CMC dialog box, requiring them to manually enter the code from their application.
 3. **Recall Timers:** This area is used for setting the time duration for the recall activity of the calls. You can update three types of timers for the calls. These are as follows,
 - a. **Hold recall:** This is the maximum time limit a call can be put on hold by an operator.
 - b. **Transfer recall:** When an operator transfers a call, and if the call is not received within the time period specified in the *Transfer recall* field, it will come back to the same operator who had transferred the call.
 - c. **Park recall:** When an operator parks a call, and if the call is not received within the time period specified in the *Park recall* field, it will come back to the same operator who had parked the call.
 4. **Working Days (for Cisco Unified Business Attendant Console only):** This section allows you to set specific days and hours when the Attendant Console queues will be active. You must specify the following fields,
 - a. The checkboxes provided allow you to select the days the queues are active.
 - b. You must also enter the *Working hours from time* and *Working hours to time* in order to specify the time period that the queues will be active during these working days.

To configure General Properties,

1. Go to *User Configuration > General Properties*.

Figure 22: displays menu option for General Properties



2. Enter specifications for the above-mentioned sections.
3. Once you have configured the general properties, click  **Submit** to save the changes.

The following image shows the *General Properties* page for Cisco Unified Business Attendant Console. The *Working Days* section is available here. Users with the license for Cisco Unified Department Attendant Console will not be provided with the *Working Days* section.

Figure 23: displays the setting made on the General Properties page

General Properties

Internal\External Access

Minimum internal device digit length: 1

The value must be less then maximum internal device digit length

Maximum internal device digit length: 4

External access number: 077

External international access number: 044

External area code: 897

Default FAC and CMC Settings

Forced authorization code (FAC): 123

(*,#.0-9)

Client matter code (CMC): 234

(*,#.0-9)

Recall Timers

Hold recall (secs): 30

(0-255, 0 = Disabled)

Transfer recall (secs): 30

(0-255, 0 = Disabled)

Park recall (secs): 90

(0-255, 0 = Disabled)

Working Days

☒ Sunday
☒ Tuesday
☒ Thursday
☒ Saturday

☒ Monday
☒ Wednesday
☒ Friday

Working hours from time: 09 : 00 : 00

(HH:MM:SS) Working hours from time must be less than working hours to time

Working hours to time: 17 : 00 : 00

(HH:MM:SS)

Submit

Queue Management

The *Queue Management* web page allows you to manage the configuration for existing queues. The configuration is divided into four sections,


1. **General:** This section allows you to configure the general attributes of a queue. The following fields can be edited in this section,
 - a. **Name (for Cisco Unified Business Attendant Console):** This field specifies the name of the queue.
 - b. **Team (for Cisco Unified Department Attendant Console):** This field specifies the name of the team.
 - c. **DDI:** This is the number that is dialled internally to reach the respective queue session.
 - d. **Priority (for Cisco Unified Business Attendant Console):** You can assign a priority number to a queue that determines which queue must be given priority when calls are being routed.
2. **Emergency (for Cisco Unified Business Attendant Console):** The *Emergency number* field allows you to specify a number in case the calls need to be forwarded to another number in the event of sudden need.
3. **Overflow:** In case the number of calls waiting exceeds the number of calls that are allowed to wait in a queue, an overflow occurs. This section allows you to manage such overflow by configuring the following fields,



- a. **Overflow number:** In case of an overflow the exceeding number of calls will be transferred to the number specified in this field.
 - b. **Maximum calls:** This field allows you to set the total number of calls that can wait in a Queue at any given time.
 - c. **No operator overflow:** If there is no operator logged in to this selected queue, an incoming call will be immediately routed to the *Overflow number* if this checkbox is selected.
4. **Night Service (for Cisco Unified Business Attendant Console):** This section allows you to specify a *Night service number*. The calls made on the days and time specified for night service, are routed to this number.

To manage queues,

1. Go to *User Configuration > Queue Management*.

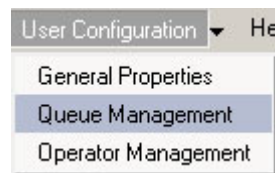Figure 24: displays the menu option for Queue Management





2. Select the queue profile that needs to be modified. Once the queue is selected, the form will be automatically loaded with the queue configuration.
3. Edit the specifications for the above-mentioned sections.
4. Once you have modified the configuration, click  **Submit** to save the changes.
5. Click  **Synchronize with CUCM** will redirect to *Synchronizing with CUCM* page.

The following image shows the *Queue Management* page used to configure Cisco Unified Business Attendant Console.

Figure 25: displays the *Queue Management* page for Cisco Unified Business Attendant Console

Engineering ▾ System Configuration ▾ User Configuration ▾ Help ▾

Queue Management

Queue Management

General

Name:*

DDI:* (*,#,0-9)

Priority:* (1-99)

Emergency

Emergency number: (*,#,0-9)

Overflow

Overflow number: (*,#,0-9)

Maximum calls: (0-255, 0 = Disabled)

☒ No operator overflow

Night Service

Night service number: (*,#,0-9)

If you have a license for Cisco Unified Department Attendant Console you will only be able to configure the fields shown in the following image,

Figure 26: displays the Queue Management page for Cisco Unified Department Attendant Console

Queue Management

Queue Management

General

Team:* Team 1

DDI:* 1205 (*.#,0-9)

Overflow

Overflow number: 123 (*.#,0-9)

Maximum calls: 11 (0-255, 0 = Disabled)

☒ No operator overflow

Submit Synchronize with CCM

Operator Management

Operator Management web page allows you to manage configuration for existing operators.

To manage operators,


1. Select *User Configuration > Operator Management*.

Figure 27: displays the menu option for Operator Management



2. Select the operator profile that needs to be modified. Once an operator profile is selected, the form will be automatically loaded with the operators profile information.
3. Edit *Login name*.
4. Edit *Team* name (for Cisco Unified Department Attendant Console only).
5. Change *Password*.
6. Re-enter password to confirm in the *Confirm password* field.

7. Click  **Submit** to save changes.

8. Click  **Reset password** to reset the user password to be the same as the operator's login name.

The following image shows the *Operator Management* page used to configure Cisco Unified Business Attendant Console.

Figure 28: displays *Operator Management* page for CUBAC

Operator Management

Operator Management

General

Login name:* OPERATOR1

Password: *****

Confirm password: *****

Submit Reset Password

If you have a license for Cisco Unified Department Attendant Console you will be able to configure the fields shown in the following image,

Figure 29: displays *Operator Management* page for CUDAC

Operator Management

Operator Management

General

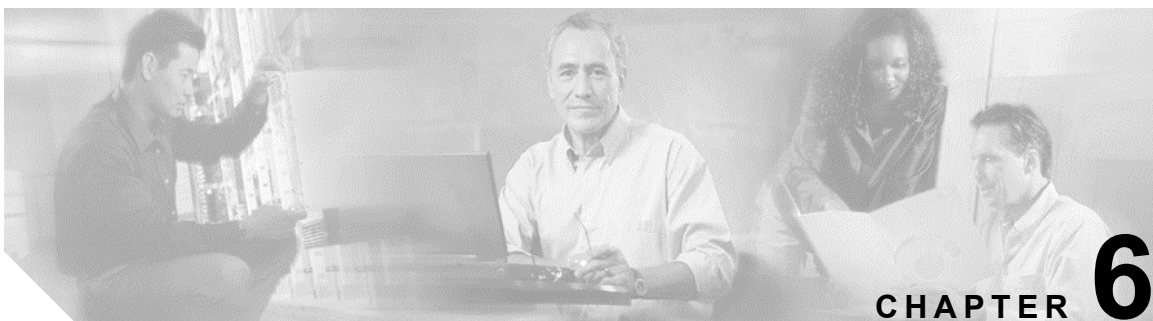
Login name:* OPERATOR1

Team: Team 1

Password: *****

Confirm password: *****

Submit Reset Password



Uninstalling the Application and its Components

This section describes in detail how to uninstall the following,


1. Cisco Unified Attendant Server
2. SQL Server 2005
3. BDE
4. .Net Framework

Uninstalling Cisco Unified Attendant Server

The following steps are followed in order to uninstall the application,


1. Go to *Start > Settings > Control Panel > Add/Remove Programs*.

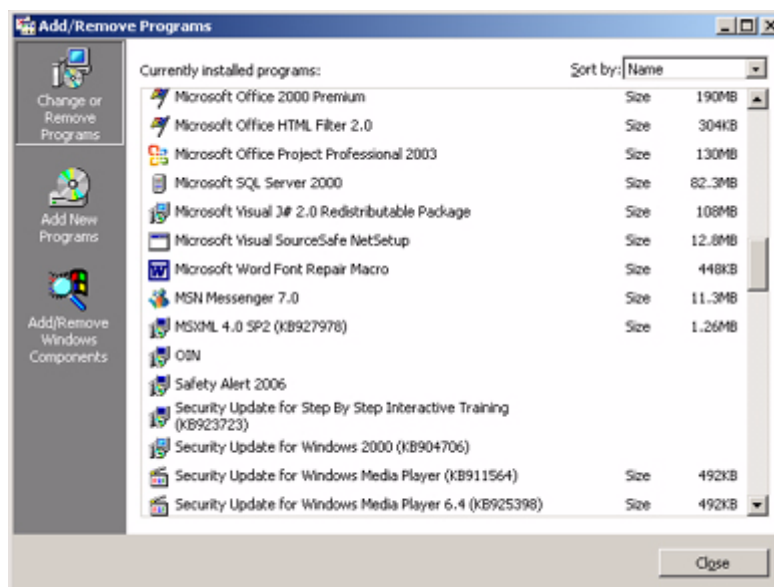Figure 1: displays the Add/Remove Programs window




2. Select Cisco Unified Attendant Server from the list of Programs. Click **Remove**.
3. The next window that is displayed will show the status of the wizard while the files are being prepared to uninstall the application.

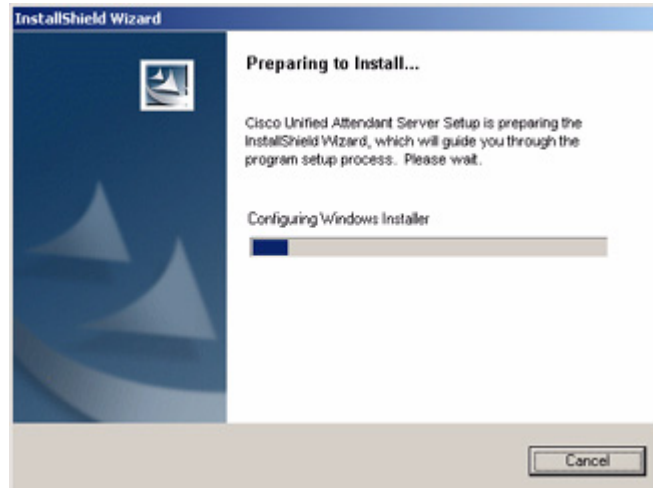Figure 2: displays the Preparing to Install screen




4. The following message box will appear confirming whether you want to remove Cisco Unified Attendant Server from your machine or not. Click **OK** to continue.

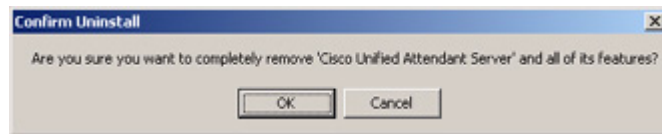Figure 3: displays the message box that asks you if you want to remove the application from the system




5. The next window displays the progress of the un-installation.

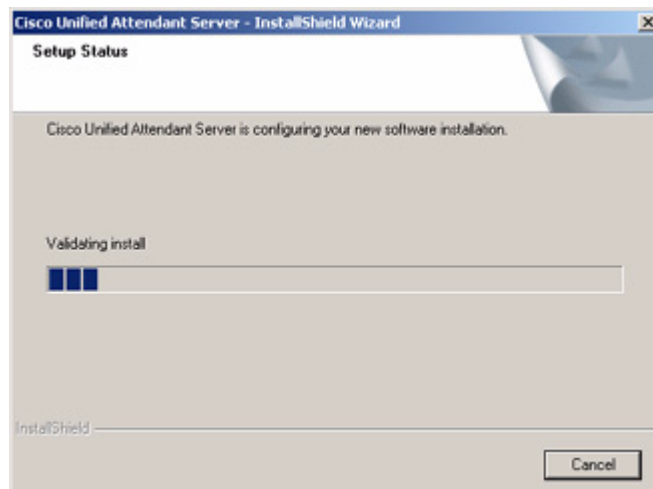Figure 4: displays the un-installation progress of the application



6. Once the files have been uninstalled successfully, the next window will ask whether you wish to restart the computer now or later. It is recommended that you restart the machine. Click **Finish**.

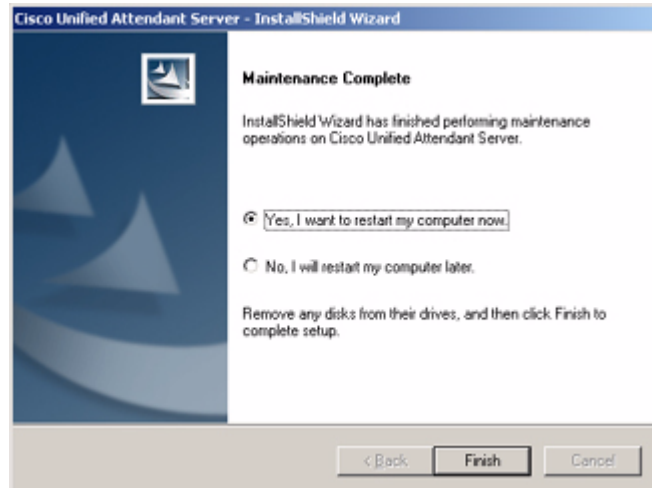Figure 5: displays the options for restarting the machine




Uninstalling MS SQL Server

Once you have uninstalled the application, you are required to remove all the third-party components installed with the application. Therefore we uninstall MS SQL Server as well.

To uninstall the SQL Server,


1. Go to *Start > Settings > Control Panel > Add/Remove Programs*.

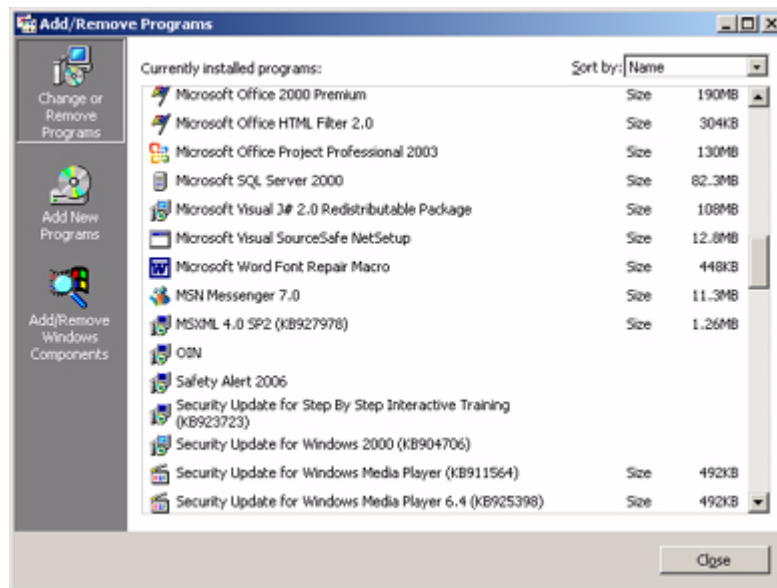Figure 6: displays the Add/Remove Programs window




2. Select Microsoft SQL Server from the list of Programs. Click **Remove**.
3. The next window will display the list of server instances. Select the instance that you wish to be removed.

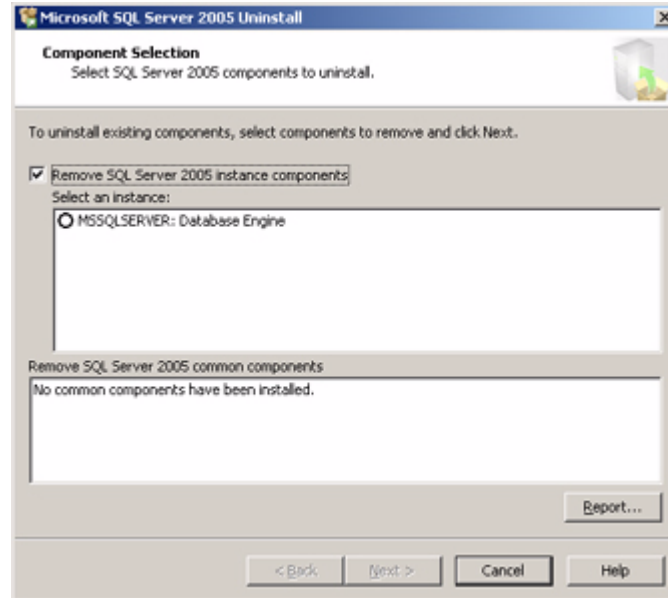Figure 7: displays the server instance to be removed




4. The next window will display a summary of the components that will be removed. Click the **Finish** button to proceed. Click **Back** in case you wish to change any of the information.

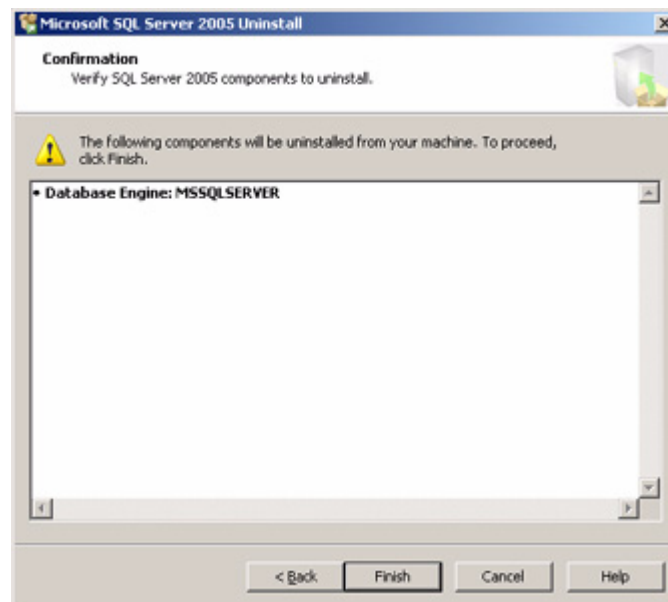Figure 8: displays the summary screen for the components that need to be uninstalled



5. In the next window, the status will be displayed for the components removal. Click **Finish** once all the components have been removed.

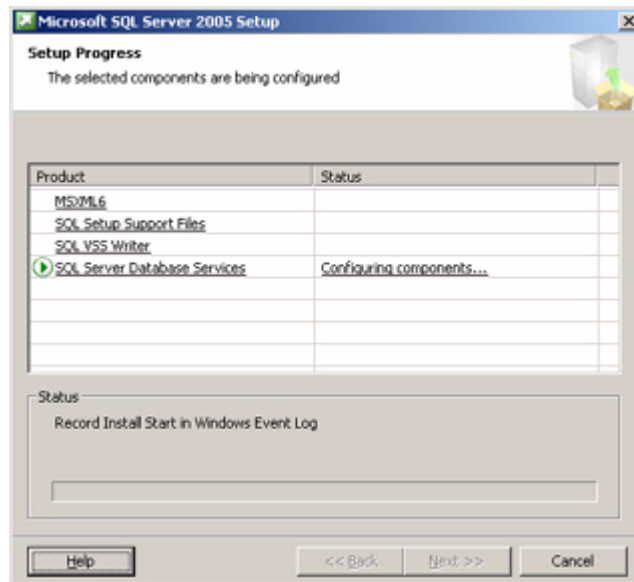Figure 9: displays the setup progress




6. Once you have uninstalled MS SQL Server, you must delete the databases on the following location,
C:\DBdata

Uninstalling BDE Utility

The following steps are followed in order to uninstall BDE Utility,


1. Go to *Start > Settings > Control Panel > Add/Remove Programs*.

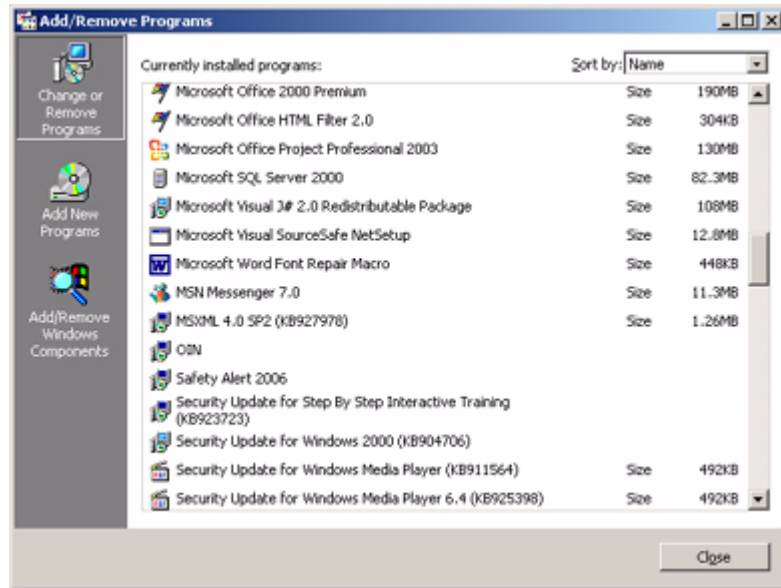Figure 10: displays the Add/Remove Programs window




2. Select BDE Utility from the list of Programs. Click **Remove**.
3. The next window that is displayed will show the status of the wizard while the files are being prepared to uninstall BDE.

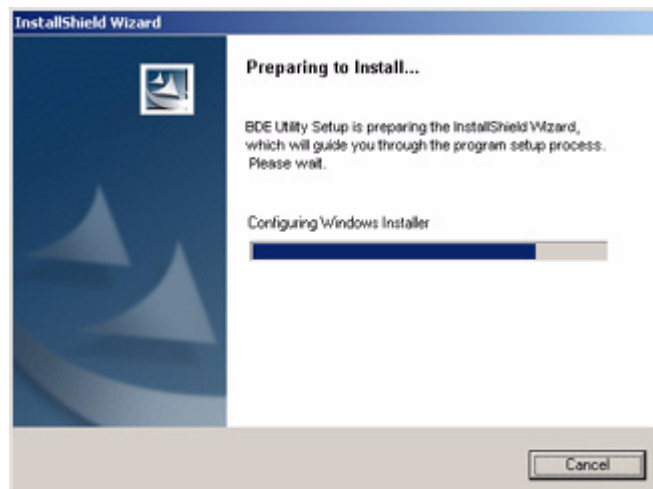Figure 11: displays the Preparing to Install screen




- The next message box will confirm whether you wish to remove BDE or not. Click **OK** to continue.

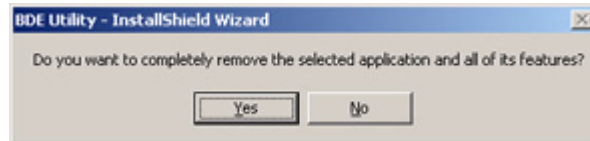Figure 12: displays the message box to confirm whether all features of the BDE Utility need to be removed or not




- The next window will display the setup status and the progress for the features removed.

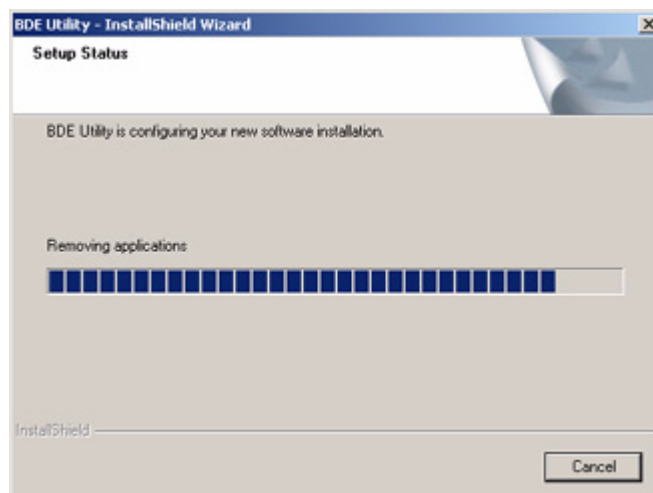Figure 13: displays the setup status for the uninstallation of the application



- Once the BDE Utility has been removed the following screen will appear.

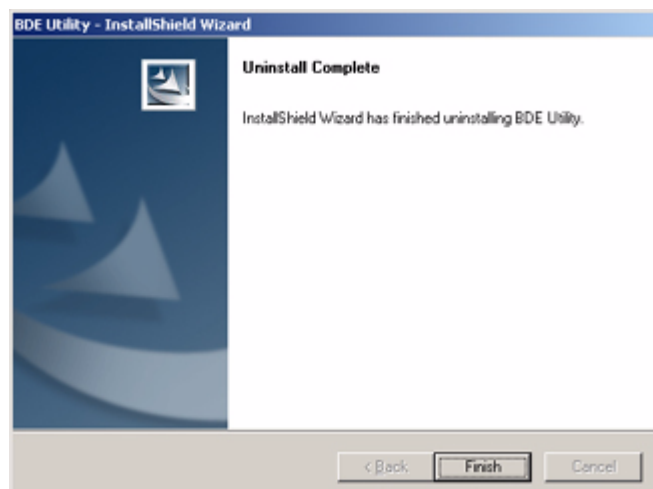Figure 14: displays the screen that shows that the removal of BDE Utility is complete




Uninstalling .NET Framework

The following steps are followed in order to uninstall .NET Framework,


1. Go to *Start > Settings > Control Panel > Add/Remove Programs*.

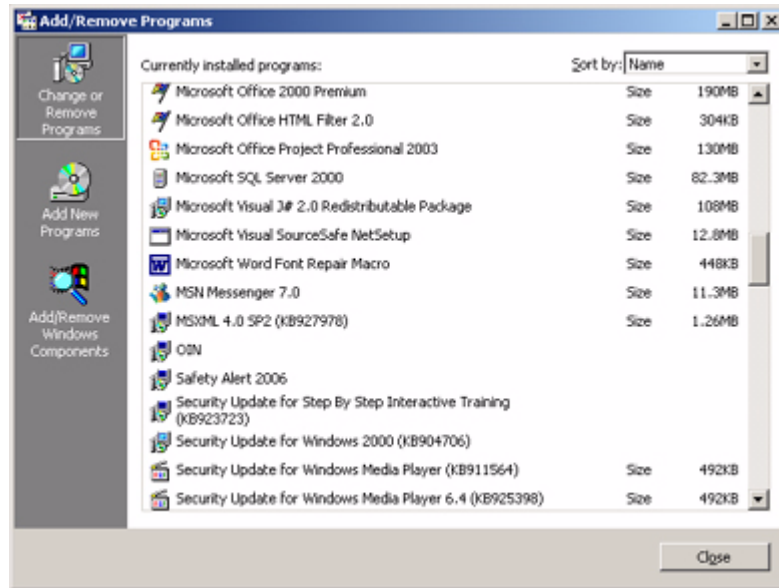Figure 15: displays the Add/Remove Programs window




2. Select Microsoft .NET Framework 2.0 from the list of Programs. Click **Remove**.
3. The next window provides you with the option to either repair the installed files or uninstall .NET Framework.

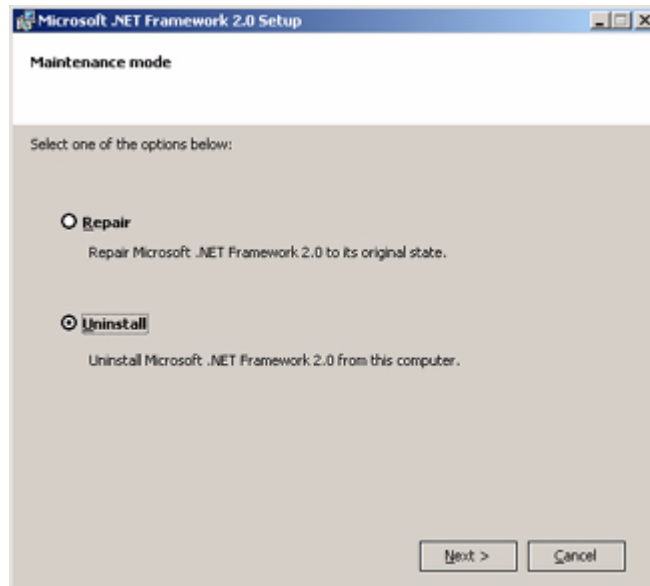Figure 16: displays the option to either repair or uninstall .NET Framework




- The next message box will appear confirming if you would like to remove .NET Framework. Click **OK**.

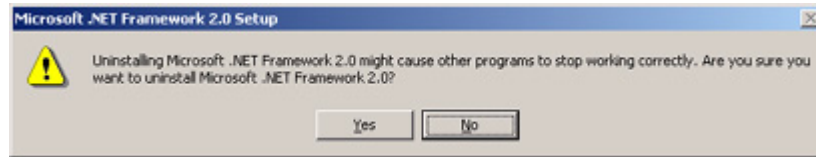Figure 17: displays the message box to confirm whether you wish to remove .NET Framework or not




- The next window will display the setup progress of the components being removed.

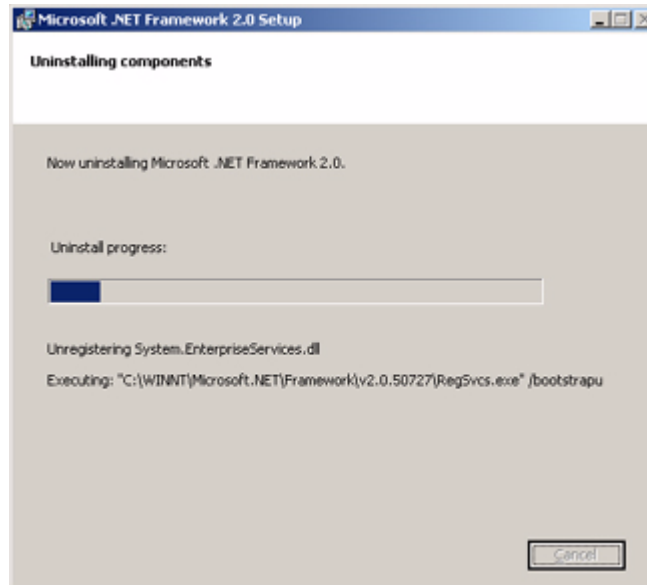
Figure 18: displays the setup progress for the uninstallation of .NET Framework



6. The next window will display that the components have been uninstalled successfully. Click **Finish**.

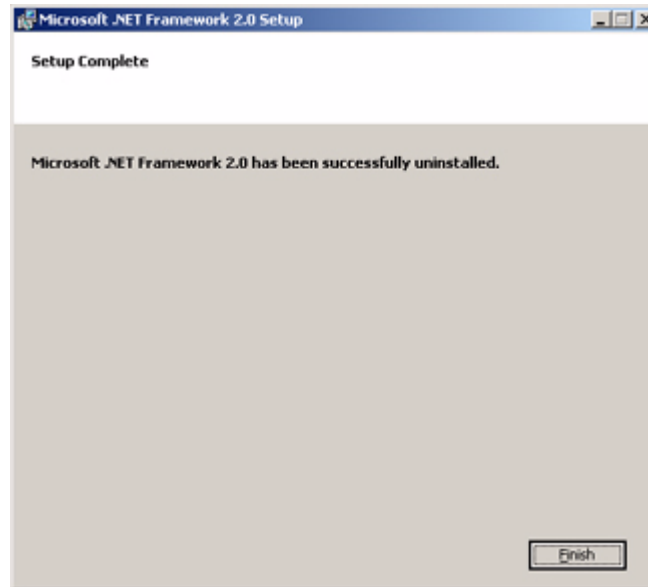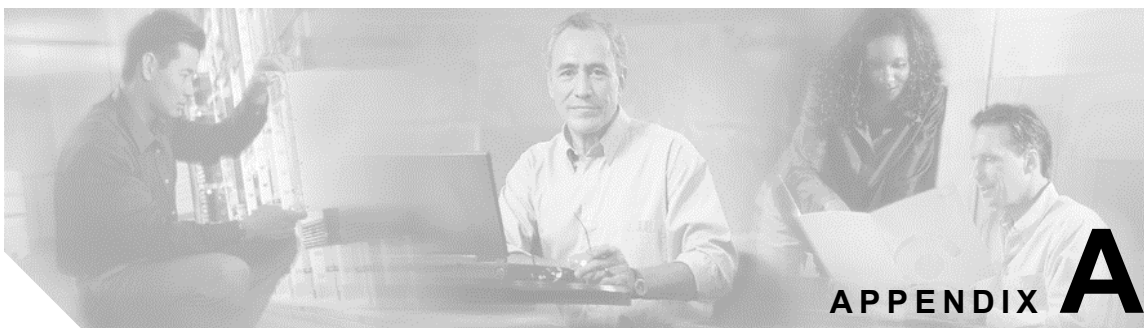Figure 19: displays the message that the .NET Framework components have been removed successfully





Configuring CallManager 4.3 for Cisco Unified Attendant Applications

An **End User** is required within CallManager to allow Cisco Unified Attendant applications to communicate with the CallManager via TSP. This user is created in order to,

- Access AXL API
- All CTI related functionalities

The end user profile that is created here is later used to connect to CCM through Cisco Unified Attendant Admin. This end user profile provides you enough roles and privileges to modify or synchronize information. These roles have been explained in the following sections.

Creation of a user involves the following steps,

1. Setting up an End User
2. Creating a User Group with the correct *roles* associated
3. Associating the user with the user group.


These steps have been explained in detail in the following sections.

Assigning Access Rights

In order to assign access rights required to create new End User, you must log into Cisco Unified CallManager 4.3. Enable MultiLevelAdmin as instructed below,

1. Go to *User > Access Rights > Configure MLA Parameters*.

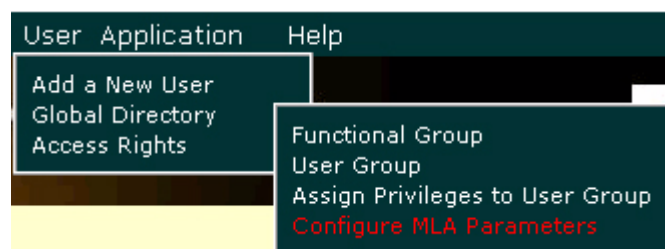Figure 1: displays the menu to configure Access Rights option



- From the *Enable MultiLevelAdmin* dropdown list, select *True*.

Figure 2: displays the configuration for MLA

MLA Enterprise Parameter Configuration

Status: Ready

Parameter Name	Parameter Value
User Group Base	ou=MultiLevelAdmin,ou=Admins,o=cisco.com
Administrative User Base	ou=Users,o=cisco.com
Debug Level	None
Effective Access Privileges For Overlapping User Groups	Maximum
Effective Access Privileges For Overlapping Functional Groups	Maximum
User Cache Flush Timeout (Minutes)	5
Enable MultiLevelAdmin	True

Two new fields, *New password for CCMAAdministrator* and *Confirm password for CCMAAdministrator*, will appear on the same page, as shown in the image below,

Figure 3: displays the new fields to set new CCM Administrator password

MLA Enterprise Parameter Configuration

Status: Ready

Parameter Name	Parameter Value
User Group Base	ou=MultiLevelAdmin,ou=Admins,o=cisco.com
Administrative User Base	ou=Users,o=cisco.com
Debug Level	None
Effective Access Privileges For Overlapping User Groups	Maximum
Effective Access Privileges For Overlapping Functional Groups	Maximum
User Cache Flush Timeout (Minutes)	5
Enable MultiLevelAdmin	True
New Password for CCMAAdministrator	*****
Confirm password for CCMAAdministrator	*****

- Enter password in *New password for CCMAAdministrator* field.
- Re-enter to confirm the password in *Confirm password for CCMAAdministrator* field.
- Click **Update**.

Once the password has been set, you must restart Cisco Unified CallManager and log in with CCMAAdministrator login using the new password set in the procedure mentioned above.

Setting Up an End User

Once you have logged in as CCMAAdministrator, you must follow these steps,

From CUCM Administration,

1. Choose *User > Add a New User*.

Figure 4: displays the menu used to create a new user



2. Enter information in the following fields. Please note that the fields mentioned below are mandatory.
 - a. Last Name
 - b. User ID
 - c. User Password
 - d. Confirm Password
 - e. PIN
 - f. Confirm PIN

Figure 5: displays the user configuration for End User

 A screenshot of the 'User Configuration' form in the CUCM Administration interface. The form is titled 'User Configuration' and shows 'User : New User'. On the left, there is a section for 'Application Profiles of' with a message: '<No Application Profiles> Application Profiles can be accessed after the new User is inserted in the directory.' On the right, there is an 'Insert' button and a 'Status: Ready' indicator. Below these are input fields for: 'First Name', 'Last Name*' (containing 'Smith'), 'User ID*' (containing 'S100'), 'User Password*', 'Confirm Password*', 'PIN *', and 'Confirm PIN *'.

3. Click **Insert**.

Assigning End User to SuperUserGroup

The SuperUserGroup represents a named user group that always has full access permission to all named roles. You cannot delete this user group. You can only make additions and deletions of users to this group.

After you have added the user to the newly created group, you must also add this user to the SuperUserGroup.

To add the user to SuperUserGroup,


1. Choose *User > Access Rights > User Group*.

Figure 6: displays the menu for User Group



2. On the *User Group Configuration* page, select **SuperUserGroup** from the User Groups list.

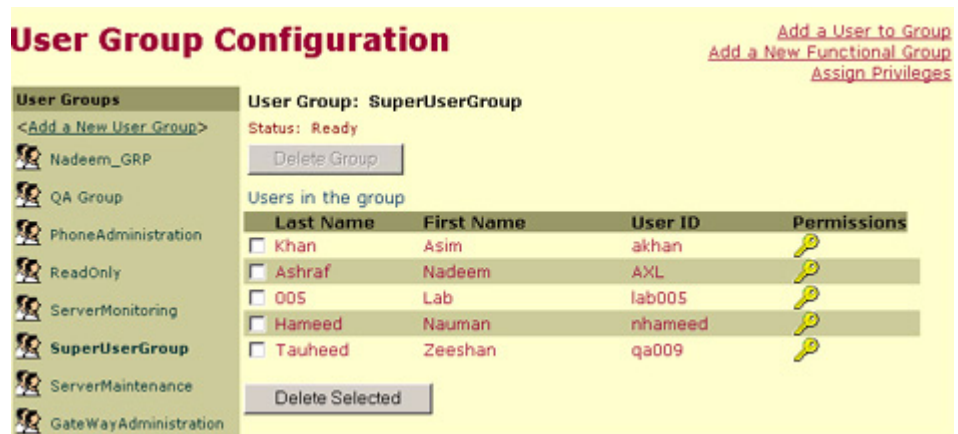Figure 7: displays the User Group Configuration page for SuperUserGroup




3. Click **Add a User to Group**.
4. On the next page search for the user you created in the previous section

Figure 8: displays the search option to find the newly created user



5. From the Search Result, select the user and click **Add Selected**.

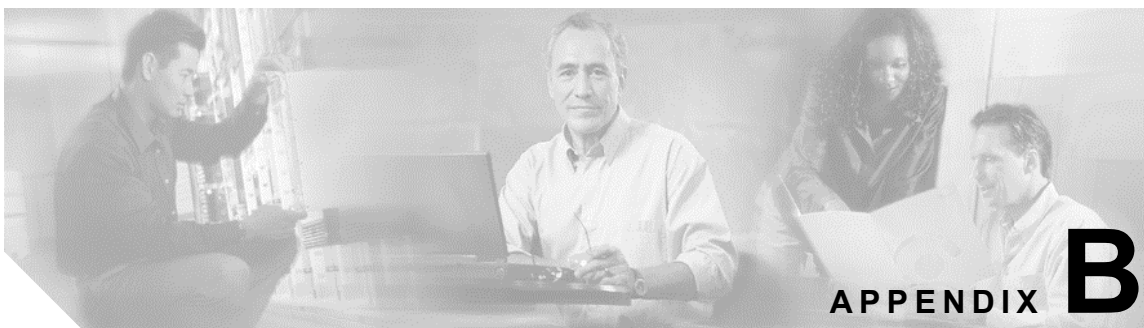The user will be added to the SuperUserGroup successfully.



Configuring CallManager 5.x/6.x for Cisco Unified Attendant Applications

An **End User** is required within CUCM to allow Cisco Unified Attendant applications to communicate with the CallManager via TSP. This user is created in order to,

- Access AXL API
- All CTI related functionalities

The end user profile that is created here is later used to connect to CCM through Cisco Unified Attendant Admin. This end user profile provides you enough roles and privileges to modify or synchronize information. These roles have been explained in the following sections.

Creation of a user involves the following steps,

1. Setting up an End User
2. Creating a User Group with the correct *roles* associated
3. Associating the user with the user group.

These steps have been explained in detail in the following sections.

Setting Up an End User

To set up a new End User, you must follow these steps,

From CUCM Administration,

1. Choose *User Management > End User*.

Figure 1: displays menu option for End User configuration





2. Click the  button to add a new user.
3. Enter information in the following fields. Please note that the fields mentioned below are mandatory.
 - a. User ID
 - b. Password
 - c. Confirm Password
 - d. PIN
 - e. Confirm PIN
 - f. Last Name

Figure 2: displays the End User Configuration page

 A screenshot of the 'End User Configuration' page. At the top is a black header with the text 'End User Configuration'. Below it is a grey bar with a save icon. The main content area has a 'Status' section with an information icon and the text 'Status: Ready'. Below this is a 'User Information' section with several input fields: 'User ID*' (containing 'UserID1'), 'Password*' (containing '*****'), 'Confirm Password*' (containing '*****'), 'PIN*' (containing '*****'), 'Confirm PIN*' (containing '*****'), and 'Last name*' (containing 'lastname1').

4. Click  Save to save the settings for newly created user.


Creating a User Group

Once the user is created, in order to associate it with a group, a new group must also be configured. The User Group will then have Roles assigned to it which govern what can be done using this profile.

To create a new user group,

1. Choose *User Management > User Groups*.

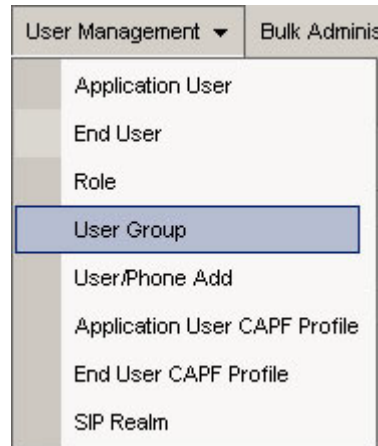Figure 3: displays the menu option for User Group





2. Click the  button to add a new user group.
3. Enter *Name* for the new user group.

Figure 4: displays the User Group Configuration page

A screenshot of the 'User Group Configuration' page. At the top is a black header with the title 'User Group Configuration' in white. Below the header is a light gray bar containing a floppy disk icon. The main content area has a 'Status' section with an information icon and the text 'Status: Ready'. Below that is the 'User Group Information' section, which contains a 'Name*' label and a text input field with the value 'UserGroupName1'. At the bottom of the form is a 'Save' button with a floppy disk icon.

4. Click  **Save** to save the settings for newly created user group.

Assigning Roles and User to the User Group

To assign roles to the newly created user group,

1. Choose *Back To Find/List > Go* or *User Management > User Groups*.
2. On *Find and List User Groups* page, search for the user group you created.

Figure 5: displays the field you may use to search a user group

Search Options

Find User Group where Name

(name begins with any)

3. In the *Search Results*, click on the *Roles* link for the user group.
4. Click **Assign Role to Group** to find and list roles for assignment.
5. Select the roles that need to be assigned to this group. The following checkboxes must be selected,
 - a. *Standard CTI Allow Car Park Monitoring*
 - b. *Standard CTI Allow Calling Number Modification*
 - c. *Standard CTI Allow Control of All Devices*
 - d. *Standard CTI Allow Reception of SRTP Key Material*
 - e. *Standard CTI Enabled*
6. Click **Add Selected** to assign roles.
7. Click **Save**.

To add the End User to the User Group,

1. Choose *User Management > User Groups*.
2. Click the newly created User Group.
3. Click **Add End Users to the Group** to find and list the users.

Figure 6: displays the User Group Configuration page

User Group Configuration

Status
 Status: Ready

User Group Information
 Name*

Users in Group

4. Select the newly created End user from the list and click **Add Selected** to successfully add the user to the group.

Figure 7: displays the search field you may use to search for a User ID

Search Options

Find user where

(userid begins with UserID1)

Search Results

	User ID	First Name	Last Name
<input checked="" type="checkbox"/>	UserID1		lastname1

Rows per Page

Adding End User to Standard CCM Super Users group

The standard CCM Super Users user group represents a named user group that always has full access permission to all named roles. You cannot delete this user group. You can only make additions and deletions of users to this group.

After you have added the user to the newly created group, you must also add this user to the Standard CCM Super User group.

To add the user to Standard Super CCM User,

1. Choose *User Management > User Groups*.
2. Find **Standard Super CCM User** using the search field.

Figure 8: displays the search option you may use to find and list user group

Find and List User Groups



Search Options

Find User Group where

3. In the Search Results, Click *Standard Super CCM Users*.

Figure 9: displays the search result for the user group

Search Results

Name
Standard CCM Super Users

Rows per Page

4. Click **Add End Users to the Group** to find and list the users.
5. Select the newly created End user from the list and click **Add Selected** to successfully add the user to this group.

Figure 10: displays the selected search result that is to be added to the user group

Search Options

Find user where

User ID

begins with

UserID1

Find

(userid begins with UserID1)

Search Results

	User ID	First Name	Last Name
<input checked="" type="checkbox"/>	UserID1		lastname1

Select All

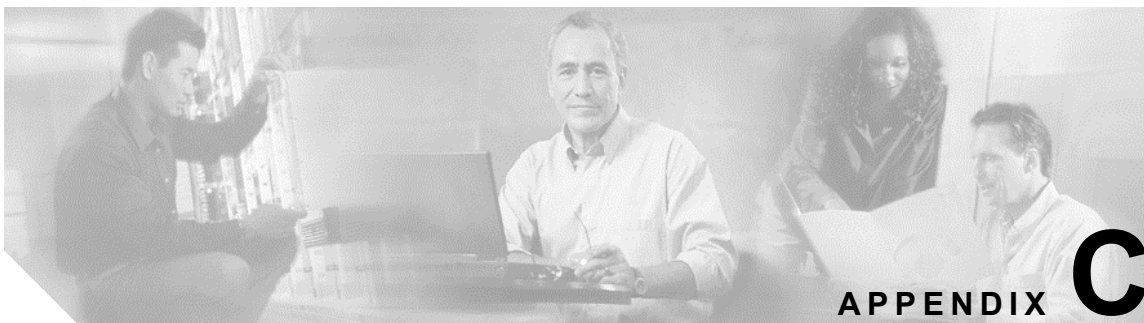
Clear All

Add Selected

Close

Rows per Page

250



TAPI Configuration

You must install Cisco Telephony Service Provider (TSP) on the machine that will run the Cisco Unified Attendant Server. This allows the Server to communicate with CUCM's CTI Manager service to allow call control on all devices associated to the End User profile created for the Server.


Installing the TAPI TSP

To install the Cisco TSP you must follow the steps mentioned below.

The installation of the Cisco Unified Attendant Console will download the TSP installation file to the Desktop of the server machine. To download manually follow the instructions 1-4 below. On the Server machine browse to CUCM Administration,

1. Select *Application > Plugins*.

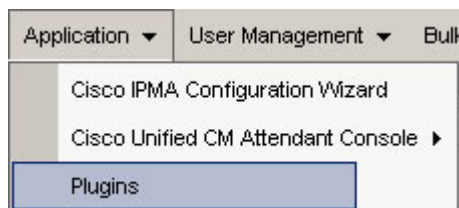Figure 1: displays the menu option for plugins



2. Find Cisco Telephony Service Provider using the search field.


Figure 2: displays the search option to find and list the required plugin

Find and List Plugins				
Search Options				
Find Plugin where Plugin	Name	begins with	Cisco Telephony Service F	Find
and Plugin Type equals	Installation			

3. In the Search Results, click Download on the Cisco Telephony Service Provider line.

4. Save **CiscoTSP.exe** on your desktop.
5. Double Click the **CiscoTSP.exe** icon on the desktop and follow the on screen instructions to complete the install.
6. During the installation, you will be asked if you want to install multiple instances of TSP. Click **No**.

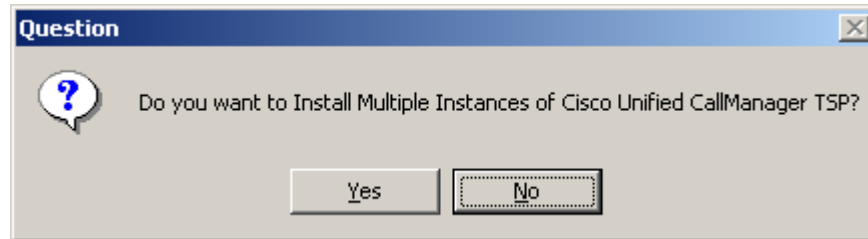Figure 3: displays the message box confirming whether multiple instances for TSP are to be installed or not




7. After a successful installation the setup will prompt you to restart the system. You must restart the machine for the changes to take effect.

Configuring the TAPI TSP

To configure TSP,

1. Go to *Start > Settings > Control Panel > Phone and Modem Options*.
2. Select *Advanced* tab.
3. Select CiscoTSP001.tsp.
4. Click **Configure**.
5. Enter the End User ID of the user that was created for the CallManager earlier in the *User Name* field.
6. Enter the password of the user in the *Password* field.

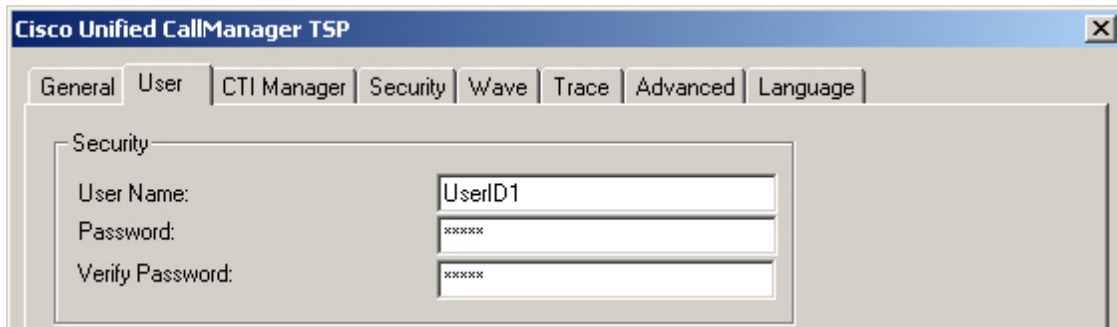Figure 4: displays the End User ID information to be entered in the fields



7. Select the *CTI Manager* tab,

Figure 5: displays the CTI Manager information to be entered for the TAPI configuration

The screenshot shows the 'Cisco Unified CallManager TSP' configuration window with the 'CTI Manager' tab selected. The window has several tabs: General, User, CTI Manager, Security, Wave, Trace, Advanced, and Language. The 'CTI Manager' tab contains two sections: 'Primary CTI Manager Location' and 'Backup CTI Manager Location'. Each section has four radio button options: 'None', 'Local Host', 'IP Address:', and 'Host Name:'. In both sections, the 'Host Name:' option is selected, and the text 'MachineName' is entered in the adjacent text field.


8. Enter the *Name* or *IP Address* of the Call Manager that you require to obtain your TAPI information from. A second Communications Manager can be used for resilience if required and available.
9. Select the *Wave* tab.
10. Enter the number of desired *Voice Lines*. You must enter a value that will allow all of your CTI Ports being monitored by this TSP in this field. You may want to add a higher figure at this point for future expansion of ports. After completing the TSP configuration you will need to install the *Cisco TAPI WAVE* driver. The instructions on how to do this are included on the Cisco TSP readme file. You will also need to uninstall and reinstall this driver every time you change the figure here.

Figure 6: displays the Wave configuration for TAPI

The screenshot shows the 'Cisco Unified CallManager TSP' configuration window with the 'Wave' tab selected. The window has the same tabs as Figure 5. The 'Wave' tab contains two sections: 'Automated Voice Calls' and 'Silence Detection'. In the 'Automated Voice Calls' section, the 'Desired number of possible Automated Voice lines:' is set to '200' (range 0-255). Below this, it says '(Current number of possible open Automated Voice lines is 5.)' and there is an unchecked checkbox for 'Enumerate only lines which support Automated Voice' with the note '(Currently enumerating all lines.)'. In the 'Silence Detection' section, the checkbox 'All phones and gateways perform silence suppression' is checked. Below this, the '16 bit linear PCM energy level:' is set to '200' (range 0 - 32767).

11. Click **OK**.
12. Select *Advanced* tab.
13. In the Provider Open Completed Timeout (secs) field enter 300.

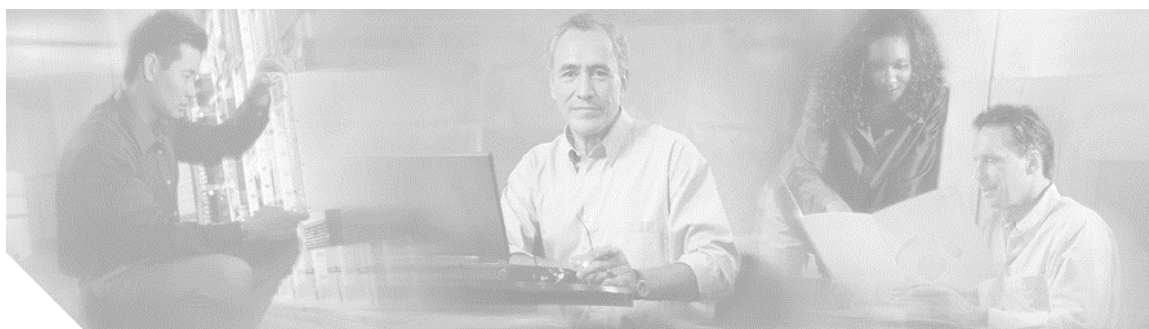
14. Click **OK**.
15. Reboot the machine.
16. Install the Cisco Tapi Wave driver, using instructions in the Cisco TSP readme file located in C:\Program Files\Cisco\ciscotsp.txt
17. Reboot the server.
TAPI has now been successfully installed.



Glossary

AXL API	The AVVID XML Layer (AXL) Application Programming Interface (API) provides a mechanism for inserting, retrieving, updating, and removing data from the database using an eXtensible Markup Language (XML) Simple Object Access Protocol (SOAP) interface. This allows a programmer to access Cisco Unified Communications Manager data using XML and receive the data in XML form, instead of using a binary library or DLL.
Call Parking Devices	Virtual devices where calls can be held temporarily and picked from any other call centre extension.
CMC	Client Matter Code (CMC) is used to provide extra call logging facilities within the Communications Manager. This is used to log calls from different destinations. The user has to enter their CMC Code before their external consult transfer can proceed. The call detail records are updated with the CMC code along with the call information. This can then be used later on to charge calls to different cost centres.
CTI Port	The Computer Telephony Integration (CTI) port is actually a virtual device that allows you to create a virtual line. A CTI port must be added for each active voice line intended to be used on a Cisco IP SoftPhone.
CTI Route Point	A computer telephony integration (CTI) route point designates a virtual device that can receive multiple, simultaneous calls for application-controlled redirection.

FAC	Forced Authorization Code (FAC) is used to provide security in the Communications Manager for dialling "Route Patterns". Traditionally, this is used to block calls to external numbers. For example, often in call centres, only some callers are allowed to make external consult transfers to certain numbers. In order to enforce security, these callers are provided with a Forced Authorization Code. The concept of FAC is that if the user makes such an external call transfer that is protected by a FAC, the user must enter the FAC before the call can continue. If an incorrect FAC is entered, or if no FAC is entered, the call fails.
Night Service	This facility allows you to take the queue out of operation at certain times of the day. During this time, calls are routed to some other destination. For example, if you close down the 'Accounts service' queue every day at 7pm, beyond that time calls can be routed to a destination - device or another queue.
SSL	Short for Secure Sockets Layer, a protocol used for transmitting private data through the Internet.

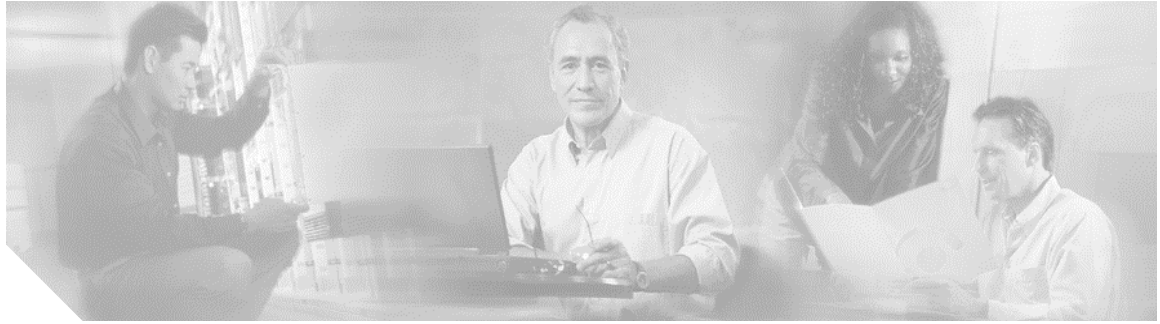

Index

A

Access Numbers 30
Accessibility for Users with Disabilities 18
Administrator 27, 44, 46
Administrator Management 46
Assigning Access Rights 85
Auto Answer 20
Auto Synchronization 66
AXL API 60, 66, 85, 89, 99

B

between 19
Busy Lamp Field 20

C

Call Manager Connectivity 49
Call Park 20
Checklist 29
Cisco Accessibility Program 18
Cisco CallManager 45
Cisco Unified Attendant Admin 17, 19, 21, 27, 30, 43, 44, 47, 48, 57
Cisco Unified Attendant Console 19, 20, 21, 25, 26, 29, 30, 31, 43, 44, 45, 66, 68
Cisco Unified Attendant LDAP Plug-in 49
Cisco Unified Attendant Server 18, 21, 44, 49
Cisco Unified CallManager 17, 20, 49, 50, 57, 60, 87, 89
Cisco Unified Communication Manager 17, 21

connectivity 47
CT Gateway Devices 21, 57, 60
CTI Manager 19, 96, 97

D

Database Management 47
Device Management 57
Directory Filtering 65
Directory Import 66
Directory Synchronisation 30
Directory Synchronization 57, 66, 67

E

Emergency 30, 70
End User 30
Engineering 45, 46

F

FAC and CMC Settings 30, 69

G

General Properties 68, 69

H

Hardware / Software Requirements 25
Home Page 45

I

Important Information 19
Installation of Cisco Unified Attendant Applications 29
Internal/External Access 68

Introduction 17

L

LDAP 49, 54, 57

LDAP Directory Connectivity 52

Logging Management 54

Logging path 56, 57

Login 44

Logon 44

M

Music on Hold 19

N

Night Service 30

O

On reconnect 66

On start-up 66

Overflow 30, 70, 71

P

Park Devices 22, 57, 60

Q

Queue Management 70

R

Recall Timers 30, 69

Refresh 49

Repair 48

Roles 91

roles 30

S

Schedule Settings 66

Service Devices 57, 60

Service Management 49

Service Queues 21

SQL Server 17, 25, 47

Standard Super CCM User 87, 93

Start Server 49

Stop Server 49

Synchronizing with CCM 60

System Configuration 45, 57, 67

T

TAPI 17, 19, 31, 95, 96, 97, 98

TAPI Configuration 95

Template Device 57

Test 31, 47, 50

TSP 17

U

Uninstalling the Application and its
Components 75

URL 43

User Configuration 45, 68

User Group 30, 85, 89, 91, 92

W

web session 43