

Audit Log User Guide

Hitachi Virtual Storage Platform G200, G400, G600, G800
Hitachi Virtual Storage Platform F400, F600, F800

FASTFIND LINKS

Product Version

Getting Help

Contents

© 2015 Hitachi, Ltd. All rights reserved.

No part of this publication may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, or stored in a database or retrieval system for any purpose without the express written permission of Hitachi, Ltd.

Hitachi, Ltd., reserves the right to make changes to this document at any time without notice and assumes no responsibility for its use. This document contains the most current information available at the time of publication. When new or revised information becomes available, this entire document will be updated and distributed to all registered users.

Some of the features described in this document might not be currently available. Refer to the most recent product announcement for information about feature and product availability, or contact Hitachi Data Systems Corporation at <https://support.hds.com/en-us/contact-us.html>.

Notice: Hitachi, Ltd., products and services can be ordered only under the terms and conditions of the applicable Hitachi Data Systems Corporation agreements. The use of Hitachi, Ltd., products is governed by the terms of your agreements with Hitachi Data Systems Corporation.

Hitachi is a registered trademark of Hitachi, Ltd., in the United States and other countries. Hitachi Data Systems is a registered trademark and service mark of Hitachi, Ltd., in the United States and other countries.

Archivas, Essential NAS Platform, HiCommand, Hi-Track, ShadowImage, Tagmaserve, Tagmasoft, Tagmasolve, Tagmastore, TrueCopy, Universal Star Network, and Universal Storage Platform are registered trademarks of Hitachi Data Systems Corporation.

AIX, AS/400, DB2, Domino, DS6000, DS8000, Enterprise Storage Server, ESCON, FICON, FlashCopy, IBM, Lotus, MVS, RS/6000, S/390, System z9, System z10, Tivoli, VM/ESA, z/OS, z9, z10, zSeries, z/VM, and z/VSE are registered trademarks or trademarks of International Business Machines Corporation.

All other trademarks, service marks, and company names in this document or website are properties of their respective owners.

Microsoft product screen shots are reprinted with permission from Microsoft Corporation.

Notice on Export Controls. The technical data and technology inherent in this Document may be subject to U.S. export control laws, including the U.S. Export Administration Act and its associated regulations, and may be subject to export or import regulations in other countries. Reader agrees to comply strictly with all such regulations and acknowledges that Reader has the responsibility to obtain licenses to export, re-export, or import the Document and any Compliant Products.



Contents

Preface.....	xv
Intended audience.....	xvi
Product version.....	xvi
Release notes.....	xvi
Changes in this revision.....	xvi
Referenced documents.....	xvii
Document conventions.....	xvii
Convention for storage capacity values.....	xviii
Accessing product documentation.....	xix
Getting help.....	xix
Comments.....	xix
1 VSP Gx00 models, VSP Fx00 models audit logs.....	1-1
Outline.....	1-2
Acquisition/reference of audit logs.....	1-2
2 VSP Gx00 models, VSP Fx00 models audit log file format.....	2-1
Audit log header format (RFC3164-compliant).....	2-2
Audit log header format (RFC5424-compliant).....	2-6
Audit log information format (Basic information).....	2-9
Audit log information format (Detailed information).....	2-11
Description of log examples in this manual.....	2-13
3 VSP Gx00 models, VSP Fx00 models audit logs quick reference.....	3-1
Audit Log Functions.....	3-2
Device Manager - Storage Navigator and Maintenance PC operation.....	3-2
Encryption Key operations.....	3-13
Command received from hosts.....	3-14
PIN Deletion Tool operation.....	3-15
Reproducing/losing Audit log.....	3-15
4 VSP Gx00 models, VSP Fx00 models audit log examples.....	4-1
Audit Log Descriptions.....	4-3
[AuditLog] Create File.....	4-3

[AuditLog] DKCAuditLog was lost.....	4-3
[AuditLog] Send Test Message.....	4-3
[AuditLog] Set Up Syslog Serv.....	4-3
ACM Descriptions.....	4-5
[ACM] AddUsersToUserGroup.....	4-5
[ACM] CreateUser.....	4-5
[ACM] CreateUserGroup.....	4-6
[ACM] DeleteUsers.....	4-6
[ACM] DeleteUserGroups.....	4-7
[ACM] DisableUsers.....	4-7
[ACM] EnableUsers.....	4-7
[ACM] RemoveUsersFromUserGroup.....	4-8
[ACM] Set Login Message.....	4-8
[ACM] UpdatePassword.....	4-9
[ACM] UpdateUserAuthentication.....	4-9
[ACM] UpdateUserGroupAllResourceGrp.....	4-9
[ACM] UpdateUserGroupName.....	4-10
[ACM] UpdateUserGroupResourceGrpBmp.....	4-10
[ACM] UpdateUserGroupRole.....	4-10
BASE Descriptions.....	4-11
[BASE] Advanced Settings.....	4-11
[BASE] Create Conf Report.....	4-11
[BASE] Delete CVAE Info.....	4-12
[BASE] Delete Reports.....	4-12
[BASE] Delete Tasks.....	4-13
[BASE] Disable Auto Delete.....	4-13
[BASE] Edit Storage System.....	4-14
[BASE] Enable Auto Delete.....	4-14
[BASE] Entry Tasks.....	4-15
[BASE] HCSSO Authentication.....	4-15
[BASE] HCSSO SetOneTimeKey.....	4-15
[BASE] Login.....	4-16
[BASE] Logout.....	4-16
[BASE] Resume Tasks.....	4-16
[BASE] Set CVAE Info.....	4-16
[BASE] Start Maintenance.....	4-17
[BASE] Suspend Tasks.....	4-17
[BASE] Unlock Forcibly.....	4-18
Information Descriptions.....	4-18
[Information] Delete Log.....	4-18
[Information] ORM Value.....	4-18
[Information] Threshold Value.....	4-20
Install Descriptions.....	4-22
[Install] All Config.....	4-22
[Install] Backup Config.....	4-22
[Install] FlashDrive ORM Value.....	4-22
[Install] Initialize ORM Value.....	4-23
[Install] Machine Install Date.....	4-23
[Install] NEW Installation.....	4-23
[Install] Remove.....	4-24
[Install] System Option.....	4-25
[Install] System Tuning.....	4-26

Local Replication Descriptions.....	4-26
[Local Replication] Assign S-VOLs.....	4-26
[Local Replication] Create Pairs.....	4-27
[Local Replication] Delete Pairs.....	4-28
[Local Replication] Edit Options.....	4-29
[Local Replication] Initialize.....	4-30
[Local Replication] Remove S-VOLs.....	4-30
[Local Replication] Resync Pairs.....	4-31
[Local Replication] Split Pairs.....	4-32
[Local Replication] Suspend Pairs.....	4-33
Maintenance Descriptions.....	4-34
[Maintenance] Block.....	4-34
[Maintenance] Block(Type Change).....	4-36
[Maintenance] Blockade.....	4-37
[Maintenance] Boot System SafeMode.....	4-37
[Maintenance] Change SFP Type.....	4-37
[Maintenance] Check Remove.....	4-37
[Maintenance] Correction Copy.....	4-38
[Maintenance] Create User.....	4-38
[Maintenance] Delete Users.....	4-38
[Maintenance] Disable Licenses.....	4-39
[Maintenance] Edit Login Message.....	4-39
[Maintenance] Edit ReplacingNotice.....	4-39
[Maintenance] Edit System Param.....	4-40
[Maintenance] Edit UPS Mode.....	4-40
[Maintenance] Edit User.....	4-41
[Maintenance] Enable Licenses.....	4-41
[Maintenance] Export Audit Logs.....	4-42
[Maintenance] Force Rls SysLock.....	4-42
[Maintenance] Install.....	4-42
[Maintenance] License Key Install.....	4-44
[Maintenance] License Key Remove.....	4-44
[Maintenance] MP Restore.....	4-45
[Maintenance] Power Off Storage.....	4-45
[Maintenance] Power On Storage.....	4-45
[Maintenance] Reboot GUM.....	4-45
[Maintenance] Remove.....	4-46
[Maintenance] Reset DurationOfUse.....	4-48
[Maintenance] Reset HUB.....	4-48
[Maintenance] Restore.....	4-48
[Maintenance] Restore(Type Change).....	4-49
[Maintenance] Restore Data.....	4-50
[Maintenance] Select Cipher Suite.....	4-50
[Maintenance] Set Up Alert.....	4-50
[Maintenance] Set Up Date & Time.....	4-59
[Maintenance] Set Up Network Perm.....	4-59
[Maintenance] Set Up Network Set.....	4-60
[Maintenance] Set Up System Info.....	4-61
[Maintenance] Stop Copy.....	4-61
[Maintenance] Turn Off Locate LEDs.....	4-62
[Maintenance] Turn On Locate LEDs.....	4-62
[Maintenance] Update Cert Files.....	4-62

[Maintenance] Update Firmware.....	4-63
[Maintenance] UserAccount Backup.....	4-63
[Maintenance] UserAccount Restore.....	4-63
Monitor Descriptions.....	4-64
[Monitor] Monitoring Switch.....	4-64
Performance Monitor Descriptions.....	4-64
[PFM] Delete Unused WWNs.....	4-64
[PFM] Edit CU Monitor Mode.....	4-64
[PFM] Edit Monitoring SW.....	4-65
[PFM] Edit WWN.....	4-65
[PFM] Edit WWN MonitorMode.....	4-65
Provisioning Descriptions.....	4-66
[PROV] Add Hosts.....	4-66
[PROV] Add LUN Paths.....	4-66
[PROV] Assign MP Unit.....	4-67
[PROV] Block LDEVs.....	4-67
[PROV] CalculateTieringMonitorData.....	4-68
[PROV] Create Host Groups.....	4-68
[PROV] Create LDEVs.....	4-69
[PROV] Create Resource Grps.....	4-70
[PROV] Create VDKC-Box.....	4-71
[PROV] Create/Expand Pools.....	4-72
[PROV] CreateAlus.....	4-74
[PROV] CreateiScsiName.....	4-75
[PROV] CreateiScsiPath.....	4-75
[PROV] CreateiScsiTarget.....	4-77
[PROV] CreateLdev.....	4-77
[PROV] CreateParityGroups.....	4-78
[PROV] CreateRemoteChapUser.....	4-80
[PROV] CreateSlus.....	4-80
[PROV] CreateTiPairsWithSlu.....	4-81
[PROV] CreateTiVolumes.....	4-82
[PROV] Delete Host Groups.....	4-83
[PROV] Delete LDEVs.....	4-83
[PROV] Delete Login WWNs.....	4-84
[PROV] Delete LUN Paths.....	4-84
[PROV] Delete Resource Grps.....	4-85
[PROV] Delete VDKC-Box.....	4-85
[PROV] DeleteAlus.....	4-86
[PROV] DeleteiScsiInitiatorUser.....	4-86
[PROV] DeleteiScsiName.....	4-87
[PROV] DeleteiScsiPath.....	4-87
[PROV] DeleteiScsiTarget.....	4-88
[PROV] DeleteLdev.....	4-89
[PROV] DeleteLoginiScsiName.....	4-89
[PROV] DeleteParityGroups.....	4-90
[PROV] DeleteRemoteChapUser.....	4-90
[PROV] DeleteSlus.....	4-91
[PROV] DeleteTargetChapUser.....	4-91
[PROV] DeleteTiVolumes.....	4-92
[PROV] DRU Expiration Lock.....	4-92
[PROV] Edit Cmd Dev(Auth).....	4-92

[PROV]	Edit Cmd Dev(DevGrp).....	4-93
[PROV]	Edit Cmd Dev(Sec).....	4-93
[PROV]	Edit Command Devices.....	4-94
[PROV]	Edit DRU Attribute.....	4-94
[PROV]	Edit Full Allocation.....	4-95
[PROV]	Edit Host.....	4-96
[PROV]	Edit Host Grps(Mode).....	4-96
	Host mode option and output contents of Option.....	4-97
[PROV]	Edit Host Grps(Name).....	4-99
[PROV]	Edit LDEVs(tier).....	4-100
[PROV]	Edit LDEV Tier Rank.....	4-100
[PROV]	Edit MP Units.....	4-101
[PROV]	Edit Ports(Address).....	4-102
[PROV]	Edit Ports(Security).....	4-103
[PROV]	Edit Ports(Speed).....	4-103
[PROV]	Edit Ports(Topology).....	4-104
[PROV]	Edit Resource Grp.....	4-104
[PROV]	Edit Tiering Policy.....	4-105
[PROV]	Edit V-VOL Option.....	4-106
[PROV]	Edit/Delete Pools.....	4-107
[PROV]	Edit/Delete UUIDs.....	4-109
[PROV]	EditScsiInitiatorUser.....	4-109
[PROV]	EditScsiName.....	4-110
[PROV]	EditScsiNickName.....	4-111
[PROV]	EditScsiTarget.....	4-111
[PROV]	EditSNS.....	4-112
[PROV]	EditPortInfo.....	4-113
[PROV]	EditRemoteChapUser.....	4-114
[PROV]	EditRemoteTargetUser.....	4-115
[PROV]	EditT10piMode.....	4-116
[PROV]	EditTargetChapUser.....	4-117
[PROV]	ExecBindingOperation.....	4-117
[PROV]	Expand V-VOLs.....	4-118
[PROV]	ExpandSlu.....	4-119
[PROV]	Format LDEVs.....	4-119
[PROV]	Format LDEVs(Q).....	4-120
[PROV]	Initialize Pools.....	4-120
[PROV]	LDEV Name.....	4-120
[PROV]	LdevForceRestore.....	4-121
[PROV]	MapSecondaryVolumeWithSlu.....	4-121
[PROV]	Monitor Pools.....	4-122
[PROV]	Move Resources.....	4-122
[PROV]	OperateSiPairsWithSlu.....	4-124
[PROV]	OperateTiPairsWithSlu.....	4-125
[PROV]	Pool Name.....	4-125
[PROV]	Reclaim Zero Pages.....	4-126
[PROV]	Release HostReserved.....	4-126
[PROV]	Relocate Pool.....	4-126
[PROV]	Remove Hosts.....	4-127
[PROV]	Restore LDEVs.....	4-127
[PROV]	Restore Pools.....	4-128
[PROV]	RevertTiPairsWithSlu.....	4-128

[PROV]	Set FCSP Host.....	4-129
[PROV]	Set FCSP Port Info.....	4-129
[PROV]	Set FCSP Port Switch.....	4-130
[PROV]	Set FCSP Target.....	4-130
[PROV]	Set PageTieringLevel.....	4-131
[PROV]	Set Virtual LDEV.....	4-132
[PROV]	Shrink Pool.....	4-133
[PROV]	StartParityGroupsFormat.....	4-133
[PROV]	StartVerify.....	4-134
[PROV]	Stop Monitoring.....	4-134
[PROV]	Stop Reclm ZeroPages.....	4-135
[PROV]	Stop Relocating.....	4-135
[PROV]	Stop Shrinking Pool.....	4-136
[PROV]	StopFormat.....	4-136
[PROV]	StopVerify.....	4-136
[PROV]	UnmapSecondaryVolumeWithSlu.....	4-136
[PROV]	UpdateCopybackMode.....	4-137
[PROV]	UpdateSpareDrives.....	4-137
	Remote Maintenance Descriptions.....	4-138
[Remote Maintenance]	PS Control.....	4-138
[Remote Maintenance]	Reboot MP.....	4-138
[Remote Maintenance]	Reboot Port.....	4-139
	Remote Replication Descriptions.....	4-139
[Remote Replication]	Add Path.....	4-139
[Remote Replication]	Add Quorum Disk ID.....	4-140
[Remote Replication]	Add RCU.....	4-140
[Remote Replication]	Change JNL Option.....	4-141
[Remote Replication]	Change Mirror Option.....	4-142
[Remote Replication]	Change RCU Option.....	4-143
[Remote Replication]	Create Pairs.....	4-144
[Remote Replication]	Delete Pairs.....	4-147
[Remote Replication]	Delete Path.....	4-150
[Remote Replication]	Del Quorum Disk ID.....	4-151
[Remote Replication]	Delete RCU.....	4-152
[Remote Replication]	Edit Options.....	4-152
[Remote Replication]	Edit Pair Options.....	4-155
[Remote Replication]	Journal Owner.....	4-156
[Remote Replication]	Journal Vol.....	4-157
[Remote Replication]	R-Cmd.Dev.....	4-158
[Remote Replication]	Resync Pairs.....	4-159
[Remote Replication]	Split Pairs.....	4-162
[Remote Replication]	Suspend Pairs.....	4-164
	Server Priority Manager Descriptions.....	4-165
[SPM]	Change SPMGrp.....	4-165
[SPM]	Clear SPM Info.....	4-166
[SPM]	Default Set.....	4-166
[SPM]	Set All Prio Port.....	4-167
[SPM]	Set All Prio WWN.....	4-167
[SPM]	Set Ctrl Kind.....	4-168
[SPM]	Set Prio Port.....	4-168
[SPM]	Set Prio WWN.....	4-169
[SPM]	SPMGrp Del/Chg.....	4-170

[SPM] Update Port WWN.....	4-170
[SPM] Update SPMGrp.....	4-171
[SPM] Update WWN.....	4-172
Universal Volume Manager Descriptions.....	4-172
[UVM] Add External Volumes.....	4-172
[UVM] Assign MP Unit.....	4-175
[UVM] Delete ES VOLS.....	4-176
[UVM] Disconnect ES Paths.....	4-176
[UVM] Disconnect ES VOLS.....	4-177
[UVM] Edit ES Path Config.....	4-177
[UVM] Edit ES VOLS.....	4-179
[UVM] Edit External WWNs / iSCSI Targets.....	4-181
[UVM] Reconnect ES Paths.....	4-182
[UVM] Reconnect ES VOLS.....	4-182
Volume Migration Descriptions.....	4-183
[VM] Del Migration Plans.....	4-183
[VM] Migrate Volumes.....	4-184
Virtual Partition Manager Descriptions.....	4-185
[VPM] Edit CLPR.....	4-185
Volume Shredder Descriptions.....	4-185
[VS] Abort Shredding.....	4-185
[VS] End Shredding.....	4-186
[VS] Shred LDEVs.....	4-186

5 VSP Gx00 models, VSP Fx00 models audit log examples of encryption key operations..... 5-1

ENC Descriptions.....	5-2
[ENC] Add keys to DKC	5-2
[ENC] Backup Keys	5-2
[ENC] Backup Keys to File.....	5-2
[ENC] Backup Keys to Serv.....	5-2
[ENC] Change CEK Status.....	5-3
[ENC] Change DEK Status.....	5-3
[ENC] Clear Keys.....	5-3
[ENC] Create KEK Dynamic.....	5-4
[ENC] Create Keys.....	5-4
[ENC] Create Keys.....	5-5
[ENC] Create Keys On Serv.....	5-5
[ENC] DEK assign SpareDisk.....	5-6
[ENC] DEK delete.....	5-6
[ENC] Delete KEK Dynamic.....	5-6
[ENC] Delete Keys.....	5-7
[ENC] Delete Keys.....	5-7
[ENC] Delete Keys on Serv.....	5-7
[ENC] Edit Encryption.....	5-8
[ENC] Edit ENC Settings.....	5-8
[ENC] Edit Password Policy.....	5-9
[ENC] Register KEK Dynamic.....	5-10
[ENC] Rekey CEK.....	5-10
[ENC] Rekey KEK Dynamic	5-11
[ENC] Restore Keys	5-11
[ENC] Restore Keys fr File.....	5-11

[ENC] Restore Keys fr Serv.....	5-11
[ENC] Retry KEK Dynamic	5-12
[ENC] Set Up Key Mng Serv.....	5-12
[ENC] Use Keys for CEK/KEK.....	5-13
KEK Acquisition Descriptions.....	5-13
[KEK Acquisition] Acquisition Key.....	5-13
[KEK Acquisition] Set Key.....	5-14

6 Audit log examples of commands received by VSP Gx00 models, VSP Fx00 models..... 6-1

Config Command.....	6-2
Add CHAP User.....	6-2
Add Copy Group.....	6-2
Add Device Group.....	6-2
Add Device Group(Nick Name).....	6-3
Add DP Pool.....	6-3
Add External Group.....	6-4
Add External iSCSI Name/Modify External CHAP User.....	6-4
Add HBA iSCSI.....	6-5
Add Host Group.....	6-5
Add Journal(Ldev).....	6-6
Add Ldev.....	6-6
Add Ldev(Dynamic Provisioning).....	6-7
Add Ldev(Snapshot).....	6-7
Add LUN.....	6-7
Add Path.....	6-8
Add RCU.....	6-8
Add RCU iSCSI Port.....	6-9
Add RCU Path.....	6-9
Add Resource(Group).....	6-10
Add Resource/Delete Resource.....	6-10
Add Snap Pool.....	6-11
Add Snapshot.....	6-11
Add SPM Group.....	6-12
Add SPM WWN.....	6-12
Add WWN.....	6-13
Check External Storage Group.....	6-13
Check External Storage Path.....	6-14
CTQM.....	6-14
Delete CHAP User.....	6-14
Delete Copy Group.....	6-15
Delete Device Group.....	6-15
Delete External Group.....	6-16
Delete External iSCSI Name.....	6-16
Delete HBA iSCSI.....	6-16
Delete Host Group.....	6-17
Delete Journal.....	6-17
Delete Journal(Ldev).....	6-18
Delete Ldev.....	6-18
Delete LUN.....	6-18
Delete Path.....	6-19
Delete Pool.....	6-20

Delete Pool(Ldev).....	6-20
Delete RCU.....	6-20
Delete RCU iSCSI Port.....	6-21
Delete RCU Path.....	6-21
Delete Resource(Group).....	6-22
Delete Snapshot.....	6-22
Delete SPM Group.....	6-22
Delete SPM WWN.....	6-23
Delete SPM WWN(Nick Name).....	6-23
Delete WWN.....	6-24
Disconnect External Group.....	6-24
Disconnect Path.....	6-24
Extend Ldev.....	6-25
Initialize Ldev(Format).....	6-25
Initialize Ldev(Shredding).....	6-26
Initialize Ldev(Stop Shredding).....	6-26
Initialize Parity Group.....	6-26
Map Resource(LDEV).....	6-27
Map Resource(Port).....	6-27
Map Snapshot.....	6-27
Modify CLPR.....	6-28
Modify Device Group(Name).....	6-28
Modify External Group(ALUA Switch).....	6-29
Modify External Group(Cache Inflow).....	6-29
Modify External Group(Cache Mode).....	6-30
Modify External Group(Load Balance Mode).....	6-30
Modify External Group(MP Blade).....	6-30
Modify Host Group(Host Mode).....	6-31
Modify HostGroup(Host Mode Option).....	6-31
Modify Initiator CHAP User.....	6-32
Modify Journal.....	6-32
Modify Journal(MP Blade).....	6-32
Modify Ldev(Blocked).....	6-33
Modify Ldev(CLPR).....	6-33
Modify Ldev(Command Device).....	6-33
Modify Ldev(Discard Zero Page).....	6-34
Modify Ldev(Full Allocation).....	6-34
Modify Ldev(MP Blade).....	6-35
Modify Ldev(Quorum Disable).....	6-35
Modify Ldev(Quorum Enable).....	6-35
Modify Ldev(Nick Name).....	6-36
Modify Ldev(Restore).....	6-36
Modify Ldev(Tier).....	6-37
Modify Pool Attribute.....	6-37
Modify Pool(Data Direct Mapping).....	6-37
Modify Pool(Monitor Mode).....	6-38
Modify Pool(Restore).....	6-38
Modify Pool(Threshold).....	6-38
Modify Port.....	6-39
Modify Port(T10PI).....	6-39
Modify RCU.....	6-40
Modify Snapshot(Restore).....	6-40

Modify Snapshot(Resync).....	6-41
Modify Snapshot(Split).....	6-41
Modify SPM Group.....	6-42
Modify SPM WWN.....	6-42
Modify SPM WWN(NickName).....	6-43
Monitor Pool.....	6-43
Paircreate.....	6-43
Pairresync.....	6-44
Pairsplit.....	6-45
Pairsplit-S.....	6-46
Reallocate Pool(Start).....	6-47
Reallocate Pool(Stop).....	6-47
Rename Pool.....	6-48
Replace Snapshot.....	6-48
Reset CHAP User.....	6-48
Reset Command Status.....	6-49
Reset Ldev Priority.....	6-49
Reset WWN.....	6-49
Set CHAP User.....	6-50
Set HBA iSCSI.....	6-50
Set Ldev Priority.....	6-51
Set WWN.....	6-51
Stop Monitor Pool.....	6-52
Unmap Resource(LDEV).....	6-52
Unmap Resource(Port).....	6-53
Unmap Snapshot.....	6-53
FC-SP.....	6-54
User Auth.....	6-54

7 VSP Gx00 models, VSP Fx00 models audit log examples of PIN Deletion Tool operation.....	7-1
[PINDeletion] Delete.....	7-2

A VSP Gx00 models, VSP Fx00 models audit log user operations.....	A-1
Logging in or out.....	A-2
Using Maintenance menu.....	A-2
Using Actions menu.....	A-2
Using Component submenu.....	A-3
Using Logical Device submenu.....	A-3
Using Port/Host Group submenu.....	A-5
Using Pool submenu.....	A-8
Using Parity Group submenu.....	A-9
Using External Storage submenu.....	A-9
Using Local Replication submenu.....	A-10
Using Remote Replication submenu.....	A-11
Using Journal submenu.....	A-13
Using Remote Connection submenu.....	A-14
Using Other function submenu.....	A-15
Using Reports menu.....	A-15
Using Task Management submenu.....	A-15
Using Configuration Report submenu.....	A-15

Using Performance Monitor submenu.....	A-16
Using Settings menu.....	A-17
Using User Management submenu.....	A-18
Using Resource Management submenu.....	A-18
Using Security submenu.....	A-19
Using Environmental Setting submenu.....	A-21
Using Maintenance Utility.....	A-21
Using Maintenance Utility window.....	A-22
Operation Lock.....	A-26
When executing single sign-on from Hitachi Command Suite.....	A-26
 B Audit log Maintenance PC operations.....	 B-1
Logging in to or out from Maintenance PC.....	B-2
Using Login button.....	B-2
Using Maintenance button.....	B-2
Using Install button.....	B-2
Using Information button.....	B-3
Using Monitor button.....	B-3



Preface

This document provides instructions for using the Audit Log function on the Hitachi Virtual Storage Platform G200, G400, G600, G800 (VSP Gx00 models) or Hitachi Virtual Storage Platform F400, F600, F800 (VSP Fx00 models) storage system.

Please read this document carefully to understand how to use this product, and maintain a copy for reference purposes.

See your Hardware Reference Guide for the operations of transferring / exporting audit logs to syslog servers.

- ☐ [Intended audience](#)
- ☐ [Product version](#)
- ☐ [Release notes](#)
- ☐ [Changes in this revision](#)
- ☐ [Referenced documents](#)
- ☐ [Document conventions](#)
- ☐ [Convention for storage capacity values](#)
- ☐ [Accessing product documentation](#)
- ☐ [Getting help](#)
- ☐ [Comments](#)

Intended audience

This document is intended for system administrators, Hitachi Data Systems representatives, and authorized service providers who are involved in installing, configuring, and operating the Device Manager - Storage Navigator storage system.

Readers of this document should have at least the following knowledge and experience:

- You should have a background in data processing and understand RAID storage systems and their basic functions.
- You should be familiar with the Device Manager - Storage Navigator software for the VSP Gx00 models and VSP Fx00 models and have read the *Hitachi Command Suite User Guide*.
- You should be familiar with the operating system and web browser software on the system hosting the Device Manager - Storage Navigator software.

Product version

This document revision applies to VSP Gx00 models and VSP Fx00 models firmware version 83-02-0x and later.

Release notes

The VSP Gx00 models and VSP Fx00 models Release Notes are available on Hitachi Data Systems Support Connect: <https://support.hds.com/en-us/contact-us.html>. Read the release notes before installing and using this product. They may contain requirements or restrictions that are not fully described in this document or updates or corrections to this document.

Changes in this revision

- Updated audit log detailed information ([\[Information\] ORM Value on page 4-18](#)).
- Added audit log output information to support Channel Board Box ([\[Maintenance\] Block on page 4-34](#), [\[Maintenance\] Install on page 4-42](#), [\[Maintenance\] Remove on page 4-46](#), [\[Maintenance\] Restore on page 4-48](#), [Using Maintenance Utility window on page A-22](#)).
- Added audit log to support HDT IOPH Propagation ([\[PROV\] CalculateTieringMonitorData on page 4-68](#)).
- Changed audit log output information to support volumes over 4 TB ([\[PROV\] Create LDEVs on page 4-69](#), [\[PROV\] Create/Expand Pools on page 4-72](#), [\[PROV\] Edit/Delete Pools on page 4-107](#), [\[UVM\] Add External Volumes on page 4-172](#)).

- Changed audit log detailed information to support T10 PI ([\[PROV\] Create LDEVs on page 4-69](#), [\[PROV\] CreateLdev on page 4-77](#)).
- Added audit log to support T10 PI ([\[PROV\] EditT10piMode on page 4-116](#), [Modify Port\(T10PI\) on page 6-39](#)).
- Updated audit log detailed information ([Remote Replication Descriptions on page 4-139](#)).
- Added audit log to support volumes over 4 TB ([Config Command on page 6-2](#)).
- Added support for Virtual Storage Platform F400, F600, F800

Referenced documents

- *Provisioning Guide for Hitachi Virtual Storage Platform Gx00 and Fx00 Models*, MK-94HM8014
- *Hitachi Command Suite User Guide*, MK-90HC172

Document conventions

This document uses the following typographic conventions:

Convention	Description
Bold	Indicates text on a window, other than the window title, including menus, menu options, buttons, fields, and labels. Example: Click OK .
<i>Italic</i>	Indicates a variable, which is a placeholder for actual text provided by the user or system. Example: copy <i>source-file</i> <i>target-file</i> Note: Angled brackets (< >) are also used to indicate variables.
screen/code	Indicates text that is displayed on screen or entered by the user. Example: # pairedisplay -g oradb
< > angled brackets	Indicates a variable, which is a placeholder for actual text provided by the user or system. Example: # pairedisplay -g <group> Note: Italic font is also used to indicate variables.
[] square brackets	Indicates optional values. Example: [a b] indicates that you can choose a, b, or nothing.
{ } braces	Indicates required or expected values. Example: { a b } indicates that you must choose either a or b.
vertical bar	Indicates that you have a choice between two or more options or arguments. Examples: [a b] indicates that you can choose a, b, or nothing. { a b } indicates that you must choose either a or b.

This document uses the following icons to draw attention to information:

Icon	Meaning	Description
	Tip	Tips provide helpful information, guidelines, or suggestions for performing tasks more effectively.
	Note	Notes emphasize or supplement important points of the main text.
	Caution	Cautions indicate that failure to take a specified action could result in damage to the software or hardware.
	WARNING	Warnings indicate that failure to take a specified action could result in loss of data or serious damage to hardware.

Convention for storage capacity values

Physical storage capacity values (disk drive capacity) are calculated based on the following values:

Physical capacity unit	Value
1 KB	1,000 bytes
1 MB	1,000 ² bytes
1 GB	1,000 ³ bytes
1 TB	1,000 ⁴ bytes
1 PB	1,000 ⁵ bytes
1 EB	1,000 ⁶ bytes

Logical storage capacity values (logical device capacity) are calculated based on the following values:

Logical capacity unit	Value
1 KB	1,024 bytes
1 MB	1,024 KB or 1,024 ² bytes
1 GB	1,024 MB or 1,024 ³ bytes
1 TB	1,024 GB or 1,024 ⁴ bytes
1 PB	1,024 TB or 1,024 ⁵ bytes
1 EB	1,024 PB or 1,024 ⁶ bytes
1 block	512 bytes
1 Cyl	- For open systems - OPEN-V: 960 KB

Logical capacity unit	Value
	Other than OPEN-V: 720 KB

Accessing product documentation

The VSP Gx00 models and VSP Fx00 models user documentation is available on Hitachi Data Systems Support Connect: https://support.hds.com/en_us/documents.html. Please check this site for the most current documentation, including important updates that may have been made after the release of the product.

Getting help

The Hitachi Data Systems customer support staff is available 24 hours a day, seven days a week. If you need technical support, log on to Hitachi Data Systems Support Connect for contact information: <https://support.hds.com/en-us/contact-us.html>

Comments

Please send us your comments on this document: doc.comments@hds.com. Include the document title, number, and revision. Please refer to specific section(s) and paragraph(s) whenever possible. All comments become the property of Hitachi Data Systems.

Thank you!

VSP Gx00 models, VSP Fx00 models audit logs

Audit log files can be used to monitor the security of Virtual Storage Platform G200, G400, G600, G800 (VSP Gx00 models) storage system and Virtual Storage Platform F400, F600, F800 (VSP Fx00 models) storage system. Because the audit log file records when and who has done what operation, it can be used for investigation when illegal settings are applied or failures occur on the storage system.

- ☐ [Outline](#)
- ☐ [Acquisition/reference of audit logs](#)


Outline

An audit log is a file to which histories of the operation performed on the storage system by a system constructor or system administrator, and of the program behavior due to the operation are output.

Because the audit log records when and who has done what operation, it can be used for investigation when illegal settings are applied or failures occur on VSP Gx00 models and VSP Fx00 models.

Also, information about a user who performs operations using commands etc., the audit event such as success or failure of the processing caused by the operations, and the targets of the operations and processing is stored in an audit log file, and the information is useful to audit the storage system.

The stored audit logs can be transferred to a syslog server on VSP Gx00 models and VSP Fx00 models.

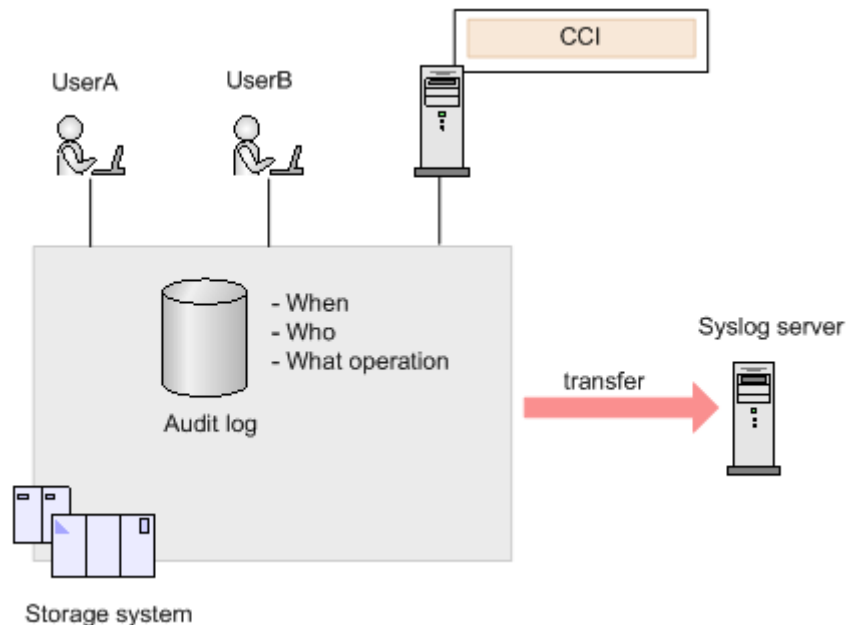

Acquisition/reference of audit logs

Audit logs are stored in either the SVP or the storage system. (Which one to store depends on the type of the audit logs.) To acquire or refer to the stored audit log, the log needs to be transferred to syslog servers.

Once transferring audit logs to syslog servers is set, audit logs stored in the SVP or the storage system are automatically transferred to syslog servers at all times. Refer to Related topics below for the procedure for transferring audit logs to syslog servers.



Note: The capacity for audit logs that can be stored in the SVP or the storage system is limited. When the stored audit logs reaches the maximum capacity, the oldest data is lost as it is overwritten by the newest data, so it is recommended to transfer audit logs to syslog servers.

When audit logs are not transferred or syslog servers are not used

If audit logs are not transferred to syslog servers due to a LAN failure etc., the logs are accumulated as a non-transferred log. Once non-transferred logs are accumulated, the icon showing the accumulated status in the window changes or a SIM is generated.

When syslog servers are not used, logs are accumulated as a non-transferred log, but the icon showing the accumulated status in the window does not change or a SIM is not generated.

Storage place of audit logs	Maximum stored capacity (Maximum number of lines)	When non-transferred logs are accumulated
SVP	250,000 lines	The icon shown in the upper right of the main window changes. : The number of accumulated logs is below the threshold ¹. : The number of accumulated logs reaches the threshold. : Some audit logs are overwritten and a part of the data is lost because the file is full.
Storage system	1,000 lines	A SIM is generated. - Reference code (7d03xx ²): The number of accumulated logs reaches the threshold ¹. - Reference code (7d04xx ²): Some audit logs are overwritten and some data are lost because the file is full.
Notes: - The threshold is 70% of the maximum stored capacity of the audit logs. When the audit log file reaches the maximum capacity, the oldest data is lost as it is overwritten by the newest data (wrap around). - xx=00: Indicates an event occurred on the CTL1 side xx=01: Indicates an event occurred on the CTL2 side		

Perform the following when non-transferred logs are accumulated.

- Export non-transferred logs.
All stored audit logs including transferred logs are exported in this operation.
- Which operation window to be used depends on where the audit logs are stored. Refer to Related topics below for the procedure for exporting audit logs.

Type/contents of audit log	Stored place	Exporting operation window
- Operations set by the management client (Except operations in the Maintenance Utility menu) - Operations and events on encryption keys for encrypting stored data - Execution logs of Remote Maintenance API - Commands that the storage system received from a host or computers using CCI	SVP	Audit Log Properties window
- Operations using Maintenance Utility - Maintenance operations from Maintenance PC	Storage system	Audit Log Settings window

- Eliminate the cause of the transfer failure to the syslog server, and then conduct a test transfer of syslogs to confirm that the transmission is recovered.



Note: Even if the transmission is recovered, audit logs generated during the transfer failure are not retransferred.

Related topics

- Descriptions on audit log settings and exporting audit logs in your Hardware Reference Guide.

VSP Gx00 models, VSP Fx00 models audit log file format

The audit log file is a text file in the syslog format. The audit log file has two types of formats: RFC3164-compliant and RFC5424-compliant. Select either one of them when setting for transferring audit log files to syslog servers or exporting audit log files.

An audit log file consists of the following fields: Audit log header, Audit log information (Basic Information), and Audit log information (Detailed Information), whose formats are respectively described in the following topics.

- ☐ [Audit log header format \(RFC3164-compliant\)](#)
- ☐ [Audit log header format \(RFC5424-compliant\)](#)
- ☐ [Audit log information format \(Basic information\)](#)
- ☐ [Audit log information format \(Detailed information\)](#)
- ☐ [Description of log examples in this manual](#)

Audit log header format (RFC3164-compliant)

```
<14> Aug   2 01:39:39 GUM Storage: CELFSS,1.1,53,,  
└─┬──┴──┐ ┌─┬──┴──┐ ┌─┬──┴──┐ ┌─┬──┴──┐ ┌─┬──┴──┐  
  
1           2         3             4          5      6 7 8  
2013-08-02T01:39:39.8Z,Storage,GUM,ConfigurationAccess,  
└──────────────────────┘ ┌─┬──┴──┐  
  
                        9            10        11              12  
Success,uId=maintenance,HM800:402650,,  
└────────┘ ┌────────┘ ┌────────┘ ┌────────┘  
  
    13       14               15                16  
Japan-Tokyo,,,,from=xxxxxxxxxxxxxx,,,20,BasicLog,,,  
└──┬──┘ ┌──┬──┘ ┌──┬──┘ ┌──┬──┘ ┌──┬──┘ ┌──┬──┘  
  
     17      18-20      21                 22-24 25      26      27-28
```

Audit log header

```
RMI AP,130801-DeleteMirrors,[Remote Replication],
Delete Pairs,,Normal end,Seq.=0000000020
```

Audit log information (Basic Information)

```
<14> Aug 2 01:39:39 GUM Storage: CELFSS,1.1,54,,
2013-08-02T01:39:39.8Z,Storage,GUM,ConfigurationAccess,
Success,uid=maintenance,HM800:402650,,Japan-Tokyo,,,
from=xxxxxxxxxxxxxxxx,,,,DetailLog,,
```

Audit log header

+Copy type=UR

Audit log information
(Detailed Information)

```
<14> Aug  2 01:39:39 GUM Storage: CELFSS,1.1,55,,
2013-08-02T01:39:39.8Z,Storage,GUM,ConfigurationAccess,
Success,uid=maintenance,HM800:402650,,Japan-Tokyo,,,
from=xxxxxxxxxxxxxxxxx,,,,DetailLog,,
```

Audit log header

```

++{P-VOL (Port-G-ID-LUN) , S-VOL (Port-G-ID-LUN) , MirrorID ,
S/N, CTRLID, Type, Range, Delete Mode, Result}

=[{1A-0x00-0, 1A-0x00-3, 0x00, 02650, 7, P-VOL, Mirror,
Force.Normal end}]. Num.of Pairs=1

```

Audit log information
(Detailed Information)

No.	Item	Description
1	Priority	The priority value given by the following formula is output, enclosed by < >. Priority value = 8 x Facility + Severity Facility is 1 (Fixed value). Severity takes the following values, depending on the type of the log information: • 4: Error (Abnormal end) or Warning (The operation partly ended abnormally or was aborted.) • 6: Informational (Normal end) For example, if Severity is Error, <12> is output for the priority value.
2	Date, time ¹	The date and time are output in the format of MMM DD HH:MM:SS. (MMM: month, DD: day, HH: hour, MM: minute, SS: second)

No.	Item	Description
		The abbreviation of months (Jan to Dec) is output to MMM. For the first to ninth day of a month, a space followed by the day is output to DD. For example, if it is the first day of a month, the output is " 1".
3	Detected location	"GUM" is output for a host name.
4	Program name	"Storage" is output for the detection entity identifier.
5	Unified specification identification	"CELFSS" is output for the unified specification identifier.
6		"1.1" is output for the revision number of the unified specification.
7	Message identification	The serial number of the syslog header information is output.
8		Message ID (No output because it is unused.)
9	Date, time#2 ¹	The date, time, and the time difference from UTC (Universal Time Coordinated) are output in the format of YYYY-MMDDThh:mm:ss.s ±hh:mm. (YYYY: year, MM: month, DD: day, hh: hour, mm: minute, ss.s: second, hh: hour of the time difference, mm: minute of the time difference). However, if there is no time difference from UTC, "Z" is output for "±hh:mm" such as 2005-12-T23:06:58.0Z. "ss.s" (Output format of second) means the first decimal point is output.
10	Detection entity	"Storage" is output for the detection entity identifier.
11	Detected location	"GUM" is output as a host name.
12	Type of audit event	The category name of the audit event is output. The actual category names and examples of the events are as follows: • Authentication: Authentication etc. to RMI • ConfigurationAccess: Configuration from Device Manager - Storage Navigator, Maintenance PC, hosts or CCI • Maintenance: Configuration on Maintenance PC • ExternalService: Remote maintenance operation
13	Result of audit event	The result of the audit event is output as follows. • Success: Normal end (The operation ended normally.) • Failed: Error (xxxx-yyyy) (The operation ended abnormally.) • Failed: Warning (xxxx-yyyy) (The operation partly ended abnormally or was aborted.) "xxxx-yyyy" shows an error code. This error code is not shown in the result of the audit event if the operation is performed from Maintenance PC or by the command from a host.
14	Subject identification	The user name is output in the format of "uid=user name". • "DKCMaintenance" is output for the operation from Maintenance PC. • "Host" is output for the command from a host.
15	Hardware identification	The ID that identifies the model name of the product (HM800) and the serial number (six digit number: 400001 to 499999) are punctuated with a colon (:) and output.

No.	Item	Description
		For example, "HM800:431234" is output if the serial number is 431234.
16	Generated location	No output because it is unused.
17	Related information	The location identification name configured in the Set Up Syslog Server for Audit Logs window is output.
18		FQDN (No output because it is unused.)
19		Redundancy identification information (No output because it is unused.)
20	Agent information	No output because it is unused.
21	Host identification	The identification information of a host sending requests is output as follows. - Operations of Device Manager - Storage Navigator and RMI AP: IP address (IPv4 or IPv6) ^{2, 3} However, no identification information is output to operation logs of RM AP. - A host that sent commands: WWN However, when commands are received from other storage systems, the WWN from the storage system that sent commands is output. - Computers using CCI: Host name - FC-SP authentication: WWN - No output for operation logs of RM AP. - No output for events on the encryption keys.
22	Request information	The port that sends requests (No output because it is unused.)
23		The host that receives requests (No output because it is unused.)
24		The port that receives requests (No output because it is unused.)
25	Collective operation identifier	The collective operation identifier is a serial number with which the operation is recognized as one operation even if it outputs multiple lines. The identifier is output only when the log identification information is "BasicLog."
26	Log type information	The log type information is output as follows: - BasicLog: Basic information - DetailLog: Detailed information
27	Application identification	When commands are received from a host, the following are output. - ID that the host and storage system use internally 0x0000: When receiving commands from other storage systems.

No.	Item	Description
		No output for events on FC-SP, Computers using CCI, or encryption keys.
28	Reserve	Reserve #2 (No output because it is unused.)
Notes: - If a LAN failure etc. occurs on the storage system, the data and time might be the accumulated time since January 1, 1970. - The IP address might indicate that of a proxy server or router, depending on the connected network configuration. - When IPv4 and IPv6 are available for communication from the management client to the SVP or management client, even if an IPv6 address of the SVP or management client is designated by the browser of the management client, IPv4 is used for communication by operations from the sub window of Device Manager - Storage Navigator, and an IPv4 address is output to the audit log.		

Audit log header format (RFC5424-compliant)

```

<14> 1 2013-08-02T01:39:39.8Z GUM Storage: - - -
1 2 3 4 5 6 7 8
CELFSS,1.1,53,ConfigurationAccess,Success,
9 10 11 12 13
uid=maintenance,HM800:402650,Japan-Tokyo,
14 15 16
from=xxxxxxxxxxxxxxxx,20,BasicLog,,
17 18 19 20

RMI AP,130801-DeleteMirrors,[Remote Replication],
Delete Pairs,,Normal end,Seq.=0000000020

<14> 1 2013-08-02T01:39:39.8Z GUM Storage: - - -

CELFSS,1.1,54,ConfigurationAccess,Success,

uid=maintenance,HM800:402650,,Japan-Tokyo,

From=xxxxxxxxxxxxxxxx,,DetailLog,,

+Copy type=UR

<14> 1 2013-08-02T01:39:39.8Z GUM Storage: - - -

CELFSS,1.1,55,ConfigurationAccess,Success,

uid=maintenance,HM800:402650,,Japan-Tokyo,

from=xxxxxxxxxxxxxxxx,,DetailLog,,

++{P-VOL(Port-G-ID-LUN),S-VOL(Port-G-ID-LUN),MirrorID,
S/N,CTRLID,Type,Range,Delete Mode,Result}

=[{1A-0x00-0,1A-0x00-3,0x00,02650,7,P-VOL,Mirror,
Force,Normal end}],Num.of Pairs=1

```

Audit log header

Audit log information (Basic Information)

Audit log header

Audit log information (Detailed Information)

Audit log header

Audit log information (Detailed Information)

No.	Item	Description
1	Priority	The priority value given by the following formula is output, enclosed by < >. Priority value = 8 x Facility + Severity Facility is 1 (Fixed value). Severity takes the following values, depending on the type of the log information: 4: Error (Abnormal end) or Warning (The operation partly ended abnormally or was aborted.) 6: Informational (Normal end) For example, if Severity is Error, <12> is output for the priority value.
2	Version	"1" is output for the version number.

No.	Item	Description
3	Date, time ¹	The date, time, and the time difference from UTC (Universal Time Coordinated) are output in the format of YYYY-MMDDThh:mm:ss.s ±hh:mm. (YYYY: year, MM: month, DD: day, hh: time, mm: minute, ss.s: second, hh: hour of the time difference, mm: minute of the time difference). However, if there is no time difference from UTC, "Z" is output for "±hh:mm" such as 2005-12-T23:06:58.0Z. "ss.s" (Output format of second) means the first decimal point is output.
4	Detected location	"GUM" is output for a host name.
5	Program name	"Storage" is output for the detection entity identifier.
6	Process name	A hyphen (-) is output for the process name.
7	Message ID	A hyphen (-) is output for the message ID.
8	Structured data	A hyphen (-) is output for the structured data.
9	Unified specification identification	"CELFSS" is output for the unified specification identifier.
10		"1.1" is output for the revision number of the unified specification.
11	Message identification	The serial number of the syslog header information is output.
12	Type of audit event	The category name of the audit event is output. The actual category names and examples of the events are as follows: • Authentication: Authentication etc. to RMI • ConfigurationAccess: Configuration from Device Manager - Storage Navigator, Maintenance PC, hosts or CCI • Maintenance: Configuration on Maintenance PC • ExternalService: Remote maintenance operation
13	Result of audit event	The result of the audit event is output as follows. • Success: Normal end (The operation ended normally.) • Failed: Error (xxxx-yyyy) (The operation ended abnormally.) • Failed: Warning (xxxx-yyyy) (The operation partly ended abnormally or was aborted.) "xxxx-yyyy" shows an error code. This error code is not shown in the result of the audit event if the operation is performed from Maintenance PC or by the command from a host.
14	Account identification	A user name is output in the format of "uid=user name". • "DKCMaintenance" is output for the operation from Maintenance PC. • "Host" is output for the commands from a host.
15	Hardware identification	The ID that identifies the model name of the product (HM800) and the serial number (six digit number: 400001 to 499999) are punctuated with a colon (:) and output. For example, "HM800:431234" is output if the serial number is 431234.

No.	Item	Description
16	Related information	The location identification name configured in the Set Up Syslog Server for Audit Logs window is output.
17	Host identification	The identification information of a host sending requests is output as follows. - Operations of Device Manager - Storage Navigator and RMI AP: IP address (IPv4 or IPv6) ^{2, 3} However, no identification information is output to operation logs of RM AP. - Host that sent commands: WWN However, when commands are received from other storage systems, WWN from the storage system that sent commands is output. - Computers using CCI: Host name - FC-SP authentication: WWN - Nothing is output to operation logs of RM AP. - No output for events on the encryption keys.
18	Collective operation identifier	The collective operation identifier is a serial number with which the operation is recognized as one operation even if it outputs multiple lines. The identifier is output only when the log identification information is "BasicLog."
19	Log type information	The log type information is output as follows: - BasicLog: Basic information - DetailLog: Detailed information
20	Application identification	When commands are received from a host, the following are output. - ID that the host and storage system use internally 0x0000: When receiving commands from other storage systems. - No output for events on FC-SP, Computers using CCI, or encryption keys.
Notes: - If a LAN failure etc. occurs on the storage system, the data and time might be the accumulated time since January 1, 1970. - The IP address might indicate that of a proxy server or router, depending on the connected network configuration. - When IPv4 and IPv6 are available for communication from the management client to the SVP or management client, even if an IPv6 address of the SVP or management client is designated by the browser of the management client, IPv4 is used for communication by operations from the sub window of Device Manager - Storage Navigator, and an IPv4 address is output to the audit log.		

Audit log information format (Basic information)

The same format of the audit log information (Basic information) is used by RFC3164-compliant and RFC5424-compliant. Output values of audit log information (basic information) differ by the type of the history.

<pre><14> Aug 2 01:39:39 GUM Storage: CELFSS,1.1,53,, 2013-08-02T01:39:39.8Z,Storage,GUM,ConfigurationAccess, Success,uid=maintenance,HM800:402650,, Japan-Tokyo,,,from=xxxxxxxxxxxxxx,,,20,BasicLog,,,</pre>	} Audit log header*
<pre>RMI AP,130801-DeleteMirrors,[Remote Replication], A B C Delete Pairs,,Normal end,Seq.=0000000020 D E F G</pre>	} Audit log information (Basic Information)
<pre><14> Aug 2 01:39:39 GUM Storage: CELFSS,1.1,54,, 2013-08-02T01:39:39.8Z,Storage,GUM,ConfigurationAccess, Success,uid=maintenance,HM800:402650,,Japan-Tokyo,,, from=xxxxxxxxxxxxxx,,,DetailLog,,, +Copy type=UR</pre>	} Audit log header* } Audit log information (Detailed Information)
<pre><14> Aug 2 01:39:39 GUM Storage: CELFSS,1.1,55,, 2013-08-02T01:39:39.8Z,Storage,GUM,ConfigurationAccess, Success,uid=maintenance,HM800:402650,,Japan-Tokyo,,, from=xxxxxxxxxxxxxx,,,DetailLog,,, ++{P-VOL (Port-G-ID-LUN),S-VOL (Port-G-ID-LUN),MirrorID, S/N,CTRLID,Type,Range,Delete Mode,Result} =[{1A-0x00-0,1A-0x00-3,0x00,02650,7,P-VOL,Mirror, Force,Normal end}],Num.of Pairs=1</pre>	} Audit log header* } Audit log information (Detailed Information)

Note* The audit log header format is compliant to RFC3164.

Type of history	Patten of output value
Operations configured by the management client or Maintenance PC	Pattern 1
Execution logs of remote maintenance API	
Operations on encryption keys for encrypting stored data	
Commands that the storage system received from hosts or computers using CCI	Pattern 2
Events on encryption keys for encrypting stored data	

Mark	Item	Pattern 1	Pattern 2
A	External interface name	• RMI AP: Logs of Remote Method Invocation Application (RMI AP) • MPC: Logs of Maintenance PC • GUM: Logs of Maintenance Utility • RM AP: Logs of Remote Maintenance Application (RM AP) • No output for Create File (Event name) of AuditLog (Function name).	• In-band OPEN: Host • Out-of-band: Computer using CCI • No output for events on encryption keys
B	Task name	• The task name is output to an operation log that is registered in the Device Manager - Storage Navigator tasks. • No task name is output to an operations log that is not registered in the Device Manager - Storage Navigator tasks.	No output.
C	Function name	The abbreviation of the name of the function performed during the setting operation from Device Manager - Storage Navigator, RMI AP or RM AP is output. The name of the maintenance window is output for the setting operation by Maintenance PC. For the relation between the function and the abbreviation of the output function name, see Device Manager - Storage Navigator and Maintenance PC operation on page 3-2	Commands received from the host are output as follows. • User Auth: User authentication command • FC-SP: Device authentication command • Config Command: Configuration change command "ENC" is output for events on encryption keys.
D	Operation name or event name	The operation name or event name that is unique to each function is output. For the relation between the GUI operation of each program product and the operation name output to audit logs, see Using Actions menu on page A-2 and the following sections. For the relation between the operation on Maintenance PC and the operation name output to audit logs, see Using Maintenance button on page B-2 and the following sections. For details of the event names, see Reproducing/losing Audit log on page 3-15.	When the function name is "User Auth", the received command is output as follows. • Login: Receipt of the login command • Logout: Receipt of the logout command No output when commands, except for login or logout, are received. When the function name is "ENC", the event name is output.
E	Parameter	When the configuration operation includes a parameter setting, the operation parameter is output.	No output.

Mark	Item	Pattern 1	Pattern 2
		No detailed information is output to the parameter part of the basic information.	
F	Result of operation or receiving commands	The results of the operations are output as follows. - Normal end: The operation ended normally. - Warning (xxxx-yyyyy): The operation partly ended abnormally or was aborted. - Error (xxxx-yyyyy): The operation ended abnormally. "xxxxx-yyyyyy" shows an error code. See <i>Hitachi Device Manager - Storage Navigator Messages</i> for the error codes. No error code is added to the result of the operation that is not a Device Manager - Storage Navigator operation.	The results of receiving commands are output as follows. - Normal end: User authentication or FC-SP authentication ended normally, or the event on encryption keys occurs. - Error: User authentication or FC-SP authentication ended abnormally. - Accept: Commands from a host are received. - Reject: Commands from a host are rejected.
G	Serial number	The serial number of stored log information is output. The serial number ranges from 0000000000 to 4294967295. When the log information reaches 4,294,967,295 counts, the serial number is reset to 0000000000.	

Audit log information format (Detailed information)

The same format of audit log information (Detailed information) is used by RFC3164-compliant and RFC5424-compliant.

The indexes and setting values that indicates the set items are output to the detailed information. There are two types of the detailed information format.

Detailed information format 1

Example:

```
+Copy Type=UR
++{P-VOL(Port-G-ID-LUN),S-VOL(Port-G-ID-LUN),MirrorID,
S/N,CTRLID,Type,Range,Delete Mode,Result}
=[4C-0x00-0,4A-0x00-0,0x00,467676,18,P-VOL,LU,Normal,
Normal end]],Num. of Pairs=1
```

Symbol	Definition
+ and -	'+' or '-' displays at the beginning of a line. '+' means the beginning of the index. The number of occurrences of '+' represents the number of indents. '-' means that the line continues from the previous one.

Symbol	Definition
=	Connects an index and a setting value.
[]	When there is more than one setting value for an index, the setting values are enclosed by [], and separated by a comma (,). <i>Example:</i> CU:LDEV=[0x00:0x00,0x00:0x01,0x00:0x02]
{ }	Details are enclosed by { }. <i>Example:</i> {Port,Fabric,Connection}=[{1E,ON,FC-AL},{3E,OFF,P-to-P}]
()	Supplementary and additional information for setting values is enclosed by (). <i>Example:</i> {VOL(CU:LDEV),Result}={0x00:0x01,Error(xxxx-yyyy)}



Note: If there is an item that is not specified when entering commands or performing operations, a hyphen (-) is output for its setting value, no setting value is output, or the index itself is not output.

Detailed information format 2

Example:

```
+{iScsiPort[0]{
Port=1A,
iScsiTarget[0]{
  Id=0,Name="Name",Alias="Alias",UserAuthSwitch=Enable,
  Result=Normal end}}}
```



Note: Line feeds are added to make the example easy to see, while no line feed is added to the actual logs.

Symbol	Definition
+ and -	'+' or '-' displays at the beginning of a line. '+' means the beginning of the index. The number of occurrences of '+' represents the number of indents. '-' means that the line continues from the previous one.
{ }	The tiering relation is indicated by the following format. <i>Parent setting item{Child setting item 1, Child setting item 2{Grandchild setting item 2-1, Grand child setting item 2-2,...},...}</i>
=	Connects an index and a setting value.
[x]	For the log output by the command or operation in which multiple resources or items of the same type can be set at one time, the resource or item of the same type is indicated as follows. <i>Setting item[x]</i> (where x is a number: 0, 1, 2,...)



Note: If there is an item that is not specified when entering commands or performing operations, "null" is output for its setting value, or the index itself is not output.

Description of log examples in this manual

The log examples in this manual contain only the basic information and detailed information of audit log information.

An audit log header appears before the basic information and each detailed information respectively.

For Detailed information format 2 above, line feeds are added to make it easy to see, while no line feed is added to the actual logs.

Detailed information format 1

A log actually output

<pre><14> Aug 2 01:39:39 GUM Storage: CELFSS,1.1,53,, 2013-08-02T01:39:39.8Z,Storage,GUM,ConfigurationAccess, Success,uid=maintenance,HM800:402650,, Japan-Tokyo,,,from=xxxxxxxxxxxxxxxx,,,20,BasicLog,,, RMI AP,130801-DeleteMirrors,[Remote Replication], Delete Pairs,,Normal end,Seq.=0000000020</pre>	]	Audit log header
<pre><14> Aug 2 01:39:39 GUM Storage: CELFSS,1.1,54,, 2013-08-02T01:39:39.8Z,Storage,GUM,ConfigurationAccess, Success,uid=maintenance,HM800:402650,, Japan-Tokyo,,,from=xxxxxxxxxxxxxxxx,,,DetailLog,,, +Copy type=UR</pre>	]	Audit log information (Basic Information)
<pre><14> Aug 2 01:39:39 GUM Storage: CELFSS,1.1,55,, 2013-08-02T01:39:39.8Z,Storage,GUM,ConfigurationAccess, Success,uid=maintenance,HM800:402650,, Japan-Tokyo,,,from=xxxxxxxxxxxxxxxx,,,DetailLog,,, ++{P-VOL(Port-G-ID-LUN),S-VOL(Port-G-ID-LUN),MirrorID, S/N,CTRLID,Type,Range,Delete Mode,Result}=[{1A-0x00-0, 1A-0x00-3,0x00,02650,7,P-VOL,Mirror,Force,Normal end}], Num.of Pairs=1</pre>	]	Audit log header
	]	Audit log information (Detailed Information)
	]	Audit log header
	]	Audit log information (Detailed Information)



Description of the log example in this manual

```
RMI AP,130801-DeleteMirrors,[Remote Replication],
Delete Pairs,,Normal end,Seq.=0000000020
+Copy type=UR
++{P-VOL(Port-G-ID-LUN),S-VOL(Port-G-ID-LUN),MirrorID,
S/N,CTRLID,Type,Range,Delete Mode,Result}
=[{1A-0x00-0,1A-0x00-3,0x00,02650,7,P-VOL,Mirror,
Force,Normal end}],Num.of Pairs=1
```

Detailed information format 2

A log actually output

<pre><14> Aug 2 01:39:39 GUM Storage: CELFSS,1.1,53,, 2014-08-02T01:39:39.8Z,Storage,GUM,ConfigurationAccess, Success,uid=maintenance,HM800:402650,, Japan-Tokyo,,,from=xxxxxxxxxxxxxx,,,20,BasicLog,,, RMI AP,,[PROV],DeleteiScsiTarget,,Normal end, Seq.=0000000020</pre>	]	Audit log header
<pre><14> Aug 2 01:39:39 GUM Storage: CELFSS,1.1,54,, 2014-08-02T01:39:39.8Z,Storage,GUM,ConfigurationAccess, Success,uid=maintenance,HM800:402650,, Japan-Tokyo,,,from=xxxxxxxxxxxxxx,,,DetailLog,,, +{iScsiPort[0]{Port=1A,iScsiTarget[0]{Id=0, Result=Normal end}}}</pre>	]	Audit log information (Basic Information)
	]	Audit log header
	]	Audit log information (Detailed Information)



Description of the log example in this manual

```
RMI AP,,[PROV],DeleteiScsiTarget,,Normal end,
Seq.=0000000020
+{iScsiPort[0]{
  Port=1A,
  iScsiTarget[0]{
    Id=0,Result=Normal end}}}
```

VSP Gx00 models, VSP Fx00 models audit logs quick reference

The event names and operation names output to audit log files by the operations of the management client or Maintenance PC are described.

- ☐ [Audit Log Functions](#)
- ☐ [Device Manager - Storage Navigator and Maintenance PC operation](#)
- ☐ [Encryption Key operations](#)
- ☐ [Command received from hosts](#)
- ☐ [PIN Deletion Tool operation](#)
- ☐ [Reproducing/losing Audit log](#)

Audit Log Functions

The following table lists the functions used in audit logging and provides their meanings.

Function name	Description
ACM	Audit log functions used for account management
AuditLog	Audit log functions used during audit logging
BASE	Audit log functions used during initial setup
Information	Audit log functions used during log related operations on Maintenance PC
Install	Audit log functions used during software or firmware installation
Local Replications	Audit Log functions used during local replication operations
Maintenance	Audit log functions used during general maintenance
Monitor	Audit log functions used to monitor process
PFM	Audit log functions used to monitor performance
PROV	Audit log functions used to provision the system
Remote Maintenance	Audit log functions used for Remote Maintenance application
Remote Replications	Audit log functions used during remote replication operations
SPM	Audit log functions used during Server Priority Manager operations
UVM	Audit log functions used during Universal Volume Manager operations
VM	Audit log functions used during Volume Migration operations
VPM	Audit log functions used during Virtual Partition Manager operations
VS	Audit log functions used during volume shredding operations

Device Manager - Storage Navigator and Maintenance PC operation

The storage system logs operations performed from management client or Maintenance PC. The following table lists the function/operation names as well as GUI operations that trigger logging. Functions are listed in alphabetical order.

Function Name	Operation Name	Corresponding GUI Operation
AuditLog	Send Test Message	Sending a test log to a Syslog server on the Audit Log Settings window
AuditLog	Set Up Syslog Serv	Configuring syslog servers in the Set Up Syslog Server for Audit Logs window

Function Name	Operation Name	Corresponding GUI Operation
ACM	AddUsersToUserGroup	Adding users to a user group
ACM	CreateUser	Creating a new user account
ACM	CreateUserGroup	Creating a new user group
ACM	DeleteUsers	Deleting user accounts
ACM	DeleteUserGroups	Deleting user groups
ACM	DisableUsers	Disabling users
ACM	EnableUsers	Enabling users
ACM	RemoveUsersFromUserGroup	Removing users from a user group
ACM	Set Login Message	Setting login message
ACM	UpdatePassword	Changing a password
ACM	UpdateUserAuthentication	Changing a user authentication mode
ACM	UpdateUserGroupAllResourceGrp	Changing assignment of all resource groups of a user group
ACM	UpdateUserGroupName	Changing a user group name
ACM	UpdateUserGroupResourceGrpBmp	Changing assignment of resource groups of a user group
ACM	UpdateUserGroupRole	Assigning roles to a user group or releasing assignment of roles
BASE	Advanced Settings	Editing advanced system settings
BASE	Create Conf Report	Creating configuration reports
BASE	Delete CVAE Info	Changing information from Command Suite
BASE	Delete Reports	Deleting configuration reports
BASE	Delete Tasks	Deleting tasks
BASE	Disable Auto Delete	Disabling Task Auto Delete
BASE	Edit Storage System	Editing storage system information
BASE	Enable Auto Delete	Enabling Task Auto Delete
BASE	Entry Tasks	Registering tasks to the storage system
BASE	HCSSO Authentication	Launching Device Manager - Storage Navigator from Hitachi Command Suite
BASE	HCSSO SetOneTimeKey	Issuing OneTimeKey from Hitachi Command Suite
BASE	Login	Logging in to Device Manager - Storage Navigator or Maintenance PC
BASE	Logout	Logging out from Device Manager - Storage Navigator or Maintenance PC
BASE	Resume Tasks	Resuming tasks
BASE	Set CVAE Info	Changing information from Command Suite

Function Name	Operation Name	Corresponding GUI Operation
BASE	Start Maintenance	Logging in to Maintenance PC
BASE	Suspend Tasks	Suspending tasks
BASE	Unlock Forcibly	Forcible unlocking
Information	Delete Log	Log-related operations on Maintenance PC
Information	ORM Value	Log-related operations on Maintenance PC
Information	Threshold Value	Log-related operations on Maintenance PC
Install	All Config	Maintenance on Maintenance PC
Install	Backup Config	Maintenance on Maintenance PC
Install	FlashDrive ORM Value	Maintenance on Maintenance PC
Install	Initialize ORM Value	Maintenance on Maintenance PC
Install	Machine Install Date	Maintenance on Maintenance PC
Install	NEW Installation	Maintenance on Maintenance PC
Install	Remove	Maintenance on Maintenance PC
Install	System Option	Maintenance on Maintenance PC
Install	System Tuning	Maintenance on Maintenance PC
Local Replication	Assign S-VOLs	Assigning secondary volumes of Thin Image pairs
Local Replication	Create Pairs	Creating pairs of ShadowImage or Thin Image
Local Replication	Delete Pairs	Deleting pairs of ShadowImage or Thin Image
Local Replication	Edit Options	Setting options for ShadowImage
Local Replication	Initialize	Initializing pairs of ShadowImage or Thin Image
Local Replication	Remove S-VOLs	Removing secondary volumes of Thin Image pairs
Local Replication	Resync Pairs	Resynchronizing pairs of ShadowImage or Thin Image
Local Replication	Split Pairs	Splitting pairs of ShadowImage or Thin Image
Local Replication	Suspend Pairs	Suspending ShadowImage pairs
Maintenance	Block	Maintenance from the Maintenance Utility menu
Maintenance	Block(Type Change)	Maintenance from the Maintenance Utility menu
Maintenance	Blockade	Maintenance on Maintenance PC
Maintenance	Boot System SafeMode	Maintenance from the Maintenance Utility menu

Function Name	Operation Name	Corresponding GUI Operation
Maintenance	Change SFP Type	Maintenance from the Maintenance Utility menu
Maintenance	Check Remove	Maintenance from the Maintenance Utility menu
Maintenance	Correction Copy	Maintenance on Maintenance PC
Maintenance	Create User	Maintenance from the Maintenance Utility menu
Maintenance	Delete Users	Maintenance from the Maintenance Utility menu
Maintenance	Disable Licenses	Maintenance from the Maintenance Utility menu
Maintenance	Edit Login Message	Maintenance from the Maintenance Utility menu
Maintenance	Edit ReplacingNotice	Maintenance from the Maintenance Utility menu
Maintenance	Edit System Param	Maintenance from the Maintenance Utility menu
Maintenance	Edit UPS Mode	Maintenance from the Maintenance Utility menu
Maintenance	Edit User	Maintenance from the Maintenance Utility menu
Maintenance	Enable Licenses	Maintenance from the Maintenance Utility menu
Maintenance	Export Audit Logs	Maintenance from the Maintenance Utility menu
Maintenance	Force RIs SysLock	Maintenance from the Maintenance Utility menu
Maintenance	Install	Maintenance from the Maintenance Utility menu
Maintenance	License Key Install	Maintenance from the Maintenance Utility menu
Maintenance	License Key Remove	Maintenance from the Maintenance Utility menu
Maintenance	MP Restore	Maintenance on Maintenance PC
Maintenance	Power Off Storage	Maintenance from the Maintenance Utility menu
Maintenance	Power On Storage	Maintenance from the Maintenance Utility menu
Maintenance	Reboot GUM	Maintenance from the Maintenance Utility menu
Maintenance	Remove	Maintenance from the Maintenance Utility menu
Maintenance	Reset DurationOfUse	Maintenance from the Maintenance Utility menu
Maintenance	Reset HUB	Maintenance from the Maintenance Utility menu
Maintenance	Restore	Maintenance from the Maintenance Utility menu or maintenance on Maintenance PC
Maintenance	Restore(Type Change)	Maintenance from the Maintenance Utility menu
Maintenance	Restore Data	Maintenance on Maintenance PC
Maintenance	Select Cipher Suite	Maintenance from the Maintenance Utility menu
Maintenance	Set Up Alert	Maintenance from the Maintenance Utility menu
Maintenance	Set Up Date & Time	Maintenance from the Maintenance Utility menu
Maintenance	Set Up Network Perm	Maintenance from the Maintenance Utility menu
Maintenance	Set Up Network Set	Maintenance from the Maintenance Utility menu
Maintenance	Set Up System Info	Maintenance from the Maintenance Utility menu

Function Name	Operation Name	Corresponding GUI Operation
Maintenance	Stop Copy	Maintenance from the Maintenance Utility menu
Maintenance	Turn Off Locate LEDs	Maintenance from the Maintenance Utility menu
Maintenance	Turn On Locate LEDs	Maintenance from the Maintenance Utility menu
Maintenance	Update Cert Files	Maintenance from the Maintenance Utility menu
Maintenance	Update Firmware	Maintenance from the Maintenance Utility menu
Maintenance	UserAccount Backup	Maintenance from the Maintenance Utility menu
Maintenance	UserAccount Restore	Maintenance from the Maintenance Utility menu
Monitor	Monitoring Switch	Maintenance on Maintenance PC
PFM	Delete Unused WWNs	Performance Monitor
PFM	Edit CU Monitor Mode	Performance Monitor
PFM	Edit Monitoring SW	Performance Monitor
PFM	Edit WWN	Performance Monitor
PFM	Edit WWN MonitorMode	Performance Monitor
PROV	Add Hosts	- Adding hosts to specified host groups - Adding specified hosts to host groups
PROV	Add LUN Paths	- Mapping LU paths - Creating alternate LUN paths - Setting the same path as a selected LUN
PROV	Assign MP Unit	Assigning MP units
PROV	Block LDEVs	Blocking LDEVs
PROV	CalculateTieringMonitorData	Recalculating tier monitoring data from Hitachi Command Suite
PROV	Create Host Groups	Creating host groups
PROV	Create LDEVs	Creating new LDEVs
PROV	Create Resource Grps	Creating resource groups
PROV	Create VDKC-Box	Creating a VDKC-Box from Hitachi Command Suite
PROV	Create/Expand Pools	- Creating new pools - Increasing pool capacity
PROV	CreateAlus	Creating an LDEV with the ALU attribute
PROV	CreateiScsiName	Adding hosts to selected iSCSI targets
PROV	CreateiScsiPath	- Adding iSCSI paths to external storage systems - Adding connections to remote storage systems
PROV	CreateiScsiTarget	Creating iSCSI targets
PROV	CreateLdev	Creating new internal or external volumes
PROV	CreateParityGroups	Creating parity groups

Function Name	Operation Name	Corresponding GUI Operation
PROV	CreateRemoteChapUser	Adding CHAP users to selected iSCSI targets
PROV	CreateSlus	Creating an LDEV with the SLU attribute from Hitachi Command Suite
PROV	CreateTiPairsWithSlu	Creating Thin Image pairs using LDEVs with the SLU attribute from Hitachi Command Suite
PROV	CreateTiVolumes	Creating a secondary volume for Thin Image from Hitachi Command Suite
PROV	Delete Host Groups	Deleting host groups
PROV	Delete LDEVs	Deleting LDEVs
PROV	Delete Login WWNs	Deleting unnecessary WWNs
PROV	Delete LUN Paths	Removing LUN paths from LDEVs
PROV	Delete Resource Grps	Deleting resource groups
PROV	Delete VDKC-Box	Deleting a VDKC-Box from Hitachi Command Suite
PROV	DeleteAlus	Deleting an LDEV with the ALU attribute
PROV	DeleteiScsiInitiatorUser	Deleting the setting information of users with CHAP authentication on ports
PROV	DeleteiScsiName	Removing hosts from selected iSCSI targets
PROV	DeleteiScsiPath	- Deleting iSCSI paths to external storage systems - Deleting iSCSI paths when connections cannot be added to remote storage systems
PROV	DeleteiScsiTarget	Deleting iSCSI targets
PROV	DeleteLdev	Deleting internal or external volumes
PROV	DeleteLoginiScsiName	Deleting unnecessary iSCSI names
PROV	DeleteParityGroups	Deleting parity groups
PROV	DeleteRemoteChapUser	Removing CHAP users from selected iSCSI targets
PROV	DeleteSlus	Deleting an LDEV with the SLU attribute from Hitachi Command Suite
PROV	DeleteTargetChapUser	Removing CHAP users assigned to iSCSI targets
PROV	DeleteTiVolumes	Deleting a secondary volume for Thin Image from Hitachi Command Suite
PROV	DRU Expiration Lock	Data Retention Utility
PROV	Edit Cmd Dev(Auth)	Editing command device settings
PROV	Edit Cmd Dev(DevGrp)	Editing command device settings
PROV	Edit Cmd Dev(Sec)	Editing command device settings
PROV	Edit Command Devices	Editing command device settings
PROV	Edit DRU Attribute	Data Retention Utility

Function Name	Operation Name	Corresponding GUI Operation
PROV	Edit Full Allocation	Enabling or disabling the Full Allocation setting
PROV	Edit Host	Editing host settings
PROV	Edit Host Grps(Mode)	Editing host group settings
PROV	Edit Host Grps(Name)	Editing host group settings
PROV	Edit LDEVs(tier)	Editing LDEV settings
PROV	Edit LDEV Tier Rank	Editing the external LDEV tier ranks of pool volumes assigned to a pool
PROV	Edit MP Units	Editing MP unit settings
PROV	Edit Ports(Address)	Editing port settings
PROV	Edit Ports(Security)	Editing port settings
PROV	Edit Ports(Speed)	Editing port settings
PROV	Edit Ports(Topology)	Editing port settings
PROV	Edit Resource Grp	Editing resource groups
PROV	Edit Tiering Policy	Editing the tiering policy
PROV	Edit V-VOL Option	- Creating new LDEVs - Editing LDEV settings
PROV	Edit/Delete Pools	- Deleting pools - Editing pool settings
PROV	Edit/Delete UUIDs	- Changing UUIDs - Deleting UUIDs
PROV	EditIscsiInitiatorUser	Editing the setting information of users with CHAP authentication on ports
PROV	EditIscsiName	Editing host settings
PROV	EditIscsiNickName	Editing host settings
PROV	EditIscsiTarget	Editing iSCSI target settings
PROV	EditSNS	Editing port settings
PROV	EditPortInfo	Editing port settings
PROV	EditRemoteChapUser	Editing CHAP user settings
PROV	EditRemoteTargetUser	Editing iSCSI targets
PROV	EditT10piMode	Editing T10 PI mode settings on ports
PROV	EditTargetChapUser	Editing settings of CHAP users assigned to iSCSI targets
PROV	ExecBindingOperation	Binding or unbinding an LDEV with the SLU attribute to or from the LDEV with the ALU attribute
PROV	Expand V-VOLs	Increasing virtual volume capacity

Function Name	Operation Name	Corresponding GUI Operation
PROV	ExpandSlus	Increasing capacity of an LDEV with the SLU attribute from Hitachi Command Suite
PROV	Format LDEVs	• Formatting LDEVs • Creating new LDEVs
PROV	Format LDEVs(Q)	• Quick formatting LDEVs • Creating new LDEVs
PROV	Initialize Pools	Initializing pools
PROV	LDEV Name	• Creating new LDEVs • Editing LDEVs
PROV	LdevForceRestore	Forcible restoration of LDEVs
PROV	MapSecondaryVolumeWithSlu	Mapping LDEVs with the SLU attribute to the secondary volumes of Thin Image pairs from Hitachi Command Suite
PROV	Monitor Pools	Starting the performance monitoring of a pool
PROV	Move Resources	• Adding resources to resource groups • Removing resources from resource groups
PROV	OperateSiPairsWithSlu	Operating ShadowImage pairs using LDEVs with the SLU attribute from Hitachi Command Suite
PROV	OperateTiPairsWithSlu	Operating Thin Image pairs using LDEVs with the SLU attribute from Hitachi Command Suite
PROV	Pool Name	• Setting pool names • Deleting pool names
PROV	Reclaim Zero Pages	Releasing pages in virtual volumes
PROV	Release HostReserved	Releasing Host-Reserved LUNs
PROV	Relocate Pool	Starting the tier relocation of a pool
PROV	Remove Hosts	Removing hosts from host groups
PROV	Restore LDEVs	Restoring LDEVs
PROV	Restore Pools	Restoring pools
PROV	RevertTiPairsWithSlu	Reverting Thin Image pairs using LDEVs with the SLU attribute from Hitachi Command Suite
PROV	Set FCSP Host	• Creating host authentication information • Changing host authentication information • Deleting host authentication information
PROV	Set FCSP Port Info	• Setting port information • Setting default (User name/Secret)
PROV	Set FCSP Port Switch	Registering authentication information Authentication Mode: Bi-directional -> Unidirectional or Unidirectional -> Bi-directional

Function Name	Operation Name	Corresponding GUI Operation
		Authentication (Port): Enable -> Disable or Disable -> Enable
PROV	Set FCSP Target	Registering or deleting authentication information Authentication (Host Group): Disable -> Enable or Enable -> Disable
PROV	Set PageTieringLevel	Setting the tiering policy per page
PROV	Set Virtual LDEV	- Editing virtualization management settings - Setting or releasing the GAD reserve attribute on a volume for the secondary volume of a global-active device pair
PROV	Shrink Pool	Decreasing pool capacity
PROV	StartParityGroupsFormat	Formatting parity groups
PROV	StartVerify	Verifying LDEVs
PROV	UnmapSecondaryVolumeWithSlu	Unmapping the secondary volumes of Thin Image pairs using LDEVs with the SLU attribute from Hitachi Command Suite
PROV	Stop Monitoring	Stopping the performance monitoring of a pool
PROV	Stop Reclm ZeroPages	Stopping releasing pages in virtual volumes
PROV	Stop Relocating	Stopping the tier relocation of a pool
PROV	Stop Shrinking Pool	Stopping decreasing pool capacity
PROV	StopFormat	Stopping formatting parity groups
PROV	StopVerify	Stopping verifying LDEVs
PROV	UpdateCopybackMode	Enabling/disabling copy-back modes
PROV	UpdateSpareDrives	Assigning as a spare drive or releasing a spare drive setting
Remote Maintenance	PS Control	Hi-track
Remote Maintenance	Reboot MP	Hi-track
Remote Maintenance	Reboot Port	Hi-track
Remote Replication	Add Path	Adding paths to remote storage systems
Remote Replication	Add Quorum Disk ID	Adding quorum disk IDs used by global-active device
Remote Replication	Add RCU	Adding connections to remote storage systems
Remote Replication	Change JNL Option	Changing the journal option for Universal Replicator

Function Name	Operation Name	Corresponding GUI Operation
Remote Replication	Change Mirror Option	Changing the mirror option for Universal Replicator
Remote Replication	Change RCU Option	Changing the remote storage system options
Remote Replication	Create Pairs	Creating pairs of TrueCopy, Universal Replicator, and global-active device
Remote Replication	Delete Pairs	Deleting pairs of TrueCopy, Universal Replicator, and global-active device
Remote Replication	Delete Path	Removing paths from remote storage systems
Remote Replication	Del Quorum Disk ID	Deleting quorum disk IDs used by global-active device
Remote Replication	Delete RCU	Removing connections to remote storage systems
Remote Replication	Edit Options	Setting the remote replica options
Remote Replication	Edit Pair Options	Setting the pair options for TrueCopy or Universal Replicator
Remote Replication	Journal Owner	Setting the journal ownership for Universal Replicator
Remote Replication	Journal Vol	Creating or deleting journals or assigning journal volumes of Universal Replicator
Remote Replication	R-Cmd.Dev.	Setting remote command devices of Universal Replicator
Remote Replication	Resync Pairs	Resynchronizing pairs of TrueCopy, Universal Replicator, and global-active device
Remote Replication	Split Pairs	Splitting pairs of TrueCopy or Universal Replicator
Remote Replication	Suspend Pairs	Suspending pairs for global-active device
SPM	Change SPMGrp	Server Priority Manager
SPM	Clear SPM Info	Server Priority Manager
SPM	Default Set	Server Priority Manager
SPM	Set All Prio Port	Server Priority Manager
SPM	Set All Prio WWN	Server Priority Manager
SPM	Set Ctrl Kind	Server Priority Manager
SPM	Set Prio Port	Server Priority Manager
SPM	Set Prio WWN	Server Priority Manager
SPM	SPMGrp Del/Chg	Server Priority Manager

Function Name	Operation Name	Corresponding GUI Operation
SPM	Update Port WWN	Server Priority Manager
SPM	Update SPMGrp	Server Priority Manager
SPM	Update WWN	Server Priority Manager
UVM	Add External Volumes	Mapping external volumes
UVM	Assign MP Unit	Assigning MP units for external volumes
UVM	Delete ES VOLs	Releasing external volume mapping
UVM	Disconnect ES Paths	Disconnecting external paths
UVM	Disconnect ES VOLs	- Disconnecting external storage systems - Disconnecting external volumes
UVM	Edit ES Path Config	- Adding paths to external path groups - Deleting paths from external path groups - Changing priority among external paths
UVM	Edit ES VOLs	Editing external volume settings
UVM	Edit External WWNs / iSCSI Targets	- Editing external WWN parameters - Editing external iSCSI target parameters
UVM	Reconnect ES Paths	Reconnecting external paths
UVM	Reconnect ES VOLs	- Reconnecting external storage systems - Reconnecting external volumes
VM	Del Migration Plans	Volume Migration
VM	Migrate Volumes	Volume Migration
VPM	Edit CLPR	Creating, adding, deleting, or editing CLPR Migrating parity groups to a different CLPR
VS	Abort Shredding	Stopping shredding LDEVs
VS	End Shredding	Ending shredding LDEVs
VS	Shred LDEVs	Shredding LDEVs

Related topics

- [Chapter 4, VSP Gx00 models, VSP Fx00 models audit log examples on page 4-1](#)
- [Appendix A, VSP Gx00 models, VSP Fx00 models audit log user operations on page A-1](#)
- [Appendix B, Audit log Maintenance PC operations on page B-1](#)

Encryption Key operations

The following tables show the function names, operation names and event names related to encryption keys for data encryption, and each item is listed in alphabetical order.

Table 3-1 Function Name and Operation Name

Function Name	Operation Name	Corresponding GUI Operation
ENC	Add keys to DKC	- Creating encryption keys - Configuring encryption environment settings
	Backup Keys	Backing up encryption keys on the key management server or backing up encryption keys as a file on the management client
	Backup Keys to File	Backing up encryption keys as a file on the management client
	Backup Keys to Serv	Backing up encryption keys on the key management server
	Create KEK Dynamic	- Configuring encryption environment settings - Updating key encryption keys
	Create Keys	- Creating encryption keys - Configuring encryption environment settings
	Create Keys On Serv	- Creating encryption keys - Backing up encryption keys on the key management server - Configuring encryption environment settings
	Delete KEK Dynamic	- Configuring encryption environment settings - Updating key encryption keys
	Delete Keys	Deleting encryption keys
	Delete Keys on Serv	Deleting encryption keys backed up on the key management server
	DEK assign SpareDisk	Configuring encryption environment settings
	DEK delete	Configuring encryption environment settings
	Edit Encryption	Enabling/disabling the encryption in a parity group level
	Edit ENC Settings	Configuring encryption environment settings
	Edit Password Policy	Editing password policies for backing up encryption keys
	Register KEK Dynamic	- Configuring encryption environment settings - Updating key encryption keys
	Rekey CEK	- Configuring encryption environment settings - Updating certificate encryption keys
	Rekey KEK Dynamic	Updating key encryption keys
	Restore Keys	Restoring encryption keys from back up copies on the key management server or the management client

Function Name	Operation Name	Corresponding GUI Operation
	Restore Keys fr File	Restoring encryption keys from back up copies on the management client
	Restore Keys fr Serv	Restoring encryption keys from back up copies on the key management server
	Retry KEK Dynamic	Reacquisition of key encryption keys
	Set Up Key Mng Serv	Configuring encryption environment settings
KEK Acquisition	Acquisition Key	Reacquisition of key encryption keys
	Set Key	

Table 3-2 Function Name and Event Name

Function Name	Event Name	Output Trigger
ENC	Change CEK Status	- When the encryption environment setting is configured from the initial setting. - When the certificate encryption key is updated. - When the encryption disk board is deleted or replaced.
	Change DEK Status	- When the encryption environment setting is configured from the initial setting. - When the encryption environment setting is initialized. - When the data encryption is enabled/disabled. - When Dynamic sparing, Correction copy or Copy back is performed. - When the drive (Hard disk drive, SSD or FMD) is added, deleted or replaced after the encryption environmental setting is configured.
	Clear Keys	When the encryption environment setting is initialized.
	Create Keys	When the encryption key is created.
	Delete Keys	When the encryption key is deleted.
	Use Keys for CEK/KEK	- When the encryption environment setting is configured from the initial setting. - When the certificate encryption key is updated. - When the encryption disk board is added or replaced.

Related topics

- [Chapter 5, VSP Gx00 models, VSP Fx00 models audit log examples of encryption key operations on page 5-1](#)

Command received from hosts

The following table shows the function name output to audit log files when receiving commands from hosts.

Function Name	Description
Config Command	Indicates that a configuration command is received.
FC-SP	Indicates that the FC-SP authentication is completed.
User Auth	Indicates that a user authentication command is received.

Related topics

- [Chapter 6, Audit log examples of commands received by VSP Gx00 models, VSP Fx00 models on page 6-1](#)

PIN Deletion Tool operation

The following table shows the function name and the operation name related to PIN Deletion Tool.

Function Name	Operation Name	Corresponding GUI Operation
PINDeletion	Delete	PIN deletion operations by PIN deletion tool

Related topics

- [Chapter 7, VSP Gx00 models, VSP Fx00 models audit log examples of PIN Deletion Tool operation on page 7-1](#)

Reproducing/losing Audit log

The following table shows the function name, event name, and triggering events that are output when the audit log file is reproduced or lost. The event name, "Create File", is output only once when the audit log file is reproduced automatically.

Function Name	Event Name	Output Trigger
AuditLog	Create File	When abnormal files in the audit log are reproduced automatically.
AuditLog	DKCAuditLog was lost	When the audit log created by commands received from hosts is lost.

Related topics

- [Chapter 4, VSP Gx00 models, VSP Fx00 models audit log examples on page 4-1](#)

VSP Gx00 models, VSP Fx00 models audit log examples

This topic provides examples and descriptions of the audit logs produced by each function and operation that can be performed with Device Manager - Storage Navigator and Maintenance PC. The descriptions are listed alphabetically by function name and operation name.

- ☐ [Audit Log Descriptions](#)
- ☐ [ACM Descriptions](#)
- ☐ [BASE Descriptions](#)
- ☐ [Information Descriptions](#)
- ☐ [Install Descriptions](#)
- ☐ [Local Replication Descriptions](#)
- ☐ [Maintenance Descriptions](#)
- ☐ [Monitor Descriptions](#)
- ☐ [Performance Monitor Descriptions](#)
- ☐ [Provisioning Descriptions](#)
- ☐ [Remote Maintenance Descriptions](#)
- ☐ [Remote Replication Descriptions](#)
- ☐ [Server Priority Manager Descriptions](#)

- ☐ [Universal Volume Manager Descriptions](#)
- ☐ [Volume Migration Descriptions](#)
- ☐ [Virtual Partition Manager Descriptions](#)
- ☐ [Volume Shredder Descriptions](#)

Audit Log Descriptions

[AuditLog] Create File

Example

```
,, [AuditLog], Create File, SVP, Warning, Seq.=xxxxxxxxxx
```

Basic Information

Parameter	Description
SVP	Indicates that the following audit log files are regenerated. • Operations set by the management client • Operations on encryption keys for encrypting stored data • Execution logs of Remote Maintenance API
DKC	Indicates that the following audit log files are regenerated. • Commands that the storage system received from the host or computers using CCI • Events on encryption keys for encrypting stored data

[AuditLog] DKCAuditLog was lost

Example

```
MPC,, [AuditLog], DKCAuditLog was lost,, Error, Seq.=xxxxxxxxxx
```

[AuditLog] Send Test Message

Example

```
GUM,, [AuditLog], Send Test Message,, Normal end, Seq.=xxxxxxxxxx
```

[AuditLog] Set Up Syslog Serv

Example

```
GUM,, [AuditLog], Set Up Syslog Serv,, Normal end, Seq.=xxxxxxxxxx
+Syslog Transfer Protocol=xxxxxxx,
{Syslog Server, Server Enable, Type, Name, Port Number,
Client Certificate File Name, Root Certificate File Name,
Location Identification Name, Retry, Retry Interval}
=[{Primary, Enable, IPv4, xxxxx, 65535, xxxx, xxxxx, xxxxx, Disable, xxx},
{Secondary, Enable, IPv4, xxxxx, 65535, xxxx, xxxxx, xxxxx, Disable, xxx}],
Detail=Enable
```

Detailed Information

Item	Description
Syslog Transfer Protocol	The protocol to transfer audit log information to syslog servers (TLS1.2/RFC5424 or UDP/RFC3164).
Syslog Server	The server used to transfer audit log information to syslog servers. Primary: Primary server, Secondary: Secondary server
Server Enable	Indicates whether the syslog server setting is enabled or disabled. Enable: The setting is enabled. Disable: The setting is disabled.
Type	The type of the IP address of the syslog server (IPv4 or IPv6). A hyphen (-) is displayed if the setting of transferring audit logs to syslog servers is disabled.
Name	The IP address of the syslog server. A hyphen (-) is displayed if the setting of transferring audit logs to syslog servers is disabled.
Port Number	The port number to transfer audit logs to syslog servers. A hyphen (-) is displayed if the setting of transferring audit logs to syslog servers is disabled.
Client Certificate File Name	The name of the client certificate file used to transfer audit logs to syslog servers. A hyphen (-) is displayed, if the setting of transferring audit logs to syslog servers is disabled, or if UDP/RFC3164 is used as a transfer protocol.
Root Certificate File Name	The name of the root certificate file used to transfer audit logs to syslog servers. A hyphen (-) is displayed, if the setting of transferring audit logs to syslog servers is disabled, or if UDP/RFC3164 is used as a transfer protocol.
Location Identification Name	The name to identify a storage system when transferring audit logs to syslog servers.
Retry	Indicates whether to retry transferring if communication with syslog servers failed. Enable: Transfer is retried. Disable: Transfer is not retried. A hyphen (-) is displayed if UDP/RFC3164 is used as a transfer protocol.
Retry Interval	The interval of the retries of transferring. A hyphen (-) is displayed, if the setting of the retry is disabled or if UDP/RFC3164 is used as a transfer protocol.
Detail	Indicates whether the detailed information of audit logs is transferred to syslog servers. Enable: The information is transferred. Disable: The information is not transferred.

ACM Descriptions

[ACM] AddUsersToUserGroup

Example

```
RMI AP,, [ACM],AddUsersToUserGroup,,Normal end,Seq.=xxxxxxxxx
+{UserGroup{
    Name="Group1"},
User[0]{
    Name="User1",Result=Normal end}}
```

Detailed Information

Item		Description
UserGroup		The information of the user group to which the user account is added
	Name	The user group name
User[x]		The information of the user account added to the user group
	Name	The user name
	Result	Result of the operation Normal end: normal end, Error(xxxxx-yyyyyy): Abnormal end xxxxx: part code, yyyyyy: error code

[ACM] CreateUser

Example

```
RMI AP,, [ACM],CreateUser,,Normal end,Seq.=xxxxxxxxx
+{User{
    Name="User1",Authentication=Local,
    UserGroup[0]{
        Name="Group1"},
    AccountStatus=true}}
```

Detailed Information

Item		Description
User		The information of the created user account
	Name	The user name
	Authentication	The authentication method Local: Local authentication, External: External authentication
	UserGroup[x]	The information of the user group to which the user account belongs
	Name	The user group name

Item	Description
AccountStatus	The setting status of the user account true: Enabled, false: Disabled

[ACM] CreateUserGroup

Example

```
RMI AP,, [ACM],CreateUserGroup,,Normal end,Seq.=xxxxxxxxxx
+{UserGroup{
  Name="Group1",
  Role[0]{
    Name="Role1"},
  ResourceGroupBitmap={0},AllResourceGroup=true}}
```

Detailed Information

Item	Description
UserGroup	The information of the created user group
Name	The user group name
Role[x]	The information of the role assigned to the user group
Name	The role name
ResourceGroupBitmap	The resource group ID assigned to the user group
AllResourceGroup	Indicates whether all of the resource groups are assigned to the user groups true: Assigned, false: Not assigned

[ACM] DeleteUsers

Example

```
RMI AP,, [ACM],DeleteUsers,,Normal end,Seq.=xxxxxxxxxx
+{User[0]{
  Name="User1",Result=Normal end}}
```

Detailed Information

Item	Description
User[x]	The information of the deleted user account
Name	The user name
Result	Result of the operation Normal end: normal end, Error(xxxxx-yyyyyy): Abnormal end xxxxx: part code, yyyyyy: error code

[ACM] DeleteUserGroups

Example

```
RMI AP,,[ACM],DeleteUserGroups,,Normal end,Seq.=xxxxxxxxxx
+{UserGroup[0]{
  Name="Group1",Result=Normal end}}
```

Detailed Information

Item		Description
UserGroup[x]		The information of the deleted user group
	Name	The user group name
	Result	Result of the operation Normal end: normal end, Error(xxxxx-yyy): Abnormal end xxxxx: part code, yyy: error code

[ACM] DisableUsers

Example

```
RMI AP,,[ACM],DisableUsers,,Normal end,Seq.=xxxxxxxxxx
+{User[0]{
  Name="User1",Result=Normal end}}
```

Detailed Information

Item		Description
User[x]		The information of the disabled user account
	Name	The user name
	Result	Result of the operation Normal end: normal end, Error(xxxxx-yyy): Abnormal end xxxxx: part code, yyy: error code

[ACM] EnableUsers

Example

```
RMI AP,,[ACM],EnableUsers,,Normal end,Seq.=xxxxxxxxxx
+{User[0]{
  Name="User1",Result=Normal end}}
```

Detailed Information

Item		Description
User[x]		The information of the enabled user account
	Name	The user name
	Result	Result of the operation Normal end: normal end, Error(xxxxx-yyyyyy): Abnormal end xxxxx: part code, yyyyyy: error code

[ACM] RemoveUsersFromUserGroup

Example

```
RMI AP,, [ACM], RemoveUsersFromUserGroup,, Normal end, Seq.=xxxxxxxxxx  
+{UserGroup{  
  Name="Group1"},  
User[0]{  
  Name="User1", Result=Normal end}}
```

Detailed Information

Item		Description
UserGroup		The information of the user group from which the user account is removed
	Name	The user group name
User[x]		The information of the user account
	Name	The user name
	Result	Result of the operation Normal end: normal end, Error(xxxxx-yyyyyy): Abnormal end xxxxx: part code, yyyyyy: error code

[ACM] Set Login Message

Example

```
RMI AP,, [ACM], Set Login Message,, Normal end, Seq.=xxxxxxxxxx  
+LoginMessageSentence=Login Message
```

Detailed Information

Item	Description
LoginMessageSentence	Indicates the sentence displayed on the login window of Device Manager - Storage Navigator

[ACM] UpdatePassword

Example

```
RMI AP,, [ACM],UpdatePassword,,Normal end,Seq.=xxxxxxxxxx
+{User{
    Name="User1"}}}
```

Detailed Information

Item		Description
User		The information of the user account whose password is changed
	Name	The user name

[ACM] UpdateUserAuthentication

Example

```
RMI AP,, [ACM],UpdateUserAuthentication,,Normal end,Seq.=xxxxxxxxxx
+{User{
    Name="User1",Authentication=Local}}}
```

Detailed Information

Item		Description
User		The information of the user account whose authentication method is changed
	Name	The user name
	Authentication	The authentication method Local: Local authentication, External: External authentication

[ACM] UpdateUserGroupAllResourceGrp

Example

```
RMI AP,, [ACM],UpdateUserGroupAllResourceGrp,,Normal end,
Seq.=xxxxxxxxxx
+{UserGroup{
    Name="Group1",AllResourceGroup=true}}}
```

Detailed Information

Item		Description
UserGroup		The information of the user group whose All Resource Groups Assigned setting is changed
	Name	The user group name

Item	Description
AllResourceGroup	Indicates whether all of the resource groups are assigned to the user groups true: Assigned, false: Not assigned

[ACM] UpdateUserGroupName

Example

```
RMI AP,, [ACM],UpdateUserGroupName,,Normal end,Seq.=xxxxxxxxx
+{UserGroup{
  Name="Group1",NewName="Group2"}}
```

Detailed Information

Item	Description
UserGroup	The information of the user group
Name	The user group name before change
NewName	The user group name after change

[ACM] UpdateUserGroupResourceGrpBmp

Example

```
RMI AP,, [ACM],UpdateUserGroupResourceGrpBmp,,Normal end,
Seq.=xxxxxxxxx
+{UserGroup{
  Name="Group1",ResourceGroupBitmap={0}}}
```

Detailed Information

Item	Description
UserGroup	The information of the user group whose resource group assignment is changed
Name	The user group name
ResourceGroupBitmap	The resource group ID assigned to the user group

[ACM] UpdateUserGroupRole

Example

```
RMI AP,, [ACM],UpdateUserGroupRole,,Normal end,Seq.=xxxxxxxxx
+{UserGroup{
  Name="Group1",
  Role[0]{
    Name="Role1"}}}
```

Item		Description
UserGroup		The information of the user group whose role assignment is changed
	Name	The user group name
	Role[x]	The information of the role
	Name	The role name

[BASE] Advanced Settings

[illegible]

Item	Description
Option	Indicates the specified option Advanced System Setting: Advanced system setting of Device Manager - Storage Navigator
Option Bit	Indicates the specified option in hexadecimal
Num. of Modes	The number of modes

```
RMI AP,Task Name,[BASE],Create Conf Report,,Normal end,
Seq.=xxxxxxxxxx
++{ReportName,UserName,FolderName,StartTime}
={XXXXXXX,manager,YYYYYYYYYYY,YYYYMMDDHHMMSS}
```

Detailed Information

Item	Description
ReportName	Name of the created configuration report
UserName	Name of the user who created the configuration report
FolderName	Folder name where the configuration report is output
StartTime	Starting date and time of the configuration report creation

[BASE] Delete CVAE Info

Example

```
RMI AP,, [BASE],Delete CVAE Info,,Normal end,Seq.=xxxxxxxxxx  
+{ID}={0,1,2,3},Num. of IDs=4
```

Detailed Information

Item	Description
ID	ID (unique ID row by row) of the version information that was deleted
Num. of IDs	The number of IDs

[BASE] Delete Reports

Example

```
RMI AP,Task Name,[BASE],Delete Reports,,Normal end,  
Seq.=xxxxxxxxxx  
+{FolderName,Result}=[{XXXXXXXXXX,Normal end},  
{XXXXXXXXXX,Normal end},{XXXXXXXXXX,Normal end},  
-{XXXXXXXXXX,Normal end}],Num. of Reports=4
```

Detailed Information

Item	Description
FolderName	Folder name of the deleted configuration report.
Result	Result of the operation Normal end: normal end, Error(xxxx-yyyyy): Abnormal end xxxx: part code, yyyy: error code
Num. of Reports	The number of deleted configuration reports

[BASE] Delete Tasks

Example

```
RMI AP,, [BASE], Delete Tasks,, Normal end, Seq.=xxxxxxxxx
+{Task Name, Type, User Name, Submission Time, Result}
=[{20100101-EditStorageSystem, Edit Storage System, User01,
YYY/MM/DD HH:MM:SS, Normal end}, {20100101-CreateLdev,
Create LDEV, User02, YYY/MM/DD HH:MM:SS, Normal end}],
Num. of Tasks=2
```

Detailed Information

Item	Description
Task Name	Name of the deleted task
Type	Type of the task
User Name	The user ID who deleted the task
Submission Time	Time when the task was registered
Result	Result of the operation Normal end: normal end, Error(xxxx-yyyyy): Abnormal end xxxx: part code, yyyy: error code
Num. of Tasks	The number of deleted tasks

[BASE] Disable Auto Delete

Example

```
RMI AP,, [BASE], Disable Auto Delete,, Normal end,
Seq.=xxxxxxxxx
+{Task Name, Type, User Name, Submission Time, Result}
=[{20100101-EditStorageSystem, Edit Storage System, User01,
YYY/MM/DD HH:MM:SS, Normal end}, {20100101-CreateLdev,
Create LDEV, User02, YYY/MM/DD HH:MM:SS, Normal end}],
Num. of Tasks=2
```

Detailed Information

Item	Description
Task Name	The task name that the disable auto delete operation was performed
Type	Type of the task
User Name	ID of the user who performed the operation
Submission Time	Time when the task was registered
Result	Result of the operation Normal end: normal end, Error(xxxx-yyyyy): Abnormal end: xxxx: part code, yyyy: error code

Item	Description
Num. of Tasks	Number of the target tasks.

[BASE] Edit Storage System

Example

```
RMI AP,Task Name,[BASE],Edit Storage System,,Normal end,
Seq.=xxxxxxxxxx
+{Name,Contact,Location}=[{XXXXXX,XXXXXX,XXXXXX}],
Num. of SystemInfos=1
```

Detailed Information

Item	Description
Name	Name of the storage system
Contact	Administrator of the storage system
Location	Location of the storage system
Num. of SystemInfos	Number of the edited storage systems

[BASE] Enable Auto Delete

Example

```
RMI AP,,[BASE],Enable Auto Delete,,Normal end,
Seq.=xxxxxxxxxx
+{Task Name,Type,User Name,Submission Time,Result}
=[{20100101-EditStorageSystem,Edit Storage System,User01,
YYYY/MM/DD HH:MM:SS,Normal end},{20100101-CreateLdev,
Create LDEV,User02,YYYY/MM/DD HH:MM:SS,Normal end}],
Num. of Tasks=2
```

Detailed Information

Item	Description
Task Name	The task name that the enable auto delete operation was performed.
Type	The type of task
User Name	ID of the user who performed the operation
Submission Time	Time when the task was registered
Result	Result of the operation Normal end: normal end, Error(xxxx-yyyyy): Abnormal end xxxx: part code, yyyy: error code
Num. of Tasks	Number of the target tasks

[BASE] Entry Tasks

This log is output when each task on the Device Manager - Storage Navigator menu is performed.

Example

```
RMI AP, Task Name, [BASE], Entry Tasks, , Normal end, Seq.=xxxxxxxxxx
+{Action Name}=[{xxxxxxxx}, {xxxxxxxx}, {xxxxxxxx}, {xxxxxxxx},
{xxxxxxxx}], Num. of Actions=5
```

Detailed Information

Item	Description
Action Name	The name of the performed action
Num. of Actions	The number of performed actions

[BASE] HCSSO Authentication

Example 1: When SSO authentication is succeeded

```
RMI AP, , [BASE], HCSSO Authentication, , Normal end,
Seq.=xxxxxxxxxx
```

Example 2: When SSO authentication failed

```
RMI AP, , [BASE], HCSSO Authentication, , Error (xxxxx-yyyyyy),
Seq.=xxxxxxxxxx
```

[BASE] HCSSO SetOneTimeKey

Example 1: When authentication failed in issuance of OneTimeKey

```
RMI AP, , [BASE], HCSSO SetOneTimeKey, Authentication,
Error (xxxxx-yyyyyy), Seq.=xxxxxxxxxx
```

Example 2: When the number of registered OneTimeKeys exceeds the maximum

```
RMI AP, , [BASE], HCSSO SetOneTimeKey, OneTimeKey EntryOver,
Error (xxxxx-yyyyyy), Seq.=xxxxxxxxxx
```

Basic Information

Parameter	Description
Authentication	The authentication failed in the issuance of OneTimeKey.
OneTimeKey EntryOver	The number of OneTimeKeys exceeded the maximum.

[BASE] Login

Example

```
RMI AP,, [BASE],Login,,Normal end,Seq.=xxxxxxxxxx
```

[BASE] Logout

Example

```
RMI AP,, [BASE],Logout,,Normal end,Seq.=xxxxxxxxxx
```

[BASE] Resume Tasks

Example

```
RMI AP,, [BASE],Resume Tasks,,Normal end,Seq.=xxxxxxxxxx
+{Task Name,Type,User Name,Submission Time,Result}
=[{20100101-EditStorageSystem,Edit Storage System,User01,
YYYY/MM/DD HH:MM:SS,Normal end},{20100101-CreateLdev,
Create LDEV,User02,YYYY/MM/DD HH:MM:SS,Normal end}],
Num. of Tasks=2
```

Detailed Information

Item	Description
Task Name	Name of the resumed task
Type	The type of task
User Name	The ID of the user who resumed the task
Submission Time	Time when the task was registered
Result	Result of the operation Normal end: normal end, Error(xxxx-yyyyy): Abnormal end xxxx: part code, yyyy: error code
Num. of Tasks	The number of target tasks

[BASE] Set CVAE Info

Example

```
RMI AP,, [BASE],Set CVAE Info,,Normal end,Seq.=xxxxxxxxxx
+{ID,ProductName,VersionInfo,IPAddress,RegistryDate,
LastAccessDate,MemoRandom}
={1,DevMgr,6.0.0.-00,10.213.38.210,
01/23/2008 12:34:56,01/24/2008 16:54:02,MEMO SPACE},
Num. of CVAEInfos=1
+{LicenseInfo}={Core license,Full license,Expired},
Num. of LicenseInfos=3
```

Detailed Information

Item	Description
ID	ID (unique ID row by row) of the version information that was deleted
ProductName	Product name (Command Suite)
VersionInfo	Version Information
IPAddress	Network address information (IPv4, IPv6, and network name)
RegistryDate	Time stamp of initial registration
LastAccessDate	Time stamp of the final access
MemoRandom	Memo space information
Num. of CVAEInfos	The number of Command Suite messages
LicenseInfo	License information
Num. of LicenseInfos	The number of license messages

[BASE] Start Maintenance

Example

```
MPC,,[BASE],Start Maintenance,,Normal end,Seq.=xxxxxxxx
```

[BASE] Suspend Tasks

Example

```
RMI AP,,[BASE],Suspend Tasks,,Normal end,Seq.=xxxxxxxx
+{Task Name,Type,User Name,Submission Time,Result}
=[{20100101-EditStorageSystem,Edit Storage System,User01,
YYYY/MM/DD HH:MM:SS,Normal end},{20100101-CreateLdev,
Create LDEV,User02,YYYY/MM/DD HH:MM:SS,Normal end}],
Num. of Tasks=2
```

Detailed Information

Item	Description
Task Name	Name of the suspended task
Type	The type of task
User Name	Name of the user who suspended the task
Submission Time	Time when the task was registered.
Result	Result of the operation Normal end: normal end, Error(xxxx-yyyyy): Abnormal end xxxx: part code, yyyyy: error code

Item	Description
Num. of Tasks	Number of the target tasks

[BASE] Unlock Forcibly

Example

```
RMI AP,, [BASE],Unlock Forcibly,,Normal end,Seq.=xxxxxxxx
```

Information Descriptions

[Information] Delete Log

Example

```
MPC,, [Information],Delete Log,SIM,Normal end,Seq.=xxxxxxxx
```

Basic Information

Parameter	Description
SIM	Record of a deleted SIM log
SSB	Record of a deleted SSB log
Reset	Record of a deleted Reset log
Power Event	Record of a deleted Power Event log
Detail	Record of a deleted Detail log
Diagnosis	Record of a deleted Diagnosis log
Copy History	Record of a deleted Copy History log

[Information] ORM Value

Example 1: Changing the threshold of SAS

```
MPC,, [Information],ORM Value,Alter,Normal end,Seq.=xxxxxxxx
+Type=7days
+{Read Err.(Unrecovered),Read Err.(Recovered),
Seek Err.(Recovered),Seek Err.(Unrecovered),Not Ready,
Other Errors}={15,1.00e-008,100,10,10,10}
++PDEV=[HDD000-01,HDD000-02],Num. of PDEVs=2
```

Example 2: Changing the threshold of the SSD when drive type is other than SLxxx-MxxxSS

```
MPC,, [Information],ORM Value,Alter,Normal end,Seq.=xxxxxxxx
+Type=Total
```

```
+{Total Defect Count}={15}
++PDEV=[HDD000-01,HDD000-02],Num. of PDEVs=2
```

Example 3: Changing the threshold of the SSD when drive type is SLxxx-MxxxSS

```
MPC,, [Information],ORM Value,Alter,Normal end,Seq.=xxxxxxxxxx
+Type=Total
+{Total Defect Count,Used Endurance Indicator}={160000,(99,90)}
++PDEV=[HDD000-03],Num. of PDEVs=1
```

Example 4: Changing the threshold of the FMD when drive type is NFHxx-Pxxxxx

```
MPC,, [Information],ORM Value,Alter,Normal end,Seq.=xxxxxxxxxx
+Type=Today
+{Total Defect Count,Reboot Error,DMA Error,Memory Error,
Uncorrected Error,Used Endurance Indicator,Battery Error,
FMD Battery Life Indicator}={0,2,10,500,512,(0,0),1,0}
++PDEV=[HDD000-03],Num. of PDEVs=1
```

Example 5: Changing the threshold of the FMD when drive type is NFHxx-Qxxxxx

```
MPC,, [Information],ORM Value,Alter,Normal end,Seq.=xxxxxxxxxx
+Type=Today
+{Total Defect Count,Reboot Error,DMA Error,Memory Error,
Uncorrected Error,Used Endurance Indicator,Capacitor Error}=
{0,2,10,500,512,(0,0),1}
++PDEV=[HDD000-03],Num. of PDEVs=1
```

Example 6: Error Reset

```
MPC,, [Information],ORM Value>Error Reset,Normal end,
Seq.=xxxxxxxxxx
+PDEV=HDD000-01
```

Basic Information

Parameter	Description
Alter	Change the threshold of ORM (Online Read Margin)
Error Reset	Indicates Error Reset

Detailed Information

Item	Description
Type	The period of time to acquire the result of threshold diagnosis using the read diagnosis function Today: Current day only, 7days: 7 days, Total: Every operating days
Read Err. (Unrecovered)	The threshold of the Read Error (Unrecovered)

Item	Description
Read Err. (Recovered)	The threshold of the Read Error (Recovered)
Seek Err. (Recovered)	The threshold of the Seek Error (Recovered)
Seek Err. (Unrecovered)	The threshold of the Seek Error (Unrecovered)
Not Ready	The threshold of the Not Ready status.
Other Errors	The threshold of Other Errors.
Total Defect Count	The threshold of the Total Defect Count
Used Endurance Indicator	The threshold of the Used Endurance Indicator
Reboot Error	The threshold of the Reboot Error
DMA Error	The threshold of the DMA Error
Memory Error	The threshold of the Memory Error
Uncorrected Error	The threshold of the Uncorrected Error
Battery Error	The threshold of the Battery Error
FMD Battery Life Indicator	The threshold of the FMD Battery Life Indicator
Capacitor Error	The threshold of the Capacitor Error
PDEV	The mounting location of the PDEV (physical device) that is the target of Alter or error reset
Num. of PDEVs	The number of PDEVs (physical devices)

[Information] Threshold Value

Example 1: Changing the threshold

```

MPC,, [Information],Threshold Value,Alter,Normal end,
Seq.=xxxxxxxxxx
+Type=7days
+{Mechanical error(Recovered,Unrecd.),Media error(Recovered,
Unrecd.),Read/Write error(Recovered,Unrecd.),
Drive I/F error(Recovered,Unrecd.),
Controller hardware error(Recovered,Unrecd.),
Drive response late,SAS I/F error Port 0(Unrecd.),
SAS I/F error Port 1(Unrecd.),Port 0 error(Unrecd.),
Port 1 error(Unrecd.)}
={ (150,60), (0,15), (150,30), (150,6), (150,6), 0,6,6,12,12}
++PDEV=[HDD000-01,HDD000-02],Num. of PDEVs=2

```

Example 2: Error Reset

```
MPC, , [Information], Threshold Value, Error Reset, Normal end,  
Seq.=xxxxxxxxxx  
+PDEV=HDD000-01
```

Basic Information

Parameter	Description
Alter	Change the threshold of failed PDEV (physical device).
Error Reset	Indicates Error Reset.

Detailed Information

Item	Description
Type	The period of time to acquire the result of threshold diagnosis using the read diagnosis function. 7days: 7 days, Total: Every operating days
Mechanical error (Recovered, Unrecd.)	The threshold of the Mechanical error
Media error (Recovered, Unrecd.)	The threshold of the Media error
Read/Write error (Recovered, Unrecd.)	The threshold of the Read/Write error
Drive I/F error (Recovered, Unrecd.)	The threshold of the Drive I/F error
Controller hardware error (Recovered, Unrecd.)	The threshold of the Controller hardware error
Drive response late	The threshold of the Drive response late
SAS I/F error Port 0 (Unrecd.)	The threshold of the SAS I/F error Port 0
SAS I/F error Port 1 (Unrecd.)	The threshold of the SAS I/F error Port 1
Port 0 error (Unrecd.)	The threshold of the Port 0 error
Port 1 error (Unrecd.)	The threshold of the Port 1 error
PDEV	The mounting location of PDEV (physical device) that is the target of Alter or error reset

Item	Description
Num. of PDEVs	The number of PDEVs (physical devices)

Install Descriptions

[Install] All Config

Example

```
MPC,, [Install],All Config,,Normal end,Seq.=xxxxxxxxxx
+{New Ver.,Old Ver.}={xx-xx-xx/xx,xx-xx-xx/xx}
```

Detailed Information

Item	Description
New Ver.	The new version number.
Old Ver.	The old version number.

[Install] Backup Config

Example

```
MPC,, [Install],Backup Config,,Normal end,Seq.=xxxxxxxxxx
+Ver.=xx-xx-xx/xx
```

Detailed Information

Item	Description
Ver.	The version number of the configuration information to be backed up.

[Install] FlashDrive ORM Value

Example

```
MPC,, [Install],FlashDrive ORM Value,,Normal end,
Seq.=xxxxxxxxxx
+{Flash Drive Collective setting,Dynamic Sparing,Warning SIM}
={Valid,99,95}
+{FMD Battery Collective setting,Warning SIM}={Valid,95}
```

Detailed Information

Item	Description
Flash Drive Collective Setting	Indicates whether the flash drive collective setting information is valid or invalid Valid: Valid, Invalid: Invalid
Dynamic Sparing	The Dynamic Sparing threshold of flash drive
Warning SIM	The warning SIM threshold of flash drive
FMD Battery Collective setting	Indicates whether the FMD battery collective setting information is valid or invalid Valid: Valid, Invalid: Invalid
Warning SIM	The warning SIM threshold of FMD battery

[Install] Initialize ORM Value

Example

```
MPC,,[Install],Initialize ORM Value,,Normal end,Seq.=xxxxxxxxxx
```

[Install] Machine Install Date

Example

```
MPC,,[Install],Machine Install Date,,Normal end,Seq.=xxxxxxxxxx  
+Date=YYYY/MM/DD HH:mm
```

Detailed Information

Item	Description
Date	Indicates the date and the time of the setting in "YYYY/MM/DD HH:mm" format (YYYY: year, MM: month, DD: day, HH: hour, mm: minute).

[Install] NEW Installation

New Installation outputs operation logs in Example 1 and Example 2 when configuration information of the new version is installed by the Maintenance PC. However, the operation log in Example 2 is not output when operation is stopped before starting the installation process.

Example 1

```
MPC,,[Install],NEW Installation,,Normal end,Seq.=xxxxxxxxxx  
+{New Ver.}={xx-xx-xx/xx}
```

Detailed Information 1

Item	Description
New Ver.	New version number of the configuration information

Example 2

```
MPC,,[Install],NEW Installation,,Normal end,Seq.=xxxxxxxxxx  
+Mode=Auto Define Configuration
```

Detailed Information 2

Item	Description
Mode	Type of the installation

[Install] Remove

Example 1 (Removing the cache memory: VSP G200)

```
MPC,,[Install],Remove,,Normal end,Seq.=xxxxxxxxxx  
+{CTL,CMG0,CFM-1/2,Battery}  
=[{CTL1/2,4GB x 4,BM10,Basic}],Num. of CTLs=1  
+{CLPR,Cache size}=[{CLPR0,84992}],Num. of CLPRs=1
```

Example 2 (Removing the cache memory: VSP G400, G600, G800 and VSP F400, F600, F800)

```
MPC,,[Install],Remove,,Normal end,Seq.=xxxxxxxxxx  
+{CTL,CMG0,CMG1,CFM-10/20,CFM-11/21,Battery}  
=[{CTL1/2,8GB x 8,8GB x 8,BM20,BM20,Basic & Option}],Num. of CTLs=1  
+{CLPR,Cache size}=[{CLPR0,84992}],Num. of CLPRs=1
```

Detailed Information

Item	Description
CTL	Mounted location of the cache memory in PCB
CMG0	DIMM capacity of CMG0
CMG1	DIMM capacity of CMG1
CFM-1/2	Type of the cache flash memory of CFM-1/2
CFM-10/20	Type of the cache flash memory of CFM-10/20
CFM-11/21	Type of the cache flash memory of CFM-11/21
Battery	Mounted pattern of the battery Basic: Only Basic is mounted. Basic & Option: Both Basic and Option are mounted.
Num. of CTLs	Number of CTLs

Item	Description
CLPR	CLPR name
Cache size	Cache capacity allocated to CLPRs
Num. of CLPRs	Number of CLPRs

[Install] System Option

Example

```

MPC,,[Install],System Option,,Normal end,Seq.=xxxxxxxxxx
+Spare Disk Recover=Full Speed
+Disk Copy Pace=Slower
+Copy Operation(Correction Copy)=OFF
+Copy Operation(Dynamic Sparing)=OFF
+Link Failure Threshold=10
+{LDKC:CU:LDEV, Destage}=[{0x00:0x00:0x00, OFF}],
Num. of LDEVs=1
+{LPR, Cache Tuning}=[{System, Level5}], Num. of LPRs=1
+{LPR, Command Control}=[{System, 10}], Num. of LPRs=1
+{LPR, Mode, Set}=[{System, 0, ON}], Num. of Modes=1
+Debug Mode=Set

```

Detailed Information

Item	Description
Spare Disk Recover	Indicates the setting status of Spare Disk Recover. Interleave: Give priority to the access from the host while executing copy process, Full speed: Give priority to the copy process.
Disk Copy Pace	Indicates the setting status of Disk Copy Pace. Slower: Low speed, Medium: Medium speed, Faster: High speed
Copy Operation (Correction Copy)	Indicates the setting status of Copy Operation (Correction Copy). ON: Execute Correction Copy, OFF: Do not execute Correction Copy
Copy Operation (Dynamic Sparing)	Indicates the setting status of Copy Operation (Dynamic Sparing). ON: Execute Dynamic Sparing, OFF: Do not execute Dynamic Sparing
Link Failure Threshold	The threshold to report link failure
LDKC:CU: LDEV	The LDKC number, the CU number, and the LDEV number
Destage	Indicates the setting status of Destage. ON: Execute write through operation (report the completion of the writing to the host after the writing to the disk drive has completed). OFF: Do not execute write through operation (report the completion of the writing to the host when the data is written in the cache memory).
Num. of LDEVs	The number of LDEVs

Item	Description
LPR	The LPR name
Cache Tuning	The level of Cache Tuning
Num. of LPRs	The number of LPRs
Command Control	Command Control
Mode	The local mode number
Set	The setting status. ON: Set, Off: Release
Num. of Modes	The number of local modes.
Debug Mode	Setting executed from the debug window (Set: fix).
Note: Only the changed items will be output.	

[Install] System Tuning

Example

```
MPC,, [Install], System Tuning,, Normal end, Seq.=xxxxxxxxx
+Serial No.=400001
```

Detailed Information

Item	Description
Serial No.	Serial number of the storage system

Local Replication Descriptions

[Local Replication] Assign S-VOLs

Example

```
RMI AP, Task Name, [Local Replication], Assign S-VOLs,, Normal end,
Seq.=xxxxxxxxx
+Copy Type=TI
++{P-VOL(LDKC:CU:LDEV), S-VOL(LDKC:CU:LDEV), PoolID, MU,
Snapshot Group, Result}
={ {0xXX:0xAA:0xBB, 0xYY:0xCC:0xDD, 0, 1, SnapshotSet1, Normal end},
{0xXX:0xAA:0xBB, 0xYY:0xCC:0xDD, 0,, SnapshotSet2, Error(xxxx-yyyy)} },
Num. of Pairs=2
```

Detailed Information

Item	Description
Copy Type	The program product name for this operation TI: Thin Image
P-VOL (LDKC:CU:LDEV)	The LDKC number, the CU number and the LDEV number of the primary volume
S-VOL (LDKC:CU:LDEV)	The LDKC number, the CU number and the LDEV number of the assigned secondary volume No output if a secondary volume is not specified during the assigning operation.
PoolID	The pool ID of the assigned secondary volume
MU	The mirror unit number of the assigned secondary volume No output if a mirror unit number is not specified during the assigning operation.
Snapshot Group	The snapshot group name
Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end xxxx: Part code, yyyy: Error code
Num. of Pairs	The number of pairs to which secondary volumes are assigned

[Local Replication] Create Pairs

Example 1: Copy type is SI

```
RMI AP,Task Name,[Local Replication],Create Pairs,,Normal end,
Seq.=xxxxxxxxxx
+Copy Type=SI,Copy Pace=Faster,Split Type=Non Split
++{P-VOL(LDKC:CU:LDEV),S-VOL(LDKC:CU:LDEV),MU,Result}
=[{0xXX:0xAA:0xBB,0xYY:0xCC:0xDD,0,Normal end},
{0xX:0xAA:0xBB,0xY:0xCC:0xDD,1,Error(xxxx-yyyyy)}],
Num. of Pairs=2
```

Example 2: Copy type is TI

```
RMI AP,Task Name,[Local Replication],Create Pairs,,Normal end,
Seq.=xxxxxxxxxx
+Copy Type=TI
++{P-VOL(LDKC:CU:LDEV),S-VOL(LDKC:CU:LDEV),PoolID,MU,
Snapshot Group,Result}
=[{0xXX:0xAA:0xBB,0xYY:0xCC:0xDD,0,1,SnapshotSet1,Normal end},
{0xXX:0xAA:0xBB,0xYY:0xCC:0xDD,0,,SnapshotSet2,
Error(xxxx-yyyyy)}],
Num. of Pairs=2
```

Detailed Information

Item	Description
Copy Type	The program product name for this operation SI: ShadowImage, TI: Thin Image
Copy Pace	The copy speed Faster: High speed, Medium; Medium speed, Slower: Low speed This item is output only when the copy type is SI.
Split Type	The split type Non Split: Does not split the pair, Quick Split: Pair split by background copy, Steady Split: Pair split by update copy This item is output only when the copy type is SI.
P-VOL (LDKC:CU:LDEV)	The LDKC number, the CU number and the LDEV number of the primary volume in the created pair
S-VOL (LDKC:CU:LDEV)	The LDKC number, the CU number and the LDEV number of the secondary volume in the created pair No output if Copy Type is TI, and a secondary volume is not specified during the pair creation operation.
PoolID	The pool ID of the secondary volume of the created pair This item is output only when the copy type is TI.
MU	The mirror unit number of the created pair When Copy Type is TI, the value of this item is not output if a mirror unit number is not specified while creating the pair.
Snapshot Group	The snapshot group name This item is output only when the copy type is TI.
Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end xxxx: Part code, yyyy: Error code
Num. of Pairs	The number of created pairs

[Local Replication] Delete Pairs

Example 1: Copy type is SI

```
RMI AP,Task Name,[Local Replication],Delete Pairs,,Normal end,
Seq.=xxxxxxxxxx
+Copy Type=SI
++{P-VOL(LDKC:CU:LDEV),S-VOL(LDKC:CU:LDEV),Result}
=[{0xXX:0xAA:0xBB,0xYY:0xCC:0xDD,Normal end},
{0xX:0xAA:0xBB,0xYY:0xCC:0xDD,Error(xxxx-yyyyy)}],
Num. of Pairs=2
```

Example 2: Copy type is TI

```
RMI AP,Task Name,[Local Replication],Delete Pairs,,Normal end,
Seq.=xxxxxxxxxx
+Copy Type=TI
```

```

++{P-VOL(LDKC:CU:LDEV),S-VOL(LDKC:CU:LDEV),MU,Result}
=[{0xXX:0xAA:0xBB,0xYY:0xCC:0xDD,,Normal end},
{0xX:0xAA:0xBB,,1,Error(XXXX-YYYY)}],Num. of Pairs=2

```

Detailed Information

Item	Description
Copy Type	The program product name for this operation SI: ShadowImage, TI: Thin Image
P-VOL (LDKC:CU:LDEV)	The LDKC number, the CU number and the LDEV number of the primary volume in the deleted pair
S-VOL (LDKC:CU:LDEV)	The LDKC number, the CU number and the LDEV number of the secondary volume in the deleted pair No output if Copy Type is TI, and a secondary volume is not specified during the pair deletion operation.
MU	The mirror unit number of the deleted pair The index and value of this item are output only when Copy Type is TI. However, the value of this item is not output if a mirror unit is not specified during the pair deletion operation.
Result	The result of the operation Normal end: Normal end, Error(XXXX-YYYY): Abnormal end XXXX: Part code, YYYY: Error code
Num. of Pairs	The number of deleted pairs

[Local Replication] Edit Options

Example

```

RMI AP,Task Name,[Local Replication],Edit Options,,Normal end,
Seq.=xxxxxxxxxx
+Copy Type=SI
++Swap & Freeze=Enable,HOST I/O Performance=Enable,
Reserve03=Enable,(snip),Copy Pace Ext. Slower1=Disable,
Copy Pace Ext. Slower2=Disable,Copy Pace Ext.None=Disable,
(snip),Reserve32=Disable

```

Detailed Information

Item	Description
Copy Type	The program product name for this operation SI: ShadowImage
Swap & Freeze	Indicates whether the Swap & Freeze option is enabled or disabled. Enable: Enabled, Disable: Disabled
Host I/O Performance	Indicates whether the Host I/O Performance option is enabled or disabled. Enable: Enabled, Disable: Disabled

Item	Description
Copy Pace Ext. Slower1	Indicates whether the Copy Pace Ext. Slower1 option is enabled or disabled. Enable: Enabled, Disable: Disabled
Copy Pace Ext. Slower2	Indicates whether the Copy Pace Ext. Slower2 option is enabled or disabled. Enable: Enabled, Disable: Disabled
Copy Pace Ext. None	Indicates whether the Copy Pace Ext. None option is enabled or disabled. Enable: Enabled, Disable: Disabled
Reserve X	Reserved items If Copy Type is SI, X is the number, 03 to 19 and 23 to 32.

[Local Replication] Initialize

Example

```
RMI AP,Task Name,[Local Replication],Initialize,,Normal end,
Seq.=xxxxxxxxxx
```

[Local Replication] Remove S-VOLs

Example

```
RMI AP,Task Name,[Local Replication],Remove S-VOLs,,Normal end,
Seq.=xxxxxxxxxx
+Copy Type=TI
++{P-VOL(LDKC:CU:LDEV),S-VOL(LDKC:CU:LDEV),PoolID,MU,
Snapshot Group,Result}
=[{0xXX:0xAA:0xBB,0xYY:0xCC:0xDD,0,1,SnapshotSet1,Normal end},
{0xXX:0xAA:0xBB,0xYY:0xCC:0xDD,0,,SnapshotSet2,Error(xxxx-yyyy)}],
Num. of Pairs=2
```

Detailed Information

Item	Description
Copy Type	The program product name for this operation TI: Thin Image
P-VOL (LDKC:CU:LDEV)	The LDKC number, the CU number and the LDEV number of the primary volume No output if a primary volume is not specified during the secondary volume removal operation.
S-VOL (LDKC:CU:LDEV)	The LDKC number, the CU number and the LDEV number of the removed secondary volume No output if a secondary volume is not specified during the secondary volume removal operation.

Item	Description
PoolID	The pool ID of the removed secondary volume
MU	The mirror unit number of the removed secondary volume No output if a mirror unit is not specified during the secondary volume removal operation.
Snapshot Group	The snapshot group name
Result	The result of the operation Normal end: Normal end, Error(XXXX-YYYYY): Abnormal end XXXX: Part code, YYYYY: Error code
Num. of Pairs	The number of pairs whose secondary volumes are removed

[Local Replication] Resync Pairs

Example 1: Copy type is SI

```
RMI AP,Task Name,[Local Replication],Resync Pairs,,Normal end,
Seq.=XXXXXXXXXX
+Copy Type=SI,Copy Pace=Medium,Resync Type=Normal Copy
++{P-VOL(LDKC:CU:LDEV),S-VOL(LDKC:CU:LDEV),Result}
=[{0XX:0AA:0BB,0YY:0CC:0DD,Normal end},
{0X:0AA:0BB,0Y:0CC:0DD,Error(XXXX-YYYY)}],
Num. of Pairs=2
```

Example 2: Copy type is TI

```
RMI AP,Task Name,[Local Replication],Resync Pairs,,Normal end,
Seq.=XXXXXXXXXX
+Copy Type=TI,Resync Type=Reverse Copy
++{P-VOL(LDKC:CU:LDEV),S-VOL(LDKC:CU:LDEV),MU,Result}
=[{0XX:0AA:0BB,0YY:0CC:0DD,,Normal end},
{0X:0AA:0BB,,1,Error(XXXX-YYYY)}],Num. of Pairs=2
```

Detailed Information

Item	Description
Copy Type	The program product name for this operation SI: ShadowImage, TI: Thin Image
Copy Pace	The copy speed Faster: High speed, Medium; Medium speed, Slower: Low speed This item is output only when the copy type is SI.
Resync Type	The resynchronization type Normal Copy: Normal resynchronization, Quick Resync: High speed resynchronization, Reverse Copy: Reverse resynchronization, Quick Restore: High speed restore
P-VOL (LDKC:CU:LDEV)	The LDKC number, the CU number and the LDEV number of the primary volume in the resynchronized pair

Item	Description
S-VOL (LDKC:CU:LDEV)	The LDKC number, the CU number and the LDEV number of the secondary volume in the resynchronized pair When Copy Type is TI, the values of the secondary volume are not output if the value of MU is output.
MU	The mirror unit number of the resynchronized pair The index and value of this item are output only when Copy Type is TI. However, the value of this item is not output if those of the secondary volume are output.
Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end xxxx: Part code, yyyy: Error code
Num. of Pairs	The number of resynchronized pairs

[Local Replication] Split Pairs

Example 1: Copy type is SI

```
RMI AP,Task Name,[Local Replication],Split Pairs,,Normal end,
Seq.=xxxxxxxxxx
+Copy Type=SI,Copy Pace=Faster,Split Type=Steady Split
++{P-VOL(LDKC:CU:LDEV),S-VOL(LDKC:CU:LDEV),Result}
=[{0xXX:0xAA:0xBB,0xYY:0xCC:0xDD,Normal end},
{0xX:0xAA:0xBB,0xY:0xCC:0xDD,Error(xxxx-yyyyy)}],
Num. of Pairs=2
```

Example 2: Copy type is TI

```
RMI AP,Task Name,[Local Replication],Split Pairs,,Normal end,
Seq.=xxxxxxxxxx
+Copy Type=TI
++{P-VOL(LDKC:CU:LDEV),S-VOL(LDKC:CU:LDEV),MU,Result}
=[{0xXX:0xAA:0xBB,0xYY:0xCC:0xDD,,Normal end},
{0xXX:0xAA:0xBB,,1,Error(xxxx-yyyyy)}],Num. of Pairs=2
```

Detailed Information

Item	Description
Copy Type	The program product name for this operation SI: ShadowImage, TI: Thin Image
Copy Pace	The copy speed Faster: High speed, Medium; Medium speed, Slower: Low speed This item is output only when the copy type is SI.
Split Type	The split type Quick Split: Pair split by background copy, Steady Split: Pair split by update copy This item is output only when the copy type is SI.

Item	Description
P-VOL (LDKC:CU:LDEV)	The LDKC number, the CU number and the LDEV number of the primary volume in the split pair
S-VOL (LDKC:CU:LDEV)	The LDKC number, the CU number and the LDEV number of the secondary volume in the split pair No output if Copy Type is TI, and a secondary volume is not specified during the pair splitting operation.
MU	The mirror unit number of the split pair The index and value of this item are output only when Copy Type is TI. However, the value of this item is not output if a mirror unit is not specified during the pair splitting operation.
Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end xxxx: Part code, yyyy: Error code
Num. of Pairs	The number of split pairs

[Local Replication] Suspend Pairs

Example

```
RMI AP,Task Name,[Local Replication],Suspend Pairs,,Normal end,
Seq.=xxxxxxxxxx
+Copy Type=SI
++{P-VOL(LDKC:CU:LDEV),S-VOL(LDKC:CU:LDEV),Result}
=[{0xXX:0xAA:0xBB,0xYY:0xCC:0xDD,Normal end},
{0xX:0xAA:0xBB,0xY:0xCC:0xDD,Error(xxxx-yyyyy)}],
Num. of Pairs=2
```

Detailed Information

Item	Description
Copy Type	The program product name for this operation SI: ShadowImage
P-VOL (LDKC:CU:LDEV)	The LDKC number, the CU number and the LDEV number of the primary volume in the suspended pair
S-VOL (LDKC:CU:LDEV)	The LDKC number, the CU number and the LDEV number of the secondary volume in the suspended pair
Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end xxxx: Part code, yyyy: Error code
Num. of Pairs	The number of suspended pairs

Maintenance Descriptions

[Maintenance] Block

Example 1: Blocking CTLs, ENC or CFMs when replacing

```
GUM,,[Maintenance],Block,,Normal end,Seq.=xxxxxxxxxx  
+Location=xxx,Forcibly run without safety checks=Enable
```

Detailed Information 1

Item	Description
Location	The mounted position of the CTL, ENC or CFM (CTLx, ENCxx-xx or CFM-xx) to be blocked. When replacing a FAN or CM, the mounting position of the CTL on which the FAN or CM is mounted is output to block the CTL.
Forcibly run without safety checks	Indicates whether the forcible replacement function without safety checks is enabled or disabled. However, a hyphen (-) is output except when a user with the Support Personnel role operates from the MPC.

Example 2: Blocking of BKMfFs or BKMfFs when replacing

```
GUM,,[Maintenance],Block,,Normal end,Seq.=xxxxxxxxxx  
+Location=xxx,Forcibly run without safety checks=Enable
```

Detailed Information 2

Item	Description
Location	The mounted position of the BKMfF* or BKMfF* (BKMfF-xx or BKMfF-x) to be blocked
Forcibly run without safety checks	Indicates whether the forcible replacement function without safety checks is enabled or disabled. However, a hyphen (-) is output except when a user with the Support Personnel role operates from the MPC.
* BKMfF is the part name of VSP G400, G600, G800 and VSP F400, F600, F800. BKM is the part name of VSP G200.	

Example 3: Blocking CHBs or DKBs when replacing

```
GUM,,[Maintenance],Block,,Normal end,Seq.=xxxxxxxxxx  
+Location=xxxxxxx,Forcibly block=Disable,Type=xxxxxxx,  
Forcibly run without safety checks=Enable
```

Detailed Information 3

Item	Description
Location	Mounted position of the CHB or DKB to be blocked (CHB-xx or DKB-xx)
Forcibly block	Indicates whether the function to forcibly block the CHB or DKB is enabled or disabled*
Type	Type of the part of the CHB or DKB to be blocked
Forcibly run without safety checks	Indicates whether the forcible replacement function without safety checks is enabled or disabled*
* A hyphen (-) is output except when a user with the Support Personnel role operates from the MPC.	

Example 4: Blocking PECBs, SWPKs, or PCPs when replacing

```
GUM, , [Maintenance], Block, , Normal end, Seq.=xxxxxxxxxx
+Location=xxx, Forcibly block=Disable,
Forcibly run without safety checks=Enable
```

Detailed Information 4

Item	Description
Location	Mounted position of the PECB, SWPK, or PCP to be blocked (PECB-xx, SWPKx, or PCPx)
Forcibly block	Indicates whether the function to forcibly block the PECB, SWPK, or PCP is enabled or disabled*
Forcibly run without safety checks	Indicates whether the forcible replacement function without safety checks is enabled or disabled*
* A hyphen (-) is output except when a user with the Support Personnel role operates from the MPC.	

Example 5: Blocking drives when replacing

```
GUM, , [Maintenance], Block, , Normal end, Seq.=xxxxxxxxxx
+Location=xxx, Spare Copy=ON,
Forcibly run without safety checks=Enable,
Forcibly restore the drive after replaced=Enable,
Skip DKU Inline=Enable, Skip firmware update of HDD=Disable
```

Detailed Information 5

Item	Description
Location	Mounted position of the drive (HDDxx-xx) to be blocked
Spare Copy	Whether data is evacuated to a spare drive when replacing the drive

Item	Description
Forcibly run without safety checks	Indicates whether the forcible replacement function without safety checks is enabled or disabled*
Forcibly restore the drive after replaced	Indicates whether the function to forcibly restore drives after they are replaced is enabled or disabled*
Skip DKU Inline	Indicates whether the function to skip DKU Inline is enabled or disabled*
Skip firmware update of HDD	Indicates whether the function to skip the drive firmware update is enabled or disabled*
* A hyphen (-) is output except when a user with the Support Personnel role operates from the MPC.	

[Maintenance] Block(Type Change)

Example 1: Blocking DKBs along with DKB type change when replacing

```
GUM,,[Maintenance],Block(Type Change),,Normal end,Seq.=xxxxxxxxxx
+Location=xxx,Forcibly block=Disable,Type=xxxxxx,
Forcibly run without safety checks=Enable
```

Detailed Information 1

Item	Description
Location	Mounted position of the DKB (DKB-xx) to be blocked
Forcibly block	Indicates whether the function to forcibly block the DKB is enabled or disabled*
Type	Type of the part of the DKB to be blocked
Forcibly run without safety checks	Indicates whether the function to forcibly change the type without safety checks is enabled or disabled*
* A hyphen (-) is output except when a user with the Support Personnel role operates from the MPC.	

Example 2: Block along with CM type change when replacing

```
GUM,,[Maintenance],Block(Type Change),,Normal end,Seq.=xxxxxxxxxx
+Cache Size=xxxxxxxx,Forcibly run without safety checks=Enable
```

Detailed Information 2

Item	Description
Cache Size	Cache size of the blocked cache memory

Item	Description
Forcibly run without safety checks	Indicates whether the function to forcibly change the type without safety checks is enabled or disabled. However, a hyphen (-) is output except when a user with the Support Personnel role operates from the MPC.

[Maintenance] Blockade

Example

```
MPC,,[Maintenance],Blockade,,Normal end,Seq.=xxxxxxxxxx
+PCB=[CHB-1A],Num. of PCBs=1
```

Detailed Information

Item	Description
PCB	Mounted position of the PCB (CHB, DKB or CTL) to be blocked
Num. of PCBs	Number of the PCBs to be blocked

[Maintenance] Boot System SafeMode

Example

```
GUM,,[Maintenance],Boot System SafeMode,,Normal end,Seq.=xxxxxxxxxx
```

[Maintenance] Change SFP Type

Example

```
GUM,,[Maintenance],Change SFP Type,,Normal end,Seq.=xxxxxxxxxx
```

[Maintenance] Check Remove

Example

```
GUM,,[Maintenance],Check Remove,,Normal end,Seq.=xxxxxxxxxx
+Drives=[HDDxx-xx,HDDxx-xx,HDDxx-xx],Num of Drives=3
```

Detailed Information

Item	Description
Drives	The mounting position of the drive the removal of which is checked.
Num of Drives	The number of drives the removal of which is checked.

[Maintenance] Correction Copy

Example

```
MPC,, [Maintenance],Correction Copy,,Normal end,Seq.=xxxxxxxxxx  
+PDEV=HDD00-00
```

Detailed Information

Item	Description
PDEV	The mounting location of the PDEV (physical device)

[Maintenance] Create User

Example

```
GUM,, [Maintenance],Create User,,Normal end,Seq.=xxxxxxxxxx  
+User Name=xxxx,User Groups=[xxx,xxx,xxx],Account Status=Disable,  
Authentication=Local
```

Detailed Information

Item	Description
User Name	The name of a created user.
User Groups	The name of the user group to which the user belongs.
Account Status	Indicates whether the user account is enabled or disabled. Enable: The user account is enabled. Disable: The user account is disabled.
Authentication	Indicates the authentication method. Local: Authentication by a local account in the storage system, External: External authentication

[Maintenance] Delete Users

Example

```
GUM,, [Maintenance],Delete Users,,Normal end,Seq.=xxxxxxxxxx  
+User=[xxx,xxx,xxx],Num of Users=3
```

Detailed Information

Item	Description
User	The name of a deleted user.
Num of Users	The number of deleted users.

[Maintenance] Disable Licenses

Example

```
GUM,,[Maintenance],Disable Licenses,,Normal end,Seq.=xxxxxxxxxx  
+{Program Product Name,Enable}=  
[{xxx,Disable},{xxx,Disable}],Num of Licenses=2
```

Detailed Information

Item	Description
Program Product Name	The name of the target program product
Enable	Indicates whether the license of the program product is enabled or disabled. Enable: The license is enabled. Disable: The license is disabled.
Num of Licenses	The number of target program products

[Maintenance] Edit Login Message

Example

```
GUM,,[Maintenance],Edit Login Message,,Normal end,Seq.=xxxxxxxxxx  
+Login Message=Enable
```

Detailed Information

Item	Description
Login Message	Indicates the display status of the login message Enable: The login message is displayed. Disable: The login message is not displayed.

[Maintenance] Edit ReplacingNotice

Example

```
GUM,,[Maintenance],Edit ReplacingNotice,,Normal end,Seq.=xxxxxxxxxx  
+Replacing Notice for Air Filter=xxx
```

Detailed Information

Item	Description
Replacing Notice for Air Filter	Indicates whether the replacing notice for the air filter is enabled or disabled Enable: Replacing notice is enabled.

Item	Description
	Disable: Replacing notice is disabled.

[Maintenance] Edit System Param

Example

```
GUM,,[Maintenance],Edit System Param,,Normal end,Seq.=xxxxxxxxxx
+Auto Define Configuration Mode=Disable,
A jumper used for initial installation (CEMD)=Enable,
A jumper used for a storage system boot for initial IP address
settings (CEDT)=Disable,
A jumper used for cache memory volatilization (VOJP)=Disable
```

Detailed Information

Item	Description
Auto Define Configuration Mode	Indicates whether the ADC (auto define configuration) mode is enabled or disabled Enable: ADC mode is enabled. Disable: ADC mode is disabled.
A jumper used for initial installation (CEMD)	Indicates whether CEMD (jumper settings for the initial installation) is enable or disabled Enable: CEMD is enabled. Disable: CEMD is disabled.
A jumper used for a storage system boot for initial IP address settings (CEDT)	Indicates whether CEDT (jumper settings for booting the storage system in the initial IP address setting) is enabled or disabled Enable: CEDT is enabled. Disable: CEDT is disabled.
A jumper used for cache memory volatilization (VOJP)	Indicates whether VOJP (jumper settings for volatilizing cache memory) is enabled or disabled Enable: VOJP is enabled. Disable: VOJP is disabled.

[Maintenance] Edit UPS Mode

Example

```
GUM,,[Maintenance],Edit UPS Mode,,Normal end,Seq.=xxxxxxxxxx
+UPS Mode=xxxxx
```

Detailed Information

Item	Description
UPS Mode	The UPS mode that is set.

Item	Description
	Standard Mode: Standard mode UPS Interlock Mode 1: UPS interlocking mode 1 UPS Interlock Mode 2: UPS interlocking mode 2 UPS Interlock Mode 3: UPS interlocking mode 3

[Maintenance] Edit User

Example

```
GUM,, [Maintenance], Edit User,, Normal end, Seq.=xxxxxxxxxx
+User Name=xxx, User Groups=[xxx,xxx,xxx], Account Status=Disable,
Authentication=Local
```

Detailed Information

Item	Description
User Name	The user name for settings.
User Groups	The group name to which the user belongs.
Account Status	Indicates whether the user account is enabled or disabled. Enable: User account is enabled. Disable: User account is disabled.
Authentication	The authentication method. Local: Authentication by a local account in the storage system, External: External authentication

[Maintenance] Enable Licenses

Example

```
GUM,, [Maintenance], Enable Licenses,, Normal end, Seq.=xxxxxxxxxx
+{Program Product Name, Enable}
=[{xxx, Enable}, {xxx, Enable}], Num of Licenses=2
```

Detailed Information

Item	Description
Program Product Name	The name of the target program product
Enable	Indicates whether the license of the program product is enabled or disabled. Enable: The license is enabled. Disable: The license is disabled.
Num of Licenses	The number of target program products

[Maintenance] Export Audit Logs

Example

```
GUM,, [Maintenance],Export Audit Logs,,Normal end,Seq.=xxxxxxxxxx
```

[Maintenance] Force Rls SysLock

Example

```
GUM,, [Maintenance],Force Rls SysLock,,Normal end,Seq.=xxxxxxxxxx
```

[Maintenance] Install

Example 1: Installing SMs

```
GUM,, [Maintenance],Install,,Normal end,Seq.=xxxxxxxxxx  
+Shared Memory Function=[xxxxxxxxxx,xxxxxxxxxx]
```

Detailed Information 1

Item	Description
Shared Memory Function	Names of the shared memories (all the mounted shared memories including installed shared memories)

Example 2: Installing CHBs or DKBs

```
GUM,, [Maintenance],Install,,Normal end,Seq.=xxxxxxxxxx  
+Location=[xxx,xxx],Type=xxxx,  
Forcibly run without safety checks=Enable
```

Detailed Information 2

Item	Description
Location	Mounted position of the installed CHB or DKB (CHB-xx or DKB-xx)
Type	Type of the part of the installed CHB or DKB
Forcibly run without safety checks	Indicates whether the forcible installation function without safety checks is enabled or disabled. However, a hyphen (-) is output except when a user with the Support Personnel role operates from the MPC.

Example 3: Installing channel board boxes

```
GUM,, [Maintenance],Install,,Normal end,Seq.=xxxxxxxxxx  
+Module Type=Channel Board Box,Location=[PECB-xx,PECB-xx],  
Num of PECBs=2,Expansion Mode=1:4,  
Forcibly run without safety checks=Enable
```

Detailed Information 3

Item	Description
Module Type	Type of the installed module Outputs Channel Board Box as a fixed parameter.
Location	Mounted position of the installed PECB (PECB-xx)
Num of PECBs	The number of the installed PECBs
Expansion Mode	The expansion mode (1:2 or 1:4)
Forcibly run without safety checks	Indicates whether the forcible installation function without safety checks is enabled or disabled. However, a hyphen (-) is output except when a user with the Support Personnel role operates from the MPC.

Example 4: Installing drive boxes

```
GUM,,[Maintenance],Install,,Normal end,Seq.=xxxxxxxxxx  
+{Location,Type}=[{DB-xx,xxx},{DB-xx,xxx},{DB-xx,xxx}],  
Num of Drive Boxes=3,  
Forcibly run without safety checks=Enable
```

Detailed Information 4

Item	Description
Location	Mounted position of the installed drive box (DB-xx)
Type	Type of the part of the installed drive box
Num of Drive Boxes	Number of the installed drive boxes
Forcibly run without safety checks	Indicates whether the forcible installation function without safety checks is enabled or disabled. However, a hyphen (-) is output except when a user with the Support Personnel role operates from the MPC.

Example 5: Installing drives

```
GUM,,[Maintenance],Install,,Normal end,Seq.=xxxxxxxxxx  
+Drives=[HDDxx-xx,HDDxx-xx,HDDxx-xx],Num of Drives=3,  
Forcibly run without safety checks=Enable
```

Detailed Information 5

Item	Description
Drives	Mounted position of the installed drive
Num of Drives	Number of the installed drives
Forcibly run without safety checks	Indicates whether the forcible installation function without safety checks is enabled or disabled.

Item	Description
	However, a hyphen (-) is output except when a user with the Support Personnel role operates from the MPC.

[Maintenance] License Key Install

Example 1: Specifying a key code

```
GUM,, [Maintenance], License Key Install,, Normal end,, Seq.=xxxxxxxxx
+License Key Code=xxx
```

Detailed Information 1

Item	Description
License Key Code	The license key code entered when installing a program product.

Example 2: Specifying a license key file

```
GUM,, [Maintenance], License Key Install,, Normal end,, Seq.=xxxxxxxxx
+License Key File=xxx
```

Detailed Information 2

Item	Description
License Key File	The license key file name entered when installing program products.

[Maintenance] License Key Remove

Example

```
GUM,, [Maintenance], License Key Remove,, Normal end,, Seq.=xxxxxxxxx
+Program Product Name=[xxxx,xxx,xxx], Num of License Keys=3
```

Detailed Information

Item	Description
Program Product Name	The name of the uninstalled program product.
Num of License Keys	The number of uninstalled license keys.

[Maintenance] MP Restore

Example

```
MPC,, [Maintenance],MP Restore,,Normal end,Seq.=xxxxxxxxxx  
+MP=[MP08-2MC],Num. of MPs=1
```

Detailed Information

Item	Description
MP	The identity of the microprocessor
Num. of MPs	The number of microprocessors that were restored

[Maintenance] Power Off Storage

Example

```
GUM,, [Maintenance],Power Off Storage,,Normal end,Seq.=xxxxxxxxxx  
+PS Control=OFF
```

Detailed Information

Item	Description
PS Control	The storage system is powered off.

[Maintenance] Power On Storage

Example

```
GUM,, [Maintenance],Power On Storage,,Normal end,Seq.=xxxxxxxxxx  
+PS Control=ON
```

Detailed Information

Item	Description
PS Control	The storage system is powered on.

[Maintenance] Reboot GUM

Example

```
GUM,, [Maintenance],Reboot GUM,,Normal end,Seq.=xxxxxxxxxx  
+Forcibly run without safety checks=ON
```

Detailed Information

Item	Description
Forcibly run without safety checks	Indicates whether the setting for forcibly rebooting a GUM without safety checks is applied. However, a hyphen (-) is output except when a user with the Support Personnel role operates from the MPC.

[Maintenance] Remove

Example 1: Removing SMs

```
GUM,,[Maintenance],Remove,,Normal end,Seq.=xxxxxxxxxx  
+Shared Memory Function=[xxxxxxxxx,xxxxxxxxx]
```

Detailed Information 1

Item	Description
Shared Memory Function	Names of the shared memories (all the mounted shared memories including removed shared memories)

Example 2: Removing CHBs or DKBs

```
GUM,,[Maintenance],Remove,,Normal end,Seq.=xxxxxxxxxx  
+Location=[xxx,xxx],Type=xxxx,  
Forcibly run without safety checks=Enable,Forcibly block=Enable
```

Detailed Information 2

Item	Description
Location	Mounted position of the removed CHB or DKB (CHB-xx or DKB-xx)
Type	Type of the part of the removed CHB or DKB
Forcibly run without safety checks	Indicates whether the forcible removal function without safety checks is enabled or disabled.*
Forcibly block	Indicates whether the function to forcibly block the CHB or DKB is enabled or disabled.*
* A hyphen (-) is output except when a user with the Support Personnel role operates from the MPC.	

Example 3: Removing channel board boxes

```
GUM,,[Maintenance],Remove,,Normal end,Seq.=xxxxxxxxxx  
Module Type=Channel Board Box,Location=[PECB-xx,PECB-xx],  
Num of PECBs=2,Forcibly run without safety checks=Enable
```

Detailed Information 3

Item	Description
Module Type	Type of the removed module Outputs Channel Board Box as a fixed parameter
Location	Mounted position of the removed PECB (PECB-xx)
Num of PECBs	The number of the removed PECBs
Forcibly run without safety checks	Indicates whether the forcible removal function without safety checks is enabled or disabled. However, a hyphen (-) is output except when a user with the Support Personnel role operates from the MPC.

Example 4: Removing drive boxes

```
GUM, , [Maintenance], Remove, , Normal end, Seq.=xxxxxxxxxx  
+{Location,Type}=[{DB-xx, xxx},{DB-xx, xxx},{DB-xx, xxx}],  
Num of Drive Boxes=3
```

Detailed Information 4

Item	Description
Location	Mounted position of the removed Drive Box (DB-xx)
Type	Type of the part of the removed drive box
Num of Drive Boxes	Number of the removed drive boxes

Example 5: Removing drives

```
GUM, , [Maintenance], Remove, , Normal end, Seq.=xxxxxxxxxx  
+Drives=[HDDxx-xx,HDDxx-xx,HDDxx-xx],Num of Drives=3,  
Forcibly run without safety checks=Enable
```

Detailed Information 5

Item	Description
Drives	Mounted position of the removed drive
Num of Drives	Number of the removed drives
Forcibly run without safety checks	Indicates whether the forcible removal function without safety checks is enabled or disabled. However, a hyphen (-) is output except when a user with the Support Personnel role operates from the MPC.

[Maintenance] Reset DurationOfUse

Example

```
GUM,, [Maintenance],Reset DurationOfUse,,Normal end,Seq.=xxxxxxxxxx
```

[Maintenance] Reset HUB

Example

```
GUM,, [Maintenance],Reset HUB,,Normal end,Seq.=xxxxxxxxxx
```

[Maintenance] Restore

Example 1: Restoring PCBs

```
MPC,, [Maintenance],Restore,,Normal end,Seq.=xxxxxxxxxx  
+PCB=[CHB-1A],Num. of PCBs=1
```

Detailed Information 1

Item	Description
PCB	The mounted position of the PCB to be restored (CHB, DKB or CTL).
Num. of PCBs	The number of the PCBs to be restored.

Example 2: Restoring CTL, ENC or CFM when replacing

```
GUM,, [Maintenance],Restore,,Normal end,Seq.=xxxxxxxxxx  
+Location=xxx
```

Detailed Information 2

Item	Description
Location	The mounted position of the CTL, ENC or CFM (CTLx, ENCxx-xx or CFM-xx) to be restored. When replacing a FAN or Cache Memory, the mounting position of the CTL on which the FAN or Cache Memory is mounted is output to restore the CTL.

Example 3: Restoring cache memories when replacing

```
GUM,, [Maintenance],Restore,,Normal end,Seq.=xxxxxxxxxx  
+Cache Size=xxxxxxxx,CFM Type for CFM10/20=xxx,  
CFM Type for CFM11/21=xxx
```

Detailed Information 3

Item	Description
Cache Size	The cache size of the restored cache memory.
CFM Type for CFM10/20	The part type of the added CFM-10/20. A hyphen (-) is displayed if CFM-10/20 is not replaced or mounted.
CFM Type for CFM11/21	The part type of the added CFM-11/21. A hyphen (-) is displayed if CFM-11/21 is not replaced or mounted.

Example 4: Restoring CHBs or DKBs when replacing

```
GUM, , [Maintenance], Restore, , Normal end, Seq.=xxxxxxxxxx  
+Location=xxx, Type=xxxxxx
```

Detailed Information 4

Item	Description
Location	The mounting position of the CHB or DKB to be restored (CHB-xx or DKB-xx).
Type	The part type of the CHB or DKB to be restored.

Example 5: Restoring PECBs, SWPKs, or PCPs when replacing

```
GUM, , [Maintenance], Restore, , Normal end, Seq.=xxxxxxxxxx  
+Location=xxx
```

Detailed Information 5

Item	Description
Location	The mounting position of the PECB, SWPK, or PCP to be restored (PECB-xx, SWPKx, or PCPx).

[Maintenance] Restore(Type Change)

Example 1: Restoring DKBs along with DKB type change when replacing

```
GUM, , [Maintenance], Restore(Type Change), , Normal end, Seq.=xxxxxxxxxx  
+Location=xxx, Type=xxxxxx
```

Detailed Information 1

Item	Description
Location	The mounting position of the DKB to be restored (DKB-xx).
Type	The part type of the DKB to be restored.

Example 2: Restoring CMs along with CM type change when replacing

```
GUM,, [Maintenance], Restore (Type Change),, Normal end, Seq.=xxxxxxxxxx  
+Cache Size=xxxxxxxx, CFM Type for CFM10/20=xxx,  
CFM Type for CFM11/21=xxx
```

Detailed Information 2

Item	Description
Cache Size	The cache size of the cache memory to be restored.
CFM Type for CFM10/20	The part type of the CFM-10/20 to be added. A hyphen (-) is displayed if CFM-10/20 is not replaced or mounted.
CFM Type for CFM11/21	The part type of the CFM-11/21 to be added. A hyphen (-) is displayed if CFM-11/21 is not replaced or mounted.

[Maintenance] Restore Data

Example

```
MPC,, [Maintenance], Restore Data,, Normal end, Seq.=xxxxxxxxxx  
+PDEV=HDD00-00
```

Detailed Information

Item	Description
PDEV	The mounting location of the PDEV

[Maintenance] Select Cipher Suite

Example

```
GUM,, [Maintenance], Select Cipher Suite,, Normal end, Seq.=xxxxxxxxxx  
+Cipher Suite=xxxx
```

Detailed Information

Item	Description
Cipher Suite	The name of the encryption suite used for the specified communication.

[Maintenance] Set Up Alert

Example 1: SNMP v1 or SNMP v2c

```
GUM,, [Maintenance], Set Up Alert,, Normal end, Seq.=xxxxxxxxxx  
+Notification Alert=Host Report, Email Notice=Enable,
```

```

{Attribute,Email Address}
=[{To,aaa@example.com},{Cc,bbb@example.com}],
Email Address (From)=yyy@example.com,
Email Address (Reply To)=zzz@example.com,
Description to Notify=XXXXXXXXXXXX,Mail Server Type=IPv4,
Mail Server Name=XXXXXXXXXX,SMTP Authentication=Enable,
SMTP Authentication Account=XXXX,
Syslog Transfer Protocol=TLS1.2/RFC5452,
{Syslog Server,Server Enable,Type,Name,Port Number,
Client Certificate File Name,Root Certificate File Name,
Location Identification Name,Retry,Retry Interval}
=[{Primary,Enable,IPv4,xxxxx,65535,YYYYY,ZZZZ,ZZZZ,Disable,555},
{Secondary,Enable,IPv4,xxxxx,65535,YYYYY,ZZZZ,ZZZZ,Disable,555}],
SNMP Agent=Enable,SNMP Version=v1
+Send Trap to Community Name=AAA
++IP Address=[192.168.0.1,192.168.0.2]
+Send Trap to Community Name=BBB
++IP Address=[192.168.1.1,192.168.1.2]
+Request Authentication Setting Community Name=AAA
++Requests Permitted IP Address=[192.168.0.10,192.168.0.12]
+Request Authentication Setting Community Name=BBB
++Requests Permitted IP Address=[192.168.1.10,192.168.1.12],
Storage System Name=xxx>Contact=xxx,Location=xxx

```

Detailed Information 1

Item	Description
Notification Alert	The destination of the alert. All: All the hosts, Host Report: Only the hosts to which SIMs are set to be reported
Email Notice	Indicates whether notification by email is enabled. Enable: The notification is enabled. Disable: The notification is disabled.
Attribute	The attribute (To, Cc or Bcc) of the destination email address.
Email Address	The destination email addresses. A hyphen (-) is displayed if notification by email is disabled.
Email Address (From)	The sender email address. A hyphen (-) is displayed if notification by email is disabled.
Email Address (Reply To)	The email address to reply. A hyphen (-) is displayed if notification by email is disabled.
Description to Notify	The additional information at the top of the body of the error notification message by email. A hyphen (-) is displayed if notification by email is disabled or the Description to Notify is not set.
Mail Server Type	The type of Mail Server Name (Identifier, IPv4 or IPv6).
Mail Server Name	The host name or the IP address of the mail server.
SMTP Authentication	Indicates whether the SMTP authentication is enabled. Enable: The authentication is enabled.

Item	Description
	Disable: The authentication is disabled.
SMTP Authentication Account	The SMTP authentication account. A hyphen (-) is displayed if the SMTP authentication is disabled.
Syslog Transfer Protocol	The type of the syslog transfer protocol (TLS1.2/RFC5424 or UDP/RFC3164).
Syslog Server	The syslog server to be set. Primary: Primary syslog server, Secondary: Secondary syslog server
Server Enable	Indicates whether the syslog server is enabled. Enable: The syslog server is enabled. Disable: The syslog server is disabled.
Type	The type of the IP address of the syslog server (IPv4 or IPv6). A hyphen (-) is displayed if the syslog server is disabled.
Name	The IP address of the syslog server to which SIMs are sent. A hyphen (-) is displayed if the syslog server is disabled.
Port Number	The port number used to communicate with the syslog server. A hyphen (-) is displayed if the syslog server is disabled.
Client Certificate File Name	The name of the client certificate file. A hyphen (-) is displayed, if the syslog servers is disabled or if UDP/RFC3164 is used as a transfer protocol.
Root Certificate File Name	The name of the root certificate file. A hyphen (-) is displayed, if the syslog servers is disabled or if UDP/RFC3164 is used as a transfer protocol.
Location Identification Name	The location identification name entered during the setting operation.
Retry	Indicates whether to retry if transferring to syslog servers failed. Enable: Transfer is retried. Disable: Transfer is not retried. A hyphen (-) is displayed if UDP/RFC3164 is used as a transfer protocol.
Retry Interval	The interval of the retries of transferring. A hyphen (-) is displayed, if the setting of the retry is disabled or if UDP/RFC3164 is used as a transfer protocol.
SNMP Agent	The setting status of the SNMP agent. Enable: SNMP trap is notified. Disable: SNMP trap is not notified.
SNMP Version	The SNMP protocol version
Send Trap to Community Name	The community name to which SNMP traps are sent. A hyphen (-) is displayed if the SNMP trap is not notified.

Item	Description
IP Address	The IP address added to the community to which SNMP traps are sent. A hyphen (-) is displayed if the SNMP trap is not notified.
Request Authentication Setting Community Name	The community name added to the request authentication setting. A hyphen (-) is displayed if this item is not set in the request authentication setting.
Requests Permitted IP Address	The IP address added to the community to permit requests. A hyphen (-) is displayed if this item is not set in the request authentication setting.
Storage System Name	The storage system name entered during the setting operation. A hyphen (-) is displayed if the SNMP trap is not notified.
Contact	The contact information entered during the setting operation. A hyphen (-) is displayed if the SNMP trap is not notified.
Location	The installation location of the storage system entered during the setting operation. A hyphen (-) is displayed if the SNMP trap is not notified.

Example 2: SNMP v3

```
GUM,, [Maintenance], Set Up Alert,, Normal end, Seq.=xxxxxxxxx
+Notification Alert=Host Report, Email Notice=Enable,
{Attribute, Email Address}
=[{To, aaa@example.com}, {Cc, bbb@example.com}],
Email Address (From)=yyy@example.com,
Email Address (Reply To)=zzz@example.com,
Description to Notify=XXXXXXXXXXXX, Mail Server Type=IPv4,
Mail Server Name=XXXXXXXXXX, SMTP Authentication=Enable,
SMTP Authentication Account=XXXX,
Syslog Transfer Protocol=TLS1.2/RFC5452,
{Syslog Server, Server Enable, Type, Name, Port Number,
Client Certificate File Name, Root Certificate File Name,
Location Identification Name, Retry, Retry Interval}
=[{Primary, Enable, IPv4, xxxxx, 65535, YYYY, ZZZZ, ZZZZ, Disable, 555},
{Secondary, Enable, IPv4, xxxxx, 65535, YYYY, ZZZZ, ZZZZ, Disable, 555}],
SNMP Agent=Enable, SNMP Version=v3,
{Send Trap to IP Address, User Name, Authentication Mode,
Authentication Protocol, Encryption Mode, Encryption Protocol}
=[{192.168.0.1, AAA, Enable, SHA, Enable, AES},
{192.168.0.1, AAA, Enable, SHA, Enable, AES},
{192.168.0.1, AAA, Enable, SHA, Enable, AES}],
{Request Authentication Setting User Name, Authentication Mode,
Authentication Protocol, Encryption Mode, Encryption Protocol}
=[{BBB, Enable, SHA, Enable, AES}, {CCC, Enable, SHA, Enable, AES},
{DDD, Enable, SHA, Enable, AES}],
Storage System Name=xxx, Contact=xxx, Location=xxx
```

Detailed Information 2

Item	Description
Notification Alert	The destination of the alert. All: All the hosts, Host Report: Only the hosts to which SIMs are set to be reported
Email Notice	Indicates whether notification by email is enabled. Enable: The notification is enabled. Disable: The notification is disabled.
Attribute	The attribute (To, Cc or Bcc) of the destination email address.
Email Address	The destination email addresses. A hyphen (-) is displayed if notification by email is disabled.
Email Address (From)	The sender email address. A hyphen (-) is displayed if notification by email is disabled.
Email Address (Reply To)	The email address to reply. A hyphen (-) is displayed if notification by email is disabled.
Description to Notify	The additional information at the top of the body of the error notification message by email. A hyphen (-) is displayed if notification by email is disabled or the Description to Notify is not set.
Mail Server Type	The type of Mail Server Name (Identifier, IPv4 or IPv6).
Mail Server Name	The host name or the IP address of the mail server.
SMTP Authentication	Indicates whether the SMTP authentication is enabled. Enable: The authentication is enabled. Disable: The authentication is disabled.
SMTP Authentication Account	The SMTP authentication account. A hyphen (-) is displayed if the SMTP authentication is disabled.
Syslog Transfer Protocol	The type of the syslog transfer protocol (TLS1.2/RFC5424 or UDP/RFC3164).
Syslog Server	The syslog server to be set. Primary: Primary syslog server, Secondary: Secondary syslog server
Server Enable	Indicates whether the syslog server is enabled. Enable: The syslog server is enabled. Disable: The syslog server is disabled.
Type	The type of the IP address of the syslog server (IPv4 or IPv6). A hyphen (-) is displayed if the syslog server is disabled.
Name	The IP address of the syslog server to which SIMs are sent. A hyphen (-) is displayed if the syslog server is disabled.
Port Number	The port number used to communicate with the syslog server. A hyphen (-) is displayed if the syslog server is disabled.

Item	Description
Client Certificate File Name	The name of the client certificate file. A hyphen (-) is displayed, if the syslog servers is disabled or if UDP/RFC3164 is used as a transfer protocol.
Root Certificate File Name	The name of the root certificate file. A hyphen (-) is displayed, if the syslog servers is disabled or if UDP/RFC3164 is used as a transfer protocol.
Location Identification Name	The location identification name entered during the setting operation.
Retry	Indicates whether to retry if transferring to syslog servers failed. Enable: Transfer is retried. Disable: Transfer is not retried. A hyphen (-) is displayed if UDP/RFC3164 is used as a transfer protocol.
Retry Interval	The interval of the retries of transferring. A hyphen (-) is displayed, if the setting of the retry is disabled or if UDP/RFC3164 is used as a transfer protocol.
SNMP Agent	The setting status of the SNMP agent. Enable: SNMP trap is notified. Disable: SNMP trap is not notified.
SNMP Version	The SNMP protocol version
Send Trap to IP Address	The IP address to which traps are sent. A hyphen (-) is displayed if the SNMP trap is not notified.
User Name	The user name set to the SNMP trap destination. A hyphen (-) is displayed if the SNMP trap is not notified.
Authentication Mode	The authentication mode status set to the SNMP trap destination. Enable: Authentication mode is enabled. Disable: Authentication mode is disabled. A hyphen (-) is displayed if the SNMP trap is not notified.
Authentication Protocol	The authentication protocol set to the SNMP trap destination: SHA or MD5 A hyphen (-) is displayed if SNMP traps are not notified or if the authentication mode of the SNMP trap destination is disabled.
Encryption Mode	The encryption mode status set to the SNMP trap destination. Enable: Encryption mode is enabled. Disable: Encryption mode is disabled. A hyphen (-) is displayed if the SNMP trap is not notified.
Encryption Protocol	The encryption protocol set to the SNMP trap destination: AES or DES A hyphen (-) is displayed if SNMP traps are not notified or if the encryption mode of the SNMP trap destination is disabled.

Item	Description
Request Authentication Setting User Name	The user name set to the request authentication setting. A hyphen (-) is displayed if the request authentication is not set.
Authentication Mode	The authentication mode status of the user set to the request authentication. Enable: Authentication mode is enabled. Disable: Authentication mode is disabled. A hyphen (-) is displayed if this item is not set in the request authentication setting.
Authentication Protocol	The authentication protocol of the user set to the request authentication: SHA or MD5 A hyphen (-) is displayed if this item is not set or if the authentication mode is disabled in the request authentication setting.
Encryption Mode	The encryption mode status of the user set to the request authentication. Enable: Encryption mode is enabled. Disable: Encryption mode is disabled. A hyphen (-) is displayed if this item is not set in the request authentication setting.
Encryption Protocol	The encryption protocol of the user set to the request authentication: AES or DES A hyphen (-) is displayed if this item is not set or if the encryption mode is disabled in the request authentication setting.
Storage System Name	The storage system name entered during the setting operation. A hyphen (-) is displayed if the SNMP trap is not notified.
Contact	The contact information entered during the setting operation. A hyphen (-) is displayed if the SNMP trap is not notified.
Location	The installation location of the storage system entered during the setting operation. A hyphen (-) is displayed if the SNMP trap is not notified.

Example 3: Alert notification setting from an application except Maintenance Utility

```
GUM,,[Maintenance],Set Up Alert,,Normal end,Seq.=xxxxxxxxxx
+Notification Alert=Host Report,Email Notice=Enable,
{Attribute,Email Address}
=[{To,aaa@example.com},{Cc,bbb@example.com}],
Email Address (From)=yyy@example.com,
Email Address (Reply To)=zzz@example.com,
Description to Notify=XXXXXXXXXXXX,Mail Server Type=IPv4,
Mail Server Name=XXXXXXXXXX,SMTP Authentication=Enable,
SMTP Authentication Account=XXXX,
Syslog Transfer Protocol=TLS1.2/RFC5452,
{Syslog Server,Server Enable,Type,Name,Port Number,
Client Certificate File Name,Root Certificate File Name,
```

```

Location Identification Name,Retry,Retry Interval}
=[{Primary,Enable,IPv4,xxxxx,65535,YYYYY,ZZZZ,ZZZZ,Disable,555},
{Secondary,Enable,IPv4,xxxxx,65535,YYYYY,ZZZZ,ZZZZ,Disable,555}],
{SNMP Community Name,IP Address}
=[{AAA,192.168.0.1},{AAA,192.168.0.1},{AAA,192.168.0.1}],
SNMP Agent=Enable,SNMP Manager=[192.168.0.1,xxx],
Storage System Name=xxx,Contact=xxx,Location=xxx

```

Detailed Information 3

Item	Description
Notification Alert	The destination of the alert. All: All the hosts, Host Report: Only the hosts to which SIMs are set to be reported
Email Notice	Indicates whether notification by email is enabled. Enable: The notification is enabled. Disable: The notification is disabled.
Attribute	The attribute (To, Cc or Bcc) of the destination email address.
Email Address	The destination email addresses. A hyphen (-) is displayed if notification by email is disabled.
Email Address (From)	The sender email address. A hyphen (-) is displayed if notification by email is disabled.
Email Address (Reply To)	The email address to reply. A hyphen (-) is displayed if notification by email is disabled.
Description to Notify	The additional information at the top of the body of the error notification message by email. A hyphen (-) is displayed if notification by email is disabled or the Description to Notify is not set.
Mail Server Type	The type of Mail Server Name (Identifier, IPv4 or IPv6).
Mail Server Name	The host name or the IP address of the mail server.
SMTP Authentication	Indicates whether the SMTP authentication is enabled. Enable: The authentication is enabled. Disable: The authentication is disabled.
SMTP Authentication Account	The SMTP authentication account. A hyphen (-) is displayed if the SMTP authentication is disabled.
Syslog Transfer Protocol	The type of the syslog transfer protocol (TLS1.2/RFC5424 or UDP/RFC3164).
Syslog Server	The syslog server to be set. Primary: Primary syslog server, Secondary: Secondary syslog server
Server Enable	Indicates whether the syslog server is enabled. Enable: The syslog server is enabled. Disable: The syslog server is disabled.
Type	The type of the IP address of the syslog server (IPv4 or IPv6).

Item	Description
	A hyphen (-) is displayed if the syslog server is disabled.
Name	The IP address of the syslog server to which SIMs are sent. A hyphen (-) is displayed if the syslog server is disabled.
Port Number	The port number used to communicate with the syslog server. A hyphen (-) is displayed if the syslog server is disabled.
Client Certificate File Name	The name of the client certificate file. A hyphen (-) is displayed, if the syslog servers is disabled or if UDP/RFC3164 is used as a transfer protocol.
Root Certificate File Name	The name of the root certificate file. A hyphen (-) is displayed, if the syslog servers is disabled or if UDP/RFC3164 is used as a transfer protocol.
Location Identification Name	The location identification name entered during the setting operation.
Retry	Indicates whether to retry if transferring to syslog servers failed. Enable: Transfer is retried. Disable: Transfer is not retried. A hyphen (-) is displayed if UDP/RFC3164 is used as a transfer protocol.
Retry Interval	The interval of the retries of transferring A hyphen (-) is displayed, if the setting of the retry is disabled or if UDP/RFC3164 is used as a transfer protocol.
SNMP Community Name	The name of the community of the SNMP trap destination. A hyphen (-) is displayed if the SNMP trap is not notified.
IP Address	The IP address added to the community to which SNMP traps are sent. A hyphen (-) is displayed if the SNMP trap is not notified.
SNMP Agent	The setting status of the SNMP agent. Enable: SNMP trap is notified. Disable: SNMP trap is not notified.
SNMP Manager	The IP address of the SNMP manager. A hyphen (-) is displayed if the SNMP trap is not notified.
Storage System Name	The storage system name entered during the setting operation. A hyphen (-) is displayed if the SNMP trap is not notified.
Contact	The contact information entered during the setting operation. A hyphen (-) is displayed if the SNMP trap is not notified.
Location	The installation location of the storage system entered during the setting operation. A hyphen (-) is displayed if the SNMP trap is not notified.

[Maintenance] Set Up Date & Time

Example

```
GUM,,[Maintenance],Set Up Date & Time,,Normal end,Seq.=xxxxxxxxxx
+Use NTP Server=Yes,NTP Server=[xxxxxxx,xxxxxx],
UTC Timezone=Osaka/Sapporo/Tokyo,
Date & Time=YYYY/MM/DD HH:MM,
SynchronizingTime=HH:MM,
Automatically adjust clock for daylight saving changes=Enable
```

Detailed Information

Item	Description
Use NTP Server	Indicates whether to use the NTP server for the automatic time setting of the storage system. Yes: NTP server is used. No: NTP server is not used.
NTP Server	The IP address (IPv4 or IPv6) or host name of the NTP server.
UTC Timezone	The zone of the Coordinated Universal Time.
Date & Time	The date and time in the format of YYYY/MM/DD HH:MM. (YYYY: year, MM: month, DD: day, HH: hour, MM: minute)
SynchronizingTime	The execution time of the time correction function.
Automatically adjust clock for daylight saving changes	Indicates the setting status of automatic adjustment for daylight saving time Enable: Enabled, Disable: Disabled

[Maintenance] Set Up Network Perm

Example

```
GUM,,[Maintenance],Set Up Network Perm,,Normal end,Seq.=xxxxxxxxxx
+HTTP Blocking=Disable
```

Detailed Information

Item	Description
HTTP Blocking	Indicates whether the HTTP block is enabled or disabled. Enable: HTTP blocking is enabled. Disable: HTTP blocking is disabled.

[Maintenance] Set Up Network Set

Example

```
GUM,, [Maintenance], Set Up Network Set,, Normal end, Seq.=xxxxxxxxxx
+{Location, Configuration, Mode, Address, Subnet Mask,
Subnet Prefix Length, Default Gateway, DNS Server 1, DNS Server 2,
DNS Server 3}=[{CTL1, IPv4, Enable, xxx.xxx.xxx.xxx, xxx.xxx.xxx.xxx,
-, xxx.xxx.xxx.xxx, xxx.xxx.xxx.xxx, xxx.xxx.xxx.xxx, xxx.xxx.xxx.xxx},
{CTL2, IPv4, Enable, xxx.xxx.xxx.xxx, xxx.xxx.xxx.xxx, -,
xxx.xxx.xxx.xxx, xxx.xxx.xxx.xxx, xxx.xxx.xxx.xxx, xxx.xxx.xxx.xxx},
-{CTL1, IPv6, Enable, xxxxxxxxxxxx, -, 64,
xxxxxxxxxx, xxxxxxxxxxxx, xxxxxxxxxxxx, xxxxxxxxxxxx},
{CTL2, IPv6, Enable, xxxxxxxxxxxx, -, 64,
xxxxxxxxxx, xxxxxxxxxxxx, xxxxxxxxxxxx, xxxxxxxxxxxx}],
- Network Connection Mode=Auto-Negotiation,
Maintenance Port Address=[xxx.xxx.xxx.xxx, xxx.xxx.xxx.xxx],
Num. of Maintenance Port Addresses=2,
Internal Network=[xxx.xxx.xxx.xxx, xxx.xxx.xxx.xxx],
DNS Domain Name=[xxx], DNS Search Order=[xxx, xxx, xxx, xxx, xxx, xxx],
Num. of Orders=6,
Forcibly run without safety checks=Enable
```

Detailed Information

Item	Description
Location	CTL to be operated (CTL1 or CTL2)
Configuration	Type of the IP address (IPv4 or IPv6)
Mode	Whether the IPv4 or the IPv6 configuration is enable or disable Enable: The configuration is enabled. Disable: The configuration is disabled.
Address	IP address
Subnet Mask	Subnet mask When the value of the Configuration is IPv6, a hyphen (-) is output.
Subnet Prefix Length	Length of the subnet prefix When the value of the Configuration is IPv4, a hyphen (-) is output.
Default Gateway	IP address of the default gateway
DNS Server 1	IP address of the DNS server 1
DNS Server 2	IP address of the DNS server 2
DNS Server 3	IP address of the DNS server 3
Network Connection Mode	Mode of the network connection
Maintenance Port Address	IP address of the maintenance port
Num. of Maintenance Port Addresses	The number of maintenance port IP addresses

Item	Description
Internal Network	IP address for the internal network
DNS Domain Name	Domain name that is set to GUM A hyphen (-) is output if this item is not set.
DNS Search Order	Domain suffixes that are set in the order of DNS search A hyphen (-) is output if this item is not set.
Num. of Orders	The number of domain suffixes that are set in the order of DNS search
Forcibly run without safety checks	Indicates whether the function to forcibly set up the network without safety checks is enabled or disabled. However, a hyphen (-) is output except when a user with the Support Personnel role operates from the MPC.

[Maintenance] Set Up System Info

Example

```
GUM,,[Maintenance],Set Up System Info,,Normal end,Seq.=xxxxxxxxxx
+Storage System Name=xxx,Contact=xxx,Location=xxx
```

Detailed Information

Item	Description
Storage System Name	The storage system name entered during the setting operation.
Contact	The contact information entered during the setting operation.
Location	The installation location of the storage system entered during the setting operation.

[Maintenance] Stop Copy

Example

```
GUM,,[Maintenance],Stop Copy,,Normal end,Seq.=xxxxxxxxxx
+Location=HDDxx-xx
```

Detailed Information

Item	Description
Location	The mounting position of the drive whose copying process is stopped

[Maintenance] Turn Off Locate LEDs

Example

```
GUM,, [Maintenance], Turn Off Locate LEDs,, Normal end,  
Seq.=xxxxxxxxxx  
+Mode=OFF, Locations=[DB-xx,DB-xx,DB-xx], Num of Locations=3
```

Detailed Information

Item	Description
Mode	Indicates the locate LED is turned off.
Location	The mounting position of the drive box that is set to turn off the locate LED.
Num of Locations	The number of the drive boxes that are set to turn off the locate LED.

[Maintenance] Turn On Locate LEDs

Example

```
GUM,, [Maintenance], Turn On Locate LEDs,, Normal end,  
Seq.=xxxxxxxxxx  
+Mode=ON, Locations=[DB-xx,DB-xx,DB-xx], Num of Locations=3
```

Detailed Information

Item	Description
Mode	Indicates the locate LED is turned on.
Location	The mounting position of the drive box that is set to turn on the locate LED.
Num of Locations	The number of drive boxes that are set to turn on the locate LED.

[Maintenance] Update Cert Files

Example

```
GUM,, [Maintenance], Update Cert Files,, Normal end,  
Seq.=xxxxxxxxxx  
+Certificate=Web Server, File=XXXX
```

Detailed Information

Item	Description
Certificate	The certificate file (Web Server certificate or Connect to SVP certificate) to be updated.

Item	Description
File	The name of the updated certificate file

[Maintenance] Update Firmware

Example

```
GUM,,[Maintenance],Update Firmware,,Normal end,Seq.=xxxxxxxxx
+Firmware File=xxx,Firmware Selection=xxx,Update Type=xxxx,
Reboot Pattern=xxx
```

Detailed Information

Item	Description
Firmware File	Name of the firmware file used to update the firmware
Firmware Selection	Firmware to be updated All: Updates all firmware installed in the storage system GUM Only: Updates the GUM firmware only
Update Type	Whether the firmware is updated online or offline Online Update: updated online, Offline Update: updated offline
Reboot Pattern	Type of the reboot (how the MP units are rebooted when all firmware installed in the storage system is updated online) By 1/2: Reboots a 1/2 of the total at one time until everything is rebooted By 1/4: Reboots a 1/4 of the total at one time until everything is rebooted By 1/8: Reboots a 1/8 of the total at one time until everything is rebooted By One: Reboots everything at one time

[Maintenance] UserAccount Backup

Example

```
GUM,,[Maintenance],UserAccount Backup,,Normal end,
Seq.=xxxxxxxxx
```

[Maintenance] UserAccount Restore

Example

```
GUM,,[Maintenance],UserAccount Restore,,Normal end,
Seq.=xxxxxxxxx
```

Monitor Descriptions

[Monitor] Monitoring Switch

Example

```
MPC,, [Monitor],Monitoring Switch,Enable,Normal end,Seq.=xxxxxxxx
```

Basic Information

Parameter	Description
Enable	Monitoring the DKC running information is enabled.
Disable	Monitoring the DKC running information is disabled.

Performance Monitor Descriptions

[PFM] Delete Unused WWNs

Example

```
RMI AP,Task Name, [PFM],Delete Unused WWNs,,Normal end,  
Seq.=xxxxxxxx
```

[PFM] Edit CU Monitor Mode

Example

```
RMI AP,Task Name, [PFM],Edit CU Monitor Mode,Enable,Normal end,  
Seq.=xxxxxxxx  
+[LDKC:CU] = [0x00:0x00,0x00:0x01,0x00:0x02],Num. of CUs = 3
```

Basic Information

Parameter	Description
Enable	The monitored CU is enabled

Detailed Information

Item	Description
LDKC:CU	The ID of the monitored CU The logical DKC number and the CU number are separated by colons and arranged in this order.

Detailed Information

Item	Description
Mode	The setting mode of WWN Add WWN: Addition of HBA WWN, Delete WWN: Deletion of HBA WWN
HBA WWN	The HBA WWN
WWN Name	The WWN name
Port	The name of a target port
Num. of Ports	The number of target ports for the added or deleted WWN
Num. of WWNs	The number of added or deleted WWNs

Provisioning Descriptions

[PROV] Add Hosts

Example

```
RMI AP,Task Name,[PROV],Add Hosts,,Normal end,Seq.=xxxxxxxxx  
+{Port,HostGrpID,WWN,Nickname}  
=[{XX,0xxxx,0xxxxxxxxxxxxxxxxxxxx,xxxxxxxxxxxxxxxxxxxx},  
{XX,0xxxx,0xxxxxxxxxxxxxxxxxxxx,xxxxxxxxxxxxxxxxxxxx}],Num. of WWNs=2
```

Detailed Information

Item	Description
Port	The name of the port to which the host group belongs
HostGrpID	The host group number where the host is registered
WWN	Indicates WWN of the host bus adapter for the host registered in the host group. WWN is a 16-digit number in the hexadecimal format.
Nickname	The nickname of the host bus adapter for the host registered in the host group
Num. of WWNs	The number of registered hosts (WWN)

[PROV] Add LUN Paths

Example

```
RMI AP,Task Name,[PROV],Add LUN Paths,,Normal end,Seq.=xxxxxxxxx  
+{Port,HostGrpID,LUN,LDKC:CU:LDEV}  
=[{XX,0xxxx,xxxx,0xxx:0xxx:0xxx},  
{XX,0xxxx,xxxx,0xxx:0xxx:0xxx},  
{XX,0xxxx,xxxx,0xxx:0xxx:0xxx}],Num. of Paths=3
```

Detailed Information

Item	Description
Port	The name of the port to which the host group belongs
HostGrpID	The host group number linked to the logical volume
LUN	Indicates LUN of the logical volume linked to the host group
LDKC:CU:LDEV	The LDKC, CU, and LDEV numbers of the logical volume linked to the host group
Num. of Paths	The number of LU paths set

[PROV] Assign MP Unit

Example

```
RMI AP,Task Name,[PROV],Assign MP Unit,,Normal end,
Seq.=xxxxxxxxxx
+{LDKC:CU:LDEV,MP Unit ID,Result}
=[{0xXX:0xXX:0xXX,XX,Normal end},
{0xXX:0xXX:0xXX,XX,Normal end}],Num. of LDEVs=2
```

Detailed Information

Item	Description
LDKC:CU:LDEV	The LDKC number, the CU number, and the LDEV number
MP Unit ID	The MP Unit ID of the migration target
Result	The result of operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end xxxx: Part code, yyyy: Error code
Num. of LDEVs	The number of specified logical volumes

[PROV] Block LDEVs

Example

```
RMI AP,Task Name,[PROV],Block LDEVs,,Normal end,Seq.=xxxxxxxxxx
+LDKC:CU:LDEV=[0x00:0x00:0x01,0x00:0x00:0x02,0x00:0x00:0x03,
0x00:0x00:0x04,0x00:0x00:0x05,0x00:0x00:0x06,0x00:0x00:0x07,
0x00:0x00:0x08,0x00:0x00:0x09,0x00:0x00:0x0A],
Num. of LDEVs=10
```

Detailed Information

Item	Description
LDKC:CU:LDEV	The LDKC number, the CU number, and the LDEV number

Item	Description
Num. of LDEVs	The number of LDEVs being blocked

[PROV] CalculateTieringMonitorData

Example

```
RMI AP,,[PROV],CalculateTieringMonitorData,,Normal end,
Seq.=xxxxxxxxxx
+{TieringMoniterDataOperation{
  RelocationOption=Enable,
  Pool{
    Id=2}}}
```

Detailed Information

Item	Description
TieringMoniterDataOpera tion	The setting information for recalculating the tier relocation using the monitoring data
RelocationOption	The setting information on the tier relocation option Disable: Tier relocation is not started. Enable: Tier relocation is immediately started. null: Tier relocation is not started.
Pool	The pool information
Id	The pool number

[PROV] Create Host Groups

Example

```
RMI AP,Task Name,[PROV],Create Host Groups,,Normal end,
Seq.=xxxxxxxxxx
+{Port,HostGrpID,HostGrpName}=[{XX,0xXXX,XXXXXXXXXXXXXXXXXX},
{XX,0xXXX,XXXXXXXXXXXXXXXXXX}],Num. of Host Groups=2
```

Detailed Information

Item	Description
Port	The name of the port where the host group has been added
HostGrpID	The host group number newly added
HostGrpName	The name of the host group newly added
Num. of Host Groups	The number of host groups added

[PROV] Create LDEVs

Create LDEVs is output when volumes of Thin Image or DP-VOLs are created.
CreateLdev is output when internal or external volumes are created.

Example 1: Creating Thin Image volumes

```
RMI AP,Task Name,[PROV],Create LDEVs,Snapshot,Normal end,
Seq.=xxxxxxxxxx
+{Pool ID,LDKC:CU:LDEV,LDEVCapa(blocks),Emulation,CLPR,SSID,
MP Unit ID,T10 PI,Result}
=[{-,0x00:0x00:0x00,96000,,0,,Auto,Enable,Normal end},
{-,0x00:0x01:0x00,96000,,0,,Auto,Enable,Normal end}],
Num. of LDEVs=2
```

Example 2: Creating DP-VOLs

```
RMI AP,Task Name,[PROV],Create LDEVs,Thin Provisioning,Normal end,
Seq.=xxxxxxxxxx
+{Pool ID,LDKC:CU:LDEV,LDEVCapa(blocks),Emulation,CLPR,SSID,
MP Unit ID,Attribute,Full Allocation,Data Direct Mapping,
Data Direct Mapped LDEV(LDKC:CU:LDEV),T10 PI,Result}
=[{1,0x00:0x00:0x00,96000,,0,,Auto,,Enable,Enable,
0x00:0x10:0x00,Enable,Normal end},
{1,0x00:0x01:0x00,96000,,0,,Auto,,Disable,Disable,
-,Disable,Normal end}],Num. of LDEVs=2
```

Basic Information for Example 1 and 2

Item	Description
Snapshot	Operating for the Thin Image volumes.
Thin Provisioning	Operating for the Dynamic Provisioning virtual volumes.

Detailed Information for Example 1 and 2

Item	Description
Pool ID	The pool ID of a related pool volume For a Snapshot volume, a hyphen (-) is output, because you specify no setting about a related volume when you create V-Vols for Snapshot.
LDKC:CU:LDEV	The logical DKC, CU, and LDEV numbers of the created V-Vols These numbers are separated by colons and arranged in this order.
LDEVCapa (blocks)	The capacity of the created V-Vols in blocks
Emulation	Not output because this item is not used.
CLPR	The CLPR ID of the created V-Vol
SSID	Not output because this item is not used.
MP Unit ID	MP Unit ID specified for the V-Vol.

Item	Description
	When an MP Unit ID is specified automatically, "Auto" is output.
Attribute	Not output because this item is not used.
Full Allocation	Indicates the setting status of the Full Allocation Enable: Full Allocation is enabled. Disable: Full Allocation is disabled. This item is output for Dynamic Provisioning volumes only.
Data Direct Mapping	Indicates the setting status of Data Direct Mapping for the created V-Vol Enable: Data Direct Mapping is enabled. Disable: Data Direct Mapping is disabled. This item is output for Dynamic Provisioning volumes only.
Data Direct Mapped LDEV(LDKC:CU:LDEV)	Indicates the LDEV ID of the pool volume with Data Direct Mapping enabled that composes a pool associated with the created V-Vol A hyphen (-) is output if Data Direct Mapping is disabled on the created V-Vol. This item is output for Dynamic Provisioning volumes only.
T10 PI	Indicates the setting status of the T10 PI attribute Enable: T10 PI is enabled. Disable: T10 PI is disabled.
Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end xxxx: Part code, yyyy: Error code
Num. of LDEVs	The number of created V-Vols

[PROV] Create Resource Grps

Example

```
RMI AP,Task Name,[PROV],Create Resource Grps,,Normal end,
Seq.=xxxxxxxxxx
+{VDKC-Box ID,Resource Group ID,Resource Group Name,Result}
={0,1,RSG1,Normal end},{0,2,RSG2,Normal end}},
Num. of Resource Groups=2
```

Detailed Information

Item	Description
VDKC-Box ID	The number of the VDKC-Box to which the created resource group belongs. A hyphen (-) is output when the creating operation failed.
Resource Group ID	The number of the created resource group. A hyphen (-) is output when the creating operation failed
Resource Group Name	The resource group name of the created resource group

Item	Description
Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end xxxx: Part code, yyyyy: Error code
Num. of Resource Groups	The number of created resource groups

[PROV] Create VDKC-Box

Example

```
RMI AP,Task Name,[PROV],Create VDKC-Box,,Normal end,Seq.=xxxxxxxxxx
+{VDKC-Box ID,Model,SerialNo,Result}={1,0x0400,28528,Normal end}
++{VDKC-Box ID,Resource Group ID,Resource Group Name,Result}
=[{1,1,RSG1,Normal end},{1,2,RSG2,Normal end}],Num. of Resource
Groups=2
```

Detailed Information

Item	Description
VDKC-Box ID	The number of the created VDKC-Box. A hyphen (-) is output when the creating operation failed.
Model	The model of the created VDKC-Box
SerialNo	The serial number of the created VDKC-Box
Result	The result of the VDKC-Box operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end xxxx: Part code, yyyyy: Error code
VDKC-Box ID	The number of the VDKC-Box to which the created resource group belongs. A hyphen (-) is output when the creating operation failed.
Resource Group ID	The number of the created resource group. A hyphen (-) is output when the creating operation failed.
Resource Group Name	The resource group name of the created resource group
Result	The result of the resource group operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end xxxx: Part code, yyyyy: Error code
Num. of Resource Groups	The number of created resource groups

[PROV] Create/Expand Pools

Example

```
RMI AP,Task Name,[PROV],Create/Expand Pools,,Normal end,
Seq.=xxxxxxxxxx
+{Pool ID,Pool Type,Multi Tier Pool,Warning Threshold(%),
Depletion Threshold(%),Subscription Limit(%),
Protect V-VOLs when I/O fails to Blocked Pool VOL,
Protect V-VOLs when I/O fails to Full Pool,
Tier Management,Cycle Time,Monitoring Period,Monitoring Mode,
Relocation Speed>Data Direct Mapping,Pool Result,Execute Command}
=[{1,Dynamic Provisioning,Enable,20,70,100,Yes,Yes,Auto,24,
00:00-23:59,Continuous Mode,3,Disable,Normal end,Create}],
Num. of Pools=1
++{LDKC:CU:LDEV,External LDEV Tier Rank,LDEV Result}
=[{0x00:0x00:0x00,Middle/Internal,Normal end},
{0x00:0x00:0x01,Middle/Internal,Normal end},
{0x00:0x00:0x02,Middle/Internal,Normal end}],Num. of LDEVs=3
```

Detailed Information

Item	Description
Pool ID	The pool ID of the created or expanded pool
Pool Type	The pool type. Dynamic Provisioning: Dynamic Provisioning, Thin Image: Thin Image
Multi Tier Pool	The setting status of the multi-tier mode and active flash function for the created or expanded pool Enable(Active Flash): Both Dynamic Tiering and active flash are enabled. Enable: Dynamic Tiering is enabled and active flash is disabled. Disable: Both Dynamic Tiering and active flash are disabled. If Pool Type is Thin Image, a hyphen (-) is output.
Warning Threshold(%)	The warning threshold of the usage rate of the created pool. The unit is indicated as a percentage. If Execute Command is Expand, a hyphen (-) is output.
Depletion Threshold(%)	The depletion threshold of the usage rate of the created pool. The unit is indicated as a percentage. If Pool Type is Thin Image, if the depletion threshold is not specified, or if Execute Command is Expand, a hyphen (-) is output.
Subscription Limit(%)	The reserve amount of the created pool. The unit is percent (%). If the reserve amount is not specified, it outputs "Unlimited". If Pool Type is Thin Image, or if Execute Command is Expand, a hyphen (-) is output.
Protect V-VOLs when I/O fails to Blocked Pool VOL	Indicates whether the setting of the protect access attribute on the virtual volume is enabled or disabled when the pool is blocked. Yes: Enabled, No: Disabled

Item	Description
	If Pool Type is not Dynamic Provisioning, or if Execute Command is Expand, a hyphen (-) is output.
Protect V-VOLs when I/O fails to Full Pool	Indicates whether the setting of the protect access attribute on the virtual volume is enabled or disabled when the pool is full. Yes: Enabled, No: Disabled If Pool Type is not Dynamic Provisioning, or if Execute Command is Expand, a hyphen (-) is output.
Tier Management	The auto control mode of the created or expanded pool Auto: Auto, Manual: Manual If Multi Tier Pool is not Enable, a hyphen (-) is output.
Cycle Time	The cycle of performance monitoring for the created pool 0.5: every thirty minutes, 1: every one hour, 2: every two hours, 4: every four hours, 8: every eight hours, 24: every twenty-four hours If Tier Management is not Auto, or if Execute Command is Expand, a hyphen (-) is output.
Monitoring Period	The monitoring period of the pool. Format: "H1:M1-H2:M2" H1: The time when the monitoring starts (hour) M1: The time when the monitoring starts (minute) H2: The time when the monitoring ends (hour) M2: The time when the monitoring ends (minute). If Cycle Time is not 24, or if Execute Command is Expand, a hyphen (-) is output.
Monitoring Mode	The monitoring mode Continuous Mode: Continuous mode, Period Mode: Period mode If Multi Tier Pool is not Enable, or if Execute Command is Expand, a hyphen (-) is output.
Relocation Speed	The relocation speed 1: Slowest, 2: Slower, 3: Normal, 4: Faster, 5: Fastest If Multi Tier Pool is not Enable, or if Execute Command is Expand, a hyphen (-) is output.
Data Direct Mapping	Indicates the setting status of Data Direct Mapping Enable: Data Direct Mapping is enabled. Disable: Data Direct Mapping is disabled. If Execute Command is Expand, a hyphen (-) is output.
Pool Result	The result of pool creation or expansion Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end, Not Execute: Not Executed xxxx: Part code, yyyyy: Error code
Execute Command	The executed operation Create: Pools are created. Expand: Pools are expanded. If Pool Result is not Normal end, a hyphen (-) is output.
Num. of Pools	The number of created or expanded pools

Item	Description
LDKC:CU:LDEV	The LDKC number, the CU number and the LDEV number of the pool volume assigned to the created or expanded pool
External LDEV Tier Rank	The external LDEV tier rank of the pool volume assigned to the created or expanded pool High: An external volume (High) Middle/Internal: An external volume (Middle) or an internal volume Low: An external volume (Low)
LDEV Result	The result of creating or expanding pools per pool volume Normal end: Normal end, Error(xxxx-yyyy): Abnormal end, Not Execute: Not Executed xxxx: Part code, yyyy: Error code
Num. of LDEVs	The number of created or expanded pool volume.

[PROV] CreateAlus

Example

```
RMI AP, Task Name, [PROV], CreateAlus, , Normal end, Seq.=xxxxxxxxxx
+{Alus[0]{
  LdevId=0x00:0x00:0xBC, Result=Normal end, MpUnitId=Auto,
  Clpr{
    Id=0},
  Id="60-06-0E-81-30-76-D9-30-76-D9-00-00-00-00-00-BC"}}}
```

Detailed Information

Item	Description
Alus[x]	The setting information of the created LDEV with the ALU attribute
LdevId	The LDEV ID
Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end, Not Execute: Not Executed xxxx: Part code, yyyy: Error code
MpUnitId	The MP Unit ID "Auto" indicates the auto assignment is enabled.
Clpr	The CLPR setting information
Id	The CLPR ID
Id	The ALU ID

[PROV] CreateiScsiName

Example

```
RMI AP,,[PROV],CreateiScsiName,,Normal end,Seq.=xxxxxxxxxx
+{iScsiPort[0]{
  Port=1A,
  iScsiTarget[0]{
    Id=0,
    RemoteiScsiName[0]{
      Name="Name",NickName="NickName",Result=Normal end}}}}}
```

Detailed Information

Item		Description
iScsiPort[x]		The setting information of the port
	Port	The port ID to be set
	iScsiTarget[x]	The iSCSI target information
	Id	The iSCSI target ID
	RemoteiScsiName[x]	The information of the iSCSI name of the host bus adapter
	Name	The iSCSI name of the host bus adapter
	NickName	The host name (nick name) "null" is output if this item is not set or changed.
	Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end xxxx: Part code, yyyyy: Error code

[PROV] CreateiScsiPath

Example

```
RMI AP,,[PROV],CreateiScsiPath,,Normal end,Seq.=xxxxxxxxxx
+{ConnectionTest=true,
iScsiPath[0]{
  iScsiPort{
    Port=1A},
  RemoteiScsiPort{
    Function=UVM,IpType=IPv4,Ipv4Address=192.168.0.101,
    Ipv6Address=0:0:0:0:0:0:0:0,TcpPortNumber=3260,
    RemoteiScsiTarget{
      Name="iqn.1994-04.jp.co.hitachi.h8m.t.00001.3a000",
      iScsiUser{
        AuthSwitch=None,AuthMode=Unidirectional,UserId="CHAPUser"}}},
  Result=Normal end}}
```

Detailed Information

Item		Description
ConnectionTest		Indicates whether to perform the connection test after creating iSCSI paths true: Test is performed. false: Test is not performed.
iScsiPath[x]		The path information between the iSCSI port on the local storage system and the iSCSI target on the remote storage system
	iScsiPort	The information of the iSCSI port on the local storage system
	Port	The Port ID
	RemoteiScsiPort	The information of the iSCSI port on the remote storage system
	Function	Function that uses the created iSCSI path UVM: Universal Volume Manager RemoteReplication: Remote Replication
	IpType	The type of the IP address IPv4: IPv4 address, IPv6: IPv6 address
	IPv4Address	The IPv4 address*
	IPv6Address	The IPv6 address*
	TcpPortNumber	The TCP port number
	RemoteiScsiTarget	The iSCSI target information
	Name	The iSCSI name
	iScsiUser	The user authentication information
	AuthSwitch	Indicates whether the CHAP authentication method is enabled or disabled* None: CHAP is disabled. CHAP: CHAP is enabled.
	AuthMode	Indicates the CHAP authentication mode* Unidirectional: CHAP is one-way. Mutual: CHAP is two-way.
	UserId	The CHAP user name*
	Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end xxxx: Part code, yyyy: Error code
* "null" is output if this item is not set or changed.		

[PROV] CreateiScsiTarget

Example

```
RMI AP,,[PROV],CreateiScsiTarget,,Normal end,Seq.=xxxxxxxxxx
+{iScsiPort[0]{
  Port=1A,
  iScsiTarget[0]{
    Id=0,Name="Name",Alias="Alias",UserAuthSwitch=Enable,
    AuthMode=Unidirectional,Result=Normal end}}}
```

Detailed Information

Item		Description
iScsiPort[x]		The setting information of the port
	Port	The port ID to be set
	iScsiTarget[x]	The iSCSI target information
	Id	The iSCSI target ID
	Name	The iSCSI target name
	Alias	The iSCSI target alias
	UserAuthSwitch	The setting status of the CHAP user authentication Enable: Enabled, Disable: Disabled, UseHostSetting: Using host settings
	AuthMode	The authentication mode. Unidirectional: One-way, Mutual: Two-way
	Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end xxxx: Part code, yyyy: Error code

[PROV] CreateLdev

CreateLdev is output when internal or external volumes are created. Create LDEVs is output when volumes of Thin Image or DP-VOLs are created.

Example

```
RMI AP,,[PROV],CreateLdev,,Normal end,Seq.=xxxxxxxxxx
+{LogicalDevice[0]{
  ID=0x00:0x00:0x00,ParityGroupID=1-1,ExternalGroupID=null,
  Emulation=OPEN-V,Capacity(Block)=96000,Position=0,
  MpUnitId=0,T10pi=true,Result=Normal end}}}
```

Detailed Information

Item	Description
LogicalDevice[x]	The setting information of the LDEV

Item		Description
	ID	The LDEV ID
	ParityGroupID	The parity group ID to which the LDEV belongs "null" is output if an external volume is created.
	ExternalGroupID	The external group ID to which the LDEV belongs "null" is output if an internal volume is created.
	Emulation	The emulation type
	Capacity(Block)	The capacity
	Position	The LDEV ID (Initial number)
	MpUnitId	The MP unit ID assigned to the LDEV
	T10pi	Indicates the setting status of the T10 PI attribute true: T10 PI is enabled. false: T10 PI is disabled.
	Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end xxxx: Part code, yyyyy: Error code

[PROV] CreateParityGroups

Example 1: Interleaved parity groups not being included

```
RMI AP,,[PROV],CreateParityGroups,,Normal end,Seq.=xxxxxxxxxx
+{ParityGroup[0]{
  ID=1-1,RAIDLevel=2D+2D,
  CachePartition{
    CLPR=0},
  Encryption=true,Copy-backMode=true,Emulation=OPEN-V,
  Drive[0]{
    Location=HDD0-0},
  Result=Normal end}}
```

Detailed Information

Item		Description
ParityGroup[x]		The setting information of the parity group
	ID	The parity group ID
	RAIDLevel	The RAID level
	CachePartition	The CLPR information
	CLPR	The CLPR ID
	Encryption	The setting status of encryption true: Enabled, false: Disabled
	Copy-backMode	The setting status of the copy-back mode

Item		Description
		true: Enabled, false: Disabled
	Emulation	The emulation type
	Drive[x]	The information of the drive configuring the parity group
	Location	The mounting position of the drive
	Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end xxxx: Part code, yyyyy: Error code

Example 2: Interleaved parity groups being included

```

RMI AP,,[PROV],CreateParityGroups,,Normal end,Seq.=xxxxxxxxxx
+{ParityGroup[0]{
  ID=1-1,RAIDLevel=2D+2D,
  CachePartition{
    CLPR=0},
  Encryption=true,Copy-backMode=true,Emulation=OPEN-V,
  Drive[0]{
    Location=HDD0-0},
  Result=Normal end},
Concatenate[0]{
  ParityGroup[0]{
    ID=1-1},
  ParityGroup[1]{
    ID=1-2}}}

```

Detailed Information

Item		Description
	ParityGroup[x]	The setting information of the parity group
	ID	The parity group ID
	RAIDLevel	The RAID level
	CachePartition	The CLPR information
	CLPR	The CLPR ID
	Encryption	The setting status of encryption true: Enabled, false: Disabled
	Copy-backMode	The setting status of the copy-back mode true: Enabled, false: Disabled
	Emulation	The emulation type
	Drive[x]	The information of the drive configuring the parity group
	Location	The mounting position of the drive
	Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end

Item		Description
		xxxx: Part code, yyyy: Error code
	Concatenate[x]	The information of the interleaved parity group
	ParityGroup[x]	The information of the parity groups that make up the interleaved parity group
	ID	The parity group ID

[PROV] CreateRemoteChapUser

Example

```
RMI AP,, [PROV],CreateRemoteChapUser,,Normal end,Seq.=xxxxxxxx
+{iScsiPort[0]{
  Port=1A,
  iScsiTarget[0]{
    Id=0,
    RemoteiScsiUser[0]{
      ChapUserId="ChapUserId",Result=Normal end}}}}
```

Detailed Information

Item		Description
	iScsiPort[x]	The setting information of the port
	Port	The port ID to be set
	iScsiTarget[x]	The iSCSI target information
	Id	The iSCSI target ID
	RemoteiScsiUser[x]	The user information of the CHAP authentication
	ChapUserId	The user ID of the CHAP authentication
	Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyy): Abnormal end xxxx: Part code, yyyy: Error code

[PROV] CreateSlus

Example

```
RMI AP,, [PROV],CreateSlus,,Normal end,Seq.=xxxxxxxx
+{Slus[0]{
  LdevId=0x00:0x00:0xBC,Result=Normal end,Capacity=8388608,
  MpUnitId=Auto,
  Clpr{
    Id=0},
  Pool{
    Id=9},
```

```
Id="60-06-0E-81-30-76-D9-30-76-D9-00-00-00-00-00-BC",
FullAllocation=false}}
```

Detailed Information

Item		Description
Slus[x]		The setting information of the created LDEV with the SLU attribute
	LdevId	The LDEV ID
	Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end, Not Execute: Not Executed xxxx: Part code, yyyy: Error code
	Capacity	The capacity
	MpUnitId	The MP Unit ID "Auto" indicates the auto assignment is enabled.
	Clpr	The CLPR setting information
	Id	The CLPR ID
	Pool	The pool setting information
	Id	The pool number
	Id	The SLU ID
	FullAllocation	Indicates the setting status of the Full Allocation true: Full Allocation is enabled. false: Full Allocation is disabled.

[PROV] CreateTiPairsWithSlu

Example

```
RMI AP,,[PROV],CreateTiPairsWithSlu,,Normal end,
Seq.=xxxxxxxxxx
+{TiPairs[0]{
  PrimaryVolume{
    Slu{
      Id="60-06-0E-81-30-00-32-30-00-32-00-00-00-00-30-00"},
    Ldev{
      Id=0x00:0x30:0x00}},
    AccessAttribute=ReadOnly,FastClone=false,
    Pool{
      Id=2},
    Result=Normal end,MirrorUnit=3,
    SnapshotSlu{
      Id="60-06-0E-81-30-00-32-30-00-32-00-00-80-00-00-00"}}}
```

Detailed Information

Item		Description
TiPairs[x]		The setting information of the created Thin Image pair
	PrimaryVolume	The setting information of the primary volume
	Slu	The SLU information
	Id	The SLU ID
	Ldev	The LDEV information
	Id	The LDEV ID
	AccessAttribute	The access attribute FullAccess: Read/Write, ReadOnly: Read Only
	FastClone	The setting status of the fast clone for the snapshot true: Enabled, false: Disabled
	Pool	The pool information
	Id	The pool number
	Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end, Not Execute: Not Executed xxxx: Part code, yyyy: Error code
	MirrorUnit	The mirror unit number
	SnapshotSlu	The SLU information of the secondary volume
	Id	The SLU ID

[PROV] CreateTiVolumes

Example

```
RMI AP,,[PROV],CreateTiVolumes,,Normal end,Seq.=xxxxxxxxxx
+{TiVolumes[0]{
  LdevId=0x00:0x00:0xBC,Result=Normal end,Capacity=8388608,
  MpUnitId=Auto,
  Clpr{
    Id=0}}}
```

Detailed Information

Item		Description
TiVolumes[x]		The setting information of the created secondary volume for Thin Image
	LdevId	The LDEV ID
	Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end, Not Execute: Not Executed

Item		Description
		xxxx: Part code, yyyy: Error code
	Capacity	The capacity
	MpUnitId	The MP Unit ID "Auto" indicates the auto assignment is enabled.
	Clpr	The CLPR setting information
	Id	The CLPR ID

[PROV] Delete Host Groups

Example

```
RMI AP,Task Name,[PROV],Delete Host Groups,,Normal end,
Seq.=xxxxxxxxxx
+{Port,HostGrpID}
=[{XX,0xXXX},{XX,0xXXX}],Num. of Host Groups=2
```

Detailed Information

Item	Description
Port	The name of the port to which the deleted or initialized host group belonged
HostGrpID	The host group number deleted or initialized
Num. of Host Groups	The number of host groups deleted or initialized

[PROV] Delete LDEVs

Delete LDEVs is output when volumes of Thin Image or DP-VOLs are deleted. DeleteLdev is output when internal or external volumes are deleted.

Example 1: Deleting Thin Image volumes

```
RMI AP,Task Name,[PROV],Delete LDEVs,Snapshot,Normal end,
Seq.=xxxxxxxxxx
+{LDKC:CU:LDEV, Result}=[{0x00: 0x00: 0x00, Normal end},
{0x00: 0x01: 0x00, Normal end},
{0x00: 0x02: 0x00, Normal end}],
Num. of LDEVs=3
```

Example 2: Deleting DP-VOLs

```
RMI AP,Task Name,[PROV],Delete LDEVs,Thin Provisioning,Normal end,
Seq.=xxxxxxxxxx
+{LDKC:CU:LDEV, Result}=[{0x00: 0x00: 0x00, Normal end},
{0x00: 0x01: 0x00, Normal end},
{0x00: 0x02: 0x00, Normal end}],
Num. of LDEVs=3
```

Basic Information for Example 1 and 2

Item	Description
Snapshot	Operating for the Thin Image volumes.
Thin Provisioning	Operating for the Dynamic Provisioning virtual volumes.

Detailed Information for Example 1 and 2

Item	Description
LDKC:CU:LDEV	The logical DKC, CU, and LDEV numbers of the deleted V-Vols These numbers are separated by colons and arranged in this order.
Result	The result of operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end <i>where xxxx: Part code, yyyy: Error code</i>
Num. of LDEVs	The number of deleted V-Vols

[PROV] Delete Login WWNs

Example

```
RMI AP,Task Name,[PROV],Delete Login WWNs,,Normal end,  
Seq.=xxxxxxxxxx  
+{Port,Delete WWN}  
=[{XX,0xxxxxxxxxxxxxxxx}, {XX,0xxxxxxxxxxxxxxxx}],  
Num. of WWNs=2
```

Detailed Information

Item	Description
Port	The port name where the host of deleted WWN was connected
Delete WWN	The deleted WWN. WWN is a 16-digit number in the hexadecimal format.
Num. of WWNs	The number of WWNs deleted

[PROV] Delete LUN Paths

Example

```
RMI AP,Task Name,[PROV],Delete LUN Paths,,Normal end,  
Seq.=xxxxxxxxxx  
+{Port,HostGrpID,LUN}  
=[{XX,0xxx,xxxx}, {XX,0xxx,xxxx}, {XX,0xxx,xxxx}],  
Num. of Paths=3
```

Detailed Information

Item	Description
Port	The name of the port to which the host group belongs
HostGrpID	The host group number where the LU path is deleted
LUN	Indicates LUN where the LU path assignment is cancelled
Num. of Paths	The number of LU paths deleted

[PROV] Delete Resource Grps

Example

```
RMI AP, Task Name, [PROV], Delete Resource Grps, , Normal end,  
Seq.=xxxxxxxxxx  
+{VDKC-Box ID, Resource Group ID, Result}  
=[{0, 1, Normal end}, {0, 2, Normal end}], Num. of Resource Groups=2
```

Detailed Information

Item	Description
VDKC-Box ID	The number of the VDKC-Box to which the deleted resource group belongs
Resource Group ID	The number of the deleted resource group
Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end xxxx: Part code, yyyy: Error code
Num. of Resource Groups	The number of deleted resource groups

[PROV] Delete VDKC-Box

Example

```
RMI AP, , Task Name, [PROV], Delete VDKC-Box, , Normal end, Seq.=xxxxxxxxxx  
+{VDKC-Box ID, Result}=[{1, Normal end}], Num. of VDKC-Boxes=1
```

Detailed Information

Item	Description
VDKC-Box ID	The number of the deleted VDKC-Box
Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end xxxx: Part code, yyyy: Error code

Item	Description
Num. of VDKC-Boxes	The number of deleted VDKC-Boxes

[PROV] DeleteAlus

Example

```
RMI AP, Task Name, [PROV], DeleteAlus, , Normal end, Seq.=xxxxxxxxxx
+{Alus[0]{
  Id="60-06-0E-81-30-76-D9-30-76-D9-00-00-00-00-49",
  Result=Normal end, LdevId=0x00:0x00:0x49}}
```

Detailed Information

Item	Description
Alus[x]	The setting information of the deleted LDEV with the ALU attribute
Id	The ALU ID
Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end, Not Execute: Not Executed xxxx: Part code, yyyy: Error code
LdevId	The LDEV ID

[PROV] DeleteiScsiInitiatorUser

Example

```
RMI AP, , [PROV], DeleteiScsiInitiatorUser, , Normal end, Seq.=xxxxxxxxxx
+{iScsiPort[0]{
  Port=1A, Result=Normal end}}
```

Detailed Information

Item	Description
iScsiPort[x]	The setting information of the port
Port	The port ID to be set
Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end xxxx: Part code, yyyy: Error code

[PROV] DeleteiScsiName

Example

```
RMI AP,,[PROV],DeleteiScsiName,,Normal end,Seq.=xxxxxxxxxx
+{iScsiPort[0]{
  Port=1A,
  iScsiTarget[0]{
    Id=0,
    RemoteiScsiName[0]{
      Name="Name",Result=Normal end}}}}
```

Detailed Information

Item		Description
iScsiPort[x]		The setting information of the port
	Port	The port ID to be set
	iScsiTarget[x]	The iSCSI target information
	Id	The iSCSI target ID
	RemoteiScsiName[x]	The information of the iSCSI name of the host bus adapter
	Name	The iSCSI name of the host bus adapter
	Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end xxxx: Part code, yyyyy: Error code

[PROV] DeleteiScsiPath

Example

```
RMI AP,,[PROV],DeleteiScsiPath,,Normal end,Seq.=xxxxxxxxxx
+{iScsiPath[0]{
  iScsiPort{
    Port=1A},
  RemoteiScsiPort{
    Function=UVM,IpType=IPv4,Ipv4Address=192.168.0.101,
    Ipv6Address=0:0:0:0:0:0:0:0,
    RemoteiScsiTarget{
      Name="iqn.1994-04.jp.co.hitachi.h8m.t.00001.3a000"}},
  Result=Normal end}}
```

Detailed Information

Item	Description
iScsiPath[x]	The path information between the iSCSI port on the local storage system and the iSCSI target on the remote storage system

Item		Description
	iScsiPort	The information of the iSCSI port on the local storage system
	Port	The port ID
	RemoteiScsiPort	The information of the iSCSI port on the remote storage system
	Function	Function that uses the iSCSI path UVM: Universal Volume Manager RemoteReplication: Remote Replication
	IpType	The type of the IP address IPv4: IPv4 address, IPv6: IPv6 address
	IPv4Address	The IPv4 address*
	IPv6Address	The IPv6 address*
	RemoteiScsiTarget	The iSCSI target information
	Name	The iSCSI name
	Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end xxxx: Part code, yyyy: Error code
* "null" is output if this item is not set.		

[PROV] DeleteiScsiTarget

Example

```
RMI AP,,[PROV],DeleteiScsiTarget,,Normal end,Seq.=xxxxxxxxxx
+{iScsiPort[0]{
  Port=1A,
  iScsiTarget[0]{
    Id=0,Result=Normal end}}}
```

Detailed Information

Item		Description
iScsiPort[x]		The setting information of the port
	Port	The port ID to be set
	iScsiTarget[x]	The iSCSI target information
	Id	The iSCSI target ID
	Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end xxxx: Part code, yyyy: Error code

[PROV] DeleteLdev

DeleteLdev is output when internal or external volumes are deleted. Delete LDEVs is output when volumes of Thin Image or DP-VOLs are deleted.

Example

```
RMI AP,,[PROV],DeleteLdev,,Normal end,Seq.=xxxxxxxxxx
+{LogicalDevice[0]{
  ID=0x00:0x00:0x00,ParityGroupID=1-1,ExternalGroupID=null,
  Result=Normal end}}
```

Detailed Information

Item		Description
LogicalDevice[x]		The setting information of the LDEV
	ID	The LDEV ID
	ParityGroupID	The parity group ID to which the LDEV belongs "null" is output if an external volume is deleted.
	ExternalGroupID	The external group ID to which the LDEV belongs "null" is output if an internal volume is deleted.
	Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end xxxx: Part code, yyyyy: Error code

[PROV] DeleteLoginiScsiName

Example

```
RMI AP,,[PROV],DeleteLoginiScsiName,,Normal end,Seq.=xxxxxxxxxx
+{iScsiPort[0]{
  Port=1A,Result=Normal end}}
```

Detailed Information

Item		Description
iScsiPort[x]		The setting information of the port
	Port	The port ID to be set
	Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end xxxx: Part code, yyyyy: Error code

[PROV] DeleteParityGroups

Example

```
RMI AP,,[PROV],DeleteParityGroups,,Normal end,Seq.=xxxxxxxxx
+{ParityGroup[0]{
    ID=1-1,Result=Normal end}}
```

Detailed Information

Item		Description
ParityGroup[x]		The setting information of the parity group
	ID	The parity group ID
	Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end xxxx: Part code, yyyy: Error code

[PROV] DeleteRemoteChapUser

Example

```
RMI AP,,[PROV],DeleteRemoteChapUser,,Normal end,Seq.=xxxxxxxxx
+{iScsiPort[0]{
    Port=1A,
    iScsiTarget[0]{
        Id=0,
        RemoteiScsiUser[0]{
            ChapUserId="ChapUserId",Result=Normal end}}}}
```

Detailed Information

Item		Description
iScsiPort[x]		The setting information of the port
	Port	The port ID to be set
	iScsiTarget[x]	The iSCSI target information
	Id	The iSCSI target ID
	RemoteiScsiUser[x]	The user information of the CHAP authentication
	ChapUserId	The user ID of the CHAP authentication
	Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end xxxx: Part code, yyyy: Error code

[PROV] DeleteSlus

Example

```
RMI AP,,[PROV],DeleteSlus,,Normal end,Seq.=xxxxxxxxxx
+{Slus[0]{
  Id="60-06-0E-81-30-76-D9-30-76-D9-00-00-00-00-49",
  Result=Normal end,LdevId=0x00:0x00:0x49}}
```

Detailed Information

Item		Description
Slus[x]		The setting information of the deleted LDEV with the SLU attribute
	Id	The SLU ID
	Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end, Not Execute: Not Executed xxxx: Part code, yyyy: Error code
	LdevId	The LDEV ID

[PROV] DeleteTargetChapUser

Example

```
RMI AP,,[PROV],DeleteTargetChapUser,,Normal end,Seq.=xxxxxxxxxx
+{iScsiPort[0]{
  Port=1A,
  iScsiTarget[0]{
    Id=0,ChapUserId="ChapUserId",Result=Normal end}}}
```

Detailed Information

Item		Description
iScsiPort[x]		The setting information of the port
	Port	The port ID to be set
	iScsiTarget[x]	The iSCSI target information
	Id	The iSCSI target ID
	ChapUserId	The user ID of the CHAP authentication
	Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end xxxx: Part code, yyyy: Error code

[PROV] DeleteTiVolumes

Example

```
RMI AP,,[PROV],DeleteTiVolumes,,Normal end,Seq.=xxxxxxxxx
+{TiVolumes[0]{
  LdevId=0x00:0x10:0x00,Result=Normal end}}
```

Detailed Information

Item		Description
TiVolumes[x]		The setting information of the deleted secondary volume for Thin Image
	LdevId	The LDEV ID
	Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end, Not Execute: Not Executed xxxx: Part code, yyyy: Error code

[PROV] DRU Expiration Lock

Example

```
RMI AP,,[PROV],DRU Expiration Lock,SYSTEM:Enable,Normal end,
Seq.=xxxxxxxxx
```

Basic Information

Parameter	Description
SYSTEM:Enable	The expiration-lock setting is enabled in the storage system
SYSTEM:Disable	The expiration-lock setting is disabled in the storage system

[PROV] Edit Cmd Dev(Auth)

Example

```
RMI AP,Task Name,[PROV],Edit Cmd Dev(Auth),,Normal end,
Seq.=xxxxxxxxx
+{LDKC:CU:LDEV,UserAuth}={0xXX:0xXX:0xXX,Disable},
{0xXX:0xXX:0xXX,Enable}],Num. of LDEVs=2
```

Detailed Information

Item	Description
LDKC:CU:LDEV	The LDKC, CU, and LDEV numbers of the logical volume where the command device authentication setting is changed

Item	Description
UserAuth	Indicates whether the command device authentication setting is enabled or disabled. Disable or Enable will appear.
Num. of LDEVs	The number of logical volumes where the command device authentication setting is changed

[PROV] Edit Cmd Dev(DevGrp)

Example

```
RMI AP,Task Name,[PROV],Edit Cmd Dev(DevGrp),,Normal end,
Seq.=xxxxxxxxxx
+{LDKC:CU:LDEV,DevGrpDef}
=[{0xXX:0xXX:0xXX,Disable},{0xXX:0xXX:0xXX,Enable}],
Num. of LDEVs=2
```

Detailed Information

Item	Description
LDKC:CU:LDEV	The LDKC, CU, and LDEV numbers of the logical volume where the device groups setting is changed
DevGrpDef	Indicates whether the device groups setting is enabled or disabled. Disable or Enable will appear
Num. of LDEVs	The number of logical volumes where the device groups setting is changed

[PROV] Edit Cmd Dev(Sec)

Example

```
RMI AP,Task Name,[PROV],Edit Cmd Dev(Sec),,Normal end,
Seq.=xxxxxxxxxx
+{LDKC:CU:LDEV,CommandDevSec}
=[{0xXX:0xXX:0xXX,Disable},{0xXX:0xXX:0xXX,Enable}],
Num. of LDEVs=2
```

Detailed Information

Item	Description
LDKC:CU:LDEV	The LDKC, CU, and LDEV numbers of the logical volume where the command device security setting is changed
CommandDevSec	Indicates whether the command device security setting is enabled or disabled. Disable or Enable will appear.
Num. of LDEVs	The number of logical volumes that the command device security setting is changed

[PROV] Edit Command Devices

Example

```
RMI AP, Task Name, [PROV], Edit Command Devices, , Normal end,
Seq.=xxxxxxxx
+{LDKC:CU:LDEV, CommandDev}=[{0xXX:0xXX:0xXX, Disable},
{0xXX:0xXX:0xXX, Enable}], Num. of LDEVs=2
```

Detailed Information

Item	Description
LDKC:CU:LDEV	The LDKC, CU, and LDEV numbers of the logical volume where the command device setting is changed
CommandDev	Indicates whether the command device setting is enabled or disabled. Disable or Enable will appear.
Num. of LDEVs	The number of logical volumes where the command device setting is changed

[PROV] Edit DRU Attribute

Example

```
RMI AP, , [PROV], Edit DRU Attribute, , Normal end, Seq.=xxxxxxxx
+{LDKC:CU:LDEV, Attribute, RT, Result}
=[{0x00:0x00:0x01, 0x80, 100, Normal end},
{0x00:0x00:0x02, 0x82, Unlimited, Error(9605-8122)},
{0x00:0x00:0x03, 0x81, 200, Normal end},
{0x00:0x00:0x03, 0x81, xxxx, Normal end}],
Num. of LDEVs=XXX
```

Detailed Information

Item	Description
LDKC:CU:LDEV	The LDKC, CU, and LDEV numbers of the logical volume where the attribute is set
Attribute	The set attribute in hexadecimal. Each bit (0–7) of 1 byte corresponds to the setting item. 1 is assigned to each bit when the setting is enabled and 0 (zero) is assigned to each bit when the setting is disabled. Each bit represents the following attributes: - Bit 0: Mounting of LEDV (fixed to 1) - Bit 1: Setting of S-VOL Disable - Bit 2: Setting of Zero Read Cap mode - Bit 3: Setting of Invisible mode - Bit 4: Setting of reserve - Bit 5: Fixed to 0 (zero)* - Bit 6: Setting of Read Only attribute*

Item	Description
	Bit 7: Setting of Protect attribute* When 0x88 is output to the attribute, for example, Read/Write attribute is set to the logical volume to show that the reserve setting has been enabled. A hyphen (-) is output when a setting is not changed.
RT	The number of days set in Retention Term. A hyphen (-) is output when setting is not changed.
Result	The result of operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end <i>where xxxx: Part code, yyyy: Error code</i>
Num. of LDEVs	The number of logical volumes where the attribute has been set
*When bit 5, 6, and 7 are all 0 (zero), Read/Write has been set.	

[PROV] Edit Full Allocation

Example

```

RMI AP,Task Name,[PROV],Edit Full Allocation,,Normal end,
Seq.=xxxxxxxxxx
+{Pool ID,LDKC:CU:LDEV,Full Allocation,Result}
=[{0,0x00:0x00:0x00,Enable,Normal end}],Num. of VOLs=1

```

Detailed Information

Item	Description
Pool ID	The pool ID associated with the virtual volume of Dynamic Provisioning
LDKC:CU:LDEV	The LDEV ID of the virtual volume of Dynamic Provisioning
Full Allocation	Indicates the setting status of the Full Allocation Enable: Full Allocation is enabled. Disable: Full Allocation is disabled.
Result	The result of operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end <i>where xxxx: Part code, yyyy: Error code</i>
Num. of VOLs	The number of virtual volumes of Dynamic Provisioning whose page reservation settings were changed

[PROV] Edit Host

Example

```
RMI AP,Task Name,[PROV],Edit Host,,Normal end,Seq.=xxxxxxxxx
+{Port,HostGrpID,WWN,Change WWN,Change Nickname}
=[{XX,0xXXX,0XXXXXXXXXXXXXXXXXX,0XXXXXXXXXXXXXXXXXX,
XXXXXXXXXXXXXXXXXX}],
Num. of WWNs=1
```

Detailed Information

Item	Description
Port	The name of the port where the host is connected
HostGrpID	The host group number on which the host with WWN or nickname of the host bus adapter being changed is registered
WWN	Indicates WWN of the host bus adapter before change. WWN is represented in hexadecimal
Change WWN	Indicates WWN of the host bus adapter after change
Change Nickname	The nickname of the host bus adapter after change
Num. of WWNs	The number of host bus adapters (WWN) where the settings have been changed

[PROV] Edit Host Grps(Mode)

Example

```
RMI AP,Task Name,[PROV],Edit Host Grps(Mode),,Normal end,
Seq.=xxxxxxxxx
+{Port,HostGrpID,Mode,Option[0:31],Option[32:63],Option[64:95],
Option[96:127]}
=[{XX,0xXXX,0x00,0x20000000,0x00000000,0x00000000,0x00000000},
{XX,0xXXX,0x09,0x00080000,0x00000000,0x00000000,0x00000000}],
Num. of Host Groups=2
```

Item	Description
Port	The name of the port to which the host group belongs.
HostGrpID	The host group number where the host group names have been changed.
Mode	The specified host mode. See the <i>Provisioning Guide for Hitachi Virtual Storage Platform Gx00 and Fx00 Models</i> for the meaning of the host mode number.
Option[0:31] Option[32:63] Option[64:95] Option[96:127]	The specified host mode option. 128 host mode options from 0 to 127 are output in groups of 32 options. The following tables show the output values corresponding to the host mode options. See the <i>Provisioning Guide for Hitachi Virtual Storage Platform Gx00 and Fx00 Models</i> for the meaning of the host mode options.

Item	Description
Num. of Host Groups	The number of host groups that the host mode setting is changed.

Host mode option and output contents of Option

Table 4-1 Host mode option 0 to 31 and output contents of Option[0:31]

Host mode option	Value of Option[0:31]	Host mode option	Value of Option[0:31]
0	0x80000000	16	0x00008000
1	0x40000000	17	0x00004000
2	0x20000000	18	0x00002000
3	0x10000000	19	0x00001000
4	0x08000000	20	0x00000800
5	0x04000000	21	0x00000400
6	0x02000000	22	0x00000200
7	0x01000000	23	0x00000100
8	0x00800000	24	0x00000080
9	0x00400000	25	0x00000040
10	0x00200000	26	0x00000020
11	0x00100000	27	0x00000010
12	0x00080000	28	0x00000008
13	0x00040000	29	0x00000004
14	0x00020000	30	0x00000002
15	0x00010000	31	0x00000001

Table 4-2 Host mode option 32 to 63 and output contents of Option[32:63]

Host mode option	Value of Option[32:63]	Host mode option	Value of Option[32:63]
32	0x80000000	48	0x00008000
33	0x40000000	49	0x00004000
34	0x20000000	50	0x00002000
35	0x10000000	51	0x00001000
36	0x08000000	52	0x00000800
37	0x04000000	53	0x00000400
38	0x02000000	54	0x00000200

Host mode option	Value of Option[32:63]	Host mode option	Value of Option[32:63]
39	0x01000000	55	0x00000100
40	0x00800000	56	0x00000080
41	0x00400000	57	0x00000040
42	0x00200000	58	0x00000020
43	0x00100000	59	0x00000010
44	0x00080000	60	0x00000008
45	0x00040000	61	0x00000004
46	0x00020000	62	0x00000002
47	0x00010000	63	0x00000001

Table 4-3 Host mode option 64 to 95 and output contents of Option[64:95]

Host mode option	Value of Option[64:95]	Host mode option	Value of Option[64:95]
64	0x80000000	80	0x00008000
65	0x40000000	81	0x00004000
66	0x20000000	82	0x00002000
67	0x10000000	83	0x00001000
68	0x08000000	84	0x00000800
69	0x04000000	85	0x00000400
70	0x02000000	86	0x00000200
71	0x01000000	87	0x00000100
72	0x00800000	88	0x00000080
73	0x00400000	89	0x00000040
74	0x00200000	90	0x00000020
75	0x00100000	91	0x00000010
76	0x00080000	92	0x00000008
77	0x00040000	93	0x00000004
78	0x00020000	94	0x00000002
79	0x00010000	95	0x00000001

Table 4-4 Host mode option 96 to 127 and output contents of Option[96:127]

Host mode option	Value of Option[96:127]	Host mode option	Value of Option[96:127]
96	0x80000000	112	0x00008000
97	0x40000000	113	0x00004000
98	0x20000000	114	0x00002000
99	0x10000000	115	0x00001000
100	0x08000000	116	0x00000800
101	0x04000000	117	0x00000400
102	0x02000000	118	0x00000200
103	0x01000000	119	0x00000100
104	0x00800000	120	0x00000080
105	0x00400000	121	0x00000040
106	0x00200000	122	0x00000020
107	0x00100000	123	0x00000010
108	0x00080000	124	0x00000008
109	0x00040000	125	0x00000004
110	0x00020000	126	0x00000002
111	0x00010000	127	0x00000001

When more than one option is set, a logical sum of their values is output. For example, if 0x200C0000 is output to Option[0:31], it means the host mode options [2], [12], and [13] are set.

[PROV] Edit Host Grps(Name)

Example

```
RMI AP,Task Name,[PROV],Edit Host Grps(Name),,Normal end,
Seq.=xxxxxxxxxx
+{Port,HostGrpID,HostGrpName}
=[{XX,0xXXX,XXXXXXXXXXXXXXXXXX},{XX,0xXXX,XXXXXXXXXXXXXXXXXX}],
Num. of Host Groups=2
```

Detailed Information

Item	Description
Port	The name of the port to which the host group belongs
HostGrpID	The host group number where the host group names have been changed

Item	Description
HostGrpName	The name of the host group. If the name is changed, the name after change is indicated
Num. of Host Groups	The number of host groups where the settings have been changed

[PROV] Edit LDEVs(tier)

Example

```
RMI AP,Task Name,[PROV],Edit LDEVs(tier),,Normal end,
Seq.=xxxxxxxxxx
+{Pool ID,LDKC:CU:LDEV,Tier Relocation}
=[{1,0x00:0x01:0x0F,Disable}],Num. of LDEVs = 1
```

Detailed Information

Item	Description
Pool ID	The pool number of the edited LDEV
LDKC:CU:LDEV	The LDKC number, CU number and the LDEV number of the edited volume
Tier Relocation	Indicates whether the tier relocation is enabled or disabled. Enable: Enabled, Disable: Disabled
Num. of LDEVs	The number of edited LDEVs

[PROV] Edit LDEV Tier Rank

Example

```
RMI AP,Task Name,[PROV],Edit LDEV Tier Rank,,Normal end,
Seq.=xxxxxxxxxx
+{Pool ID,Pool Result}=[{1,Normal end}],Num. of Pools=1
++{LDKC:CU:LDEV,External LDEV Tier Rank,LDEV Result}
=[{0x00:0x00:0x00,Middle/Internal,Normal end},
{0x00:0x00:0x01,Middle/Internal,Normal end},
{0x00:0x00:0x02,Middle/Internal,Normal end}],Num. of LDEVs=3
```

Detailed Information

Item	Description
Pool ID	The number of the pool where the edited pool volumes are assigned
Pool Result	The result of editing pool volumes per pool Normal end: Normal end Error(xxxx-yyyyy): Abnormal end Not Execute: Not executed

Item	Description
	where xxxx: Part code, yyyy: Error code
Num. of Pools	The number of pools whose pool volumes are edited
LDKC:CU:LDEV	The LDKC, CU, and LDEV numbers of the edited pool volume
External LDEV Tier Rank	The external LDEV tier rank of the edited pool volume High: An external volume (High) Middle/Internal: An external volume (Middle) or an internal volume Low: An external volume (Low)
LDEV Result	The result of editing pool volumes per pool volume Normal end: Normal end Error(xxxx-yyyy): Abnormal end Not Execute: Not executed where xxxx: Part code, yyyy: Error code
Num. of LDEVs	The number of edited pool volumes

[PROV] Edit MP Units

Example

```
RMI AP,Task Name,[PROV],Edit MP Units,,Normal end,
Seq.=xxxxxxxxxx
+{DKC,MP Unit ID,Auto Assignment,Result}
=[{0,00,Enable,Normal end}],Num. of MP Units=1
```

Detailed Information

Item	Description
DKC	The DKC number
MP Unit ID	The MP Unit number in the DKC module
Auto Assignment	Indicates whether the auto assignment setting is enabled or disabled. Enable or Disable will appear
Result	The result of operation Normal end: Normal end, Error(xxxx-yyyy): Abnormal end where xxxx: Part code, yyyy: Error code
Num. of MP Units	The number of specified MP Units

[PROV] Edit Ports(Address)

Example

```
RMI AP,Task Name,[PROV],Edit Ports(Address),,Normal end,  
Seq.=xxxxxxxxxx  
+{Port,Fibre Addr.}=[{XX,1},{XX,126}],Num. of Ports=2
```

Detailed Information

Item	Description
Port	The name of the port that the address has been changed
Fibre Addr.	The address of Fibre Channel port after change using the number from 1 to 126. See the following table for relation of number and Fibre Channel port address.
Num. of Ports	The number of ports where address has been changed

Table 4-5 Addresses of Fibre Channel Port

Value	Address*	Value	Address*	Value	Address*	Value	Address*
1	EF (0)	33	B2 (32)	65	72 (64)	97	3A (96)
2	E8 (1)	34	B1 (33)	66	71 (65)	98	39 (97)
3	E4 (2)	35	AE (34)	67	6E (66)	99	36 (98)
4	E2 (3)	36	AD (35)	68	6D (67)	100	35 (99)
5	E1 (4)	37	AC (36)	69	6C (68)	101	34 (100)
6	E0 (5)	38	AB (37)	70	6B (69)	102	33 (101)
7	DC (6)	39	AA (38)	71	6A (70)	103	32 (102)
8	DA (7)	40	A9 (39)	72	69 (71)	104	31 (103)
9	D9 (8)	41	A7 (40)	73	67 (72)	105	2E (104)
10	D6 (9)	42	A6 (41)	74	66 (73)	106	2D (105)
11	D5 (10)	43	A5 (42)	75	65 (74)	107	2C (106)
12	D4 (11)	44	A3 (43)	76	63 (75)	108	2B (107)
13	D3 (12)	45	9F (44)	77	5C (76)	109	2A (108)
14	D2 (13)	46	9E (45)	78	5A (77)	110	29 (109)
15	D1 (14)	47	9D (46)	79	59 (78)	111	27 (110)
16	CE (15)	48	9B (47)	80	56 (79)	112	26 (111)
17	CD (16)	49	98 (48)	81	55 (80)	113	25 (112)
18	CC (17)	50	97 (49)	82	54 (81)	114	23 (113)
19	CB (18)	51	90 (50)	83	53 (82)	115	1F (114)
20	CA (19)	52	8F (51)	84	52 (83)	116	1E (115)

Value	Address*	Value	Address*	Value	Address*	Value	Address*
21	C9 (20)	53	88 (52)	85	51 (84)	117	1D (116)
22	C7 (21)	54	84 (53)	86	4E (85)	118	1B (117)
23	C6 (22)	55	82 (54)	87	4D (86)	119	18 (118)
24	C5 (23)	56	81 (55)	88	4C (87)	120	17 (119)
25	C3 (24)	57	80 (56)	89	4B (88)	121	10 (120)
26	BC (25)	58	7C (57)	90	4A (89)	122	0F (121)
27	BA (26)	59	7A (58)	91	49 (90)	123	08 (122)
28	B9 (27)	60	79 (59)	92	47 (91)	124	04 (123)
29	B6 (28)	61	76 (60)	93	46 (92)	125	02 (124)
30	B5 (29)	62	75 (61)	94	45 (93)	126	01 (125)
31	B4 (30)	63	74 (62)	95	43 (94)	-	-
32	B3 (31)	64	73 (63)	96	3C (95)	-	-
*Addresses outside parentheses indicate arbitrated-loop physical address (AL-PA). Addresses in parentheses indicate loop IDs.							

[PROV] Edit Ports(Security)

Example

```
RMI AP,Task Name,[PROV],Edit Ports(Security),,Normal end,
Seq.=xxxxxxxxxx
+{Port,Switch}=[{XX,Disable},{XX,Enable}],Num. of Ports=2
```

Detailed Information

Item	Description
Port	The name of the port where the LUN security setting is changed
Switch	Indicates whether the LUN security setting is enabled or disabled. Disable or Enable is output
Num. of Ports	The number of ports where the LUN security setting is changed

[PROV] Edit Ports(Speed)

Example

```
RMI AP,Task Name,[PROV],Edit Ports(Speed),,Normal end,
Seq.=xxxxxxxxxx
+{Port,Speed(Gbps)}=[{XX,1},{XX,2},{XX,Auto},{XX,4}],
Num. of Ports=4
```

Detailed Information

Item	Description
Port	The name of the port that the channel speed is set
Speed(Gbps)	The channel speed set 1: 1 Gbps, 2: 2 Gbps, 4: 4 Gbps, 8: 8 Gbps, Auto: Auto mode
Num. of Ports	The number of ports where the channel speed is set

[PROV] Edit Ports(Topology)

Example

```
RMI AP,Task Name,[PROV],Edit Ports(Topology),,Normal end,
Seq.=xxxxxxxxxx
+{Port,Fabric,Connection}={XX,Enable,FC-AL},{XX,Disable,FC-AL},
{XX,Enable,P-to-P},{XX,Disable,P-to-P}},Num. of Ports=4
```

Detailed Information

Item	Description
Port	The name of the port where the topology of Fibre Channel is changed.
Fabric	Indicates whether the Fabric switch is enabled or disabled. Disable or Enable is output.
Connection	The connecting mode of the Fabric switch selected. FC-AL: FC-AL is selected, P-to-P: P-to-P is selected
Num. of Ports	The number of ports where the topology of Fibre Channel is changed

[PROV] Edit Resource Grp

Example

```
RMI AP,Task Name,[PROV],Edit Resource Grp,,Normal end,
Seq.=xxxxxxxxxx
+{VDKC-Box ID,Resource Group ID,Resource Group Name,Result}
=[{0,1,RSG1,Normal end}],Num. of Resource Groups=1
```

Detailed Information

Item	Description
VDKC-Box ID	The number of the VDKC-Box to which the configured resource group belongs
Resource Group ID	The number of the configured resource group

Item	Description
Resource Group Name	The contents of the setting for the changed resource group name
Result	The result of operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end where xxxx: Part code, yyyy: Error code
Num. of Resource Groups	The number of resource groups that operated the setting

[PROV] Edit Tiering Policy

Example

```
RMI AP,Task Name,[PROV],Edit Tiering Policy,,Normal end,
Seq.=xxxxxxxxxx
+{Tiering Policy ID,Tier1 Max(%) ,Tier1 Min(%) ,Tier3 Max(%) ,
Tier3 Min(%) ,Result}
=[{6,90,10,90,10,Normal end}],Num. of Policies=1
```

Detailed Information

Item	Description
Tiering Policy ID	The tiering policy ID
Tier1 Max(%)	The upper limit threshold value for the Tier1 The threshold value is displayed in the range 0 to 100. The unit is percent (%). This is output when the upper limit threshold value for the Tier1 is set.
Tier1 Min(%)	The lower limit threshold value for the Tier1 The threshold value is displayed in the range 0 to 100. The unit is percent (%). This is output when the lower limit threshold value for the Tier1 is set.
Tier3 Max(%)	The upper limit threshold value for the Tier3 The threshold value is displayed in the range 0 to 100. The unit is percent (%). This is output when the upper limit threshold value for the Tier3 is set.
Tier3 Min(%)	The lower limit threshold value for the Tier3 The threshold value is displayed in the range 0 to 100. The unit is percent (%). This is output when the lower limit threshold value for the Tier3 is set.
Result	The result of operation

Item	Description
	Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end, Not Execute: Not Executed <i>where xxxx: Part code, yyyy: Error code</i>
Num. of Policies	The number of tiering policies that was set

[PROV] Edit V-VOL Option

Example

```
RMI AP,Task Name,[PROV],Edit V-VOL Option,,Normal end,
Seq.=xxxxxxxxxx
+{Pool ID,LDKC:CU:LDEV,Tiering Policy ID,
New Page Assignment Tier,Relocation Priority,Result}
=[{0,0x00:0x00:0x00,1,Middle,Default,Normal end}],
Num. of VOLs=1
```

Detailed Information

Item	Description
Pool ID	The pool ID of a pool associated with the V-VOL for Dynamic Provisioning to which Tiering policy is set
LDKC:CU:LDEV	The LDKC number, CU number, and LDEV number of the V-VOL for Dynamic Provisioning
Tiering Policy ID	The Tiering Policy ID This is output when the tiering policy is set.
New Page Assignment Tier	The new page assignment tier Middle: A middle performance tier, High: A high performance tier, Low: A low performance tier This is output when the new page assignment tier is set.
Relocation Priority	The relocation priority information Default: Normal, Prioritize: Prioritized This is output when the relocation priority information is set.
Result	The result of the operation. Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end, Not Execute: Not Executed <i>xxxx: Part code, yyyy: Error code</i>
Num. of VOLs	The number of operated V-VOLs for Dynamic Provisioning

[PROV] Edit/Delete Pools

Example

```
RMI AP,Task Name,[PROV],Edit/Delete Pools,,Normal end,
Seq.=xxxxxxxxxx
+{Command,Pool ID,Pool Type,Multi Tier Pool,Tier Management,
Cycle Time,Monitoring Period,Monitoring Mode,Result}
=[{Change Tier,1,Dynamic Provisioning,Enable,Auto,24,
10:00-11:00,Continuous Mode,Normal End}],Num. of Pool=1
++{Tier,Buffer Space for New page assignment(%),
Buffer Space for Tier relocation(%),Tier Result}
=[{1,10,10,Normal end},{2,20,20,Normal end}],Num. of Tiers=2
```

Detailed Information

Item	Description
Command	The operation on the pool Change: Changing pool information about the threshold and the subscription limit Change Tier: Changing information about Dynamic Tiering Delete: Delete pool
Pool ID	The pool ID of the pool where the settings have been changed or the number of the pool that have been deleted
Pool Type	The pool type Dynamic Provisioning: Dynamic Provisioning, Thin Image: Thin Image
Multi Tier Pool	The setting status of the multi-tier mode and active flash function for the pool Enable(Active Flash): Both Dynamic Tiering and active flash are enabled. Enable: Dynamic Tiering is enabled and active flash is disabled. Disable: Both Dynamic Tiering and active flash are disabled. This item is output only when "Command" is "Change Tier". If Pool Type is Thin Image, a hyphen (-) is output.
Warning Threshold(%)	The warning threshold of the usage rate of the pool in percent (%). This item is output only when "Command" is "Change".
Depletion Threshold(%)	The depletion threshold of the usage rate of the pool in percent (%). If the depletion threshold is not specified, this percentage is not output. This item is output only when "Command" is "Change". If Pool Type is Thin Image, or if the depletion threshold is not specified, a hyphen (-) is output.
Subscription Limit(%)	The reserve amount of the pool where the setting was changed. The unit is percent (%). If the reserve amount is not specified, it outputs "Unlimited". This item is output only when "Command" is "Change".

Item	Description
	If Pool Type is Thin Image, a hyphen (-) is output.
Protect V-VOLs when I/O fails to Blocked Pool VOL	Indicates whether the setting of the protect access attribute on the virtual volume is enabled or disabled when the pool is blocked. Yes: Enabled, No: Disabled This item is output only when "Command" is "Change". If the pool type is not Dynamic Provisioning, a hyphen (-) is output.
Protect V-VOLs when I/O fails to Full Pool	Indicates whether the setting of the protect access attribute on the virtual volume is enabled or disabled when the pool is full. Yes: Enabled, No: Disabled This item is output only when "Command" is "Change". If the pool type is not Dynamic Provisioning, a hyphen (-) is output.
Tier Management	The auto control mode of the created or expanded pool. Auto: Auto, Manual: Manual This item is output only when "Command" is "Change Tier". If Multi Tier Pool is anything other than Enable, a hyphen (-) is output.
Cycle Time	The cycle of performance monitoring for the pool. 0.5: every thirty minutes, 1: every one hour, 2: every two hours, 4: every four hours, 8: every eight hours, 24: every twenty-four hours This item is output only when "Command" is "Change Tier". If Tier Management is anything other than Auto, a hyphen (-) is output.
Monitoring Period	The monitoring period of the pool. Format: "H1:M1-H2:M2" H1: The time when the monitoring starts (hour) M1: The time when the monitoring starts (minute) H2: The time when the monitoring ends (hour) M2: The time when the monitoring ends (minute). This item is output only when "Command" is "Change Tier". If Cycle Time is anything other than 24, a hyphen (-) is output.
Monitoring Mode	The monitoring mode Continuous Mode: Continuous mode, Period Mode: Period mode This item is output only when "Command" is "Change Tier". If Multi Tier Pool is anything other than Enable, a hyphen (-) is output.
Data Direct Mapping	Indicates the setting status of Data Direct Mapping Enable: Data Direct Mapping is enabled. Disable: Data Direct Mapping is disabled. This item is output only when "Command" is "Change".
Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end, Not Execute: Not Executed xxxx: Part code, yyyy: Error code

Item	Description
Num. of Pools	The number of pools where the settings have been changed or the number of pools that have been deleted
Tier	The tier number This item is output only when the "Command" is "Change Tier".
Buffer Space for New page assignment(%)	The capacity rate of buffer space for new page assignment The unit is percent (%) This item is output only when the "Command" is "Change Tier".
Buffer Space for Tier relocation(%)	The capacity rate of buffer space for Tier relocation The unit is percent (%) This item is output only when the "Command" is "Change Tier".
Tier Result	The result of Tier operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end, Not Execute: Not Executed where xxxx: Part code, yyyyy: Error code This item is output only when the "Command" is "Change Tier".
Num. of Tiers	The number of Tiers for the created pools This item is output only when the "Command" is "Change Tier".

[PROV] Edit/Delete UUIDs

Example

```
RMI AP, Task Name, [PROV], Edit/Delete UUIDs, , Normal end,
Seq.=xxxxxxxxxx
+{LDKC:CU:LDEV, UUID}
={ {0xXX:0xXX:0xXX, abcdefg}, {0xXX:0xXX:0xXX, 12345},
{0xXX:0xXX:0xXX, } }, Num. of UUIDs=3
```

Detailed Information

Item	Description
LDKC:CU:LDEV	The LDKC number, CU number, and LDEV number
UUID	The configured UUID. There is no output if the UUID was deleted.
Num. of UUIDs	The number of UUIDs configured

[PROV] EditiScsiInitiatorUser

Example

```
RMI AP, , [PROV], EditiScsiInitiatorUser, , Normal end, Seq.=xxxxxxxxxx
+{iScsiPort[0]{
  Port=1A,
```

```
iScsiInitiator{
  iScsiUser{
    UserId="CHAPUser"}}},
Result=Normal end}}
```

Detailed Information

Item		Description
iScsiPort[x]		The setting information of the port
	Port	The port ID
	iScsiInitiator	The iSCSI initiator information
	iScsiUser	The authentication information
	UserId	The CHAP user name "null" is output if this item is not set or changed.
	Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end xxxx: Part code, yyyyy: Error code

[PROV] EditiScsiName

Example

```
RMI AP,,[PROV],EditiScsiName,,Normal end,Seq.=xxxxxxxxxx
+{iScsiPort[0]{
  Port=1A,
  RemoteiScsiName[0]{
    Name="Name",ChangeName="ChangeName",Result=Normal end}}}
```

Detailed Information

Item		Description
iScsiPort[x]		The setting information of the port
	Port	The port ID to be set
	RemoteiScsiName[x]	The information of the iSCSI name of the host bus adapter
	Name	The iSCSI name of the host bus adapter before change
	ChangeName	The iSCSI name of the host bus adapter after change
	Result	The result of the operation. Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end xxxx: Part code, yyyyy: Error code

[PROV] EditiScsiNickName

Example

```
RMI AP,, [PROV],EditiScsiNickName,,Normal end,Seq.=xxxxxxxxxx
+{iScsiPort[0]{
  Port=1A,
  RemoteiScsiName[0]{
    Name="iScsiName",NickName="NickName",Result=Normal end}}}
```

Detailed Information

Item		Description
iScsiPort[x]		The setting information of the port
	Port	The port ID to be set
	RemoteiScsiName[x]	The information of the iSCSI name of the host bus adapter
	Name	The iSCSI name of the host bus adapter
	NickName	The host name (nick name) after change
	Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end xxxx: Part code, yyyy: Error code

[PROV] EditiScsiTarget

Example

```
RMI AP,, [PROV],EditiScsiTarget,,Normal end,Seq.=xxxxxxxxxx
+{iScsiPort[0]{
  Port=1A,
  iScsiTarget[0]{
    Id=0,Name="Name",Alias="Alias",UserAuthSwitch=Enable,
    AuthMode=Unidirectional,Result=Normal end}}}
```

Detailed Information

Item		Description
iScsiPort[x]		The setting information of the port
	Port	The port ID to be set
	iScsiTarget[x]	The iSCSI target information
	Id	The iSCSI target ID
	Name	The iSCSI target name*
	Alias	The iSCSI target alias*
	UserAuthSwitch	The setting status of the CHAP user authentication*

Item		Description
		Enable: Enabled, Disable: Disabled, UseHostSetting: Using host settings
	AuthMode	The authentication mode* Unidirectional: One-way, Mutual: Two-way
	Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end xxxx: Part code, yyyyy: Error code
* "null" is output if this item is not set or changed.		

[PROV] EditiSNS

Example

```
RMI AP,,[PROV],EditiSNS,,Normal end,Seq.=xxxxxxxxx
+{iScsiPort[0]{
  Port=1A,
  iSnsServer{
    Enabled=true,IpType=IPv4,IPv4Address=192.168.10.2,
    IPv6Address=null,TcpPortNumber=3205},
  Result=Normal end}}
```

Detailed Information

Item		Description
iScsiPort[x]		The setting information of the port
	Port	The port ID to be set
	iSnsServer	The iSNS server information
	Enabled	Indicates whether the iSNS server is used. true: iSNS server is used. false: iSNS server is not used.
	IpType	The IP type (IPv4 or IPv6) of the iSNS server*
	IPv4Address	The IPv4 address of the iSNS server*
	IPv6Address	The IPv6 address of the iSNS server*
	TcpPortNumber	The TCP port number*
	Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end xxxx: Part code, yyyyy: Error code
* "null" is output if this item is not set or changed.		

[PROV] EditPortInfo

Example

```
RMI AP,,[PROV],EditPortInfo,,Normal end,Seq.=xxxxxxxxxx
+{iScsiPort[0]{
  Port=1A,
  IPv4{
    IpAddress=192.168.0.100,SubNetMask=255.255.255.0,
    DefaultGateway=0.0.0.0},
  IPv6{
    Available=true,
    LinkLocalAddress{
      AutoMode=true,ManualAddress=FE80:0:0:0:0:0:0:0},
    GlobalAddress{
      AutoMode=true,ManualAddress=0:0:0:0:0:0:0:0},
    DefaultGateway{
      AssignedAddress=0:0:0:0:0:0:0:0}},
    TcpPortNumber=3260,SelectiveAck=true,DelayedAck=true,
    TcpWindowSize(KB)=64,
    EthernetMtuSize{
      Mtu(byte)=1500},
    Vlan{
      AvailableTagging=true,RemovalId=1,AdditionId=2},
    KeepAliveTimer(second)=60,Result=Normal end}}
```

Detailed Information

Item		Description	
iScsiPort[x]		The setting information of the port	
	Port	The port ID to be set	
	IPv4	The setting information of IPv4	
	IpAddress	The IP address of IPv4*	
		SubNetMask	The subnet mask of IPv4*
		DefaultGateway	The IP address of the default gateway of IPv4*
	IPv6	The setting information of IPv6	
	Available	The setting status of IPv6 Mode*	
		true: Enabled, false: Disabled	
		LinkLocalAddress	The setting information of the local link address of IPv6
		AutoMode	The setting status of the local link address of IPv6*
			true: Automatic, false: Manual
		ManualAddress	The local link address set manually*
		GlobalAddress	The setting information of the global address of IPv6
		AutoMode	The setting status of the global address of IPv6*
			true: Automatic, false: Manual
ManualAddress	The global address set manually*		

Item		Description
	DefaultGateway	The setting information of the default gateway of IPv6
	AssignedAddress	The address of the default gateway of IPv6*
	TcpPortNumber	The TCP port number*
	SelectiveAck	The setting status of the selective ACK* true: Enabled, false: Disabled
	DelayedAck	The setting status of the delayed ACK* true: Enabled, false: Disabled
	TcpWindowSize(KB)	The window size of TCP*
	EthernetMtuSize	The information of the Ethernet MTU (Maximum Transmission Unit)
	Mtu(byte)	The size of the Ethernet MTU*
	Vlan	The information of the VLAN
	AvailableTagging	The setting status of the VLAN tagging mode* true: Enabled, false: Disabled
	RemovalId	The removed VLAN ID*
	AdditionId	The added VLAN ID*
	KeepAliveTimer(second)	The setting value of the Keep Alive timer*
	Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end xxxx: Part code, yyyyy: Error code
	* "null" is output if this item is not set or changed.	

[PROV] EditRemoteChapUser

Example

```
RMI AP,,[PROV],EditRemoteChapUser,,Normal end,Seq.=xxxxxxxxxx
+{iScsiPort[0]{
  Port=1A,
  RemoteiScsiUser[0]{
    ChapUserId="ChapUserId",ChangeChapUserId="ChangeChapUserId",
    Result=Normal end}}}
```

Detailed Information

Item		Description
iScsiPort[x]		The setting information of the port
	Port	The port ID to be set

Item		Description
	RemoteiScsiUser[x]	The user information of the CHAP authentication
	ChapUserId	The user ID of the CHAP authentication before change
	ChangeChapUserId	The user ID of the CHAP authentication after change "null" is output if this item is not set or changed.
	Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end xxxx: Part code, yyyyy: Error code

[PROV] EditRemoteTargetUser

Example

```
RMI AP,, [PROV],EditRemoteTargetUser,,Normal end,Seq.=xxxxxxxxxx
+{ConnectionTest=true,
iScsiPath[0]{
  iScsiPort{
    Port=1A},
  RemoteiScsiPort{
    IpType=IPv4,Ipv4Address=192.168.0.101,
    Ipv6Address=0:0:0:0:0:0:0:0,TcpPortNumber=3260,
    RemoteiScsiTarget{
      Name="iqn.1994-04.jp.co.hitachi.h8m.t.00001.3a000",
      iScsiUser{
        AuthSwitch=None,AuthMode=Unidirectional,UserId="CHAPUser"}}},
  Result=Normal end}}
```

Detailed Information

Item		Description
ConnectionTest		Indicates whether to perform the connection test after editing iSCSI paths true: Test is performed. false: Test is not performed.
iScsiPath[x]		The path information between the iSCSI port on the local storage system and the iSCSI target on the remote storage system
	iScsiPort	The information of the iSCSI port on the local storage system
	Port	The Port ID
	RemoteiScsiPort	The information of the iSCSI port on the remote storage system
	IpType	The type of the IP address IPv4: IPv4 address, IPv6: IPv6 address
	IPv4Address	The IPv4 address*

Item		Description
	IPv6Address	The IPv6 address*
	TcpPortNumber	The TCP port number
	RemoteIscsiTarget	The iSCSI target information
	Name	The iSCSI name
	iScsiUser	The authentication information
	AuthSwitch	Indicates whether the CHAP authentication method is enabled or disabled* None: CHAP is disabled. CHAP: CHAP is enabled.
	AuthMode	Indicates the CHAP authentication mode* Unidirectional: CHAP is one-way. Mutual: CHAP is two-way.
	UserId	The CHAP user name*
Result		The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end xxxx: Part code, yyyyy: Error code
* "null" is output if this item is not set or changed.		

[PROV] EditT10piMode

Example

```
RMI AP,Task Name,[PROV],EditT10piMode,,Normal end,Seq.=xxxxxxxxx
+{Port[0]{
  Port=1A,T10pi=true,Result=Normal end}}
```

Detailed Information

Item		Description
Port[x]		The setting information of the T10 PI mode on the port
	Port	The ID of a port representing ports that share the T10 PI mode
	T10pi	The setting status of the T10 PI mode true: Enabled, false: Disabled "null" is output if this item is not set or changed.
	Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end xxxx: Part code, yyyyy: Error code

[PROV] EditTargetChapUser

Example

```
RMI AP,, [PROV],EditTargetChapUser,,Normal end,Seq.=xxxxxxxxxx
+{iScsiPort[0]{
  Port=1A,
  iScsiTarget[0]{
    Id=0,ChapUserId="ChapUserId",Result=Normal end}}}
```

Detailed Information

Item		Description
iScsiPort[x]		The setting information of the port
	Port	The port ID to be set
	iScsiTarget[x]	The iSCSI target information
	Id	The iSCSI target ID
	ChapUserId	The user ID of the CHAP authentication
	Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end xxxx: Part code, yyyy: Error code

[PROV] ExecBindingOperation

Example

```
RMI AP,, [PROV],ExecBindingOperation,,Normal end,
Seq.=xxxxxxxxxx
+{BindingOperations[0]{
  Operation=Bind,Port=1A,HostGroup=0,Lun=0,
  Alu{
    Id="60-06-0E-81-30-00-32-30-00-32-00-00-00-00-01",
    Ldev{
      Id=0x00:0x00:0x01}},
  Slu{
    Id="60-06-0E-81-30-00-32-30-00-32-00-00-00-00-02",
    Ldev{
      Id=0x00:0x00:0x02},
    SecondaryId="E2-00-00-00-02-00"},
  Result=Normal end}}
```

Detailed Information

Item	Description
BindingOperations[x]	The setting information when an LDEV with the SLU attribute is bound to the LDEV with the ALU attribute or when an LDEV with the SLU attribute is unbounded from the LDEV with the ALU attribute

Item		Description
		Binding can be operated from hosts associated with vSphere. Unbinding can be operated from hosts associated with vSphere or Device Manager - Storage Navigator.
	Operation	Type of operations Bind: Bind mode, Unbind: Unbind mode
	Port	The port number of the LUN path set to the LDEV with the ALU attribute
	HostGroup	The host group number of the LUN path set to the LDEV with the ALU attribute
	Lun	The LUN ID of the LUN path set to the LDEV with the ALU attribute
	Alu	The setting information of the LDEV with the ALU attribute
	Id	The ALU ID
	Ldev	The setting information of the LDEV
	Id	The LDEV ID
	Slu	The setting information of the LDEV with the SLU attribute
	Id	The SLU ID
	Ldev	The setting information of the LDEV
	Id	The LDEV ID
	SecondaryId	The secondary ID
	Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end, Not Execute: Not Executed xxxx: Part code, yyyyy: Error code

[PROV] Expand V-VOLs

Example

```
RMI AP,Task Name,[PROV],Expand V-VOLs,,Normal end,
Seq.=xxxxxxxxxx
+{LDKC:CU:LDEV,Pool ID,Capacity}
=[{0x00:0x00:0x00,0,80},{0x00:0x00:0x01,1,90},
{0x00:0x00:0x02,2,100}],Num. of VOLs = 3
```

Detailed Information

Item	Description
LDKC:CU:LDEV	The LDKC number, the CU number, and the LDEV number of the V-VOL
Pool ID	The pool ID of the pool corresponding to the expanded V-VOL

Item	Description
Capacity	The capacity of the V-VOL after expanding in LBAs
Num. of VOLs	The number of expanded V-VOLs

[PROV] ExpandSlus

Example

```
RMI AP,,[PROV],ExpandSlus,,Normal end,Seq.=xxxxxxxxx
+{Slus[0]{
  Id="60-06-0E-81-30-76-D9-30-76-D9-00-00-00-00-15-01",PoolId=2,
  Capacity=96158,Result=Normal end,LdevId=0x00:0x15:0x01}}
```

Detailed Information

Item	Description
Slus[x]	The setting information of the LDEV with the SLU attribute whose capacity is increased
Id	The SLU ID
PoolId	The number of an associated pool
Capacity	The capacity after it is increased
Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end, Not Execute: Not Executed xxxx: Part code, yyyy: Error code
LdevId	The LDEV ID

[PROV] Format LDEVs

The logged information indicates that the Format operation was only requested but not completed.

Example

```
RMI AP,Task Name,[PROV],Format LDEVs,,Normal end,
Seq.=xxxxxxxxx
+LDKC:CU:LDEV=[0x00:0x00:0x01,0x00:0x00:0x02,0x00:0x00:0x03,
0x00:0x00:0x04,0x00:0x00:0x05,0x00:0x00:0x06,0x00:0x00:0x07,
0x00:0x00:0x08,0x00:0x00:0x09,0x00:0x00:0x0A],
Num. of LDEVs=10
```

Detailed Information

Item	Description
LDKC:CU:LDEV	The LDKC number, the CU number, and the LDEV number

Item	Description
Num. of LDEVs	The number of LDEVs to be formatted.

[PROV] Format LDEVs(Q)

The logged information indicates that the Quick Format operation was only requested but not completed.

Example

```
RMI AP,Task Name,[PROV],Format LDEVs(Q),,Normal end,
Seq.=xxxxxxxxxx
+LDKC:CU:LDEV=[0x00:0x00:0x01,0x00:0x00:0x02,
0x00:0x00:0x03,0x00:0x00:0x04,0x00:0x00:0x05,
0x00:0x00:0x06,0x00:0x00:0x07,0x00:0x00:0x08,
0x00:0x00:0x09,0x00:0x00:0x0A],Num. of LDEVs=10
```

Detailed Information

Item	Description
LDKC:CU:LDEV	The LDKC number, the CU number, and the LDEV number
Num. of LDEVs	The number of LDEVs to be formatted

[PROV] Initialize Pools

Example

```
RMI AP,Task Name,[PROV],Initialize Pools,,Normal end,
Seq.=xxxxxxxxxx
```

[PROV] LDEV Name

Example

```
RMI AP,Task Name,[PROV],LDEV Name,,Normal end,
Seq.=xxxxxxxxxx
+{LDKC:CU:LDEV,Name,Result}
=[{0x00:0x00:0x00,nickname_0000,Normal end},
{0x00:0x80:0xFF,$%0x0080,Normal end}],Num. of LDEVs=2
```

Detailed Information

Item	Description
LDKC:CU:LDEV	The LDKC number, the CU number, and the LDEV number
Name	The character string of a LDEV nickname
Result	The result of operation Normal end: Normal end,

Item	Description
	Error(xxxx-yyyyy): Abnormal end, Not Execute: Not Executed <i>where xxxx: Part code, yyyy: Error code</i>
Num. of LDEVs	The number of specified LDEVs

[PROV] LdevForceRestore

Example

```
RMI AP,, [PROV],LdevForceRestore,,Normal end,Seq.=xxxxxxxxx
+{LogicalDevice[0]{
  ID=0x00:0x00:0x00}}
```

Detailed Information

Item	Description
LogicalDevice[x]	The information of the LDEV that is forcibly restored
ID	The ID of the LDEV

[PROV] MapSecondaryVolumeWithSlu

Example

```
RMI AP,, [PROV],MapSecondaryVolumeWithSlu,,Normal end,
Seq.=xxxxxxxxx
+{TiPairs[0]{
  SnapshotSlu{
    Id="60-06-0E-81-30-00-32-30-00-32-00-00-80-00-00-00"},
  SecondaryVolume{
    Ldev{
      Id=0x00:0x00:0x06}},
  Result=Normal end}}
```

Detailed Information

Item	Description
TiPairs[x]	The setting information of Thin Image pairs whose secondary volume is mapped
SnapshotSlu	The SLU information
Id	The SLU ID
SecondaryVolume	The information of the secondary volume
Ldev	The LDEV information
Id	The LDEV ID

Item	Description
Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end, xxxx: Part code, yyyy: Error code

[PROV] Monitor Pools

This log information does not indicate the completion of performance monitoring processing of pools but the completion of performance monitoring operation of pools.

Example

```
RMI AP,,[PROV],Monitor Pools,,Normal end,Seq.=xxxxxxxxx
+{Pool ID,Result}=[{1,Normal end}],Num. of Pools = 1
```

Detailed Information

Item	Description
Pool ID	The pool ID of a pool where the performance monitoring started
Result	The result of starting the performance monitoring of pools Normal end: Normal end, Error(xxxx-yyyyy):Abnormal end, Not Execute: Not executed where xxxx: Part code, yyyy: Error code
Num. of Pools	The number of pools where the performance monitoring started

[PROV] Move Resources

Example

```
RMI AP,Task Name,[PROV],Move Resources,,Normal end,
Seq.=xxxxxxxxx
+{Resource Group ID(From),Resource Group ID(To),Result}
={1,0,Normal end}
++{LDKC:CU:LDEV,LDEVResult}=[{0x00:0x00:0x00,Normal end},
{0x00:0x00:0x01,Normal end}],Num. of LDEVs=2
++{PG,PGResult}=[{E1-1,Normal end},{E1-2,Normal end}],
Num. of PGs=2
++{Port,PortResult}=[{1A,Normal end},{2A,Normal end}],
Num. of Ports=2
++{Port(HostGrp),HostGrpID,HostGrpResult}
=[{1A,0x01,Normal end},{1A,0x02,Normal end}],Num. of Host Groups=2
+Num. of Resource Groups=1
```

Detailed Information

Item	Description
Resource Group ID(From)	The source resource group ID to which the resource belongs
Resource Group ID(To)	The target resource group ID
Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end, xxxx: Part code, yyyyy: Error code
LDKC:CU:LDEV	The logical DKC, CU, and LDEV numbers of the moved LDEV.
LDEVResult	The result of the LDEV Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end, xxxx: Part code, yyyyy: Error code
Num. of LDEVs	The number of moved LDEVs
PG	The number of a moved parity group E1-1: In the case of an external volume V1-1: In the case of a virtual volume X1-1: In the case of a Dynamic Provisioning volume
PGResult	The result of the parity group Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end, where xxxx: Part code, yyyyy: Error code
Num. of PGs	The number of moved parity groups
Port	The name of a moved port
PortResult	The result of the port Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end, where xxxx: Part code, yyyyy: Error code
Num. of Ports	The number of moved ports
Port(HostGrp)	The port name of a moved host group
HostGrpID	The host group ID of the moved host group
HostGrpResult	The result of the host group Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end, where xxxx: Part code, yyyyy: Error code
Num. of Host Groups	The number of moved host groups
Num. of Resource Groups	The number of resource groups that operated the setting

[PROV] OperateSiPairsWithSlu

Example

```
RMI AP,,[PROV],OperateSiPairsWithSlu,,Normal end,
Seq.=xxxxxxxxxx
+{OperationCode=PairCreate,
SiPairs[0]{
  PrimaryVolume{
    Slu{
      Id="60-06-0E-81-30-00-32-30-00-32-00-00-00-00-30-00"},
    Ldev{
      Id=0x00:0x30:0x00}},
  SecondaryVolume{
    Slu{
      Id="60-06-0E-81-30-00-32-30-00-32-00-00-00-00-30-01"},
    Ldev{
      Id=0x00:0x30:0x01}},
  MirrorUnit=2,
  Result=Normal end}}
```

Detailed Information

Item		Description
OperationCode		The ShadowImage pair operation PairCreate: Create pairs, PairDelete: Delete pairs, CreateAndQuickSplit: Create and split pairs, QuickResync: Resynchronize pairs
SiPairs[x]		The setting information of ShadowImage pairs
	PrimaryVolume	The primary volume information
	Slu	The SLU information
	Id	The SLU ID
	Ldev	The LDEV information
	Id	The LDEV ID
	SecondaryVolume	The secondary volume information
	Slu	The SLU information
	Id	The SLU ID
	Ldev	The LDEV information
	Id	The LDEV ID
	MirrorUnit	The mirror unit number
	Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end, xxxx: Part code, yyyy: Error code

[PROV] OperateTiPairsWithSlu

Example

```
RMI AP,,[PROV],OperateTiPairsWithSlu,,Normal end,
Seq.=xxxxxxxxxx
+{OperationCode=PairSplit,
TiPairs[0]{
    SnapshotSlu{
        Id="60-06-0E-81-30-00-32-30-00-32-00-00-80-00-00-00"},
    Result=Normal end}}
```

Detailed Information

Item		Description
OperationCode		The Thin Image pair operation PairSplit: Split pairs, PairDelete: Delete pairs, PairResync: Resynchronize pairs
TiPairs[x]		The setting information of Thin Image pairs
	SnapshotSlu	The SLU information of the secondary volume
	Id	The SLU ID
	Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end, xxxx: Part code, yyyy: Error code

[PROV] Pool Name

Example

```
RMI AP,Task Name,[PROV],Pool Name,,Normal end,
Seq.=xxxxxxxxxx
+{Pool ID,Name,Result}
=[{0,poolname_0000,Normal end},{127,,Normal end}],
Num. of Pools=2
```

Detailed Information

Item	Description
Pool ID	The pool group number
Name	The character string of a pool name
Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy):Abnormal end, where xxxx: Part code, yyyy: Error code
Num. of Pools	The number of specified pool groups

[PROV] Reclaim Zero Pages

This log information does not indicate the completion of zero pages reclaiming processing but the completion of zero pages reclaiming operation.

Example

```
RMI AP,Task Name,[PROV],Reclaim Zero Pages,,Normal end,
Seq.=xxxxxxxxxx
+{LDKC:CU:LDEV}
=[{0x00:0x00:0x00},{0x00:0x00:0x01},{0x00:0x00:0x02}],
Num. of VOLs = 3
```

Detailed Information

Item	Description
LDKC:CU:LDEV	The LDKC number, the CU number, and the LDEV number of the LDEV where zero pages are reclaimed
Num. of VOLs	The number of LDEVs where zero pages are reclaimed

[PROV] Release HostReserved

Example

```
RMI AP,Task Name,[PROV],Release HostReserved,,Normal end,
Seq.=xxxxxxxxxx
+{Port,HostGrpID,LUN,Result}=[{XXX,0xXXX,XXXX,Normal end},
{XXX,0xXXX,XXXX,Error(xxxx-yyyyy)}],Num. of LUNs=2
```

Detailed Information

Item	Description
Port	The name of the port to which the host group belongs
HostGrpID	The host group number
LUN	The LUN where Release HostReserved is forcefully executed
Result	The result of the operation: Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end, Not Execute: Not Executed <i>where xxxx: Part code, yyyy: Error code</i>
Num. of LUNs	The number of LUNs for which Release HostReserved is forcefully executed

[PROV] Relocate Pool

This log information does not indicate the completion of Tier relocation processing of pools but the completion of Tier relocation operation of pools.

Example

```
RMI AP,,[PROV],Relocate Pool,,Normal end,Seq.=xxxxxxxxxx  
+{Pool ID,Result}=[{1,Normal end}],Num. of Pools = 1
```

Detailed Information

Item	Description
Pool ID	The pool ID of a pool where the tier relocation was performed
Result	The result of relocating the tier of pools Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end, Not Execute: Not Executed where xxxx: Part code, yyyy: Error code
Num. of Pools	The number of pools where the tier relocation was performed

[PROV] Remove Hosts

Example

```
RMI AP,Task Name,[PROV],Remove Hosts,,Normal end,  
Seq.=xxxxxxxxxx  
+{Port,HostGrpID,WWN}=[{XX,0xxx,0xxxxxxxxxxxxxxxxxx},  
{XX,0xxx,0xxxxxxxxxxxxxxxxxx}],Num. of WWNs=2
```

Detailed Information

Item	Description
Port	The name of the port where the host deleted from host group was connected
HostGrpID	The host group number where the host is deleted
WWN	Indicates WWN of the host deleted from the host group
Num. of WWNs	The number of hosts (WWN) deleted from the host group

[PROV] Restore LDEVs

Example

```
RMI AP,Task Name,[PROV],Restore LDEVs,,Normal end,  
Seq.=xxxxxxxxxx  
+LDKC:CU:LDEV=[0x00:0x00:0x01,0x00:0x00:0x02,0x00:0x00:0x03,  
0x00:0x00:0x04,0x00:0x00:0x05,0x00:0x00:0x06,0x00:0x00:0x07,  
0x00:0x00:0x08,0x00:0x00:0x09,0x00:0x00:0x0A],  
Num. of LDEVs=10
```

Detailed Information

Item	Description
LDKC:CU:LDEV	The LDKC number, the CU number, and the LDEV number
Num. of LDEVs	The number of LDEVs being restored

[PROV] Restore Pools

Example

```
RMI AP,Task Name,[PROV],Restore Pools,,Normal end,
Seq.=xxxxxxxxxx
+{Pool ID,Result}
=[{1,Normal end},{2,Normal end},{128,Normal end}],
Num. of Pools=3
```

Detailed Information

Item	Description
Pool ID	The restored pool ID
Result	The result of the operation: Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end, Not Execute: Not Executed <i>where xxxx: Part code, yyyy: Error code</i>
Num. of Pools	The number of restored pools

[PROV] RevertTiPairsWithSlu

Example

```
RMI AP,,[PROV],RevertTiPairsWithSlu,,Normal end,
Seq.=xxxxxxxxxx
+{TiPairs[0]{
  PrimaryVolume{
    Slu{
      Id="60-06-0E-81-30-00-32-30-00-32-00-00-00-00-30-00"}},
  SnapshotSlu{
    Id="60-06-0E-81-30-00-32-30-00-32-00-00-80-00-00-00"},
  Result=Normal end}}
```

Detailed Information

Item	Description
TiPairs[x]	The volume information of the reverted Thin Image pairs
PrimaryVolume	The setting information of the primary volume

Item		Description
	Slu	The SLU information
	Id	The SLU ID
	SnapshotSlu	The setting information of the secondary volume
	Id	The SLU ID
	Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end, xxxx: Part code, yyyyy: Error code

[PROV] Set FCSP Host

Example

```
RMI AP,,[PROV],Set FCSP Host,,Normal end,
Seq.=xxxxxxxxxx
+{Port,HostGrpID,Kind,UserName,Change UserName}
=[{1E,0xxx,Add,111111111111111,-},
{3E,0xxx,Change,22222222222222,3333333333333333},
{5E,0xxx,Delete,4444444444444444,-}],Num. of Info=3
```

Detailed Information

Item	Description
Port	The name of the port that includes the host group where user name has been set
HostGrpID	The number of the host group where user name has been set
Kind	The setting status of the user name that is registered to the host group. Add: Add user name, Change: Change user name, Delete: Delete user name.
UserName	The user name added or deleted when Kind is Add or Delete The user name before change when Kind is Change
Change UserName	The user name after change when Kind is Change Indicates a dash (-) when Kind is Add or Delete
Num. of Info	The number of added, changed or deleted user names.

[PROV] Set FCSP Port Info

Example

```
RMI AP,,[PROV],Set FCSP Port Info,,Normal end,
Seq.=xxxxxxxxxx
+{Port,Auth_TOV,Reject Time,Reject Count}
=[{1E,45,3,3},{3E,60,1,10}],Num. of Ports=2
```

Detailed Information

Item	Description
Port	The name of the port where authentication parameter has been set
Auth_TOV	The time to execute authentication after the failure of port authentication. The unit is second.
Reject Time	The period of time to reject authentication when port authentication have failed. The unit is minute.
Reject Count	The number of authentication failures allowed before port authentication is rejected
Num. of Ports	The number of ports where authentication parameter has been set

[PROV] Set FCSP Port Switch

Example

```
RMI AP,,[PROV],Set FCSP Port Switch,,Normal end,
Seq.=xxxxxxxxxx
+{Port,Switch,DH Group,Auth,UserName}
=[{1E,Enable,0,bi-directional,11111111111111},
{3E,Disable,0,unidirectional,22222222222222}],
Num. of Ports=2
```

Detailed Information

Item	Description
Port	The name of the port where authentication parameter has been set
Switch	The setting status whether to execute authentication by port. Disable: Do not authenticate, Enable: Authenticate
DH Group	Not used (fixed to 0)
Auth	The setting status of authentication method: bi-directional: bi-directional authentication, unidirectional: unidirectional authentication
UserName	The user name of the port
Num. of Ports	The number of ports where authentication parameter has been set

[PROV] Set FCSP Target

Example

```
RMI AP,,[PROV],Set FCSP Target,,Normal end,
Seq.=xxxxxxxxxx
+{Port,HostGrpID,Switch,DH Group,UserName}
=[{1E,0xxx,Enable,0,11111111111111},
{3E,0xxx,Disable,0,22222222222222}],
Num. of Grps=2
```

Detailed Information

Item	Description
Port	The name of the port that includes the host group where authentication parameter has been set
HostGrpID	The number of the host group where authentication has been set
Switch	The setting status whether to execute authentication by host group. Disable: Do not authenticate, Enable: Authenticate
DH Group	Not used (fixed to 0)
UserName	The user name of the host group
Num. of Grps	The number of host groups where authentication parameter has been set

[PROV] Set PageTieringLevel

Example

```
RMI AP,,[PROV],Set PageTieringLevel,,Normal end,  
Seq.=xxxxxxxxxx  
+{LDKC:CU:LDEV,Result}=[{0x00:0x00:0x00,Normal end}]  
++{Start Page,Page Length,Page Tiering Level,Page Range Result}  
=[{10,5,Level1,Normal end},{100,10,Level1,Normal end}],  
Num. of Page Ranges=2  
+Num. of VOLs=1
```

Detailed Information

Item	Description
LDKC:CU:LDEV	The LDKC, CU, and LDEV numbers of the volume where the tiering policy is set
Result	The result of setting the tiering policy to the volume Normal end: Normal end Warning(xxxx-yyyyy): End with warning Error(xxxx-yyyyy): Abnormal end where xxxx: Part code, yyyy: Error code
Start Page	The beginning page number of page ranges
Page Length	The length of page ranges
Page Tiering Level	The level of the tiering policy that is set to the page ranges If you unset the tiering policy, a hyphen (-) is output.
Page Range Result	The result of setting the tiering policy in page ranges Normal end: Normal end Warning(xxxx-yyyyy): End with warning Error(xxxx-yyyyy): Abnormal end where xxxx: Part code, yyyy: Error code

Item	Description
Num. of Page Ranges	The specified number of page ranges
Num. of VOLs	The number of volumes where the tiering policy is set

[PROV] Set Virtual LDEV

Example

```
RMI AP,Task Name,[PROV],Set Virtual LDEV,,Normal end,Seq.=xxxxxxxxx
+{Operation}={Set H-UVM ON}
++{LDKC:CU:LDEV,Virtual LDKC:CU:LDEV,Virtual Emulation,
Virtual SSID,Virtual LUSE,Virtual Attribute,Result}=
[{0x00:0x00:0x00,0x00:0x01:0x00,OPEN-V,0x0004,0,-,Normal end}],
Num. of LDEVs=1
```

Detailed Information

Item	Description
Operation	Indicates the performed operations Set H-UVM ON Set H-UVM OFF Set Virtual Ldev ID Delete Virtual Ldev ID Set Virtual Ldev Information Delete Virtual Ldev Information Set Virtual Ldev ID and Virtual Ldev Information Delete Virtual Ldev ID and Virtual Ldev Information Set Property Normal Set Property Migration Set Property Migration and Virtual Ldev ID and Virtual Ldev Information Set Property GAD S-Vol
LDKC:CU:LDEV	The LDEV ID of an LDEV that is mapped the virtual information
Virtual LDKC:CU:LDEV	The LDEV ID of the virtual LDEV
Virtual Emulation	The emulation type of the virtual LDEV
Virtual SSID	The SSID of the virtual LDEV
Virtual LUSE	The number of LUSE volumes of the virtual LDEV
Virtual Attribute	The attribute of the virtual LDEV CVS: CVS attribute, -: No attribute
Result	The result of the operation Normal end: Normal end,

Item	Description
	Error(xxxx-yyyyy):Abnormal end where xxxx: Part code, yyyy: Error code
Num. of LDEVs	The number of LDEVs that is mapped the virtual information

[PROV] Shrink Pool

This log information does not indicate the completion of shrinking processing but the completion of shrinking operation.

Example

```
RMI AP,Task Name,[PROV],Shrink Pool,,Normal end,
Seq.=xxxxxxxxxx
+{Pool ID,Result}=[{1,Normal end},{2,Normal end}],
Num. of Pools = 2
++{LDKC:CU:LDEV,LDEV Result}
=[{0x00:0x00:0x02,Normal end},
{0x00:0x00:0x03,Normal end},{0x00:0x02:0x01,Normal end}],
Num. of LDEVs = 3
```

Detailed Information

Item	Description
Pool ID	The pool ID of a shrinking pool
Result	The result of the shrinking operation Normal end: Normal end Not Execute: Not executed Error(xxxx-xxxxxx): Abnormal end where xxxx-xxxxxx indicates error codes.
Num. of Pools	The number of shrinking pools
LDKC:CU:LDEV	The LDKC number, the CU number, and the LDEV number of the shrinking LDEV
LDEV Result	The result of shrinking individual LDEVs Normal end: Normal end Error(xxxx-yyyyy): Abnormal end Not Execute: Not executed where xxxx: Part Code, yyyy: Error Code
Num. of LDEVs	The number of shrinking LDEVs

[PROV] StartParityGroupsFormat

StartParityGroupsFormat merely means that the operation of the parity group formatting has been performed, and does not necessarily means that the parity group formatting process is complete.

Example

```
RMI AP,,[PROV],StartParityGroupsFormat,,Normal end,Seq.=xxxxxxxxx
+{ParityGroup[0]{
  ID=1-1}}
```

Detailed Information

Item	Description
ParityGroup[x]	The setting information of the parity group
ID	The parity group ID

[PROV] StartVerify

StartVerify merely means that the operation for verification has been performed, and does not necessarily mean that the verification process is complete.

Example

```
RMI AP,,[PROV],StartVerify,,Normal end,Seq.=xxxxxxxxx
+{AutoCorrectMode=true,ErrorStopCount=16,
LogicalDevice[0]{
  ID=0x00:0x00:0x00}}
```

Detailed Information

Item	Description
AutoCorrectMode	Indicates the setting status of the automatic correction mode (where errors detected by the verification are corrected automatically) true: Enabled, false: Disabled
ErrorStopCount	The setting value of the number of errors. The verification will be stopped when the number of detected errors reaches this value.
LogicalDevice[x]	The setting information of the LDEV
ID	The LDEV ID

[PROV] Stop Monitoring

Example

```
RMI AP,,[PROV],Stop Monitoring,,Normal end,
Seq.=xxxxxxxxx
+{Pool ID,Result}=[{1,Normal end}],Num. of Pools = 1
```

Detailed Information

Item	Description
Pool ID	The pool ID of a pool where the performance monitoring stopped
Result	The result of stopping the tier relocating of pools Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end, Not Execute: Not Executed where xxxx:Part code, yyyy: Error code
Num. of Pools	The number of pools where the performance monitoring stopped

[PROV] Stop Reclm ZeroPages

Example

```
RMI AP,Task Name,[PROV],Stop Reclm ZeroPages,,Normal end,  
Seq.=xxxxxxxxxx  
+{LDKC:CU:LDEV}  
={ {0x00:0x00:0x00}, {0x00:0x00:0x01}, {0x00:0x00:0x02} },  
Num. of VOLs = 3
```

Detailed Information

Item	Description
LDKC:CU:LDEV	The LDKC number, the CU number, and the LDEV number of the LDEV where reclaiming of zero pages is stopped
Num. of VOLs	The number of LDEVs where reclaiming of zero pages is stopped

[PROV] Stop Relocating

Example

```
RMI AP,,[PROV],Stop Relocating,,Normal end,  
Seq.=xxxxxxxxxx  
+{Pool ID,Result}={ {1,Normal end} },Num. of Pools=1
```

Detailed Information

Item	Description
Pool ID	The pool ID of a pool where the tier relocation was stopped
Result	The result of stop relocating the tier of pools Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end, Not Execute: Not executed where xxxx: Part code, yyyy: Error code
Num. of Pools	The number of pools where the tier relocation was stopped

[PROV] Stop Shrinking Pool

Example

```
RMI AP, Task Name, [PROV], Stop Shrinking Pool, , Normal end,  
Seq.=xxxxxxxxxx  
+{Pool ID, Result}=[{1, Normal end}, {2, Normal end}],  
Num. of Pools = 2
```

Detailed Information

Item	Description
Pool ID	The pool ID of the pool where shrinking is stopped
Result	The result of the stopping shrinking operation Normal end: Normal end Not Execute: Not executed Error(xxxxx-xxxxxx): Abnormal end where xxxx-xxxxxx indicates error codes.
Num. of Pools	The number of pools where shrinking is stopped

[PROV] StopFormat

Example

```
RMI AP, , [PROV], StopFormat, , Normal end, Seq.=xxxxxxxxxx
```

[PROV] StopVerify

Example

```
RMI AP, , [PROV], StopVerify, , Normal end, Seq.=xxxxxxxxxx
```

[PROV] UnmapSecondaryVolumeWithSlu

Example

```
RMI AP, , [PROV], UnmapSecondaryVolumeWithSlu, , Normal end,  
Seq.=xxxxxxxxxx  
+{TiPairs[0]{  
  SnapshotSlu{  
    Id="60-06-0E-81-30-00-32-30-00-32-00-00-80-00-00-00"},  
    Result=Normal end,  
    SecondaryVolume{  
      Ldev{  
        Id=0x00:0x00:0x06}}}}}
```

Detailed Information

Item		Description
TiPairs[x]		The setting information of Thin Image pairs whose secondary volume is unmapped
	SnapshotSlu	The SLU information of the secondary volume
	Id	The SLU ID
	Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy):Abnormal end where xxxx: Part code, yyyyy: Error code
	SecondaryVolume	The unmapped secondary volume information
	Ldev	The LDEV information
	Id	The LDEV ID

[PROV] UpdateCopybackMode

Example

```
RMI AP,,[PROV],UpdateCopybackMode,,Normal end,Seq.=xxxxxxxxx  
+{ParityGroup[0]{  
  ID=1-1,Copy-backMode=true,Result=Normal end}}
```

Detailed Information

Item		Description
ParityGroup[x]		The setting information of the parity group
	ID	The parity group ID
	Copy-backMode	The setting status of the copy-back mode true: Enabled, false: Disabled
	Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end xxxx: Part code, yyyyy: Error code

[PROV] UpdateSpareDrives

Example

```
RMI AP,,[PROV],UpdateSpareDrives,,Normal end,Seq.=xxxxxxxxx  
+{Drive[0]{  
  Location=HDD0-0,Spare=true,Result=Normal end}}
```

Detailed Information

Item		Description
Drive[x]		The information of the drive
	Location	The mounting position of the drive
	Spare	The assignment status of the spare drive true: Assigning as a spare drive, false: Releasing spare drive setting
	Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end xxxx: Part code, yyyyy: Error code

Remote Maintenance Descriptions

[Remote Maintenance] PS Control

Example

```
RM AP,,[Remote Maintenance],PS Control,,Normal end,  
Seq.=xxxxxxxxxx  
+PS Control=OFF
```

Detailed Information

Item	Description
PS Control	Indicates whether it is PSON or PSOFF operation. ON: PSON operation, OFF: PSOFF operation.

[Remote Maintenance] Reboot MP

Example

```
RM AP,,[Remote maintenance],Reboot MP,,Normal end,  
Seq.=xxxxxxxxxx  
+MP=MP00-1MA
```

Detailed Information

Item	Description
MP	Indicates the name of MP to be rebooted

[Remote Maintenance] Reboot Port

Example

```
RM AP,,[Remote Maintenance],Reboot Port,,Normal end,
Seq.=xxxxxxxxxx
+PORT=1E
```

Detailed Information

Item	Description
Port	Indicates the port name to be rebooted

Remote Replication Descriptions

[Remote Replication] Add Path

Example

```
RMI AP,,[Remote Replication],Add Path,,Normal end,
Seq.=xxxxxxxxxx
+{S/N,MCU LDKC,RCU LDKC,Path Gr.ID,Controller ID,Result}
={411111,0x00,0x00,Default,18,Normal end}
++{MCU Port,RCU Port}
=[{1E,3E},{5E,7E},{1F,3F},{5F,7F},{1G,3G},{5G,7G},{1H,3H}],
Num. of Port Pairs=7
(Snip)
+{S/N,MCU LDKC,RCU LDKC,Path Gr.ID,Controller ID,Result}
={422222,0x00,0x00,Default,18,Normal end}
++{MCU Port,RCU Port}
=[{1E,3E},{5E,7E},{1F,3F},{5F,7F},{1G,3G},{5G,7G},{1H,3H}],
Num. of Port Pairs=7
+Num. of RCUs=xx
```

Detailed Information

Item	Description
S/N	The serial number of the RCU
MCU LDKC	The LDKC number of the connected LDKC
RCU LDKC	The LDKC number of the paired LDKC
Path Gr.ID	The path group ID. When the path group ID is default setting, "Default" is output.
Controller ID	The controller ID of the RCU 18: VSP Gx00, 19: HUS VM
Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end

Item	Description
	where xxxx: Part code, yyyy: Error code
MCU Port	The port number of MCU
RCU Port	The port number of RCU
Num. of Port Pairs	Number of pairs of the port to be operated
Num. of RCUs	The number of RCUs set

[Remote Replication] Add Quorum Disk ID

Example

```
RMI AP,,[Remote Replication],Add Quorum Disk ID,,Normal end,
Seq.=xxxxxxxxxx
+{Quorum Disk ID,Paired S/N,Controller ID,Quorum Disk(LDKC:CU:LDEV),
Result}=[{0x01,464024,18,0x00:0x01:0x01,Normal end},
{0x02,464024,18,0x00:0x02:0x02,Normal end},{Snip},
{0x7F,464024,18,0x00:0x03:0x03,Error(xxxx-yyyy)}]
-,Num. of IDs=xx
```

Detailed Information

Item	Description
Quorum Disk ID	The added quorum disk ID used by global-active device
Paired S/N	The serial number of the remote storage system
Controller ID	The controller ID of the remote storage system 18: VSP Gx00, 19: HUS VM
Quorum Disk(LDKC:CU:LDEV)	The LDKC, CU, and LDEV numbers of the added quorum disk used by global-active device
Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyy): Abnormal end where xxxx: Part code, yyyy: Error code
Num. of IDs	The number of added quorum disk IDs used by global-active device

[Remote Replication] Add RCU

Example

```
RMI AP,,[Remote Replication],Add RCU,,Normal end,
Seq.=xxxxxxxxxx
+{S/N,MCU LDKC,RCU LDKC,Path Gr.ID,Controller ID,Min.Path,
MIH Time(s),Round Trip Time(ms),Result}
={422222,0x00,0x00,Default,18,08,015,001,Normal end}
++{MCU Port,RCU Port}
```

```

=[{1E,3E},{5E,7E},{1F,3F},{5F,7F},{1G,3G},{5G,7G},{1H,3H},
{5H,7H}],Num. of Port Pairs=8
(Snip)
+{S/N,MCU LDKC,RCU LDKC,Path Gr.ID,Controller ID,Min.Path,
MIH Time(s),Round Trip Time(ms),Result}
={411111,0x00,0x00,Default,18,08,015,001,Normal end}
++{MCU Port,RCU Port}
=[{1E,3E},{5E,7E},{1F,3F},{5F,7F},{1G,3G},{5G,7G},{1H,3H},
{5H,7H}],Num. of Port Pairs=8
+Num. of RCUs=xx

```

Detailed Information

Item	Description
S/N	The serial number of the registered RCU
MCU LDKC	The LDKC number of the connected LDKC
RCU LDKC	The LDKC number of the paired LDKC
Path Gr.ID	The path group ID of the registered RCU. When the path group ID is default setting, "Default" is output.
Controller ID	The controller ID of the registered RCU 18: VSP Gx00, 19: HUS VM
Min.Path	The number of set minimum paths
MIH Time(s)	The value of set RIO MIH (Remote I/O Missing Interrupt Handler) timer (wait time until data copy from MCU to RCU is complete). The unit is second.
Round Trip Time(ms)	The round-trip response time set (delay time for round-trip remote I/O). The unit is millisecond. This value is output when TrueCopy is used.
Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end where xxxx: Part code, yyyyy: Error code
MCU Port	The port number of MCU
RCU Port	The port number of the registered RCU
Num. of Port Pairs	The number of port pairs set
Num. of RCUs	The number of RCUs set

[Remote Replication] Change JNL Option

Example

```

RMI AP,,[Remote Replication],Change JNL Option,,Normal end,
Seq.=xxxxxxxxxx
+Copy Type=UR
+{LDKC,JNL,Data Overflow Watch(s),Inflow Control,
Use of Cache,Result}

```

```
=[{0x00,0x001,20,Yes,Not Use,Normal end},
{0x00,0x002,20,No,Use,Normal end}],Num. of JNLs=2
```

Detailed Information

Item	Description
Copy Type	The program product name for this operation UR: Universal Replicator
LDKC	The LDKC number to which the journal belongs
JNL	The journal number
Data Overflow Watch(s)	The overflow watch time of the meta data or journal data (in seconds)
Inflow Control	The inflow control of the journal volume Yes: The flow of the updated I/O data to the journal volume is restricted No: The flow of the updated I/O data to the journal volume is not restricted
Use of Cache	Whether to store the journal data in the restore journal in cache. Use: Store the journal data in cache, Not Use: Store the journal data in journal volume
Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end where xxxx: Part code, yyyy: Error code
Num. of JNLs	The number of journals

[Remote Replication] Change Mirror Option

Example

```
RMI AP,,[Remote Replication],Change Mirror Option,,Normal end,
Seq.=xxxxxxxxxx
+Copy Type=UR
+{LDKC,JNL,MirrorID,Copy Pace,Path Watch Time,
Forward Path Watch Time,Transfer Speed(Mbps),
Delta resync Failure,Result}
=[{0x00,0x001,0x00,Medium,12(hour),Yes,100,Entire,Normal end},
{0x00,0x002,0x00,Low,1(day),No,10,None,Normal end}],
Num. of Mirrors=2
```

Detailed Information

Item	Description
Copy Type	The program product name for this operation UR: Universal Replicator
LDKC	The LDKC number to which the journal belongs

Item	Description
JNL	The journal number
MirrorID	The mirror ID
Copy Pace	The speed of initial copy Low: Low speed, Medium: Medium speed, High: High speed
Path Watch Times	Path block watch time (observation time from the path block till the mirror split <suspended>) The units are minutes, hours or days. If it is set to 30 minutes, it will be 30(min.).
Forward Path Watch Time	Indicates whether to transfer the path blockade watch period of the master journal to the restore journal. Yes: Transfer, No: Do Not Transfer
Transfer Speed(Mbps)	The transfer speed of the communication line. The unit is megabits per second (Mbps).
Delta resync Failure	Indicates the behavior when Delta resync operation has failed. Entire: Copy the entire data of the primary volume to the secondary volume. None: Do not copy the primary volume data to the secondary volume.
Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end where xxxx: Part code, yyyy: Error code
Num. of Mirrors	The number of mirrors

[Remote Replication] Change RCU Option

Example

```

RMI AP,,[Remote Replication],Change RCU Option,,Normal end,
Seq.=xxxxxxxxxx
+{S/N,MCU LDKC,RCU LDKC,Path Gr.ID,Controller ID,Min.Path,
MIH Time(s),Round Trip Time(ms),Result}
={422222,0x00,0x00,Default,18,08,015,001,Normal end}
(Snip)
+{S/N,MCU LDKC,RCU LDKC,Path Gr.ID,Controller ID,Min.Path,
MIH Time(s),Round Trip Time(ms),Result}
={411111,0x00,0x00,Default,18,08,015,001,Normal end}
+Num. of RCUs=xx

```

Detailed Information

Item	Description
S/N	The serial number of the RCU on which the RCU option is changed
MCU LDKC	The LDKC number of the connected LDKC

Item	Description
RCU LDKC	The LDKC number of the paired LDKC
Path Gr.ID	The path group ID of the RCU on which the RCU option is changed. When the path group ID is default setting, "Default" is output.
Controller ID	The controller ID of the RCU on which the RCU option is changed 18: VSP Gx00, 19: HUS VM
Min.Path	The number of minimum paths after the change
MIH Time(s)	The value of RIO MIH (Remote I/O Missing Interrupt Handler) timer after the change (wait time until data copy from MCU to RCU is complete). The unit is second.
Round Trip Time(ms)	The round-trip response time after the change (delay time for round-trip remote I/O). The unit is millisecond. This value is output when TrueCopy is used.
Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end where xxxx: Part code, yyyy: Error code
Num. of RCUs	The number of RCUs set

[Remote Replication] Create Pairs

Example 1: Copy type is TC

```
RMI AP,,[Remote Replication],Create Pairs,,Normal end,Seq.=xxxxxxxxx
+Copy Type=,{P-VOL(Port-G-ID-LUN),S-VOL(Port-G-ID-LUN),
S/N,LDKC,ID,Controller ID,Type,Initial Copy,Fence Level,Copy Pace,
Priority,Result}
=[{1A-0x00-0,GR-0xFE-1023,411111,0x00,Default,18,
Sync,Entire,Never,15,032,Normal end},{(Snip)-(Snip)],
Num. of Pairs=xx
```

Detailed Information 1

Item	Description
Copy Type	The program product name for this operation TC: TrueCopy
P-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the volume specified to the primary volume
S-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the volume specified to the secondary volume
S/N	The serial number of the RCU
LDKC	The LDKC number of the RCU
ID	The path group ID

Item	Description
	When the path group ID is default setting, "Default" is output.
Controller ID	The controller ID of the RCU 18: VSP Gx00, 19: HUS VM
Type	Type of the update copy operation Outputs Sync (synchronization mode) as a fixed parameter.
Initial Copy	Type of the pair creation operation Entire: Creates pairs and copies data from the primary volume to the secondary volume. None: Creates pairs but does not copy data from the primary volume to the secondary volume.
Fence Level	Configured fence level (conditions where the local storage system rejects write operations to the primary volume) Never: Can write to the primary volume even the pair is split. Data: Cannot write to the primary volume when update copying fails. Status: Cannot write to the primary volume, only when the storage system of the primary site cannot change the pair status of the secondary volume to PSUE.
Copy Pace	The initial copy speed setting (the number of tracks you can copy at one time)
Priority	The priority of the set initial copy operation (scheduling order).
Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end where xxxx: Part code, yyyy: Error code
Num. of Pairs	The number of create pairs

Example 2: when the copy type is UR

```
RMI AP,,[Remote Replication],Create Pairs,,Normal end,Seq.=xxxxxxxxx
+Copy Type=UR
+{P-VOL(Port-G-ID-LUN),S-VOL(Port-G-ID-LUN),MirrorID,
S/N,CTRLID,Priority,CTG,Initial Copy,M-JNL,R-JNL,
Path Gr. ID,Error Level,Result}
=[{4C-0x00-0,4A-0x00-0,0x00,467676,18,32,0x000,Entire,
0x001,0x001,Default,Mirror,Normal end},
{4C-0x00-1,4A-0x00-1,0x00,467676,18,32,0x000,Entire,
0x001,0x001,Default,Mirror,Normal end}],Num. of Pairs=2
```

Detailed Information 2

Item	Description
Copy Type	The program product name for this operation UR: Universal Replicator

Item	Description
P-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the primary data volume
S-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the secondary data volume
MirrorID	The mirror ID
S/N	The serial number of the RCU
CTRLID	The controller ID of the RCU 18: VSP Gx00, 19: HUS VM
Priority	The priority of the set initial copy operation (scheduling order).
CTG	The consistency group ID
Initial Copy	Type of the pair creation operation Entire: Creates pairs and copies data from the primary volume to the secondary volume. None: Creates pairs but does not copy data from the primary volume to the secondary volume. Delta: Creates delta resynchronization pairs.
M-JNL	The master journal number
R-JNL	The restore journal number
Path Gr. ID	The path group ID specified for the storage system When the path group ID is default setting, "Default" is output.
Error Level	Range of the pair split at failure occurrence Mirror: When a pair fails, all the pairs are split that exist in the same mirror as the pair. LU: When a pair fails, only the pair is split.
Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end where xxxx: Part code, yyyy: Error code
Num. of Pairs	The number of created pairs

Example 3: when the copy type is GAD

```
RMI AP,,[Remote Replication],Create Pairs,,Normal end,Seq.=xxxxxxxxx
+Copy Type=GAD,{P-VOL(Port-G-ID-LUN),S-VOL(Port-G-ID-LUN),
S/N_P,S/N_S,Path Gr.ID,Controller ID,SSID,Copy Pace,Quorum Disk ID,
MirrorID,CTG,Initial Copy,Result}=
[{1A-0x00-0,1C-0x02-3,411111,422222,0x00,18,0x0004,15,0x15, 0,
0x00,None,Normal end},{(Snip)-(Snip)],Num. of Pairs=xx
```

Detailed Information 3

Item	Description
Copy Type	The program product name for this operation GAD: global-active device
P-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the primary volume
S-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the secondary volume
S/N_P	The serial number of the local storage system
S/N_S	The serial number of the remote storage system
Path Gr.ID	Path group ID used in a global-active device pair
Controller ID	The controller ID of the remote storage system 18: VSP Gx00, 19: HUS VM
SSID	The SSID
Copy Pace	The setting of the initial copy speed (the number of tracks that can be copied at a time)
Quorum Disk ID	The quorum disk ID used by global-active device
MirrorID	The mirror ID
CTG	The consistency group ID A hyphen (-) is displayed if the consistency group is not specified.
Initial Copy	Type of the pair creation operation Entire: Creates pairs and copies data from the primary volume to the secondary volume. None: Creates pairs but does not copy data from the primary volume to the secondary volume.
Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end where xxxx: Part code, yyyy: Error code
Num. of Pairs	The number of created pairs

[Remote Replication] Delete Pairs

Example 1: Copy type is TC

```
RMI AP,,[Remote Replication],Delete Pairs,,Normal end,Seq.=xxxxxxxxxx
+Copy Type=TC,{P-VOL(Port-G-ID-LUN),S-VOL(Port-G-ID-LUN),
Type,Force,Result}
=[{1A-0x00-0,1B-0x00-0,P-VOL,No,Normal end},
{1A-0x00-1,1B-0x00-1,P-VOL,No,Normal end},
{1A-0x00-2,1B-0x00-2,P-VOL,No,Normal end}),(Snip)-(Snip)],
Num. of Pairs=xx
```

Detailed Information 1

Item	Description
Copy Type	The program product name for this operation TC: TrueCopy
P-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the volume specified to the primary volume
S-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the volume specified to the secondary volume
Type	Volume type of the local storage system P-VOL: Primary volume, S-VOL: Secondary volume
Force	Conditions to delete pairs forcibly Yes: Deletes pairs, also when the local storage system cannot communicate with the remote storage system. No: Deletes pairs, only when the local storage system can change the pair to simplex volumes.
Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end where xxxx: Part code, yyyy: Error code
Num. of Pairs	The number of delete pairs

Example 2: when the copy type is UR

```
RMI AP,,[Remote Replication],Delete Pairs,,Normal end,Seq.=xxxxxxxxxx  
+Copy Type=UR  
+{P-VOL(Port-G-ID-LUN),S-VOL(Port-G-ID-LUN),MirrorID,  
S/N,CTRLID,Type,Range,Delete Mode,Result}  
=[{4C-0x00-0,4A-0x00-0,0x00,467676,18,P-VOL,LU,Normal,Normal end},  
{4C-0x00-1,4A-0x00-1,0x00,467676,18,P-VOL,LU,Normal,Normal end}],  
Num. of Requests=2
```

Detailed Information 2

Item	Description
Copy Type	The program product name for this operation UR: Universal Replicator
P-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the primary data volume
S-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the secondary data volume
MirrorID	The mirror ID
S/N	The serial number of the RCU
CTRLID	The controller ID of the RCU 18: VSP Gx00, 19: HUS VM

Item	Description
Type	The volume type of the deleted volume P-VOL: Primary volume, S-VOL: Secondary volume
Range	The delete range Mirror: All the pairs are delete that exist in the same mirror as the pair. LU: Only the pair is delete.
Delete Mode	Type of the pair deletion operation Normal: Deletes pairs, Force: Deletes pairs forcibly.
Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end where xxxx: Part code, yyyyy: Error code
Num. of Requests	The number of deleted mirrors when Range is Mirror The number of deleted pairs when Range is LU

Example 3: when the copy type is GAD

```
RMI AP,,[Remote Replication],Delete Pairs,,Normal end,Seq.=xxxxxxxxxx
+Copy Type=GAD,{P-VOL(Port-G-ID-LUN),S-VOL(Port-G-ID-LUN),
S/N_P,S/N_S,Type,SSID_P,SSID_S,CTG,Range,Force,MirrorID,
Invisible,Result}=
[{1A-0x00-0,1B-0x01-1,411111,422222,P-VOL,0x0004,0x0004,-,
Volume,Yes,0,Disable,Normal end},((Snip)-(Snip)],Num. of Requests=xx
```

Detailed Information 3

Item	Description
Copy Type	The program product name for this operation GAD: global-active device
P-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the primary volume
S-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the secondary volume
S/N_P	The serial number of the local storage system
S/N_S	The serial number of the remote storage system
Type	Volume type of the local storage system SMPL: simplex, P-VOL: Primary volume, S-VOL: Secondary volume
SSID_P	The SSID of the primary volume
SSID_S	The SSID of the secondary volume
CTG	The consistency group ID A hyphen (-) is displayed when Range is Volume.

Item	Description
Range	The applicable range of pair deletion Volume: Only this volume, Group: All volumes in the consistency group to which this volume belongs
Force	Conditions to delete pairs forcibly Yes: Deletes pairs, also when the local storage system cannot communicate with the remote storage system. No: Deletes pairs, only when the local storage system can change the pair to simplex volumes.
MirrorID	The mirror ID
Invisible	Indicates whether the host can access volumes after deleting pairs. Enable: Deletes the virtual LDEV ID of the volume of the local storage system so that no hosts can access the volume. Disable: Keeps the virtual LDEV ID of the volume of the local storage system so that hosts can access the volume.
Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end where xxxx: Part code, yyyy: Error code
Num. of Requests	The number of requests to delete pairs

[Remote Replication] Delete Path

Example

```

RMI AP,,[Remote Replication],Delete Path,,Normal end,
Seq.=xxxxxxxxxx
+{S/N,MCU LDKC,RCU LDKC,Path Gr.ID,Controller ID,Result}
={411111,0x00,0x00,Default,18,Normal end}
++{MCU Port,RCU Port}
=[{1E,3E},{5E,7E},{1F,3F},{5F,7F},{1G,3G},{5G,7G},{1H,3H}],
Num. of Port Pairs=7
(Snip)
+{S/N,MCU LDKC,RCU LDKC,Path Gr.ID,Controller ID,Result}
={422222,0x00,0x00,Default,18,Normal end}
++{MCU Port,RCU Port}
=[{1E,3E},{5E,7E},{1F,3F},{5F,7F},{1G,3G},{5G,7G},{1H,3H}],
Num. of Port Pairs=7
+Num. of RCUs=xx

```

Detailed Information

Item	Description
S/N	The serial number of the RCU on which a path is deleted
MCU LDKC	The LDKC number of the connected LDKC
RCU LDKC	The LDKC number of the paired LDKC

Item	Description
Path Gr.ID	The path group ID of the deleted path. When the path group ID is default setting, "Default" is output.
Controller ID	The controller ID of the RCU on which a path is deleted 18: VSP Gx00, 19: HUS VM
Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end where xxxx: Part code, yyyy: Error code
MCU Port	The port number of MCU
RCU Port	The port number of RCU
Num. of Port Pairs	Number of pairs of the port to be operated
Num. of RCUs	The number of RCUs set

[Remote Replication] Del Quorum Disk ID

Example

```
RMI AP,,[Remote Replication],Del Quorum Disk ID,,Normal end,
Seq.=xxxxxxxxxx
+{Quorum Disk ID,Paired S/N,Controller ID,Quorum Disk(LDKC:CU:LDEV),
Result}=[{0x01,464024,18,0x00:0x01:0x01,Normal end},
{0x02,464024,18,0x00:0x02:0x02,Normal end},(Snip),
{0x7F,464024,18,0x00:0x03:0x03,Error(xxxx-yyyyy)}]
-,Num. of IDs=xx
```

Detailed Information

Item	Description
Quorum Disk ID	The deleted quorum disk ID used by global-active device
Paired S/N	The serial number of the remote storage system
Controller ID	The controller ID of the remote storage system 18: VSP Gx00, 19: HUS VM
Quorum Disk(LDKC:CU:LDEV)	The LDKC, CU, and LDEV numbers of the deleted quorum disk used by global-active device
Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end where xxxx: Part code, yyyy: Error code
Num. of IDs	The number of deleted quorum disk IDs used by global-active device

[Remote Replication] Delete RCU

Example

```
RMI AP,, [Remote Replication],Delete RCU,,Normal end,
Seq.=xxxxxxxxxx
+{S/N,MCU LDKC,RCU LDKC,Path Gr.ID,Controller ID,Result}
={411111,0x00,0x00,Default,18,Normal end}
(Snip)
+{S/N,MCU LDKC,RCU LDKC,Path Gr.ID,Controller ID,Result}
={422222,0x00,0x00,Default,18,Normal end}
+Num. of RCUs=xx
```

Detailed Information

Item	Description
S/N	The serial number of the deleted RCU
MCU LDKC	The LDKC number of the connected LDKC
RCU LDKC	The LDKC number of the paired LDKC
Path Gr.ID	The path group ID of the deleted RCU. When the path group ID is default setting, "Default" is output.
Controller ID	The controller ID of the deleted RCU 18: VSP Gx00, 19: HUS VM
Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end where xxxx: Part code, yyyy: Error code
Num. of RCUs	The number of deleted RCUs

[Remote Replication] Edit Options

Example 1: Editing storage system options when the copy type is TC

```
RMI AP,, [Remote Replication],Edit Options,,Normal end,Seq.=xxxxxxxxxx
+Copy Type=,
{Max Initial Copy,CU Activity,Path Blockade Watch(s),
Path Blockade SIM Watch(s),Switch}
={128,Enable,45,070,-}
```

Example 2: Editing CU options when the copy type is TC

```
RMI AP,, [Remote Replication],Edit Options,,Normal end,Seq.=xxxxxxxxxx
+Copy Type=,{LDKC,CU,Max Initial Copy}
={[0x00,0x00,04},{0x00,0x01,04},
{0x00,0x02,04},{0x00,0x03,04},
{0x00,0x04,04}),(Snip)-(Snip)],Num. of CUs=255
```

Example 3: Editing both storage system options and CU options when the copy type is TC

```
RMI AP,, [Remote Replication],Edit Options,,Normal end,Seq.=xxxxxxxxxx
+Copy Type=,
{Max Initial Copy,CU Activity,Path Blockade Watch(s),
Path Blockade SIM Watch(s),Switch}
={128,Enable,45,070,-}
+{LDKC,CU,Max Initial Copy}
=[{0x00,0x00,04},{0x00,0x01,04},
{0x00,0x02,04},{0x00,0x03,04},
{0x00,0x04,04},(Snip)-(Snip)],Num. of CUs=255
```

Example 4: Editing remote replication function switch when the copy type is TC

```
RMI AP,, [Remote Replication],Edit Options,,Normal end,Seq.=xxxxxxxxxx
+Copy Type=,
{Max Initial Copy,CU Activity,Path Blockade Watch(s),
Path Blockade SIM Watch(s),Switch}
={-,-,-,-,1000 0000 0000 0000 0100 0000 0000 0000
0000 0000 0000 0000 0000 0000 0000}
```

Detailed Information for Example 1- 4

Item	Description
Copy Type	The program product name for this operation TC: TrueCopy
Max Initial Copy	The maximum number of initial copy operations set If this is not a subject to change, a hyphen (-) is displayed. If any one of Max Initial Copy, CU Activity, Path Blockade Watch(s), and Path Blockade SIM Watch(s) is changed, this will be the subject to change.
CU Activity	Indicates whether the parallel operation of initial copy by the control unit is enabled or not. Enable or Disable will appear. If this is not a subject to change, a hyphen (-) is displayed. If any one of Max Initial Copy, CU Activity, Path Blockade Watch(s), and Path Blockade SIM Watch(s) is changed, this will be the subject to change.
Path Blockade Watch(s)	The path blockade watch period setting (in seconds). If this is not a subject to change, a hyphen (-) is displayed. If any one of Max Initial Copy, CU Activity, Path Blockade Watch(s), and Path Blockade SIM Watch(s) is changed, this will be the subject to change.
Path Blockade SIM Watch(s)	The path blockade SIM watch period setting (in seconds). If this is not a subject to change, a hyphen (-) is displayed. If any one of Max Initial Copy, CU Activity, Path Blockade Watch(s), and Path Blockade SIM Watch(s) is changed, this will be the subject to change.

Item	Description
Switch	Indicates the ON/OFF information of each bit of the function switch that is allocated in the 64 bit format; the first digit corresponds to the bit 0 while the last one corresponds to the bit 63. 0: OFF, 1: ON If this is not a subject to change, a hyphen (-) is displayed.
LDKC	The LDKC number
CU	The CU number of the connected CU
Max Initial Copy	The number of parallel operation of initial copy by CU. If this is not a subject to change, a hyphen (-) is displayed.
Num. of CUs	The number of CUs set

Example 5: Copy type is UR

```
RMI AP,,[Remote Replication],Edit Options,,Normal end,Seq.=xxxxxxxxxx
+Copy Type=UR
+Max Initial Copy=64
```

Detailed Information 5

Item	Description
Copy Type	The program product name for this operation UR: Universal Replicator
Max Initial Copy	The maximum number of initial copy operations set

Example 6: when the copy type is GAD

```
RMI AP,,[Remote Replication],Edit Options,,Normal end,Seq.=xxxxxxxxxx
+Copy Type=GAD,{Max Initial Copy,Path Blockade Watch(s),
Path Blockade SIM Watch(s),Service SIM,Switch,Max Initial Copy HA}=
{128,45,70,Not Report,0000 0000 0000 0000 0000 0000 0000 0000 0000
0000 0000 0000 0000 0000 0000 0000,50}
```

Detailed Information 6

Item	Description
Copy Type	The program product name for this operation GAD: global-active device
Max Initial Copy	The setting of the maximum number of initial copy operations
Path Blockade Watch(s)	The path blockade watch period setting (in seconds).
Path Blockade SIM Watch(s)	The path blockade SIM watch period setting (in seconds).

Item	Description
Service SIM	Indicates whether the remote replication related SIM is reported. Report: Reported, Not Report: Not reported
Switch	Indicates the ON/OFF information of each bit of the function switch that is allocated in the 64 bit format; the first digit corresponds to the bit 0 while the last one corresponds to the bit 63. 0: OFF, 1: ON If this is not a subject to change, a hyphen (-) is displayed.
Max Initial Copy HA	The setting of the number of initial copy operations of GAD

[Remote Replication] Edit Pair Options

Example 1: Copy type is TC

```
RMI AP,,[Remote Replication],Edit Pair Options,,Normal end,
Seq.=xxxxxxxxxx
+Copy Type=TC,{P-VOL(Port-G-ID-LUN),Fence Level,Result}
=[{1A-0x00-0,Never,Normal end},{1A-0x00-1,Never,Normal end},
{1A-0x00-2,Never,Normal end},{(Snip)-(Snip)}],
Num. of Pairs=xx
```

Detailed Information 1

Item	Description
Copy Type	The program product name for this operation TC: TrueCopy
P-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the primary volume
Fence Level	The changed fence level setting (the condition that MCU rejects the write operation to the primary volume). Never: Can write to the primary volume even when the pair is split. Data: Cannot write to the primary volume when update copying fails. Status: Cannot write to the primary volume, only when the storage system of the primary site cannot change the pair status of the secondary volume to PSUE.
Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end where xxxx: Part code, yyyy: Error code
Num. of Pairs	The number of pairs on which the setting is changed

Example 2: when the copy type is UR

```
RMI AP,,[Remote Replication],Edit Pair Options,,Normal end,
Seq.=xxxxxxxxxx
```

```
+Copy Type=UR
+{P-VOL(Port-G-ID-LUN),S-VOL(Port-G-ID-LUN),MirrorID,
M-JNL,R-JNL,Error Level,Result}
=[{4C-0x00-0,4A-0x00-0,0x00,0x001,0x001,Mirror,Normal end},
{4C-0x00-1,4A-0x00-1,0x00,0x001,0x001,Mirror,Normal end}],
Num. of Pairs=2
```

Detailed Information 2

Item	Description
Copy Type	The program product name for this operation UR: Universal Replicator
P-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the primary data volume
S-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the secondary data volume
MirrorID	The mirror ID
M-JNL	The master journal number
R-JNL	The restore journal number
Error Level	Range of the pair split at failure occurrence Mirror: When a pair fails, all the pairs are split that exist in the same mirror as the pair. LU: When a pair fails, only the pair is split.
Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end where xxxx: Part code, yyyy: Error code
Num. of Pairs	The number of pairs on which the setting is changed

[Remote Replication] Journal Owner

Example

```
RMI AP,,[Remote Replication],Journal Owner,,Normal end,
Seq.=xxxxxxxxxx
+{JNL,Owner,Result}={0x000,0x00,Normal end},
{0x001,0x00,Normal end},
Num. of JNLs=2
```

Detailed Information

Item	Description
JNL	The journal number
Owner	The ownership to which the journal belongs
Result	The result of the operation

Item	Description
	Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end
Num. of JNLs	The number of journals

[Remote Replication] Journal Vol

Example 1: Adding journal volumes

```
RMI AP,, [Remote Replication], Journal Vol, Add, Normal end,
Seq.=xxxxxxxxxx
+Copy Type=UR
+{LDKC, JNL, Owner}={0x00, 0x001, 0x00}
++{LDKC:CU:LDEV, Result}
=[{0x00:0xD7:0x01, Normal end}], Num. of LDEVs=1
+{LDKC, JNL, Owner}={0x00, 0x002, 0x00}
++{LDKC:CU:LDEV, Result}
=[{0x00:0xD8:0x21, Normal end}], Num. of LDEVs=1
+Num. of JNLs=2
```

Example 2: Deleting journal volumes

```
RMI AP,, [Remote Replication], Journal Vol, Delete, Normal end,
Seq.=xxxxxxxxxx
+Copy Type=UR
+{LDKC, JNL}={0x00, 0x001}
++{LDKC:CU:LDEV, Result}
=[{0x00:0xD7:0x01, Normal end}], Num. of LDEVs=1
+{LDKC, JNL}={0x00, 0x002}
++{LDKC:CU:LDEV, Result}
=[{0x00:0xD8:0x21, Normal end}], Num. of LDEVs=1
+Num. of JNLs=2
```

Basic Information (Adding or deleting journal volumes)

Parameter	Description
Add	Indicates the addition of journal volumes
Delete	Indicates the deletion of journal volumes

Detailed Information (Adding or deleting journal volumes)

Item	Description
Copy Type	The program product name for this operation UR: Universal Replicator
LDKC	The LDKC number to which the journal belongs
JNL	The journal number
Owner	The ownership to which the journal belongs

Item	Description
	This information is output when the parameter is Add.
LDKC:CU:LDEV	The LDKC, CU, and LDEV numbers of the volume
Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end where xxxx: Part code, yyyy: Error code
Num. of LDEVs	The number of LDEVs set for the journal
Num. of JNLs	The number of journals

Example 3: Deleting journals

```
RMI AP,,[Remote Replication],Journal Vol,Delete JNL,Normal end,
Seq.=xxxxxxxxxx
+Copy Type=UR
+{LDKC,JNL,Result}
={0x00,0x001,Normal end},{0x00,0x003,Normal end},
{0x00,0x005,Normal end}],Num. of JNLs=3
```

Basic Information

Parameter	Description
Delete JNL	Indicates the deletion of journals

Detailed Information

Item	Description
Copy Type	The program product name for this operation UR: Universal Replicator
LDKC	The LDKC number to which the journal belongs
JNL	The journal number
Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end where xxxx: Part code, yyyy: Error code
Num. of JNLs	The number of journals

[Remote Replication] R-Cmd.Dev.

Example

```
RMI AP,,[Remote Replication],R-Cmd.Dev.,Assign,Normal end,
Seq.=xxxxxxxxxx
```

```
+Copy Type=UR
+{LDKC,JNL,MirrorID,R-Cmd.Dev.(LDKC:CU:LDEV),Result}
=[{0x00,0x001,0x01,0x00:0x12:0x34,Normal end},
{0x00,0x010,0x02,0x00:0x56:0x78,Normal end}],
Num. of Mirrors=2
```

Basic Information

Parameter	Description
Assign	The remote command device is assigned.
Release	The remote command device is released.

Detailed Information

Item	Description
Copy Type	The program product name for this operation UR: Universal Replicator
LDKC	The LDKC number to which the journal belongs
JNL	The journal number
MirrorID	The mirror ID
R-Cmd.Dev. (LDKC:CU:LDEV)	The LDKC, CU, and LDEV numbers of the remote command device. The hyphen (-) indicates - When assigning a remote command device without specifying a remote command device as a parameter. - When releasing a remote command device.
Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end where xxxx: Part code, yyyy: Error code
Num. of Mirrors	The number of mirrors on which the setting is changed

[Remote Replication] Resync Pairs

Example 1: Copy type is TC

```
RMI AP,,[Remote Replication],Resync Pairs,,Normal end,Seq.=xxxxxxxxxx
+Copy Type=TC,{P-VOL(Port-G-ID-LUN),S-VOL(Port-G-ID-LUN),
Fence Level,Copy Pace,Priority,Result}
=[{1A-0x00-0,1B-0x00-0,Never,15,256,Normal end},
{1A-0x00-1,1B-0x00-1,Never,15,256,Normal end},(Snip)-(Snip)],
Num. of Pairs=xx
```

Detailed Information 1

Item	Description
Copy Type	The program product name for this operation TC: TrueCopy
P-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the primary volume
S-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the secondary volume
Fence Level	Configured fence level (conditions where the local storage system rejects write operations to the primary volume) Never: Can write to the primary volume even the pair is split. Data: Cannot write to the primary volume when update copying fails. Status: Cannot write to the primary volume, only when the storage system of the primary site cannot change the pair status of the secondary volume to PSUE.
Copy Pace	The initial copy speed set (the number of tracks you can copy at a time)
Priority	The priority of resynchronizing operation set (scheduling order)
Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end where xxxx: Part code, yyyy: Error code
Num. of Pairs	The number of resynchronized pairs

Example 2: when the copy type is UR

```
RMI AP,,[Remote Replication],Resync Pairs,,Normal end,Seq.=xxxxxxxxx  
+Copy Type=UR  
+{P-VOL(Port-G-ID-LUN),S-VOL(Port-G-ID-LUN),MirrorID,  
S/N,CTRLID,Priority,CTG,Range,M-JNL,R-JNL,Error Level,  
Resync Mode,Result}  
=[{4C-0x00-0,4A-0x00-0,0x00,467676,18,32,0x000,LU,0x001,0x001,  
Mirror,Normal,Normal end},  
{4C-0x00-1,4A-0x00-1,0x00,467676,18,32,0x000,LU,0x001,0x001,  
Mirror,Normal,Normal end}],Num. of Requests=2
```

Detailed Information 2

Item	Description
Copy Type	The program product name for this operation UR: Universal Replicator
P-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the primary data volume
S-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the secondary data volume

Item	Description
MirrorID	The mirror ID
S/N	The serial number of the RCU
CTRLID	The controller ID of the RCU 18: VSP Gx00, 19: HUS VM
Priority	The priority of resynchronizing operation set (scheduling order)
CTG	The consistency group ID
Range	The applicable range of resynchronization Mirror: All the pairs are resync that exist in the same mirror as the pair. LU: Only the pair is resync.
M-JNL	The master journal number
R-JNL	The restore journal number
Error Level	Range of the pair split at failure occurrence Mirror: When a pair fails, all the pairs are split that exist in the same mirror as the pair. LU: When a pair fails, only the pair is split.
Resync Mode	Type of the pair resynchronization operation Normal: normal resync, Delta: delta resync, Return to standby: return to standby status
Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end where xxxx: Part code, yyyyy: Error code
Num. of Requests	The number of resynchronized mirrors when Range is Mirror The number of resynchronized pairs when Range is LU

Example 3: when the copy type is GAD

```
RMI AP,,[Remote Replication],Resync Pairs,,Normal end,Seq.=xxxxxxxxx
+Copy Type=GAD,{P-VOL(Port-G-ID-LUN),S-VOL(Port-G-ID-LUN),
S/N_P,S/N_S,Type,Path Gr.ID,Controller ID,SSID_P,SSID_S,
Copy Pace,Quorum Disk ID,MirrorID,Swap,Range,CTG,Result}=
-[{1A-0x00-0,1B-0x01-1,411111,422222,P-VOL,0x00,18,0x0004,0x0004,15,
0x00,1,Yes,Group,0x000,Normal end}),(Snip)-(Snip)],Num. of Requests=xx
```

Detailed Information 3

Item	Description
Copy Type	The program product name for this operation GAD: global-active device
P-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the primary volume

Item	Description
S-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the secondary volume
S/N_P	The serial number of the local storage system
S/N_S	The serial number of the remote storage system
Type	The volume type of the volume on the local storage system P-VOL: Primary volume, S-VOL: Secondary volume
Path Gr.ID	Path group ID used in a global-active device pair
Controller ID	The controller ID of the remote storage system 18: VSP Gx00, 19: HUS VM
SSID_P	The SSID of the primary volume
SSID_S	The SSID of the secondary volume
Copy Pace	The setting of the initial copy speed (the number of tracks that can be copied at a time)
Quorum Disk ID	The quorum disk ID used by global-active device
MirrorID	The mirror ID
Swap	Indicates whether the attributes of the primary and secondary volumes are swapped. No: Not swapped, Yes: Swapped
Range	The applicable range of resynchronization Volume: Only this volume, Group: All volumes in the consistency group to which this volume belongs
CTG	The consistency group ID A hyphen (-) is displayed when the volume does not belong to a consistency group.
Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end where xxxx: Part code, yyyy: Error code
Num. of Requests	The number of requests to resynchronize pairs

[Remote Replication] Split Pairs

Example 1: Copy type is TC

```

RMI AP,,[Remote Replication],Split Pairs,,Normal end,
Seq.=xxxxxxxxxx
+Copy Type=TC,{P-VOL(Port-G-ID-LUN),S-VOL(Port-G-ID-LUN),
Type,S-VOL Write,Kind,Result}
=[{1A-0x00-0,1B-0x00-0,P-VOL,Disable,S-VOL,Normal end},
{1A-0x00-1,1B-0x00-1,P-VOL,Disable,S-VOL,Normal end},
(Snip)-(Snip)],Num. of Pairs=xx

```

Detailed Information 1

Item	Description
Copy Type	The program product name for this operation TC: TrueCopy
P-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the primary volume
S-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the secondary volume
Type	The volume type of the volume on the primary site P-VOL: Primary volume, S-VOL: Secondary volume
S-VOL Write	Indicates whether the writing to the secondary volume is enabled Enable: Writing is enabled, Disable: Writing is disabled
Kind	Indicates whether the primary volume is writable after splitting a pair. P-VOL Failure: Not writable S-VOL: Writable
Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end where xxxx: Part code, yyyy: Error code
Num. of Pairs	The number of split pairs

Example 2: when the copy type is UR

```
RMI AP,,[Remote Replication],Split Pairs,,Normal end,
Seq.=xxxxxxxxxx
+Copy Type=UR
+{P-VOL(Port-G-ID-LUN),S-VOL(Port-G-ID-LUN),MirrorID,
S/N,CTRLID,Type,S-VOL Write,Range,Suspend Mode,Result}
=[{4C-0x00-0,4A-0x00-0,0x00,467676,18,P-VOL,Disable,LU,
Flush,Normal end},
{4C-0x00-1,4A-0x00-1,0x00,467676,18,P-VOL,Disable,LU,
Flush,Normal end}],Num. of Requests=2
```

Detailed Information 2

Item	Description
Copy Type	The program product name for this operation UR: Universal Replicator
P-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the primary data volume
S-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the secondary data volume
MirrorID	The mirror ID

Item	Description
S/N	The serial number of the RCU
CTRLID	The controller ID of the RCU 18: VSP Gx00, 19: HUS VM
Type	Indicates whether the split data volume is a primary or secondary data volume P-VOL: Primary, S-VOL: Secondary
S-VOL Write	Indicates whether the writing to the secondary volume is enabled Disable: Disabled, Enable: Enabled
Range	The split range Mirror: All the pairs are split that exist in the same mirror as the pair. LU: Only the pair is split.
Suspend Mode	Indicates how to handle updated data that is not reflected in the secondary volume. Flush: The updated data is reflected when splitting a pair. Flush: The updated data is reflected when splitting a pair. Purge: The updated data is not reflected when splitting a pair. However, the updated data is reflected when the pair is resynchronized later.
Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end where xxxx: Part code, yyyyy: Error code
Num. of Requests	The number of split mirrors when Range is Mirror The number of split pairs when Range is LU

[Remote Replication] Suspend Pairs

Example

```
RMI AP,,[Remote Replication],Suspend Pairs,,Normal end,
Seq.=xxxxxxxxxx
+Copy Type=GAD,{P-VOL(Port-G-ID-LUN),S-VOL(Port-G-ID-LUN),
S/N_P,S/N_S,Type,SSID_P,SSID_S,Kind,CTG,Range,Swap,MirrorID,Result}
=[{1A-0x00-0,1B-0x01-01,411111,422222,P-VOL,0x0008,0x000C,S-VOL,
-,Volume,No,0,Normal end},
{1A-0x00-1,1B-0x01-1,411111,422222,P-VOL,0x0009,0x000C,S-VOL,
-,Volume,No,0,Normal end}),(Snip)-(Snip)],Num. of Requests=xx
```

Detailed Information

Item	Description
Copy Type	The program product name for this operation GAD: global-active device

Item	Description
P-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the primary volume
S-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the secondary volume
S/N_P	The serial number of the local storage system
S/N_S	The serial number of the remote storage system
Type	The volume type of the volume on the local storage system P-VOL: Primary volume, S-VOL: Secondary volume
SSID_P	The SSID of the primary volume
SSID_S	The SSID of the secondary volume
Kind	Indicates whether the primary volume is writable after suspending a pair. P-VOL Failure: Not writable S-VOL: Writable
CTG	The consistency group ID A hyphen (-) is displayed when Range is Volume.
Range	The applicable range of suspension Volume: Only this volume, Group: All volumes in the consistency group to which this volume belongs
Swap	Indicates whether the attributes of the primary and secondary volumes are swapped. No: Not swapped, Yes: Swapped, Rollback: Returning the pair status of the secondary volume to PSUS from SSWS
MirrorID	The mirror ID
Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end where xxxx: Part code, yyyy: Error code
Num. of Requests	The number of requests to suspend pairs

Server Priority Manager Descriptions

[SPM] Change SPMGrp

Example

```
RMI AP, , [SPM], Change SPMGrp, , Normal end,
Seq.=xxxxxxxxxx
+{SPM Group, Priority, UpperLimit, Mode}
=[{XXXXXXXXXXXXXXXXXX, Non-Prio, XXXXXXXX, IOPS}], Num. of SPM Groups=1
```

Detailed Information

Item	Description
SPM Group	An SPM group name
Priority	An attribute specified to an HBA (host bus adapter) in the SPM group after the change Prio: a prioritized WWN Non-Prio: a non-prioritized WWN
Upper Limit	An upper limit when you specify Non-Prio When you specify Prio, this information is not output.
Mode	The type of rate when you specify an upper limit. IOPS: the I/O rate KB/s: the transfer rate When you specify Prio, this information is not output.
Num. of SPM Groups	The number of SPM groups whose settings are changed



Note:

- When the attribute of the host bus adapter in the SPM group changes from a prioritized WWN to a non-prioritized WWN, "Non-Prio" is output to Priority and "0" is output to Upper limit respectively.
- If multiple changes in settings such as Priority and Upper limit are made in succession and then **Apply** is clicked at the end of the operation, these set values are output one by one in the order they were configured.

[SPM] Clear SPM Info

Example

```
RMI AP,,[SPM],Clear SPM Info,,Normal end,  
Seq.=xxxxxxxxxx
```

[SPM] Default Set

Example

```
RMI AP,,[SPM],Default Set,Kind=WWN,Normal end,  
Seq.=xxxxxxxxxx
```

Basic Information

Parameter	Description
Kind=Port	Indicates that settings in the Port tab are initialized.
Kind=WWN	Indicates that settings in the WWN tab are initialized.

[SPM] Set All Prio Port

Example

```
RMI AP,, [SPM],Set All Prio Port,,Normal end,  
Seq.=xxxxxxxxxx  
+{AllPriority,Threshold,Mode}={Enable,XXXXXXX,IOPS}
```

Detailed Information

Item	Description
AllPriority	Settings in the All Thresholds field in the Port tab Enable: All Thresholds is configured. Disable: Settings in the All Thresholds field are canceled.
Threshold	A configured value in the All Thresholds field. This information is output only when All Thresholds is configured.
Mode	The type of rate for All Thresholds IOPS: the I/O rate KB/s: the transfer rate This information is output only when All Thresholds is configured.

[SPM] Set All Prio WWN

Example

```
RMI AP,, [SPM],Set All Prio WWN,,Normal end,  
Seq.=xxxxxxxxxx  
+{AllPriority,Threshold,Mode}={Enable,XXXXXXX,IOPS}
```

Detailed Information

Item	Description
AllPriority	Settings in the All Thresholds field in the WWN tab Enable: All Thresholds is configured. Disable: Settings in the All Thresholds field are canceled.
Threshold	A configured value in the All Thresholds field. This information is output only when All Thresholds is configured.
Mode	The type of rate for All Thresholds IOPS: the I/O rate KB/s: the transfer rate This information is output only when All Thresholds is configured.

[SPM] Set Ctrl Kind

Example

```
RMI AP,, [SPM],Set Ctrl Kind,Kind=WWN,Normal end,  
Seq.=xxxxxxxxxx
```

Basic Information

Parameter	Description
Kind=Port	Indicates that you switched a definition of the server priority by a port without configuring All Thresholds.
Kind=All Port	Indicates that you switched a definition of the server priority by a port with configuring All Thresholds.
Kind=WWN	Indicates that you switched a definition of the server priority by a WWN. This information is output whichever All Thresholds is configured or not.

[SPM] Set Prio Port

Example

```
RMI AP,, [SPM],Set Prio Port,,Normal end,  
Seq.=xxxxxxxxxx  
+{Port,Priority,Use,Threshold/Upper Limit,Mode}  
=[{1A,Non-Prio,Enable,XXXXXXX,IOPS}],Num. of Ports=1
```

Detailed Information

Item	Description
Port	A name of the port
Priority	An attribute specified to the port Prio: a prioritized port Non-Prio: a non-prioritized port
Use	When the port is a prioritized port, this information indicates whether a threshold is specified or not. When the port is a non-prioritized port, this information indicates whether an upper limit is specified or not. Enable: specified Disable: not specified
Threshold/Upper Limit	When the port is a prioritized port, this information indicates the threshold. When the port is a non-prioritized port, this information indicates the upper limit. This information is output only when a threshold or an upper limit is specified.

Item	Description
Mode	The type of rate for the threshold or the upper limit IOPS: the I/O rate KB/s: the transfer rate This information is output only when a threshold or an upper limit is specified.
Num. of Ports	The number of ports whose settings are changed

[SPM] Set Prio WWN

Example

```
RMI AP,, [SPM], Set Prio WWN, , Normal end,
Seq.=xxxxxxxxx
+{WWN, Priority, Upper Limit, Mode}
=[{0xxxxxxxxxxxxxxxx, Non-Prio, xxxxxxxx, IOPS}], Num. of WWNs=1
```

Detailed Information

Item	Description
WWN	A WWN of an HBA A WWN is a 16-digit number in the hexadecimal format.
Priority	An attribute specified to the HBA Prio: a prioritized WWN Non-Prio: a non-prioritized WWN
Upper Limit	When the WWN is a non-prioritized WWN, this information indicates the upper limit. When the WWN is a prioritized WWN, this information is not output.
Mode	The type of rate for the upper limit IOPS: the I/O rate KB/s: the transfer rate This information is not output when the WWN is a prioritized WWN.
Num. of WWNs	The number of WWNs of HBAs whose settings are changed



Note:

- When the attribute of the host bus adapter changes from a prioritized WWN to a non-prioritized WWN, "Non-Prio" is output to Priority and "0" is output to Upper limit respectively.
- If multiple changes in settings such as Priority and Upper limit are made in succession and then **Apply** is clicked at the end of the operation, these set values are output one by one in the order they were configured.

[SPM] SPMGrp Del/Chg

Example

```
RMI AP,,[SPM],SPMGrp Del/Chg,,Normal end,  
Seq.=xxxxxxxxxx  
+{Mode,SPM Group,Change Name}  
=[{Update,XXXXXXXXXXXXXXXXXX,XXXXXXXXXXXXXXXXXX}],  
Num. of SPM Groups=1
```

Detailed Information

Item	Description
Mode	An executed operation Delete: Deleted an SPM group. Update: Changed an SPM name.
SPM Group	An SPM group name where the operation is executed
Change Name	An SPM group name after the change This information is output only when an SPM group name is changed.
Num. of SPM Groups	The number of SPM groups that are deleted or whose names are changed

[SPM] Update Port WWN

Example

```
RMI AP,,[SPM],Update Port WWN,,Normal end,  
Seq.=xxxxxxxxxx  
+{Mode,WWN,SPM Name,Priority}  
={Add WWN,0xXXXXXXXXXXXXXXXXXX,XXXXXXXXXXXXXXXXXX,Non-Prio},  
++Port=[1A,3A],Num. of Ports=2,  
-Num. of WWNs=1
```

Detailed Information

Item	Description
Mode	An executed operation Add WWN: Added a WWN (an HBA is monitored). Delete WWN: Deleted a WWN (an HBA is not monitored).
WWN	An added or deleted WWN A WWN is a 16-digit number in the hexadecimal format.
SPM Name	An SPM name for an added or deleted HBA
Priority	An attribute specified to the HBA Prio: a prioritized WWN Non-Prio: a non-prioritized WWN This information is output only when a WWN (HBA) is added.

Item	Description
Port	A name of the port where the HBA is added
Num. of Ports	The number of ports where the HBA is added
Num. of WWNs	The number of added or deleted WWNs

[SPM] Update SPMGrp

Example

```
RMI AP,,[SPM],Update SPMGrp,,Normal end,
Seq.=xxxxxxxx
+{UpdateMode,SPM Group,Priority,Upper Limit,Mode}
=[{Add New Group,XXXXXXXXXXXXXXXXXX,Non-Prio,XXXXXXX,IOPS},
++WWN=[0XXXXXXXXXXXXXXXXXX,0XXXXXXXXXXXXXXXXXX],Num. of WWNs=2],
+Num. of SPM Group=1
```

Detailed Information

Item	Description
UpdateMode	An executed operation Add New Group: Added a new SPM group. Add WWN: Added an HBA to the SPM group Delete WWN: Deleted an HBA from the SPM group
SPM Group	An SPM group name
Priority	An attribute specified to the HBA Prio: a prioritized WWN Non-Prio: a non-prioritized WWN This attribute is applied to all HBAs in the SPM group. This information is output only when you add a new SPM group.
Upper Limit	When an attribute specified to the SPM group is Non-Prio, this information indicates an upper limit of the HBAs in the SPM group. This information is output only when you add a new SPM group.
Mode	The type of rate when you specify an upper limit. IOPS: the I/O rate KB/s: the transfer rate This information is output only when you add a new SPM group.
WWN	WWNs of HBAs in the SPM group A WWN is a 16-digit number in the hexadecimal format. All WWNs are output for this item. You can add up to 32 WWNs to a SPM group.
Num. of WWNs	The number of WWNs of added or deleted HBAs

Item	Description
CLPR	The CLPR ID of the mapped external volume
Emulation	Not output because this item is not used.
Cache	The cache mode of the mapped external volume Enable: Enabled, Disable: Disabled
Inflow	The inflow control setting of the cache of the mapped external volume. Enable: Enabled, Disable: Disabled
MP Unit ID	MP Unit ID specified for the external volume When an MP Unit ID is specified automatically, "Auto" is output.
LoadBalanceMode	The load balance mode of the mapped external volume Normal Round-robin, Extended Round-robin, or Disable will appear.
ALUA Permitted	The ALUA permitted of the mapped external volume Enable: Enabled, Disable: Disabled
Data Direct Mapping	Indicates the setting status of Data Direct Mapping Enable: Data Direct Mapping is enabled. Disable: Data Direct Mapping is disabled.
Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end where xxxx: Part code, yyyyy: Error code
Port	The port name of the local storage system
WWN	For connection through the fibre channel port, the WWN of the target port on the external storage system is indicated. For connection through the iSCSI port, a hyphen (-) is output.
IP Address	For connection through the iSCSI port, the IP address of the iSCSI port on the external storage system is indicated. For connection through the fibre channel port, a hyphen (-) is output.
iSCSI Target Name	For connection through the iSCSI port, the iSCSI target name on the external storage system is indicated. For connection through the fibre channel port, a hyphen (-) is output.
LUN	The LUN of the external volume
Num. of Paths	The number of mapping path (Port-WWN-LUN) configured
PathResult	The result of attempting to create an external path. If the path is created normally, the audit log includes the following: PathResult: Normal end If the path is not created, the audit log includes this: PathResult: Error(xxxx-yyyyy): Abnormal end where xxxx is the Part code and yyyyy is the Error code

Item	Description
LDKC:CU:LDEV	The LDKC number, CU, and LDEV number of the LDEVs in the mapped external volume. The number on the left of the colon is an LDKC number, the number between the colons is a CU number, and the number on the right of the colon is an LDEV number
LDEVCapa(blocks)	The capacity of LDEVs in the mapped external volumes indicated by blocks
SSID	Not output because this item is not used.
LDEV MP Unit ID	MP Unit ID specified for the LDEV. When an MP Unit ID is specified automatically, "Auto" is output.
LDEVResult	The result of attempting to create an external path. If the LDEV is created normally, the audit log includes the following: LDEVResult: Normal end If the LDEV is not created, the audit log includes this: LDEVResult: Error(xxxx-yyyyy): Abnormal end where xxxx is the Part code and yyyy is the Error code
Num. of LDEVs	The number of LDEVs in the mapped external volumes
Num. of Volumes	The number of mapped external volumes

[UVM] Assign MP Unit

Example

```
RMI AP,Task Name,[UVM],Assign MP Unit,,Normal end,
Seq.=xxxxxxxxxx
+{Group,MP Unit ID,Result}=[{E1-1,10,Normal end},
{E1-2,11,Normal end},{E1-3,20,Normal end}],Num. of Groups=3
```

Detailed Information

Item	Description
Group	The external volume number for the configured external volumes
MP Unit ID	The MP Unit ID assigned to the external volume
Result	The result of operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end where xxxx: Part code, yyyy: Error code
Num. of Groups	The number of groups of configured external volumes

[UVM] Delete ES VOLs

Example

```
RMI AP,Task Name,[UVM],Delete ES VOLs,,Normal end,  
Seq.=xxxxxxxxxx  
+{ExGroup,Mode,Result}=[{E1-1,Force,Normal end},{E1-2,Force,  
Normal end},{E1-3,Normal,Normal end}],Num. of Volumes=3
```

Detailed Information

Item	Description
ExGroup	The number of the external volume group and the reference number assigned to the external volume of the external volume that the mapping has been released. The number on the left of a dash (-) is the external volume number and the number on the right of the dash (-) is the reference number of the group.
Mode	The mode of execution when mapping was released Normal: normal execution. Force: forcible execution
Result	The result of operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end where xxxx: Part code, yyyy: Error code
Num. of Volumes	The number of volumes in the external volumes that mapping has been released

[UVM] Disconnect ES Paths

This logged information indicates that this Disconnect External Paths operation was only requested but not completed.

Example

```
RMI AP,Task Name,[UVM],Disconnect ES Paths,,Normal end,  
Seq.=xxxxxxxxxx  
+{Port,WWN,IP Address,iSCSI Target Name,Result}  
=[{1A,50560E8000C3E211,-,-,Normal end},  
{2A,-,192.168.0.136,  
iqn.1994-04.jp.co.hitachi.h8m.t.00001.2b000,Normal end},  
{3A,-,FE80:0:0:0:0:0:0:1,  
iqn.1994-04.jp.co.hitachi.h8m.t.00001.3b000,Normal end}],  
Num. of Paths=3
```

Detailed Information

Item	Description
Port	The port name of the local storage system
WWN	For connection through the fibre channel port, the WWN of the target port on the external storage system is indicated.

Item	Description
	For connection through the iSCSI port, a hyphen (-) is output.
IP Address	For connection through the iSCSI port, the IP address of the iSCSI port on the external storage system is indicated. For connection through the fibre channel port, a hyphen (-) is output.
iSCSI Target Name	For connection through the iSCSI port, the iSCSI target name on the external storage system is indicated. For connection through the fibre channel port, a hyphen (-) is output.
Result	The result of operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end where xxxx: Part code, yyyy: Error code
Num. of Paths	The number of mapping paths that has been disconnected.

[UVM] Disconnect ES VOLs

If this operation is performed from Device Manager - Storage Navigator, this logged information indicates that the Disconnect External Volumes operation was only requested but not completed.

Example

```
RMI AP,Task Name,[UVM],Disconnect ES VOLs,,Normal end,
Seq.=xxxxxxxxxx
+{Group,Result}=[{E1-1,Normal end},{E1-2,Normal end},
{E1-3,Normal end},{E1-4,Normal end}],Num. of Groups=4
```

Detailed Information

Item	Description
Group	The group number of the disconnected external volume
Result	The result of operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end xxxx: Part code, yyyy: Error code
Num. of Groups	The number of external volume groups that contain the disconnected external volume

[UVM] Edit ES Path Config

Example

```
RMI AP,Task Name,[UVM],Edit ES Path Config,,Normal end,
Seq.=xxxxxxxxxx
+{ExGroup,PathGroup,Result}={E1-1,1,Normal end}
```

```

++{Port,WWN,IP Address,iSCSI Target Name,LUN,PathResult}
=[{1A,50560E8000C3E211,-,-,1,Normal end},
{2A,-,192.168.0.136,
iqn.1994-04.jp.co.hitachi.h8m.t.00001.2b000,1,Normal end},
{3A,-,FE80:0:0:0:0:0:0:1,
iqn.1994-04.jp.co.hitachi.h8m.t.00001.3b000,1,Normal end},
{4A,-,0:0:0:0:0:0:FFFF:192.168.0.137,
iqn.1994-04.jp.co.hitachi.h8m.t.00001.4b000,1,Normal end}],
Num. of Paths=4
+{ExGroup,PathGroup,Result}={E1-2,1,Normal end}
++{Port,WWN,IP Address,iSCSI Target Name,LUN,PathResult}
=[{1A,50560E8000C3E211,-,-,2,Normal end},
{2A,-,192.168.0.136,
iqn.1994-04.jp.co.hitachi.h8m.t.00001.2b000,2,Normal end},
{3A,-,FE80:0:0:0:0:0:0:1,
iqn.1994-04.jp.co.hitachi.h8m.t.00001.3b000,2,Normal end},
{4A,-,0:0:0:0:0:0:FFFF:192.168.0.137,
iqn.1994-04.jp.co.hitachi.h8m.t.00001.4b000,2,Normal end}],
Num. of Paths=4
+Num. of Volumes=2

```

Detailed Information

Item	Description
ExGroup	The number of the external volume group and the reference number assigned to the external volume of the external volume that the mapping path configuration has been changed. The number on the left of a dash (-) is the external volume number and the number on the right of the dash (-) is the reference number of the group.
PathGroup	The path group number of the external volume that the mapping path configuration has been changed
Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end xxxx: Part code, yyyyy: Error code
Port	The port name of the local storage system
WWN	For connection through the fibre channel port, the WWN of the target port on the external storage system is indicated. For connection through the iSCSI port, a hyphen (-) is output.
IP Address	For connection through the iSCSI port, the IP address of the iSCSI port on the external storage system is indicated. For connection through the fibre channel port, a hyphen (-) is output.
iSCSI Target Name	For connection through the iSCSI port, the iSCSI target name on the external storage system is indicated. For connection through the fibre channel port, a hyphen (-) is output.
LUN	The LUN of the external volume
PathResult	The result of editing the path Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end

Item	Description
	where xxxx: Part code, yyyy: Error code
Num. of Paths	The number of mapping path (Port-WWN-LUN) set
Num. of Volumes	The number of external volumes that the mapping path configuration has been changed

[UVM] Edit ES VOLs

Example 1: Change the cache mode

```
RMI AP,Task Name,[UVM],Edit ES VOLs,CacheMode,Normal end,
Seq.=xxxxxxxxx
+{Group,Result}
=[{E1-1,Enable,Normal end},{E1-2,Enable,Normal end},
{E1-3,Enable,Normal end},{E1-4,Enable,Normal end}],
Num. of Groups=4
```

Example 2: Set the cache inflow control

```
RMI AP,Task Name,[UVM],Edit ES VOLs, InflowControl,
Normal end,Seq.=xxxxxxxxx
+{Group,Mode,Result}=[{E1-1,Enable,Normal end},
{E1-2,Enable,Normal end},{E1-3, Enable,Normal end},
{E1-4, Enable,Normal end}],Num. of Groups=4
```

Basic Information for Example 1 and 2

Parameter	Description
CacheMode	The cache mode is changed.
InflowControl	The cache inflow control is set.

Detailed Information for Example 1 and 2

Item	Description
Group	External volume group number for the executed setting operation
Mode	Whether the setting is enabled or disabled Enable: Enabled, Disable: Disabled
Result	The result of operation Normal end: Normal end, Error(xxxx-yyyy): Abnormal end where xxxx: Part code, yyyy: Error code
Num. of Groups	The number of external volumes groups configured

Example 3: Changing a load balance mode

```
RMI AP,Task Name,[UVM],Edit ES VOLs,LoadBalanceMode,  
Normal end,Seq.=xxxxxxxxxx  
+{Group,Mode,Result}=[{E1-1,Normal Round-robin,Normal end},  
{E1-2,Normal Round-robin,Normal end}],Num. of Groups=2
```

Basic Information for Example 3

Parameter	Description
LoadBalanceMode	The load balance mode is changed.

Detailed Information for Example 3

Item	Description
Group	External volume group number for the executed setting operation
Mode	The load balance mode after the change Normal Round-robin, Extended Round-robin, or Disable will appear.
Result	The result of operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end where xxxx: Part code, yyyy: Error code
Num. of Groups	The number of external volumes groups configured

Example 4: Changing ALUA Permitted

```
RMI AP,Task Name,[UVM],Edit ES VOLs,ALUA Permitted,  
Normal end,Seq.=xxxxxxxxxx  
+{Group,ALUA Permitted,Result}=[{E1-1,Enable,Normal end},  
{E1-2,Enable,Normal end}],Num. of Groups=2
```

Basic Information for Example 4

Parameter	Description
ALUA Permitted	The ALUA Permitted is changed.

Detailed Information for Example 4

Item	Description
Group	The external volume group number of the external volume on which the setting is performed
ALUA Permitted	The ALUA permitted after the change Enable: enable, Disable: disable
Result	The result of operation Normal end: Normal end,

Item	Description
	Error(xxxx-yyyyy): Abnormal end where xxxx: Part code, yyyy: Error code
Num. of Groups	The number of external volume groups on which the setting is performed

[UVM] Edit External WWNs / iSCSI Targets

Example

```
RMI AP,Task Name,[UVM],Edit External WWNs / iSCSI Targets,,
Normal end,Seq.=xxxxxxxxxx
+{WWN,IP Address,iSCSI Target Name,I/O-TOV,Quedepth,LinkDown,Result}
=[{50060E8000C3E214,-,-,15,8,180,Normal end},
{-,192.168.0.136,iqn.1994-04.jp.co.hitachi.h8m.t.00001.2b000,
15,8,180,Normal end},
{-,FE80:0:0:0:0:0:0:1,iqn.1994-04.jp.co.hitachi.h8m.t.00001.3b000,
15,8,180,Normal end}],Num. of WWNs=3
```

Detailed Information

Item	Description
WWN	For connection through the fibre channel port, the WWN of the target port on the external storage system is indicated. For connection through the iSCSI port, a hyphen (-) is output.
IP Address	For connection through the iSCSI port, the IP address of the iSCSI port on the external storage system is indicated. For connection through the fibre channel port, a hyphen (-) is output.
iSCSI Target Name	For connection through the iSCSI port, the iSCSI target name on the external storage system is indicated. For connection through the fibre channel port, a hyphen (-) is output.
I/O-TOV	The I/O time over value setting
Quedepth	The Quedepth value (the number of commands issuable)
LinkDown	The Blocked Path Monitoring value
Result	The result of operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end where xxxx: Part code, yyyy: Error code
Num. of WWNs	The number of WWNs setting of the external storage system

[UVM] Reconnect ES Paths

This logged information indicates that this Reconnect External Paths operation was only requested but not completed.

Example

```
RMI AP,Task Name,[UVM],Reconnect ES Paths,,Normal end,
Seq.=xxxxxxxxxx
+{Port,WWN,IP Address,iSCSI Target Name,Result}
=[{1A,50060E8000C3E214,-,-,Normal end},
{2A,-,192.168,0,136,
iqn.1994-04.jp.co.hitachi.h8m.t.00001.2b000,Normal end},
{3A,-,FE80:0:0:0:0:0:0:1,
iqn.1994-04.jp.co.hitachi.h8m.t.00001.3b000,Normal end}],
Num. of Paths=3
```

Detailed Information

Item	Description
Port	The port name of the local storage system
WWN	For connection through the fibre channel port, the WWN of the target port on the external storage system is indicated. For connection through the iSCSI port, a hyphen (-) is output.
IP Address	For connection through the iSCSI port, the IP address of the iSCSI port on the external storage system is indicated. For connection through the fibre channel port, a hyphen (-) is output.
iSCSI Target Name	For connection through the iSCSI port, the iSCSI target name on the external storage system is indicated. For connection through the fibre channel port, a hyphen (-) is output.
Result	The result of operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end where xxxx: Part code, yyyy: Error code
Num. of Paths	The number of mapping paths that path status has been checked.

[UVM] Reconnect ES VOLs

If this operation is performed from Device Manager - Storage Navigator, this logged information indicates that the Reconnect External Volumes operation was only requested but not completed.

Example

```
RMI AP,Task Name,[UVM],Reconnect ES VOLs,,Normal end,
Seq.=xxxxxxxxxx
+{Group,Result}=[{E1-1,Normal end},{E1-2,Normal end},
{E1-3,Normal end},{E1-4,Normal end}],Num. of Groups=4
```

Detailed Information

Item	Description
Group	The group number of the external volume resumed
Result	The result of operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end xxxx: Part code, yyyyy: Error code
Num. of Groups	The number of external volumes resumed

Volume Migration Descriptions

For information on using Volume Migration, contact the Hitachi Data Systems Support Center.

[VM] Del Migration Plans

Example

```
RMI AP,,[VM],Del Migration Plans,,Normal end,
Seq.=xxxxxxxx
+{SourceVolume,TargetVolume,OwnerID,Result}
=[{0x00:0x00:0x00,0x00:0x00:0x01,0xFF,Normal end},
{0x00:0x00:0x02,0x00:0x00:0x03,0xFF,Error(xxxx-yyyyy)},
{0x00:0x00:0x04,0x00:0x00:0x05,-,Normal end},
{0x00:0x00:0x06,0x00:0x00:0x07,-,Error(xxxx-yyyyy)}],
Num. of Plans=4
```

Detailed Information

Item	Description
SourceVolume	The logical volume ID of the migration source. The number on the left of the colon is an LDKC number, the number between the colons is a CU number, and the number on the right of the colon is an LDEV number.
TargetVolume	The logical volume ID of the migration target. The number on the left of the colon is an LDKC number, the number between the colons is a CU number, and the number on the right of the colon is an LDEV number.
OwnerID	The application by which a migration plans to be deleted is set. 0x00: Device Manager - Storage Navigator 0x01: Command Control Interface 0xFF: Tiered Storage Manager A hyphen (-) is output, no matter which application is used for a migration plan to be set, if the plan is deleted from the Volume Migration window.
Result	The result of operation Normal end: Normal end,

Item	Description
	Error(xxxx-yyyyy): Abnormal end, Not Execute: Not executed <i>where xxxx: Part code, yyyy: Error code</i>
Num. of Plans	The number of migration plans deleted.

[VM] Migrate Volumes

This logged information indicates that the migration was only requested but not completed.

Example

```
RMI AP,,[VM],Migrate Volumes,,Normal end,
Seq.=xxxxxxxxxx
+{SourceVolume,TargetVolume,OwnerID,Migration Type,Result}
=[{0x00:0x00:0x00,0x00:0x00:0x01,0x00,Normal,Normal end},
{0x00:0x00:0x02,0x00:0x00:0x03,0xFF,Normal,Error(xxxx-yyyyy)},
{0x00:0x00:0x04,0x00:0x00:0x05,0x00,Normal,Normal end},
{0x00:0x00:0x06,0x00:0x00:0x07,0xFF,Normal,
Error(xxxx-yyyyy)}],Num. of VOLs=4
```

Detailed Information

Item	Description
SourceVolume	The logical volume ID of the migration source. The number on the left of the colon is an LDKC number, the number between the colons is a CU number, and the number on the right of the colon is an LDEV number.
TargetVolume	The logical volume ID of the migration target. The number on the left of the colon is an LDKC number, the number between the colons is a CU number, and the number on the right of the colon is an LDEV number. This value is output only when the migration plan is set.
OwnerID	The application by which a migration plans is set. 0x00: Device Manager - Storage Navigator 0x01: Command Control Interface 0xFF: Tiered Storage Manager
Migration Type	The migration type of the migration plan. Nondisruptive Migration: Nondisruptive Migration Normal: Normal
Result	The result of operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end, Not Execute: Not executed <i>where xxxx: Part code, yyyy: Error code</i>
Num. of VOLs	The number of migration volumes.

Virtual Partition Manager Descriptions

[VPM] Edit CLPR

Example

```
RMI AP,, [VPM],Edit CLPR,,Normal end,  
Seq.=xxxxxxxxxx  
+CLPR=0:CLPR0,Total Cache Size=15360  
++PG=[1-1,1-2,1-3,1-4],Num. of PGs=4  
+Num. of CLPRs=1
```

Detailed Information

Item	Description
CLPR	The CLPR ID and the CLPR name
Total Cache Size	The cache capacity setting. The unit is megabyte (MB).
PG	The parity group number assigned to CLPR E1-1: In the case of an external volume V1-1: In the case of a virtual volume X1-1: In the case of a Dynamic Provisioning volume
Num. of PGs	The number of parity groups assigned to CLPR
Num. of CLPRs	The number of CLPRs configured

Volume Shredder Descriptions

[VS] Abort Shredding

Example

```
RMI AP,Task Name,[VS],Abort Shredding,,Normal end,  
Seq.=xxxxxxxxxx  
+OwnerID=0
```

Detailed Information

Item	Description
OwnerID	The owner ID 0: Indicates Device Manager - Storage Navigator 0xXX: Owner ID is expressed in two hexadecimal digits.

[VS] End Shredding

Example

```
MPC,, [VS],End Shredding,,Normal end,,Seq.=xxxxxxxxxx  
+{Times,Result}  
=[{1,Normal},{2,Normal},{3,Normal}],Num. of Data=3
```

Detailed Information

Item	Description
Times	The order of the shredding processes. A number from 1 to 8 is displayed.
Result	The result of the shredding processes. Normal: Normal end. Failed: Abnormal end. Aborted: Operation aborted. Not executed: Not executed. Data transfer error: An error occurred while outputting the result to the file. Data verify error: The error occurred in verifying the data. No data assigned: No data.
Num. of Data	The number of shredding processes

[VS] Shred LDEVs

This logged information indicates that the Shredding operation was only requested but not completed.

Example

```
RMI AP,Task Name,[VS],Shred LDEVs,,Normal end,  
Seq.=xxxxxxxxxx  
+OwnerID=0  
+{Data, Output File}  
=[{0xffff,Disable},{Random,Disable},{0x00,Enable}],  
Num. of Data=3  
+Output LDEV=[0x00:0x00:0x00,0x00:0x00:0x01,0x00:0x00:0x02],  
Num. of LDEVs=3  
+Shred LDEV=[0x00:0x00:0x00,0x00:0x00:0x01,0x00:0x00:0x02],  
Num. of LDEVs=3
```

Detailed Information

Item	Description
OwnerID	The owner ID 0: Indicates Device Manager - Storage Navigator 0xXX: Owner ID is expressed in two digits of the hexadecimal format

Item	Description
Data	The shredding data pattern Random: Random, 0XXXXX: Define
Output File	Whether the result of shredding is output to the file Disable: No output, Enable: Output
Num. of Data	The number of shredding data patterns
Output LDEV	Indicates LDEVs whose shredding results are output to the file
Num. of LDEVs	The number of target LDEVs of Data Output
Shred LDEV	The LDEV to be shredded
Num. of LDEVs	The number of LDEVs to be shredded

VSP Gx00 models, VSP Fx00 models audit log examples of encryption key operations

This topic provides examples and descriptions of the audit logs produced by data encryption operations. The descriptions are listed alphabetically by function name and operation name.

- [ENC Descriptions](#)
- [KEK Acquisition Descriptions](#)

ENC Descriptions

[ENC] Add keys to DKC

Add keys to DKC is output when an encryption key created on the key management server is added to the storage system or when the key management server is enabled in the encryption environmental settings from the initial setting.

Example

```
RMI AP,Task Name,[ENC],Add keys to DKC,,Normal end,  
Seq.=xxxxxxxxxx  
+{Num. of Keys}=[1]
```

Detailed Information

Item	Description
Num. of Keys	The number of created encryption keys

[ENC] Backup Keys

Backup Keys is output when back up information of encryption keys is created in the storage system in order to externally back up. It does not necessarily mean that the back up information is backed up normally on the file or the key management server even if Normal End is displayed.

Example

```
RMI AP,Task Name,[ENC],Backup Keys,,Normal end,  
Seq.=xxxxxxxxxx
```

[ENC] Backup Keys to File

Backup Keys to File is output when encryption key information created in the storage system is written to the file. It does not necessarily mean that the encryption key information is backed up on the file normally even if Normal End is displayed.

Example

```
RMI AP,Task Name,[ENC], Backup Keys to File,,Normal end,  
Seq.=xxxxxxxxxx
```

[ENC] Backup Keys to Serv

Backup Keys to Serv is output when encryption key information created in the storage system is backed up on the key management server. Even if Normal End is displayed, it merely means that the key management server received the request for backup and does not necessarily means that the encryption key information is backed up normally.

Example

```
RMI AP,Task Name,[ENC], Backup Keys to Serv,,Normal end,
Seq.=xxxxxxxxxx
+{UUID,Backup Date,Description,Result,Server_Repry}
=[{3E2332580B110E052D13C378866427A218EF1609881BC058FCBCF79FCD
7727C7,2013/07/06 09:20:37,BACK0706,Normal end,-}],
Num. of Keys=1
```

Detailed Information

Item	Description
UUID	The UUID of the encryption key to be backed up on the key management server
Backup Date	The date and time entered into the backup information when an encryption key is backed up on the key management server
Description	The description set in the backup information when an encryption key is backed up on the key management server
Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end
Server_Repry	The return value from the key management server A hyphen (-) is displayed unless an error occurred while processing. For details on return values, see the manuals for each key management server.
Num. of Keys	The number of encryption keys to be backed up This value is fixed to "1" because all of the created encryption keys are backed up as one key.

[ENC] Change CEK Status

Change CEK Status is output asynchronous with the Device Manager - Storage Navigator operations.

Example

```
,,[ENC],Change CEK Status,,Normal end,,Seq.=xxxxxxxxxx
```

[ENC] Change DEK Status

Change DEK Status is output asynchronous with the Device Manager - Storage Navigator operations.

Example

```
,,[ENC],Change DEK Status,,Normal end,Seq.=xxxxxxxxxx
```

[ENC] Clear Keys

Clear Keys is output asynchronous with the Device Manager - Storage Navigator operations.

Example

```
,,[ENC],Clear Keys,,Normal end,Seq.=xxxxxxxxxx
```

[ENC] Create KEK Dynamic

Create KEK Dynamic is output when a key encryption key is updated or when the key management server is enabled in the encryption environmental settings.

Example

```
RMI AP,Task Name,[ENC], Create KEK Dynamic,,Normal end,  
Seq.=xxxxxxxxxx  
+{UUID,Result,Server_Reply}  
=[{C53F242C7DCC27CC9698A72413C1C4DC280A757FDF93CED8AEBDF8807A  
79A06D,Normal end,-}],Num. of Keys=1
```

Detailed Information

Item	Description
UUID	The UUID of the created encryption key
Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end
Server_Reply	The return value from the key management server A hyphen (-) is displayed unless an error occurred while processing. For details on return values, see the manuals for each key management server.
Num. of Keys	The number of created encryption keys

[ENC] Create Keys

Create Keys is output when an encryption key is created on the storage system or when the key management server is disabled in the encryption environmental settings from the initial setting.

Example

```
RMI AP,Task Name,[ENC],Create Keys,,Normal end,  
Seq.=xxxxxxxxxx  
+{Num. of Keys}=[1]
```

Detailed Information

Item	Description
Num. of Keys	The number of created encryption keys

[ENC] Create Keys

Create Keys is output asynchronous with the Device Manager - Storage Navigator operations.

Example

```
,, [ENC], Create Keys,, Normal end, Seq.=xxxxxxxxxx
```

[ENC] Create Keys On Serv

Create Keys On Serv is output when a key encryption key or an encryption key is created on the key management server or when the key management server is enabled in the encryption environmental settings from the initial setting.

Example 1: Creating encryption keys

```
RMI AP, Task Name, [ENC], Create Keys On Serv,, Normal end,
Seq.=xxxxxxxxxx
+{UUID, Tweak_UUID, Result, Server_Reply}
=[{30708B5A94F5BE54DA84E0CB55BD2CFE5ABEBECBD8309B02EB1B71F17F805617,
94DA26FE13EF6196EF15A3CCCD333CD63D6867E57CF5BD5EB3CB9DF2CDE7CE1A,
Normal end, -}], Num. of Keys=1
```

Detailed Information for Example 1

Item	Description
UUID	The UUID of the created encryption key on the key management server A hyphen (-) is displayed when an error occurred while processing.
Tweak_UUID	The UUID of the created encryption key for Tweak on the key management server A hyphen (-) is displayed when an error occurred while processing.
Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end
Server_Reply	The return value from the key management server A hyphen (-) is displayed unless an error occurred while processing. For details on return values, see the manuals for each key management server.
Num. of Keys	The number of created encryption keys

Example 2: Creating key encryption keys

```
RMI AP, Task Name, [ENC], Create Keys On Serv,, Normal end,
Seq.=xxxxxxxxxx
+{Key_Type, UUID, Result, Server_Reply}
=[{KEK, 4365A0465C69FA96DF64C9BBB77122E9AB65D4D6A2E9BBDE5987EAB
86A0FE94E, Normal end, -}], Num. of Keys=1
```

Detailed Information for Example 2

Item	Description
Key Type	The purpose of the use of the created key KEK: key encryption keys (used as a key wrapping key)
UUID	The UUID of the created encryption key on the key management server A hyphen (-) is displayed when an error occurred while processing.
Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end
Server_Reply	The return value from the key management server A hyphen (-) is displayed unless an error occurred while processing. For details on return values, see the manuals for each key management server.
Num. of Keys	The number of created keys

[ENC] DEK assign SpareDisk

DEK assign SpareDisk is output when encryption settings are edited in the encryption environmental settings from the initial setting.

Example

```
RMI AP,Task Name,[ENC],DEK assign SpareDisk,,Normal end,
Seq.=xxxxxxxxxx
```

[ENC] DEK delete

DEK delete is output when encryption environment settings are initialized.

Example

```
RMI AP,Task Name,[ENC],DEK delete,,Normal end,
Seq.=xxxxxxxxxx
```

[ENC] Delete KEK Dynamic

Delete KEK Dynamic is output when a key encryption key is updated or when the key management server is changed from Enable to Disable in the encryption environmental settings.

Example

```
RMI AP,Task Name,[ENC], Delete KEK Dynamic,,Normal end,
Seq.=xxxxxxxxxx
+{UUID,Result,Server_Reply}=
[{C53F242C7DCC27CC9698A72413C1C4DC280A757FDF93CED8AEBDF8807A79A06D
,Normal end,-}],Num. of Keys=1
```

Detailed Information

Item	Description
UUID	The UUID of the deleted encryption key
Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end
Server_Reply	The return value from the key management server A hyphen (-) is displayed unless an error occurred while processing. For details on return values, see the manuals for each key management server.
Num. of Keys	The number of deleted encryption keys

[ENC] Delete Keys

Delete Keys is output when encryption keys are deleted.

Example

```
RMI AP,Task Name,[ENC],Delete Keys,,Normal end,  
Seq.=xxxxxxxxxx  
+{Key ID}=[1,2],Num. of Keys=2
```

Detailed Information

Item	Description
Key ID	A deleted encryption key number
Num. of Keys	The number of deleted encryption keys

[ENC] Delete Keys

Delete Keys is output asynchronous with the Device Manager - Storage Navigator operations.

Example

```
,,[ENC],Delete Keys,,Normal end,Seq.=xxxxxxxxxx
```

[ENC] Delete Keys on Serv

Delete Keys on Serv is output when the key management server has received the request for deletion even if Normal End is displayed, which does not mean that encryption keys are deleted normally.

Example

```
RMI AP,Task Name,[ENC],Delete Keys on Serv,,Normal end,  
Seq.=xxxxxxxxxx  
+{UUID,Backup Date,Description,Result,Server_Reply}=
```

```
[{FBC095D54493A45CAC4BE80EECD1BE51D7E0D4023D377D37B0BFDE72B887CED9
,2013/07/06 09:13:18,BACK0706,Normal end,-}],Num. of Keys=1
```

Detailed Information

Item	Description
UUID	The UUID of the encryption key to be deleted
Backup Date	The date and time of the backup information for the encryption key to be deleted
Description	The description of the backup information for the encryption key to be deleted
Result	The result of the operation Normal end: Normal end, Error(yyyy-xxxx): Abnormal end
Server_Reply	The return value from the key management server A hyphen (-) is displayed unless an error occurred while processing. For details on return values, see the manuals for each key management server.
Num. of Keys	The number of encryption keys to be deleted

[ENC] Edit Encryption

Edit Encryption is output when encryption settings for a parity group are edited or deleted.

Example

```
RMI AP,Task Name,[ENC],Edit Encryption,,Normal end,
Seq.=xxxxxxxxxx
+{PG,Encryption}=[{XX-XX,Enable},{XX-XX,Disable}],Num. of PGs=2
```

Detailed Information

Item	Description
PG	A parity group number
Encryption	The status of encryption Enable: Encryption is enabled Disable: Encryption is disabled
Num. of PGs	The number of parity groups

[ENC] Edit ENC Settings

Edit ENC Settings is output when the encryption environmental settings are edited.

Example

```
RMI AP,Task Name,[ENC],Edit ENC Settings,,Normal end,
Seq.=xxxxxxxxxx
+{KMS, Generate ENC Keys on KMS, Protect the KEK at the KMS}
=[No Set, No, No],Num. of Settings=1
```

Detailed Information

Item	Description
KMS	Indicates whether the key management server is used No Set: Not set Enable: The key management server is used Disable: The key management server is not used
Generate ENC Keys on KMS	Indicates where the encryption keys are created Yes: The keys are created on the key management server No: The keys are created on the storage system
Protect the KEK at the KMS	Indicates whether the key encryption keys created on the key management server are to be stored on the storage system Yes: The keys are stored on the storage system Yes (Disable Local Key Generation): The keys are stored but Local Key Generation is disabled No: The keys are not stored
Num. of Settings	The number of configured encryption environment settings

[ENC] Edit Password Policy

Edit Password Policy is output when the password policy for backing up encryption keys is edited.

Example

```
RMI AP,Task Name,[ENC], Edit Password Policy,,Normal end,
Seq.=xxxxxxxxxx
+{Numeric Characters (0-9),Uppercase Characters (A-Z),
Lowercase Characters (a-z),Symbols,Total}={1,2,3,4,10},
Num. of Settings=1
```

Detailed Information

Item	Description
Numeric Characters (0-9)	Indicates the minimum number of numeric characters used for the password
Uppercase Characters (A-Z)	Indicates the minimum number of uppercase characters used for the password

Item	Description
Lowercase Characters (a-z)	Indicates the minimum number of lowercase characters used for the password
Symbols	Indicates the minimum number of symbols used for the password
Total	Indicates the minimum number of total characters used for the password
Num. of Settings	The number of configured password policies

[ENC] Register KEK Dynamic

Register KEK Dynamic is output when a key encryption key is updated or when the key management server is enabled in the encryption environmental settings.

Example

```
RMI AP,Task Name,[ENC], Register KEK Dynamic,,Normal end,
Seq.=xxxxxxxxxx
+{UUID,Result,Server_Reply}=
[{B75E9D1699659C10B088E027798ACB082F1375AF2FF613229F15E9FE70D1EC4D
,Normal end,-}],Num. of Keys=1
```

Detailed Information

Item	Description
UUID	The UUID of the registered encryption key
Result	The result of the operation Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end
Server_Reply	The return value from the key management server A hyphen (-) is displayed unless an error occurred while processing. For details on return values, see the manuals for each key management server.
Num. of Keys	The number of registered encryption keys

[ENC] Rekey CEK

Rekey CEK is output when a certificate encryption key is updated, or when encryption settings are edited from the initial setting or initialized.

Example

```
RMI AP,Task Name,[ENC],Rekey CEK,,Normal end,
Seq.=xxxxxxxxxx
```

[ENC] Rekey KEK Dynamic

Rekey KEK Dynamic is output when a key encryption key is updated.

Example

```
RMI AP,Task Name,[ENC],Rekey KEK Dynamic,,Normal end,  
Seq.=xxxxxxxxxx
```

[ENC] Restore Keys

Restore Keys is output when encryption key information in the storage system is restored with key information obtained externally.

Example

```
RMI AP,Task Name,[ENC],Restore Keys,,Normal end,  
Seq.=xxxxxxxxxx
```

[ENC] Restore Keys fr File

Restore Keys fr File is output when encryption key information is obtained from the backup file.

Example

```
RMI AP,Task Name,[ENC], Restore Keys fr File,,Normal end,  
Seq.=xxxxxxxxxx
```

[ENC] Restore Keys fr Serv

Restore Keys fr Serv is output when the backup of encryption key information is obtained from the key management server.

Example

```
RMI AP,Task Name,[ENC], Restore Keys fr Serv,,Normal end,  
Seq.=xxxxxxxxxx  
+{UUID,Backup Date,Description,Result,Server Reply}=  
[{FBC095D54493A45CAC4BE80EECD1BE51D7E0D4023D377D37B0BFDE72B887CED9  
,2013/07/06 09:13:18,BACK0706,Normal end,-}],Num. of Keys=1
```

Detailed Information

Item	Description
UUID	The UUID of the encryption key that is used for restoring on the key management server
Backup Date	The date and time entered into the backup information for the encryption key that is used for restoring
Description	The contents of Description in the backup information for the encryption key that is used for restoring
Result	The result of the operation

Item	Description
	Normal end: Normal end, Error(xxxx-yyyyy): Abnormal end
Server_Reply	The return value from the key management server A hyphen (-) is displayed unless an error occurred while processing. For details on return values, see the manuals for each key management server.
Num. of Keys	The number of encryption keys that are used for restoring This value is fixed to "1" because all of the encryption keys that are used for restoring are backed up as one key.

[ENC] Retry KEK Dynamic

Retry KEK Dynamic is output when a key encryption key is reacquired.

Example

```
RMI AP,Task Name,[ENC],Retry KEK Dynamic,,Normal end,
Seq.=xxxxxxxxxx
```

[ENC] Set Up Key Mng Serv

Set Up Key Mng Serv is output when encryption environmental settings are edited.

Example 1: Using a key management server

```
RMI AP,Task Name,[ENC], Set Up Key Mng Serv,,Normal end,
Seq.=xxxxxxxxxx
+{Server Type,Key Management Server,Host Name,Port Number,
Timeout,Retry Interval,Number of Retries,
Client Certificate File Name,Root Certificate File Name}
=[{Primary,Enable,10.213.75.37,5696,10,1,3,,},
{Secondary,Enable,10.213.75.37,5696,10,1,3,,}],
Num. of Servers=2
```

Example 2: Not using a key management server

```
RMI AP,Task Name,[ENC], Set Up Key Mng Serv,,Normal end,
Seq.=xxxxxxxxxx
+{Server Type,Key Management Server}=
[{Primary,Disable},{Secondary,Disable}],Num. of Servers=2
```

Example 3: Initializing a encryption environmental settings

```
RMI AP,Task Name,[ENC], Set Up Key Mng Serv,,Normal end,
Seq.=xxxxxxxxxx
+{Server Type,Key Management Server}
=[{Primary,No Set},{Secondary,No Set}],Num. of Servers=2
```

Detailed Information

Item	Description
Server Type	The type of the key management server Primary: primary server, Secondary: secondary server
Key Management Server	Indicates whether the key management server is used Enable: The server is used Disable: The server is not used No Set: The encryption environmental settings are to be initialized
Host Name	The address of the key management server
Port Number	The port number of the key management server
Timeout	The communication timeout time to the key management server
Retry Interval	The retry interval to communicate with the key management server
Number of Retries	The number of retries to communicate with the key management server
Client Certificate File Name	The file name of the client certificate
Root Certificate File Name	The file name of the root certificate
Num. of Servers	The number of the configured key management servers

[ENC] Use Keys for CEK/KEK

Use Keys for CEK/KEK is output asynchronous with the Device Manager - Storage Navigator operations.

Example

```
,,[ENC],Use Keys for CEK/KEK,,Normal end,Seq.=xxxxxxxx
```

KEK Acquisition Descriptions

[KEK Acquisition] Acquisition Key

Acquisition Key is output when the storage system obtains KEK Dynamic from the key management server after the power is turned on again with the KMIP mode set to ON.

Example

```
RMI AP,Task Name,[KEK Acquisition],Acquisition Key,,Normal end,  
Seq.=xxxxxxxx
```

[KEK Acquisition] Set Key

Set Key is output when KEK Dynamic is configured for the storage system after the power is turned on again with the KMIP mode set to ON.

Example

```
RMI AP,Task Name,[KEK Acquisition],Set Key,,Normal end,  
Seq.=xxxxxxxxxx
```

Audit log examples of commands received by VSP Gx00 models, VSP Fx00 models

This topic provides examples and descriptions of the audit logs when a storage system receives commands sent from hosts, computers using Command Control Interface software, or hosts using Business Continuity Manager. The descriptions are listed alphabetically by function name and operation name.

- ☐ [Config Command](#)
- ☐ [FC-SP](#)
- ☐ [User Auth](#)

Config Command

The following shows examples and descriptions of the audit logs when a storage system receives commands sent from hosts for open system or computers using CCI.

Add CHAP User

Example

```
Out-of-band,, [Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Add CHAP User
++Port=1A,Target ID=0xBB,Initiator CHAP User=XXXXXX
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port to which an iSCSI target, to which a CHAP user is added, belongs
Target ID	The iSCSI target ID
Initiator CHAP User	The CHAP user name on the initiator side

Add Copy Group

Example

```
Out-of-band,, [Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Add Copy Group
++Copy Group=AAAAAAA
++Device Group={BBBBBB},Num. of Device Groups=1
```

Detailed Information

Item	Description
Command	The command name
Copy Group	The name of a copy group to be registered
Device Group	The name of a device group to be registered
Num. of DeviceGroups	The number of device groups to be registered

Add Device Group

Example

```
Out-of-band,, [Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Add Device Group
++Device Group=AAAAAAA
```

```
++LDEV(LDKC:CU:LDEV)={0x00:0xAA:0xBB,0x00:0xCC:0xDD,.....,
0x00:0xEE:0xFF},Num. of LDEVs=X
```

Detailed Information

Item	Description
Command	The command name
Device Group	The name of a device group to be registered When an LDEV is added, the name of the device group to which the LDEV is added is output
LDEV(LDKC:CU:LDEV)	The LDKC number, the CU number, and the LDEV number of an LDEV to be added to the device group
Num. of LDEVs	The number of LDEVs to be added to the device group

Add Device Group(Nick Name)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Add Device Group(Nick Name)
++Device Group=AAAAAAA,Group Name=ABCDE
++LDEV(LDKC:CU:LDEV)={0x00:0xAA:0xBB,0x00:0xCC:0xDD,.....,
0x00:0xEE:0xFF},Num. of LDEVs=X
```

Detailed Information

Item	Description
Command	The command name
Device Group	The name of a device group to be changed
Group Name	The name of the device group after the change
LDEV(LDKC:CU:LDEV)	The LDKC number, the CU number, and the LDEV number of an LDEV to be added to the device group
Num. of LDEVs	The number of LDEVs to be added to the device group

Add DP Pool

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Add DP Pool
++Pool ID=AA,Pool Name=AAAAAA
++LDEV(LDKC:CU:LDEV)={0x00:0xAA:0xBB,0x00:0xCC:0xDD,.....,
0x00:0xEE:0xFF},Num. of LDEVs=X
```

Detailed Information

Item	Description
Command	The command name
Pool ID	The pool number of a pool for Dynamic Provisioning to be created
Pool Name	The pool name of a pool for Dynamic Provisioning to be created No output if the pool name is not set
LDEV(LDKC:CU:LDEV)	The LDKC number, the CU number, and the LDEV number of a pool volume
Num. of LDEVs	The number of pool volumes to be created

Add External Group

Example

```
Out-of-band, , [Config Command] , , , Accept, Seq.=xxxxxxxxxx
+Command=Add External Group
++PG=E1-1, Port=1A, WWN=AAAAAAAA, Path Group ID=A, LUN=A
```

Detailed Information

Item	Description
Command	The command name
PG	The parity group number of the external volume
Port	The port name of the storage system (connection source)
WWN	The WWN of the storage system (connection target)
Path Group ID	The path group ID
LUN	The LU number of the external volume

Add External iSCSI Name/Modify External CHAP User

Example

```
Out-of-band, , [Config Command] , , , Accept, Seq.=xxxxxxxxxx
+Command=Add External iSCSI Name/Modify External CHAP User
++Port=3B, iSCSI Name=iqn.1994-04.jp.co.hitachi:rsd.h8h.t.00001.4b000,
TCP Port=3260, IP Address=192.168.0.169, CHAP User=user1
```

Detailed Information

Item	Description
Command	The command name

Item	Description
Port	The name of the port to which the iSCSI initiator belongs
iSCSI Name	The iSCSI name
TCP Port	The TCP port number
IP Address	The IP address of the external system
CHAP User	The CHAP user name to be set for Secret When the iSCSI name of the external storage system is added, no value is output.

Add HBA iSCSI

Example

```
Out-of-band, , [Config Command] , , , Accept, Seq.=xxxxxxxxxx
+Command=Add HBA iSCSI
++Port=1A, Target ID=0xBB, iSCSI Name=ABCDEF
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port to which iSCSI targets are added, or on which iSCSI targets are changed
Target ID	The iSCSI target ID
iSCSI Name	The iSCSI name of the host bus adapter

Add Host Group

Example

```
Out-of-band, , [Config Command] , , , Accept, Seq.=xxxxxxxxxx
+Command=Add Host Group
++Port=1A, Host Group ID=0XX, Host Group=XXXXXX,
Virtual Storage Machine S/N=23456
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port to which a host group is added When a virtual storage machine is specified, the port name of the virtual storage machine is output.
Host Group ID	The host group ID to be added

Item	Description
Host Group	The name of the host group to be added
Virtual Storage Machine S/N	The serial number of the virtual storage machine No output when a virtual storage machine is not specified

Add Journal(Ldev)

Example

```
Out-of-band,, [Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Add Journal (Ldev)
++JNLG=0x001,Kind=Open
++LDEV(LDKC:CU:LDEV)={0x00:0xAA:0xBB,0x00:0xCC:0xDD,.....,
0x00:0xEE:0xFF},Num. of LDEVs=X
```

Detailed Information

Item	Description
Command	The command name
JNLG	The journal group number
Kind	The kind of the system Open: Open system
LDEV(LDKC:CU:LDEV)	The LDKC number, the CU number, and the LDEV number of a journal volume to be created
Num. of LDEVs	The number of journal volumes to be created

Add Ldev

Example

```
Out-of-band,, [Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Add Ldev
++PG=1-1,LDEV(LDKC:CU:LDEV)=0x00:0xAA:0xBB
```

Detailed Information

Item	Description
Command	The command name
PG	The parity group number of an LDEV to be created If the LDEV to be created is an external volume, "E" is added on the top of the parity group number.
LDEV(LDKC:CU:LDEV)	The LDKC number, the CU number, and the LDEV number of the LDEV to be created

Add Ldev(Dynamic Provisioning)

Example

```
Out-of-band, , [Config Command] , , , Accept, Seq.=xxxxxxxxxx
+Command=Add Ldev (Dynamic Provisioning)
++Pool ID=127, LDEV (LDKC:CU:LDEV)=0x00:0xAA:0xBB
```

Detailed Information

Item	Description
Command	The command name
Pool ID	The pool number of a pool to which a virtual volume of Dynamic Provisioning to be created belongs
LDEV(LDKC:CU:LDEV)	The LDKC number, the CU number, and the LDEV number of an LDEV to be created.

Add Ldev(Snapshot)

Example

```
Out-of-band, , [Config Command] , , , Accept, Seq.=xxxxxxxxxx
+Command=Add Ldev (Snapshot)
++LDEV (LDKC:CU:LDEV)=0x00:0xAA:0xBB
```

Detailed Information

Item	Description
Command	The command name
LDEV(LDKC:CU:LDEV)	The LDKC number, the CU number, and the LDEV number of an LDEV to be created

Add LUN

Example

```
Out-of-band, , [Config Command] , , , Accept, Seq.=xxxxxxxxxx
+Command=Add LUN
++Port=1A, Host Group ID=0x1AA, LUN=2,
LDEV (LDKC:CU:LDEV)=0x00:0xAA:0xBB,
Virtual Storage Machine S/N=23456
++Additional Port (Port, Host Group ID, LUN)
=[{1B, 0x1AA, 2}, {1C, 0x1AA, 2}], Num. of Paths=2
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port to which an LU is added When a virtual storage machine is specified, the port name of the virtual storage machine is output.
Host Group ID	The ID of a host group to which an LU is added
LUN	The LU number to be added
LDEV(LDKC:CU:LDEV)	The LDKC number, the CU number, and the LDEV number of an LDEV to be set as an LU.
Virtual Storage Machine S/N	The serial number of the virtual storage machine No output when a virtual storage machine is not specified
Additional Port(Port,Host Group ID,LUN)	The port name, the host group ID, and the LU number for the LU path to be added If it is not specified by the command option, the index itself is not output.
Num. of Paths	The number of LU paths to be added If it is not specified by the command option, the index itself is not output.

Add Path

Example

```
Out-of-band, , [Config Command] , , , Accept, Seq.=xxxxxxxxxx
+Command=Add Path
++Port=1B,WWN=XXXXXXXXXXXXXXXXXX,Path Group ID=A
```

Detailed Information

Parameter	Description
Command	The command name
Port	The port name of the external storage system
WWN	The WWN of the external storage system
Path Group ID	The path group ID of the external volume

Add RCU

Example

```
Out-of-band, , [Config Command] , , , Accept, Seq.=xxxxxxxxxx
+Command=Add RCU
++S/N=XXXXX,MCU=X,RCU=X,Controller ID=18,MCU Port=1A,RCU Port=1B
```

Detailed Information

Item	Description
Command	The command name
S/N	The serial number of the remote storage system
MCU	The CU number of the local storage system "Free" is output when CU Free is selected
RCU	The CU number of the remote storage system "Free" is output when CU Free is selected
Controller ID	The controller ID of the remote storage system 18: VSP Gx00, 19: HUS VM
MCU Port	The port name of the local storage system
RCU Port	The port name of the remote storage system

Add RCU iSCSI Port

Example

```
Out-of-band, , [Config Command] , , , Accept, Seq.=xxxxxxxxxx
+Command=Add RCU iSCSI Port
++S/N=400001, Controller ID=18, MCU Port=3B, RCU Port=4B, TCP Port=3260,
IP Address=192.168.0.169
```

Detailed Information

Item	Description
Command	The command name
S/N	The serial number of the remote storage system
Controller ID	The controller ID of the remote storage system 18: VSP Gx00, 19: HUS VM
MCU Port	The port name of the local storage system
RCU Port	The port name of the remote storage system
TCP Port	The TCP port number
IP Address	The IP address of the port on the remote storage system

Add RCU Path

Example

```
Out-of-band, , [Config Command] , , , Accept, Seq.=xxxxxxxxxx
+Command=Add RCU Path
++S/N=XXXXX, MCU=X, RCU=X, MCU Port=1A, RCU Port=1B
```

Detailed Information

Item	Description
Command	The command name
S/N	The serial number of the remote storage system
MCU	The CU number of the local storage system "Free" is output when CU Free is selected
RCU	The CU number of the remote storage system "Free" is output when CU Free is selected
MCU Port	The port name of the local storage system to be added
RCU Port	The port name of the remote storage system to be added

Add Resource(Group)

Example

```
Out-of-band, , [Config Command] , , , Accept, Seq.=xxxxxxxxxx
+Command=Add Resource(Group)
++Resource Group=AAAAAAA,Controller ID=18,S/N=23456
```

Detailed Information

Item	Description
Command	The command name
Resource Group	The name of a resource group to be created
Controller ID	The controller ID of the virtual storage machine No output when a virtual storage machine is not specified
S/N	The serial number of the virtual storage machine No output when a virtual storage machine is not specified

Add Resource/Delete Resource

Example: when the resource of the operation target is LDEV

```
Out-of-band, , [Config Command] , , , Accept, Seq.=xxxxxxxxxx
+Command=Add Resource/Delete Resource
++Resource Group ID=AAAAAAA,
LDEV(LDKC:CU:LDEV)=0x00:0xAA:0xBB
```

Detailed Information

Item	Description
Command	The command name

Item	Description
Resource Group ID	The number of a resource group to be registered or deleted
LDEV(LDKC:CU:LDEV)	The LDKC number, the CU number, and the LDEV number of an LDEV to be registered or deleted This item is output when the resource of the operation target is LDEV
PG	The number of a parity group to be registered or deleted This item is output when the resource of the operation target is PG
Port	The name of a port to be registered or deleted This item is output when the resource of the operation target is Port or Host Group
Host Group ID	The number of a host group to be registered or deleted This item is output when the resource of the operation target is Host Group

Add Snap Pool

Example

```
Out-of-band, , [Config Command] , , , Accept, Seq.=xxxxxxxxxx
+Command=Add Snap Pool
++Pool ID=AA, Pool Name=XXXXX
++LDEV (LDKC:CU:LDEV)={0x00:0xAA:0xBB, 0x00:0xCC:0xDD, .....,
0x00:0xEE:0xFF}, Num. of LDEVs=X
```

Detailed Information

Item	Description
Command	The command name
Pool ID	The pool number of a pool for Thin Image to be created
Pool Name	The pool name of a pool for Thin Image to be created No output if the pool name is not set
LDEV(LDKC:CU:LDEV)	The LDKC number, the CU number, and the LDEV number of a pool volume
Num. of LDEVs	The number of pool volumes to be created

Add Snapshot

Example

```
Out-of-band, , [Config Command] , , , Accept, Seq.=xxxxxxxxxx
+Command=Add Snapshot
++Snapshot Group=SSSSSSSS, Pool ID=A,
P-VOL (LDKC:CU:LDEV)=0x00:0xAA:0xBB,
```

S-VOL(LDKC:CU:LDEV)=0x00:0xCC:0xDD,
Virtual Storage Machine S/N=23456

Detailed Information

Item	Description
Command	The command name
Snapshot Group	The name of a snapshot group
Pool ID	The pool ID of a pool to which a pair to be registered belongs
P-VOL(LDKC:CU:LDEV)	The LDKC number, the CU number, and the LDEV number of the primary volume of a pair to be registered When a virtual storage machine is specified, the volume number of the virtual storage machine is output.
S-VOL(LDKC:CU:LDEV)	The LDKC number, the CU number, and the LDEV number of the secondary volume of a pair to be registered No output when a secondary volume is not specified
Virtual Storage Machine S/N	The serial number of the virtual storage machine No output when a virtual storage machine is not specified

Add SPM Group

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx  
+Command=Add SPM Group  
++WWN=XXXXXXXXXXXX,Group Name=AAAAAAAAA
```

Detailed Information

Item	Description
Command	The command name
WWN	The WWN on which a group name is set
Group Name	The name of a group to be set

Add SPM WWN

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx  
+Command=Add SPM WWN  
++WWN=XXXXXXXXXXXX,Nick Name=AAAAAAAAA
```

Detailed Information

Item	Description
Command	The command name
WWN	The WWN on which a nick name is set
Nick Name	The nickname to be set

Add WWN

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Add WWN
++Port=1A,WWN=XXXXXXXXXXXXXXXXXX,Virtual Storage Machine S/N=23456
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port to which a WWN is set When a virtual storage machine is specified, the port name of the virtual storage machine is output.
WWN	The WWN to be set
Virtual Storage Machine S/N	The serial number of the virtual storage machine No output when a virtual storage machine is not specified

Check External Storage Group

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Check External Storage Group
++PG=E1-1
```

Detailed Information

Item	Description
Command	The command name
PG	The parity group number of the external volume

Check External Storage Path

Example

```
Out-of-band,, [Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Check External Storage Path
++Port=1B,WWN=XXXXXXXXXXXXXXXXXX,Path Group ID=A
```

Detailed Information

Item	Description
Command	The command name
Port	The port name of the external storage system
WWN	The WWN of the external storage system
Path Group ID	The path group ID of the external volume

CTQM

Example

```
Out-of-band,, [Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=CTQM
++LDEV(CU:LDEV)=0x12:0x34,MU=5,Virtual Storage Machine S/N=23456
```

Detailed Information

Item	Description
Command	The command name
LDEV(CU:LDEV)	The LDEV number of the primary or secondary volume shared by a pair that is included in the consistency group for executing the command When a virtual storage machine is specified, the volume number of the virtual storage machine is output.
MU	The MU number of the pair to which the LDEV belongs
Virtual Storage Machine S/N	The serial number of the virtual storage machine No output when a virtual storage machine is not specified

Delete CHAP User

Example

```
Out-of-band,, [Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Delete CHAP User
++Port=1A,Target ID=0xBB,Initiator CHAP User=XXXXXX
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port to which an iSCSI target, from which CHAP users are deleted, belongs
Target ID	The iSCSI target ID
Initiator CHAP User	The CHAP user name on the initiator side

Delete Copy Group

Example

```
Out-of-band, , [Config Command] , , , Accept, Seq.=xxxxxxxxxx
+Command=Delete Copy Group
++Copy Group=AAAAAAA
```

Detailed Information

Item	Description
Command	The command name
Copy Group	The name of a copy group to be deleted

Delete Device Group

Example

```
Out-of-band, , [Config Command] , , , Accept, Seq.=xxxxxxxxxx
+Command=Delete Device Group
++Device Group=AAAAAAA
++LDEV(LDKC:CU:LDEV)={0x00:0xAA:0xBB, 0x00:0xCC:0xDD, .....,
0x00:0xEE:0xFF}, Num. of LDEVs=X
```

Detailed Information

Item	Description
Command	The command name
Device Group	The name of a device group to be deleted
LDEV(LDKC:CU:LDEV)	The LDKC number, the CU number, and the LDEV number of an LDEV to be deleted from the device group
Num. of LDEVs	The number of LDEVs to be deleted from the device group

Delete External Group

Example

```
Out-of-band, , [Config Command] , , , Accept, Seq.=xxxxxxxxxx
+Command=Delete External Group
++PG=E1-1
```

Detailed Information

Item	Description
Command	The command name
PG	The parity group number of the external volume "E" is added on the top of parity group number for the external volume to be deleted

Delete External iSCSI Name

Example

```
Out-of-band, , [Config Command] , , , Accept, Seq.=xxxxxxxxxx
+Command=Delete External iSCSI Name
++Port=3B,iSCSI Name=iqn.1994-04.jp.co.hitachi:rsd.h8h.t.00001.4b000,
IP Address=192.168.0.169
```

Detailed Information

Item	Description
Command	The command name
Port	The name of the port to which the iSCSI initiator belongs
iSCSI Name	The iSCSI name
IP Address	The IP address of the external storage system

Delete HBA iSCSI

Example

```
Out-of-band, , [Config Command] , , , Accept, Seq.=xxxxxxxxxx
+Command=Delete HBA iSCSI
++Port=1A,Target ID=0xBB,iSCSI Name=ABCDEF
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port from which iSCSI targets are deleted

Item	Description
Target ID	The iSCSI target ID
iSCSI Name	The iSCSI name of the host bus adapter

Delete Host Group

Example

```
Out-of-band, , [Config Command] , , , Accept, Seq.=xxxxxxxxxx
+Command=Delete Host Group
++Port=1A, Host Group ID=0x00, Host Group Name=AAAAAA,
Virtual Storage Machine S/N=23456
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port from which a host group is deleted When a virtual storage machine is specified, the port name of the virtual storage machine is output.
Host Group ID	The ID of a host group to be deleted No output if it is not specified at the command option
Host Group Name	The name of the host group to be deleted No output when it is specified by the command option
Virtual Storage Machine S/N	The serial number of the virtual storage machine No output when a virtual storage machine is not specified

Delete Journal

Example

```
Out-of-band, , [Config Command] , , , Accept, Seq.=xxxxxxxxxx
+Command=Delete Journal
++JNLG=0x001
```

Detailed Information

Item	Description
Command	The command name
JNLG	The number of a journal group to be deleted

Delete Journal(Ldev)

Example

```
Out-of-band,, [Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Delete Journal(Ldev)
++JNLG=0x001
++LDEV(LDKC:CU:LDEV)={0x00:0xAA:0xBB,0x00:0xCC:0xDD,.....,
0x00:0xEE:0xFF},Num. of LDEVs=X
```

Detailed Information

Item	Description
Command	The command name
JNLG	The journal group number
LDEV(LDKC:CU:LDEV)	The LDKC number, the CU number, and the LDEV number of a journal volume to be deleted
Num. of LDEVs	The number of journal volumes to be deleted

Delete Ldev

Example

```
Out-of-band,, [Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Delete Ldev
++LDEV(LDKC:CU:LDEV)=0x00:0xAA:0xBB
```

Detailed Information

Item	Description
Command	The command name
LDEV(LDKC:CU:LDEV)	The LDKC number, the CU number, and the LDEV number of an LDEV to be deleted

Delete LUN

Example

```
Out-of-band,, [Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Delete LUN
++Port=1A,Host Group ID=0x100,LUN=3,
LDEV(LDKC:CU:LDEV)=0x00:0xAA:0xBB,
Virtual Storage Machine S/N=23456
++Additional Port(Port,Host Group ID,LUN)
=[{1B,0x100,3},{1C,0x100,3}],Num. of Paths=2
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port from which an LU is deleted When a virtual storage machine is specified, the port name of the virtual storage machine is output.
Host Group ID	The ID of a host group from which an LU is deleted
LUN	The LU number to be deleted No value is output, if it is not specified by the command option.
LDEV(LDKC:CU:LDEV)	The LDKC number, the CU number, and the LDEV number of an LDEV to be deleted No value is output, if it is not specified by the command option.
Virtual Storage Machine S/N	The serial number of the virtual storage machine No output when a virtual storage machine is not specified
Additional Port(Port,Host Group ID,LUN)	The port name, the host group ID, and the LU number for the LU path to be deleted If an LDEV is specified but no LUN is specified by the command option, no LU number is output. If it is not specified by the command option, the index itself is not output.
Num. of Paths	The number of LU paths to be deleted If it is not specified by the command option, the index itself is not output.

Delete Path

Example

```
Out-of-band, , [Config Command] , , , Accept, Seq.=xxxxxxxxxx  
+Command=Delete Path  
++Port=1B,WWN=XXXXXXXXXXXXXXXXXX,Path Group ID=A
```

Detailed Information

Item	Description
Command	The command name
Port	The port name of the external storage system
WWN	The WWN of the external storage system
Path Group ID	The path group ID of the external volume

Delete Pool

Example

```
Out-of-band,, [Config Command],,, Accept, Seq.=xxxxxxxxxx
+Command=Delete Pool
++Pool ID=AA
```

Detailed Information

Item	Description
Command	The command name
Pool ID	The pool number of a pool to be deleted

Delete Pool(Ldev)

Example

```
Out-of-band,, [Config Command],,, Accept, Seq.=xxxxxxxxxx
+Command=Delete Pool (Ldev)
++Pool ID=AA
++LDEV (LDLC:CU:LDEV)={0x00:0xAA:0xBB, 0x00:0xCC:0xDD, .....,
0x00:0xEE:0xFF}, Num. of LDEVs=X
```

Detailed Information

Item	Description
Command	The command name
Pool ID	The pool ID of a pool whose capacity is to be decreased
LDEV(LDKC:CU:LDEV)	The LDKC number, the CU number, and the LDEV number of an LDEV to be deleted from the pool
Num. of LDEVs	The number of LDEVs to be deleted from the pool

Delete RCU

Example

```
Out-of-band,, [Config Command],,, Accept, Seq.=xxxxxxxxxx
+Command=Delete RCU
++S/N=XXXXXX, MCU=X, RCU=X
```

Detailed Information

Item	Description
Command	The command name
S/N	The serial number of the remote storage system

Item	Description
MCU	The CU number of the local storage system "Free" is output when CU Free is selected
RCU	The CU number of the remote storage system "Free" is output when CU Free is selected

Delete RCU iSCSI Port

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Delete RCU iSCSI Port
++S/N=400001,Controller ID=18,MCU Port=3B,RCU Port=4B
```

Detailed Information

Item	Description
Command	The command name
S/N	The serial number of the remote storage system
Controller ID	The controller ID of the remote storage system 18: VSP Gx00, 19: HUS VM
MCU Port	The port name of the local storage system
RCU Port	The port name of the remote storage system

Delete RCU Path

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Delete RCU Path
++S/N=XXXXX,MCU=X,RCU=X,MCU Port=CL1-A,RCU Port=CL1-B
```

Detailed Information

Item	Description
Command	The command name
S/N	The serial number of the remote storage system
MCU	The CU number of the local storage system "Free" is output when CU Free is selected
RCU	The CU number of the remote storage system "Free" is output when CU Free is selected
MCU Port	The port name of the local storage system to be deleted

Item	Description
RCU Port	The port name of the remote storage system to be deleted

Delete Resource(Group)

Example

```
Out-of-band,, [Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Delete Resource(Group)
++Resource Group ID=AAAAAAA
```

Detailed Information

Item	Description
Command	The command name
Resource Group ID	The number of the resource group to be deleted

Delete Snapshot

Example

```
Out-of-band,, [Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Delete Snapshot
++P-VOL(LDKC:CU:LDEV)=0x00:0xAA:0xBB,MU=A,
Virtual Storage Machine S/N=23456
```

Detailed Information

Item	Description
Command	The command name
P-VOL(LDKC:CU:LDEV)	The LDKC number, the CU number, and the LDEV number of the primary volume of a pair to be deleted When a virtual storage machine is specified, the volume number of the virtual storage machine is output.
MU	The MU number of the pair to be deleted
Virtual Storage Machine S/N	The serial number of the virtual storage machine No output when a virtual storage machine is not specified

Delete SPM Group

Example

```
Out-of-band,, [Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Delete SPM Group
++Port=1A,Group Name=XXXXXXXXXXXX
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port to which a host group, in which the definition of priority is deleted, belongs
Group Name	The name of a host group in which the definition of priority is deleted

Delete SPM WWN

Example

```
Out-of-band, , [Config Command] , , , Accept, Seq.=xxxxxxxxxx
+Command=Delete SPM WWN
++Port=1A, WWN=XXXXXXXXXXXXXX
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port to which a WWN, on which the definition of priority is deleted, belongs
WWN	The WWN on which the definition of priority is deleted

Delete SPM WWN(Nick Name)

Example

```
Out-of-band, , [Config Command] , , , Accept, Seq.=xxxxxxxxxx
+Command=Delete SPM WWN(Nick Name)
++Port=1A, WWN Name=XXXXXXXXXXXXXX
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port to which a WWN, on which the definition of priority is deleted, belongs
WWN Name	The nick name of a WWN on which the definition of priority is deleted

Delete WWN

Example

```
Out-of-band, , [Config Command] , , , Accept, Seq.=xxxxxxxxxx
+Command=Delete WWN
++Port=1A,WWN=XXXXXXXXXXXXXXXXXX,Virtual Storage Machine S/N=23456
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port from which a WWN is deleted When a virtual storage machine is specified, the port name of the virtual storage machine is output.
WWN	The WWN to be deleted
Virtual Storage Machine S/N	The serial number of the virtual storage machine No output when a virtual storage machine is not specified

Disconnect External Group

Example

```
Out-of-band, , [Config Command] , , , Accept, Seq.=xxxxxxxxxx
+Command=Disconnect External Group
++PG=E1-1
```

Detailed Information

Item	Description
Command	The command name
PG	The parity group number of the external volume

Disconnect Path

Example

```
Out-of-band, , [Config Command] , , , Accept, Seq.=xxxxxxxxxx
+Command=Disconnect Path
++Port=1B,WWN=XXXXXXXXXXXXXXXXXX,Path Group ID=A
```

Detailed Information

Item	Description
Command	The command name

Item	Description
Port	The port name of the external storage system
WWN	The WWN of the external storage system
Path Group ID	The path group ID of the external volume

Extend Ldev

Example

```
Out-of-band, , [Config Command] , , , Accept, Seq.=xxxxxxxxxx
+Command=Extend Ldev
++LDEV (LDKC:CU:LDEV)=0x00:0xAA:0xBB,
Virtual Storage Machine S/N=23456
```

Detailed Information

Item	Description
Command	The command name
LDEV(LDKC:CU:LDEV)	The LDKC number, the CU number, and the LDEV number of the virtual volume for Dynamic Provisioning to be extended When a virtual storage machine is specified, the volume number of the virtual storage machine is output.
Virtual Storage Machine S/N	The serial number of the virtual storage machine No output when a virtual storage machine is not specified

Initialize Ldev(Format)

Example

```
Out-of-band, , [Config Command] , , , Accept, Seq.=xxxxxxxxxx
+Command=Initialize Ldev(Format)
++LDEV (LDKC:CU:LDEV)=0x00:0xAA:0xBB
```

Detailed Information

Item	Description
Command	The command name
LDEV(LDKC:CU:LDEV)	The LDKC number, the CU number, and the LDEV number of an LDEV to be formatted

Initialize Ldev(Shredding)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx  
+Command=Initialize Ldev(Shredding)  
++LDEV(LDKC:CU:LDEV)=0x00:0xAA:0xBB,Data=00-FF-00
```

Detailed Information

Item	Description
Command	The command name
LDEV(LDKC:CU:LDEV)	The LD KC number, the CU number, and the LDEV number of an LDEV whose data is to be deleted
Data	The data pattern used for deleting the data 00-FF-00: Default pattern Random: Random value 0XXXXXXXXX (Hexadecimal number): User defined value

Initialize Ldev(Stop Shredding)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx  
+Command=Initialize Ldev(Stop Shredding)  
++LDEV(LDKC:CU:LDEV)=0x00:0xAA:0xBB
```

Detailed Information

Item	Description
Command	The command name
LDEV(LDKC:CU:LDEV)	The LD KC number, the CU number, and the LDEV number of an LDEV in which deletion of its data is to be stopped

Initialize Parity Group

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx  
+Command=Initialize Parity Group  
++PG=1-5
```

Detailed Information

Item	Description
Command	The command name

Item	Description
PG	The parity group number for a parity group to be initialized

Map Resource(LDEV)

Example

```
Out-of-band, , [Config Command] , , , Accept, Seq.=xxxxxxxxxx
+Command=Map Resource (LDEV)
++LDEV (LDKC:CU:LDEV)=0x00:0xAA:0xBB,
Map LDEV (LDKC:CU:LDEV)=0x00:0xCC:0xDD
```

Detailed Information

Item	Description
Command	The command name
LDEV(LDKC:CU:LDEV)	The LDKC number, the CU number, and the LDEV number of the actual volume
Map LDEV(LDKC:CU:LDEV)	The virtual LDKC number, the virtual CU number, and the virtual LDEV number assigned to the actual volume "Reserve" is output if the reservation attribute of global-active device is set on the LDEV ID of the volume used as a secondary volume of a global-active device pair.

Map Resource(Port)

Example

```
Out-of-band, , [Config Command] , , , Accept, Seq.=xxxxxxxxxx
+Command=Map Resource (Port)
++Port=1A, Map Port=1E
```

Detailed Information

Item	Description
Command	The command name
Port	The port name of the actual port
Map Port	The name of the virtual port assigned to the actual port

Map Snapshot

Example

```
Out-of-band, , [Config Command] , , , Accept, Seq.=xxxxxxxxxx
+Command=Map Snapshot
++P-VOL (LDKC:CU:LDEV)=0x00:0xAA:0xBB,
```

S-VOL(LDKC:CU:LDEV)=0x00:0xCC:0xDD,MU=1,
Virtual Storage Machine S/N=23456

Detailed Information

Item	Description
Command	The command name
P-VOL(LDKC:CU:LDEV)	The LDEV ID of the primary volume When a virtual storage machine is specified, the volume number of the virtual storage machine is output.
S-VOL(LDKC:CU:LDEV)	The LDEV ID of the secondary volume When a virtual storage machine is specified, the volume number of the virtual storage machine is output.
MU	The MU number
Virtual Storage Machine S/N	The serial number of the virtual storage machine No output when a virtual storage machine is not specified

Modify CLPR

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx  
+Command=Modify CLPR  
++PG=1-1,CLPR=0
```

Detailed Information

Item	Description
Command	The command name
PG	The number of a parity group for CLPR to be migrated The parity group number with "E" on the top of the name indicates that the parity group contains an external volume
CLPR	The CLPR ID of the target of migration

Modify Device Group(Name)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx  
+Command=Modify Device Group(Name)  
++Device Group=AAAAAAA,Group Name=ABCDE
```

Detailed Information

Item	Description
Command	The command name
Device Group	The name of a device group to be changed
Group Name	The name of the device group after the change

Modify External Group(ALUA Switch)

Example

```
Out-of-band, , [Config Command] , , , Accept, Seq.=xxxxxxxxxx  
+Command=Modify External Group(ALUA Switch)  
++PG=E1-1,ALUA Switch=Enable
```

Detailed Information

Item	Description
Command	The command name
PG	The parity group number of the external volume
ALUA Switch	Indicates whether the ALUA mode is enabled or disabled Disable or Enable will appear

Modify External Group(Cache Inflow)

Example

```
Out-of-band, , [Config Command] , , , Accept, Seq.=xxxxxxxxxx  
+Command=Modify External Group(Cache Inflow)  
++PG=E1-1,Cache Inflow=Enable
```

Detailed Information

Item	Description
Command	The command name
PG	The parity group number of the external volume
Cache Inflow	The inflow control setting of the cache of the external volume. Enable: Enabled, Disable: Disabled

Modify External Group(Cache Mode)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Modify External Group(Cache Mode)
++PG=E1-1,Cache Mode=Enable
```

Detailed Information

Item	Description
Command	The command name
PG	The parity group number of the external volume
Cache Mode	The cache mode to be set Enable: The cache mode is enabled Disable: The cache mode is disabled Through: Cache through mode Write Sync: Write synchronous mode

Modify External Group(Load Balance Mode)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Modify External Group(Load Balance Mode)
++PG=E1-1,Load Balance Mode=Extend
```

Detailed Information

Item	Description
Command	The command name
PG	The parity group number of the external volume
Load Balance Mode	The load balance mode to be set Normal: Standard round robin Extend: Extended round robin Disable: Disabled

Modify External Group(MP Blade)

Modify External Group(MP Blade) is the command history of CCI. Since CCI is software common to Hitachi storage systems, "MP Blade" instead of "MP Unit" is output as the command name and the item in audit logs.

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Modify External Group(MP Blade)
++PG=E1-1,MP Blade ID=0
```

Detailed Information

Item	Description
Command	The command name
PG	The parity group number of the external volume
MP Blade ID	The MP unit ID to be allocated to a target volume

Modify Host Group(Host Mode)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Modify Host Group(Host Mode)
++Port=1A,Virtual Storage Machine S/N=23456
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port on which the host mode is set When a virtual storage machine is specified, the port name of the virtual storage machine is output.
Virtual Storage Machine S/N	The serial number of the virtual storage machine No output when a virtual storage machine is not specified

Modify HostGroup(Host Mode Option)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Modify HostGroup(Host Mode Option)
++Port=1A,Virtual Storage Machine S/N=23456
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port on which the host mode option is changed When a virtual storage machine is specified, the port name of the virtual storage machine is output.

Item	Description
Virtual Storage Machine S/N	The serial number of the virtual storage machine No output when a virtual storage machine is not specified

Modify Initiator CHAP User

Example

```
Out-of-band, , [Config Command] , , , Accept, Seq.=xxxxxxxxxx
+Command=Modify Initiator CHAP User
++Port=2B, CHAP User=user1
```

Detailed Information

Item	Description
Command	The command name
Port	The name of the port to which the iSCSI initiator belongs
CHAP User	The CHAP user name to be set for Secret

Modify Journal

Example

```
Out-of-band, , [Config Command] , , , Accept, Seq.=xxxxxxxxxx
+Command=Modify Journal
++JNLG=0x001
```

Detailed Information

Item	Description
Command	The command name
JNLG	The number of a journal group to be changed

Modify Journal(MP Blade)

Modify Journal(MP Blade) is the command history of CCI. Since CCI is software common to Hitachi storage systems, "MP Blade" instead of "MP Unit" is output as the command name and the item in audit logs.

Example

```
Out-of-band, , [Config Command] , , , Accept, Seq.=xxxxxxxxxx
+Command=Modify Journal(MP Blade)
++JNLG=0x001, MP Blade ID=A
```

Detailed Information

Item	Description
Command	The command name
JNLG	The number of a journal group to be changed
MP Blade ID	The MP Unit ID to be assigned to a target journal group

Modify Ldev(Blocked)

Example

```
Out-of-band, , [Config Command] , , , Accept, Seq.=xxxxxxxxxx  
+Command=Modify Ldev(Blocked)  
++LDEV(LDKC:CU:LDEV)=0x00:0xAA:0xBB
```

Detailed Information

Item	Description
Command	The command name
LDEV(LDKC:CU:LDEV)	The LDKC number, the CU number, and the LDEV number of an LDEV to be blocked

Modify Ldev(CLPR)

Example

```
Out-of-band, , [Config Command] , , , Accept, Seq.=xxxxxxxxxx  
+Command=Modify Ldev(CLPR)  
++LDEV(LDKC:CU:LDEV)=0x00:0xAA:0xBB, CLPR=0
```

Detailed Information

Item	Description
Command	The command name
LDEV(LDKC:CU:LDEV)	The LDKC number, the CU number, and the LDEV number of an LDEV in which the CLPR is changed
CLPR	The number of the CLPR ID to be changed

Modify Ldev(Command Device)

Example

```
Out-of-band, , [Config Command] , , , Accept, Seq.=xxxxxxxxxx  
+Command=Modify Ldev(Command Device)  
++LDEV(LDKC:CU:LDEV)=0x00:0xFE:0xFF, Command Device=Disable,  
Security=Disable, UserAuth=Disable
```

Detailed Information

Item	Description
Command	The command name
LDEV(LDKC:CU:LDEV)	The LDKC number, the CU number, and the LDEV number of an LDEV to be set
Command Device	Indicates whether the attribute of the command device is enabled or disabled Enable or Disable will appear
Security	Indicates whether the command device security is enabled or disabled Disable or Enable will appear
UserAuth	Indicates whether the user authentication is enabled or disabled Disable or Enable will appear

Modify Ldev(Discard Zero Page)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx  
+Command=Modify Ldev(Discard Zero Page)  
++LDEV(LDKC:CU:LDEV)=0x00:0xAA:0xBB
```

Detailed Information

Item	Description
Command	The command name
LDEV(LDKC:CU:LDEV)	The LDKC number, the CU number, and the LDEV number of an LDEV from which the zero data page is discarded

Modify Ldev(Full Allocation)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx  
+Command=Modify Ldev(Full Allocation)  
++LDEV(LDKC:CU:LDEV)=0x00,0x01,0x02,Full Allocation=Enable
```

Detailed Information

Item	Description
Command	The command name
LDEV(LDKC:CU:LDEV)	The LDKC number, the CU number, and the LDEV number of an LDEV for which Full Allocation is set to be enabled or disabled
Full Allocation	The setting status of Full Allocation

Item	Description
	Enable: Full Allocation is enabled. Disable: Full Allocation is disabled.

Modify Ldev(MP Blade)

Modify Ldev(MP Blade) is the command history of CCI. Since CCI is software common to Hitachi storage systems, "MP Blade" instead of "MP Unit" is output as the command name and the item in audit logs.

Example

```
Out-of-band, , [Config Command] , , , Accept, Seq.=xxxxxxxxxx
+Command=Modify Ldev (MP Blade)
++LDEV (LDKC:CU:LDEV)=0x00:0xAA:0xBB, MP Blade ID=A
```

Detailed Information

Item	Description
Command	The command name
LDEV(LDKC:CU:LDEV)	The LDKC number, the CU number, and the LDEV number of an LDEV to which an MP Unit is assigned
MP Blade ID	The ID of the MP Unit to which the LDEV is assigned

Modify Ldev(Quorum Disable)

Example

```
Out-of-band, , [Config Command] , , , Accept, Seq.=xxxxxxxxxx
+Command=Modify Ldev (Quorum Disable)
++LDEV (LDKC:CU:LDEV)=0x00:0x01:0x02
```

Detailed Information

Item	Description
Command	The command name
LDEV(LDKC:CU:LDEV)	The LDKC number, the CU number, and the LDEV number of the volume whose setting as a quorum disk used by global-active device is released

Modify Ldev(Quorum Enable)

Example

```
Out-of-band, , [Config Command] , , , Accept, Seq.=xxxxxxxxxx
+Command=Modify Ldev (Quorum Enable)
```

```
++LDEV(LDKC:CU:LDEV)=0x00:0x01:0x02,Quorum Disk ID=1,  
Controller ID=18,S/N=12345
```

Detailed Information

Item	Description
Command	The command name
LDEV(LDKC:CU:LDEV)	The LDKC number, the CU number, and the LDEV number of the volume to be set as a quorum disk used by global-active device
Quorum Disk ID	The ID of the quorum disk used by global-active device to be set
Controller ID	The controller ID of the storage system on which the quorum disk used by global-active device is set 18 : VSP Gx00, 19: HUS VM
S/N	The serial number of the storage system on which the quorum disk used by global-active device is set

Modify Ldev(Nick Name)

Example

```
Out-of-band,, [Config Command],,,Accept,Seq.=xxxxxxxxxx  
+Command=Modify Ldev(Nick Name)  
++LDEV(LDKC:CU:LDEV)=0x00:0xAA:0xBB,Nick Name=AAAAAAAAAA
```

Detailed Information

Item	Description
Command	The command name
LDEV(LDKC:CU:LDEV)	The LDKC number, the CU number, and the LDEV number of an LDEV on which a name is designated
Nick Name	The name to be designated on the LDEV

Modify Ldev(Restore)

Example

```
Out-of-band,, [Config Command],,,Accept,Seq.=xxxxxxxxxx  
+Command=Modify Ldev(Restore)  
++LDEV(LDKC:CU:LDEV)=0x00:0xAA:0xBB
```

Detailed Information

Item	Description
Command	The command name

Item	Description
LDEV(LDKC:CU:LDEV)	The LDKC number, the CU number, and the LDEV number of an LDEV to be restored

Modify Ldev(Tier)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Modify Ldev(Tier)
++LDEV(LDKC:CU:LDEV)=0x00:0xAA:0xBB
```

Detailed Information

Item	Description
Command	The command name
LDEV(LDKC:CU:LDEV)	The LDKC number, the CU number, and the LDEV number of an LDEV to which the Tier is relocated

Modify Pool Attribute

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Modify Pool Attribute
++Pool ID=AA,Attribute=DP
```

Detailed Information

Item	Description
Command	The command name
Pool ID	The pool number of a pool whose attribute is to be changed
Attribute	The pool attribute of the pool after the change DP: Dynamic Provisioning DT: Dynamic Tiering

Modify Pool(Data Direct Mapping)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Modify Pool(Data Direct Mapping)
++Pool ID=AA
```

Detailed Information

Item	Description
Command	The command name
Pool ID	The ID of the pool on which Data Direct Mapping is set

Modify Pool(Monitor Mode)

Example

```
Out-of-band,, [Config Command],,,Accept,Seq.=xxxxxxxxxx  
+Command=Modify Pool(Monitor Mode)  
++Pool ID=AA
```

Detailed Information

Item	Description
Command	The command name
Pool ID	The pool number of a pool whose monitor mode is set

Modify Pool(Restore)

Example

```
Out-of-band,, [Config Command],,,Accept,Seq.=xxxxxxxxxx  
+Command=Modify Pool(Restore)  
++Pool ID=AA
```

Detailed Information

Item	Description
Command	The command name
Pool ID	The pool number of a pool to be restored

Modify Pool(Threshold)

Example

```
Out-of-band,, [Config Command],,,Accept,Seq.=xxxxxxxxxx  
+Command=Modify Pool(Threshold)  
++Pool ID=AA
```

Detailed Information

Item	Description
Command	The command name
Pool ID	The pool number of a pool whose threshold is to be changed

Modify Port

Example

```
Out-of-band, , [Config Command] , , , Accept, Seq.=xxxxxxxxxx
+Command=Modify Port
++Port=1A, Speed (Gbps)=8, Fibre. Address=1, Fabric=Enable,
Connection=FC-AL, Switch=Enable, Virtual Storage Machine S/N=23456
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port whose setting is to be changed When a virtual storage machine is specified, the port name of the virtual storage machine is output.
Speed(Gbps)	The host speed of a port
Fibre. Address	The address of the Fibre Channel Port
Fabric	Indicates whether the Fabric switch is enabled or disabled Enable or Disable will appear
Connection	The topology of the Fabric switch FC-AL: FC-AL (Fibre Channel-Arbitrated Loop) is selected P-to-P: Point-to-Point is selected
Switch	Indicates whether the LUN security setting is enabled or disabled Enable or Disable will appear
Virtual Storage Machine S/N	The serial number of the virtual storage machine No output when a virtual storage machine is not specified

Modify Port(T10PI)

Example

```
Out-of-band, , [Config Command] , , , Accept, Seq.=xxxxxxxxxx
+Command=Modify Port (T10PI)
++Port=1A
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port on which the T10 PI mode setting is changed When a virtual storage machine is specified, the port name of the virtual storage machine is output.

Modify RCU

Example

```
Out-of-band, , [Config Command] , , , Accept, Seq.=xxxxxxxxxx  
+Command=Modify RCU  
++S/N=XXXXXX, MCU=X, RCU=X
```

Detailed Information

Item	Description
Command	The command name
S/N	The serial number of the remote storage system
MCU	The CU number of the local storage system "Free" is output when CU Free is selected
RCU	The CU number of the remote storage system "Free" is output when CU Free is selected

Modify Snapshot(Restore)

Example

```
Out-of-band, , [Config Command] , , , Accept, Seq.=xxxxxxxxxx  
+Command=Modify Snapshot(Restore)  
++P-VOL(LDKC:CU:LDEV)=0x00:0xAA:0xBB, MU=A,  
Virtual Storage Machine S/N=23456
```

Detailed Information

Item	Description
Command	The command name
P-VOL(LDKC:CU:LDEV)	The LDKC number, the CU number, and the LDEV number of the primary volume shared by a pair to be restored When a virtual storage machine is specified, the volume number of the virtual storage machine is output.
MU	The MU number of the pair to be restored

Item	Description
Virtual Storage Machine S/N	The serial number of the virtual storage machine No output when a virtual storage machine is not specified

Modify Snapshot(Resync)

Example

```
Out-of-band, , [Config Command] , , , Accept, Seq.=xxxxxxxxxx
+Command=Modify Snapshot(Resync)
++P-VOL(LDKC:CU:LDEV)=0x00:0xAA:0xBB, MU=A,
Virtual Storage Machine S/N=23456
```

Detailed Information

Item	Description
Command	The command name
P-VOL(LDKC:CU:LDEV)	The LDKC number, the CU number, and the LDEV number of the primary volume shared by a pair to be resynchronized When a virtual storage machine is specified, the volume number of the virtual storage machine is output.
MU	The MU number of the pair to be resynchronized
Virtual Storage Machine S/N	The serial number of the virtual storage machine No output when a virtual storage machine is not specified

Modify Snapshot(Split)

Example

```
Out-of-band, , [Config Command] , , , Accept, Seq.=xxxxxxxxxx
+Command=Modify Snapshot(Split)
++P-VOL(LDKC:CU:LDEV)=0x00:0xAA:0xBB, MU=A,
Virtual Storage Machine S/N=23456
```

Detailed Information

Item	Description
Command	The command name
P-VOL(LDKC:CU:LDEV)	The LDKC number, the CU number, and the LDEV number of the primary volume shared by a pair to be split When a virtual storage machine is specified, the volume number of the virtual storage machine is output.
MU	The MU number of the pair to be split

Item	Description
Virtual Storage Machine S/N	The serial number of the virtual storage machine No output when a virtual storage machine is not specified

Modify SPM Group

Example

```
Out-of-band, , [Config Command] , , , Accept, Seq.=xxxxxxxxxx
+Command=Modify SPM Group
++Port=1A, Group Name=XXXXXXXXXXXXX, Priority=Enable
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port to which a host group, in which the definition of priority is set, belongs
Group Name	The name of the host group to which the definition of priority is set
Priority	Indicates the setting of the definition of priority Enable: The priority is given, Disable: The priority is not given

Modify SPM WWN

Example

```
Out-of-band, , [Config Command] , , , Accept, Seq.=xxxxxxxxxx
+Command=Modify SPM WWN
++Port=1A, WWN=XXXXXXXXXXXXX, Priority=Enable
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port to which a WWN, on which the definition of priority is set, belongs
WWN	The WWN on which the definition of priority is set
Priority	Indicates the setting of the definition of priority Enable: The priority is given, Disable: The priority is not given

Modify SPM WWN(NickName)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Modify SPM WWN(NickName)
++Port=1A,WWN Nick Name=XXXXXXXXXXXX,Priority=Enable
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port to which, on which the definition of priority is set, belongs
WWN Nick Name	The nickname of the WWN on which the definition of priority is set
Priority	Indicates the setting of the definition of priority Enable: The priority is given, Disable: The priority is not given

Monitor Pool

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Monitor Pool
++Pool ID=AA
```

Detailed Information

Item	Description
Command	The command name
Pool ID	The pool number of a pool to be monitored

Paircreate

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Paircreate
++Copy Kind=Remote
++P-VOL(Port-LUN-LDEV)=1A-2047-0x1A,
S-VOL(Port-LUN-LDEV)=1B-3-0x3B,MCU S/N=12345,RCU S/N=22364,
Virtual Storage Machine S/N=23456
```

Detailed Information

Item	Description
Command	The command name
Copy Kind	Indicates whether the copy kind is Local copy or Remote copy Local: Local copy, Remote: Remote copy
P-VOL(Port-LUN-LDEV)*	The port number, the LU number, and the LDEV number of the primary volume The port number and the LU number show the expanded LU of Command Control Interface
S-VOL(Port-LUN-LDEV)*	The port number, the LU number, and the LDEV number of the secondary volume The port number and the LU number show the expanded LU of Command Control Interface
MCU S/N*	The serial number of the local storage system
RCU S/N*	The serial number of the remote storage system
Virtual Storage Machine S/N	The serial number of the virtual storage machine No output when a virtual storage machine is not specified
*When a virtual storage machine is specified, the value of the virtual storage machine is output.	

Pairresync

Example

```
Out-of-band, , [Config Command] , , , Accept, Seq.=xxxxxxxxxx
+Command=Pairresync
++Copy Kind=Local
++P-VOL(Port-LUN-LDEV)=1A-2047-0x1A,
S-VOL(Port-LUN-LDEV)=1B-3-0x3B,
MCU S/N=12345, RCU S/N=12345, Resync Type=Reverse,
Virtual Storage Machine S/N=23456
```

Detailed Information

Item	Description
Command	The command name
Copy Kind	Indicates whether the copy kind is Local copy or Remote copy Local: Local copy, Remote: Remote copy
P-VOL(Port-LUN-LDEV)*	The port number, the LU number, and the LDEV number of the primary volume The port number and the LU number show the expanded LU of Command Control Interface No output when the pair operation is performed by Command Control Interface from the remote storage system

Item	Description
S-VOL(Port-LUN-LDEV)*	The port number, the LU number, and the LDEV number of the secondary volume The port number and the LU number show the expanded LU of Command Control Interface
MCU S/N*	The serial number of the local storage system No output when the pair operation is performed by Command Control Interface from the remote storage system
RCU S/N*	The serial number of the remote storage system
Resync Type	Indicates the direction of resynchronizing a pair Normal: Normal direction (Primary volume to secondary volume) Reverse: Reverse direction (Secondary volume to primary volume.) This item is output only when the <i>Copy Kind</i> is <i>Local</i> .
Virtual Storage Machine S/N	The serial number of the virtual storage machine No output when a virtual storage machine is not specified
*When a virtual storage machine is specified, the value of the virtual storage machine is output.	

Pairsplit

Example

```
Out-of-band, , [Config Command] , , Accept, Seq.=xxxxxxxxxx
+Command=Pairsplit
++Copy Kind=Remote
++P-VOL(Port-LUN-LDEV)=1A-2047-0x1A,
S-VOL(Port-LUN-LDEV)=1B-3-0x3B,
MCU S/N=12345,RCU S/N=22364,Range=LU,
Virtual Storage Machine S/N=23456
```

Detailed Information

Item	Description
Command	The command name
Copy Kind	Indicates whether the copy kind is Local copy or Remote copy Local: Local copy, Remote: Remote copy
P-VOL(Port-LUN-LDEV)*	The port number, the LU number, and the LDEV number of the primary volume The port number and the LU number show the expanded LU of Command Control Interface No output when the pair operation is performed by Command Control Interface from the remote storage system
S-VOL(Port-LUN-LDEV)*	The port number, the LU number, and the LDEV number of the secondary volume

Item	Description
	The port number and the LU number show the expanded LU of Command Control Interface
MCU S/N*	The serial number of the local storage system No output when the pair operation is performed by Command Control Interface from the remote storage system
RCU S/N*	The serial number of the remote storage system
Range	The range of pair split Group: Split by consistency group unit LU: Split by LU unit
Virtual Storage Machine S/N	The serial number of the virtual storage machine No output when a virtual storage machine is not specified
*When a virtual storage machine is specified, the value of the virtual storage machine is output.	

Pairsplit-S

Example

```
Out-of-band, , [Config Command] , , , Accept, Seq.=xxxxxxxxxx
+Command=Pairsplit-S
++Copy Kind=Remote
++P-VOL (Port-LUN-LDEV)=1A-2047-0x1A,
S-VOL (Port-LUN-LDEV)=1B-3-0x3B,
MCU S/N=12345, RCU S/N=22364,
Virtual Storage Machine S/N=23456
```

Detailed Information

Item	Description
Command	The command name
Copy Kind	Indicates whether the copy kind is Local copy or Remote copy Local: Local copy, Remote: Remote copy
P-VOL(Port-LUN-LDEV)*	The port number, the LU number, and the LDEV number of the primary volume The port number and the LU number show the expanded LU of Command Control Interface No output when the pair operation is performed by Command Control Interface from the remote storage system
S-VOL(Port-LUN-LDEV)*	The port number, the LU number, and the LDEV number of the secondary volume The port number and the LU number show the expanded LU of Command Control Interface
MCU S/N*	The serial number of the local storage system

Item	Description
	No output when the pair operation is performed by Command Control Interface from the remote storage system
RCU S/N*	The serial number of the remote storage system
Virtual Storage Machine S/N	The serial number of the virtual storage machine No output when a virtual storage machine is not specified
*When a virtual storage machine is specified, the value of the virtual storage machine is output.	

Reallocate Pool(Start)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Reallocate Pool(Start)
++Pool ID=AA
```

Detailed Information

Item	Description
Command	The command name
Pool ID	The pool number of a pool in which the manual tier relocation is performed

Reallocate Pool(Stop)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Reallocate Pool(Stop)
++Pool ID=AA
```

Detailed Information

Item	Description
Command	The command name
Pool ID	The pool number of a pool in which the manual tier relocation is interrupted

Rename Pool

Example

```
Out-of-band,, [Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Rename Pool
++Pool ID=AA,Pool Name=XXXXXXX
```

Detailed Information

Item	Description
Command	The command name
Pool ID	The pool number of a pool to be renamed
Pool Name	The pool name after the change

Replace Snapshot

Example

```
Out-of-band,, [Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Replace Snapshot
++S-VOL(LDKC:CU:LDEV)=0x00:0xCC:0xDD,Snapshot Group=ABCDEF,MU=1,
Virtual Storage Machine S/N=23456
```

Detailed Information

Item	Description
Command	The command name
S-VOL(LDKC:CU:LDEV)	The LDEV ID of the secondary volume When a virtual storage machine is specified, the volume number of the virtual storage machine is output.
Snapshot Group	The Snapshot Group name. The value is output only when Snapshot Group is specified.
MU	The MU number. The value is output only when MU number is specified.
Virtual Storage Machine S/N	The serial number of the virtual storage machine No output when a virtual storage machine is not specified

Reset CHAP User

Example

```
Out-of-band,, [Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Reset CHAP User
++Port=1A,Target ID=0xBB,Initiator CHAP User=XXXXXX
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port to which iSCSI targets belong
Target ID	The iSCSI target ID
Initiator CHAP User	The name of a CHAP user whose secret is deleted

Reset Command Status

Example

```
Out-of-band, , [Config Command] , , , Accept, Seq.=xxxxxxxxxx
+Command=Reset Command Status
```

Detailed Information

Item	Description
Command	The command name

Reset Ldev Priority

Example

```
Out-of-band, , [Config Command] , , , Accept, Seq.=xxxxxxxxxx
+Command=Reset Ldev Priority
++LDEV(LDKC:CU:LDEV)=0x00:0xAA:0xBB
++WWN={AAAAAAAA,BBBBBBBB,.....,DDDDDDDD}, Num. of WWNs=X
```

Detailed Information

Item	Description
Command	The command name
LDEV(LDKC:CU:LDEV)	The LDKC number, the CU number, and the LDEV number of an LDEV from which the priority information is deleted.
WWN	The WWN to be deleted
Num. of WWNs	The number of WWNs to be deleted

Reset WWN

Example

```
Out-of-band, , [Config Command] , , , Accept, Seq.=xxxxxxxxxx
+Command=Reset WWN
```

```
++Port=1A,Host Group ID=0xXX,WWN=XXXXXXXXXXXXXXXXXX,  
Virtual Storage Machine S/N=23456
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port to which a WWN, on which the nickname is deleted, belongs When a virtual storage machine is specified, the port name of the virtual storage machine is output.
Host Group ID	The ID of a host group to which a WWN, on which the nickname is deleted, belongs
WWN	The WWN on which the nickname is deleted
Virtual Storage Machine S/N	The serial number of the virtual storage machine No output when a virtual storage machine is not specified

Set CHAP User

Example

```
Out-of-band,, [Config Command],,,Accept,Seq.=xxxxxxxxxx  
+Command=Set CHAP User  
++Port=1A,Target ID=0xBB,Initiator CHAP User=XXXXXX
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port to which iSCSI targets belong
Target ID	The iSCSI target ID
Initiator CHAP User	The name of a CHAP user whose secret is set

Set HBA iSCSI

Example

```
Out-of-band,, [Config Command],,,Accept,Seq.=xxxxxxxxxx  
+Command=Set HBA iSCSI  
++Port=1A,Target ID=0xBB,iSCSI Name=ABCDEF,iSCSI Nickname=FFFFFF
```

Detailed Information

Item	Description
Command	The command name

Item	Description
Port	The name of a port to which iSCSI targets belong
Target ID	The iSCSI target ID
iSCSI Name	The iSCSI name of a host bus adapter for which a nickname is set
iSCSI Nickname	The specified nickname

Set Ldev Priority

Example

```
Out-of-band, , [Config Command] , , , Accept, Seq.=xxxxxxxxxx
+Command=Set Ldev Priority
++LDEV(LDKC:CU:LDEV)=0x00:0xAA:0xBB
++{WWN,Priority}=[{123456789ABCDEF0,Disable}], Num. of WWNs=1
```

Detailed Information

Item	Description
Command	The command name
LDEV(LDKC:CU:LDEV)	The LDKC number, the CU number, and the LDEV number of an LDEV to which the definition of priority is set
WWN	The WWN to be set
Priority	Indicates the setting of the definition of priority Enable: The priority is given, Disable: The priority is not given
Num. of WWNs	The number of WWNs to be set

Set WWN

Example

```
Out-of-band, , [Config Command] , , , Accept, Seq.=xxxxxxxxxx
+Command=Set WWN
++Port=1A, Host Group ID=0x00, WWN=XXXXXXXXXXXXXXXXXX,
Nick Name=AAAAAA, Virtual Storage Machine S/N=23456
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port to which a WWN, on which the nickname is set, belongs When a virtual storage machine is specified, the port name of the virtual storage machine is output.

Item	Description
Host Group ID	The ID of a host group to which a WWN, in which the nickname is set, belongs
WWN	The WWN on which the nickname is set
Nick Name	The nickname to be set
Virtual Storage Machine S/N	The serial number of the virtual storage machine No output when a virtual storage machine is not specified

Stop Monitor Pool

Example

```
Out-of-band, , [Config Command] , , , Accept, Seq.=xxxxxxxxxx
+Command=Stop Monitor Pool
++Pool ID=AA
```

Detailed Information

Item	Description
Command	The command name
Pool ID	The pool number of a pool, the monitoring of which is stopped

Unmap Resource(LDEV)

Example

```
Out-of-band, , [Config Command] , , , Accept, Seq.=xxxxxxxxxx
+Command=Unmap Resource (LDEV)
++LDEV (LDKC:CU:LDEV)=0x00:0xAA:0xBB,
Map LDEV (LDKC:CU:LDEV)=0x00:0xCC:0xDD
```

Detailed Information

Item	Description
Command	The command name
LDEV(LDKC:CU:LDEV)	The LDKC number, the CU number, and the LDEV number of the actual volume
Map LDEV(LDKC:CU:LDEV)	The virtual LDKC number, the virtual CU number, and the virtual LDEV number, whose assignments to the actual volume are released "Reserve" is output if the reservation attribute of global-active device set on the LDEV ID of the volume that is used as a secondary volume of a global-active device pair is released.

Unmap Resource(Port)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Unmap Resource(Port)
++Port=1A,Map Port=1E
```

Detailed Information

Item	Description
Command	The command name
Port	The port name of the actual port
Map Port	The name of the virtual port whose assignment to the actual port is released

Unmap Snapshot

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Unmap Snapshot
++P-VOL(LDKC:CU:LDEV)=0x00:0xAA:0xBB,
S-VOL(LDKC:CU:LDEV)=0x00:0xCC:0xDD,MU=1,
Virtual Storage Machine S/N=23456
```

Detailed Information

Item	Description
Command	The command name
P-VOL(LDKC:CU:LDEV)	The LDEV ID of the primary volume. The value is output only when the primary volume is specified. When a virtual storage machine is specified, the volume number of the virtual storage machine is output.
S-VOL(LDKC:CU:LDEV)	The LDEV ID of the secondary volume. The value is output only when the secondary volume is specified. When a virtual storage machine is specified, the volume number of the virtual storage machine is output.
MU	The MU number. The value is output only when the primary volume is specified.
Virtual Storage Machine S/N	The serial number of the virtual storage machine No output when a virtual storage machine is not specified

FC-SP

```
In-band OPEN,,[FC-SP],,,Normal end,Seq.=xxxxxxxxxx
```

- In-band OPEN
The host is an open-system host.

User Auth

```
In-band OPEN,195,[User Auth],Login,,Normal end,  
Seq.=xxxxxxxxxx  
In-band OPEN,195,[User Auth],Logout,,Normal end,  
Seq.=xxxxxxxxxx
```

- In-band OPEN
The host is an open-system host.

VSP Gx00 models, VSP Fx00 models audit log examples of PIN Deletion Tool operation

This topic provides examples and descriptions of the audit logs produced by the PIN Deletion Tool.

□ [\[PINDeletion\] Delete](#)

[PINDeletion] Delete

This log information indicates the completion of the PIN deletion operation, and does not indicate the completion of the PIN deletion processing.

Example

```
MPC,, [PINDeletion],Delete,,Normal end,  
Seq.=xxxxxxxxxx  
+LDEV=[0x00:0x00:0x00,0x00:0x00:0x01],Num. of LDEVs=2
```

Detailed Information

Item	Description
LDKC:CU:LDEV	The LDKC, CU, and LDEV numbers
Num. of LDEVs	The number of set LDEVs

VSP Gx00 models, VSP Fx00 models audit log user operations

Device Manager - Storage Navigator operations and corresponding operation names output to audit logs are described for each menu. The same log is output when a user perform an operation using each Device Manager - Storage Navigator menu, clicking a button on the main window, or using **General Tasks**.

- ☐ [Logging in or out](#)
- ☐ [Using Maintenance menu](#)
- ☐ [Using Actions menu](#)
- ☐ [Using Reports menu](#)
- ☐ [Using Settings menu](#)
- ☐ [Using Maintenance Utility](#)
- ☐ [Using Maintenance Utility window](#)
- ☐ [Operation Lock](#)
- ☐ [When executing single sign-on from Hitachi Command Suite](#)

Logging in or out

GUI operation	Audit Log Output		Notes
	Function Name	Operation Name	
Login	BASE	Login	--
Logout (Exit)		Logout	--
Session disconnected			Logged out by a server when a session is disconnected.

Using Maintenance menu

GUI operation		Audit Log Output	
Submenu	Description	Function Name	Operation Name
Maintenance Components (General)	Operations on Maintenance PC	For details, see Appendix B, Audit log Maintenance PC operations on page B-1 .	
A menu displayed only on Maintenance PC.			

Using Actions menu

- [Using Component submenu on page A-3](#)
- [Using Logical Device submenu on page A-3](#)
- [Using Port/Host Group submenu on page A-5](#)
- [Using Pool submenu on page A-8](#)
- [Using Parity Group submenu on page A-9](#)
- [Using External Storage submenu on page A-9](#)
- [Using Local Replication submenu on page A-10](#)
- [Using Remote Replication submenu on page A-11](#)
- [Using Journal submenu on page A-13](#)
- [Using Remote Connection submenu on page A-14](#)
- [Using Other function submenu on page A-15](#)

Using Component submenu

GUI operation		Audit Log Output	
Submenu	Description	Function Name	Operation Name
Edit MP Units	Editing MP unit settings	PROV	Edit MP Units

Using Logical Device submenu

GUI operation		Audit Log Output	
Submenu	Description	Function Name	Operation Name
Create LDEVs	Creating LDEVs	PROV	Create LDEVs ¹ CreateLdev ² CreateAlus Edit Full Allocation Edit V-VOL Option Format LDEVs Format LDEVs(Q) LDEV Name
Delete LDEVs	Deleting LDEVs	PROV	Delete LDEVs ¹ DeleteLdev ² DeleteAlus
Edit LDEVs	Editing LDEV settings	PROV	Edit Full Allocation Edit LDEVs(tier) Edit V-VOL Option LDEV Name
Format LDEVs	Formatting LDEVs	PROV	Format LDEVs
	Quick formatting LDEVs	PROV	Format LDEVs(Q)
Interrupt Format Task ³	Stopping formatting LDEVs	PROV	StopFormat
Block LDEVs	Blocking LDEVs	PROV	Block LDEVs
Restore LDEVs	Restoring LDEVs	PROV	Restore LDEVs
Force Restore LDEVs ³	Forcible restoration of LDEVs	PROV	LdevForceRestore
Shred LDEVs	Shredding LDEVs	VS	Shred LDEVs End Shredding
Interrupt Shredding Task	Stopping shredding LDEVs	VS	Abort Shredding ⁴

GUI operation			Audit Log Output	
Submenu		Description	Function Name	Operation Name
Assign MP Unit		Assigning MP units	PROV	Assign MP Unit
Migration	Migrate Volumes	Directing volume migration	VM	Migrate Volumes
	View Migration Plans	Referring to migration plans	VM	Del Migration Plans
Add LUN Paths		Mapping LUN paths	PROV	Add LUN Paths
Delete LUN Paths		Removing LUN paths from LDEVs	PROV	Delete LUN Paths
Edit UUIDs		Changing UUIDs	PROV	Edit/Delete UUIDs
Delete UUIDs		Deleting UUIDs		
Expand V-VOLs		Increasing virtual volume capacity	PROV	Expand V-VOLs
Reclaim Zero Pages		Releasing pages in virtual volumes	PROV	Reclaim Zero Pages
Stop Reclaiming Zero Pages		Stopping releasing pages in virtual volumes	PROV	Stop Reclm ZeroPages
Edit Command Devices		Editing Command Devices	PROV	Edit Cmd Dev(Auth) Edit Cmd Dev(DevGrp) Edit Cmd Dev(Sec) Edit Command Devices
Unbind SLUs		Unbinding an LDEV with the SLU attribute from the LDEV with the ALU attribute	PROV	ExecBindingOperation
Verify LDEVs ³		Verifying LDEVs	PROV	StartVerify
Interrupt Verification Task ³		Stopping verifying LDEVs	PROV	StopVerify
Notes: 1. The audit log of this operation is output when volumes of Thin Image or DP-VOLs are created or deleted. 2. The audit log of this operation is output when internal or external volumes are created or deleted. 3. A menu displayed only on Maintenance PC. 4. The audit log of this operation is output not only by performing an operation on the Interrupt Shredding Task submenu, but by stopping the shredding LDEVs task on the Task window.				

Using Port/Host Group submenu

Table A-1 Port/Host Group > Fibre

GUI operation		Audit Log Output	
Submenu	Description	Function Name	Operation Name
Create Host Groups	Creating host groups	PROV	Add Hosts Create Host Groups Edit Host Grps(Mode)
Delete Host Groups	Deleting host groups	PROV	Delete Host Groups
Edit Host Groups	Editing host group settings	PROV	Edit Host Grps(Mode) Edit Host Grps(Name)
Add Hosts	Adding hosts to selected host groups	PROV	Add Hosts
Add to Host Groups	Adding selected host to host groups		
Remove Hosts	Removing hosts from host groups	PROV	Remove Hosts
Delete Login WWNs	Deleting unnecessary WWNs	PROV	Delete Login WWNs
Edit Host	Editing host settings	PROV	Edit Host
Create Alternative LUN Paths	Creating alternative LUN paths	PROV	Add Hosts Add LUN Paths Create Host Groups Edit Host Grps(Mode)
Copy LUN Paths	Setting the same path as a selected LUN	PROV	Add LUN Paths
View Host-Reserved LUNs > Release Host-Reserved LUNs ¹	Releasing Host-Reserved LUNs	PROV	Release HostReserved
Edit Ports	Editing port settings	PROV	Edit Ports(Address) Edit Ports(Security) Edit Ports(Speed) Edit Ports(Topology)
Edit T10 PI Mode	Editing T10 PI mode settings on ports	PROV	EditT10piMode
Authentication	Setting port information Setting default (User name/Secret)	PROV	Set FCSP Port Info ^{2, 3}
	Registering or deleting	PROV	Set FCSP Target ^{2, 3}

GUI operation		Audit Log Output	
Submenu	Description	Function Name	Operation Name
	authentication information Authentication (Host Group): Disable -> Enable or Enable -> Disable		
	Creating, changing, or deleting host authentication information	PROV	Set FCSP Host ^{2, 3}
	Registering authentication Information Authentication Mode: Bi-directional -> Unidirectional or Unidirectional -> Bi-directional Authentication (Port): Enable -> Disable or Disable -> Enable	PROV	Set FCSP Port Switch ^{2, 3}
Notes: 1. To release host reserved LUNs, open the Release Host-Reserved LUNs window from the Host-Reserved LUNs window. 2. When multiple settings of the same type are applied at the same time, log information is output as one entry. 3. <i>Error</i>, not <i>Warning</i>, is output as log information if one of multiple settings is applied abnormally.			

Table A-2 Port/Host Group > iSCSI

GUI operation		Audit Log Output	
Submenu	Description	Function Name	Operation Name
Create iSCSI Targets	Creating iSCSI targets	PROV	CreateiScsiTarget
	Editing CHAP users assigned to iSCSI targets	PROV	EditTargetChapUser
Delete iSCSI Targets	Deleting iSCSI targets	PROV	DeleteiScsiTarget
Edit iSCSI Targets	Editing iSCSI target settings	PROV	EditiScsiTarget

GUI operation			Audit Log Output	
Submenu		Description	Function Name	Operation Name
		Editing CHAP users assigned to iSCSI targets	PROV	EditTargetChapUser
Add Hosts		Adding hosts to selected iSCSI targets	PROV	CreateiScsiName
Remove Hosts		Removing hosts from selected iSCSI targets	PROV	DeleteiScsiName
Delete Login iSCSI Names		Deleting unnecessary iSCSI names	PROV	DeleteLoginiScsiName
Edit Host		Editing host settings	PROV	EditiScsiName EditiScsiNickName
Create Alternative LUN Paths		Creating an alternative LUN path	PROV	Add Hosts Add LUN Paths Create Host Groups Edit Host Grps(Mode)
Copy LUN Paths		Copying the selected LUN path	PROV	Add LUN Paths
View Host-Reserved LUNs > Release Host-Reserved LUNs*		Releasing Host-Reserved LUNs	PROV	Release HostReserved
Edit Ports		Editing port settings	PROV	Edit Ports(Security) Edit Ports(Speed) EditPortInfo EditiSNS
		Editing the setting information of users with CHAP authentication on ports	PROV	EditiScsiInitiatorUser
Authentication	Add CHAP Users	Adding CHAP users to selected iSCSI targets	PROV	CreateRemoteChapUser
	Remove CHAP Users	Removing CHAP users from selected iSCSI targets	PROV	DeleteRemoteChapUser
	Edit CHAP User	Editing CHAP user settings	PROV	EditRemoteChapUser

GUI operation			Audit Log Output	
Submenu		Description	Function Name	Operation Name
	Remove Target CHAP Users	Removing CHAP users assigned to iSCSI targets	PROV	DeleteTargetChapUser
	Remove Port CHAP Users	Deleting the setting information of users with CHAP authentication on ports	PROV	DeleteiScsiInitiatorUser
* Release Host-Reserved LUNs window opened from Host-Reserved LUNs window.				

Using Pool submenu

GUI operation		Audit Log Output	
Submenu	Description	Function Name	Operation Name
Create Pools	Creating pools	PROV	Create/Expand Pools Edit/Delete Pools Pool Name
Delete Pools	Deleting pools	PROV	Edit/Delete Pools Pool Name
Expand Pool	Increasing pool capacity	PROV	Create/Expand Pools
Shrink Pool	Decreasing pool capacity	PROV	Shrink Pool
Stop Shrinking Pools	Stopping decreasing pool capacity	PROV	Stop Shrinking Pool
Edit Pools	Editing pool settings	PROV	Edit/Delete Pools Pool Name
Edit External LDEV Tier Rank	Editing external LDEV tier ranks of pool volumes that are assigned to pools	PROV	Edit LDEV Tier Rank
Monitor Pools	Starting the performance monitoring of pools	PROV	Monitor Pools
Stop Monitoring Pools	Stopping the performance monitoring of pools	PROV	Stop Monitoring
Start Tier Relocation	Starting the tier relocation of pools	PROV	Relocate Pool

GUI operation		Audit Log Output	
Submenu	Description	Function Name	Operation Name
Stop Tier Relocation	Stopping the tier relocation of pools	PROV	Stop Relocating
Restore Pools	Restoring pools	PROV	Restore Pools
Initialize Pools*	Initializing pools	PROV	Initialize Pools
Edit Tiering Policies	Editing Tiering Policies	PROV	Edit Tiering Policy
* A menu displayed only on Maintenance PC.			

Using Parity Group submenu

GUI operation		Audit Log Output	
Submenu	Description	Function Name	Operation Name
Create Parity Groups	Creating parity groups	PROV	CreateParityGroups
Delete Parity Groups	Deleting parity groups	PROV	DeleteParityGroups
Format Parity Groups	Formatting parity groups	PROV	StartParityGroupsFormat
Interrupt Format Task*	Stopping formatting parity groups	PROV	StopFormat
Edit Encryption	Enabling/disabling data encryption	ENC	Edit Encryption
Edit Copy-back Mode	Enabling or disabling copy-back modes	PROV	UpdateCopybackMode
Assign Spare Drives	Assigning as a spare drive or releasing the spare drive setting	PROV	UpdateSpareDrives
* A menu displayed only on Maintenance PC.			

Using External Storage submenu

GUI operation		Audit Log Output	
Submenu	Description	Function Name	Operation Name
Add External Volumes	Mapping external volumes	UVM	Add External Volumes

GUI operation		Audit Log Output	
Submenu	Description	Function Name	Operation Name
Delete External Volumes	Releasing external volume mapping	UVM	Delete ES VOLs
Edit External Volumes	Editing external volume settings	UVM	Edit ES VOLs
Disconnect External Volumes	Disconnecting external volumes	UVM	Disconnect ES VOLs
Reconnect External Volumes	Reconnecting external volumes	UVM	Reconnect ES VOLs
Assign MP Unit	Assigning MP units for external volumes	UVM	Assign MP Unit
Disconnect External Paths	Disconnecting external paths	UVM	Disconnect ES Paths
Reconnect External Paths	Reconnecting external paths	UVM	Reconnect ES Paths
Edit External WWNs	Editing external WWN parameters	UVM	Edit External WWNs / iSCSI Targets
Edit External iSCSI Targets	Editing external iSCSI target parameters		
Edit External Path Configuration	Adding paths to external path groups Deleting paths from external path groups Changing priority among external paths	UVM	Edit ES Path Config
Disconnect External Storage Systems	Disconnecting external storage systems	UVM	Disconnect ES VOLs
Reconnect External Storage Systems	Reconnecting external storage systems	UVM	Reconnect ES VOLs
Add iSCSI Paths	Adding iSCSI paths	PROV	CreateiScsiPath
Delete iSCSI Paths	Deleting iSCSI paths	PROV	DeleteiScsiPath
Edit iSCSI Targets	Editing iSCSI targets	PROV	EditRemoteTargetUser

Using Local Replication submenu

GUI operation		Audit Log Output	
Submenu	Description	Function Name	Operation Name
Create SI Pairs	Creating ShadowImage pairs	Local Replication	Create Pairs

GUI operation		Audit Log Output	
Submenu	Description	Function Name	Operation Name
Create TI Pairs	Creating Thin Image pairs	Local Replication	Create Pairs
Operate TI Pairs	Creating pairs, splitting pairs, resynchronizing pairs, and removing pairs for Thin Image Assigning and removing S-VOLs for Thin Image pairs	Local Replication	Create Pairs Split Pairs Resync Pairs Delete Pairs Assign S-VOLs Remove S-VOLs
Split Pairs	Splitting pairs of ShadowImage or Thin Image	Local Replication	Split Pairs
Resync Pairs	Resynchronizing pairs of ShadowImage or Thin Image	Local Replication	Resync Pairs
Suspend Pairs	Suspending ShadowImage pairs	Local Replication	Suspend Pairs
Delete Pairs	Deleting pairs of ShadowImage or Thin Image	Local Replication	Delete Pairs
Initialize Local Replica Pairs*	Initializing pairs of ShadowImage or Thin Image	Local Replication	Initialize
Assign Secondary Volumes	Assigning secondary volumes of Thin Image pairs	Local Replication	Assign S-VOLs
Remove Secondary Volumes	Removing secondary volumes of Thin Image pairs	Local Replication	Remove S-VOLs
Edit Local Replica Options	Setting ShadowImage options	Local Replication	Edit Options
* A menu displayed only on Maintenance PC.			

Using Remote Replication submenu

GUI operation		Audit Log Output	
Submenu	Description	Function Name	Operation Name
Create TC Pairs	Creating TrueCopy pairs	Remote Replication	Create Pairs ¹

GUI operation		Audit Log Output	
Submenu	Description	Function Name	Operation Name
Create UR Pairs	Creating Universal Replicator pairs	Remote Replication	Create Pairs ¹
Create GAD Pairs	Creating pairs for global-active device	Remote Replication	Create Pairs ¹
Split Pairs	Splitting pairs of TrueCopy or Universal Replicator	Remote Replication	Split Pairs ¹
Resync Pairs	Resynchronizing pairs of TrueCopy, Universal Replicator, or global-active device	Remote Replication	Resync Pairs ¹
Delete Pairs	Deleting pairs of TrueCopy, Universal Replicator, or global-active device	Remote Replication	Delete Pairs ¹
Suspend Pairs	Suspending pairs for global-active device	Remote Replication	Suspend Pairs ¹
Force Delete Pairs (TC Pairs)	Forcible deletion of TrueCopy pairs	Remote Replication	Delete Pairs ¹
Force Delete Pairs (UR Pairs)	Forcible deletion of Universal Replicator pairs	Remote Replication	Delete Pairs ¹
Force Delete Pairs (GAD Pairs)	Forcible deletion of global-active device pairs	Remote Replication	Delete Pairs ¹
Edit Pair Options	Editing pair options of TrueCopy or Universal Replicator	Remote Replication	Edit Pair Options ¹
Split Mirrors	Splitting mirrors of Universal Replicator	Remote Replication	Split Pairs ¹
Resync Mirrors	Resynchronizing mirrors of Universal Replicator	Remote Replication	Resync Pairs ¹
Delete Mirrors	Deleting mirrors of Universal Replicator	Remote Replication	Delete Pairs ¹
Edit Mirror Options	Editing mirror options of Universal Replicator	Remote Replication	Change Mirror Option ¹
Assign Remote Command Devices	Assigning remote command devices of Universal Replicator	Remote Replication	R-Cmd.Dev.

GUI operation		Audit Log Output	
Submenu	Description	Function Name	Operation Name
Release Remote Command Devices	Releasing remote command devices of Universal Replicator	Remote Replication	R-Cmd.Dev.
Edit Remote Replica Options	Editing system options of TrueCopy, Universal Replicator, or global-active device	Remote Replication	Edit Options
Edit Remote Replica Function Switch ²	Editing system options of TrueCopy	Remote Replication	Edit Options
Assign GAD Reserves	Assigning the GAD reserve attribute to a volume for the secondary volume of a global-active device pair	PROV	Set Virtual LDEV
Release GAD Reserved	Releasing the GAD reserve attribute from a volume for the secondary volume of a global-active device pair	PROV	Set Virtual LDEV
Notes: 1. When multiple settings of the same type are applied at the same time, log information is output as one entry. 2. A menu displayed only on Maintenance PC.			

Using Journal submenu

GUI operation		Audit Log Output	
Submenu	Description	Function Name	Operation Name
Create Journals	Creating journal volumes of Universal Replicator	Remote Replication	Journal Vol
Delete Journals	Deleting journal volumes of Universal Replicator	Remote Replication	Journal Vol
Edit Journal Options	Editing journal options of Universal Replicator	Remote Replication	Change JNL Option
Assign MP Unit	Migrating journal ownership of Universal Replicator	Remote Replication	Journal Owner

GUI operation		Audit Log Output	
Submenu	Description	Function Name	Operation Name
Assign Journal Volumes	Assigning journal volumes of Universal Replicator	Remote Replication	Journal Vol
When multiple settings of the same type are applied at the same time, log information is output as one entry.			

Using Remote Connection submenu

GUI operation		Audit Log Output	
Submenu	Description	Function Name	Operation Name
Add Remote Connection	Adding connections to remote storage systems	Remote Replication	Add RCU
		PROV	CreateiScsiPath
	Deleting iSCSI paths when connections cannot be added to remote storage systems	PROV	DeleteiScsiPath
Remove Remote Connections	Removing connections to remote storage systems	Remote Replication	Delete RCU
Edit Remote Connection Options	Editing connection options of remote storage systems	Remote Replication	Change RCU Option
Add Remote Paths	Adding paths to remote storage systems	Remote Replication	Add Path
Remove Remote Paths	Removing paths from remote storage systems	Remote Replication	Delete Path
Add Quorum Disks	Adding quorum disk IDs used by global-active device	Remote Replication	Add Quorum Disk ID
Remove Quorum Disks	Deleting quorum disk IDs used by global-active device	Remote Replication	Del Quorum Disk ID
When multiple settings of the same type are applied at the same time, log information is output as one entry.			

Using Other function submenu

GUI operation		Audit Log Output	
Submenu	Description	Function Name	Operation Name
Data Retention	Attribute / S-VOL / Reserved/ Mode Clear / Retention term	PROV	Edit DRU Attribute
	Expired lock	PROV	DRU Expiration Lock
When multiple settings of the same type are applied at the same time, log information is output as one entry.			

Using Reports menu

- [Using Task Management submenu on page A-15](#)
- [Using Configuration Report submenu on page A-15](#)
- [Using Performance Monitor submenu on page A-16](#)

Using Task Management submenu

GUI operation		Audit Log Output	
Submenu	Description	Function Name	Operation Name
Delete Tasks	Deleting tasks	BASE	Delete Tasks
Resume Tasks	Resuming tasks	BASE	Resume Tasks
Suspend Tasks	Suspending tasks	BASE	Suspend Tasks
Disable Auto Delete	Disabling the Task Auto Delete function	BASE	Disable Auto Delete
Enable Auto Delete	Enabling the Task Auto Delete function	BASE	Enable Auto Delete

Using Configuration Report submenu

GUI operation		Audit Log Output	
Submenu	Description	Function Name	Operation Name
Create Configuration Report	Creating configuration reports	BASE	Create Conf Report

GUI operation		Audit Log Output	
Submenu	Description	Function Name	Operation Name
Delete Reports	Deleting configuration reports	BASE	Delete Reports

Using Performance Monitor submenu

GUI operation		Audit Log Output	
Submenu	Description	Function Name	Operation Name
Edit Monitoring Switch	Starting/stopping monitoring	PFM	Edit Monitoring SW
Edit CU Monitor Mode	Setting target CUs for monitoring	PFM	Edit CU Monitor Mode
Edit WWN Monitor Mode	Setting target WWNs for monitoring	PFM	Edit WWN MonitorMode
Add New Monitored WWNs	Adding new WWNs for monitoring	PFM	Edit WWN MonitorMode
Edit WWN	Editing WWNs	PFM	Edit WWN
Delete Unused WWNs	Deleting WWNs from monitoring targets	PFM	Delete Unused WWNs
Add to Ports	Connecting target WWNs to ports	PFM	Edit WWN MonitorMode
Server Priority Manager (Port)	Comprehensive thresholds	SPM	Set All Prio Port ^{1, 2} Set Ctrl Kind
	Setting priority of ports (Attribute / Threshold / Upper limit)	SPM	Set All Prio Port Set Prio Port ^{1, 2}
	Initialization settings	SPM	Default Set ^{1, 2}
	Setting control status (Port control)	SPM	Set Ctrl Kind
	Clearing port settings due to removing port controllers	SPM	Clear SPM Info ²
Server Priority Manager (WWN)	Comprehensive thresholds	SPM	Set All Prio WWN ^{1, 2}
	Setting priority of WWNs (Attribute / Upper limit)	SPM	Set All Prio WWN Set Prio WWN ^{1, 2}
	Changing WWNs and SPM names	SPM	Set All Prio WWN

GUI operation		Audit Log Output	
Submenu	Description	Function Name	Operation Name
			Update WWN ^{1, 2}
	Setting control status (WWN control)	SPM	Set Ctrl Kind ^{1, 2}
	Registering WWNs	SPM	Update Port WWN ^{1, 2}
	Deleting WWNs	SPM	Update Port WWN ^{1, 2}
	Initialization settings	SPM	Default Set ²
	Adding WWNs (to SPM groups)	SPM	Update SPMGrp ^{1, 2}
	Deleting WWNs (from SPM groups)	SPM	Update SPMGrp ^{1, 2}
	Registering SPM groups and adding WWNs	SPM	Set All Prio WWN Update SPMGrp ^{1, 2}
	Deleting SPM groups	SPM	Set All Prio WWN SPMGrp Del/Chg Update SPMGrp ^{1, 2}
	Setting priority of SPM groups (Attribute / Upper limit)	SPM	Change SPMGrp ^{1, 2} Set All Prio WWN
	Changing SPM group names	SPM	SPMGrp Del/Chg ^{1, 2} Set All Prio WWN
	Clearing port settings due to removing port controllers	SPM	Clear SPM Info ²
Notes: 1. When multiple settings of the same type are applied at the same time, log information is output as one entry. 2. <i>Error</i>, not <i>Warning</i>, is output as log information if one of multiple settings is applied abnormally.			

Using Settings menu

- [Using User Management submenu on page A-18](#)
- [Using Resource Management submenu on page A-18](#)
- [Using Security submenu on page A-19](#)
- [Using Environmental Setting submenu on page A-21](#)

Using User Management submenu

GUI operation		Audit Log Output	
Submenu	Description	Function Name	Operation Name
Create User	Creating a new user account	ACM	CreateUser
Add Uses	Adding users to a user group	ACM	AddUsersToUserGroup
Remove Users	Removing users from a user group	ACM	RemoveUsersFromUserGroup
Edit User	Changing a user authentication mode	ACM	UpdateUserAuthentication
	Enabling/disabling users	ACM	DisableUsers EnableUsers
Delete Users	Deleting user accounts	ACM	DeleteUsers
Change Password	Changing a password	ACM	UpdatePassword
Create User Group	Creating a new user group	ACM	CreateUserGroup
Edit User Group	Changing a user group name	ACM	UpdateUserGroupName
Delete User Groups	Deleting user groups	ACM	DeleteUserGroups
Edit Resource Group Assignment	Changing assignment of resource groups of a user group	ACM	UpdateUserGroupResourceGrpBmp
	Assigning roles to a user group or releasing assignment of roles	ACM	UpdateUserGroupRole
Edit Role Assignment	Changing assignment of all resource groups of a user group	ACM	UpdateUserGroupAllResourceGrp

Using Resource Management submenu

GUI operation		Audit Log Output	
Submenu	Description	Function Name	Operation Name
Create Resource Groups	Creating resource groups	PROV	Create Resource Grps
	Adding resources		Move Resources

GUI operation		Audit Log Output	
Submenu	Description	Function Name	Operation Name
Edit Resource Group	Changing resource group names	PROV	Edit Resource Grp
Delete Resource Groups	Deleting resource groups	PROV	Delete Resource Grps
Add Resources	Adding resources to resource groups	PROV	Move Resources
Remove Resources	Removing resources from resource groups	PROV	Move Resources
Create CLPRs	Creating CLPRs	VPM	Edit CLPR
Edit CLPR	Editing CLPRs		
Delete CLPRs	Deleting CLPRs		
Migrate CLPR Resources	Migrating parity groups to other CLPRs		
Edit Virtualization Management Settings	Editing Virtualization Management Settings	PROV	Set Virtual LDEV

Using Security submenu

GUI operation			Audit Log Output	
Submenu		Description	Function Name	Operation Name
Encryption Keys	Create Keys	Creating encryption keys	ENC	Add keys to DKC ¹ Create Keys ² Create Keys On Serv ^{1, 9}
	Delete Keys	Deleting encryption keys	ENC	Delete Keys
	Rekey Certificate Encryption Keys	Updating certificate encryption keys	ENC	Rekey CEK
	Rekey Key Encryption Key	Updating key encryption keys	ENC	Create KEK Dynamic ⁹ Delete KEK Dynamic ⁹ Register KEK Dynamic ⁹ Rekey KEK Dynamic
	Retry Key Encryption Key Acquisition	Reacquisition of key encryption keys	ENC	Retry KEK Dynamic

GUI operation			Audit Log Output	
Submenu		Description	Function Name	Operation Name
	Backup Keys to File	Backing up keys on the management client	ENC	Backup Keys Backup Keys to File
	Backup Keys to Server	Backing up encryption keys on the key management server	ENC	Backup Keys Backup Keys to Serv ⁹ Create Keys On Serv ⁹
	Restore Keys from File	Restoring encryption keys from backup files on the management client	ENC	Restore Keys Restore Keys fr File
	Restore Keys from Server	Restoring encryption keys from backup keys on the key management server	ENC	Restore Keys Restore Keys fr Serv ⁹
	View Backup Keys on Server	Deleting encryption keys backed up on the key management server	ENC	Delete Keys on Server ⁹
	Edit Encryption Environmental Settings	Configuring encryption environment settings	ENC	Add keys to DKC ³ Create KEK Dynamic ^{5, 9} Create Keys ⁴ Create Keys On Serv ^{3, 9} DEK assign SpareDisk ⁶ DEK delete ⁷ Delete KEK Dynamic ^{8, 9} Edit ENC Settings Register KEK Dynamic ^{5, 9} Rekey CEK ^{6, 7} Set Up Key Mng Serv
	Edit Password Policy (Backup Encryption Keys)	Editing password policies for backing up encryption keys	ENC	Edit Password Policy
Login Message		Setting login message	ACM	Set Login Message
Notes: 1. Output when an encryption key is created on the key management server 2. Output when an encryption key is created on the storage system				

GUI operation		Audit Log Output	
Submenu	Description	Function Name	Operation Name
3.	Output when the key management server is changed to be enabled from the initial setting		
4.	Output when the key management server is changed to be disabled from the initial setting		
5.	Output when the status of the key management server is changed from Disable to Enable		
6.	Output when the encryption environment setting is configured from the initial setting		
7.	Output when the encryption environment setting is initialized		
8.	Output when the status of the key management server is changed from Enable to Disable		
9.	Output because access to the key management server is performed, following the GUI operation		

Using Environmental Setting submenu

GUI operation		Audit Log Output	
Submenu	Description	Function Name	Operation Name
Edit Storage System	Editing storage system information	BASE	Edit Storage System
Edit Advanced System Settings	Editing advanced system settings	BASE	Advanced Settings

Using Maintenance Utility

When a submenu in the **Maintenance Utility** menu is selected, the Maintenance Utility operation window opens as a different window. Related topics below for operations on the **Maintenance Utility** window and corresponding operation names output to audit logs.

Related topics

- [Using Maintenance Utility window on page A-22](#)

Using Maintenance Utility window

Table A-3 Storage System GUI operation

GUI operation			Audit Log Output	
GUI Name	Tab	Operation	Function Name	Operation Name
Storage System	-	Set Up System Information	Maintenance	Set Up System Info
	Chassis	Install	Maintenance	Install
		Remove	Maintenance	Remove
		Locate LED > Turn on	Maintenance	Turn On Locate LEDs
		Locate LED > Turn off	Maintenance	Turn Off Locate LEDs
		Air Filter > Reset Duration of Use for Air Filter	Maintenance	Reset DurationOfUse
		Air Filter > Edit Replacing Notice for Air Filter	Maintenance	Edit ReplacingNotice
	Drives	Install	Maintenance	Install
		Remove	Maintenance	Check Remove Remove
		Block	Maintenance	Block
		Stop Copy	Maintenance	Stop Copy

Table A-4 Operation from Hardware in navigation area on the left side of window

GUI operation			Audit Log Output	
GUI Name	Tab	Operation	Function Name	Operation Name
Controller Chassis	Drives ¹	Install	Maintenance	Install
		Remove	Maintenance	Check Remove Remove
		Block	Maintenance	Block
		Stop Copy	Maintenance	Stop Copy
	CTLs	Replace > CTL _n ³	Maintenance	Block Restore
		Replace > Cache Memory - CTL _n ³	Maintenance	Block Restore

GUI operation			Audit Log Output	
GUI Name	Tab	Operation	Function Name	Operation Name
		Replace > FAN - CTLn ^{1, 3}		
		Replace (Type Change) > Cache Memory - CTLn ^{2, 3}	Maintenance	Block(Type Change) Restore(Type Change)
		Install > Cache Memory - CTLn ³	Maintenance	Block Restore
		Install > Shared Memory	Maintenance	Install
		Remove > Shared Memory	Maintenance	Remove
		Rest HUB ¹	Maintenance	Reset HUB
	BKMFs / BKMs ⁴	Replace Batteries	Maintenance	Block
	CFMs	Replace	Maintenance	Block Restore
	CHBs	Replace	Maintenance	Block Restore
		Install > <i>Installed position</i>	Maintenance	Install
		Remove > <i>Installed position</i>	Maintenance	Remove
		Changing FSP type by clicking SFP Status	Maintenance	Change SFP Type
	PECBs ⁵	Replace	Maintenance	Block Restore
	DKBs ²	Replace	Maintenance	Block Restore
		Replace (Type Change)	Maintenance	Block(Type Change) Restore
		Install > <i>Installed position</i>	Maintenance	Install
		Remove > <i>Installed position</i>	Maintenance	Remove
	LANBs ²	Reset HUB	Maintenance	Reset HUB
Channel Board Box ⁵	CHBs	Replace	Maintenance	Block Restore

GUI operation			Audit Log Output	
GUI Name	Tab	Operation	Function Name	Operation Name
		Install > <i>Installed position</i>	Maintenance	Install
		Remove > <i>Installed position</i>	Maintenance	Remove
	SWPKs	Replace	Maintenance	Block Restore
	PCPs	Replace	Maintenance	Block Restore
Drive Box	Drives	Install	Maintenance	Install
		Remove	Maintenance	Check Remove Remove
		Block	Maintenance	Block
		Stop Copy	Maintenance	Stop Copy
	ENCs	Replace	Maintenance	Block Restore
Notes: 1. This tab or operation is not available for VSP G400, G600, G800 and VSP F400, F600, F800. 2. This tab or operation is not available for VSP G200. 3. "n" of CTRn can be 1 or 2. 4. BKMf is the part name of VSP G400, G600, G800 and VSP F400, F600, F800. BKM is the part name of VSP G200. 5. This tab or operation is available only for VSP G800 and VSP F800.				

Table A-5 Operation from Administration in navigation area on the left side of window

GUI operation			Audit Log Output	
GUI Name	Tab	Operation	Function Name	Operation Name
Firmware	-	Update	Maintenance	Update Firmware
Administration		UserAccount Information > Backup	Maintenance	UserAccount Backup
		UserAccount Information > Restore	Maintenance	UserAccount Restore
	User Group	Create User	Maintenance	Create User
	User	Create	Maintenance	Create User

GUI operation			Audit Log Output	
GUI Name	Tab	Operation	Function Name	Operation Name
		Edit	Maintenance	Edit User
		Delete	Maintenance	Delete Users
Alert Notifications	-	Set Up	Maintenance	Set Up Alert
Licenses	-	Install	Maintenance	License Key Install
		Enable	Maintenance	Enable Licenses
		Disable	Maintenance	Disable Licenses
		Remove	Maintenance	License Key Remove
Network Settings	-	Set Up Network Settings	Maintenance	Set Up Network Set
		Set Up Network Permissions	Maintenance	Set Up Network Perm
Date & Time	-	Set Up	Maintenance	Set Up Date & Time
Audit Log Settings	-	Set Up Syslog Server	AuditLog	Set Up Syslog Serv
		Export Audit Logs	Maintenance	Export Audit Logs
		Send Test Message to Syslog Server	AuditLog	Send Test Message

Table A-6 Operation from Menu in navigation area on the left side of window

GUI operation		Audit Log Output	
Selection Item		Function Name	Operation Name
Initial Setup Wizard	-	Maintenance	Set Up System Info Set Up Date & Time Set Up Network Set
Power Management	Power on Storage System	Maintenance	Power On Storage
	Power off Storage System	Maintenance	Power Off Storage
	Edit UPS Mode	Maintenance	Edit UPS Mode
System Management	Change Password	Maintenance	Edit User
	Edit Login Message	Maintenance	Edit Login Message
	Select Cipher Suite	Maintenance	Select Cipher Suite

GUI operation		Audit Log Output	
Selection Item		Function Name	Operation Name
	Update Certificate Files	Maintenance	Update Cert Files
	Edit System Parameters	Maintenance	Edit System Param
	Force Release System Lock	Maintenance	Force Rls SysLock
	Reboot GUM	Maintenance	Reboot GUM
	Boot System Safe Mode	Maintenance	Boot System SafeMode

Table A-7 Other GUI operation

GUI operation		Audit Log Output	
Description		Function Name	Operation Name
Clicking System Locked on the upper right of the window		Maintenance	Force Rls SysLock

Operation Lock

The windows opened by clicking ,  on the top of a window and corresponding audit logs output by the window operations are described.

GUI operations		Audit Log Output	
GUI Name	Operation	Function Name	Operation Name
Operation Lock Properties	Unlock All	BASE	Unlock Forcibly

When executing single sign-on from Hitachi Command Suite

GUI operations	Audit Log Output	
	Function Name	Operation Name
Issuing OneTimeKey from Hitachi Command Suite	BASE	HCSSO SetOneTimeKey
Launching Device Manager - Storage Navigator from Hitachi Command Suite		HCSSO Authentication

Audit log Maintenance PC operations

Maintenance PC operations and corresponding operation names output to audit logs are described.

- ☐ [Logging in to or out from Maintenance PC](#)
- ☐ [Using Login button](#)
- ☐ [Using Maintenance button](#)
- ☐ [Using Install button](#)
- ☐ [Using Information button](#)
- ☐ [Using Monitor button](#)

Logging in to or out from Maintenance PC

Maintenance PC Operations	Audit Log Output		Note
	Function Name	Operation Name	
Login	BASE	Login	No basic information parameters or detailed information
Logout	BASE	Logout	No parameters or detailed information
Rebooting Maintenance PC that is logged in	BASE	Logout	No parameters or detailed information
Powering off Maintenance PC that is logged in	BASE	Logout	No parameters or detailed information

Using Login button

MPC Operations		Audit Log Output	
Function	Operation	Function Name	Operation Name
-	Log into MPC	BASE	Start Maintenance

Using Maintenance button

MPC Operations		Audit Log Output	
Function	Operation	Function Name	Operation Name
Maintenance	Blockade	Maintenance	Blockade
Maintenance	Correction Copy	Maintenance	Correction Copy
Maintenance	Restore	Maintenance	Restore
Maintenance	Restore	Maintenance	MP Restore
Maintenance	Restore Data	Maintenance	Restore Data

Using Install button

MPC Operations		Audit Log Output	
Function	Operation	Function Name	Operation Name
NEW Installation	NEW Installation	Install	NEW Installation

MPC Operations		Audit Log Output	
Function	Operation	Function Name	Operation Name
Change Configuration	Removal Cache Capacity	Install	Remove
Change Configuration	System Option	Install	System Option
Change Configuration	System Tuning	Install	System Tuning
Copy Config Files	All Configuration Files	Install	All Config
Copy Config Files	Create Configuration Backup	Install	Backup Config
Initialize ORM Value	Initialize ORM Value	Install	Initialize ORM Value
Set Machine Install Date	Set Machine Install Date	Install	Machine Install Date
Set Flash Drive ORM Value	Set Flash Drive ORM Value	Install	FlashDrive ORM Value

Using Information button

MPC Operations		Audit Log Output	
Function	Operation	Function Name	Operation Name
Log	Delete	Information	Delete Log
Threshold Value	- Alter - Reset	Information	Threshold Value
Online Read Margin	- Alter - Reset	Information	ORM Value

Using Monitor button

MPC Operations		Audit Log Output	
Function	Operation	Function Name	Operation Name
Monitoring Switch	Monitoring Switch	Monitor	Monitoring Switch

Hitachi Data Systems

Corporate Headquarters

2845 Lafayette Street
Santa Clara, California 95050-2639
U.S.A.
www.hds.com

Regional Contact Information

Americas

+1 408 970 1000
info@hds.com

Europe, Middle East, and Africa

+44 (0)1753 618000
info.emea@hds.com

Asia Pacific

+852 3189 7900
hds.marketing.apac@hds.com

